



CAR MULTIMEDIA PLAYER

 
OWNER'S MANUAL

CAR Entertainment System

Contens



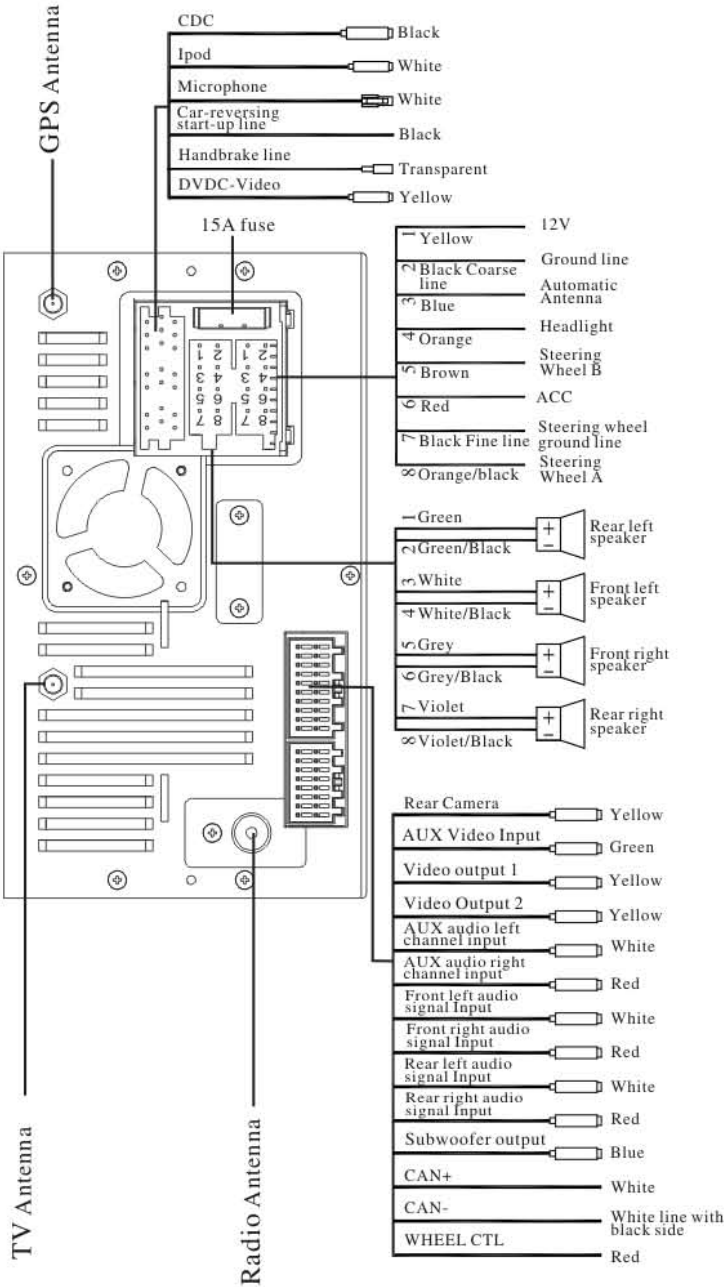

Contens	1
Wiring diagram	2
Basic Operation	4-20
Introduction for Ipod	11
Introduction for Bluetooth.....	11
TV Function Operation	12
GPS Navigation Function Operation	18
Installation	25
General	26

Wiring diagram



Key Function

SRC	Mode Switch
DIM	Image adjustment
SETUP	Setup Key
	Hang
MIC	MIC
GPS TF	GPS/TF Card Slot
RST	Reset Switch
ENTER	Enter Key
USB	USB Slot
◀▶	Track/Search
PIP	PIP

Eject Button	▲
GPS Navigation	NAVI
Radio	FM/AM
Volume+/Volume-	
Power/Mute	
DVD Key	DVD
Answer	
GPS Card Slot	GPS CARD
SD/MMC Card Slot	SD CARD
Remote Sensor	
AUX Input	AUX

Basic Operation

Main Menu:

 
This product has radio,DISC,USB,IPOD,Bluetooth,AUX In,Camera entertainment system,press each function can enter relevant operation. In each mode,press top left of the touch screen can enter to main menu.



Introduce main menu:

Remark:without cable or disc for function:DISC,USB ,IPOD,Camera,the icon will show gray color.

Radio:

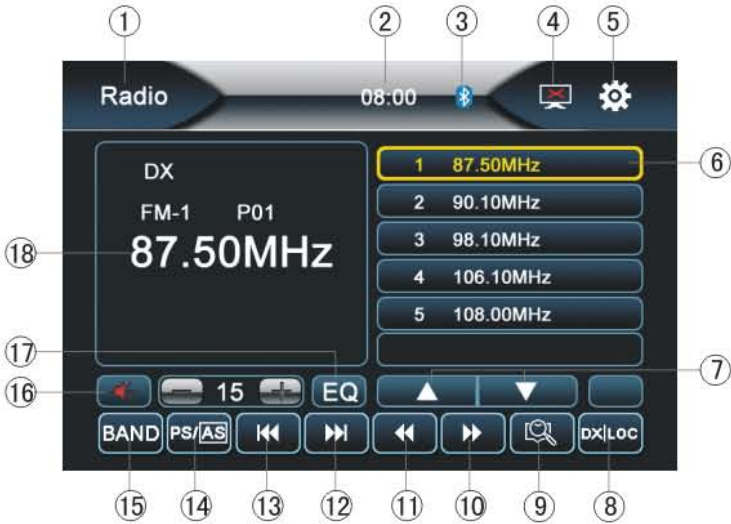

Basic Operation

- 1.Source Selection Button (click it to return to the main interface)
- 2.Current system time (invalid)
- 3.Bluetooth status display (invalid)
- 4.blank screen
- 5.Click on this button to enter the system menu settings
- 6.Preset radio frequency Click it to select the radio, long press to store radio stations (10 stations frequency can be stored for each band)
- 7.Page Up / page down Contents
- 8.Click on this button to turn to next page for menu settings shown in picture
- 9.Click on this button, the system will automatically play 10 seconds of full-band effective stations with relatively strong radio signal. Play again, click cancel.
- 10.Click on this button to turn to high-frequency by fine-tuning
- 11.Click on this button to turn to low-frequency by fine-tuning
- 12.Click on this button to turn to high-frequency by semi-automatic search
- 13.Click on this button to turn to low-frequency by semi-automatic search.
- 14.PS / AS function,Click on this button to scan radios automatically, Hold on this button for 3 seconds, the system will switch to station scanning automatically.
- 15.Click on this button to switch radio band
- 16.Click on this button to gradually increase/decrease the volume
- 17.Click on this button to enter EQ menu
- 18.Current band and frequency display (invalid)

Introduce touch screen operation area :

Touch screen will divided into 9 zone ,but just has 6 zone can workable in DVD/VCD playing mode .

The area as following:

A zone,press for enter main menu.

B zone,press for enter relevant setup menu.

 
C zone,press for select previous track.

D zone, press for enter function keyboard

E zone,press for select next track

F zone,press for search menu,the number keyboard will show on screen you can control the player by keyboard.

Basic Operation

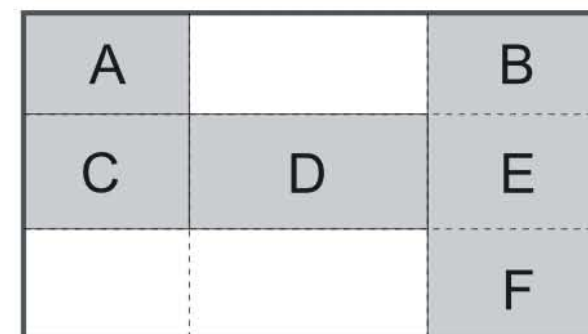

DVD Playback

Place the disc gently into the disc slot, the disc will be sucked into the unit automatically, after disc reading, the screen will display the menu, the user can directly click the options of it for playback, language settings, sound select, chapter select and so on.

During the disc playback, click A section of touch screen, the system will return to main interface, click D section of touch screen, the menu will pop up.



1.Play / Pause

2.Stop in / out disc (click once for breakpoint memory stop, click again to full stop, hold on it for 3 seconds, the disc ejects automatically)

3.Rewind button (click once for switching among 2,4,8,16 different speed mode)

4.Fast Forward (click once for switching among 2,4,8,16 different speed mode)

5.Segment playback (click once to select starting point A, click twice to select destination B, the system will repeatedly play segment between the A-B at this time, click once again to turn off the playback.)

6.Click it to select the previous chapter (track)

7.Click it to select the next chapter (track)

8.paging button (click on this button to turn to another page menu)

Basic Operation

9. Click on this button to enter playback information, click again to cancel
10. exit button (click on this button to exit the menu)
11. Click on this button to enter the system menu settings interface
12. Click on this button to enter EQ settings interface
13. Click on this button to enter the main interface
14. Click on this button to enter the CD-ROM main menu,
15. Click on this button to enter the subtitle menu
16. Angle switch button (need disc support)
17. Sound track switch button
18. Subtitle switch button (if DVD contains a variety of subtitles, click this button to switch among different languages subtitles during playback)
19. Repeat Play (click to switch among section repeat, title repeat, all repeat, turnoff repeat)
20. Image zoom in (click to switch among 1,2,3 times)
21. Paging Button

VCD CD player

Place the disc gently into the disc slot, the disc will be sucked into the unit automatically. The system will automatically switch to VCD playback mode. During the playback, click on the A section of touch-screen to return to the main interface, click on the D section of touch screen, the system will pop up the menu.



The above menu is the same with the DVD's, as for the PBC function, only VCD2.0 discs work out.

Note: The above functions can also be operated on the remote control

 
Search Play

IN DVD and VCD playing mode, play quickly the desired playing position through the search function.

Click the lower right F section of touch screen or press GOTO button on the remote control to enter the search function.

Basic Operation

Clicks the arrow keys on the remote control to select the cursor position of touch screen, input numbers and click to confirm, Or Click cursor position of touch screen to enter the numeric keypad, input numbers to click to confirm, or click to clear figures forwards. After the confirmation the system will automatically switch to the desired position designated by the cursor position for playback.

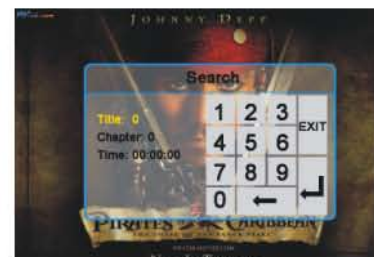

DVD disc



VCD disc

CD/MP3/WMA disc Playback

Open TFT screen, place the disc gently into the disc slot, the disc will be sucked into the unit automatically, the system will put the TFT screen to a fit position for watching. After disc reading, the screen will show CD or MP3 playing interface and automatically read the disk content, the user directly click tracks showed on the screen to play. Click numeric keypad at the right side of touch screen to enter track numbers to play



Interface Introduction

1. Source selection button, click it to return to main interface
2. The current system time
3. Bluetooth state diagram

Basic Operation

4.TFT LCD OFF button.

Click it to enter power-saving mode and turn off the screen; click again on any position of touch screen to exit screen off mode.

5.Menu Settings button

6.Track name

7. Tracks list paging button

8.Click it to return to the previous folder

9.SCAN Search play: Click this button, the system will automatically scan the first 10 seconds of each song to play

10.Random play: Click this button to play any track at random

11. Repeat play button (each click to repeat the song, repeat all tracks of the entire disc, rotate between repeat play)

12.Fast-forward button (click once for switching among 2x,4x,8x,16x different speed modes)

13. Rewind button (click once for switching among 2x,4x,8x,16x different speed modes)

14. Stop button (click once for breakpoint memory stop, click twice for full stop), press for more than two seconds to switch to OPEN state, the disc ejects automatically

15.Play / Pause button

16. Volume Button

17.EQ button, click it to enter the EQ Settings interface, Set the relevant parameters on the touch screen in accordance with your preferences

18. Playing time of current tracks

19. Current tracks and the total disk tracks

20. Display the current playing mode.

21. Display the current repeat mode

22.Tracks selection

23. ID3 information display (play Mp3)

USB play instruction:

When the unit is on, connect with the USB, switch to USB playing mode on main interface, when the unit is off, after USB connection, the playback source switches to USB playing mode by clicking the SRC button on the

Basic Operation

front panel or the remote control after the unit is on, you can also press A section of touch screen to enter main interface ,then click the USB icon to switch to USB playing mode.

Touch-screen operation

In USB playing mode, operation function buttons of touch screen are shown as follows. USB playing interface is very similar to CD/MP3's, its operation function buttons are basically the same with CD/MP3. Please refer to instruction of CD / MP3/WMA CD playing mode.



SD playing instruction:

When the unit is on, place SD card into SD card port and switch to SD playing mode on main interface. When the unit is off, after inserting the SD card, the playback source switches to SD playing mode by clicking SRC button on the front panel or the remote control after the unit is on.

Press A section of touch screen to enter main interface, then click SD icon to switch to SD playing mode.

Touch-screen operation


In SD card playing mode, touch screen function buttons shown as follows. SD card playing interface is very similar to CD/MP3's, its touch-screen operation function buttons are basically the same with CD/MP3's. Please refer to instruction of CD / MP3/WMA CD playing mode.



Basic Operation

IPOD Playing instruction:

Ipod, released by APPLE, is a high-capacity media player using Toshiba's 1.8-inch disk sheet hard disks as storage medium. With as much as 2-40GB, store up to 10,000 on CD-quality MP3 music or video files, it has also perfect management procedures and innovative operations, innovative appearance. One of several hardware products by APPLE spanning PC and Mac platform. In addition to MP3 playback, audio and video files playback, ipod can also be used as a high-speed mobile hard disk, displaying contacts, calendar and tasks, as well as plain text e-book reading and listening to audio books by Audible

The system has an access to Ipod and plays different types of files. Confirm ipod connection, and enter main interface, click the ipod modules to enter ipod playing interface shown as follows, the detailed operations are similar to CD MP3's, in video playing mode, click  button, referring to the relevant ipod instructions to play video, you can watch video on the screen of the unit.





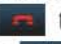
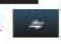


Bluetooth Function


The system features Bluetooth hands-free communication function. if your mobile phone equips with Bluetooth function, you can set up point-to-point link with the system, dialing, answering phone, as well as playing music and other functions on the screen, Operations as follows:



Basic Operation

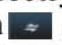1. Turn on the Bluetooth function: Enter into the general menu settings, the Bluetooth icon is flashing, indicating Bluetooth is not pairing yet. Meantime, turn on your phone's Bluetooth function.
2. Pairing: Click the Bluetooth function on the main interface of the system. Enter into the Bluetooth hands-free interface, click "Pair" button, meantime, turn on the phone for searching new device. When the system is linked to the phone signal, an option prompted: " Link with the device or not", press "Yes" on the phone and input the password "0000" to confirm, when the system is linked to the mobile phone, the Bluetooth icon on the screen is no longer flashing, otherwise, please try again until a successful link.
3. Make call: Input the phone numbers by on-screen button, and press the green button , the system will turn voice call into car speaker system, you can hear the dialing tone and voices from the other side in the car speak system. When call completed, press the red button  to hang up or directly hang the mobile phone up. During call process, click switch button , voice calls can switch freely between the car speakers and mobile phone to ensure the information security of your call.
4. Answer call: When an external telephone is incoming, in any mode, the system will automatically switch to a Bluetooth hands-free interface, and mute the original sound to play incoming ring tone, if answering mode set to " automatic ", the system will automatically connect to the phone. If set to "Manual", press the interface button   to accept or reject the call. During call process, click switch button , voice calls can switch between the car speakers and mobile phone to ensure the information security of your call. The incoming phone number will be displayed in the information box.
5. Play phone music: Press the play button on the interface to play music stored in your phone.

Close LCD screen

When driving at night, to protect driver's vision and secure safe driving. In a non-video screen, click OFF  button on the screen, the system will turn off the screen, but keep the original sound play. Click any position of touch screen or press any button on the panel to exit from the power-saving mode

DTV

Enter main interface, select the TV module or directly press SRC button on the panel to switch to DTV receiver Interface:

Basic Operation



Choose the city where you are located, then press "Automatic searching" to search for the DTV channels, these DTV programs will be stored automatically in the menu of "my program"



Basic Operation



(图A)



(图B)

AUX IN (Auxiliary input devices)

Enter main interface, select AUX IN module or directly press SRC button on the panel to switch to auxiliary equipment input mode.

AUX IN function enables u to connect an external media playing source to the system, such as cameras, video game, walkman, and external navigation box (remote control) and so on, when no auxiliary equipment input shown below (picture A):

In AUX IN playing mode, click A section of touch screen to return to main interface.



(PIC. A)



(PIC. B)


Rearview camera


Enter main interface, select rearview camera module or directly press the button on the panel to switch to the rearview camera input mode.

If rearview camera has been installed, the system will show all video images taken by the camera on the screen to ensure the safe car-reversing, If not, shown above (picture B):

Basic Operation

System setting

Pressing  button into setting interface,including ASP setting, Video setting,General Setting,Radio and Media setting,user can choose each setting he wants.

In playing DVD mode,when you click D zone on touch screen, the control manu will show on the system and pressing  button into setting system interface, then please click DISC button into the interfaces as belows;



Setting	Option
Set Rating Password	---
Parentad Contor	Kid Safe/G/PG/PG-13/PG-R/R/NC-17/Adult
Audio	English/Francais/Spanish/Chinese/Russian
DVD Menu	English/Francais/Spanish/Chinese/Russian
Subtitle	English/Francais/Spanish/Chinese/Auto/Off
Divx Subtitle	Ascll/Unicode/UTF8/Turkish/Cent europ /Cyrillic/ISO88591a


In playing Radio mode,please press  button into system setting interface, then press Radio button into the interfaces as belows;



Setting	Option
Radio Region	USA/ Europe/ CHINA/OIRT
RDS	On/Off

Basic Operation

Bluetooth

In playing Bluetooth mode,please press  button into system setting interface, then press Bluetooth button into the interfaces as belows;



Setting	Option
Bluetooth	On/Off
Auto Connect	On/Off
Auto Answer	On/Off

In playing system setting interface, please press ASP button into the interfaces as belows;(User can setting the parameter according to favor)



Setting	Option
Bass Cent Freq	60Hz/80Hz/100Hz/200Hz
Bass Q Value	1.0 /1.25/1.5/2.0
Bass DC Gain	ON/OFF
MID Cent Freq	500Hz/1KHz/1.5KHz /2.5KHz
MID Q Value	0.5/0.75/1.0/1.25
TREB Cent Freq	10KHz/12.5 KHz/15 KHz/17.5 KHz
LOUD Cent Freq	400Hz/800Hz/2400 Hz
Power on Vol	Last Vol/Fixed
Fixed Vol	10

Basic Operation

In playing system setting interface, please press Video button enter the interfaces as belows;(User can setting the parameter)



Setting	Option
View Mode	Fill/Original/Auto Fit/Pan Scan
Camera Mirror	Off/On

In playing system setting interface, please press General button into the interfaces as belows;(User can setting the parameter according to favor)



Setting	Option
System Time	00:00
Time Format	12hour/24hour
OSD Language	English/Francais/Spanish/Chinese/Russian
Beep	On/Off
TFT Auto Open	NO/YES/Manual
Screen saver	On/Off
Ts Calibrate	YES/NO
Use Default Settings	YES/NO

Basic Operation

GPS Navigation Operation

After startup, press PWR button, switch to GPS mode, (see below) enter the GPS main interface: navigation, settings, entertainment. Insert the SD card with navigation software

 
After startup, select "Settings" button on the main interface to enter the setup interface, then select "Navigation Settings" button to set the navigation path.



In the navigation settings, Open File, select the navigation application (usually with the extension EXE files), select "navigation software to run automatically at startup" option, the system will run navigation software directly after startup



After Select the navigation application file, exit the interface, click "navigation" button, you can run the navigation software, under the antenna connection, click the GPS monitor button, you can see satellite positioning, dark blue represent positioning satellites, a grid represents a satellite, a gray grid represents receiving the signal but not yet positioning satellites, shown as below.

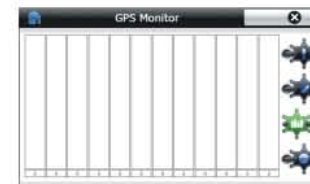

Click on "Common Settings" button on the main interface, enter the frequently used settings interface, language select, and select the parameter settings of switch effect, shown as below.



 
Basic Operation

Touch Screen Calibration

The screen will appear the calibrated touch "+" character in the middle, press "+" cursor for 3 seconds, "+" cursor will move, then click until display "OK" for the successful calibration.
Click "screen" button, adjust screen brightness and location, shown as below.



Click "Volume" button; adjust the system volume / keypad volume / mute, shown as below.

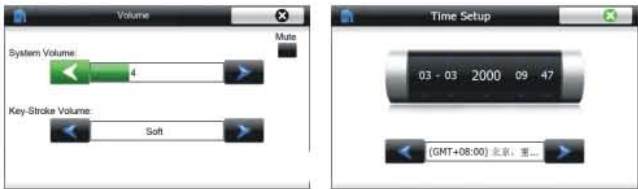


Click "Time" button; adjust year / month / day / time / time zone, shown as below.
Click "System" button, adjust the initial setting / file repair operations, shown as below.



Click "entertainment" button on the main interface, and then conduct music, movies, e-books, pictures settings and operations, shown as below.

Basic Operation

 
Click "Music" button to enter the music playback interface, shown as below.

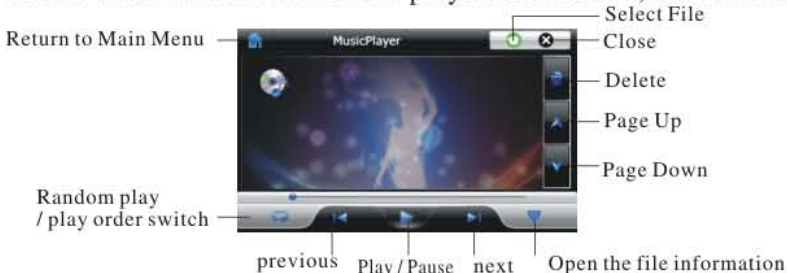

Click "movie" button to enter the video playback interface, shown as below.



 lick "e-book" button to enter the E-book browsing interface, shown as below.

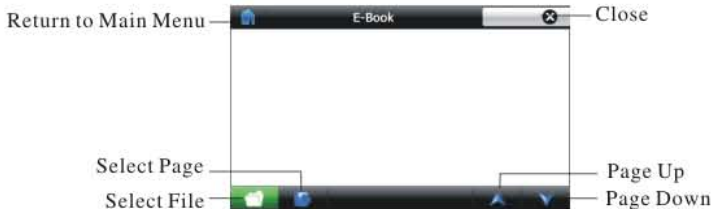

Click "Picture" button to enter the picture browsing interface, shown as below.



Run navigation software

Click the navigation Icon on the main interface, the system will enter the navigation interface.

Note:

1. Please refer to the specific instructions of navigation software.
2. In the navigation process, press the upper left corner TFT screen to return main menu.

Remote control operation



Remote control operation

Power Button

--Press **1** () button to turn on/off the power

Pause/Play Button

--Press **2** () button to suspend

The playback of CD, MP3, VCD, DVD, press it again to return to normal playback mode.

Mute Button

--Press **3** () button to cut down

The sound output, press it once more to resume the previous sound level.

Menu selector

--Press **4** () to select

Your desired menu, then press **6**(ENTER) or press the play button **2** () to confirm

Left/Right/Stereo Selector

--During the playing mode.

Continuously press **15**(Audio) can change the sound to left/right speaker or stereo mode.

Note: There are 5 grades surrounding effect in surround mode. During VCD mode, you can see the different pictures indication different effects on the television

Repeat Section Mode

In order to play repeatedly one section of some track , during normal playing mode, at start point of the desired section press "A-B" key one time, at endpoint of the section press "A-B" **16** key again, and then the unit begins to play this section

Remote control operation

Mode Switch

--Press **10 (SRC)** button to switch to radio mode or playback mode.

repeatedly , pressing “A-B” key third , the unit will go back to the normal playing mode.

Subtitle Selector

--During DVD mode, press **17 (SUB-T)** button to switch the menu to English, French, Chinese, Thai and Italian.

Instructions Remote Control Operation

Setting CD Playback Time

--In VCD, CD mode, press **18 (GOTO)** key and set the time when you begin to play the track ,and the television will display the time Enter your desired time by pressing number button 14 (0~10+). For example, enter, 25:00, it will automatically start playing the track from point of the twenty-five minutes in the disc.

--In DVD playing mode, press **18 (GOTO)** key once and input a Desire track number, then press (**▶||**) key to play the DVD from The position corresponding to the Track number selected

--In DVD playing mode, press **18 (GOTO)** key twice and the Television will display the time-- . Enter your desired time by Pressing number button **■ (0~9)**

Stop the Playback

--In DVD mode, press **20 (BND/■)** Button to suspend the playback and “press play to continue” shown On TV, press it again to stop the Playback.

Note: In VCD, MP3 and CD, press this key once TO stop.

--In radio mode, press **20 (BND/■)** button to switch: FM1-FM2-FM3-AM
MULT-ANGLE KEY

--In DVD playing mode, press **21 (ANGLE)** key, you can watch The DVD content from different angle.

Remote control operation

TITLE KEY

--In DVD, VCD playing mode, Press **24 (TITLE)** key to show all tracks title on screen. Then press **14 (0~9)** key or press **4 (◀/▶/⏮/⏭)** key to choose your

Desired track number and press **7 (ENT/ET)** key or **2 (▶||)** key to Start.

 
ZOOM KEY

--In DVD, VCD playing mode, press **25 (ZOOM)** key once for 1x Mode, twice for 2x Mode Third time for 3x Mode, Four time to off

Note: NO ZOOM function CD/MP3 playing mode.

Installation

Parts List (The numbers in the list are keyed to those in the instructions)

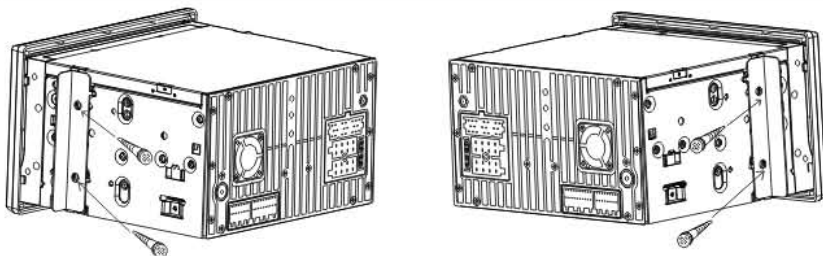

Check if the mounting holes on both the left and the right sides of the main unit match with the original mounting brackets of the vehicle, if unmatched, please use the mounting brackets we provide for installation (If necessary, drill the mounting brackets to match with the mounting holes of the vehicle.)

Attention:

- Mount the unit on the bracket.
- Check if the electrical connection of the backplate is correct by following the user's manual.
- Use appropriate tools to install screw bolt.

Attention:

- The unit ought to be installed by the professional technician.
- The unit can only be used in the vehicles with 10-14v DC storage battery system
- Conduct the electrical connection by following the user's manual seriously, any connection errors could damage the unit.
- Connect the power line after confirming the right connection of other parts.
- Insulate all exposed power line to avoid short circuit.
- Fix all the loose power before the installation of the unit.

Read the user's manual in detail before turning on the unit

As a high precision unit, the installation places should be excluded as follows:

Direct sunshine/high-temperature/insecure/vibrant/humid/dusty places

General

Power Requirements	14.4V DC
Load Impedance	4Ω
Max.Power Output	60Wx4
Tone Controls	+7dB (Bass 100HZ, Treble 10K HZ)
Mounting Dimensions	Approx.178x170x100mm (DxWxH)
Weight	Approx. 3 kg

DVD Deck Section

Discs Played MPEG4, DVD, VCD,MP3, CD,
CD-R, CD-RW ,XVID

Video System AUTO /PAL/NTSC

Mounting Angle 0 to+/-30

Video Section

Maximum Output level 2Vrms (+/-3Db)

Frequency Response 20 to 20KHZ

Signal-to-noise Ratio 85db

Separation 80db

AM Tuner Section

Frequency Range 522-1620(Europe/China), 530-1710(U.S.A)

IF Range 450KHZ

Usable Sensitivity (-20db) 25db

FM Tuner Section

Tuning Range 87.5-108(Europe/China), 87.5-107.9(U.S.A)

LF Range 10.7MHZ

Usable sensitivity (-30db) 15db

Signal-to-noise Ratio 60db

Stereo Separation 30db (1HKz)

Frequency Response 30~15000Hz

Note: Due to continuous product improvement, specifications and design are subject to change without notice.