

## 注意

請記錄下列資料：

- 型號
- 機身編號
- 經銷商名稱
- 購買日期

 
本產品在不斷改進中，如功能有所更改，恕不另行通知；如有疑問，請與維修中心聯絡，不便之處，敬請原諒。

使用手冊

**Cellini**  
Italy

微波爐

型號：CM7017SB

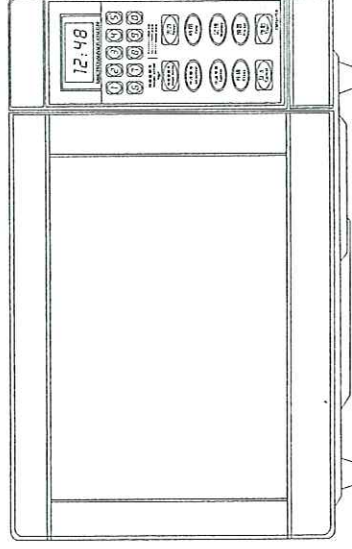

請在安裝和使用此微波爐前詳細閱讀本使用手冊，並保存好以備日後參考。

 **Gilman Home Appliances**  
太平家庭電器

香港新界葵涌大連排道58-66號  
樂聲工業中心8樓A,B座  
產品查詢：2418 3246  
維修安裝：2421 1222

Flat A & B, 8/F., Roxy Industrial Centre  
58-66 Tai Lin Pai Road, Kwai Chung, N.T.  
Product Information : 2418 3246  
Service Hotline : 2421 1222

目錄

|           |   |
|-----------|---|
| 規格        | 1 |
| 安裝        | 1 |
| 性能圖示      | 2 |
| 控制板說明     | 2 |
| 特別功能      | 4 |
| 安全使用要點    | 4 |
| 操作方法      | 5 |
| 微波爐使用常識   | 6 |
| 微波爐的清潔和保養 | 6 |
| 微波爐維修說明   | 7 |

規格

|           |                       |
|-----------|-----------------------|
| 貨 號       | CM7017SB              |
| 額定電壓及額定頻率 | 230V ~ 50Hz           |
| 額定輸入功率    | 1200W                 |
| 微波輸出功率    | 700W                  |
| 額定微波頻率    | 2450MHz               |
| 外形尺寸      | 295mm x 458mm x 345mm |
| 內腔尺寸      | 206mm x 300mm x 284mm |
| 內腔容量      | 17L                   |
| 有效轉盤面積    | 0.057m                |
| 內腔材料      | 不銹鋼                   |
| 均勻加熱方式    | 專用玻璃轉盤方式              |
| 淨 重       | 約13.7kg               |

( 注： 所標外形尺寸、內腔尺寸順序為： 高 × 寬 × 深 )

安裝

1. 把微波爐內的包裝物全部取出。

2. 應仔細查看微波爐有否損壞。如有損壞，請立刻聯絡經銷商或本公司特約維修部。


3. 17L 微波爐淨重約 13.7 千克，應放置於有足夠承托力的水平面上。
4. 本微波爐應在通風干燥、無腐蝕性氣體的環境中使用。遠離高溫及蒸汽。

5. 切勿在爐內放置任何物件，並保持與頂部壁面距離至少20厘米。

6. 微波爐兩旁應與牆壁距離至少5厘米，爐背應與牆壁至少距離10厘米。

7. 警告 —— 爲了防止觸電，必須確保此微波爐接地良好。

## 性能圖示

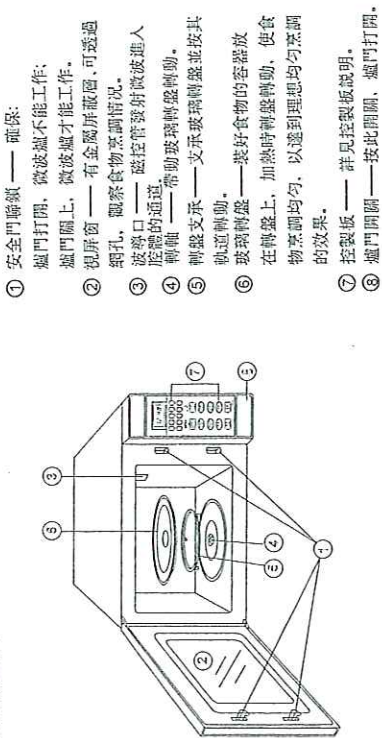 

- ① 安全門鎖鎖——確保：爐門打開，微波爐不能工作；爐門關上，微波爐才能工作。
- ② 視窗——有金屬屏蔽層，可透過鋼孔，觀察食物烹調情況。
- ③ 旋轉口——磁控管要射微波進入腔體的通道。
- ④ 轉軸——帶動玻璃轉盤轉動。
- ⑤ 轉盤支系——支承玻璃轉盤並按其軌道轉動。
- ⑥ 玻璃轉盤——裝好食物的容器放在轉盤上，加熱時轉盤轉動，使食物烹調均勻，以達到理想均勻烹調的效果。
- ⑦ 控制板——詳見控制板說明。
- ⑧ 爐門開關——按此開關，爐門打開。

## 控制板說明

### 顯示窗說明

按重量解凍 預置 重量 LOCK

88:88

15 25 30

快速解凍 第一 第二 第三 階段 烹調

### 特別功能

兒童保險鎖 計時 自動提示

### 程序組合

預置

按重量解凍 快速解凍

第一階段按時及火力烹調

第二階段按時及火力烹調

### 功能

時鐘 預置 按重量解凍 快速解凍 記憶 按時及火力烹調 快速烹調

注：此控制面板圖案若有變動，恕不另行通知。

數字鍵 (1, 2, 3, ..., 9, 0)

## 火力 POWER

- 用來輸入所需火力。
- 此微波爐有 10 種火力調節，火力強度以 10% 依次遞減。
- 如不另外輸入火力，微波爐將自動以最高火力烹調。
- 烹調時，如要檢視火力，只需按下「火力」鍵 POWER，烹調的火力將持續顯示 5 秒，而不影響操作，5 秒後，剩餘烹調時間將顯示。
- 下面是火力及相應的輸出功率

| 火力輸出      | 火力輸出 |
|-----------|------|
| 100% 功率輸出 | 10   |
| 90% 功率輸出  | 9    |
| 80% 功率輸出  | 8    |
| 70% 功率輸出  | 7    |
| 60% 功率輸出  | 6    |
| 50% 功率輸出  | 5    |
| 40% 功率輸出  | 4    |
| 30% 功率輸出  | 3    |
| 20% 功率輸出  | 2    |
| 10% 功率輸出  | 1    |
| 計時        | 0    |

## 時間 TIME

- 用來輸入烹調時間。
- 烹調時間最長可選擇到 99 分 59 秒。

## 時鐘 CLOCK

- 用來輸入當日時間或重現當日時間。
- 當微波爐操作時，時間會自動顯示。
- 當微波爐發生故障或切斷電源，必須重新調校時間。

## 取消 CANCEL

- 按「取消」鍵 CANCEL 可以取消前面輸入的火力、烹調或解凍時間，而當日時間不會被取消。

## 啟動 START

- 按「啟動」鍵 START 可以啟動已輸入的解凍或烹調程序。當程序開始時，烹調顯示燈和爐燈會亮起，通風風扇和轉盤也會開始轉動。
- 注：程序完畢後，顯示會回到「時鐘」。
- 在程序完畢後會發出「叮」的聲音，當日時間將再次顯示，而爐燈和風扇也會自動關掉。
- 如果爐門不打開或不按「取消」鍵 CANCEL，微波爐將會不停的閃動。

爐將每隔兩分鐘出現三聲「叮」提醒音聲，以便提醒用戶。

注：要想中途停止烹調程序，只需打開爐門，微波爐將立即停止工作。

- 如不需繼續工作，請按「取消」鍵 CANCEL。
- 如需繼續工作，只要開門，並按「啟動」鍵 START，烹調程序會再次啟動。

## 按重量解凍 WEI DEFROST

- 按重量解凍肉類、家禽、海鮮解凍。
- 只需將食物的重量和重量輸入，微波爐會自動選擇解凍時間及火力。

注：各類食物的最高解凍重量如下：

| 按重量解凍 | 食物種類 | 最高重量   | 顯示 |
|-------|------|--------|----|
| 程度    |      |        |    |
| 按 1 次 | 肉類   | 2.3 千克 | d1 |
| 按 2 次 | 家禽類  | 4.0 千克 | d2 |
| 按 3 次 | 海鮮類  | 0.9 千克 | d3 |

- 如食物超出最高解凍重量，微波爐將不會啟動，這時應轉用「快速解凍」程序。

## 快速解凍 JET DEFROST

- 用時間來快速解凍冷凍食物。
- 解凍程序會自動從中大火至中低火再降至低火操作。
- 解凍進行時，「快速解凍」燈和烹調顯示燈將同時亮起。

## 快速烹調 EXPRESS

- 可利用此功能選 4 種使用的烹調時間。
- 每次按下「快速烹調」鍵 EXPRESS，即可選擇以下幾種烹調時間。

|       |      |
|-------|------|
| 按 1 次 | 15 秒 |
| 按 2 次 | 30 秒 |
| 按 3 次 | 1 分鐘 |
| 按 4 次 | 2 分鐘 |

用「快速烹調」程序進行時，微波爐將以 100% 火力（高火力）烹調。

## 預置 PRE-SET

- 用以指令微波爐在預定時間（12 小時內）自動工作。
- 在輸入預定時間程序前，必須將時鐘校正。
- 當微波爐正處於預置狀態，「預置」顯示燈將會不停的閃動。



## 記憶 MEMORY

- 如選擇用時間烹調食物，可按「記憶」鍵 MEMORY 選定在第一、階段及第二階段烹調。

## 特別功能

### 兒童保險鎖 CHILD LOCK

- 用來防止兒童在沒有成人指導的情況下使用微波爐。
- 當兒童按微波爐開關後，「兒童保險鎖」顯示燈將會亮起，此時微波爐不能操作。

### 計時 TIMER

- 用來方便你進行爐外烹飪操作時計時。
- 當計時程序開始，爐內的照明燈、冷卻風

## 安全使用要點

### 使用

- 使用前請細閱「使用手冊」全部內容。
- 本微波爐專為家庭加熱及烹調食物而設計，故不適用於其它工業用途。
- 小孩使用微波爐，需在成人指導下操作。
- 用戶使用之前，應檢查所用器皿是否適用於微波爐。
  - 微波烹調時切勿使用金屬器皿，帶金屬邊的器皿也不應使用。微波爐中通常使用陶器、耐熱玻璃、耐熱塑料或紙質器皿。
  - 窄頸瓶不可直接放入微波爐烹煮。
  - 密封的瓶蓋或袋裝食物必須開口後才能放在爐內加熱，否則氣體膨脹會發生爆裂。
  - 使用保潔紙或蓋食物烹調時，請將保潔紙一角摺上，使之通氣，煮好後將保潔紙小心拆開，以免蒸汽灼傷。
- 使用時先放入轉盤支架及玻璃轉盤，再將盛好食物的器皿放在玻璃轉盤上進行烹調。
- 爐內無食物時，請不要使微波爐工作，以免空載運行損壞機器。
- 切勿將一般的水滾溫度計放入爐內，邊加熱、邊測量，以免引起打火或損壞。
- 烹調少量食物時，要多加觀察，防止過熱起火。
- 當食物在塑料、紙或其它可燃材料製成的易處理容器中加熱或烹調時，應多加注意，防止起火。
- 從微波爐內提取食物和器皿時，請不要立刻打開爐門，否則空氣會加大火勢，應立即切斷電源。
- 為防止轉盤受損壞，請遵守下列事項：
  - 用水清洗轉盤時，應先待轉盤冷卻。
  - 切勿將滾熱食品或燒熱容器於冷卻的轉盤之上。
  - 切勿將冰冷食品或冰冷容器於熱的轉盤之上。
  - 注意轉盤的最大負載重量不能超過 5kg。
- 每次微波爐使用完畢，最好將一盤清水的玻璃杯置於爐內玻璃轉盤上，避免誤操作損壞機器。
- 不要將微波爐置有任何物品。

## 食物

- 切勿煮帶殼蛋，壓力會使蛋殼裂。另外蛋黃、蛋白也要用牙籤刺穿數次。  
**警告**——已煮好的湯面或荷包蛋等，馬上取出可能會造成其內部液體沸騰爆發而濺傷人體。注意，應打開爐門後，略攪一會兒，再取出食用。
- 煮食時間不宜過長，因為煮食不足可損壞，而過度則無法補救。
- 烹調食譜所提供的是烹調的人均時間，影響烹調時間的因素有：所喜歡的煮食程度、食物的初始溫度、形狀大小、份量和使用器皿的形狀、大小以及食物的排列、翻蓋、翻攪等，適當修正烹調時間。
- 表面無孔的食物（如蛋、板栗、土豆、香腸等）請去皮或在外皮上開一裂縫或叉幾個小孔，否則受熱膨脹，可能發生爆裂。

## 操作方法

每次按下檔控鍵，有一聲“啞”音。

### 調校時鐘

例：6時45分

- 步驟：1. 按「時鐘」鍵 CLOCK  
2. 按下「取消」鍵 CANCEL  
3. 按下數字鍵 [6][4][5]  
4. 再按「時鐘」鍵 CLOCK

時與分之間的兩點會每隔一秒閃動一次。

- 注：當電源接上後，“時鐘”顯示出“1:01”
- 要想更改時間，請重複前面步驟。
- 要想在微波爐操作過程中知道當日時間，可按「時鐘」鍵CLOCK，當日時間便會顯示5秒。

### 按時及火力烹調

例：輸入1分鐘，30%火力的烹調程序

- 步驟：1. 按下「時間」鍵 TIME  
2. 再按「火力」鍵 POWER  
3. 按下「時鐘」鍵 START  
4. 再按「時鐘」鍵 START
- 注：當以100%火力烹調時，便不需輸入步驟2。

### 預置

例：輸入2時正開始烹調的程序

- 步驟：1. 按下「預置」鍵 PRE-SET  
2. 按下數字鍵 [2][0][0]  
3. 輸入烹調程序  
4. 按下「時鐘」鍵 START

微波爐將在2時正開始進行烹調。

- 注意：在輸入預置程序前，必須確定時鐘上的顯示為當日正點時間。

### 快速烹調

例：用快速烹調功能，輸入1分鐘，高火力的

- 本微波爐的時鐘是專為預置烹調而設計，為保持時鐘準確，最好每天調整時鐘的時間。

- 如果微波爐爐罩、玻璃引起煙、門封、致漏、外殼等發生損壞，注意微波爐門，不要使用微波爐，必須由專業維修人員檢修。

## 食物

- 切勿煮帶殼蛋，壓力會使蛋殼裂。另外蛋黃、蛋白也要用牙籤刺穿數次。  
**警告**——已煮好的湯面或荷包蛋等，馬上取出可能會造成其內部液體沸騰爆發而濺傷人體。注意，應打開爐門後，略攪一會兒，再取出食用。
- 煮食時間不宜過長，因為煮食不足可損壞，而過度則無法補救。
- 烹調食譜所提供的是烹調的人均時間，影響烹調時間的因素有：所喜歡的煮食程度、食物的初始溫度、形狀大小、份量和使用器皿的形狀、大小以及食物的排列、翻蓋、翻攪等，適當修正烹調時間。
- 表面無孔的食物（如蛋、板栗、土豆、香腸等）請去皮或在外皮上開一裂縫或叉幾個小孔，否則受熱膨脹，可能發生爆裂。

## 操作方法

每次按下檔控鍵，有一聲“啞”音。

### 調校時鐘

例：6時45分

- 步驟：1. 按「時鐘」鍵 CLOCK  
2. 按下「取消」鍵 CANCEL  
3. 按下數字鍵 [6][4][5]  
4. 再按「時鐘」鍵 CLOCK

時與分之間的兩點會每隔一秒閃動一次。

- 注：當電源接上後，“時鐘”顯示出“1:01”
- 要想更改時間，請重複前面步驟。
- 要想在微波爐操作過程中知道當日時間，可按「時鐘」鍵CLOCK，當日時間便會顯示5秒。

### 按時及火力烹調

例：輸入1分鐘，30%火力的烹調程序

- 步驟：1. 按下「時間」鍵 TIME  
2. 再按「火力」鍵 POWER  
3. 按下「時鐘」鍵 START  
4. 再按「時鐘」鍵 START
- 注：當以100%火力烹調時，便不需輸入步驟2。

### 預置

例：輸入2時正開始烹調的程序

- 步驟：1. 按下「預置」鍵 PRE-SET  
2. 按下數字鍵 [2][0][0]  
3. 輸入烹調程序  
4. 按下「時鐘」鍵 START

微波爐將在2時正開始進行烹調。

- 注意：在輸入預置程序前，必須確定時鐘上的顯示為當日正點時間。

### 快速烹調

例：用快速烹調功能，輸入1分鐘，高火力的

## 烹調程序

記住：在進行組合烹調之前，必須先按

**[取消] 鍵** CANCEL

例：輸入組合烹調程序

快速解凍

第一階段按時及火力烹調

第二階段按時及火力烹調

步驟：1. 按下 **[取消] 鍵** CANCEL

2. 輸入“快速解凍”程序

3. 輸入第一階段按時及火力烹調程序

4. 按下 **[記憶] 鍵** MEMORY

5. 輸入第二階段按時及火力烹調程序

6. 按下 **[啟動] 鍵** START

在烹調程序之前輸入。

注：1. “快速解凍”和“按重量解凍”程序只能

在烹調程序之前輸入。

2. 在第一階段按時及火力烹調程序輸入

後，必須按下 **[記憶] 鍵** MEMORY，

然後再輸入第二階段按時及火力烹調。

## 微波爐使用常識

1. 如果微波爐不工作，應檢查：

電源插頭是否插好。

爐門是否關好。

兒童保險鎖是否鎖住。

家電保險器是否跳開或燒斷。

## 微波爐的清潔與保養

### 注意

切勿使用強洗滌劑、香蕉水、汽油、研磨粉和金屬刷來清洗爐子的任何部位

1. 清洗爐腔之前，須關閉微波爐，並從插座上拔去電源線插頭。
2. 經常保持爐腔清潔。當食物或湯水灑到爐內壁時，可用濕布擦去。如爐內壁很髒則可使用軟性洗劑，切勿使用粗糙、磨損性的洗劑。
3. 必須經常清潔玻璃盤，可先用溫熱的肥皂水清洗，再用清水洗擦乾。
4. 必須經常擦洗轉盤支承和爐腔底面，請用軟性劑洗爐腔底面，而轉盤支承則可用溫熱的肥皂水洗，清洗後放回原處。
5. 必須經常清潔爐門的密封面，可先用軟乾布擦肥皂水清洗，再用軟乾布擦。
6. 微波爐外表用軟乾布擦後，再用軟乾布擦。注意不要讓水滲入爐縫或通風口。
7. 如控制板被弄濕，則請用軟的乾布抹擦，不能用粗糙、磨損性的洗劑來擦控制板，擦控制板時，請將爐門打開，以免誤操作。
8. 爐內外如有蒸汽凝結的水滴，可用軟布擦。
9. 爐內如有異味，可用一杯水加幾匙檸檬汁煮 5 ~ 7 分鐘，即可消除。
10. 微波爐若長期不用，應拔掉電源插頭，放在通風乾燥、沒有腐蝕性氣體的環境中。
11. 爐子發生故障，必須由本廠培訓的事業維修人員檢修，其它任何人員拆修將是危險的。

## 計時

- 步驟：1. 按下 **[時間] 鍵** TIME
2. 用數字鍵輸入所需時間
3. 按下 **[火力] 鍵** POWER
4. 按下數字鍵 **[0]**
5. 按下 **[啟動] 鍵** START

## 兒童保險鎖

a. 兒童保險鎖設置

步驟：1. 按下 **[取消] 鍵** CANCEL，

2. 同時按下數字鍵 **[5]** 和 **[7]**，在此時應

響起“啾”聲，兒童保險鎖顯示燈 LOCK，

也會亮起。程序完成後，微波爐便不能

操作。

b. 解除兒童保險鎖

步驟：同時按下 **[5]** 和 **[7]**，此時響起“啾”聲，

兒童保險鎖顯示燈 LOCK，同時會熄滅。

## 微波爐維修說明

1. 維修人員在維修微波爐時：

注意

微波輻射

不要靠留在由微波發生器或其它引導微波能部件所發出的輻射中。

| 易被拆掉並可能触及到250V以上的部件                                    | 可導致過度微波泄漏的元件                                                                                         |
|--------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| 1. 磁控管<br>2. 高壓變壓器<br>3. 高壓電容器<br>4. 高壓二極管<br>5. 高壓保險絲 | 1. 磁控管安裝在波導管上，如果安裝不當。<br>2. 門鉤及門鎖固定在上、下波導上調整不當。<br>3. 開關托架安裝不當。<br>4. 門、門封、外殼發生損壞。<br>上述原因可導致過度微波泄漏。 |

 
2. 如需更換爐燈、電源線等，要採用本公司的專用型號。



## Microwave Oven

This owner's guide book is for the following 700 watts microwave oven model:

**CM7017SB**

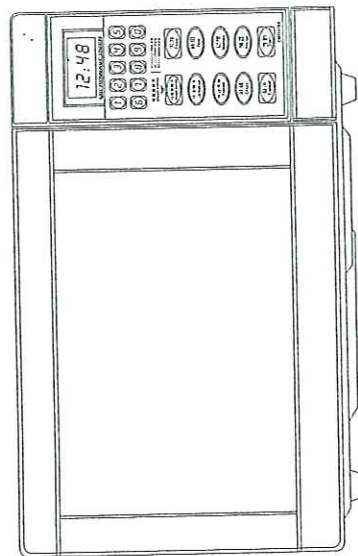

### CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions, this is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.

11

1. READ these instructions carefully before installing and operating the oven. Keep them for further reference.

2. Record in the space below the SERIAL NO. found on the nameplate on your oven and retain this information for future reference.

SERIAL NO.:



## CONTENTS

|                                                                           |    |
|---------------------------------------------------------------------------|----|
| Precautions to Avoid Possible Exposure to Excessive Microwave Energy..... | 1  |
| Specifications.....                                                       | 1  |
| Before You Call for Service.....                                          | 2  |
| Installation.....                                                         | 2  |
| Grounding Instructions.....                                               | 2  |
| Radio Interference.....                                                   | 3  |
| Important Safety Instructions .....                                       | 3  |
| Microwave Cooking Principles.....                                         | 5  |
| Utensils Guide.....                                                       | 6  |
| Part Names.....                                                           | 6  |
| Control Panel.....                                                        | 7  |
| Operation Instructions.....                                               | 8  |
| Cleaning and Care.....                                                    | 11 |

### PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  - Door ( bent ).
  - Hinges and latches ( broken or loosened ),
  - Door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

### SPECIFICATIONS

|                               |                                 |
|-------------------------------|---------------------------------|
| Power Consumption:            | 230V, 50Hz, 1200W               |
| Rated microwave power output: | 700W                            |
| Operation Frequency:          | 2450MHz                         |
| Outside Dimensions:           | 295mm(H)×458mm(W)×345mm(D)      |
| Oven Cavity Dimensions:       | 206mm(H)×300mm(W)×284mm(D)      |
| Oven Capacity:                | 17Litres                        |
| Cooking Uniformity:           | Turntable System; $\phi$ 270mm; |
| Net Weight:                   | Approx. 13.7kg                  |

## BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

- Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
  - Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
  - Check to ensure that the control panel is programmed correctly and the timer is set.
  - Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.
- IF NONE OF THE ABOVE RECTIFY THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

## INSTALLATION

- Make sure that all the packing materials are removed from the inside of the door.
- WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact a qualified service personnel.
- This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
- Do not place the oven where heat, moisture or high humidity are generated, or near combustible materials.
- For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
- Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
- Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
- The socket must be readily accessible so that it can be easily unplugged in an emergency.
- Do not use the oven outdoors.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In

the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

**WARNING:** Improper use of the grounding plug can result in a risk of electric shock.

**Notes:** 1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.

2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this mains cable are colored in accordance with the following code:

Green and Yellow = EARTH  
Blue = NEUTRAL  
Brown = LIVE

## RADIO INTERFERENCE

1. Operation of the microwave oven can cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
  - a. Clean door and sealing surface of the oven.
  - b. Reorient the receiving antenna of radio or television.
  - c. Relocate the microwave oven with respect to the receiver.
  - d. Move the microwave oven away from the receiver.
  - e. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or

dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

5. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

6. To reduce the risk of fire in the oven cavity:

- a. When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
- b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
- c. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.

7. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.

8. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.

9. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.

10. Eggs in their shell and whole hard-boiled

eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.

11. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.

12. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.

13. Cooking utensils may become hot because of heat transferred from the heated food.

Potholders may be needed to handle the utensil.

14. Utensils should be checked to ensure that they are suitable for use in microwave oven.

15. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.

16. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.



## MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwaving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

 
## UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.
2. Microwave can not penetrate metal, so metal utensils or dishes with metallic trim should not be use.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.

The list below is a general guide to help you select the correct utensils.


| Cookware                        | Microwave Cooking |
|---------------------------------|-------------------|
| Heat-Resistant Glass            | Yes               |
| Non Heat-Resistant Glass        | No                |
| Heat-Resistant Ceramics         | Yes               |
| Microwave-Safe Plastic Dish     | Yes               |
| Kitchen Paper                   | Yes               |
| Metal Tray                      | No                |
| Metal Rack                      | No                |
| Aluminum Foil & Foil Containers | No                |

## PART NAMES

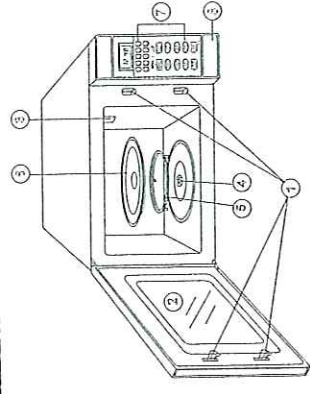

- ① Door Safety Lock System
- ② Oven Window
- ③ Oven Air Vent
- ④ Shaft
- ⑤ Roller Ring
- ⑥ Glass Tray
- ⑦ Control Panel
- ⑧ Door Release Button

## CONTROL PANEL

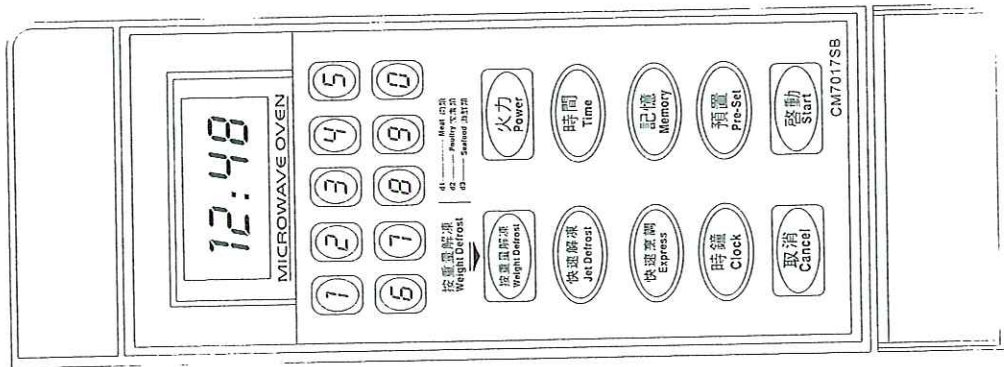 

### DISPLAY

Cooking time, power, indicators and present time are displayed.

### NUMBER PADS (0-9)

Touch to set times or weights.

### WEIGHT DEFROST

Use to defrost frozen meat, poultry and seafood by weight. The defrosting time and power level are automatically set once the food category and the weight are programmed.

### JET DEFROST

Touch to set defrosting time; the oven automatically divides the defrosting time into periods of alternating defrost and stand times by cycling on and off.

### POWER

Use to set power level. To check power level during time cooking, touch POWER pad.

### PRE-SET

Use to set the oven to start-up at a later time. The pre-set indicator will flicker when the oven is in the PRE-SET state. The clock must be set before the pre-set function can be programmed.

### MEMORY

When programming the oven to cook by time, use the MEMORY pad when setting both the 1st and the 2nd cooking stage. The respective lights will come on to indicate which stage the oven is operating in.

### TIME

Use to set cooking time. Allows you to set up to 99 minutes and 99 seconds.

### CLOCK

Use to set the time of day or recall the time of day. The time of day will be displayed at all times except when the oven is operating. In the event of a power failure or if the oven is unplugged, the clock will have to be reset.

### EXPRESS

Use this feature to program the oven for 4 popular microwave timings. The oven will operate at HIGH power (100% power output) for EXPRESS cooking program.

## OPERATION INSTRUCTIONS

### BEEP DURING OVEN SETTINGS

Each time a pad is touched, a beep will sound to acknowledge the touch.

### SETTING THE CLOCK

1. Touch CLOCK pad.
2. Touch CANCEL pad.
3. Use the number pads to enter the correct time. You must touch at least three numbers to set the clock (one for hour and two for minutes).
4. Touch CLOCK pad again.

#### NOTE:

This is a 12-hour clock. When the oven was plugged in, "1:01" should have appeared in the display. To reset the time of day, repeat the steps given above. You can check the clock time while cooking is in progress by touching the CLOCK pad.

### START

Touch to start the cooking or defrosting programs. The cooking indicator light and the oven light will turn on and the cooling fan will operate.

### CANCEL

Touch to cancel the selected power level, cook or defrost times that previously programmed. But the time of day clock cannot be cancelled.

### SETTING THE OVEN TIMER

1. Touch TIME pad.
2. Enter the amount of time you want to count down by touching the number pads. Digit time is in minutes and seconds and set left to right. Set one digit (a 5 for 5 seconds) or up to four digits (2405 for 24 minutes, 5 seconds).
3. Touch POWER pad.
4. Touch number pad 0.
5. Touch START pad.

#### NOTE:

- Touch TIME and then touch CANCEL to cancel TIME during timing process.

## SETTING COOKING TIMES AND POWER LEVELS

### A. One-stage Cooking

1. Touch TIME pad.
2. Use the number pads to set a cooking time. You can set a cooking time from one seconds to 99 minutes and 99 seconds. If you are setting a time greater than one minute, you must enter numbers for both minutes and seconds. For example, to set 20 minutes, enter 2,0,0,0.
3. If you want to set a power level other than 100% power, touch POWER, then use the number pads to enter the power level. You can set the power level from 1 to 9.
4. Touch START to start cooking.

| USE THESE SINGLE DIGIT TO REPRESENT POWER LEVELS |            |
|--------------------------------------------------|------------|
| Number pad                                       | % of Power |
| 9                                                | 90%        |
| 8                                                | 80%        |
| 7                                                | 70%        |
| 6                                                | 60%        |
| 5                                                | 50%        |
| 4                                                | 40%        |
| 3                                                | 30%        |
| 2                                                | 20%        |
| 1                                                | 10%        |

### B. Two-stage Cooking

Some recipes require different stages of cooking at different temperatures.

#### 1. SET STAGE 1:

Follow steps 1 and 2 in "One-stage Cooking".

DO NOT TOUCH START PAD.

#### 2. SET STAGE 2:

Touch MEMORY pad then enter proper cooking time and (lower) power level.

(Most 2-stage recipes use lower power for second stage.)

### 3. Touch START pad.

#### NOTE:

- The respective lights will come on to indicate which stage the oven is operating in. After total time has elapsed, 3 beeps sound. After a cooking or defrosting program has completed, the oven will automatically continue to sound three beeps every two minutes until the door is opened or the CANCEL pad is touched.

### PRE-SET

Suppose you want to set the oven to start-up at 2 o'clock.

- Step : 1. Touch PRE-SET pad.
2. Touch numeral pads 2,0,0.
3. Set the cooking programs.
4. Touch START pad.

#### NOTE:

Be sure the time of day clock is set at the correct time before programming PRE-SET.

### EXPRESS

Use this feature to program the oven for 4 popular microwave timings.

With each touch of the EXPRESS pad you can program the oven for :

- 15 seconds .....TOUCH ONCE
- 30 seconds .....TOUCH TWICE
- 1 minute .....TOUCH 3 TIMES
- 2 minutes .....TOUCH 4 TIMES

The oven will operate at HIGH power (100% power output) for EXPRESS cooking program.

Suppose you want to set the oven to cook for 1

minute at 100% by using the feature:

Step : 1. Touch the EXPRESS pad 3 times then

"1:00" will appear in the display.

2. Touch START pad.

### SETTING "JET DEFROST"

1. Touch JET DEFROST pad.
2. Enter desired defrosting time by touching correct number pads. Digital timer sets minutes and seconds from left to right so a single digit can be set (5 for 5 seconds) or up to 4 digits (2405 for 24 minutes 5 seconds).
3. Touch START pad.

### SETTING "WEIGHT DEFROST"

Suppose you want to defrost 600g shrimp.

1. Touch WEIGHT DEFROST pad 3 times. "d3" will appear in the display.
2. Touch number pads 6,0,0.
3. Touch START pad.

NOTE: The maximum allowable weight for each category is shown below.

| FOOD CATEGORY | MAXIMUM WEIGHT | DISPLAY |
|---------------|----------------|---------|
| Meat          | 2300g          | d1      |
| Poultry       | 4000g          | d2      |
| Seafood       | 900g           | d3      |

For foods exceeding these maximum weights, use the JET DEFROST program. If you

program weight in excess of the maximum recommended, the oven will not operate properly.

## PROGRAM COOKING

The oven has the ability to be programmed to do several consecutive functions.

Suppose you want set the following cooking program:

### ① JET DEFROST;

② 1st stage: Cook for 5 minutes at 100%;

③ 2nd stage: Cook for 10 minutes at 50%.

Step: 1. Touch CANCEL pad.

2. Input jet defrost program.

3. Input time (5 minutes) and power level (100%) cooking program.

4. Touch MEMORY pad.

5. Input time (10 minutes) and power level (50%) cooking program.

6. Touch START pad.

### NOTE: JET DEFROST and WEIGHT

DEFROST can only be selected before the cooking stage in a program. It can not be selected between or after stage1 or stage 2.

### SETTING "SAFETY LOCK"

The safety lock prevents unsupervised operation by little children. To set, press and hold number pads 5 and 7 at the same time, a beep sounds and LOCK indicator lights. To cancel, press and hold number pads 5 and 7 at the same time, a beep sounds and LOCK indicator goes off.

### TO STOP THE OVEN WHILE THE OVEN IS OPERATING

Open the door.

- You can restart the oven by closing the door and touching START pad.

#### NOTE:

- Oven stops operating when door is opened.



