D-Link Quick Installation Guide

This product can be set up using any current web browser, i.e., Internet Explorer 6x or Netscape Navigator 7x.



Before You Begin

- 1. If you purchased this Router to share your high-speed Internet connection with other computers, you must have an established Internet account from an Internet Service Provider (ISP).
- 2. It's best to use the same computer that is connected to your router for configuring the DSL-G684T Wireless ADSL Router. The DSL-G684T acts as a DHCP server and will assign all the necessary IP address information on your network. See below in this Quick Installation Guide or the Manual on the CD-ROM for setting each network adapter to automatically obtain an IP address.

Check Your Package Contents



If any of the above items is missing, please contact your reseller.

©2005 D-Link Systems, Inc. All rights reserved. Trademarks or registered trademarks are the property of their respective holders. Software and specifications subject to change without notice.





- A. First, connect the power adapter to the power input at the back panel of the DSL-G684T, then plug the other end of the power adapter to a wall outlet or power strip. On the front of the device, the Power LED will turn ON to indicate proper operation.
- **B.** Insert one end of the Ethernet cable into an Ethernet (LAN) port on the back panel of the DSL-G684T and the other end of the cable to an Ethernet Adapter or available Ethernet port on your computer.
- **C.** Insert the ADSL (telephone) cable included with the Router into the ADSL port, then connect the cable to your telephone line.



You can select two methods to configure your new router. The first method is by using **D-Link Click'n Connect Utility,** which is included on the CD designed to run on Windows XP/2000. Just follow the instructions step by step to configure your router for Internet access for the first time.

The second method is to use your Web browser to access the built in web server pages used to setup the Router, your computer must be configured to "Obtain an IP address automatically", that is, you must change the IP network settings of your computer so that it is a DHCP Client. If you are using Windows XP and do not know how to change your network settings, skip ahead to Appendix and read the instructions provided. You may also read the User Manual for instructions on changing IP settings for computers running Windows operating systems.

To connect to the network, make sure the network adapter in your computer is configured properly. Read the Appendix at the end of this guide to read how to configure the network adapter to obtain an IP address automatically using Windows XP.







Once you have logged in, the **Home** directory tab is prominent with the **Setup Wizard** menu displayed. Most users will be able to use the Setup Wizard to establish the ADSL connection to your ADSL Internet Service Provider (ISP). To begin using the Setup Wizard, click on the **Run Wizard** button in the middle of the web page. A pop-up menu will appear. This pop-up menu is the **Setup Wizard**. The Setup Wizard procedure consists of three general steps:

- 1. Choose your time zone
- 2. Set Internet connection
- 3. Save & Restart

Please see the user manual for information on setting up wireless operation.





The first Setup Wizard menu lists a summary of the steps required to complete the setup. Click the **Next** button to begin setup.

Click Next

Now configure the **Time Zone** used for the Router's system clock. Select the appropriate time zone setting for your location.





Next you will **Select the Internet Connection Type** for the WAN interface. Your ISP has given this information to you. If you do not know what type of connection to use, exit the Setup Wizard and contact your ISP for the information. The Setup wizard menu that appears when you click the **Next** button depends on what connection type you select. The connection types available in the Setup Wizard menu are PPPoE/PPPoA, Dynamic IP Address, Static IP Address and Bridge Mode. Follow the instructions below for the type of connection you are using.





PPPoE/PPPoA Connections

If you selected the PPPoE/PPPoA connection type in the previous menu, you will see the Setup Wizard menu pictured here. Type in the **Username** and **Password** used to identify and verify your account to the ISP. If you have been instructed to change the **VPI** number and **VCI** number, type in the new values. Select the **Connection Type** used for encapsulation specific to your service. Click **Next** when you are ready to continue the **Setup Completed** menu.



Configuring the Router (continued)

Dynamic IP Address Connections

If you selected the Dynamic IP Address connection type, select the **Connection Type** used for encapsulation. If you have been instructed to change the **VPI** number and **VCI** number, type in the new values. Click **Next** when you are ready to continue the Setup Completed menu.

	🗿 DSL-G684T - Microsoft Internet Explorer		
	DSL-G684T Wireless ADSL Route	ar	
Change the VPI and VCI numbers as instructed by your ISP by Typing in the new values.	Set Dynamic IP Address The Clone MAC Address is used to copy the MAC address of your Ethernet adapter to the DSL-G684T. Click Next to continue.		
Select the Connection Type used for your ADSL service.	VCI 35 Connection Type 1483 Bridged IP LLC V		
The "Clone MAC	Clone MAC Address		
Address ^{••} button will automatically copy the MAC address of the network adapter in your computer. You can also manually type in the MAC address.	What is a MAC address? Each network adapter has a discrete Media Access Control (MAC) address. Note that some computers and peripherals may already include built-in network adapters.		
Click the Next button. Skip ahead to the Setup Completed menu.			

Some ISP's store the MAC address of your computer's Ethernet address on their DHCP server. This can cause problems for the Router and other computers connecting through the Router. To use the MAC address from your computer, type the MAC address of your computer's Ethernet adapter in the Cloned MAC Address entry field and click the Clone MAC Address button to save to transfer it to the Router.



Static IP Address Connections

If you selected the Static IP Address connection type, change the WAN **IP Address**, **Subnet Mask**, **ISP Gateway Address** and (if available) **Secondary DNS Server** IP address as instructed by your ISP. Select the **Connection Type** used for encapsulation. If you have been instructed to change the **VPI** number and **VCI** number, type in the new values. Click **Next** when you are ready to continue the **Setup Completed** menu.

	🚰 DSL-G684T - Microsoft Internet Explorer	
	D-Link DSL-G684T Wireless ADSL Router	
Change the VPI and VCI numbers as instructed by your ISP by Typing in the new values.	Set Static IP Address Enter the static IP information provided to you by your ISP. Click Next to continue.	
Type the IP addresses for the WAN IP Address, WAN Subnet Mask, ISP Gateway Address and Primary/Secondary DNS Server.	VPI 8 VCI 35 IP Address 0.0.0.0 Subnet Mask ISP Gateway Address ISP Gateway Address 0.0.0.0 ARP Server Address 0.0.0.0	
Select the Connection Type as instructed by your ISP.	Secondary DNS Address Connection Type 1483 Routed IP LLC	
Click the Next button. Skip ahead to the Setup Completed menu.	Back Next Exit	

For some IPoA Static IP Address Connection Types, it may be necessary to enter an IP address for an ARP server. Use the ARP Server Address entry field for IPoA connections if necessary.



Bridge Connections

If you selected the Bridge connection type, select the **Connection Type** used for encapsulation. If you have been instructed to change the **VPI** number and **VCI** number, type in the new values. Click **Next** when you are ready to continue the **Setup Completed** menu.





Setup Completed

All the settings for the ADSL connection are now completed. Click the **Restart** button to save the new settings and restart the Router. It will take about two minutes to restart the Router.

🖆 DSL-G684T - Microsoft Internet Explorer 📃 🗖			
	D-Link Ludrog Hetwens for Progre	SL-0684T Wireless ADS	L Router
	Set	up Completed	
	The Setup Wizard has compl mistakes. Click Restart to sa G684T.	eted. Click on Back to modify cha we the current settings and reboo	nges or t the DSL-
Click Postart		G	3 🕕
CIICK Restart		DUCK	estart Exit
DSL-G684T - Mi D-Link	Crosoft Internet Explorer		
	Restarting		
	The system is now restarting. Please wait.		

While the Router is restarting, **DO NOT TURN OFF THE ROUTER.** Click the **Exit** button when the message appears informing you that the "device has rebooted successfully". You can now launch your web browser to access the Internet.

Appendix

For additional settings or information, refer to the **Advanced**, **Tools**, or **Status** tabs on the web-management interface; or to the manual located on the CD-ROM.

Configuring IP Settings in Windows XP

Use the following steps to configure a computer running Windows XP to be a DHCP client.

1. From the Start menu on your desktop, go to Settings, then click on Network Connections.



2. In the **Network Connections** window, right-click on **LAN** (Local Area Connection), then click **Properties**.



3. In the **General** tab of the **Local Area Connection Properties** menu, highlight **Internet Protocol (TCP/IP)** under "This connection uses the following items:" by clicking on it once. Click on the **Properties** button.

	🔟 Local Area Connection 3 Properties	2 🗙
	General Authentication Advanced	
	Intel(R) PR0/100 VE Network Connection	
	Configure This connection uses the following items:	
Click Properties	 Client for Microsoft Networks File and Printer Sharing for Microsoft Networks QoS Packet Scheduler Internet Protocol (TCP/IP) 	
	Install Uninstall Properties	
	Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.	
	Show icon in notification area when connected	
	OK Cano	;el

4. Select "**Obtain an IP address automatically**" by clicking once in the circle. Click the OK button.

	Internet Protocol (TCP/IP) Properties
	General Alternate Configuration
	You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
	Obtain an IP address automatically
	O Use the following IP address:
	IP address:
	Subnet mask:
	Default gateway:
	Obtain DNS server address automatically
	O Use the following DNS server addresses:
Select Obtain an IP address	Preferred DNS server:
automatically in the Internet	Alternate DNS server.
Protocol (TCP/IP) Properties window	
	Ad <u>v</u> anced
	OK Cancel

Your computer is now ready to use the Router's DHCP server.