

 
Start Here

Epson Stylus® CX4600


1

Unpack

Remove all the tape.

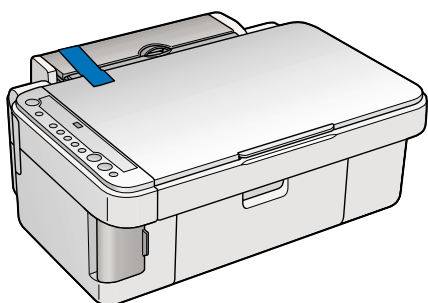

4 ink cartridges

 


If any of these parts are missing, contact Epson® as described on the back of this sheet.


2

Unlock the Printer

 
1 Lift up the scanner.

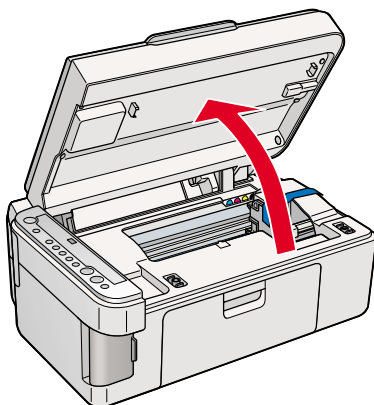

 2 Remove the tape from the ink cartridge holder.

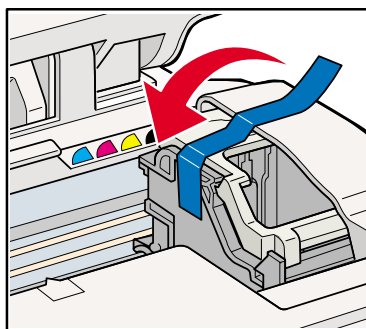


3 Close the scanner.

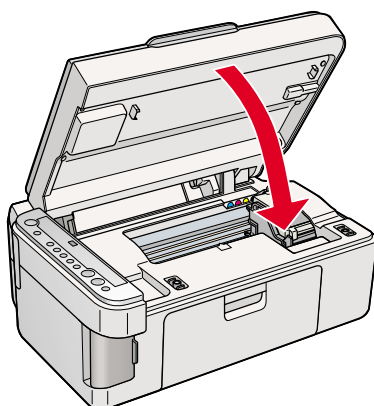 


3

Turn On the CX4600

 - 1 Connect the power cable.

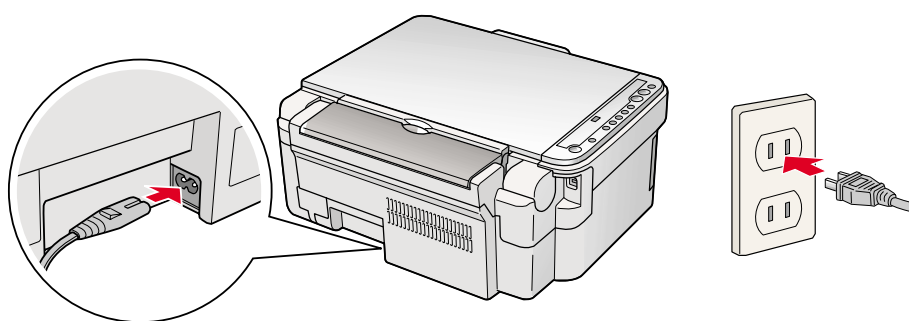

- 2 Press the  On button.

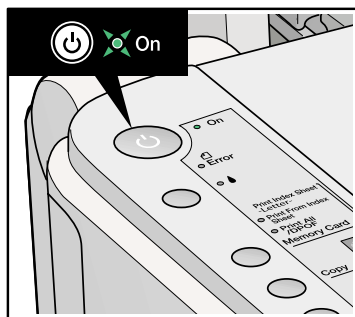 


4


Install Ink Cartridges

Caution: Don't load paper before installing the ink cartridges.

 
- 1 Lift up the scanner.

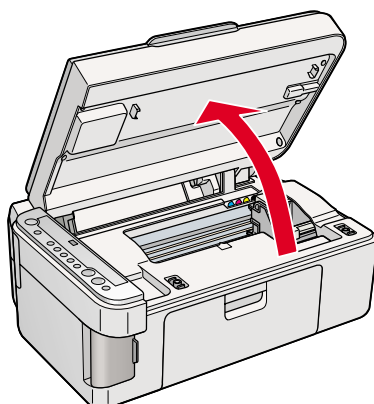

- 2 Open the ink cartridge cover.

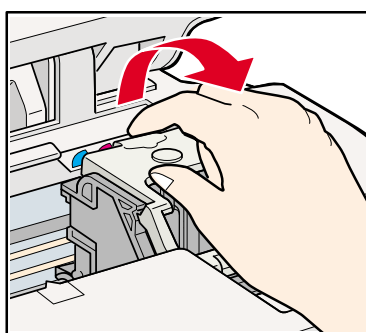 


 - 3 Shake the ink cartridges, then unpack them.

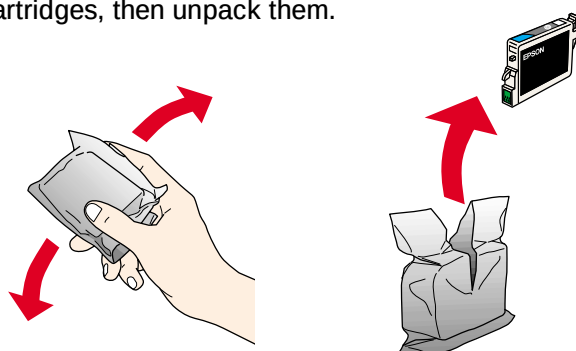


continue

 
- 4 Insert the cartridges in the holder for each color.

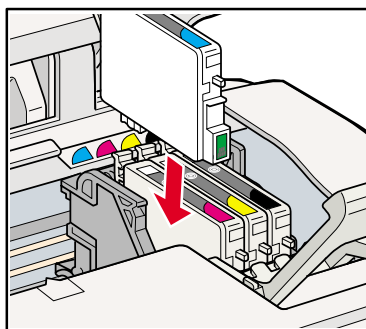

 
- 5 Press the cartridges down until they click.

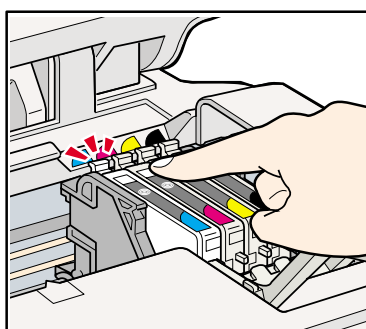

 
- 6 Close the ink cartridge cover and press it down.

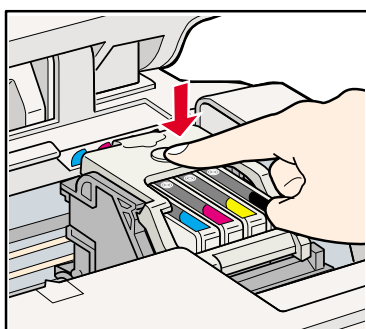

- 7 Close the scanner.

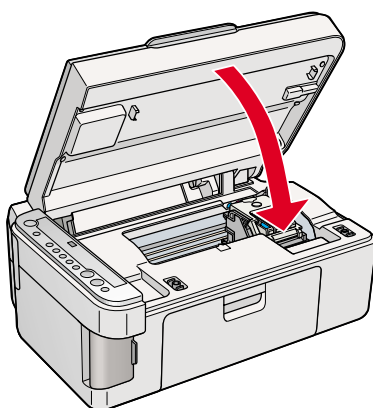 

 - 8 Press the  ink button to charge ink. Charging takes about 2 minutes.

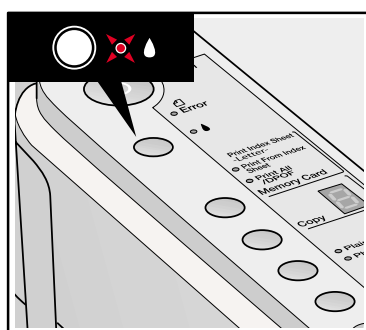


Caution: Don't turn off the CX4600 while the **On** light is flashing or you'll waste ink.


5

Load Paper

 
- 1 Open the paper support and pull up its extensions.
- 2 Open the output tray and pull out its extension.

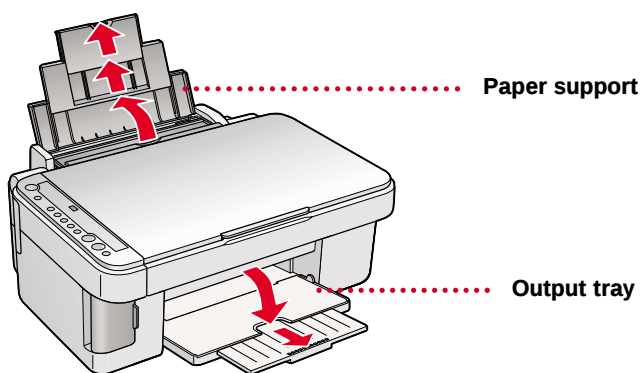


- 3 Flip the feeder guard forward.

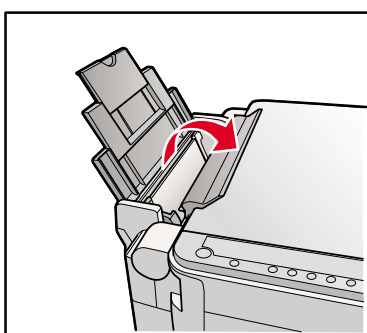 


- 4 Slide the edge guide left.

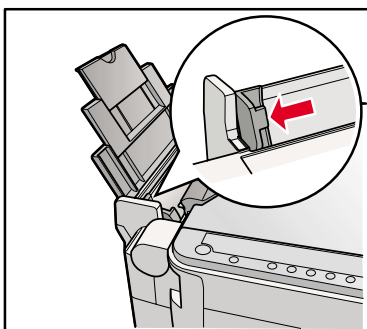 

 - 5 Load paper against the right edge guide and slide the left edge guide over.

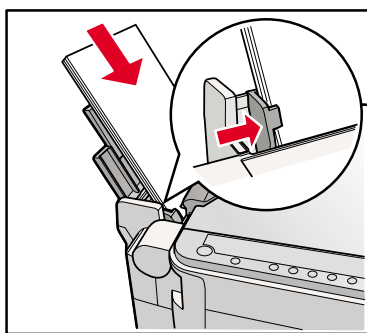

- 6 Flip the feeder guard back.

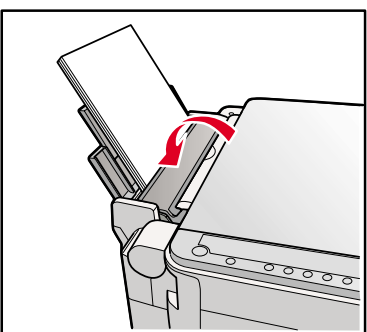 

Install Software

 
Your software works with Windows® 98SE, Me, 2000, and XP, and Macintosh® OS 9.1 to 9.2.2 and OS X 10.2.x and 10.3.x.

Windows


- 1 Make sure the CX4600 is **NOT CONNECTED** to your computer.




Note: If you see a screen like this, click **Cancel** and disconnect the USB cable. You can't install your software that way.

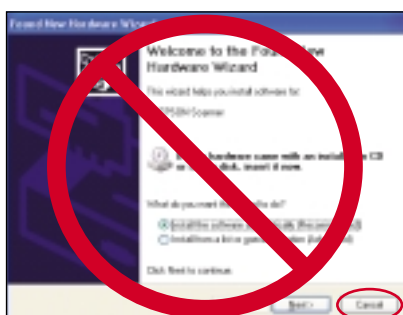


- 2 Insert the CX4600 CD.

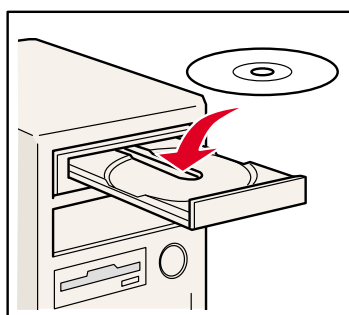 

 - 3 Click **Install** and follow the on-screen instructions. Software installation takes several minutes.

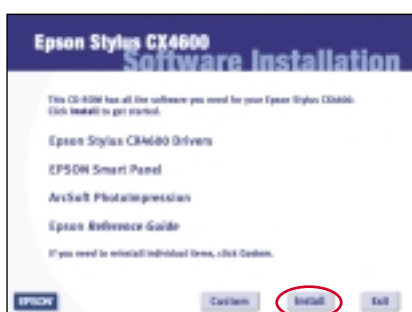

 - 4 When prompted, connect the USB cable. Use any open USB port on your computer.

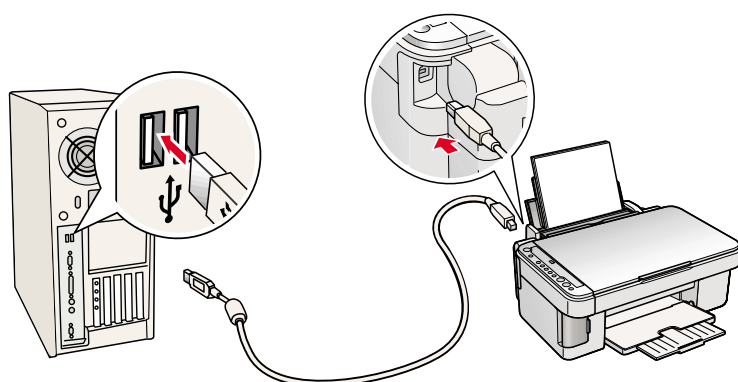


Note: If installation doesn't continue after a moment, make sure you securely connected and turned on the CX4600.

- 5 When you're done, remove the CD and restart your computer.


You're ready to copy, print, and scan! See the *Quick Reference* book or your on-screen *CX4600 Reference Guide*.

Macintosh

 
- 1 Insert the CX4600 CD.

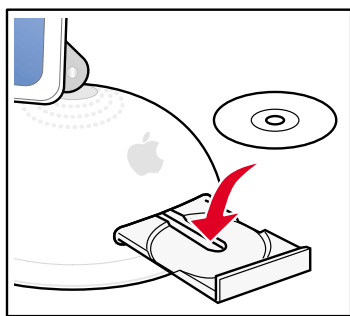

 - 2 Open the **Epson** CD-ROM desktop icon and click the  **Epson** icon.
- 3 Click **Install** and follow the on-screen instructions. Software installation takes several minutes.

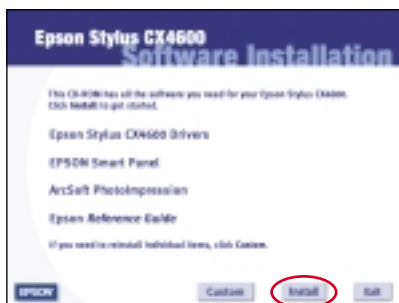

 
- 4 Connect the USB cable. Use any open USB port.

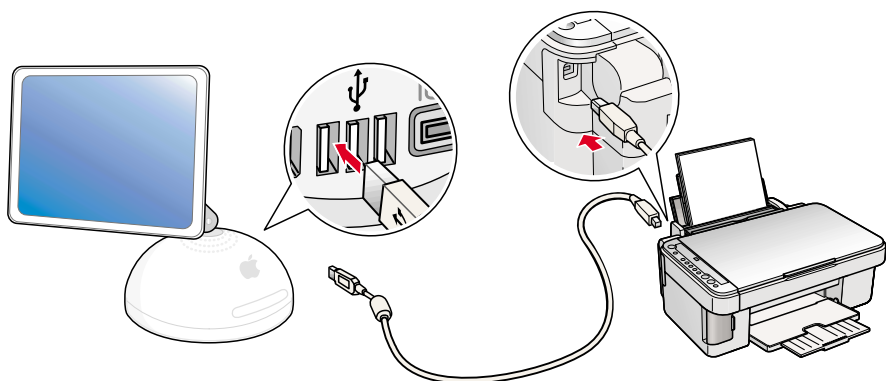

- 5 Remove the CD and restart your Macintosh.
- 6 Select your printer as described below.

OS X

 - 1 Access **Print Center** or the **Printer Setup Utility** in **Applications > Utilities**.
- 2 Follow any on-screen instructions to add the CX4600 printer.
- 3 At this screen, select **EPSON USB** at the top and **Stylus CX4600** below.

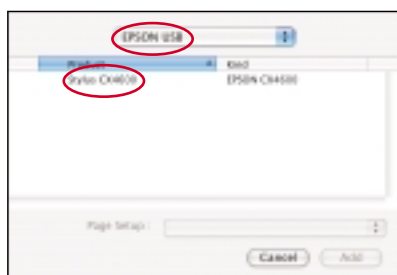


- 4 Click **Add**.
- 5 Quit Print Center or the Printer Setup Utility.

Note: If you print with Classic Mode applications, install your software on OS 9 too.

You're ready to copy, print, and scan! See the *Quick Reference* book or your on-screen *CX4600 Reference Guide*.

OS 9

 - 1 Access the Chooser in the Apple menu.
- 2 Select **CX4600**, your **USB** port, and Background Printing **On**.

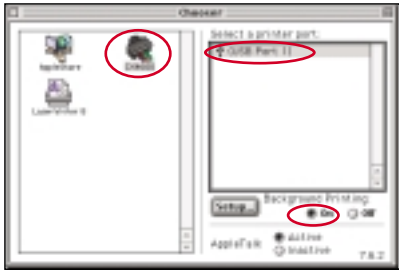


- 3 Quit the Chooser.

You're ready to copy, print, and scan! See the *Quick Reference* book or your on-screen *CX4600 Reference Guide*.

Any Problems?

 - If the green **On** light is flashing, just wait until it stops before pressing any control panel buttons.
- If the red  **Error** light is on, turn the CX4600 off and then on to clear the error.
- If the red  **Error** light is still on or flashing, check your paper loading and ink installation, and look for remaining packing material.
- If the red  **Error** light is flashing rapidly and an **H** appears in the **Copy** window, the paper thickness lever is in the  position. See your *Quick Reference* book for instructions on setting the lever position.
- If you suspect a paper jam, press the  **Start Color** button to eject the paper, then pull out the jammed sheets from the sheet feeder or output tray. See your *Quick Reference* book for details.
- If you have trouble copying, scanning, or printing from your computer, make sure you installed all of your software as described on this sheet. If necessary, uninstall and reinstall it.
- If you have a print quality problem, you may need to clean your print head. See your *Quick Reference* book for instructions.

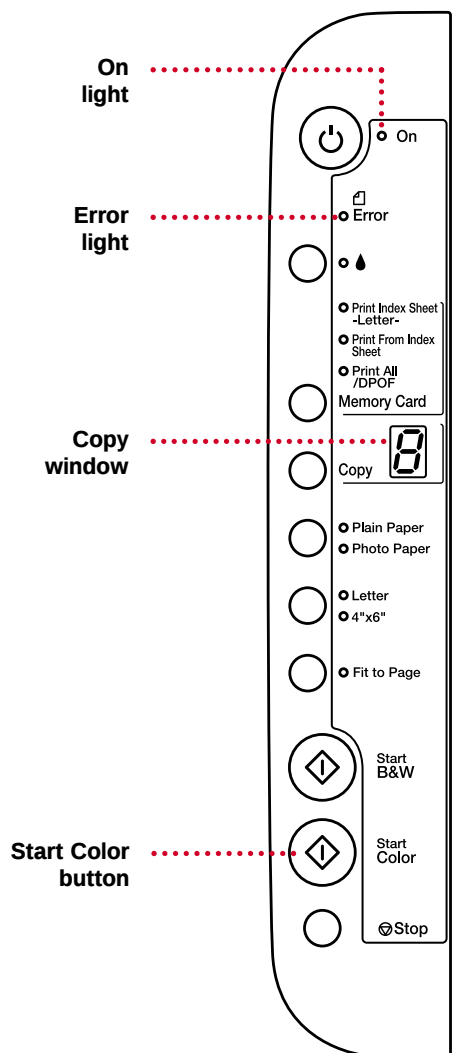

See your *Quick Reference* book and on-screen *CX4600 Reference Guide* for more problem-solving information.

Any Questions?

Look here for answers:

Quick Reference book

Basic steps for using the CX4600.

On-screen CX4600 Reference Guide

Click the desktop shortcut for easy access to CX4600 information.

On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson Technical Support

- **World Wide Web**
<http://support.epson.com>
- **Automated Telephone Services**
Call (800) 922-8911 with a touch tone telephone.
Use Epson SoundAdviceSM Express Code **70565** for the CX4600.
- **Speak to a Technical Support Representative**
Call (562) 276-4382 (U.S) or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Toll or long distance charges may apply.

Software Technical Support

- **EPSON Smart Panel™**
(510) 445-8616
Fax: (510) 445-8601
Web: www.newsoftinc.com
E-mail: contactus@newsoftinc.com
- **ArcSoft® PhotoImpression™**
(510) 440-9901
Web: www.arcsoft.com
E-mail: support@arcsoft.com



Need Paper and Ink?

For the best prints and copies, use genuine Epson ink and paper. Get them from your local store or from the Epson StoreSM at (800) 873-7766 or www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.



T044120
Black ink
cartridge

T044220
Cyan ink
cartridge

T044320
Magenta ink
cartridge

T044420
Yellow ink
cartridge



Premium Bright White Paper

Ultra-smooth white paper perfect for everyday use.



DURABrite® Ink Glossy Photo Paper

Heavier weight paper for long-lasting enlargements and snapshots.



Matte Paper Heavyweight

Fade-resistant, water-resistant paper with a flat matte finish for printing photos and graphics.

Epson and Epson Stylus are registered trademarks and EPSON Smart Panel is a trademark of Seiko Epson Corporation. DURABrite is a registered trademark and SoundAdvice and Epson Store are service marks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

© 2004 Epson America, Inc. 5/04

CPD-18248

Printed in XXXXXX XX.XX-XX