


# Start Here

## Epson Stylus® Photo 1400

# 1


### Unpack

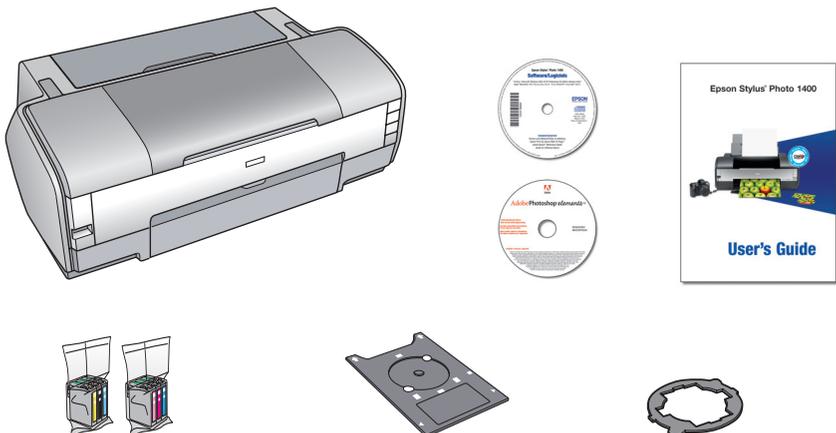

**Caution:** Do not open ink cartridge packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

If anything is missing, contact Epson® as described on the back of this sheet.


Remove all the tape and foam sheets.

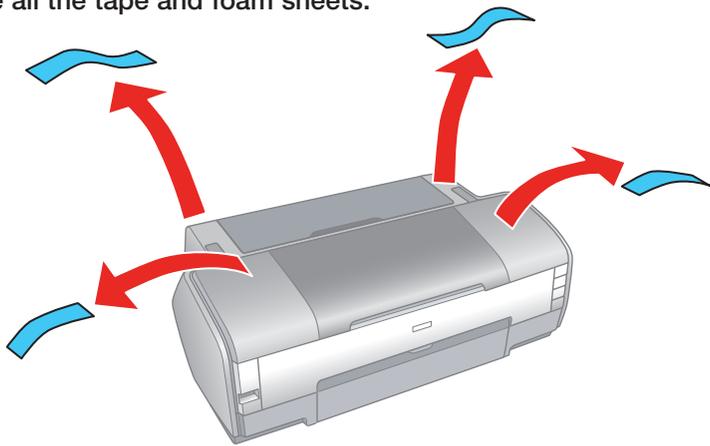


# 2

### Turn On the Printer

**1** Plug in the power cable.

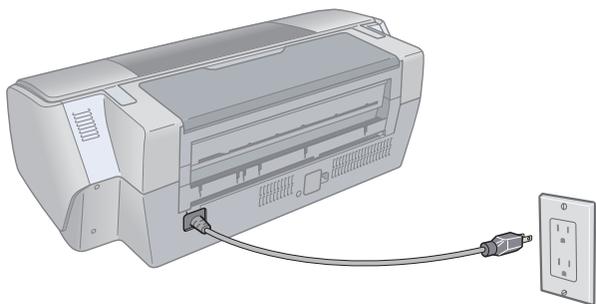

**2** Press the  power button.

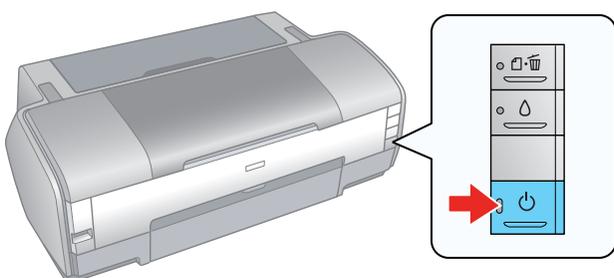

\*410812800\*


**EPSON®**  
EXCEED YOUR VISION

# 3


## Install Ink Cartridges

**Note:** Don't load paper before installing the ink cartridges.


- 1 Lift up the printer cover.
- 2 Open the cartridge cover.

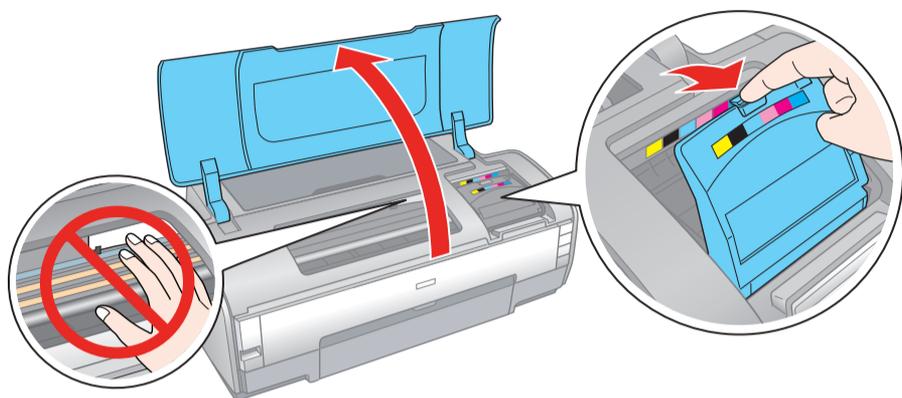


- 3 Unpack the ink cartridges.

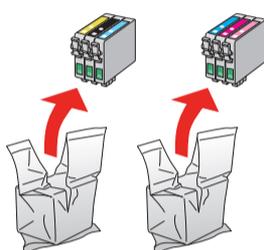


- 4 Remove only the yellow tape from each cartridge.

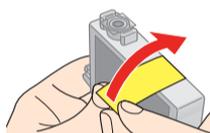


**Caution:** Don't remove any other seals from the cartridges.

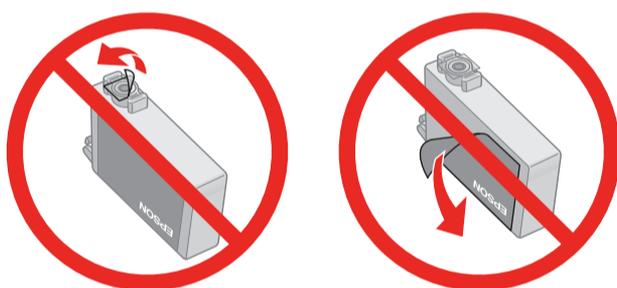


- 5 Insert the cartridges in the holder for each color.

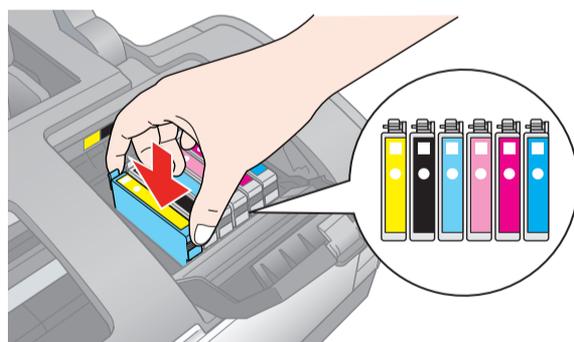


- 6 Press the cartridges down until they click.

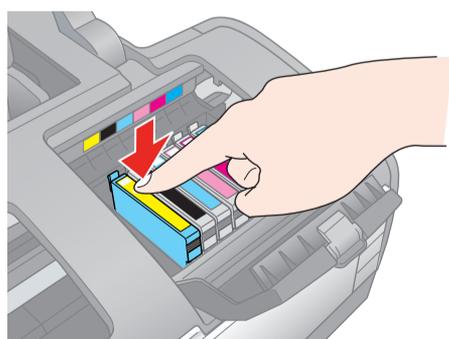


**7** Close the ink cartridge cover and press it down until it clicks.

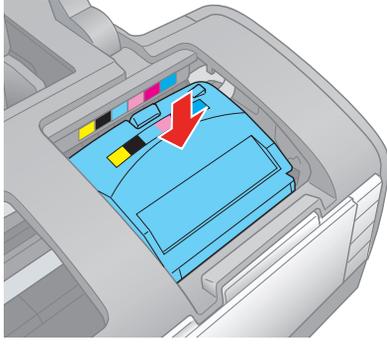

**8** Close the printer cover.

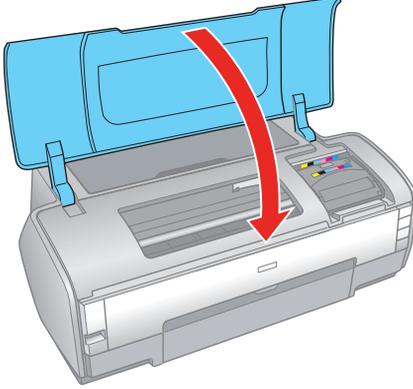

**9** Press the  ink button to charge ink. Charging takes about three minutes.

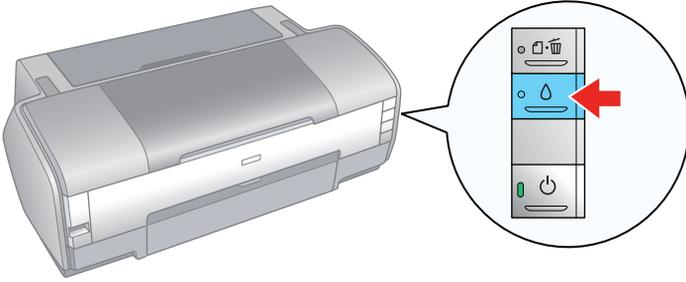


**Caution:** Don't turn off the printer while the  power light is flashing or you'll waste ink.


**Note:** The first time you install ink cartridges, the printer uses some ink to charge the printing system, so print yields may be lower with the first cartridges. Subsequent ink cartridges will last for their full rated life.

## 4 Load Paper


**1** Open the paper support and pull up its extensions.

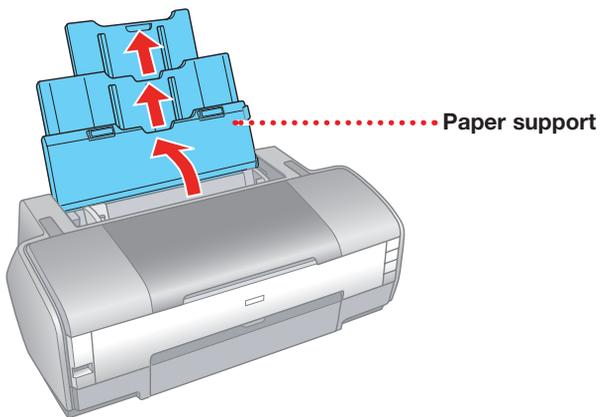



**2** Open the output tray and pull out its extension.

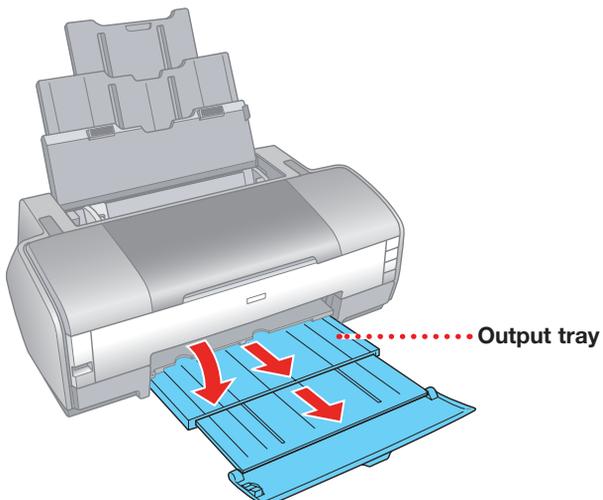


- 3** Press in the release button and slide the edge guide to the left.

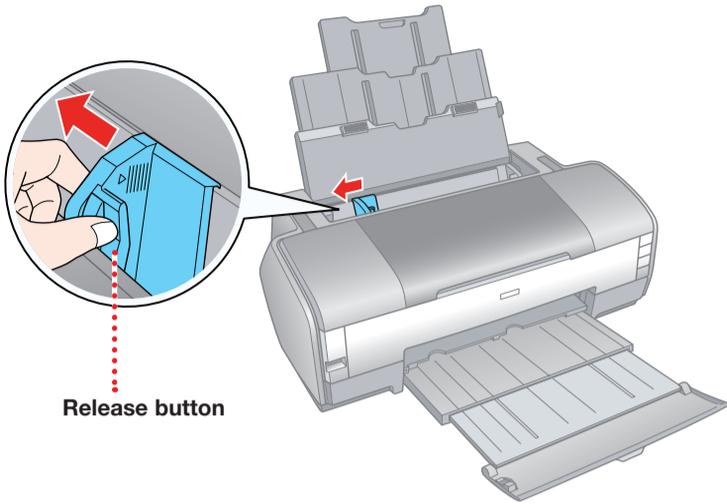



- 4** Load paper against the right edge guide and behind the tab.

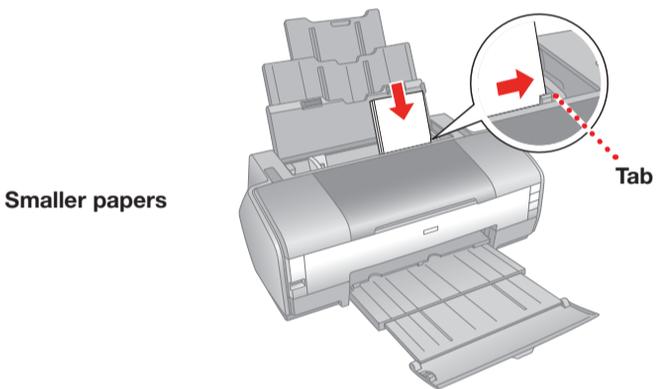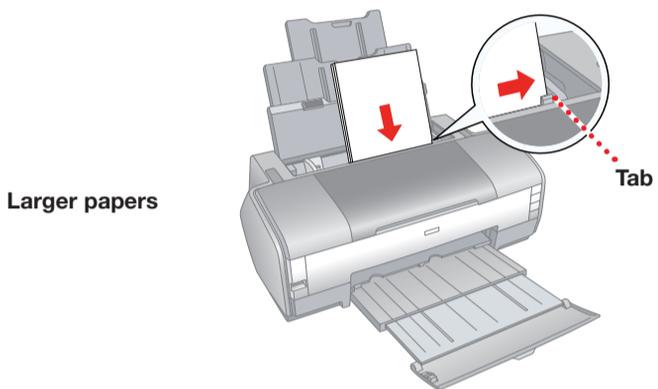

**Note:** Don't load paper sideways; always load it short edge first.

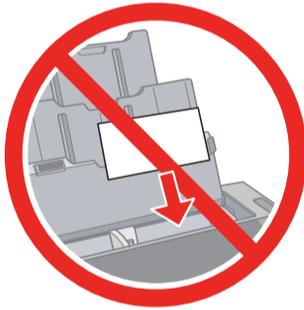

- 5** Press in the release button and slide the left edge guide over.

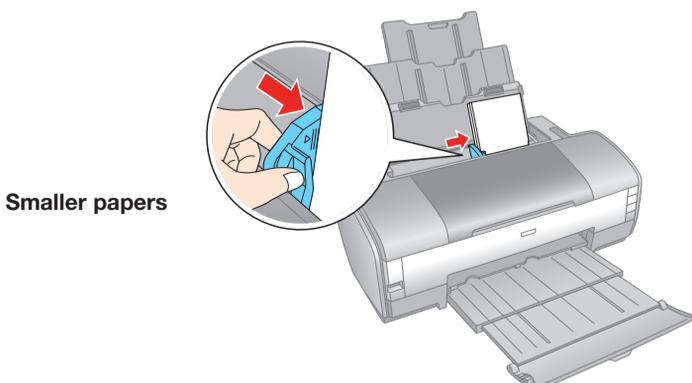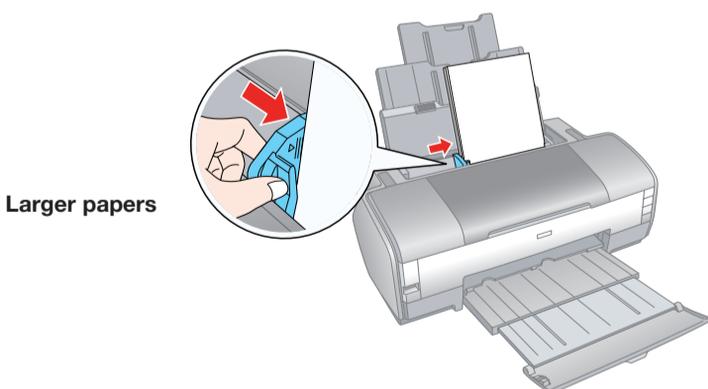


# 5

## Install Software

Your software works with Windows® 2000, XP, XP Professional x64 Edition, and Windows Vista™, and Macintosh® OS X 10.2.8, and 10.3.9 to 10.4.x.

### Windows

- 1 Make sure the printer is **NOT CONNECTED** to your computer.

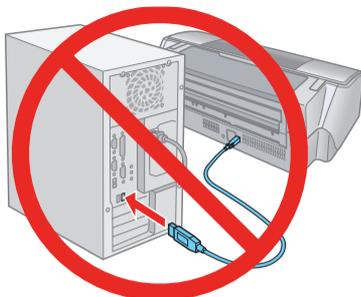


**Note:** If you see a screen like this, click **Cancel** and disconnect the USB cable. You can't install your software that way.



- 2 Insert the printer **Software CD**.

With Windows 2000 or XP, go to step 4.  
With Windows Vista, go to step 3.

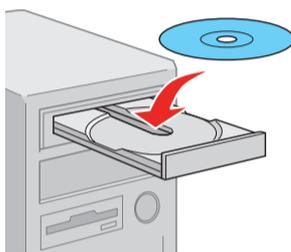

- 3 With Windows Vista, when you see this screen, click **Run Epsetup.exe**.

Then click **Continue** at the User Account Control screen.



- 4 Click **Install** and follow the on-screen instructions. Software installation takes several minutes.




- 5 When you see this screen, click the first option and then click **Next**.

If you will connect your printer to your computer through an external print server, click the second option, click **Next**, and skip to step 8.



- 6 When prompted, connect the USB cable. Use any open USB port on your computer. Make sure the printer is turned on.

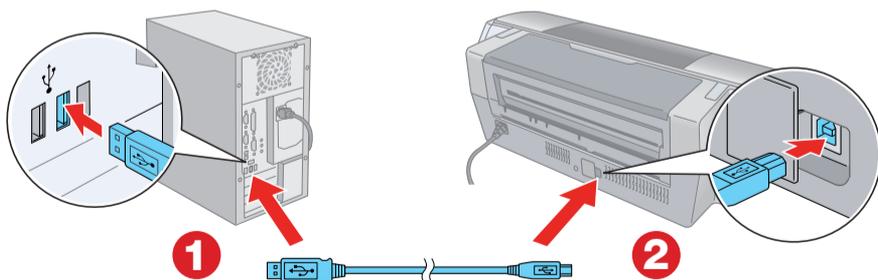


**Note:** If installation doesn't continue after a moment, make sure you securely connected and turned on the printer.

- 7 Follow the on-screen instructions to print a test page and install the rest of the software.
- 8 When you're done, remove the CD.

You're ready to print! See your *User's Guide* or your on-screen *Reference Guide*.

# Macintosh

- 1 Insert the printer Software CD.

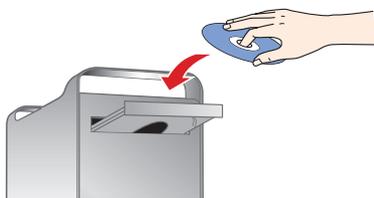


- 2 Open the Epson CD-ROM desktop icon and double-click the  Epson icon.

- 3 Click **Install** and follow the on-screen instructions. Software installation and setup take several minutes.



- 4 When prompted, connect the USB cable. Use any open USB port on your computer. Make sure the printer is turned on.

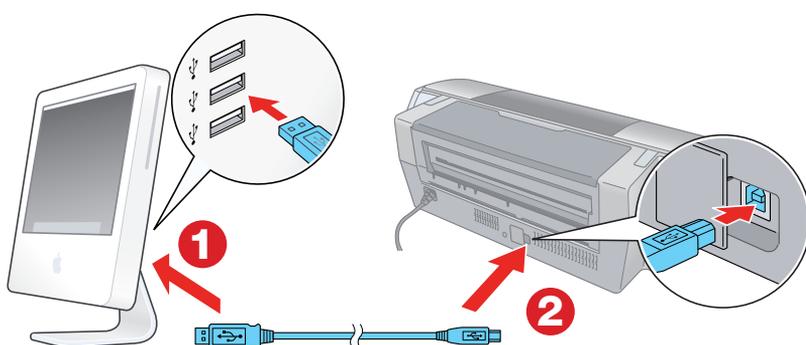

- 5 When you see this screen, click **Open the Printer List**.



- 6 Follow the steps to the right to add the printer.



- 7 Click **Next** again, if necessary.

- 8 Follow the on-screen instructions to install the rest of the software and print a test page.

- 9 When you're done, eject the CD.

You're ready to print! See your *User's Guide* or your on-screen *Reference Guide*.

# Solving Problems

The printer makes noise after ink cartridge installation.

- The first time you install ink cartridges, the printer must charge its print head for three minutes or so. Wait until charging finishes (the green power light stops flashing) before you turn off the printer, or it may charge improperly and use excess ink the next time you turn it on.
- If the printer stops moving or making noise, but the green power light is still flashing after five minutes, turn off the printer. If the light is still flashing when you turn it back on, contact Epson as described in “Any Questions?”.
- Turn off the printer, then make sure the ink cartridges are inserted all the way and the ink cartridge cover is closed completely. Also make sure no packing material remains in the printer. Wait a moment, then turn the printer back on to clear the error.

You’re having problems installing the printer software.

- Carefully follow the installation instructions to the left. Do not connect your printer to the computer until you are instructed to do so, and make sure your printer is turned on and the USB cable is securely connected at both ends. Also make sure your system meets the system requirements listed in the *User’s Guide*.
- Close your other programs, including any screen savers and virus protection software, and install the software again.

## Any Questions?

Look here for answers:

### *User’s Guide*

Basic steps for using the printer.

### *On-screen Reference Guide*

Click the desktop shortcut for easy access to printer information.

### *On-screen help with your software*

Select **Help** or **?** when you’re using your software.

### *Epson Technical Support*

#### *Internet Support*

Visit Epson’s support website at [epson.com/support](http://epson.com/support) and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

#### *Speak to a Support Representative*

Before you call Epson for support, please have the following information ready:

- Product name (Epson Stylus Photo 1400)
- Product serial number (located on the back of the printer)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration
- Description of the problem

Then call:

- U.S.: (562) 276-7282, 6 AM to 8 PM, Pacific Time, Monday through Friday and 7 AM to 4 PM Saturday
- Canada: (905) 709-2567, 6 AM to 6 PM, Pacific Time, Monday through Friday

Toll or long distance charges may apply.

### *Software Technical Support*

Adobe® Photoshop® Elements

(206) 675-6358

Web: [www.adobe.com/support](http://www.adobe.com/support)



# Need Paper and Ink?

For the best prints, use genuine Epson paper and ink. You can purchase them online at [www.epsonstore.com](http://www.epsonstore.com) (U.S. sales) or [www.epson.ca](http://www.epson.ca) (Canadian sales). You can also purchase genuine Epson paper and ink from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766).

## Recommended Papers

Epson papers are specially coated to work with genuine Epson inks for optimal image quality and maximum longevity.



### Ultra Premium Photo Paper Glossy

Instant-drying heavyweight paper for long-lasting, high gloss photos. Suitable for framing or special occasions.



### Premium Photo Paper Glossy

High gloss, instant-drying paper for beautiful, durable photos made to share or display in an album.

## Genuine Epson Inks



Look for the number below to find your cartridges. It's as easy as remembering your number!



79 Black T079120



79 Magenta T079320



79 Cyan T079220



79 Lt. Magenta T079620



79 Lt. Cyan T079520



79 Yellow T079420

Epson and Epson Stylus are registered trademarks, and Exceed Your Vision and Claria are trademarks of Seiko Epson Corporation.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

© 2006 Epson America, Inc. 12/06

CPD-22648

Cut out the card below and keep it with you when purchasing replacement ink cartridges.

## Epson Stylus® Photo 1400 Ink



	79 Black T079120		79 Magenta T079320
	79 Cyan T079220		79 Lt. Magenta T079620
	79 Lt. Cyan T079520		79 Yellow T079420