

CHEST FREEZER HCF150A HCF210A INSTRUCTION MANUAL

CONTENTS

•	SAFETY PRECAUTIONS 1 \sim 3
•	HOW TO USE 4
•	CLEANING 5
•	IN CASE OF THE FOLLOWING 5
•	BEFORE REQUESTING SERVICE 6

Thank you for purchasing this Hisense product. To ensure proper use, we recommend that you read this instruction manual before operating the unit.

IMPORTANT: before you install your appliance PLEASE CHECK FOR ANY DAMAGE OR MARKS. If you find that the appliance is damaged or marked you must report this within 7 days if you wish to claim for the damaged marks under the manufactures warranty.

This does not affect your statutory rights.

SAFETY PRECAUTIONS 1

To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the appliance.

The purpose of the safety precautions in this manual is to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the A WARNING heading. However, the cases listed under the A CAUTION heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.



MARNING Improper handling of the unit could lead to death or serious injury.


Text set off by the exclamation mark • contains information that should be strictly adhered to. After reading the instruction manual, store it an easily accessible place where the user(s) of this appliance can easily find it.

PRECAUTIONS FOR USE

҈LWARNING




All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.

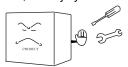




Never splash water directly onto the product or wash with water as shortcircuit and electrical leakage could result.

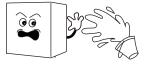



Never put flammable or volatile substances into the unit as explosion and fire could result.

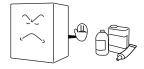



Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire.






Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.





Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.

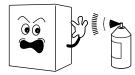

SAFETY PRECAUTIONS 2


△WARNING



Do not store bottles and cans in the unit. The contents could freeze and the containers break causing injury.



The unit is intended for storage of frozen foods. Storage of items other than the intended could have an adverse affect on the items stored in the unit.

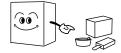

Frozen foods



For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.






Never place heavy objects or items containing water on top of the unit. Containers filled with Water could fall and cause injury. Furthermore, the spilled water could deteriorate the insulation of electrical components and result in electrical leakage.





Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and cause personal injury.

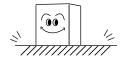



If you find a gas leakage, please don't touch the chest freezer, and close gas and open the door for ventilation. A gas leakage could cause an explosion, fire, and injury.





When you dispose of refrigerators and freezers remove any doors. Children can suffocate if they get trapped inside. This refrigerator contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance. Please contact your local council and seek an environmentally friendly solution.



Keep away from hot air sources Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.





Leave disassembly and disposal of the unit to qualified experts.





When not in use please store the unit in a location away from children. Please take necessary precautions to keep the door opened to avoid accidental entrapment inside the compartment.

SAFETY PRECAUTIONS 3

⚠ CAUTION


Sufficient ventilation is required to ensure your freezer operates at optimum high efficiency and with lowest possible power consumption, Therefore you are required to place your appliance in a position with adequate clearance. We recommend you place your appliance at 100mm away from the wall to the back of your appliance, 200mm from the side clearance and 300mm from the top of your appliance. A clearance space of 160 degrees is required for the appliance door.



If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.




Never hang from the door or climb onto the unit.

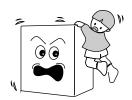




Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

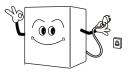




Never touch the power cord plug, other electrical components, or operate the switch with wet hands. Electrical shock could result.

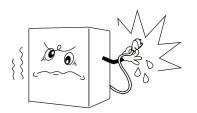



Never use if the power cord or plug is damaged or the plug cannot be firmly seated in the receptacle sockets as electrical shock, short-circuit and fire could result.

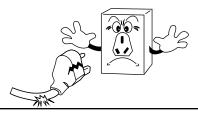




When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, causing overheating and fire.







Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

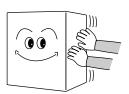

HOW TO USE

BEFORE USE

Remove shipping packaging, tape, etc. and leave the lid open for ventilation for a while. The unit is cleaned before shipment. However, clean the compartment interior once after delivery. Following installation, refrigeration will start about 10 minutes after operation is started. Operate for about 2 hours to cool the freezer compartment before placing items in the freezer.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.


DEFROSTING

When 5mm of frost forms in the freezer, for maximum efficiency defrosting is required, you could shave off the excess or defrost completely. If you defrost completely, please do as follows:

- 1.) Empty the contents & disconnect the power cord;
- 2.) Shaving the frost whilst thawing will shorten the defrost time;
- 3.) Then drain, wipe & clean the inside with a soft cloth.



Do not use a hammer, knife or bottle to chisel any part of the freezer. Use a plastic scraper to prevent damaging the inside WARNING lining and evaporater.

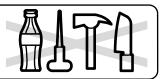

CLEANING



To prevent any electical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

1 EXTERIOR AND COOLER COMPARTMENT

Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then dry off with a clean moist cloth.



WARNING: Do not splash water directly onto the freezer and do not wash with water. Short-circuit and electrical shock could result.

For maximum efficiency keep the freezer clean at all times. To prevent damage to plastic parts and lacquer coating do not clean your appliance with hot water diluent, petrol, alcohol, kerosene, washing powder, cleanser, aikailinous detergent, acid, chemical cloth, etc.



IN CASE OF THE FOLLOWING

1 POWER FAILURE

Sudden power failure

Keep opening and closing of the door to a minimum to prevent cold air from escaping from the freezer compartment. Covering exterior glass surfaces with a blanket, etc. will further help to maintain a low temperature.

Announced power suspension

In case of a long power suspension, place dry ice in the freezer compartment.

Keep opening and closing of the door to a minimum.

Avoid placing new items in the freezer as this will raise the temperature inside the compartment.

2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the compartment and disconnect the power cord plug from the wall outlet.

Clean the compartment interior and wipe away all water. To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

3 WHEN NOT USED TEMPORARILY

Clean the compartment interior and wipe away all water.

Place an object in between the door and outer casing to prevent the door from closing.

Keep children away from playing with the unit - entrapment could result.

TROUBLESHOOTINGS

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet.

Transfer the items stored in the freezer to another freezer. Then contact the service provider listed in the warranty card, and be ready to provide information as listed in "REQUIRED INFORMATION" below.



To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

No refrigeration at all	Is the power supply interrupted? Is the power cord plug disconnected from the wall outlet? Are the power fuses blown and/or the circuit breaker activated? The temperature control dial in the direction of MAX.If too cold,turn dial in direction of OFF?				
Inadequate refrigeration	Is the place of installation badly ventilated? Is the freezer exposed to direct sunlight, placed near a heater or stove? Are the lids opened and closed frequently? Are items stocked beyond the load line? The temperature control dial in the direction of MAX.If too cold,turn dial in direction of MIN? Much frost forms in the chest freezer?				
Excessive noise	Is the floor underneath the freezer sturdy enough? Is the unit shaking and rattling? Is the rear panel of the unit contacting a wall, etc.? A container or something is behind the chest freezer? The compressor will generate a rather loud sound for a while after operation is started. The noise will cease together with refrigeration.				
Condensation on cooler exterior	Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.				
The circumference of chest freezer feels hot	Especially in warmer conditions or startup, the circumference of chest freezer feels hot. This is because the chest freezer incorporates a pipe for radiating and preventing condensation. The heat does not affect the contents in the freezer.				

This appliance will sometimes stop running when the thermostat turns off.

REQUIRED INFORMATION

1 Nature of malfunction (as accurately as possible)
 2 Product number
 3 Serial number
 4 Customer's name, address, phone number
 5 Year and date of purchase