

JVC



暫定版2005 . 6.29

DVD & HDD VIDEO RECORDER

DR-MH300SE/BE



HDD

COMPACT
disc
SUPER VIDEO

DVD
VIDEO
RAM/RW

DOLBY
DIGITAL

RW 2

HDMI

dts
DIGITAL OUT



SHOWVIEW[®]

GUIDE plus+
GEMSTAR

INSTRUCTIONS

LPT1048-001A

EN

Safety Precautions

The rating plate and the safety caution are on the rear of the unit.

WARNING: DANGEROUS VOLTAGE INSIDE

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD,
DO NOT EXPOSE THIS UNIT TO RAIN OR
MOISTURE.**

CAUTION:

A UNIT IS A CLASS 1 LASER PRODUCT. HOWEVER THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE UNIT CORRECTLY AS INSTRUCTED.

WHEN THIS UNIT IS PLUGGED INTO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

IMPORTANT:

- Please read the various precautions on page 2 and 3 before installing or operating the unit.
- It should be noted that it may be unlawful to re-record pre-recorded tapes, DVDs, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic work embodied therein.

CAUTION:

- When you are not using the unit for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.
- Dangerous voltage inside. Refer internal servicing to qualified service personnel. To prevent electric shock or fire hazard, remove the power cord from the mains outlet prior to connecting or disconnecting any signal lead or aerial.

CLASS 1 LASER PRODUCT

REPRODUCTION OF LABELS

WARNING LABEL INSIDE OF THE UNIT

CAUTION

VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

ADVARSEL

SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING SE IKKE IND I STRÅLEN - HELLER IKKE MED OPTISKE INSTRUMENTER.

ADVARSEL

SYNLIG OG USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. UNDGÅ EKSPONERING FOR STRÅLEN STIRR IKKE INN I STRÅLEN ELLER SE DIREKTE MED OPTISKE INSTRUMENTER.

VARO!

AVATTAESSA OLET ALTTIINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ TUJOTA SÄTEESEEN ÄLÄKÄ KATSO SITÄ OPTISEN LAITTEEN LÄPI.

WARNING

SYNLIG OCH OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD. STRÅLEN ÄR FARLIG STIRRA EJ IN I STRÅLEN OCH BETRAKTA EJ STRÅLEN MED OPTISKA INSTRUMENT.



SHOWVIEW®

- Manufactured under licence from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories.
- "DTS" and "DTS DIGITAL OUT" are trademarks of Digital Theater Systems, Inc.
- GUIDE Plus+, SHOWVIEW, G-LINK are (1) registered trademarks or trademarks of, (2) manufactured under license from and (3) subject of various international patents and patent applications owned by, or licensed to, Gemstar-TV Guide International, Inc. and/or its related affiliates.

GEMSTAR-TV GUIDE INTERNATIONAL, INC. AND/OR ITS RELATED AFFILIATES ARE NOT IN ANY WAY LIABLE FOR THE ACCURACY OF THE PROGRAM SCHEDULE INFORMATION PROVIDED BY THE GUIDE PLUS+ SYSTEM. IN NO EVENT SHALL GEMSTAR-TV GUIDE INTERNATIONAL, INC. AND/OR ITS RELATED AFFILIATES BE LIABLE FOR ANY AMOUNTS REPRESENTING LOSS OF PROFITS, LOSS OF BUSINESS, OR INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE PROVISION OR USE OF ANY INFORMATION, EQUIPMENT, OR SERVICES RELATING TO THE GUIDE PLUS+ SYSTEM.


- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing users only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

GUIDE Plus+[®] Setup

Before you can start using your GUIDE Plus+ system you must first connect your television equipment properly and then complete an on-screen setup process so that the GUIDE Plus+ system knows what equipment you have and which "Host Channel" to use for your household.

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Slide the **TV/DVD** switch to **DVD**.

1 Press the **GUIDE**.

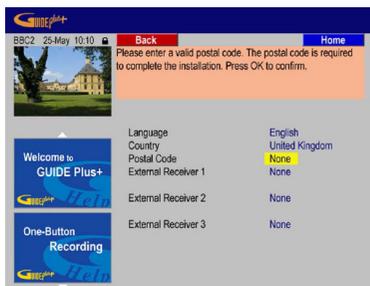

- The GUIDE Plus+ setup menu appears
- Language and Country setting are already input from the JVC's initial setup.

- Press **selection keys** to select "Postal Code" and press **number keys** or **selection keys** to enter your postal code.
 - The postal code you enter must be correct, and must represent a postal code in the identified country. If it is not correct or does not match the country, you will receive no or incorrect TV listings data.
 - If you do not use an external receiver, leave the fields as-is, with "None" indicated.

3 Press **GUIDE** to complete the setting

External Receiver Users

If you use an external receiver you will have to set it up for the GUIDE Plus+ system as following.

- Press **selection keys** to select "External Receiver 1", "2", or "3", then press **ENTER**.
- Press **selection keys** to select reception ("terrestrial", "cable" or "satellite")
- Press **selection keys** to select provider if applicable
- Press **selection keys** to select the brand of your external receiver
- Identify which socket your external receiver is plugged into ("L-1" or "L-2")
 - The unit will now try to communicate with your external receiver via the G-LINK cable. The on-screen prompt will ask you if the receiver has changed to a specified channel.
- If the external receiver changed channel correctly, Press **selection keys** to select "YES" and press **ENTER**.
- Press **GUIDE** to complete the setting.

IMPORTANT:

If external receiver did not change channels, or if receiver brand is not indicated in the on-screen list, refer to ALTERNATE SETUP.

Identify the GUIDE Plus+ Host Channel

The TV listings data available in the GUIDE Plus+ system is distributed throughout Europe by selected broadcasters called "Host Channel". It is important that your unit "identifies" the host channel for your region and setup correctly.

List of Host Channels

Country/Region (Language)	Host Channels	Helpful Hints
Austria	Eurosport	
Belgium (Flemish)	Music Factory (TMF)	
France	Canal +	Analog only
Germany	Eurosport	
Italy	Sport Italia	Analog only
Netherlands	Music Factory (TMF), Eurosport	Use TMF if you live in Amsterdam, Eindhoven or Rotterdam
Spain	Tele 5	Analog only
Switzerland (German)	Eurosport	
United Kingdom	ITV, Eurosport	ITV is analog only. Use Eurosport if you are a SKY subscriber and you no longer have a terrestrial antenna available.

In Order to Receive Data

- Leave the unit in "STANDBY" overnight.

External Receiver Users

- Leave your external receiver "ON" overnight.
- Leave the unit in "STANDBY" overnight.

ALTERNATE SETUP

If your external receiver is not in the list or your external receiver could not be controlled properly by the unit, please follow these steps.

- For External Receiver brand, select "None".
 - Press **GUIDE** to exit the set up menu.
 - Tune your external receiver to your "Host Channel"(See list of Host Channels) and Leave it "ON" overnight.
 - The unit must be on "STANDBY" overnight.
- The next day**, go back into the GUIDE Plus+ setup menu.
- The new external receiver codes might have been added.
- Select the brand of your external receiver.

About GUIDE Plus+®

All Features and Areas are displayed in a convenient, colour-coded layout that lets you easily access all the great possibilities of the GUIDE Plus+ system.

Function of Remote Control Keys

Guide		You can access GUIDE Plus+ on your TV screen.
Selection keys		To navigate around the GUIDE Plus+ menu.
ENTER		To confirm a selection or to leave GUIDE Plus+ and tune directly to a currently running show.
Action		Red, Green, Yellow, Blue button. Several features such as On-Button-Record and Home.
Info		To access the extended information box for a long synopsis.
Previous/Next Day		To go directly to the next day or back day to the present day.
PAGE -/+		To move one page up and down.
Number keys		For direct entries of numbers.

Common Elements

Grid:
Disply of TV listings information by channel and time, seven days in advance.

Video Window:
You can continue to watch the current programme while consulting GUIDE Plus+.

Menu Bar:
Access to the different Areas of GUIDE Plus+.

Action Bar:
The four coloured Action buttons change functionality depending on the Area.

Highlight:
The current position of the "cursor" is visualized by change in colour.

Information Box:
Short programme descriptions or help menus.

Information Panels:
Programme promotions or instructions.



Areas

The GUIDE Plus+ system in the unit consists of seven Areas. All Areas can be accessed via the Menu Bar.

Grid:

The GUIDE Plus+ "Home" Area displaying the TV listings information by channel and time for seven days in advance.

- Set a programme to record and reminder(Watcdh).
- Lock and unlock the Video Window.
- Access Information Panels.

Search:

You can search the T listings data by categories (e.g. Sports) and subcategories (e.g. Football) or personal keywords.

- Search by categories or keywords.
- **Colour assign:** Movies(Purple), Sports(Green), Children(Blue), Others/My Choice(Teal)
- Set a programme to record and reminder(Watcdh).
- Access Information Panels.

My TV:

You can set a Profile and receive recommendations according to your preferences.

- Set up a profile by channel, category and/or keyword.
- Set a programme to record and reminder(Watcdh).
- Access Information Panels.

Schedule:

Displays all scheduled recordings and reminder.

- Edit/Delete One button Record and Reminder(Watch).
- Set/Edit/Delete SHOWVIEW® Recording.
- Set/Edit/Delete Manual Recording.

Info:

Area for additional information such as weather. (not available in all regions)

Editor:

Channel settings.

Setup:

Basic settings of GUIDE Plus+.

Editor

The Editor Area is the central location for you to manage your channels. Every change in the Editor Area leads to a change in the Grid.

1 Press **selection keys** to select "Editor".

- The Editor menu have two tiles of left and right.



2 Press **selection keys** to select the left tile of the channel that you would like to edit.

3 Press the **RED Action** for ON or OFF of the channel.

4 Press **selection keys** to select the right tile of the channel that you would like to edit.

5 Press the **RED Action** to change the source.

6 Press the **GREEN Action** and press **number keys** to enter the programme number.

7 Press **ENTER** to confirm the settings.

GUIDE Plus+[®] Timer Programming

The GUIDE Plus+ system has several functions.


One-Button-Record : This feature is available anytime you can highlight a programme tile. At the right time, the unit will tune to the correct channel and record the selected programme.

Search : This feature allows you to locate programme listings by category, subcategory or via keyword, and enables you to quickly and easily find something of interest to watch, record or to set reminder.

Schedule : The Schedule Area is the central location for you to examine, set, delete and edit scheduled events of On-Button-Recordings(or Reminder), ShowVIEW Recordings and Manual Recordings.

My TV : This feature allows you to view the logos of all the channels available in the GUIDE Plus+ system in your home.

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Slide the TV/DVD switch to DVD.

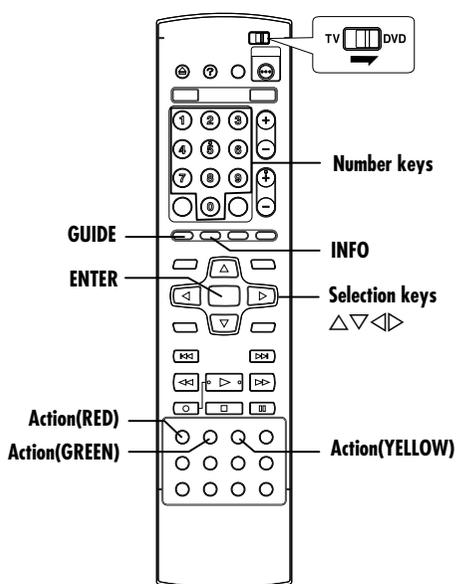

One-Button-Record

- 1 Press the **GUIDE**.
 - The Grid Area of GUIDE Plus+ appears.
- 2 Press **selection keys** to select a programme tile.



- 3 Press **Action(RED)** to set for recording.
 - At right time, the unit will tune to the correct channel and record the selected programme.
 - A recording set with the One-Button-Record feature is set with the following default parameters.
Date, Name of the programme, Channel, Start time, Duration, Quality: SP, Frequency: ONCE, Extra time at end: none, Destination: HDD
 - The shows you have designated for recording can be reviewed and edited in the "Schedule Area".

One-Button-Reminder

- 1 Press **Action(GREEN)** to set a reminder to watch a programme.
 - Shows to be watched are displayed in a different colour than shows set for recording.

NOTES:

- If there is additional information about a programme, the "i"(information) symbol will be displayed in box, This alerts you to press **INFO** to bring up the expanded information box.
- When you press **Action(YELLOW)**, "Channel (Mosaic) Screen" appears. You can easily access a channel information.



Lock/Unlock Video Window

When you enter the GUIDE Plus+ system the channel you were watching remains visible in the video window. The date stamp above the window lets you know what channel, day and time it is.

- 1 Press **selection keys** to select the channel logo of the channel that you would like to unlock.
 - The red action button at the top of the screen will now display the word "UNLOCK".
- 2 Press **Action(RED)** to unlock.

Search by Category or via Keywords

- 1 Press the **GUIDE**.
 - The Grid Area of GUIDE Plus+ appears.
- 2 Press **selection keys** to select the "Search".



- 3 Press **selection keys** to select the tile of the subcategory that you are interested in.
- 4 Press **ENTER** to start the search.
 - All programme in this sub-category are displayed by date and time.
- 5 Press **Action(RED)** to set for recording.

Search by keywords

- 1 Press **selection keys** to select the "My Choice".
- 2 Press **Action(YELLOW)** to display the virtual keyboard.



- 3 Press **Action(YELLOW)** to display the virtual keyboard.
- 4 Press **selection keys** to select a character and press **ENTER** to confirm.
- 5 Press **Action(GREEN)** to confirm the keyword..
 - Your personal keyword appears in the menu.
- 6 Press **ENTER** to start the search.

SHOWVIEW® Recording

- 1 Press the **GUIDE**.
 - The Grid Area of GUIDE Plus+ appears.
- 2 Press **selection keys** to select the "Schedule".



- 3 Press **Action(RED)** to select the "SHOWVIEW".
- 4 Press **number keys** to enter the programme number.
- 5 Press **ENTER** to confirm.

Manual Timer Programme

- 1 Press the **GUIDE**.
 - The Grid Area of GUIDE Plus+ appears.
- 2 Press **selection keys** to select the "Schedule".
- 3 Press **Action(GREEN)** to select the "Manual".
- 4 Press **number keys** and **selection keys** to enter the recording date. Press **Action(GREEN)** to go "Next".
- 5 Press **number keys** and **selection keys** to enter the recording start time. Press **Action(GREEN)** to go "Next".
- 6 Press **number keys** and **selection keys** to enter the recording end time. Press **Action(GREEN)** to go "Next".
- 7 Press **number keys** or the Mosaic (press **Action(YELLOW)**) to enter the recording channel. Press **Action(GREEN)** to go "Next".
- 8 Use virtual keyboard to enter an event name.. Press **Action(GREEN)** to go "Next".

Edit Timer Programme

- 1 Press the **GUIDE**.
 - The Grid Area of GUIDE Plus+ appears.
- 2 Press **selection keys** to select the "Schedule".



- 3 Press **selection keys** to select the left recording tile.
- 4 Press **Action(GREEN)** to edit the scheduled event.
- 5 Press **number keys** and **selection keys** to enter the recording date. Press **Action(GREEN)** to go "Next".
- 6 Press **number keys** and **selection keys** to enter the recording start time. Press **Action(GREEN)** to go "Next".
- 7 Press **number keys** and **selection keys** to enter the recording end time. Press **Action(GREEN)** to go "Next".
- 8 Press **number keys** or the Mosaic (press **Action(YELLOW)**) to enter the recording channel. Press **Action(GREEN)** to go "Next".
- 9 Use virtual keyboard to enter an event name.. Press **Action(GREEN)** to go "Next".
- 10 Press **selection keys** to select the right recording tile.
- 11 Press **Action(RED)** to change the recording destination.
 - Destination: HDD, DVD
- 12 Press **Action(GREEN)** to change the recording frequency.
 - Frequency: ONCE, WEEKLY, WEEKLY(Keep 1), MON-FRI, MON-SAT, MON-SUN, MON-FRI(Keep 5), MON-SAT(Keep 6), MON-SUN(Keep 7), MON-FRI(Keep 1), MON-SAT(Keep 1), MON-SUN(Keep 1)
- 13 Press **Action(YELLOW)** to change the recording Quality.
 - Quality: DV, XP, SP, LP, EP, FR
- 14 Press **selection keys** to select the extended right recording tile.
- 15 Press **Action(RED)** to add extra time at the end or to choose VPS/PDC.
 - Timing: +0, +10, +20, +30, VPS/PDC(V-P)

Delete Timer Programme

- 1 Press the **GUIDE**.
- 2 Press **selection keys** to select the "Schedule".
- 3 Press **selection keys** to select the left recording tile.
- 4 Press **Action(RED)** to delete the scheduled event.

My TV Area

The My TV Area allows you to set up a personal profile. You can define a profile by channels, categories and/or by keywords. As soon as a personal profile has been set, the GUIDE Plus+ system is scanning automatically and continuously the TV listings data for the next seven days. Every time you are accessing the My TV Area, a list of programmes is displayed according to your easily find something of interest to watch, record or to set a reminder.

- 1 Press the **GUIDE**.
- 2 Press **selection keys** to select the "My TV".
- 3 Press **Action(YELLOW)** to set a Profile



- The highlight is on the word "Channels".
- 4 Press **Action(YELLOW)** to add a channel
 - The Mosaic screen appears
 - 5 Press **selection keys** to select a channel and press **ENTER**.
 - Repeat this step to add more channels (up to 16).
 - 6 Press **selection keys** to select the "Categories".
 - 7 If you would like to add a category, press **Action(YELLOW)**.
 - The "Search Area" appears
 - 8 Press **selection keys** to select a category and press **ENTER**.
 - Repeat this step to add more categories (up to 4).
 - 9 Press **selection keys** to select the "Keywords".
 - 10 If you would like to add a keyword, press **Action(YELLOW)**.
 - The "Virtual keyboard" appears
 - 11 Enter a keyword and press **Action(GREEN)** to confirm.
 - Repeat this step to add more keywords (up to 16).
 - 12 Press **ENTER** to activate your Profile.


NOTE:

- You can delete or edit a Profile with the **Action(RED)** and **Action(GREEN)**

SHOWVIEW Timer Programming

You can programme this unit to timer record as many as 16 programmes. With the SHOWVIEW system, timer programming is greatly simplified because each TV programme has a corresponding code number which your unit is able to recognise. You can use the remote control to enter the SHOWVIEW number.

- Make sure that the unit's built-in clock is set properly.
- Turn on the unit.
- Turn on the TV and select the AV mode.
- Slide the TV/CABLE/SAT/DVD switch to DVD.

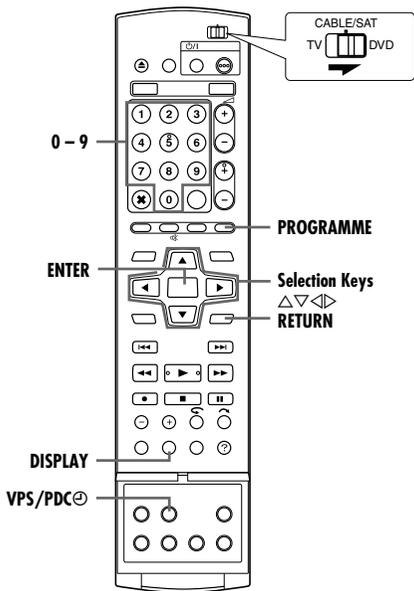

- 1 Load a recordable disc if recording to DVD.
- 2 Press **PROGRAMME** to access the programme top screen.
- 3 Press **selection keys** to select "SHOWVIEW", then press **ENTER**.
 - When "PROGRAMME FULL DELETE UNWANTED TIMER PROGRAMMES" appears on the TV screen, you need to cancel some of the reserved programmes. (pg. 48)
- 4 Press the **number keys** to enter the SHOWVIEW number of a programme you wish to record.
 - OR
 - Press **selection keys** to select the desired number key on the screen, then press **ENTER**. Repeat to enter all required numbers.
 - If you have made a mistake, press **selection keys** to select "DELETE" or "DELETE ALL", then press **ENTER** and input the correct number before you press **ENTER** again.
- 5 Press **selection keys** to select "RECORD TO", then press **ENTER**. Press **selection keys** to select the desired recording deck, then press **ENTER**.
- 6 Press **selection keys** to select "CONFIRM", then press **ENTER**.
 - If the number you entered is invalid, "SHOWVIEW NO. ERROR CONFIRM SHOWVIEW NO. THEN RETRY" appears on the TV screen. Input a valid SHOWVIEW number.
 - If "GUIDE PROGRAMME IS NOT SET SET GUIDE PROGRAMME THEN RETRY" appears on the TV screen, set Guide Programme Numbers manually. (pg. 73)



- 7 The SHOWVIEW number you entered and the matching timer recording information are displayed on the TV screen. Check the programme data.
 - To cancel this setting, press **RETURN**.

IMPORTANT:
Make sure the channel position number you wish to record is displayed; if not, see "SHOWVIEW System Setup" (pg. 73) and set the Guide Programme number correctly.

- 8 Press **selection keys** to select the desired recording option as required. Press **selection keys** to select the desired setting, then press **ENTER**.
 - "INPUT TITLE" (pg. 52, "Modify Title Name")
 - "CATEGORY" (pg. 52, "Modify Category")
 - "VPS/PDC" (pg. 46, "VPS/PDC Recording")
 - "WEEKLY/DAILY" (pg. 46, "Weekly/Daily Recording")
 - "REC MODE" (pg. 35, "Recording Mode")
- 9 Press **selection keys** to select "OK", then press **ENTER** to access the Programme Confirmation screen.
- 10 Press **selection keys** to select "EXIT", then press **ENTER** to complete timer programming.
 - To programme another timer, press **selection keys** to select "CONTINUE", then press **ENTER**.
 - If "PROGRAMME OVERLAPPED" appears on the TV screen, delete or modify the programmes.

- NOTES:**
- There may be cases that the SHOWVIEW Timer Programming function prolongs the stop time of the programming.
 - When two successive programmes are recorded on a DVD-RW disc with the SHOWVIEW Timer Programming function, the beginning of the second one may be left off the recording.
 - If the copy limited programme is received during timer recording, the unit enters Record Pause mode. Recording starts again if it is switched to a recordable broadcast during the time you programmed.

IMPORTANT:
If you have moved to a different area or if a broadcasting station's channel number has been changed, the wrong channel number will be displayed on the SHOWVIEW programme screen in step 7. When this happens, set the correct Guide Programme number for that station. (pg. 73, "SHOWVIEW System Setup")

Satellite Receiver Users
To timer record a satellite broadcast using the SHOWVIEW system:

- 1 Perform "Satellite Receiver Control Setting" (pg. 22).
- 2 Perform "SHOWVIEW Timer Programming" (pg. 45).
- 3 Leave the satellite receiver's power on.


SHOWVIEW System Setup

IMPORTANT:

Normally, Auto Set Up (pg. 17), Preset Download (pg. 18) or Auto Channel Set (pg. 74) sets the Guide Programme numbers automatically. You need to set the Guide Programme numbers manually only in the following cases.


- When timer programming with the SHOWVIEW system, the channel position, where the station you wish to record is received on your unit, is not selected,
 - OR**
 - when you add a channel after Auto Set Up, Preset Download or Auto Channel Set has taken place,
 - Set the Guide Programme number for that station manually.
- When you wish to timer record a satellite programme with the SHOWVIEW system,
 - Set the Guide Programme numbers for all satellite broadcasts received on your satellite receiver.

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Slide the TV/CABLE/SAT/DVD switch to DVD.

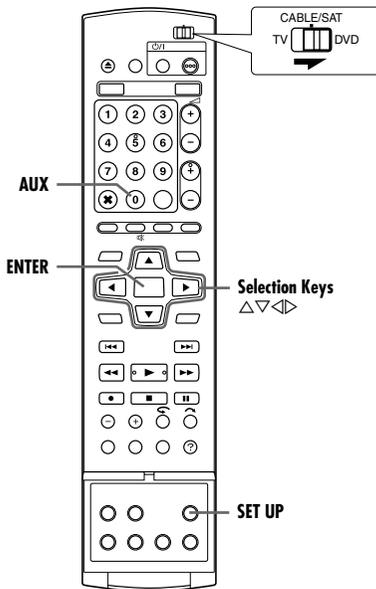


Guide Programme Number Set

- 1 Press **SET UP** to access the Main Menu screen.
- 2 Press **selection keys** to select "INITIAL SET UP", then press ∇ .
- 3 Press **selection keys** to select "TUNER SET", then press ∇ .
- 4 Press **selection keys** to select "GUIDE PROG SET", then press **ENTER**.

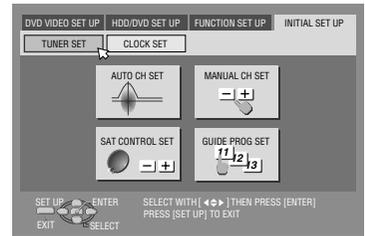

- 5 Press **selection keys** to select "GUIDE PROG", then press **ENTER**.
- 6 Press **selection keys** to select the Guide Programme number for the desired station as shown in the TV listings. Then press **ENTER**.

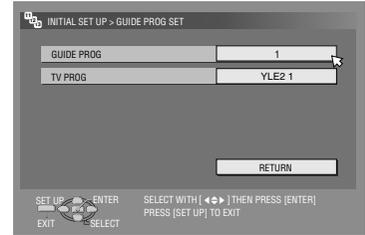

- 7 Press **selection keys** to select "TV PROG", then press **ENTER**. Press **selection keys** to select the number of the unit's channel position on which the Guide Programme number's broadcast is received by the unit or the satellite receiver. Then press **ENTER**.
 - Pressing **AUX** changes "TV PROG" to "SAT".
 - To timer record a satellite programme with the SHOWVIEW system, you need to install the provided Satellite Controller and perform the procedure described in "Satellite Receiver Control Setting" (pg. 22).
 - Repeat steps 5 – 7 as necessary.
- 8 Press **SET UP** to complete the setting.

Guide Programme Number

"Guide Programme (GUIDE PROG) number" refers to the assigned TV station numbers, according to broadcast area, for the SHOWVIEW timer recording. The Guide Programme Numbers can be found in most TV listings.

JVC