


JVC

DR-MV77SU/78BU
DVD VIDEO RECORDER
Basic Operation

QUICK START GUIDE


Need Help? Please call the JVC Customer Service
TOLL FREE CUSTOMER CARE HOTLINE: 1(800)252-5722
<http://www.jvc.com>

Included Accessories

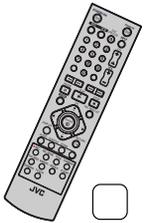

Remote control

 "AAA" battery x 2
(For remote control)



Video cable




Audio cable



Basic Connection : AV (RCA) Cable

INSTRUCTIONS
→pg. 13

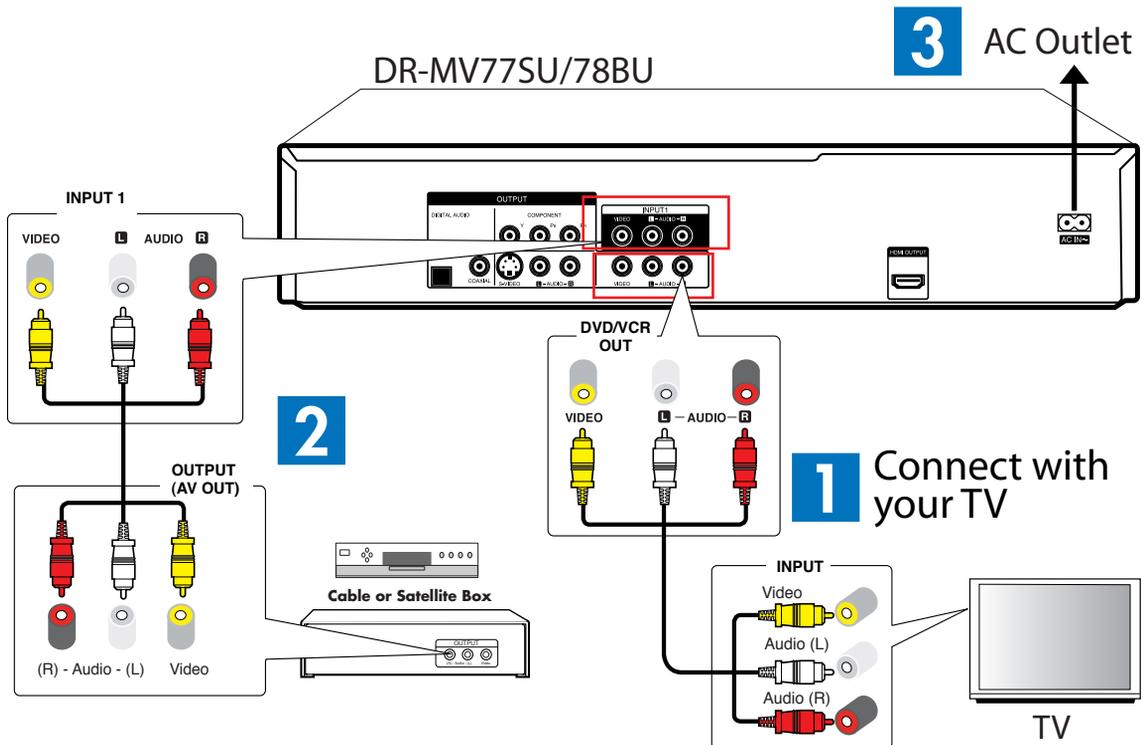


4 After connections, Power On.

5 Select Input "AV1" of your recorder.

Initial Setup Wizard

INSTRUCTIONS

→ pg. 17

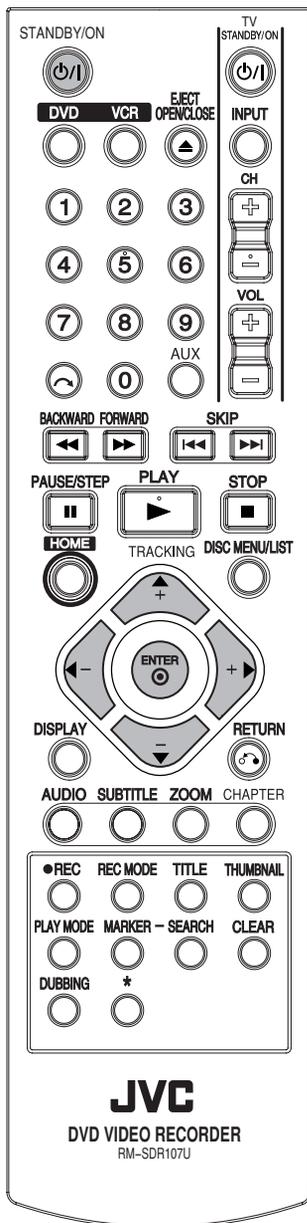

Press "STANDBY/ON"

 
1

STANDBY/ON



Select Language

2





Press "ENTER"

3




Set the "Date, Year and Time"

 4

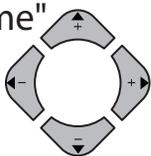

 Moves the cursor to the previous or next column.




Changes the setting at the current cursor position.

Press "ENTER"

Finish

5

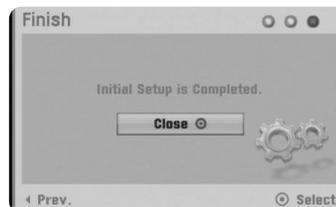

BASIC PLAYBACK

INSTRUCTIONS

→ pg. 23

DVD

Select "DVD"

1




Start Playback

2



Stop Playback

3

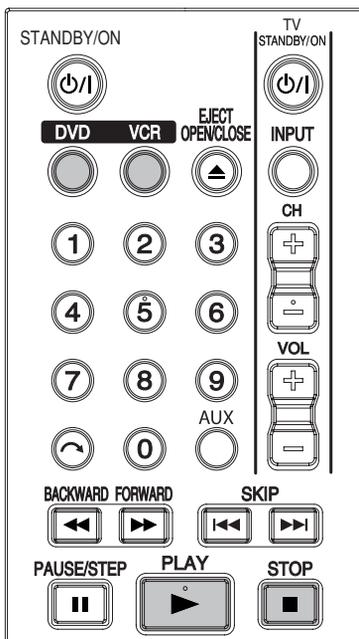

VHS

Select "VCR"

1



Start Playback

2



Stop Playback

3



Playable Discs: DVD–Video, DVD–R, DVD+R, DVD–RW, DVD+RW, CD–R, Video CD, Audio CD

BASIC RECORDING (One-Touch Recording)

INSTRUCTIONS → pg. 33

Select "DVD or VCR"

1



Select Input
(AV1, AV2 or DV IN)

2




Select Mode

3



DVD: XP, SP, LP or EP
VCR: SP or SLP

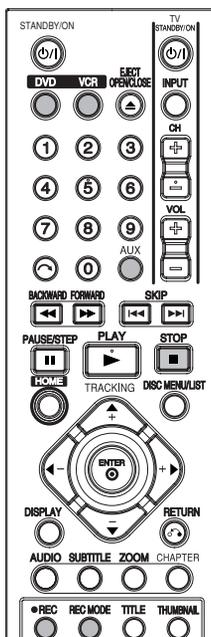

Start Recording

4



Stop Recording

5



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 21)

Recordable Discs: DVD–R, DVD+R, DVD–RW, DVD+RW

TIMER RECORDING (Manual Timer Programming)

INSTRUCTIONS → pg. 35


Select "HOME"

1



Select "Timer Record"

2

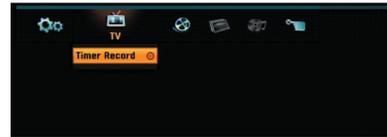


Press "ENTER"

3




Select "NEW" and Press "ENTER"


4

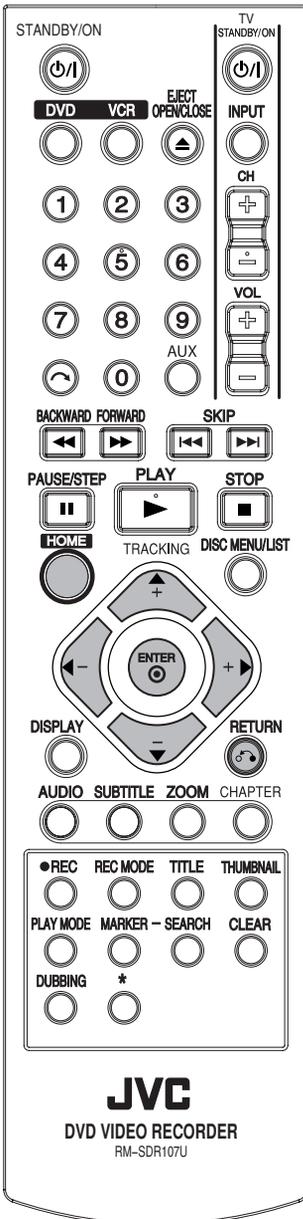

5

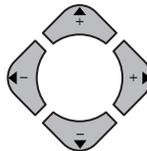

 Enter the necessary information for your timer recording(s).



Moves the cursor left/right.



Changes the setting at the current cursor position.



Press "ENTER" to check on the Timer Record List

6



Press "RETURN" Finish

7



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg.21)

Timer-Link Recording

INSTRUCTIONS



→ pg. 34

Timer Link

Note: Timer-Link works by using the timer function of most Cable/Satellite Boxes. Please check whether your current box has a "Timer" function.



Note: Timer-Link doesn't work, if Cable/Satellite Box keeps a "Screen Saver" in "Power Off".
Timer-Link works only with "Input 1" connector.

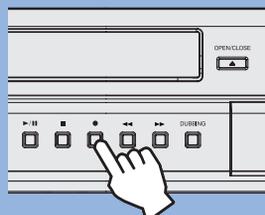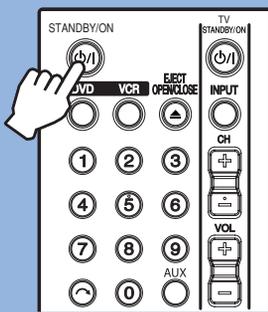

Note: If the Timer-Link "On", "⌚" indicator blinks on the JVC deck's display window.



1 Set Up Timer of Cable/Satellite Box

2 Power Off Cable/Satellite Box

Select "DVD or VCR"

3

Select Mode


4

5 Power Off DR-MV77SU/78BU

6 Hold "● (REC)" Button for 3 seconds

1. When your Cable/Satellite Box is powered on by the timer function, DR-MV77SU/78BU is also powered on and starts to record (It takes about 1 seconds) automatically.
2. When your Cable/Satellite Box is powered off using the timer function, DR-MV77SU/78BU also stops recording (It takes about 3 seconds) and then powers off automatically.

Timer-Link mode: Deactivate

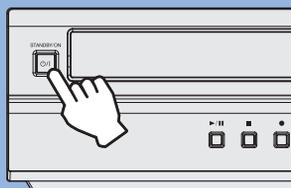

This operation makes "Timer-Link" been off after finishing Timer-Link record. If you keep "Timer-Link" on, you don't need this step.

7 Power On DR-MV77SU/78BU

Dubbing from VCR to DVD

INSTRUCTIONS


→ pg. 36




You can copy the contents of a VHS tape to a DVD using the **DUBBING** button. This allows you to archive your old VHS tapes to DVD.

Preparation : Press VCR button to set the VCR mode.


1 Insert Blank Disc and Cassette

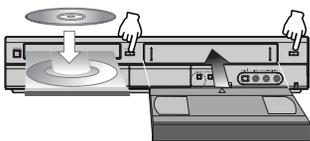


2 Find the place on the VHS tape from which you want to start dubbing.

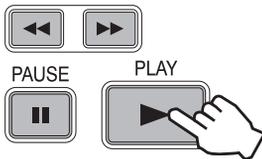

3 Access the Dubbing menu screen.

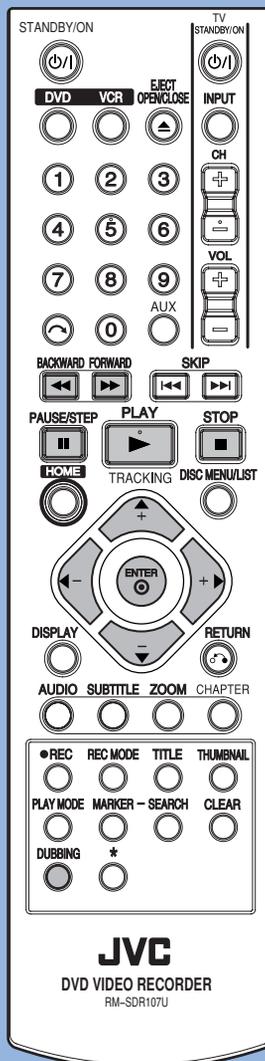

 4 Select the desired Record Mode, then select [Dubbing].



Select XP, SP, LP or EP

5 Start Dubbing.



6 Stop Dubbing.



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg.21)