




DIGITAL VIDEO RECORDER

VR-509E

INSTRUCTIONS

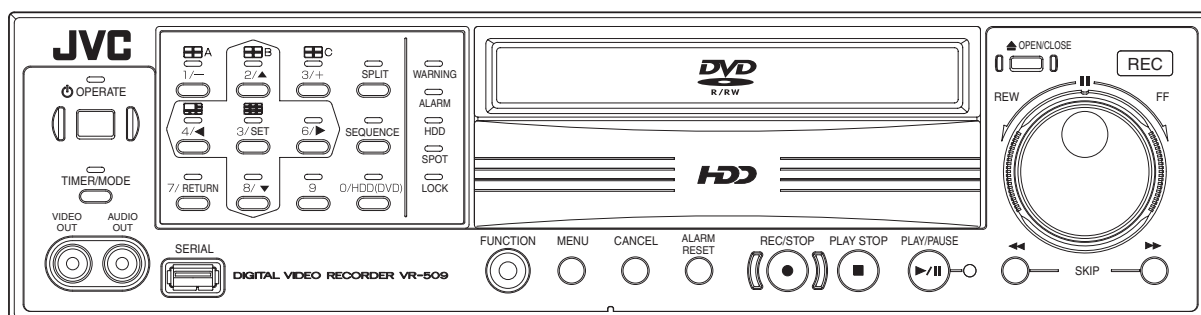

Please read the following before getting started:

Thank you for purchasing this JVC product.

Before operating this unit, please read the instructions carefully to ensure the best possible performance.

Set the "TIME ZONE" before operating this unit.

For the setting method, refer to 'Setting up Areas' on page 18.

SAFETY PRECAUTIONS

Warning Notice

FOR YOUR SAFETY (Australia)

1. Insert this plug only into effectively earthed three-pin power outlet.
2. If any doubt exists regarding the earthing, consult a qualified electrician.
3. Extension cord, if used, must be three-core correctly wired.

IMPORTANT (In the United Kingdom)

Mains Supply (AC 230 V) WARNING - THIS APPARATUS MUST BE EARTHED

The wires in this mains lead are coloured in accordance with the following code;

GREEN-and-YELLOW : EARTH

BLUE : NEUTRAL

BROWN : LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked with the letter E or by the safety earth symbol or coloured GREEN or GREEN-AND-YELLOW.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or which is coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

POWER SYSTEM

Connection to the mains supply

This unit operates on voltage of 220 V to 240 V AC, 50 Hz/60 Hz.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

To prevent electric shock, do not open the cabinet. No user serviceable parts inside. Refer servicing to qualified service personnel.

Note:

The rating plate and the safety caution are on the rear of the unit.

The OPERATE button does not completely shut off mains power from the unit, but switches operating current on and off.


Caution for AC Power Cord

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.

Appropriate AC Power Cord must be used in each local area.


FOR CONTINENTAL EUROPE, ETC.

Not to be used in the U.K.

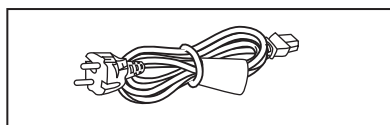

FOR U.K. ONLY

If the plug supplied is not suitable for your socket outlet, it should be cut off and appropriate one fitted.

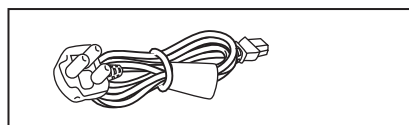

SAFETY PRECAUTIONS (continued)

WARNING

It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast, or cable programme and in any literary, dramatic, musical or artistic work embodied therein.

CAUTION

RED colour indications on the operation panel are provided but they are not safety related, RED colour indications:

(1) For Recording Button.

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

WARNING

For PLUGGABLE EQUIPMENT, the socket outlet shall be installed near the equipment and shall be easily accessible.

Information for Users on Disposal of Old Equipment



Attention:

This symbol is only valid in the European Union.

[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

(Business users)

If you wish to dispose of this product, please visit our web page www.jvc-europe.com to obtain information about the take-back of the product.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

Erklärung zum Rauschen (für die Bundesrepublik Deutschland):

Maschinenlärminformations-Verordnung 3. GPSGV, 06.01.2004: Der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäß EN ISO 7779

JVC Professional Europe Ltd. Frankfurt, Germany

Grüner Weg 10, 61169 Friedberg/Hessen, Germany

Tel. : +49 (06031) 6050

Contents

SAFETY PRECAUTIONS.....	2
-------------------------	---

Getting Started

Main Features	7
How to Read this Manual	7
Setting/Canceling the Operation Lock.....	7
PRECAUTIONS	8
Part Names and Functions (Front Panel).....	10
Part Names and Functions (Rear Panel).....	12
Part Names and Functions (Signal I/O Terminals).....	13

Installation and Preparation

System Connection (When connecting 9 Cameras).....	15
Turning On/Off the Power	16
Switching between OPERATE ON/OFF with the button on the front panel	16
Switching between OPERATE ON/OFF with the signal I/O terminal.....	16
MENU Screen Operations	17
Setting up Areas	18
Setting the Date/Time.....	19
Installation Settings	20

Viewing Live Camera Images

Switching between Display Screens.....	22
Changing the Layout of the Split Screens	23
Setting up monitor output	24
SEQUENCE TIME.....	24
QUAD DISPLAY	25
ONSCREEN MODE	25
Viewing Live Images with SPOT Output.....	26
Changing SPOT Output Manually	26
Changing SPOT Output with Terminal Input on the Rear Panel	26
COVERT CHANNEL	27
COVERT CHANNEL (WEB).....	27

Recording Camera Images

Types of Recording	28
Making Normal Recordings	29
Making Normal Recording with the EXT REC I/O Terminals.....	29
Recording Status Notification	29
Setting up the RECORD SETUP	30
Setting the REC PATTERN SET	31
Operation Setup (RECOVERY REC, REC INDICATOR, REPEAT REC)	32
ALARM Recording.....	33
Setting the ALARM TERMINAL.....	33
Setting the ALARM Recording.....	34
Ending the ALARM Recording.....	34
Using the Motion Detection Function.....	35
Motion Detection with Pre-Determined Sensitivity.....	35
Motion Detection with Freely Determined Sensitivity Levels	36
Setting the MOTION DETECT AREA SET	37
Motion Detection Check Mode	37
WEEKLY TIMER	38
DATE TIMER.....	39

Playing Back Recorded Images

Playing Back Images	40
Playing Back during Recording (Simultaneous Playback Mode)	40
Switching between Playback Screens.....	41
Searching with the Alarm List	42
Searching for Images According to Date/Time	43
Adjusting Playback Speed (Jog/Shuttle Playback).....	43
Skipping Recorded Images	44
Enlarging Images (Image Zoom)	45
AUDIO OUT.....	45

Useful Features

Changing the On-screen Display Position	46
Setting Camera Title	47
Setting OPERATION LOCK	48
Buzzer Setup	49
REAR TERMINAL	49
Hard Disk Maintenance	50
AUTO SCAN DISK	50
MANUAL SCAN DISK	50
DEFRAG DATABASE	51
Initializing the Hard Disk ("FORMAT")	51
Setting up the Hard Disk for Mirroring	52
Deleting Alarm Lists	53
Pass Code Setup	54
Displaying the Power Fail Time List and Log	54
Rebooting the System	55
Hard Disk Recovery Feature	55

Using DVD

DVD for Recording & Playback	56
Inserting & Removing DVD	56
Exporting Data on DVD	57
Playing Back Exported Images on DVD	60
DVD-Video Format Menus and Playback	61

Using Other External Devices

Capturing Still Images on the Flash Memory	62
Storing Set Data in the Flash Memory	63
Loading Set Data from the USB Memory	63
External Hard Disk Drives	64
Connecting a UPS	64

Connecting to a PC

You Can Do the Following	65
Minimum PC Specifications Required	65
Connecting Using a LAN Cable	65
Setting up a Network for VR-509	66
Setting up a PC Network	67
Connecting (Login) to the Network	68

Viewing Live Images Using a PC

Live Image Display	69
--------------------------	----

Record Program Using a PC

Adding to the Weekly Timer	70
Changing and Deleting the Weekly Timer	70
Adding to the Date Timer	71
Deleting the Date Timer	71
TIMER MODE	72

Viewing Playback Image Using a PC

ALARM SEARCH	73
TIME/DATE SEARCH	74
Playback Image Display	75

Useful Functions Using a PC

Inputting a Camera Title	76
Covert Channel Setting for Live image/ Playback display screen	76
Mail Notification Setting During Alarm Input	77
Adjusting Clocks with the NTP Server	78
Registering NTP Server	78
Canceling NTP Server Registration	78
Downloading VR-509 Settings	79
Uploading VR-509 Settings	80
MAINTENANCE	81
OPERATION LOG	81
RECORDING LOG	81
OPEN SOURCE	81
STATUS	81

Changing Network Settings

Setting a Network Address	82
Registering an ACCESS USER	82
ACCESS USER List Screen	82

* Continued on the next page

Changing VR-509 Settings Using a PC

MONITOR	83
ON-SCREEN MODE	83
SEQUENCE TIME.....	83
QUAD DISPLAY	83
COVERT CHANNEL	84
RECORD SETUP	84
REC PATTERN SET	84
ALARM REC	84
OPERATION	85
AUDIO OUT	85
ALARM TERMINAL.....	85
REAR TERMINAL	85
BUZZER	85

Explanations

Menu Flowchart.....	86
Menu List.....	90
Troubleshooting.....	96
Troubleshooting (Web Browser).....	100
Web Browser Glossary.....	102
Normal Recording	103
Repeat Recording	104
Pre-alarm Recording	105
Skip jump.....	106
Using the NTP Server Function.....	107
Activating ActiveX Control and Plug-ins	108
Notes Related to Summer Time	109
Recording Duration	110
DVD Recording Duration.....	112
Time Required for DVD Exporting.....	113

RS-232C Interface

1. Electrical Specifications.....	114
2. List of RS-232C Commands.....	115
3. Details of the Commands	116

Others

Specifications	124
Index.....	125

Getting Started

Main Features

- **Built-in hard disk drive with a high capacity of 320 GB**
- **Simultaneous recording of 100 images / sec in 9 channels**
Recording up to 100 images/second.
- **Simultaneous Playback mode**
Playback, jog/shuttle playback and skip play are possible during recording.
- **Direct search on the screen**
Searches quickly for the date/time and alarm position to invoke.
- **Recovery Recording during power fail**
Upon recovery from a power fail that occurred during recording, VR-509 will resume recording in the mode prior to the failure.
- **Timer Recording**
Daily/Weekly timer recording up to 8 programs.
- **Alarm Recording**
Switches automatically to the Alarm Recording mode as set in the menu when alarm signals are received during recording.
- **Supports 9-channel asynchronous camera inputs**
Simultaneous recording/playback of images in 9 asynchronous cameras.
- **Network-compatible**
Recorded images can be viewed on LAN-connected computers. Titles and timer programs can also be set using computers.
- **Motion Detect**
Automatically detects image motion within the specified area and starts alarm recording.
- **Transmission of alarm e-mails**
E-mails can be sent out to any computers during alarm input.
- **DVD Export Function**
Enables recording images to be exported to DVDs.

How to Read this Manual

- **In the subsequent sections of this manual, this equipment shall be referred to as VR-509.**
- **The names of buttons used during operation are enclosed in [].**
Example: MENU button → [MENU]
- * All product names stated in this manual are trademarks or registered trademarks of their respective companies.
Marks such as ™, ® and © are omitted in this manual.

Setting/Canceling the Operation Lock


The VR-509 is equipped with a secret operation lock to prevent the power from being switched off accidentally and from illegal recording operations.

Setting the Operation Lock

1. **Sets the Operation Lock. (See page 48)**
 - Sets up the operation lock parameters and the cancellation method.
 - * Operations cannot be locked or cancelled when the setup menus are displayed, or during playback.
2. **Press down on the [FUNCTION] button, and then press [SET].**
 - Operations will be locked.
The LOCK indicator will be illuminated when in the Operation Lock mode.

Canceling the Operation Lock

 3. **Press down on the [FUNCTION] button, and then press [CANCEL].**
 - When [BASIC] has been selected as the cancellation method:
→ Operations will be cancelled.
 - When [PASSCODE] has been selected as the cancellation method:
→ The pass code entry screen will be displayed.



- * When the pass code is being entered, asterisk (★) will be displayed instead of numerals.
4. **Enter the pass code with the use of the ten-key pad, and then press [SET].**
 - Operations will be cancelled.
 - * If the [CANCEL] key is pressed, the entry screen will be cancelled and the entire process must be restarted from the beginning.
 - * Operations cannot be locked or cancelled when the setup menus are displayed, or during playback.
(Page 30 PASSCODE ERROR REC)
(Page 54 Pass Code Setup)

It is recommended that the descriptions on activating and canceling the operation lock are cut from the page and stored in a safe location for precautionary purposes.

PRECAUTIONS

Hard Disk Drive

The distance between the head and disk that read and write data on the hard disk drive (hereinafter known as the HDD) is a miniscule 0.02μm. Vibrations and physical shocks to the HDD may therefore result in the head coming into contact with the disk, producing dents and scratches to its surface. This will consequently prevent data from being read, and will result in disk crashes if use is continued. It is therefore necessary to handle the recorder with great care.

■ **Installation and Changing the Location of Installation**

- Do not move the recorder or commence the installation process when the power is turned on or immediately after the power has been switched off (for approximately one minute) under any circumstances. (The HDD will continue to rotate due to inertia for a few moments after the power has been switched off, and vibrations or physical shocks will result in damage.)
- Wrap the recorder in protecting packing to prevent physical shocks.

■ **Handling**

- Handle this equipment with care. Do not subject it to physical shock.
- Do not unplug the power cord during recording or playback, or when the HDD is being accessed.
- The hard-disk is a consumable item. Replacement is recommended after 10000 hours of use (if use in a 25°C environment). For information on maintenance planning and costs, consult your nearest JVC dealer.

■ **If a power failure occurs during formatting of hard disk, disconnection, or when configuring or disabling mirroring, operation of the equipment may be disabled even if it is connected to the UPS.**

■ **Please note that we will not provide compensation for any failure during recording or playback due to defects in this equipment or the hard disk drive.**

■ **Please note that recorded images will be erased when replacing hard disks. Note that there are cases where recorded images may be erased when firmware is upgraded.**

PRECAUTIONS (continued)

■ Place of storage and use

Please avoid storing or using this DVR in the following places:

- Extremely hot or cold places beyond the allowable temperature for operation (5°C - 40°C).
- Humid or dry places beyond the allowable humidity range for operation (30 % - 80 % RH).
- Dusty or sandy places.
- Places exposed to oil, smoke or steam, such as the kitchen vicinity.
- Vibrating or unstable places.
- Places prone to condensation.
- Places that generates strong magnetic fields, e.g., transformer or motor.
- Places near devices that generate electric waves, e.g., transceiver or mobile phone.
- Places that generate radiation, X-rays or corrosive gases.

■ Handling the unit

- Please do not place heavy objects on the DVR, like a monitor or TV. Also, do not stack the VR-509 units on top of each other.
- Please do not block the ventilation openings.
- Avoid violent shocks to the unit. Do not drop the unit.

■ Maintaining the unit (Please turn off the power before performing maintenance work.)

Please wipe the unit with a soft cloth. Do not wipe it with thinner or benzene lest the surface melts or becomes dull. For stubborn stains, wipe first with a water-diluted neutral detergent and then wipe dry.

■ Please use the supplied power cord. Using a different type or damaged cord may cause fire or electric shock.

■ To save energy, be sure to turn off the system when not in use.

- Do not use the power cord supplied with this equipment on other devices.
- Do not stack up the equipment to prevent temperature within from rising.
- This product utilizes the open source software. Refer to the instruction on page 81 to display the precise information.
- Do not insert foreign object into this unit as this may cause malfunction or electric shock.
- A longer time may be required to search through data stored in this equipment if the volume is too huge (approximately 10,000 or more.). This is not a defect.
- TV broadcast or other video (audio) recordings are for personal use only. Unauthorized use of these materials is strictly prohibited.
- If the feet on the base of the unit are to be removed, make sure that screws with a length of 8mm or less are used when reattaching them.

- The width of the borders on split screens (dark portion) may vary according to the type of input signal. This is a characteristic of this equipment and is not a defect.

- Take the necessary precautions to prevent the recorder from toppling over when it is stood up vertically.

- Make sure that all static electricity has been discharged before touching the input and output terminals during installation and other procedures.

- Malfunctions can occur owing to static electricity, so avoid touching the rear panel during operations.

- The DVD drive unit is an expendable part. Although the service life of the DVD drive unit differs depending on the usage environment of the customer, replacement every 500 or so exports (approximately 1,000 hours) as a guide is recommended.


Copyrights

- The recording, dubbing, or playing of software containing a copyright protection signal is not possible on this DVD recorder.
- The usage of audio or video discs created using this DVD recorder either for financial gain or in broadcasting for widespread viewing may result in the legally-enforceable rights of the copyright holder being infringed.
- Unless the permission of the copyright holder has been obtained, audio or video discs created using this DVD recorder are to be used for personal enjoyment only.

Compensation for Damaged Content

- JVC accepts no responsibility whatsoever for damages incurred as a result of an inability to play or record audio and video content in the rare event that this DVD recorder, a DVD-R, or a DVD-RW fails to operate correctly.
- It is recommended that discs containing important content be backed up at regular intervals (i.e., on a yearly basis). Although digital signals do not deteriorate, storage environments can have an effect on a disc's aging characteristics, and this may result in an inability to play or record.
- If a disc should break, there will be no way to recover data from it.
- Proper playback of discs recorded using this DVD recorder on all devices is not guaranteed.

Part Names and Functions (Front Panel)

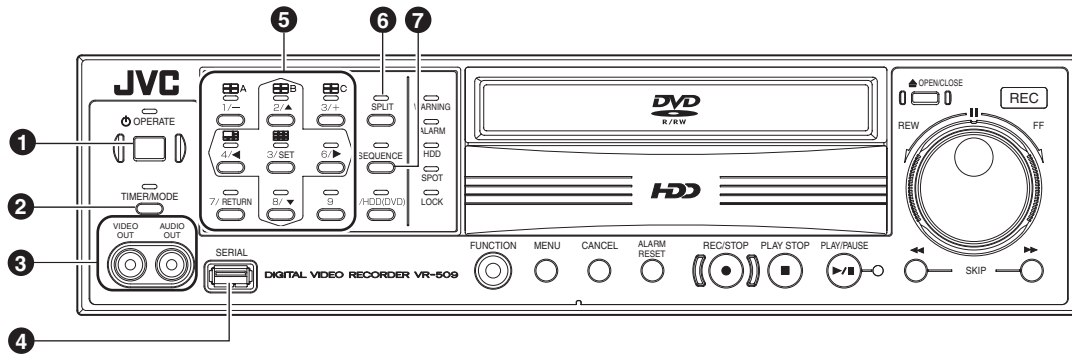

1 [OPERATE] Button and Operate indicator

Switches the operation on or off. The indicator is illuminated when the OPERATE button is set to ON. (Page 16)

- The main power cannot be turn OFF.

2 [TIMER/MODE] Button

When the [TIMER/MODE (REC PATTERN)] setting on the [RECORD SETUP] screen is set, the following is performed.

When the [TIMER/MODE (REC PATTERN)] setting is set at "PROGRAM TIMER"

Switches the timer ON. Press once again to switch the timer OFF. The indicator is illuminated when the timer is set to ON. (Page 28)

When the [TIMER/MODE (REC PATTERN)] setting is set to other than "PROGRAM TIMER"

Changes the operation by switching between "STANDARD" ↔ "REC PATTERN 1 to 9". The indicator is illuminated when in the "REC PATTERN 1 to 9" modes. (Page 28)

- * The [TIMER/MODE] button cannot be used when the menu is being displayed.

3 [VIDEO OUT] / [AUDIO OUT] Terminals

Outputs live images and live sound when in the live image display mode.

Outputs recorded images and sound during playback.

However, sound will not be output in the following cases:

- When playing back still images, when running searches other than X1, and when playing back frame-by-frame.
- When playing back recordings with the [NORMAL AUDIO REC]/[ALARM AUDIO REC] setting on the [RECORD SETUP] screen set at OFF.
- When a menu or search menu is displayed during playback.

4 [SERIAL] Port

Used to connect the communication control terminals on flash memories (sold separately,) additional hard disk drives (sold separately,) and UPS (sold separately.)

5 Keypad and Camera Input indicator

■ [1] to [9]

Selects the camera input when viewing live images and when playing back recorded images. The indicator that corresponds to the selected camera input is illuminated. And also these buttons are used as numeric keys.

■ [▲/▼/◀/▶]

Moves the cursor on the menus and playback menus.

Changes the on-screen display position when live images are displayed. (Page 46)

■ [–/+]

Changes the values set on the menus.

■ [SET]

Moves onto the next screen and sets the selected values on the menus.

Executes hard disk scanning, formatting and other functions.

■ [RETURN]

Returns to the previous screen on the menus.


6 [SPLIT] Button and indicator

Switches live images and recorded images between the split screen and the single screen displays. The indicator is illuminated when the screens are split.

7 [SEQUENCE] Button and indicator

Press this button for at least one second to display live images in the single screen auto change mode or quad screen auto change mode. The indicator is illuminated when in the auto change mode.

Part Names and Functions (Front Panel) (continued)

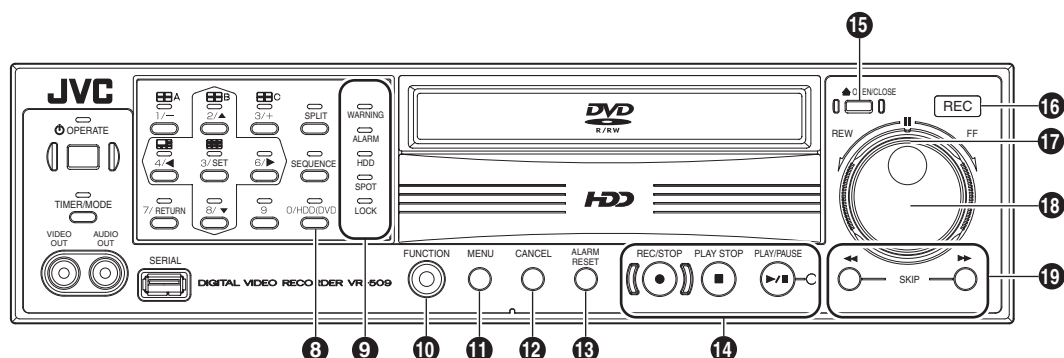**8 [0/HDD (DVD)]****HDD ⇄ DVD Button and indicator**

Press this button to switch operations between DVD and HDD. The indicator is illuminated when in DVD operations.

■ [0] Button

Sets the value to 0.

9 Status indicators**■ WARNING indicator**

Illuminated when a warning is in effect.

■ ALARM indicator

Illuminated during ALARM REC. The indicator will flash in red when ALARM REC has been completed.

■ HDD indicator

Illuminated during built-in HDD access.

■ SPOT indicator

Illuminated during SPOT OUT operations.

■ LOCK indicator

Illuminated during OPERATION LOCK.

10 [FUNCTION] Button

Press and hold this button followed by pressing the [PLAY STOP] button to adjust the seconds of the clock. (Page 19)

11 [MENU] Button

Displays the menu screen, and returns to the normal screen from the menu screen. (Page 17)

12 [CANCEL] Button

- Cancels the program timer setting and the record reservations. (Page 38, 39)
- Cancels the warning light and silences the warning buzzer.

13 [ALARM RESET] Button

Cancels the alarm recording or the motion detect is prohibited for 10 seconds.
Extinguishes the alarm indicator and silences the buzzer when an alarm indicator in effect.

14 REC/PLAY Operations Buttons**■ [REC/STOP] Button**

Starts and ends recording.

Press for at least two consecutive seconds to stop recording. (Page 29)

■ [PLAY STOP] Button

Stops playback and still image playback. When recording and playing back simultaneously, playback is stopped and recording is activated.

■ [PLAY/PAUSE] Buttons and indicators

Displays the playback menu (EVENT SEARCH screen) during live image display and recording.

Pauses when pressed during playback.

Resumes playback when pressed in the PAUSE mode. (Page 40)

15 [OPEN/CLOSE] DVD Open/Close Button

Opens and closes the DVD tray.

16 REC indicator

Illuminated during recording. (Page 29)

17 Shuttle Dial

Changes the playback speed during playback and PAUSE mode. (Page 43)

18 Jog Dial


Plays back a single frame in the normal or reverse direction during playback and PAUSE mode. (Page 43)

19 [SKIP] Search Button

Jumps to the oldest record image or the latest record image of the hard disk when pressed in the playback menu mode.

Starts SKIP JUMP by the mode set in the playback menu when pressed in the playback mode. (Page 44)

Part Names and Functions (Rear Panel)

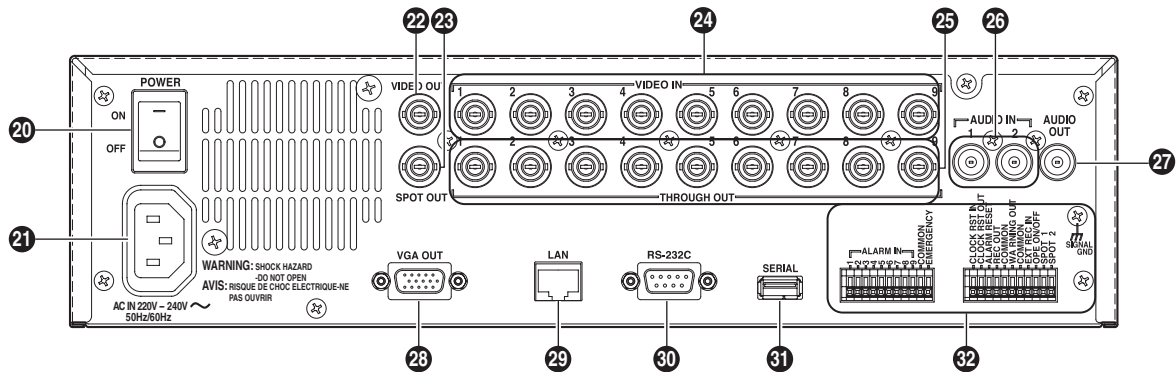

20 Power Switch

Switches the power on or off. The OPERATE ON mode is automatically activated when the power is switched on. (Page 16)

- * Make sure the system has been set in the OPERATE OFF mode before switching off the power supply.

21 [AC IN(220V - 240V)] Power Input Terminal

Connect using the power cable supplied to an AC 220 - 240 V outlet. (Page 16)

22 [VIDEO OUT] Terminal (BNC)

This function is the same as the **3** [VIDEO OUT] terminal on the front panel.

23 [SPOT OUT] Terminal (BNC)

Outputs live images screens. Also enables different contents from the [VIDEO OUT] to be output. (Page 26)

24 [VIDEO IN] Camera Image Signal Input (BNC)

Connect this to the video output of the video camera (sold separately.)

25 [THRU OUT] Camera Image Output Terminal (BNC)

Output camera image signals that support the various [VIDEO IN] terminals. Also enables monitor televisions to be connected (automatic terminals.)

26 [AUDIO IN] Terminals 1 and 2 (RCA)

Connect this to the audio output terminal of the device from which audio signals are to be recorded.

27 [AUDIO OUT] Terminal (RCA)

This function is the same as the [AUDIO OUT] terminal on the front panel.

28 [VGA OUT] VGA Output Terminal (D-SUB 15 PIN)

Outputs live images, playback images and the menu screens. Outputs the same contents as [VIDEO OUT]. (Page 24)

29 [LAN] Connection Interface (100 Base-T)

For connection to the Intranet and other networks using a LAN cable. (Page 65)

30 [RS-232C] Remote Terminal (D-sub 9 PIN)

Enables the VR-509 to be controlled from an external source when connected to a personal computer or other device.

- * See page 114 for details on the RS-232C interface.

31 [SERIAL] Serial Terminal (USB A-TYPE Female)

Used to connect the communication control terminals on flash memories (sold separately,) additional hard disk drives (sold separately,) and UPS (sold separately.)


This port has the same function as the **4** SERIAL port on the front panel.

32 Signal Input/Output Terminal

For operating VR-509 using external alarm signals or signals received from external devices, or for operating external devices by outputting signals. (Page 13)

- * Diameter of applicable cables: AWG 22 to 28.

Part Names and Functions (Signal I/O Terminals)

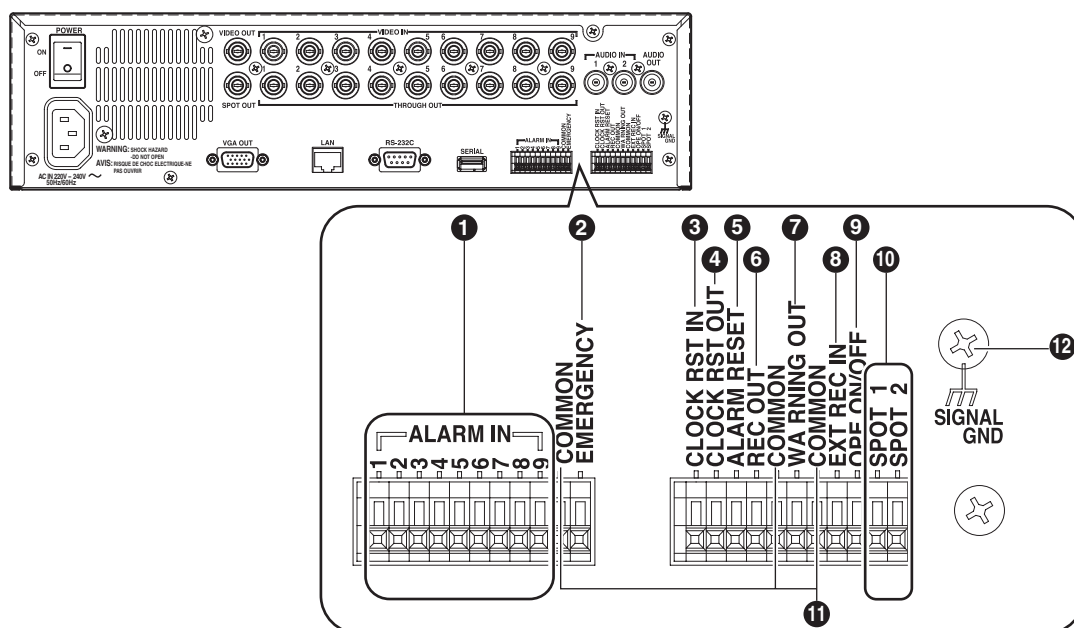

① [ALARM IN 1 to 9] Terminals

ALARM REC is activated when signals are input to these terminals. (Page 33)

② [EMERGENCY] Terminal

EMERGENCY REC is activated when signals are input to this terminal. (Page 33)

③ [CLOCK RST IN] Terminal

The terminal for adjusting the time. The VR-509 clock (seconds digit) is reset when signals are input. (Page 19)

④ [CLOCK RST OUT] Terminal

The clock reset signal is output in accordance with the following timing:

- When the VR-509 internal clock is 00:00 and 12:00.

⑤ [ALARM RESET] Terminal

Alarm recording is stopped when this signal is input.

⑥ [REC OUT] Terminal

Outputs the recording status of the VR-509. (Page 29)

⑦ [WARNING OUT] Terminal

Outputs a signal when an operation abnormality or error occurs on the hard disk or other. (Page 96)

⑧ [EXT REC IN] Terminal

Activates recording with an external signal. (Page 29)

⑨ [OPE ON/OFF] Terminal

Switches between OPERATE ON or OFF when the signal is input. (Page 16)

⑩ [SPOT 1· 2] Terminal

The input signal selects the image to be output with SPOT OUTPUT. (Page 26)

⑪ [COMMON] Terminal

 
 

 
 
 
 
The common grounding terminal. Connected to the signal grounding terminal on the device connected.

⑫ [SIGNAL GND] Terminal

The common grounding terminal. Connected to the signal grounding terminal on the device connected.
(This can be used when there are insufficient COMMON grounding terminals.)

* Do not use this terminal for protective earthing.

Part Names and Functions (Signal I/O Terminals) (continued)

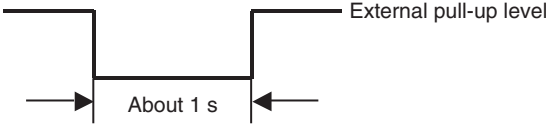Terminal	Signal Level	Remarks
[ALARM IN] Alarm Input [EMERGENCY] Emergency Input [EXT REC IN] External Record Input	 <p>min.400 ms</p> <p>* Set the output impedance to 10kΩ or less</p>	Make Contact Input
[CLOCK RST IN] Clock Reset Input	 <p>min.400 ms</p> <p>* Set the output impedance to 10kΩ or less</p>	Make Contact Input
[CLOCK RST OUT] Clock Reset Output	 <p>External pull-up level</p> <p>About 1 s</p>	Open collector (DC15V, 10mA or less)
[ALARM RESET] Alarm Reset Input	 <p>min.400 ms</p> <p>* Set the output impedance to 10kΩ or less</p>	Make Contact Input
[REC OUT] Record Status Output	 <p>REC STOP</p> <p>External pull-up level</p>	Open collector (DC15V, 10mA or less)
[WARNING OUT] Warning Output	 <p>WARNING</p> <p>External pull-up level</p>	Open collector (DC15V, 10mA or less)
[OPE ON/OFF] Operate ON/OFF	 <p>About 1 s</p> <p>Switches to OFF when [OPERATE] is set at ON. Switches to ON when [OPERATE] is set at OFF.</p>	Make Contact Input
[SPOT 1 · 2] Spot Output Selection	The SPOT output more is selected in accordance with a combined input of [SPOT 1·2] Make/Open. (Page 26)	Make Contact Input


Installation and Preparation

System Connection (When connecting 9 Cameras)

Connection with up to 9 cameras is possible with VR-509's switcher.

<Example>

- Perform recording/playback by connecting to 9 cameras.
- Checking recorded images at Monitor.
- Execution of alarm recording upon detecting alarm signals.

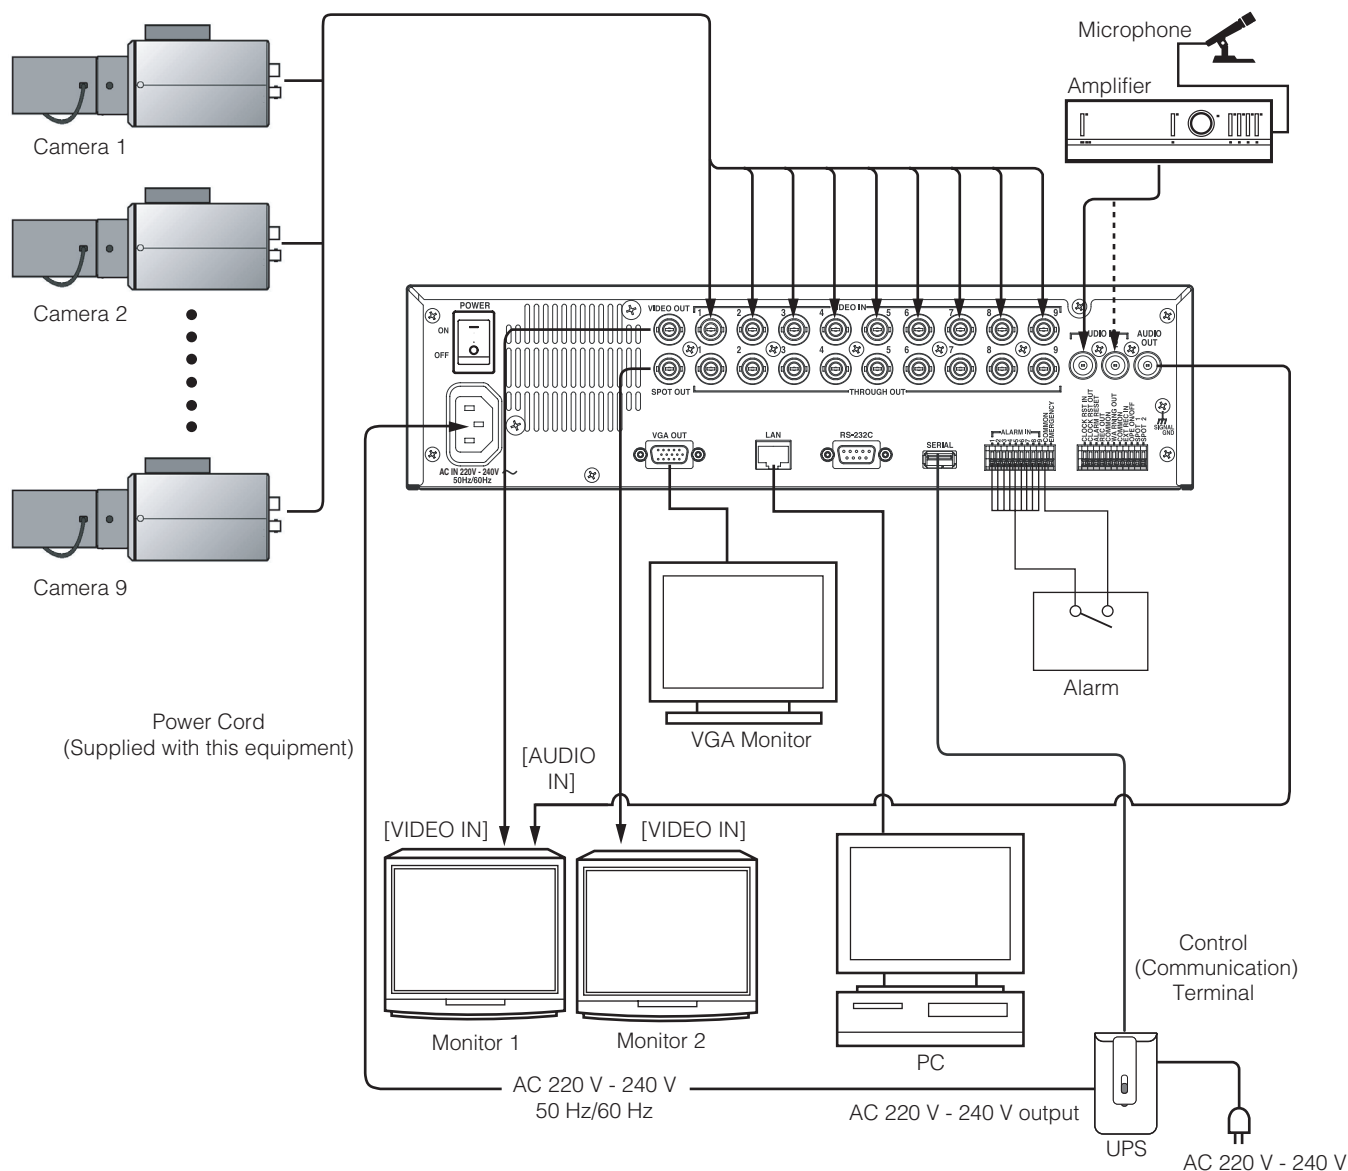

Precautions:

- When TV video image signals other than those input by cameras are input, there are cases where live image display and REC playback will not operate normally.
- A message stating "No VIDEO IN * * Input (E-03)" will be displayed on the on-screen when a problem occurs with image signal input. (The number of the camera is displayed in * *). If recording is continued in this state, there is a possibility that accurate recording will not be possible not only with the affected camera, but also with normally operating cameras. In this case, either invalidate the input recording for which the problem occurred, or resolve the cause of the problem immediately. (See CAMERA SETUP-1 on page 20.)
- Make sure that the power supply to all devices is turned off before establishing the connections.
- Make sure that the input terminals to which no cameras are connected are set to "DISCONNECT" on the menu. See CAMERA SETUP-1 on page 20.)
- When a BNC connector is connected to THRU OUT, the built-in 75Ω terminator will become OPEN. Connect the last device to the 75Ω terminator.
- When connecting other equipment, make sure the relevant instruction manuals are read thoroughly beforehand.
- See the section on Connecting to a PC on page 65 for details on establishing connections with personal computers.

Installation and Preparation

Turning On/Off the Power

Switching the Power On

1. Connect the Power Cable.

- Connect using the power cable supplied to an AC 220 V - 240 V 50Hz/60Hz outlet.

2. Switch on the power switch on the rear panel.

- The main power is turned on to initiate a system check.
- The OPERATE indicator will blink.
- The OPERATE indicator will then be steadily illuminated, indicating that the OPERATE ON mode has been activated. Operations are possible when the on-screen display (REC/STOP mark, date and time) appears on the VIDEO OUT.

CAUTION

Do not disconnect the power cable when the system check is being run under any circumstances. Failure to observe this may result in malfunctions.

Switching the Power Off

1. Press the [OPERATE] button for at least two consecutive seconds to move across to the OPERATE OFF mode.

- The OPERATE indicator will be extinguished.

2. Switch off the power switch on the rear panel.

MEMO

It is recommended that a UPS (Uninterruptible Power Supply) is used in consideration of power failures, etc. (See System Connection on page 15)
(See Connecting a UPS on page 64)

Switching between OPERATE ON/OFF with the button on the front panel

It is possible to switch between the operational mode (OPERATE ON) and the stand-by mode (OPERATE OFF).

OPERATE ON

■ Press the [OPERATE] (when in the OPERATE OFF mode.) button.

- The OPERATE indicator will blink.
- The OPERATE indicator will then be steadily illuminated, indicating that the OPERATE ON mode has been activated. Operations are possible when the date and time appears on the on-screen menu.

* The OPERATE ON mode will be started up automatically when the power switch on the rear panel is switched on.

OPERATE OFF

■ Press the [OPERATE] button for at least two seconds (when in the OPERATE ON mode.)

- The OPERATE indicator will blink.
- A message stating "Please wait..." will be displayed.
- The OPERATE OFF mode will then be activated, and the OPERATE indicator will be extinguished.

* Activate the OPERATE OFF mode before switching off the power.

Switching between OPERATE ON/OFF with the signal I/O terminal

OPERATE ON

■ Set the OPERATE ON/OFF terminal to Low (0V) (when in the OPERATE OFF mode.)

- A system check will be started.
- The OPERATE ON mode will then be activated. Operations are possible when the on-screen display (REC/STOP mark, date and time) appears on the VIDEO OUT.

OPERATE OFF

■ Set the OPERATE ON/OFF terminal to Low (0V) (when in the OPERATE ON mode.)

- A message stating "Please wait..." will be displayed.
- The OPERATE OFF mode will then be activated, and the OPERATE indicator will be extinguished.


* Activate the OPERATE OFF mode before switching off the power.

MENU Screen Operations

Displaying the MENU Screen

1. Press the [MENU] button for at least one second.

- The MENU screen will be displayed.
- * Press the [MENU] once again to close the MENU screen.

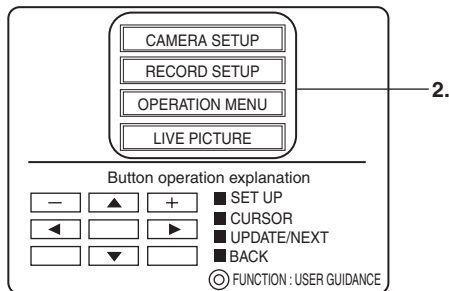


- * Recording in the motion detection mode is not possible when operations are being carried out on the menu.

Proceeding to Other MENU Screens

2. Select your desired item with [▲/▼], and then press the [SET] button.

- The setup screen will be displayed.
- * Press the [RETURN] to return to the previous screen.

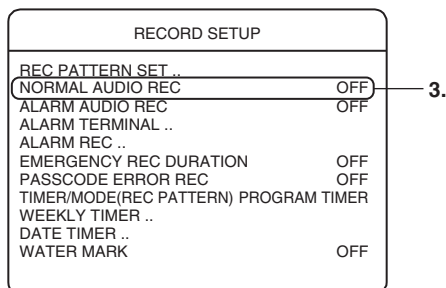

- * The above example is the "RECORD SETUP" screen.


3. Select your desired item with [▲/▼]

- It is possible to change the value settings that are displayed on the right-hand side of the menu selections.
→ Proceed to 4.
- Menu selections that do not show values on the right-hand side advance onto different MENU screens when selected. Repeat procedure 2. until your desired screen is displayed.

Changing the Value Setting

4. Change the value settings with [−/+].

- Press [−/+] to change the values displayed on the screen.

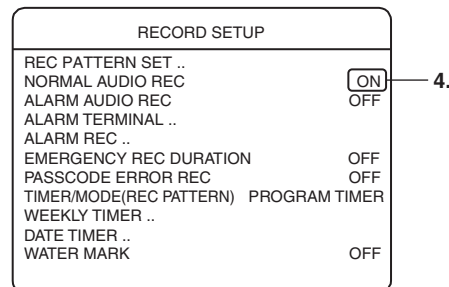


- * The above example is the "RECORD SETUP" screen.

Displaying the Confirmation Window

5. Press the [SET] button.

- The confirmation screen will be displayed.

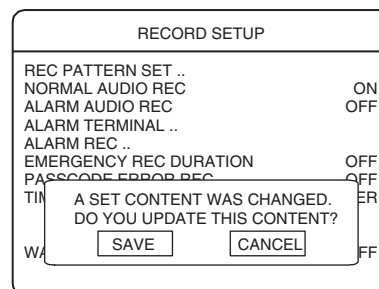

- * The above example is the "RECORD SETUP" screen.

Saving the Setting

6. Select "SAVE" with [◀/▶], and then press the [SET] button.

- The settings will be saved accordingly.
- * Select "CANCEL" with [◀/▶] and then press the [SET] button to close the confirmation screen. The settings will not be saved in this event.
- * There are fields that cannot be updated or saved during recording.
- * There are fields that cannot be changed when in the timer mode.

Displaying User Guidance on the Menu Screen

- Press the [FUNCTION] button to display the user guidance in the menu screen display mode.


Closing the Menu

- Press the [RETURN] button or the [MENU] button for at least two consecutive seconds to close the menu screen.

Setting up Areas

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in MENU Screen Operations (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE] → [AREA SELECT].

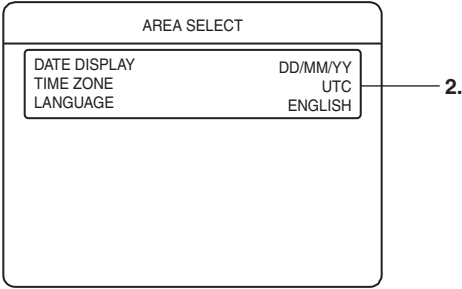

2. Select your desired item with [▲/▼], and then press [-/+]

to change the value settings.

Selections Available

DATE DISPLAY

DD/MM/YY, YY/MM/DD, MM/DD/YY:

Selects the sequence in which the year, month and day are to be displayed.
(DD = Day, MM = Month, YY = Year)

TIME ZONE

Selects the area closest to your own address.

3. Press the [SET] button.

- The confirmation screen will be displayed.

4. Select “SAVE” with [◀/▶], and then press the [SET] button.


LANGUAGE

The VR-509 supports only the English language.

Setting the Date/Time

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in MENU Screen Operations (page 17) in the sequence of [MENU] → [OPERATION MENU] → [CLOCK SET].
- * The time cannot be set when the VR-509 is recording, during DVD exporting, or when operating in the timer mode.
- * Additionally, the time cannot be set when synchronization with the web browser NTP server has been activated. (See page 78)
- * Take care when changing the date and time settings if recording data is stored on the hard disk. If the dates and times are duplicated or set earlier, there is a chance that the playback, skip, jump, search and other operations will not be performed normally.

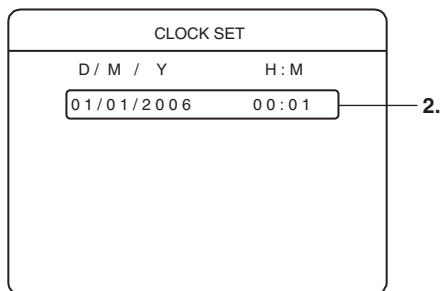

2. Select your desired item with [◀/▶], and then press [↵] to change the value settings.

- Set the current date and time in "D", "M", "Y", "H" and "M".

3. Press the [SET] button.

- The confirmation screen will be displayed.

4. Select [SAVE] and press the [SET] button.

- The date and time will now be set. The clock will start operating at the set time with the second value at 00.

Adjusting the "seconds" Display with Button Operations


- The "seconds" display is adjusted by pressing [PLAY STOP] while pressing down on [FUNCTION]. However, this will not be reset during recording.
- When the "seconds" value is 29 or less, the "minutes" value remains unchanged, and the "seconds" value is reset to 00.
- When the "seconds" value is 30 or more, the "minutes" value is increased by one, and the "seconds" value is reset to 00.

Adjusting the "seconds" Display with the Signal Input/Output Terminal

■ Clock Reset signal input terminal

The recorder's clock will be reset when the relevant signal is input. The method of resetting the clock is the same as explained above in "Adjusting the seconds display with button operations."


- It is possible to align the time with the master clock and the clocks on other equipment by receiving signals.

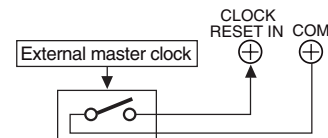

■ Clock Reset signal output terminal

The clock reset signal is output in accordance with the following timing:

- When the recorder's internal clock reaches 00:00 and 12:00.
- It is possible to align the clock with two or more VR-509 units in calibrations of seconds.

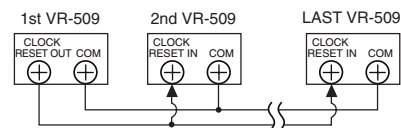

MEMO

- When the [CLOCK RESET OUT/IN] terminal is connected, the time for two or more VR-509 units will be synchronized twice a day at 12:00 noon and midnight.
- Make sure the power supply to the relevant units has been switched off before establishing the connection.

Adjusting the Clock with the NTP Server

It is possible to adjust the clock by connecting to the NTP server. See the section on "Adjusting the Clock with the NTP Server" on page 78 for more details.

- * The internal clock is accurate to within about 60 seconds per month. (If used in a 25°C environment)
For greater accuracy, access the NTP server.
- * See "Using the NTP Server Function" on page 107.

CAUTION


When aligning the clock during recording with the clock reset input or with the NTP server, there is a chance that the recording time will be duplicated if the clock has advanced past the actual time.

The search and audio playback functions will not operate normally in this event.


- * It is recommended that the clock is adjusted to the correct time once per month to obtain accurate times.

Installation Settings

1. Press the [MENU] button.

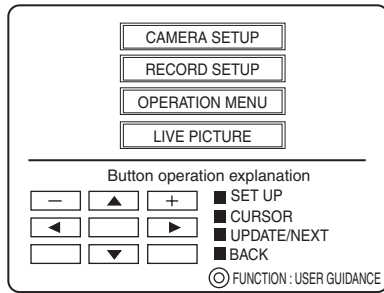

- Open the menus in accordance with the instructions provided in MENU Screen Operations (page 17) in the sequence of [MENU] → [CAMERA SETUP].
- The [CAMERA SETUP-1] screen will be displayed.
- * The settings cannot be amended during recording.

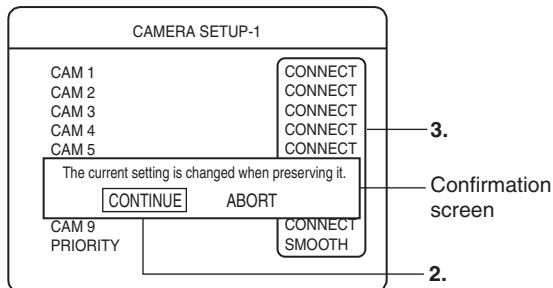

2. Select "CONTINUE" on the confirmation screen with the use of the [◀/▶] keys, and then press the [SET] button.

- The confirmation screen will close.
- * Select "ABORT" and press the [SET] button to return to the top menu.

CAMERA SETUP-1

3. Select your desired item with [▲/▼], and then press [←/→] to change the value settings.

Settings

CAMERA1 to 9

CONNECT, DISCONNECT:

Set the camera input that is to be used for recording at "CONNECT", and all other cameras at "DISCONNECT".

PRIORITY

SMOOTH: Set and record with a total recorded frame count of 100 images per second, and a picture size of 352 x 288 pixels.

HIGH-RESOLUTION:


Set and record with a total recorded frame count of 50 images per second, and a picture size of 720 x 288 pixels.

CAUTION

When the setting has been made for a specific number of cameras, it is only possible to amend [CAMERA SETUP-1]. In order to amend the subsequent cameras, the [REC PATTERN SET] data (the F.RATE, QLY, and M.DET settings for NORMAL REC/ALARM REC) that use [STANDARD] or [REC PATTERN 1 to 9] must be reset. (See "Setting the REC PATTERN SET" on page 31)

4. Press the [SET] button.

- The [CAMERA SETUP-2] screen will be displayed.

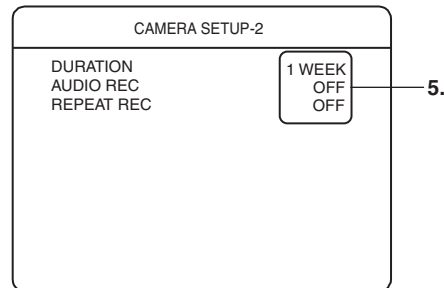

CAMERA SETUP-2

5. Select your desired item with [▲/▼], and then press [←/→] to change the value settings.

Settings

DURATION

1DAY, 3DAYS, 5DAYS, 1WEEK, 2WEEKS, 3WEEKS, 1MONTH, 2MONTH, 3MONTH:

Set the period for which the recorded images are to be stored on the hard disk based on the preset recorded image mode and the number of cameras connected.

- * This storage period only acts as a guidelines, as the actual period of storing images may differ depending on amendments to the frame rate, quality and other settings in [CAMERA SETUP-3] (Refer to the section on "Recording Duration" on page 110 for further details on the storage period for recorded images.)

AUDIO REC

ON, OFF: Set whether to record sound audio when in the NORMAL REC and ALARM REC modes.

REPEAT REC

Set the action when the remaining capacity in the hard disk becomes empty.

OFF: Stops recording.

ALARM LOCK: Continues recording over old recordings.

However, recordings made in the ALARM REC mode will not be overwritten.

ALL: Continues recording over old recordings.

Installation Settings (continued)

6. Press the [SET] button.

- The recording settings for the standard mode set on the [CAMERA SETUP-1] and [CAMERA SETUP-2] screens will be automatically set, and the [CAMERA SETUP-3] screen will be displayed.

CAMERA SETUP-3				
NORMAL REC			ALARM REC	
F.RATE(ips)	QLY		F.RATE(ips) (AUTO)	QLY
CAM 1	0.8	N	--	--
CAM 2	0.8	N	--	--
CAM 3	0.8	N	--	--
CAM 4	0.8	N	--	--
CAM 5	0.8	N	--	--
CAM 6	0.8	N	--	--
CAM 7	0.8	N	--	--
CAM 8	0.8	N	--	--
CAM 9	0.8	N	--	--
SET DETAIL MORE			FINISH	

7.

CAMERA SETUP-3

7. Select your desired item with [▲/▼/◀/▶], and then press the [SET] button.


- Select "SET DETAIL MORE" to change the recording settings for the STANDARD and REC PATTERN 1 to 9 mode. (See page 31)
 - Select "FINISH" to end the CAMERA SETUP procedure.
- * All existing recording settings will be updated when these settings are saved after amendment.

Viewing Live Camera Images

Switching between Display Screens


The VR-509 enables images to be viewed on single screens, split screens, and sequential screens.

* It is not possible to change the sequential display when the playback screen is being displayed.

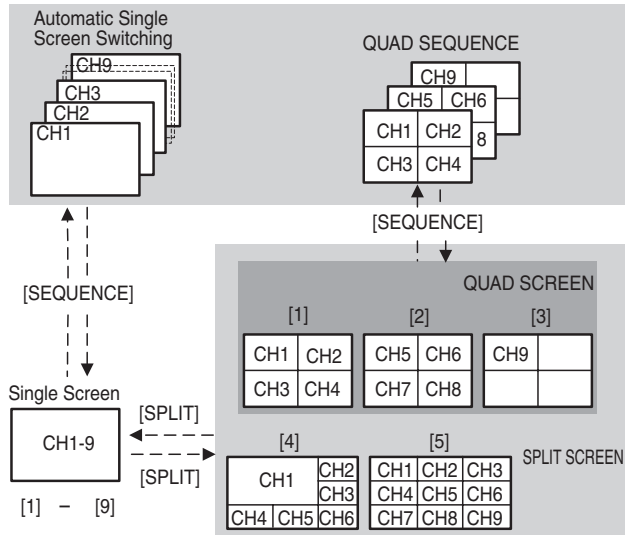

Single Screen

 
- The SPLIT display indicator and the SEQUENCE display indicator are both extinguished.



- Press buttons [1] to [9] to switch to the required camera input.
- Press the [SPLIT] button to divide the screen into "9 WAY" screens.
- Press the [SEQUENCE] button for at least one second to activate the automatic single screen.

Automatic Single Screen

 
- The SPLIT display indicator will be extinguished and the SEQUENCE display indicator will be illuminated.



- Press the [SEQUENCE] button for at least one second to display the fixed single screen.

QUAD SEQUENCE

- The SPLIT display indicator and the SEQUENCE display indicator will be both illuminated.

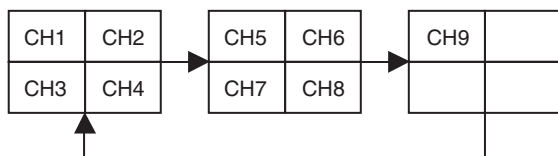

- Press the [SEQUENCE] button for at least one second to display the "QUAD" screen.

SPLIT Screen

- The SPLIT display indicator will be illuminated, and the SEQUENCE display indicator will be extinguished.

- Press [1] to display the "QUAD-A" screen.

CAM 1	CAM 2
CAM 3	CAM 4

- Press [2] to display the "QUAD-B" screen.

CAM 5	CAM 6
CAM 7	CAM 8

- Press [3] to display the "QUAD-C" screen.

CAM 9	

- Press [4] to display the "6 WAY" screen.

CAM 1	CAM 2
	CAM 3
CAM 4	CAM 5
	CAM 6

- Press [5] to display the "9 WAY" screen.

CAM 1	CAM 2	CAM 3
CAM 4	CAM 5	CAM 6
CAM 7	CAM 8	CAM 9


* The screen layout for the split screens are set on the "LIVE PICTURE" screen. (Page 23)

- Press the [SPLIT] button to display the single screen.
- Press the [SEQUENCE] button for at least one second to activate QUAD SEQUENCE screen. (Possible only when the "QUAD" screen is being displayed.)

* Sequential displays are not possible from "6 WAY" and "9 WAY" screen.

MEMO

A marker that indicates the operational status of the VR-509 is displayed at the bottom left-hand side of the screen when the live screen is being displayed. (The position of the marker cannot be changed.)

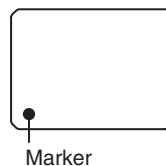


Marker color	Status of the VR-509
Blue	Not recording
Red	Normal recording
Yellow	Alarm recording
White	Video loss

Changing the Layout of the Split Screens

1. Press the [MENU] button.

- Open the menus in accordance with the instructions provided in MENU Screen Operations (page 17) in the sequence of [MENU] → [LIVE PICTURE].
- The layout pattern name that is set is displayed at the center of the screen.
- First of all, the “QUAD-A” screen will be displayed.
- * The layout cannot be changed when in the playback mode.

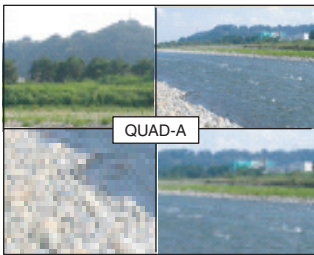

2. Press [◀▶] to select the split layout required.

- Changes sequentially in the order of “QUAD-A” → “QUAD-B” → “QUAD-C” → “6 WAY” → “9 WAY” → “QUAD-A” when [▶] is pressed.

3. Press the [SET] button.

- The sub-screen will be displayed within the blue border at the top left-hand side of the screen.



* The above is an example of “QUAD” screen.

4. Press any of the [1] to [9] buttons.

- The camera input that corresponds to the number pressed will be displayed as a sub-screen inside the blue border.
- The blue border moves to the next sub-screen.



* The above is an example of “QUAD” screen.


- Press the [0] button to select the black screen.
- Press the [SEQUENCE] button for at least one second to return the blue border to the previous sub-screen and display the screen as it was prior to amendment.

5. Press the [SPLIT] button.

- The split-screen selection screen will be displayed.
- Repeat procedures 2 to 5 to change the “6 WAY”, “9 WAY” or any other split-screen display layouts.

6. Press the [RETURN] button.

- A confirmation screen will be displayed.

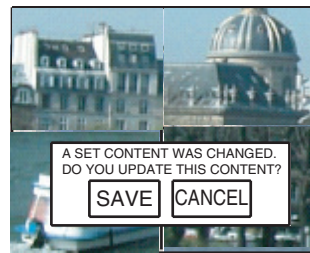

* The above is an example of “QUAD” screen.

7. Select “SAVE” with [◀▶], and then press the [SET] button.

- Changes the layout of the split screen.
- * Press [CANCEL] to return to the top menu screen.

CAUTION


It is not possible to set “QUAD-A”, “QUAD-B” and “QUAD-C” at the same location when setting up the layout for “QUAD” screens.

Viewing Live Camera Images

Setting up monitor output

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MONITOR] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

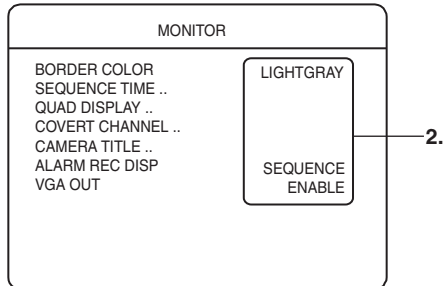

2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [-/+].

Settings

BORDER COLOR

Set the brightness of the border lines for split screen displays.
BLACK/DARK GRAY/GRAY/LIGHT GRAY

- * The brightness of the border lines for spot output will also change at the same time.

ALARM REC DISP

Set the camera input to display when an alarm is detected.

- OFF: Does not change the display
- FIX: Displays the camera input started with the most recent alarm recording. When alarm recording is started for multiple camera inputs simultaneously, each of these are displayed for a period of one second, and then the camera input with the small number will be displayed.

SEQUENCE:

Displays all of the camera inputs sequentially for a period of one second during each alarm recording.

VGA OUT

- DISABLE: Does not output images from VGA OUT.
- ENABLE: Outputs images from VGA OUT.

3. Press the [SET] button.

- The confirmation screen will be displayed.


4. Select [SAVE] with the [◀/▶] keys, and then press [SET].

- * There are cases in which [VIDEO OUT] images will seem different if these settings are changed.

SEQUENCE TIME

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MONITOR] → [SEQUENCE TIME] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

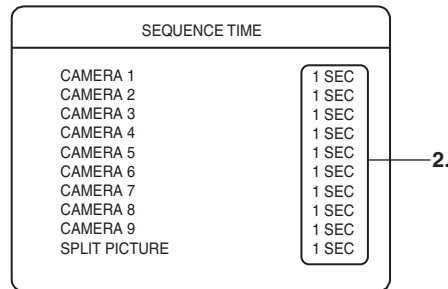

2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [-/+].

Settings

CAMERA 1 to 9

Set the time at which each screen is to be switched.

1 SEC, 2 SEC, 3 SEC, 5 SEC, 10 SEC:

Sequential display is carried out in accordance with the time set.

OFF: Sequential display not performed.

SPLIT PICTURE

1 SEC, 2 SEC, 3 SEC, 5 SEC, 10 SEC:

Sequential display is carried out in accordance with the time set.

3. Press the [SET] button.

- The confirmation screen will be displayed.

4. Select [SAVE] with the [◀/▶] keys, and then press [SET].


- * Depending on the monitor being used, there are cases where images will be distorted for a short period of time when switching between screens when display is being carried out in the QUAD SEQUENCE screen mode.

QUAD DISPLAY

Sets whether or not to display each screen with automatic switching when in the split picture mode.

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MONITOR] → [QUAD DISPLAY] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

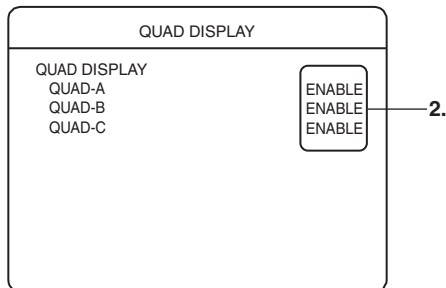

2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [-/+].

Settings

QUAD-A

DISABLE: Skipped.
ENABLE: Displayed.

QUAD-B

DISABLE: Skipped.
ENABLE: Displayed.

QUAD-C

DISABLE: Skipped.
ENABLE: Displayed.

3. Press the [SET] button.

- The confirmation screen will be displayed.


4. Select [SAVE] with the [◀/▶] keys, and then press [SET].

ONSCREEN MODE

Sets whether or not each of the settings are to be displayed on the on-screen.

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [ONSCREEN/ OPERATION] → [ONSCREEN MODE] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

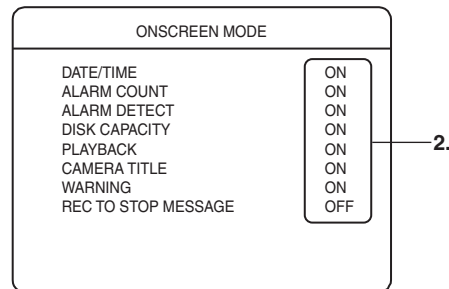

2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [-/+].

Settings

- DATE/TIME: Displays the date and time.
- ALARM COUNT: Displays the alarm number (displayed as "AL-**"). The most recently recorded alarm number will be displayed for live images. The alarm number for the recording being played back will be displayed when playing back ALARM REC images.
- ALARM DETECT: "I-AL-I" will be displayed in red when an ALARM REC is operated.
- DISK CAPACITY: Displays the remaining disk capacity when the [REPEAT REC] parameter has been set at OFF (displayed as "***%"). The remaining disk capacity will not be displayed when the [REPEAT REC] parameter is set at "ALL" or "ALARM LOCK".
- PLAYBACK: Displays the playback mode (▶ or ▶▶, etc.) and the operation status (blue circle, etc.)
- CAMERA TITLE: Displays the camera title that corresponds with the camera that is currently set.
* The camera title will not be displayed for camera playback images that have been deleted after recording.
- WARNING: The on-screen warning and indicator warning displays when a warning is triggered. (Example: "MAINTENANCE PROCEEDING")
- REC TO STOP MESSAGE: The "THE RECORDING IS STOPPED" on-screen display and warning indicator display.

Values

ON: Displayed.
OFF: Not displayed.

3. Press the [SET] button.

- The confirmation screen will be displayed.

4. Select [SAVE] with the [◀/▶] keys, and then press [SET].

Viewing Live Camera Images

Viewing Live Images with SPOT Output

It is possible to view live images with the SPOT output function. The following two methods for changing the display contents for SPOT output are available:

- Changing SPOT output manually.
- Changing SPOT output with terminal input on the rear panel.

Changing SPOT Output Manually

Press and hold the [SEQUENCE] button, and then press the [SPLIT] button.

- The SPOT indicator will be illuminated, and the SPOT OUT SELECT mode will be activated.
- Switch between the contents that are to be displayed for SPOT output using the same operations for monitor output with the use of the [1] to [9], [SEQUENCE] and [SPLIT] buttons.

Returning to the Monitor Output Selection Mode

Press and hold the [SEQUENCE] button, and then press the [SPLIT] button.

- The SPOT indicator will be extinguished, and the MONITOR OUT SELECT mode will be activated.

Changing SPOT Output with Terminal Input on the Rear Panel

Make on the [SPOT1] and [SPOT2] terminals on the rear panel for 400 ms or more.

- The setup screen will change to SPOT output when the SPOT1 and SPOT2 terminals are input.

SPOT1	SPOT2	Changing screen
MAKE	OPEN	Displaying the next screen
OPEN	MAKE	Displaying the previous screen
MAKE	MAKE	Amending the layout
OPEN	OPEN	No change

■ Displaying the next screen

When in the single screen mode: Switched alternately in the sequence 1 → 2 → 3 → ... → 9 → 1 →

When in the QUAD screen mode: Switched alternately in the sequence QUAD-A → QUAD-B → QUAD-C → QUAD-A ...

When in the 6 WAY and 9 WAY screen modes: Input is disabled.

* Will not function during sequential operations.

■ Displaying the previous screen

Switches the screens in the opposite sequence to that of "Displaying the next screen."

■ Amending the layout

Switched alternately in the sequence SINGLE SCREEN → QUAD → 6 WAY → 9 WAY → SINGLE SCREEN


* SPOT output does not have on-screen display.

COVERT CHANNEL

Sets whether or not the screen is to be displayed in black without the camera inputs being displayed.

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MONITOR] → [COVERT CHANNEL] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

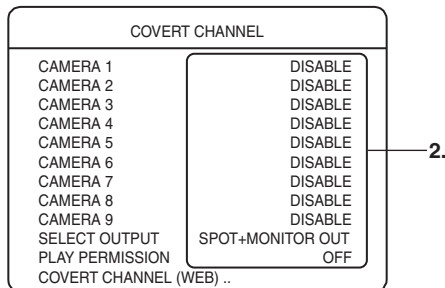

2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [–/+].

Settings

CAMERA 1 to 9

ENABLE, DISABLE

SELECT OUTPUT

Selects the image output terminal for which the blind setting is to be enabled.

OFF: Disables the covert setting.

SPOT OUT, MONITOR OUT, SPOT + MONITOR OUT:

Enables the settings for selected output terminal.

PLAYBACK PERMISSION

Sets whether or not to permit the playback of inputs for which the COVERT CHANNEL setting has been enabled.

OFF, ON

3. Press the [SET] button.

- The confirmation screen will be displayed.

4. Select [SAVE] with the [◀/▶] keys, and then press [SET].

* Images will be recorded even when the COVERT CHANNEL settings are activated.

COVERT CHANNEL (WEB)


Sets whether or not the screen is to be displayed in black without the camera inputs being displayed when watching live images on a personal computer.

(Page 69 “Viewing Live Images Using a PC”

Page 73 “Viewing Playback Image Using a PC”)

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MONITOR] → [COVERT CHANNEL] → [COVERT CHANNEL (WEB)] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

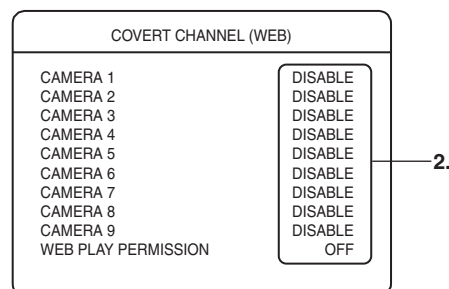

2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [–/+].

Settings

CAMERA 1 to 9

ENABLE, DISABLE

WEB PLAY PERMISSION

Sets whether or not to permit recorded images to be played back on a personal computer.

OFF, ON

3. Press the [SET] button.

- The confirmation screen will be displayed.

4. Select [SAVE] with the [◀/▶] keys, and then press [SET].

* Images will be recorded even when the COVERT CHANNEL (WEB) settings are activated.

Recording Camera Images

Types of Recording

Normal Recording

The normal recording mode is operated as follows in accordance with the [TIMER/MODE (REC PATTERN)] setting made on the [RECORD SETUP] screen (See page 30), and the ON/OFF setting for the [TIMER/MODE].

Table #1: Normal Recording Mode

	TIMER/MODE (REC PATTERN)	
	PROGRAM TIMER	REC PATTERN 1 to 9
TIMER/MODE OFF (indicator extinguished)	STANDARD Mode	STANDARD Mode
TIMER/MODE ON (indicator illuminated)	Timer Recording	REC PATTERN Mode

■ Standard Mode

- Performs recording with the STANDARD Mode.
- Recording is started and stopped with the [REC/STOP] buttons. (See page 29)
- Recording is started and stopped with the [EXT REC IN] terminal. (See page 29)

■ REC PATTERN Mode

- Performs recording with the REC PATTERN mode settings established with [TIME/MODE (REC PATTERN)]. (See page 30)
- Recording is started and stopped with the [REC/STOP] buttons. (See page 29)
- Recording is started and stopped with the [EXT REC IN] terminal. (See page 29)

Timer Recording

- Performs recording with the settings specified for WEEKLY TIMER and DATE TIMER.
 - WEEKLY TIMER settings. (See page 38)
 - DATE TIMER settings. (See page 39)
- Operations are not possible with the [REC/STOP] buttons or the [EXT REC IN] terminal.

Alarm Recording

Alarm recording is started when signals are input or motion is detected in the pause mode, and during normal recording and timer recording.

The following three types of alarm recording are available:

■ Emergency Recording

- Recording is started when a signal is input to the [EMERGENCY] terminal. (See page 33)

■ Passcode Error Recording (See page 30)

■ Alarm Recording (Signal input terminal)

- Recording is started when a signal is input to the [ALARM IN] terminal. (See page 33)

■ Alarm Recording (Motion Detection)

- Recording is started when motion is detected on the image. (See page 33)

Recording Priority

A sequence of priority exists for recording. Recording for a high-priority setting will be started midway through recording for low-priority settings.

1. Emergency recording
2. Passcode error recording
3. Alarm recording (signal input terminal, motion detection)
4. Date timer recording
5. Weekly timer recording
6. Normal recording

Making Normal Recordings

STANDARD MODE

1. Set up the **RECORD SETUP** parameters. (See page 30)
2. Set the normal recording parameters with **STANDARD MODE**. (See page 31)
3. Check to confirm that the indicator for **TIMER/MODE** is extinguished.

- **Press the [REC/STOP] button.**
 - Recording will be started.
- **Press the [REC/STOP] button for approximately two consecutive seconds.**
 - Recording will be stopped.

REC PATTERN 1 to 9

1. Set up the **RECORD SETUP** parameters. (See page 30)
The desired REC PATTERN mode can be set with the [TIMER/MODE (REC PATTERN)] setting on the [RECORD SETUP] screen (select from REC PATTERN 1 to 9.)
2. Set the normal recording parameters with **[REC PATTERN 1 to 9]**. (See page 31)
3. Press **[TIMER/MODE]**.
 - The **TIMER/MODE** indicator will be illuminated.

- **Press the [REC/STOP] button.**
 - Recording will be started in accordance with each normal mode setting.
- **Press the [REC/STOP] button for approximately two consecutive seconds.**
 - Recording will be stopped.

MEMO

- The contents from the start to the end of recording are saved on the hard disk as a single event.
- The [REC] indicator on the front panel will be illuminated during recording if the [REC INDICATOR] setting on the [OPERATION] screen is set at "ON".
- It is possible to set the operations that are to be performed when the hard disk runs out of space with the [REPEAT REC] setting on the [OPERATION] screen. When the [REPEAT REC] setting is set at "ALARM LOCK" or "ALL", recordings will be written over the oldest recordings to enable operations to continue. (See "Operation Setup" on page 32)

Making Normal Recording with the EXT REC I/O Terminals

Enables the start and stop operations when recording to be controlled by signals input to the [EXT REC IN] terminal on the rear panel, instead of the [REC/STOP] button.

1. Set the **[EXT REC IN]** setting to **[TRIGGER]** or **[MANUAL]**. (See page 49)

- **When the [EXT REC IN] is set at [TRIGGER]**
 - Normal recording is started when the [EXT REC IN] terminal is just set to MAKE state.
 - If the terminal is in OPEN state, normal recording is continued.
 - Press the [REC/STOP] button for approximately two consecutive seconds to stop recording.
- **When the [EXT REC IN] is set at [MANUAL]**
 - Normal recording is executed while the [EXT REC IN] terminal is in MAKE state.
 - Recording is stopped when the [EXT REC IN] terminal is in OPEN state.
 - Press the [REC/STOP] button for approximately two consecutive seconds to stop recording.

Recording Status Notification

The status of the recording can be examined during recording with the use of the indicator lamps and the signals output from the [REC OUT] terminal.


- Setting the operations for the recordings indicators. (See page 32)
- Setting the [REC OUT] terminal. (See page 49)

Recording Camera Images

Setting up the RECORD SETUP

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in MENU Screen Operations (page 17) in the sequence of [MENU] → [RECORD SETUP].

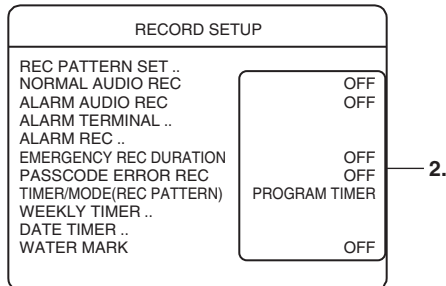

2. Select your desired item with [▲/▼], and then change the setting with [–/+].

Settings

NORMAL AUDIO REC

- OFF: No audio signals recorded.
- ON: Audio signals recorded.
- * Audio sound will not be recorded when the frame rate per second is set at 0.08 or 0.2. (See page 31)
- (Page 45 “AUDIO OUT”)

ALARM AUDIO REC

- OFF: No audio signals recorded.
- ON: Audio signals recorded.

EMERGENCY REC DURATION

Sets the recording time when the EMERGENCY REC terminal is input.

- OFF: Not record.
- 30SEC, 1 MIN, 5 MIN, 10 MIN, 20 MIN:
records in the set duration.

CONTINUE: Continue recording until the user press the [ALARM RESET] button.

MANUAL: Continues recording while the signal is being input.

MEMO

The recording frame rate will be the total number of frames divided equally into the value entered for emergency recording when emergency recording (passcode error recording) is in operation (Total frame count: See “Restrictions on the Settings for Frame Rate” page 31).

PASSCODE ERROR REC

Sets whether recording is to be carried out or not when an illegal passcode has been detected. Recording will be started with the same settings as [EMERGENCY] recording. However, it is not possible to forcibly stop recording by pressing the [CANCEL] button.

OFF: Recording not started when the wrong passcode is entered.

10 SEC, 20 SEC, 30 SEC:

Starts recording only to the period of time set when the wrong passcode is entered.

(Page 54 “Pass Code Setup”)

TIMER/MODE (REC PATTERN)

PROGRAM TIMER:

Records according to weekly program timer and daily program timer.

REC PATTERN 1-9:

Records according to the respective REC PATTERN setting.

WATER MARK

The tampering detection signal will be recorded on the image.

OFF: The WATER MARK function is deactivated.


ON: The WATER MARK function is activated.

- * Special replay software is required for the tampering detection function.

Setting the REC PATTERN SET

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in MENU Screen Operations (page 17) in the sequence of [MENU] → [RECORD SETUP] → [REC PATTERN SET].

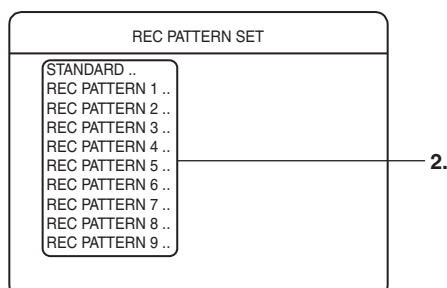

2. Select your desired pattern with [▲/▼], and then press the [SET] button.

- The “STANDARD” or “REC PATTERN” screen will be displayed.
- The amount of time that recording is possible in accordance with the set parameters will be displayed on the bottom line.

The amount of time recording is possible with the remaining hard disk capacity will be displayed when the [REPEAT REC] parameter is set at “OFF”. The amount of time recording is possible with the total capacity of the hard disk will be displayed when the [REPEAT REC] parameter is set at “ALL” or “ALARM LOCK”.

3.			4.		
STANDARD					
NORMAL REC		ALARM REC		M.DET	
F.RATE(ips)	QLY	F.RATE(ips)	(AUTO) QLY		
CAM 1	8.3 N	—	—	—	
CAM 2	8.3 N	—	—	—	
CAM 3	8.3 N	—	—	—	
CAM 4	8.3 N	—	—	—	
CAM 5	8.3 N	—	—	—	
CAM 6	8.3 N	—	—	—	
CAM 7	8.3 N	—	—	—	
CAM 8	8.3 N	—	—	—	
CAM 9	8.3 N	—	—	—	
RECORDABLE HOUR			42h		

* The above is an example of STANDARD.

3. Select “NORMAL REC” items with [▲/▼/◀/▶], and set the frame count and resolution with [–/+].

Settings

F.RATE (Frame Rate)

0.08, 0.2, 0.4, 0.8, 1.7, 2.5, 5, 8.3, 12.5, 25:

Sets the number of frames (images) to be recorded per second.

---: Does not record.

QLY

H (High): High quality recording
 N (Normal): Normal quality recording
 B (Basic): Basic quality recording
 L (Lowest): Lowest quality recording

4. Select “ALARM REC” items with [▲/▼/◀/▶], and then set “QLY” “F.RATE” or “M.DET” with [–/+].

Settings

F.RATE (Frame Rate)

0.8, 1.7, 2.5, 5, 8.3, 12.5, 25:

Sets the number of frames (images) to be recorded per second.

---: Does not record

(AUTO): Records with the highest frame count possible when there are no effects from other inputs.

Highest frame count: The maximum frame count that can be used for recording divided equally.

A guide to the estimated recordable frame rate is displayed on the right-hand side of the “(AUTO)” when all alarm recordings have been started.

QLY

H (High): High quality recording
 N (Normal): Normal quality recording
 B (Basic): Basic quality recording
 L (Lowest): Lowest quality recording

M.DET (Motion Detect)

Sets the motion detect sensitivity.

OFF: Disables the motion detect mode.

NORM: Detects the motion detect sensitivity in normal mode.

USER: Detects the motion detect sensitivity in free mode.

DOOR H, DOOR L, HALL H, HALL L, CHECK H, CHECK L, ATM H, ATM L, LOBBY H, LOBBY L, GATE H, GATE L, PARK H, PARK L, DARK H, DARK L, ELEVATR, COUNTER:

Detects the motion detect sensitivity in set mode.

* See page 35 for more details.

5. Press the [SET] button.

- A confirmation screen will be displayed.

6. Select “SAVE” with [◀/▶], and then press the [SET] button.

Restrictions on the Settings for Frame Rate

- It is necessary to ensure that the total number of frames shown below in (1) to (3) are set so that they do not exceed 100 (or 50). The total number of frames are 100 when the [PRIORITY] setting on the [CAMERA SETUP-1] screen (See page 20) is set at [SMOOTH], and 50 when it is set at [HIGH-RESOLUTION].

(1) Total number of frames during normal operations.

(2) Total number of frames during alarm recording.

(3) Total number of frames of either each camera, normal operations or alarm operations, whichever is the largest.

Setting the REC PATTERN SET (continued)

Procedure for Changing the Number of Cameras

- 1. Take a note of all the [REC PATTERN SET] data settings (F.RATE, QLY and M.DET on NORMAL REC/ALARM REC) when [STANDARD] or [REC PATTERN 1 to 9] is in use.
- 2. Amend the setting for the number of operation cameras with [CAMERA SETUP] as explained on page 20.
- 3. When the [CAMERA SETUP] parameters have been amended with procedure 2, reset the [REC PATTERN SET] data settings.
 - * It is recommended that the original data is backed up onto a USB memory or other storage device before the settings are temporarily changed.

Operation Setup (RECOVERY REC, REC INDICATOR, REPEAT REC)

- 1. Press the [MENU] button.
 - The [MENU] → [OPERATION MENU] → [ONSCREEN/ OPERATION] → [OPERATION] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

OPERATION	
RECOVERY REC	PRIOR STATE
REC INDICATOR	ON
REPEAT REC	ALL
OPELOCK RELEASE	BASIC
OPERATION LOCK	REC STOP
REC STOP	OFF
PLAY	OFF
CHANGE SETTING	OFF
CHANGE MONITOR	OFF
OPERATION	OFF
DVD	OFF

- 2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [−/+].

Settings

RECOVERY REC

Sets whether or not to perform recovery recording after a power failure.

OFF: Remains at OFF.

COMPULSION REC: Normal recording is started.

PRIOR STATE: Recording is started in accordance with the same settings prior to the power failure only when recording was being carried out before the power failure occurred.

* Recording will be carried out in accordance with the timer settings during timer operations.

REC INDICATOR

Sets whether or not to illuminate the recording indicator during recording.

OFF: Not illuminated.

ON: Illuminated.

REPEAT REC

Sets the operations to be carried out when the hard disk runs out of space.

OFF: Recording is stopped.

ALARM LOCK:

Recording is continued while overwriting old recordings. However, the alarm recording (including emergency and passcode error recording) will not be overwritten.

ALL: Recording is continued while overwriting all old recordings.

* Details on REPEAT REC are explained on page 104.

- 3. Press the [SET] button.
 - The confirmation screen will be displayed.

- 4. Select “SAVE” with [◀/▶], and then press the [SET].

ALARM Recording

Alarm recording is started when signals are input and when motion is detected in the STOP mode and during normal recording and timer recording.

Emergency Recording

1. **Connect the [EMERGENCY] terminal to the alarm device.**
2. **Setting the [RECORD SETUP] screen. (Page 30)**
Set the [EMERGENCY REC DURATION] setting to anything other than "OFF".
3. **Setting for the alarm terminal. (Page 33)**
Select the camera that is to be used for emergency recording with the [EMERGENCY REC] setting.
4. **Setting for the alarm recording. (Page 34)**
Set the emergency recording time with the [DURATION] setting.
■ Recording is started when a signal is input to the [EMERGENCY] terminal.

Alarm Recording (Alarm Input Terminal)

1. **Connect the [ALARM IN] terminal to the alarm device.**
2. **Setting the [RECORD SETUP] screen. (Page 30)**
Set whether alarm audio recording is to be activated or not with the [ALARM AUDIO REC] setting.
3. **Setting the [REC PATTERN SET] screen. (Page 31)**
Set the [F.RATE (ips)] setting for [ALARM REC] to anything other than "---".
4. **Setting for the alarm terminal (Page 33)**
Select the camera that is to be activated for the alarm input terminal.
5. **Setting for the alarm recording (Page 34)**
Set whether the alarm recording time and pre-alarm recording time are to be activated or not.
■ Recording is started when a signal is input to the [ALARM IN] terminal.


Alarm Recording (Motion Detection)

1. **Setting the [RECORD SETUP] screen. (Page 30)**
Set whether alarm audio recording is to be activated or not with the [ALARM AUDIO REC] setting.
2. **Setting the [REC PATTERN SET] screen. (Page 31)**
 - Set the [F.RATE (ips)] setting for [ALARM REC] to anything other than "---".
 - Set the [M.DET] setting to anything other than "OFF".
3. **Setting for the alarm recording. (Page 34)**
 - Set whether the alarm recording time and pre-alarm recording time are to be activated or not.
 - Set the motion detection level. (Only the case of "USER")
4. **Setting for the motion detection area. (Page 37)**
■ Recording is started when motions is detected in the input image.

Setting the ALARM TERMINAL

1. Press the [MENU] button.

- The [MENU] → [RECORD SETUP] → [ALARM TERMINAL] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

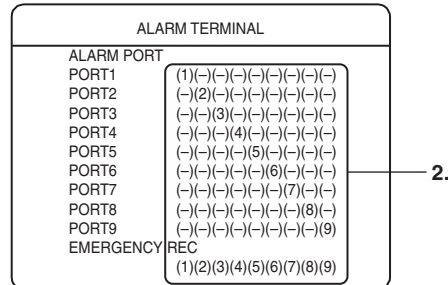

- The screen will display a matrix that shows the alarm input terminals on the vertical axis and the camera input on the horizontal axis.
- If a camera input number is displayed on the right-hand side of the port number when a signal is input to each of the alarm terminals it is enabled, and if "-" is displayed it is disabled.
- * The corresponding camera input can also be set up for the emergency recording terminal in the same way.

2. Select your desired item with the [▲/▼/◀/▶] keys, and then change the value of the setting with [-/+].

Settings

ALARM PORT ↔ Corresponding Camera

(1), (2), (3), (4), (5), (6), (7), (8), (9):

Recording of selected camera is started when a signal is input to the terminal.

(-): Recording is not started even when signals are input to the terminal.

3. Press the [SET] button.

- The confirmation screen will be displayed.

4. Select [SAVE] with the [◀/▶] keys, and then press [SET] button.


MEMO

- The [ALARM] indicator on the front panel will be illuminated during alarm recording and emergency recording. This will then blink when recording has finished.
- A buzzer will sound during alarm and emergency recording if the [ALARM] setting on the [BUZZER] screen is set at "ON". (See page 49)
- Alarm recording and emergency recording will not be carried out when the setup menu is being displayed.
- The recording frame rate will be the total number of frames divided equally into the value entered for emergency recording when emergency recording (passcode error recording) is in operation (Total frame count: See page 31).

Recording Camera Images

Setting the ALARM Recording

1. Press the [MENU] button.
- The [MENU] → [RECORD SETUP] → [ALARM REC] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

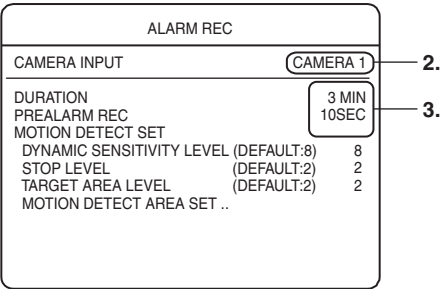

2. Select the camera input that is to be set up with [◀▶].
3. Select your desired item with the [▲▼] keys, and then change the value of the setting with [-/+].

Settings

DURATION

10 SEC, 15 SEC, 30 SEC, 1 MIN, 3 MIN, 5 MIN:

Alarm recording is performed only for the period of time set.

MANUAL: Recording is continued during the period a signal is being input.

PREALARM REC

OFF: Pre-alarm recording is not performed.

10 SEC, 30 SEC, 60 SEC:

Pre-alarm recording is performed for the period of time set.

4. Press the [SET] button.
- The confirmation screen will be displayed.
5. Select [SAVE] with the [◀▶] keys, and then press [SET] button.

- * Pre-alarm recording is only performed for alarm detection when ALARM REC has been set and recording is not being carried out at that time.
- Details on pre-alarm recording are explained on page 105.
- * Alarm recording (includes motion detection) will not be carried out when the setup menu is open.

Ending the ALARM Recording

Alarm recording is stopped when [ALARM RESET] button is pressed and when a signal is input to the [ALARM RESET] terminal during alarm recording (alarm input terminal, motion detection.)

Canceling the Alarm with the Button on the Front Panel

- Press [ALARM RESET] button during alarm recording.
 - Alarm recording will be stopped.

Canceling the Alarm with the Signal Input Terminal

- Input a signal to the [ALARM RESET] terminal during alarm recording.
 - Alarm recording will be stopped.
- * Set the frame rate for [ALARM REC] at anything other than "--" for [CAMERA SETUP-3] or [REC PATTERN SET] when alarm recording is to be carried out.
(Page 21, 31)
- * There are cases where the search time during playback will require additional time if the number of alarms is increased. It is recommended that the formatting process is carried out when the number of alarms exceeds 100,000.

Using the Motion Detection Function

There are two methods of performing motion detection: 1) with a pre-determined detection sensitivity, and 2) by freely setting detection sensitivity. It is also possible to set the area for which detection is to be carried out on the screen.

* Motion detection is not possible when operations are being carried out on the menu.

Motion Detection with Pre-Determined Sensitivity

Select either "NORM" or the scene name as the [M. DET] setting on the [REC PATTERN SET] screen to perform motion detection with a pre-determined set of parameters. The parameters for the scene name are shown in the table below.

Table #1: Motion Detect Parameters for Each Scene

Scene	Detailed Settings of Sensitivity		
	DYNAMIC SENSITIVITY LEVEL	STOP LEVEL	TARGET AREA LEVEL
NORM	8	2	2
USER	[1 to 10] 8: default*	[1 to 3] 2: default*	[1 to 10] 2: default*
DOOR H	9	1	1
DOOR L	8	3	2
HALL H	9	1	1
HALL L	8	3	2
CHECK H	9	1	1
CHECK L	8	3	2
ATM H	8	1	1
ATM L	7	3	3
LOBBY H	10	1	1
LOBBY L	9	3	2
GATE H	10	1	1
GATE L	9	3	3
PARK H	10	1	1
PARK L	9	3	3
DARK H	10	1	1
DARK L	10	3	2
ELEVATOR	9	2	1
COUNTER	7	2	2

* Default: The value set when the unit is shipped from the factory.

This can be selected from [DYNAMIC SENSITIVITY LEVEL], [STOP LEVEL] and [TARGET AREA LEVEL] on the [ALARM REC] setup screen (Page 34).

DYNAMIC SENSITIVITY LEVEL: (1 to 10)

The level value for detection. The higher the value, the higher the sensitivity.

STOP LEVEL: (1 to 3)

The offset value for the stop level of operation sensitivity. The larger the value, the more difficult to discontinue alarm detection.

TARGET AREA LEVEL: (1 to 10)

The value for the size of the subject to be detected. The higher the value, the more difficult to detect small motions.

The relationship between the target area level and the detection area count is shown in the table below.

Table #2: Target Area Level and Detection Area Count

Target Area Level	1	2	3	4	5
Detection Area Count	1	2	4	6	8
Target Area Level	6	7	8	9	10
Detection Area Count	10	15	20	25	30

MEMO

- The Target Area Level is the setting for determining movement in areas more than the number of detection areas count in Table #2.
- The setting for the Target Area Level cannot exceed the parameter setting for [MOTION DETECT AREA SET] on page 37. Select the relevant Target Area Level for the number of detection areas in Table #2.
- The number of alarms will increase when motion detection has been set to be carried out frequently. Note that this may result in alarm searches requiring additional time during playback.
- There are cases where motion detection will be mistakenly triggered owing to flickering fluorescent lights when the camera is connected. In this event, set the camera settings to flickerless.


Recording Camera Images

Motion Detection with Freely Determined Sensitivity Levels

When the [M. DET] value on the [REC PATTERN SET] screen is set at "USER", it is possible to set the sensitivity for [DYNAMIC SENSITIVITY LEVEL], [TARGET AREA LEVEL] and [STOP LEVEL]. These settings have no effect if anything other than [USER] has been specified.

1. Press the [MENU] button.

- The [MENU] → [RECORD SETUP] → [ALARM REC] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

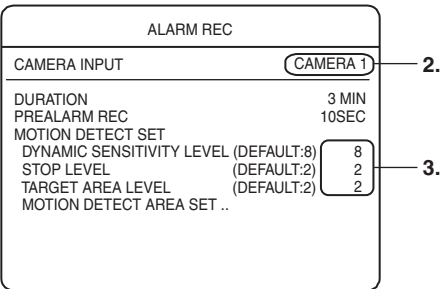

2. Select the camera input that is to be set up with [◀/▶] keys.

3. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [-/+].

Settings

DYNAMIC SENSITIVITY LEVEL

The level value for detection. The higher the value, the higher the sensitivity.

Setting Range:
1 (low sensitivity) to 10 (high sensitivity)

STOP LEVEL

The offset value for the stop level of operation sensitivity. The larger the value, the more difficult to discontinue alarm detection.

Setting Range:
1 to 3

TARGET AREA LEVEL

The level value for the size of the subject to be detected. The higher the value, the more difficult it is to detect small motions.

Setting Range:
1 (small) to 10 (large)

4. Press the [SET] button.

- The confirmation screen will be displayed.

5. Select [SAVE] with the [◀/▶] keys, and then press [SET] button.

About Manual Setup


Use the manual settings if the desired level of detection is not attained with STANDARD or other scenes. These three parameters should be determined after referring to [Table #1: Motion Detect Parameters for Each Scene] and [Table #2: Target Area Level and Detection Area Count] on page 35.

Setting the MOTION DETECT AREA SET

Sets up the area for motion detection. This setting is applicable for when both [USER] and any other parameter has been selected for the sensitivity level.

1. Press the [MENU] button.

- The [MENU] → [RECORD SETUP] → [ALARM REC] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

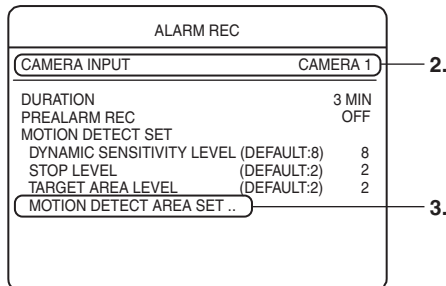

2. Select the camera input that is to be set up with [◀/▶] keys.

3. Select [MOTION DETECT AREA SET] with the [▲/▼] keys, and then press [SET] button.

- The [MOTION DETECT AREA SET] screen will be displayed. The screen will be divided by 16 x 12 to make a total of 192 areas. Each of these areas can be enabled or disabled.



The current enabled area will be displayed in blue.

* The cursor is located at the top left-hand area.

4. Select the desired area with the [▲/▼/◀/▶] keys, and then switch between Enabled/Disabled with [-/+].

- Press [+] to enable the area and display it in blue. Press [-] to disable the area.
- Press [+] while holding down the [FUNCTION] button to enable all areas. Press [-] while holding down the [FUNCTION] button to disable all areas.

5. Press the [SET] button.

- A confirmation screen will be displayed if the motion detection area has been changed with procedure 4. In this event, proceed to procedure 6.
- A motion detection check screen will be displayed if the motion detection areas have not been amended. (See Motion Detection Check Mode on page 37)


6. Select [SAVE] on confirmation screen with the [◀/▶] keys, and then press the [SET] button.

- This completes the motion detection area registration procedure.
- Press the [RETURN] button to return to the previous screen.

Motion Detection Check Mode

The Motion Detection Check screen will be displayed when [SET] button is pressed on the [MOTION DETECT AREA SET] screen.

Motion Detection Check screen

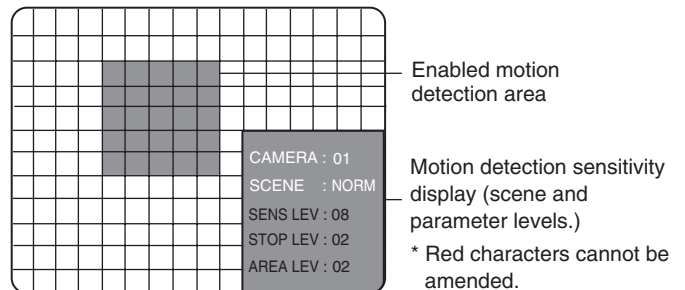


1. Press the [-/+] keys to select the motion detection sensitivity.

2. Press the [SET] button to check motion detection.

The color of the circle at the top left-hand side of the check screen is set in accordance with the following conditions:

Red: Motion detection operate

Gray: Motion detection not operate

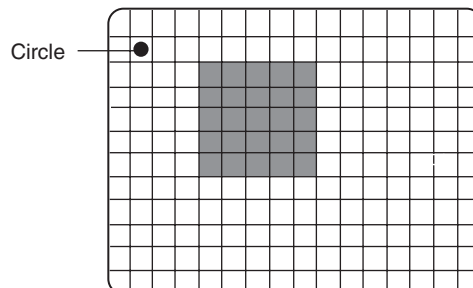

3. Press the [RETURN] button to return to the [MOTION DETECT AREA SET] screen.

* If motion detection fails, press the [SET] button to display the Motion Detection Check screen and repeat steps 1 through 3 above to perform the check once again.

- Press the [RETURN] button to return to the previous screen.

- * Check to ensure that a setting that allows motion detection to be carried out is set for the [REC PATTERN] and [Motion Detection Set (Scene and Level Set)] parameters. (See M.DET on page 31)
(See Motion Detection with Freely Determined Sensitivity Levels on page 36)

CAUTION

Motion detection is not possible if the number of motion detection areas is less than the Detection Area Count set for the Target Area Level in Table #2 of page 35.

WEEKLY TIMER

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in MENU Screen Operations (page 17) in the sequence of [MENU] → [RECORD SETUP] → [WEEKLY TIMER].

The screenshot shows the 'WEEKLY TIMER' menu. At the top, there are five columns labeled 2, 3, 4, 5, and 6. Column 2 is 'START' with a cursor on 'SUN'. Column 3 is 'END' with a cursor on 'SUN'. Column 4 is 'MODE' with a cursor on 'SUN'. Column 5 is 'EXEC' with a cursor on 'SUN'. Column 6 is 'REC DATE SET' with a cursor on 'SUN'. Below these columns is a row of days: SUN, MON, TUE, WED, THU, FRI, SAT. A cursor is on 'SUN'. Below this row is a row of days: SUN, MON, TUE, WED, THU, FRI, SAT. A cursor is on 'SUN'. A callout 7 points to the 'EXEC' column. A callout 8 points to the 'REC DATE SET' row.

2. Set the starting day.

3. Set the starting time.

4. Set the ending day.

5. Set the ending time.

6. Select the "MODE".

7. Select "EXEC".

8. Set the day of recording.

(By setting "DAY" for the starting day, it is possible to select RECORD/NOT RECORD for every day of the week.)

- * Press the [CANCEL] button to delete the settings.

Buttons Used for Procedures 2. to 8.

[▲/▼/◀/▶]: Selecting an item.

[-/+]: Changing the value settings.

Settings

"START" Day

SUN, MON, TUE, WED, THU, FRI, SAT:

Sets the day on which recording is to start.

DAY: When recording daily. You can set the recording day of the week in combination with the [REC DATE SET], such as Mon through Fri., etc.

"START" Time

00:00 to 23:59: Sets the time at which recording is to start.

"END" Day

SUN, MON, TUE, WED, THU, FRI, SAT:

Sets the day on which recording is to end.

"END" Time

00:00 to 23:59: Sets the time at which recording is to end.

MODE

STANDARD, REC PATTERN 1 to REC PATTERN 9:

Selects the appropriate setting from among multiple recording settings. (See REC PATTERN SET on page 31)

EXEC

OFF: Timer not executed.

ON: Executes once, and then changes to "OFF".

WEEK: Executes the timer every week.

- * When the starting day has been set to "DAY" note that only "ON" and "OFF" can be selected for this parameter. When "ON" has been selected, the timer will be executed on a constant basis.

REC DATE SET

Sets the day of the week to be recorded when "DAY" has been selected for the starting day.

- The desired day of the week, "MON", etc. will be recorded.
- "—" is displayed for days on which recording is not activated.

9. Press the [SET] button.

- A confirmation screen will be displayed.

10. Select [SAVE] with [◀/▶], and then press the [SET] button.

- * If an incorrect parameter is set, a message will be displayed on screen and it will be impossible to move the cursor up or down or escape from the screen. In this case, either press the [CANCEL] button and reset the parameter, or re-enter the correct parameter.

See page 39 for details on the operations required for timer recording and for the timer standby mode.

MEMO

- When the WEEKLY TIMER and the DATE TIMER have both been set for operation, the priority is given to the DATE TIMER. (See page 28)
- When the program timer has been set to start up at the same time, the priority is given to the setting higher up the list.
- When multiple program timers have been set, the priority is given to the first time to start, and this setting is stored until time recording has finished. However, if two or more program timers have been registered after recording has finished, the priority is given to the setting higher up the list, regardless of the starting time.

DATE TIMER

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in MENU Screen Operations (page 17) in the sequence of [MENU] → [RECORD SETUP] → [DATE TIMER].

The diagram shows the DATE TIMER screen layout with numbered steps:

- 2.** Points to the START field (DD/MM).
- 3.** Points to the END field (DD/MM).
- 4.** Points to the MODE field.
- 5.** Points to the EXEC button.
- 6.** Points to the list of recording days (1-16).

Screen fields include: DATE TIMER, START, END, MODE, EXEC, DD/MM, and a list of days 1-16.

2. Set the starting time.

3. Set the ending time.

4. Select the “MODE”.

5. Select “EXEC”.

6. Select the day of recording.

The Buttons Used for Procedures 2. to 6.

[▲/▼/◀/▶]: Selecting an item.

[+/-]: Changing the value settings.

Settings

“START” Time

00:00 to 23:59: Sets the time at which recording is to start.

“END” Time

00:00 to 23:59: Sets the time at which recording is to end.

MODE

STANDARD, REC. P1 to REC. P9:

Selects the appropriate setting from among multiple recording settings. (See REC PATTERN SET on page 31)

EXEC

OFF: Timer not executed.

ON: Executes the timer every year.

Recording Day

JAN 1 to DEC 31: Sets the date of recording.

7. Press the [SET] button.

- A confirmation screen will be displayed.

8. Select [SAVE] with [◀/▶], and then press the [SET] button.

- * If an incorrect parameter is set, a message will be displayed on screen and it will be impossible to move the cursor up or down or escape from the screen. In this event, either press the [CANCEL] button and reset the parameter, or re-enter the correct parameter.

Activating the Timer Recording Mode

1. Set the [TIMER/MODE (REC PATTERN)] setting on the [RECORD SETUP] screen to “PROGRAM TIMER”. (See page 30)

2. Press the [TIMER/MODE] button on the front panel to illuminate the TIMER/MODE indicator.

- The system will enter the timer standby mode.
- Performs recording with the setting specified for WEEKLY TIMER or DATE TIMER.

■ The following operations are not possible when in the timer standby mode:

- Operations OFF.
- Operations OFF with the signal I/O terminals.
- Recording with the [REC/STOP] button or the [EXT REC IN] terminal.
- Timer program amendments.

If the above operations are required, press the [TIMER/MODE] button to cancel the timer standby mode (the TIMER/MODE indicator will be extinguished.)

MEMO

When the WEEKLY TIMER or DATE TIMER are in use, stop recording temporarily and then activate the timer standby mode.

The STOP mode cannot be activated when moving from the recording status into the timer standby mode directly. There are cases where recording is continued, depending on the [REC PATTERN SET] settings.


Playing Back Recorded Images

Playing Back Images

Plays back recorded images. This is activated by running a search according to the date of the image to be played back using [SEARCH DATE] (See page 43) or in accordance with the time when alarm signals are received using the [ALARM LIST SEARCH] feature. (See page 42)

1. Press the [PLAY/PAUSE] button.

- The [EVENT SEARCH] screen will be displayed.

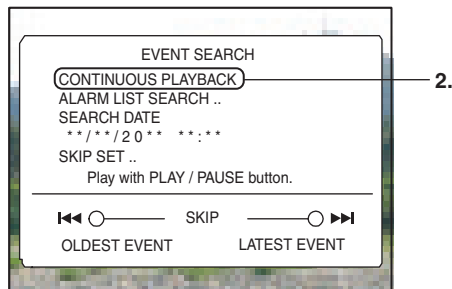

2. Select [CONTINUOUS PLAYBACK] with [▲/▼], and then press the [SET] button.

- Playback will be started.

Pausing during Playback

3. Press the [PLAY/PAUSE] button.

- Playback will be paused.
- Press the [PLAY/PAUSE] button again to resume playback.

Ending Playback

4. Press the [PLAY STOP] button.

- The screen will return to the [EVENT SEARCH] screen.

5. Press the [PLAY STOP] button once again.

- The [EVENT SEARCH] screen will close.

Playing Back during Recording (Simultaneous Playback Mode)

It is possible to view recorded images when in the Recording mode.

This will not affect the images being recorded.

1. Press the [PLAY/PAUSE] button during recording.

- Images can be played back with the normal operations even when recording is in progress.

■ The following modes of playback are possible when in the Simultaneous Playback mode:

- Normal playback
- Search Date (Page 43 “Searching for Images According to Date/Time”)
- Jog/Shuttle Playback (Page 43 “Adjusting Playback Speed”)
- Skip Playback (Page 44 “Skipping Recorded Images”)


CAUTION

- There are cases where playback images are displayed after a delay when playback is activated at the same time as recording, but this has no adverse effects on the recording.
- In order to ensure that the hard disk is kept in its optimal status, the VR-509 will periodically enter the maintenance mode automatically. When maintenance is in progress there are cases where the audio sound may break up or the images be displayed after a delay during playback. In this case, wait until the “MAINTENANCE PROCEEDING” message has disappeared before restarting playback.
- There are cases where images that have been recorded close to the most recent recording time cannot be played back normally if recorded images are viewed during recording. In this case, stop the playback for a few moments, and then start it again.
- There are cases where images recorded close to the times of power failures will not playback normally.
- The VR-509 uses a special recording method that may result in a loss of synchronization between the images and the audio sound, depending on the setup conditions.

Switching between Playback Screens


The VR-509 is equipped with features to playback images on single screens and split screens.

* Sequential display is not possible during playback.

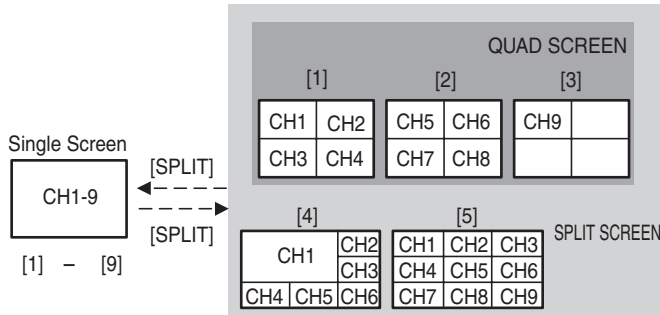

Single Screen

 - The SPLIT indicator and the SEQUENCE indicator are both extinguished.



- Press buttons [1] to [9] to switch to the required camera input.
- Press the [SPLIT] button to divide the screen into “9 WAY” screens.

SPLIT Screen

- The SPLIT indicator will be illuminated, and the SEQUENCE indicator will be extinguished.

- Press [1] to display the “QUAD-A” screen.

CAM 1	CAM 2
CAM 3	CAM 4

- Press [2] to display the “QUAD-B” screen.

CAM 5	CAM 6
CAM 7	CAM 8

- Press [3] to display the “QUAD-C” screen.

CAM 9	

- Press [5] to display the “9 WAY” screen.

CAM 1	CAM 2	CAM 3
CAM 4	CAM 5	CAM 6
CAM 7	CAM 8	CAM 9


- * The screen layout for the split screens are set on the “LIVE PICTURE” screen. (Page 23)
- * The position of the border will differ slightly with live images and playback images.
- * The “6 WAY” cannot be activated even if the [4] button is pressed when the split-screen mode is in use. The “9 WAY” screen will be activated in this case.

- Press the [SPLIT] button to display the single screen.

Searching with the Alarm List


1. Press the [PLAY/PAUSE] button.

- The [EVENT SEARCH] screen will be displayed.

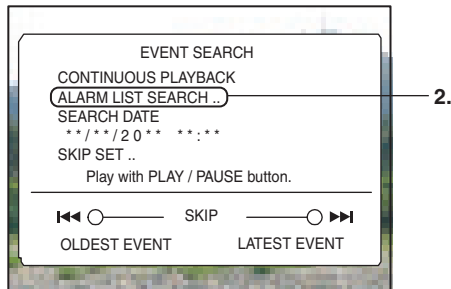

2. Select [ALARM LIST SEARCH] with [▲/▼], and then press the [SET] button.

- The [ALARM LIST SEARCH] screen will be displayed.

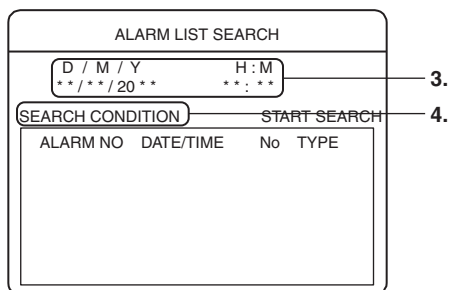


3. Select the year, month, day, hour and minutes with [◀▶], and then change the values with [-/+].

- Proceed to 4. to change the search conditions.
- Proceed to 8. if the search conditions are acceptable.

4. Select [SEARCH CONDITIONS] with [▲/▼/◀▶], and then press the [SET] button.

- The sub-window for entering the search conditions will be displayed.

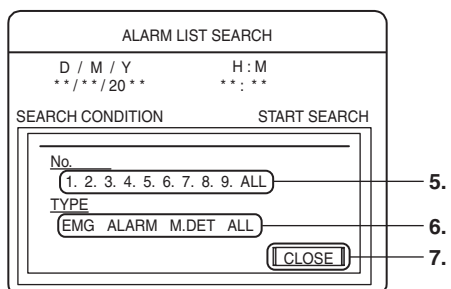

5. Select the camera input number to be retrieved with [◀▶], and then press the [SET] button.

- A mark will be set beside the selected camera input number.

6. Select the alarm type to be retrieved with [▲/▼/◀▶], and then press the [SET] button.

- A mark will be set beside the selected alarm type.


TYPE

- EMG: Emergency recording, Passcode error recording.
 ALARM: Alarm recording with the signal input terminal.
 M.DET: Alarm recording with motion detection.
 ALL: Emergency recording, Passcode error recording and all alarm recordings.

* The search will be run for all alarm types when the [TYPE] parameter has not been specified.


7. Select [CLOSE] with [▲/▼], and then press the [SET] button.

- The search condition entry sub-window will be closed.

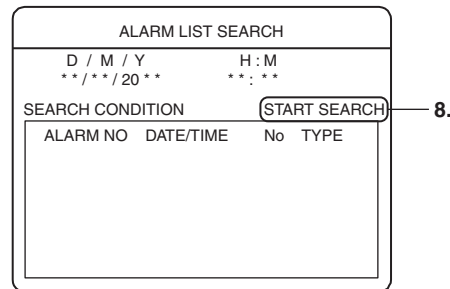

8. Select [START SEARCH] with [▲/▼/◀▶], and then press the [SET] button.

- A list of search results will be displayed.

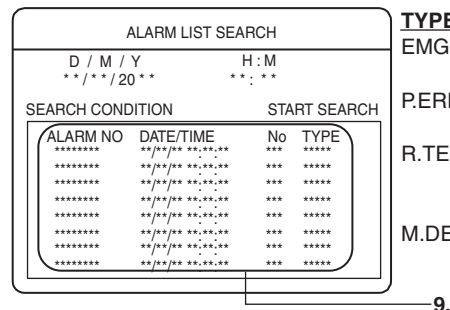

TYPE

- EMG: Emergency recording
 P.ERR: Passcode error recording
 R.TERM: Alarm recording with the signal input terminal.
 M.DET: Alarm recording with motion detection.


9. Select the date of the recorded image to be played back with [▲/▼], and then press the [SET] button.

- The alarm image selected will be played back.
- * Press the [-] button to jump to the oldest of 100 items of data. If the number of items remaining is less than 100, the oldest list will be displayed in the center. Press the [+] button to jump to the most recent of 100 items of data. If the number of items remaining is less than 100, the most recent list will be displayed in the center.
- * The cameras that are enabled for the [COVERT CHANNEL] setting will not appear in any search results. In this event, either make sure that the [SELECT OUTPUT] setting does not include [MONITOR OUT], or set [PLAY PERMISSION] to [ON] and run the search once again. (See page 27)
- * It will jump to the position for starting pre-alarm recording when pre-alarm recording exists. (See page 105 "Pre-alarm Recording")

Searching for Images According to Date/Time

1. Press the [PLAY/PAUSE] button.

- The [EVENT SEARCH] screen will be displayed.

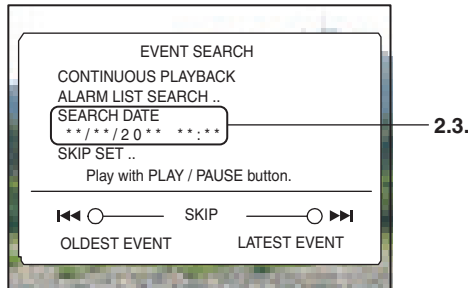

2. Select [SEARCH DATE] with the [▲/▼] keys.

3. Select the year, month, day, hour and minutes with [◀▶], and then change the values with [-/+].

4. Press the [PLAY/PAUSE] button.


- Playback will start from the search date and time.
- Playback will start from the nearest date and time in the event that no images have been recorded on the specified date.

Adjusting Playback Speed (Jog/Shuttle Playback)

Playback speed can be adjusted by turning the jog/shuttle dial. This feature is very useful when searching for a specific screen for viewing.

Rotating the Shuttle Dial

- Rotate the shuttle dial during playback to change the mode to fast forward, fast rewind and slow playback.

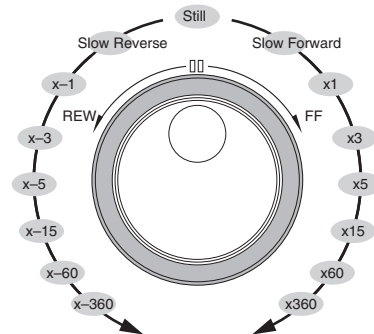

- * The playback speed indications when performing fast-forward and rewind operations by rotating the shuttle dial are merely guidelines. The speed will differ depending on conditions, such as the playback mode (split-screen, single-screen) and the recording mode (alarm recording, recording frame rate,) etc.
- * A guide to the slow reverse operations with the shuttle dial is listed below:
 - High-frame rate recording (25-frame recording) on a single-screen display: Slow playback at 12.5 frames.
 - Other modes on single-screen displays: All frames played back slowly.
 - Split-screen displays: Slow playback at 5 frames.

Rotating the Jog Dial

- Rotate the jog shuttle during playback, a single frame will be played back.
- Rotate the dial clockwise to playback a single frame in the normal direction.
- Rotate the dial counter-clockwise to playback a single frame in the reverse direction.
- Release the dial to pause.
However, there are cases where the images will continue moving even after jog dial rotation has been halted when single-frame playback is continued in the normal or reverse modes.

Ending Jog/Shuttle Dial Playback


- Press the [PLAY/PAUSE] button to return to (normal speed) playback.
- Press the [PLAY STOP] button to return to the EVENT SEARCH screen.

Playing Back Recorded Images

Skipping Recorded Images


1. Press the [PLAY/PAUSE] button.

- The [EVENT SEARCH] screen will be displayed.

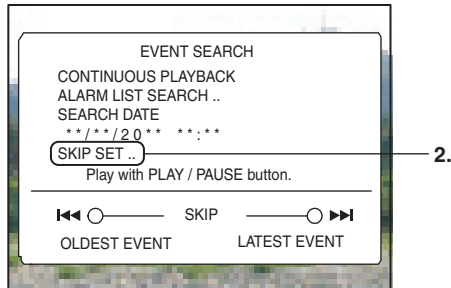

2. Select [SKIP SET] with [▲/▼], and then press the [SET] button.

- The [SKIP SET] screen will be displayed.

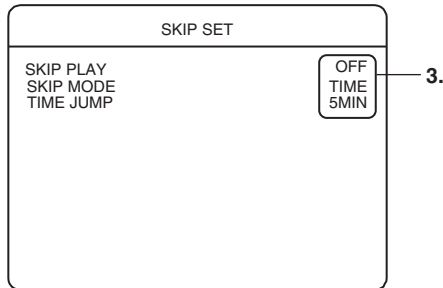

- * Skip playback is the repeated operation of Search → Playback → Search → Playback.

3. Select your desired item with [▲/▼], and then change the setting with the [-/+] keys.

Settings

SKIP PLAY

OFF: Disables the SKIP PLAY function.

1 SEC, 5 SEC, 10 SEC:

Playback is only carried out for the number of seconds set with this parameter, and the skip operations will be repeated in accordance with the conditions set for the [SKIP MODE].

SKIP MODE

TIME: Jumps for the duration specified with [TIME JUMP].

EVENT: Jumps to the record starting point (both NORMAL REC and ALARM REC.)

ALARM: Jumps to the ALARM REC starting point.
Jumps to the position for starting pre-alarm recording when pre-alarm recording exists.
(Page 105 “Pre-alarm Recording”)

TIME JUMP

1 MIN, 5 MIN, 10 MIN, 30 MIN, 1 HOUR, 4 HOURS, 1 DAY, 1 WEEK:

The duration of each jump when [TIME] has been specified for the SKIP MODE.

MEMO

See the section on “Skip Jump” on page 106 for details on skip operations.

4. Press the [SET] button.

- A confirmation screen will be displayed.

5. Select [SAVE] with [◀/▶], and then press the [SET] button.

6. Press [RETURN] to return to the [EVENT SEARCH] screen.

7. Select [CONTINUOUS PLAYBACK] to activate the playback mode.

8. Press the [SKIP] button during playback to jump to the previous or next image.

- * If the [SKIP] button is pressed while the [EVENT SEARCH] screen is displayed, the display will jump to the oldest or the latest image.
- * Depending on the monitor being used, there are cases where images will be distorted for a short period of time when switching between screens when display is being carried out in the split-screen mode.

Enlarging Images (Image Zoom)


Images can be viewed in an enlarged mode.
Only single-screen displays can be enlarged.

* Enlarged displays are not possible when live images are being displayed.


1. Start playback (See page 40 “Playing Back Images”)
2. Press buttons [1] to [9] to select the camera input that is to be enlarged.
3. Press the [PLAY/PAUSE] button.
 - Playback will be paused.
 - * It is possible to enlarge images during playback.

Double-Size Enlargement

4. Press the [1] to [9] buttons (the button pressed in 2.) for approximately two consecutive seconds.
 - The range of enlargement will be displayed on the screen.

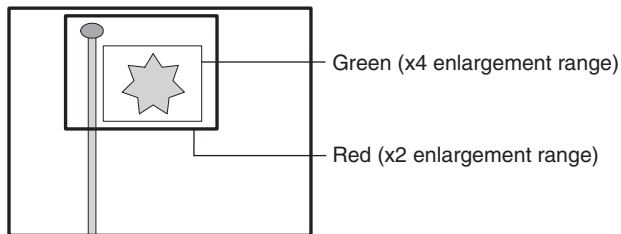


5. Move the range of enlargement with [▲/▼/◀/▶], and then press the [SET] button.
 - The selected area will be displayed at double the size.
 - Adjust the area being displayed with [▲/▼/◀/▶] if necessary.

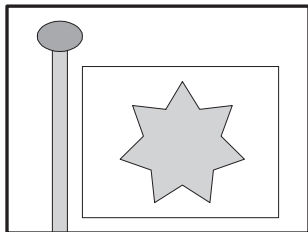

Four-Fold Enlargement

6. Press the [+] button.
 - The area will be displayed at four times the normal size.
 - Adjust the area being displayed with [▲/▼/◀/▶] if necessary.
 - Press the [-] button to return to the double-size display.

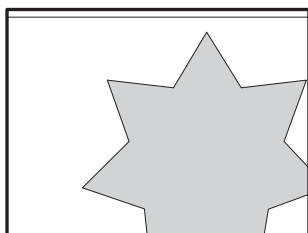


Ending the Enlarged Display

7. Press the [RETURN].
 - * If the [EVENT SEARCH] screen or the setup menu is displayed, the image zoom function will be ended and the image will return to its normal recorded size.

AUDIO OUT

Sets whether to link the AUDIO 1 or 2 to a specified input or not.
Or sets the input audio that was not specified for the AUDIO 1 link or AUDIO 2 link.

1. Press the [MENU] button.
 - Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MONITOR] → [AUDIO OUT].

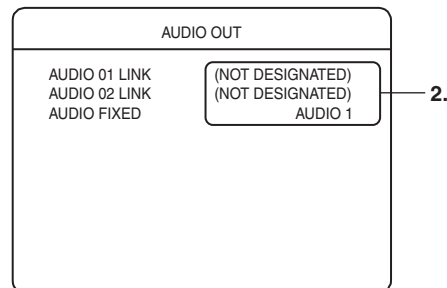

2. Select your desired item with [▲/▼], and change the setting value with [-/+].

Settings

AUDIO 01LINK

- (NOT DESIGNATED):The link is not specified.
- CAMERA 1-9: AUDIO 1 output.
- * Audio sound will be output when the single screen is displayed.

AUDIO 02LINK

- (NOT DESIGNATED):The link is not specified.
- CAMERA 1-9: AUDIO 2 output.
- * Audio sound will be output when the single screen is displayed.

AUDIO FIXED

- OFF: AUDIO not output.
- AUDIO1: AUDIO 1 is output.
- AUDIO2: AUDIO 2 is output.

3. Press the [SET] button.
 - A confirmation screen will be displayed.
4. Select [SAVE] with [◀/▶], and then press [SET].
 - * Audio sound will not be output when the frame rate per second is set at 0.08 or 0.2. (See F.RATE on page 31)
 - * There are cases where the audio sound may break up when parts that contain many alarms are played back, and during split-screen playback.

Useful Features

Changing the On-screen Display Position


As can be seen in the illustrations below, the VR-509's DATE/TIME, camera title and other elements can be displayed on the monitor screen. It is also possible to change their position on the screen.

- Set the display mode to live images on a single screen.
 - * The position of the display can only be changed when the single screen is displayed in the live image mode.
 - * It is possible to change the display position for each camera. Amend the positions for all cameras if necessary.

1. Press and hold the [FUNCTION] button and then press the [MENU] button.

- The on-screen display position adjustment mode will be activated.
- The "Date/time", "Disk capacity" and "Alarm" areas will be highlighted against a blue background.

DATE/TIME

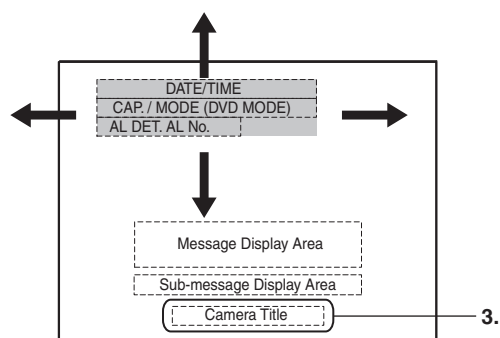

2. Press [▲/▼/◀/▶].


- The "Date/time", "Disk capacity" and "Alarm" areas will all move together.
- Do not move this sub-screen over the Message Display Area.
Warnings and other messages will be overlaid and difficult to read.

3. Selects the camera for the live display.

Press the [1] to [9] button while pressing down on the [FUNCTION] button.

- The live images for the selected camera will be displayed.
- The "Title" area will be highlighted against a blue background, and the display position adjustment mode will be activated.

TITLE

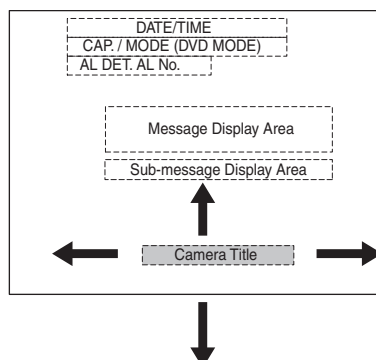

4. Press [▲/▼/◀/▶].

- Move the "Title" position to any preferred location.
- Do not move this sub-screen over the Message Display Area.
Warnings and other messages will be overlaid and difficult to read.
- * Press the [CANCEL] button to return it to its original location.

5. Press the [MENU] button for at least one second to display DATE/TIME position.

6. Press the [MENU] button for at least one second in the state of "DATE/TIME" display position.

- The on-screen display position will be set in the system and the screen will return to the normal display.


MEMO

The size of the characters on the camera title for "QUAD" screen displays are the same as for single-screen displays. The display positions are also relative to the single-screen displays.

Setting Camera Title

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MONITOR] → [CAMERA TITLE].

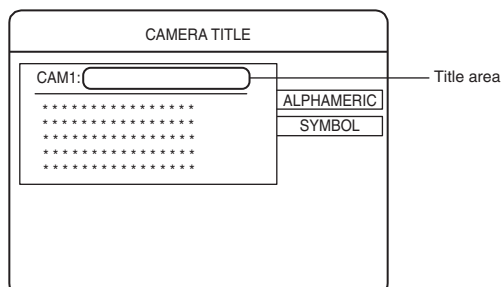


2. Press the [SEQUENCE] button to select the camera input that is to be set.

- The camera input selection will change whenever the [SEQUENCE] button is pressed.

3. Press the [SPLIT] button to select your desired type of characters for the input.

- The character types will change whenever the [SPLIT] button is pressed.

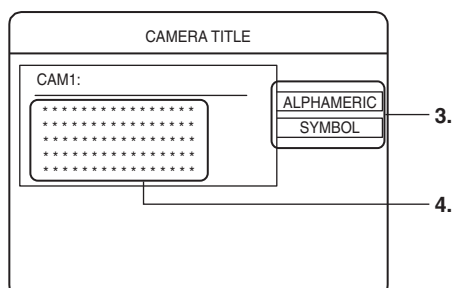

4. Select the characters with [▲/▼/◀/▶], and then press the [SET] button.

- One character (word) will be entered into the camera title.

5. Repeat procedures 3. to 4. until all camera titles have been entered.

- * Press the [-] or [+] keys to move the cursor on the title area backwards and forwards.

Maximum characters: 20

- * Note that the on-screen display will overlay the operation status marker when the maximum character count is used. In this event, set the [PLAYBACK] setting on the [ON-SCREEN MODE] screen to "OFF". (See page 25)

Deleting Characters

- To delete a character from the title, align the cursor with the relevant character and press the [CANCEL] button.

6. Press the [SEQUENCE] button after the camera title has been entered.

- The confirmation screen will be displayed.

7. Select [SAVE] and press the [SET] button to save the title.

- Proceed onto entering the next camera title.
- * Press the [CANCEL] button to return the title to its original status.

8. Press the [RETURN] button to return to the previous menu.

CAUTION

- If a connected camera is reset to "DISCONNECT", the camera title for that camera will no longer be displayed. The camera title will also not be displayed when images recorded previously are played back.
- When the camera title is amended midway through operations, the amended camera title will be displayed when images recorded prior to the amendment are played back.

Setting OPERATION LOCK

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [ONSCREEN/OPERATION] → [OPERATION].

OPERATION	
RECOVERY REC	PRIOR STATE
REC INDICATOR	ON
REPEAT REC	ALL
OPE LOCK RELEASE	BASIC
OPERATION LOCK	REC STOP
REC STOP	OFF
PLAY	OFF
CHANGE SETTING	OFF
CHANGE MONITOR	OFF
OPERATION	OFF
DVD	OFF

2. Select your desired item with [▲/▼], and then change the setting with [–/+].

Settings

OPE LOCK RELEASE

BASIC: Cancels the lock with button operation.

PASSCODE: Passcode input required to cancel lock.
(Page 54 “Pass Code Setup”)

- * Only “BASIC” can be set when nothing has been specified for the passcode. “PASSCODE” cannot be specified.

OPERATION LOCK

OFF: Disables the “OPERATION LOCK”.

REC STOP: Some of the button operations are prohibited.
(See table 4)

ALL: All of the button operations are prohibited.
(See table 4)

USER: User can set the button operation to be prohibited optionally. (See table 5)

Operation type:

REC STOP, PLAY, CHANGE SETTING, CHANGE MONITOR, OPERATION, DVD

Selections:

ON, OFF

3. Press the [SET] button.

- A confirmation screen will be displayed.

4. Select [SAVE] with [◀▶], and then press the [SET] button.

- * Menu setup is possible even when the operation lock has been activated when the [CHANGE SETTING] parameter on the [USER] settings has been set at “OFF”. However, the parameters related to the operation lock cannot be amended. Amendments to the operation lock settings can only be made after the operation lock has been cancelled.

Table 4: Buttons to be prohibited (REC STOP, ALL)

Front Button	REC STOP	ALL
[REC] [ALARM RESET]	DISABLE	DISABLE
[STOP] [PLAY/PAUSE] [SHUTTLE DIAL] [JOG DIAL] [SKIP]	ENABLE	DISABLE
[MENU]	DISABLE	DISABLE
[FUNCTION]	ENABLE	DISABLE
[KEYPAD 1-9] [SPLIT] [SEQUENCE]	ENABLE	DISABLE
[OPERATE] [TIMER/MODE]	DISABLE	DISABLE
[CANCEL]	ENABLE	DISABLE
[HDD(DVD)/0] [OPEN/CLOSE]	DISABLE	DISABLE

Table 5: Buttons to be prohibited (USER)


Front Button	Type
[REC] [ALARM RESET]	REC STOP
[STOP] [PLAY/PAUSE] [SHUTTLE DIAL] [JOG DIAL] [SKIP]	PLAY
[MENU] [FUNCTION]	CHANGE SETTING
[KEYPAD 1-9] [SPLIT] [SEQUENCE]	CHANGE MONITOR
[OPERATE] [TIMER/MODE] [CANCEL]	OPERATION
[HDD(DVD)/0] [OPEN/CLOSE]	DVD

- * The Type for the operation lock cannot be changed between ON/OFF when the operation lock has been set at ENABLE with the [USER] setting.

Buzzer Setup

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [ONSCREEN/ OPERATION] → [BUZZER] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

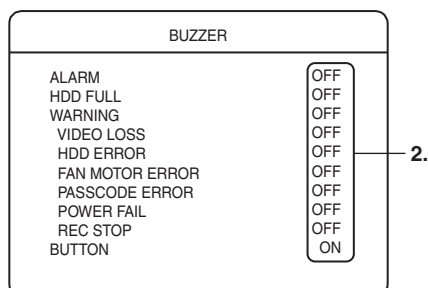

2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [–/+].

Settings

ALARM

OFF, ON

HDD FULL

OFF, ON

WARNING

OFF: The buzzer will not sound.

ALL: The buzzer will sound whenever any type of warning is issued.

USER: Selects whether or not to set the buzzer for sounding depending on the warning type.

Warning Types:

VIDEO LOSS, HDD ERROR, FAN MOTOR ERROR, PASSCODE ERROR, POWER FAIL, REC STOP

Selections:

OFF, ON

- * The buzzer will not sound even when the warning buzzer parameter has been set at "ON" if the [WARNING] setting on the [ON-SCREEN MODE] menu has been set at "OFF".
- * The buzzer will not sound even when the REC STOP buzzer parameter has been set at "ON" if the [REC TO STOP MESSAGE] setting on the [ON-SCREEN MODE] menu has been set at "OFF".

BUTTON

OFF, ON

3. Press the [SET] button.


- The confirmation screen will be displayed.

4. Select [SAVE] with the [◀/▶] keys, and then press [SET].

REAR TERMINAL

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [ONSCREEN/ OPERATION] → [REAR TERMINAL] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

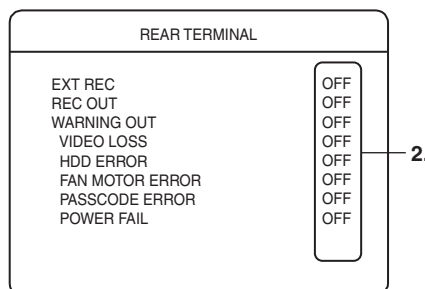

2. Select your desired item with the [▲/▼] keys, and then change the value of the setting with [–/+].

Settings

EXT REC

See page 29.

REC OUT

OFF: Signals not output.

ALL: Signals output during recording.

ALARM REC: Signals only output during alarm recording.

STOP REC: Signals output when recording stopped.

WARNING OUT

OFF: Signals not output.

ALL: Signals output when warnings are issued.

USER: Selects whether or not to output signals depending on the warning type.

Warning Types:

VIDEO LOSS, HDD ERROR, FAN MOTOR ERROR, PASSCODE ERROR, POWER FAIL

Selections:

OFF, ON

3. Press the [SET] button.

- The confirmation screen will be displayed.

4. Select [SAVE] with the [◀/▶] keys, and then press [SET].

Useful Features

Hard Disk Maintenance


When a power failure occurs while in the Recording mode or Alarm Record Standby mode, or when a failure occurs in the recorded data on the hard disk, recording/playback may not function properly. To repair the hard disk, two types of scan disk functions are available on the VR-509:

AUTO SCAN DISK

Scans the hard disk automatically when the power is switched on.

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE].

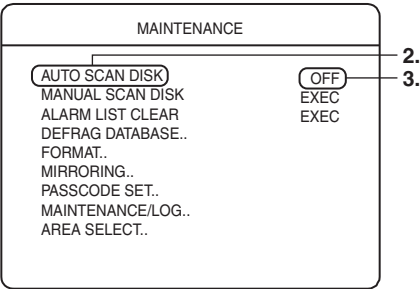

2. Select [AUTO SCAN DISK] with [▲/▼].

3. Select [ON] with [-/+].

4. Press the [SET] button.

- A confirmation screen will be displayed.


5. Select [SAVE] with [◀▶], and then press the [SET] button.

MANUAL SCAN DISK

Performs manual scanning of the hard disk. Perform Manual Scan Disk regularly when the [AUTO SCAN DISK] item in the menu is set to “OFF” or when the power to the equipment remains on for extensive periods of time. (About once a month)

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE].

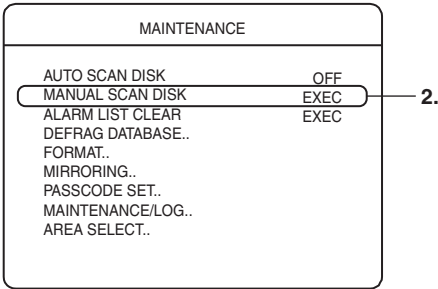

2. Select [MANUAL SCAN DISK] with [▲/▼], and then press the [SET] button.

- The SCAN DISK function will be executed.

- Press the [CANCEL] button to abort the scandisk process.
- This has no effect if the scandisk process is stopped in the middle of progress.
- There are cases where the time required for ending the process is extended if the size of the recorded event is large or there are a large number of events (several hours.)
- Recording, playback and search functions cannot be used when the scandisk procedure is running.

CAUTION

The manual scandisk process cannot be executed when in the following operation modes:


- During recording.
- During the playback of recorded images.
- When the timer is ON.
- During DVD export.
- When a malfunction occurs with the hard disk.

DEFRAG DATABASE

When alarm recording is performed repeatedly with Repeat Recording set to “ALL” or “ALARM LOCK”, data in the hard disk may become fragmented. Continued use of such data may cause files to split up and be recorded into free space, thereby giving rise to fragmentation or decay of data, which subsequently slows down the speed dramatically during hard disk searches. This is where the [DEFRAG DATABASE] feature comes into play in the maintenance of the hard disk.

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE] → [DEFRAG DATABASE].

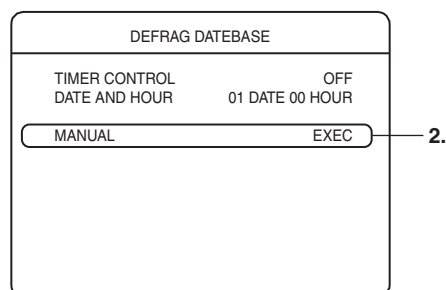

2. Select [MANUAL] with [▲/▼] keys, and then press the [SET] button.

- The DEFRAG DATABASE confirmation screen will be displayed.

3. Select [YES] and press the [SET] button.

- The DEFRAG DATABASE function will be executed.

CAUTION


- If the time for automatic execution is reached during recording, the recording procedure will be aborted and the database will be defragged. When the defragging process is complete, recording will be restarted automatically.
- The defrag procedure should be run when searches take excessive amounts of time.
- When the date and time of automatic execution arrives during alarm recording, the recording process will be ended and the defrag process executed. Alarm recording will not be restarted when the defrag process has ended (although it can receive new alarms.)
- The manual defrag process cannot be executed when in the following operation modes:
 - During recording.
 - During the playback of recorded images.
 - When the timer is ON.
 - During DVD export.

Initializing the Hard Disk (“FORMAT”)

Recording may fail if there is insufficient space on the hard disk. When there is insufficient hard disk space, create a backup data and format the disk to create space for the recorded data. You are also recommended to “FORMAT” (Initialize) the hard disk on a regular basis to avoid data fragmentation.

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE] → [FORMAT].

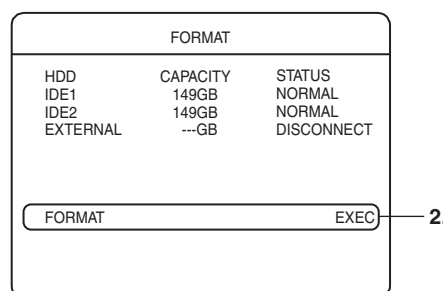

EXTERNAL: Indicates external hard disks.
(Only one can be connected.)

2. Select [FORMAT] with [▲/▼] keys, and then press the [SET] button.

- The FORMAT confirmation screen will be displayed.

3. Select [YES] and press the [SET] button.

- The FORMAT function will be executed. When the formatting process has been completed, the “FORMAT SUCCEEDED” screen will be displayed. Operations will then automatically return to normal.

Precautions When Initializing the Hard Disk

- As the hard disk capacity displayed on the screen is calculated as $1\text{GB} = (1024)^3$ bytes, a lower capacity than actually exists will be displayed.
- All recorded events will be erased when the formatting procedure is executed. Make sure that all important events are backed up accordingly.

CAUTION

The hard disk cannot be initialized when in the following operation modes:

- During recording.
- During the playback of recorded images.
- When the timer is ON.
- During DVD export.
- When a malfunction occurs with the hard disk.


Useful Features

Setting up the Hard Disk for Mirroring

Mirroring refers to recording the same data in the 2 built-in hard disks. In this way, recorded data can be secured even if data on one of the hard disks is damaged.
(See on page 53 for the notes on “Setting up MIRRORING”)

Setting up MIRRORING

1. Press the [MENU] button.
- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE] → [MIRRORING].

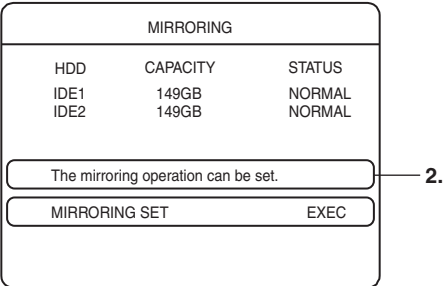

2. Check to confirm that the “The mirroring operation can be set.” message is displayed, and then press the [SET] button.
- The “Do Mirroring EXEC?” confirmation screen will be displayed.
3. Select [YES] and press the [SET] button.
- The set up procedure requires approximately 90 minutes for completion.
- Do not turn off the power during MIRRORING.**
- A message stating “MIRRORING OPERATION EXEC xx%” and the progress status will be displayed when the mirroring process is being run.
4. The operation ready status will be resumed automatically when mirroring setup has been completed.


CAUTION

The mirroring settings cannot be executed when in the following operation modes:

- During recording.
- During the playback of recorded images.
- When the timer is ON.
- During DVD export.
- When a malfunction occurs with the hard disk.

Canceling MIRRORING

1. Press the [MENU] button.
- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE] → [MIRRORING].

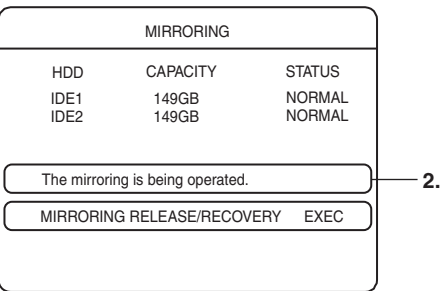

- The MIRRORING screen will be displayed.
2. Check to confirm that the “The mirroring is being operated.” message is displayed, and then press the [SET] button.
- The “Do Mirroring Release/Recovery?” confirmation screen will be displayed.
3. Select [RELEASE] and press the [SET] button.
- The MIRRORING SETTING will be cancelled, and the MIRRORING mode will be disabled.
- Do not turn off the power during cancelling MIRRORING.**
- A message stating “MIRRORING RELEASE EXEC” will be displayed when the mirroring process is being released.
4. The operation ready status will be resumed automatically when mirroring release has been completed.

Setting up the Hard Disk for Mirroring (continued)

Precautions When Setting up Mirroring


- The capacity of the hard disk will be reduced by approximately half when mirroring is set up. It is therefore necessary to take care when setting recording times.
- Mirroring can only be set up for the built-in hard disk, and is not possible on the external hard disk.
- Setting the system for mirroring is not a guarantee that data will not be damaged.
- All events logged on the built-in hard disk and the external hard disk will be deleted when mirroring is set up. It is therefore necessary to take back-ups of all important events beforehand.
- Depending on the recording settings and the operational status, there is a possibility that playback speed will be reduced and that the sound will not be synchronized with the images when setting up the system for mirroring. This is not a malfunction.
- If a power failure occurs which the mirroring settings enabled, the re-creation process will be carried out once again in the background. The safety of the recorded data cannot be guaranteed while the recreation process is being performed.
- Depending on the condition of the hard disk, there is a possibility that the mirroring settings will fail. In this event, cancel the mirroring settings, and then begin the setup process once again.
- Recording and playback is not possible when the mirroring settings are being processed.
- As the hard disk capacity displayed on the screen is calculated as $1\text{GB} = (1024)^3$ bytes, a lower capacity than actually exists will be displayed.
- If a defect occurs on one of the hard disks, the function for exporting data onto DVDs will not operate.
- The objective of mirroring is to protect recorded data in the event that the VR-509 hard disk malfunctions. Note that there are cases where operations cannot be continued even when mirroring has been set up depending on the case of hard disk malfunction.

Deleting Alarm Lists

It is possible to delete only the alarm lists without disturbing the alarm recorded images.

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MAINTENANCE] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

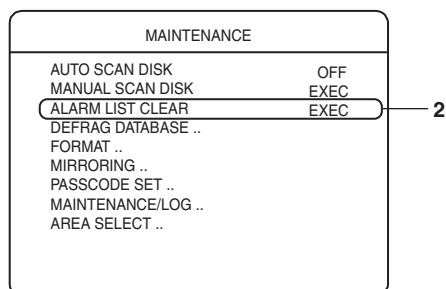

2. Select [ALARM LIST CLEAR] with the [▲/▼] keys, and then press [SET].

- The confirmation screen will be displayed.

3. Select [YES] and press the [SET] button.

- The alarm list will be deleted.
- * Select the [NO] button to close the confirmation screen.

- * Image data will be changed as normal recording events.
- * Press the [CANCEL] button to abort the deletion process.

CAUTION


The alarm list cannot be cleared when in the following operation modes:

- During recording.
- During the playback of recorded images.
- When the timer is ON.
- During DVD export.
- When a malfunction occurs with the hard disk.

Pass Code Setup


1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MAINTENANCE] → [PASSCODE SET] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

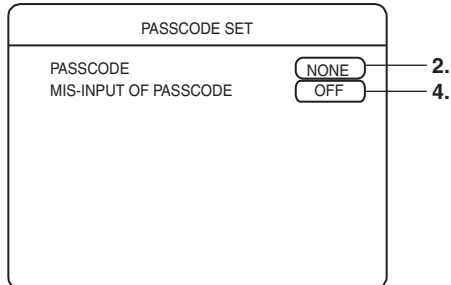

2. Select [PASSCODE] with the [▲/▼] keys, and then press [SET].

- The pass code confirmation/amendment screen will be displayed.

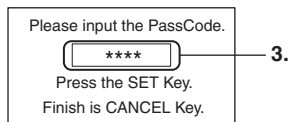

Settings

PASSCODE

NONE: Displayed when no pass code has been set.
 DONE: Displayed when a pass code has been set.

3. Enter the pass code with the use of the ten-key pad, and then press [SET].

- The pass code will be set or amended.
- * Enter the four characters of the passcode.

4. Select [MIS-INPUT OF PASSCODE] with the [▲/▼] keys, and then amend the value of the setting with [-/+].

Settings

MIS-INPUT OF PASSCODE

OFF: A warning will not be issued even when mis-input occurs.

ONCE, TWICE, THRICE:

A warning is issued after mis-input occurs (consecutively) for the number of times set.

5. Press the [SET] button.


- The confirmation screen will be displayed.

6. Select [SAVE] with the [◀/▶] keys, and then press [SET].

Displaying the Power Fail Time List and Log

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MAINTENANCE] → [MAINTENANCE/LOG] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.
- The TOTAL TIME and POWER FAIL TIME LIST will be displayed.
- The oldest log and the most recent three logs will be displayed for the POWER FAIL TIME LIST.

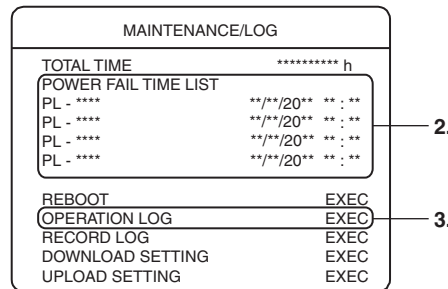

Deleting the Power Fail List

2. Select the POWER FAIL TIME LIST with the [▲/▼] keys, and then press [CANCEL].

- All list will be deleted.

Displaying the Operation Log and Recording Log

3. Select your desired item with the [▲/▼] keys, and then press [SET].

Settings

OPERATION LOG

Displays the operation log.

RECORD LOG

Displays the recording log.

CAUTION

There are cases where images recorded close to the times of power failures will not playback normally.

Rebooting the System

1. Press the [MENU] button.

- The [MENU] → [OPERATION MENU] → [MAINTENANCE] → [MAINTENANCE/LOG] screens will be displayed in this sequence in accordance with the [MENU Screen Operations] explained on page 17.

MAINTENANCE/LOG	
TOTAL TIME	***** h
POWER FAIL TIME LIST	
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
REBOOT	EXEC
OPERATION LOG	EXEC
RECORD LOG	EXEC
DOWNLOAD SETTING	EXEC
UPLOAD SETTING	EXEC

2.

2. Select [REBOOT] with the [▲/▼] keys, and then press [SET].

- The confirmation screen will be displayed.
- * [REBOOT] cannot be executed during timer recording.

3. Select [YES] and press the [SET] button.

- The system will be rebooted.



Hard Disk Recovery Feature

- The VR-509 is equipped with a function to notify the user of abnormalities on the hard disk when it is automatically rebooted.
- The automatic shut-off process will be executed if the system fails to recognize the hard disk or malfunctions occur three times during automatic rebooting.
- When there is a failure on the hard disk, it will restart and recovery automatically. The [E-01] error code will be displayed on the monitor screen after the automatic rebooting procedure has been carried out.
- Normal operations will be resumed when the automatic rebooting procedure has restored the malfunction. In this event, a message stating "SYSTEM REBOOTED TO CHECK HARD DISK" will be displayed on the monitor screen.
- Recording is not possible when the rebooting procedure is in progress.
- Automatic recovery is impossible in the case of fatal malfunctions that prevent the rebooting procedure from running.

Using DVD

DVD for Recording & Playback

The following shows the discs that can be recorded to and played using VR-509, in addition to the corresponding display marks or logos.

DVD-R 	12 cm: 4.7 GB General Version 2.0 (video mode)
DVD-RW 	12 cm: 4.7 GB Version 1.1 or later (video mode)

* Certain characteristics and properties of DVD-Rs and DVD-RWs can render them unsuitable for recording or playback.

Recommended manufacturers

DVD-R : JVC 4x, 8x

DVD-RW : JVC 2x, 4x

DVD-R & DVD-RW Details

DVD-R: Only discs that conform with DVD-R Standard 2.0 (video mode) can be used.

DVD-RW: Discs of Version 1.1 or later can be used. Although Version 1.1 of the DVD-RW Standards allows the selection of either video mode or VR mode for recording, this DVD recorder performs recording in video mode only.

* Version 1.0 of the DVD-RW Standards does not support video-mode recording, and for this reason, the corresponding discs cannot be used.

In terms of recording characteristics, DVD-R and DVD-RW (video mode) differs as follows.

■ DVD-R

Each disc can be recorded only once. Accordingly, these discs are recommended for use in archiving or long-term storage.

■ DVD-RW (video mode)

After viewing a disc, all data can be erased and it can be used to record new content.

The VR-509 Export Format

- DVD-R/RW discs that have been created in the Self-Playing format with the VR-509 can only be played back on the VR-509.
- DVD-R/RW discs created in the DVD-Video format with the VR-509 can be played back on any DVD player that supports DVD-R/RW discs, although playback performance is not guaranteed. They cannot be played back on the VR-509. Consult with your nearest JVC dealer for details on suitable DVD players.
(See Export Form on page 57)
- * DVD video discs available on the open market cannot be played back.

Inserting & Removing DVD

Inserting a DVD

1. Press the [OPEN/CLOSE] button.

- The disc tray will open automatically.

2. Place the disc on the disc tray.

- Ensure that the disc is inserted correctly into the tray's recess with the printed side facing upward.

3. Press the [OPEN/CLOSE] button.

- The disc tray will close automatically and "LOAD" will be shown on the monitor.

Removing a DVD

1. Press the [OPEN/CLOSE] button.

- The disc tray will open automatically.

2. Remove the disc from the disc tray.

Be sure to wait until the disc tray has opened fully before removing the disc.

3. Press the [OPEN/CLOSE] button.

- The disc tray will close automatically.

Precautions regarding the disc tray

- The disc tray will not open even when the [OPEN/CLOSE] button is pressed when a DVD is being created.
- Do not push the disc tray as it is opening or closing.
- Do not place objects other than discs on the disc tray.
- Do not press down on the disc tray.

Exporting Data on DVD

The VR-509 is equipped with a function to enable the images stored on the hard disk to be exported to DVDs.


- * It is possible to export images to a DVD when recording onto the hard disk.

1. Press the [HDD(DVD)] button.

- The display indicator will be illuminated, and the DVD operation mode will be activated.
- * It is not possible to switch across to the DVD operation mode during HDD playback.


2. Press the [MENU] button.

- The [DVD MENU] screen will be displayed.

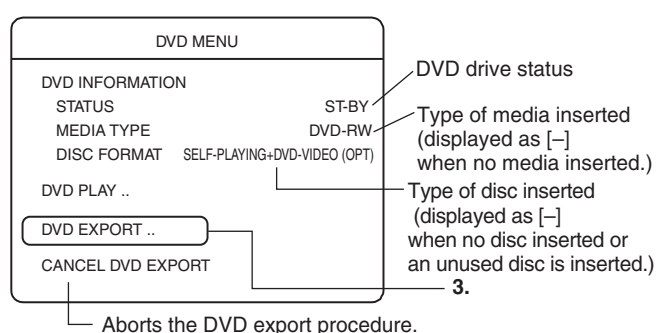

3. Select [DVD EXPORT] with [▲/▼], and then press the [SET] button.

- The [DVD EXPORT] screen will be displayed.

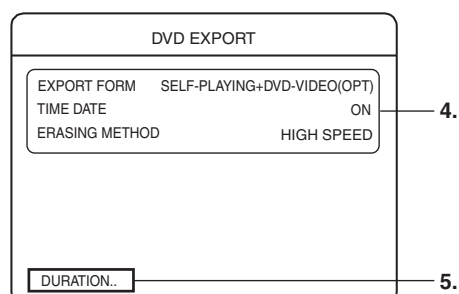

4. Select your desired item with [▲/▼], and then change the setting with [-/+].

Settings

EXPORT FORM

SELF PLAYING + DVD-VIDEO (OPT*):

The copy is made in both the self-playing format and the DVD-Video formats.

SELF PLAYING + DVD VIDEO (NO OPT):

The copy is made in both the self-playing format and the DVD-Video formats.

DVD-VIDEO (OPT):

The copy is made in the DVD-Video format. This can be played back on DVD players. It is designed so that gaps between images caused by a low number of frames per second are filled in, and it is played back at a speed of x1. This format cannot be played back on the VR-509.

DVD-VIDEO (NO OPT):

The copy is made in the DVD-Video format. This can be played back on DVD players. Gaps between images caused by a low number of frames per second are played back in the fast-forward mode.

This format cannot be played back on the VR-509.

ONLY SELF-PLAYING:

The copy is made in a format that can only be played back on the VR-509.

- * OPT: An abbreviation of "Option." Intermittent interpolation will be added.
- * To output linked audio sound in the DVD-Video format, either set the [OPT] parameter, or specify "25" for the frame rate. If the frame rate is set at 0.08 or 0.2, audio sound will not be output even if the [OPT] parameter is set up.

TIME DATE

Sets whether the date/time stamp is to be recorded on images or not when writing is being carried out in the DVD-Video format.

DELETE METHOD

When data is being exported to a DVD-RW disc, all previous data on the disc will be deleted. This function specifies the method of deletion.


COMPLETE: Deletes all data. This will require between thirty minutes and one hour for a 4x disc.

HIGH SPEED: Deletes the data at high speed (approximately two minutes.)

However, the data will not be completely erased.

5. Select [DURATION] with [▲/▼] keys, and then press the [SET] button.

- The [DURATION] setup screen will be displayed.

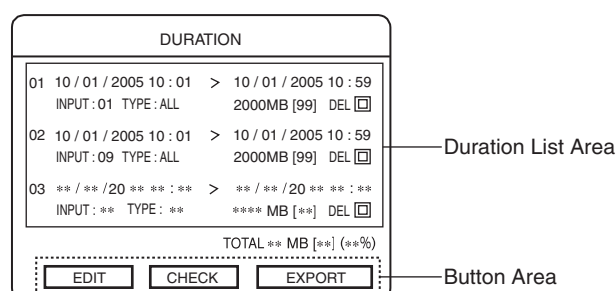

■ Duration List Area

The DURATION setting enables lists for a maximum of 99 periods to be set up. Lists for three periods are displayed on each screen. When the parameters for one period list have been completed, press the [▼] key to continue with the setup of the next list. The list number in the Duration List Area will also be increased accordingly.

■ Button Area

- [EDIT]: Used to amend the period list settings.
- [CHECK]: Used to calculate the capacity of the set lists. The number of chapters is also displayed.
- [EXPORT]: Used to export the data to a DVD.

Exporting Data on DVD (continued)

6. Setting up the [DURATION] setup screen.

Starting time Ending time

DURATION

	Starting time	Ending time	DURATION
01	10/01/2005 10:01	10/01/2005 10:59	INPUT: 01 TYPE: ALL 2000MB [99] DEL <input type="checkbox"/>
02	10/01/2005 10:01	10/01/2005 10:59	INPUT: 09 TYPE: ALL 2000MB [99] DEL <input type="checkbox"/>
03	**/**/20 ** **: **	**/**/20 ** **: **	INPUT: ** TYPE: ** **** MB [**] DEL <input type="checkbox"/>

Capacity and chapters
Value display

Area to display the results of totaling calculations

Disc usage ratio

Total number of chapters

Total capacity

EDIT CHECK EXPORT

Error message display area

① Select the required period list with the [\blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright] keys, and then amend the value with the [$-/+$] keys.

Starting Time: Specifies the starting date and time (dd/mm/yy hh:mm) of the image data to be exported.

Ending Time: Specifies the ending date and time (dd/mm/yy hh:mm) of the image data to be exported.

INPUT: Specifies the number of the camera that is to be exported.

TYPE: Specifies the type of recorded image data that is to be exported.

ALL All images.

R.TERM Alarm recorded images taken with alarm input.

M.DET Alarm recorded images taken with the motion detection function.

EMG Emergency recorded images and PASSCODE ERROR recorded images.

Capacity: This field cannot be amended. The results of capacity calculation are displayed here. The number of chapters taken during the period are displayed within parenthesis. A message stating "OVER MB" will be displayed if the capacity is too large. [0 MB] will be displayed if no data exists for the relevant period.

DEL: Sets whether or not to delete the settings for the relevant period list (this is used when a capacity overflow occurs in the results of capacity calculation.)

☐ Left undeleted

☒ Delete

② Press the [\blacktriangledown] key to proceed onto the setup for the following list.

- The cursor will move to the next list.
- Repeat the procedures explained in ①.

③ Press the [SET] button when all settings have been completed.

- Operations in the button area on the DURATION setup screen will be activated.

④ Select [CHECK] with the [\blacktriangleleft / \blacktriangleright] keys, and then press [SET].

- Calculation of the capacity for the setup lists will commence. A screen to indicate that calculations are in progress will be displayed.
- When the calculation are complete, all of the period lists, the total capacity for the period lists, and the number of chapters will be displayed. The usage ratio (percentage) of the disk will also be displayed.

- Lists for which [DEL] have been set will be cleared before the calculations are carried out.
- Select [ABORT] and then press [SET] to abort the calculation process.
- Capacity calculation may require a certain amount of time to run when the number of relevant chapters is large.
- Incorrect entries will be highlighted with red underlines.

■ It is possible to display a message stating "CAPACITY OVER" on the DURATION setup screen when the capacity exceeds the volume of the DVD (see the section on Error Messages below.)

In this event, select [EDIT] on the DURATION setup screen and press [SET] to amend or delete the period list parameters.

⑤ Select [EXPORT] with the [\blacktriangleleft / \blacktriangleright] keys, and then press [SET].

- The display will return to the live screen, and the export process will be commenced. The execution status of the export process will be displayed on the screen.

■ Error Messages

Error messages similar to those shown below will be displayed in the error message display area when an error occurs with the parameters set on the DURATION setup screen.

INVALID DATE/TIME:

When one or more errors are included in the period setting.

CAPACITY OVER:

When excessive capacity exists in one or more period.

NO STREAM FOUND:

When relevant images do not exist in one or more period.

ERROR FOUND:

When an error other than those listed above exists in one or more period.

TOTAL CAPACITY OVER:

When an OVER CAPACITY error does not exist individually for each period, but when the total capacity exceeds 4.5GB.

ERROR: When an internal error occurs during export execution.

CHAPTER OVER:

When the number of chapters in one or more period are too many.

TOTAL CHAPTER OVER:

When an CHAPTER OVER error does not exist individually for each period, but when the total number of chapters exceeds a maximum of 498 when no audio sound is included, and a maximum of 249 when audio sound is included (the maximum limit for the number of chapters differs depending on the existence of audio sound.)

MEMO

- Press the [RETURN] button when [EDIT], [CHECK] or [EXPORT] operations in the DURATION setup screen's button area are activated to return to the previous screen.
- Press the [CANCEL] or [MENU] button for several seconds to return to the live screen.

Exporting Data on DVD (continued)

Displays During DVD Export

The status of execution will be displayed on the live screen when the DVD export process is in progress.

D.S: Searching for the relevant file.

D.E: Deleting the data that has been written onto the DVD.

D.C: Converting the data into a format that conforms with the DVD-Video format.

D.W: Writing the converted files onto the DVD.

D.F: Performing the finalization process.

* See page 98 for details on the error messages related to DVDs.

Configuration of Completed DVDs

- The periods specified during the export process will be sorted by title. A maximum of 99 titles can be created.
- The chapters included in each title will be created for each recording type. A maximum of 99 chapters can be created for each title (although the chapters will not be divided if there are internal links for alarm files.)
Additionally, the chapters will be divided automatically in files of up to six hours in accordance with the recorded file's information (recording rate and recording time.)
- Serial numbers, channels, the starting time and ending time of recordings, and the recording mode will be appended to the title of DVD recording.
- The playback mode is the title loop.
- There are cases where the starting times of chapters within titles are a maximum ten seconds prior to the specified starting times.

Points to Note During DVD Export

- Playback from the hard disk is not possible when data is being recorded onto DVDs.
- All data exported to DVD-R discs when the DVD export function is executed cannot be deleted.
In the case of DVD-RW discs, the current data can be deleted and replaced with new export data.
- The DVD tray cannot be opened during DVD export and disc loading.
- A maximum of 99 titles can be recorded onto a single DVD. Additionally, a maximum of 99 chapters can be created for each title.
- The maximum number of chapters that can be exported when the export format is in self-playing format is limited to a total of 498 (249 when audio sound is included.)
- Image distribution onto a network will be suspended during DVD exporting.
- Malfunctions on the hard disk may result in the DVD export function not being able to be used.
- When data that is less than a total of 1GB is to be exported onto a DVD-R, it will be expanded to approximately 1GB of data and exported accordingly, depending on the rating for the DVD-R. This will consequently result in additional time required for the process to be completed.
- There are cases where the "CHAPTER OVER" error message will be displayed if the [FRAME RATE] parameter is set at [AUTO] during alarm according when the alarm recording is exported to the DVD. This is caused by the VR-509's DVD conversion specifications (*1), so when this occurs it is necessary to reduce the amount of periods that are to be exported to the DVD, and then execute the [CHECK] or [EXPORT] functions once again.
*1: As the VR-509 exports data for which the frame rate has been converted as different alarm recorded data when frame rates are changed in accordance with the [AUTO] setting for a single alarm recording, the number of chapters that are exported exceeds the actual number of chapters.
- See page 112 for guidelines to the amount of time that can be recorded onto a single DVD.
The relationships between the export format and the permissible recording time are shown below.

Permissible Recording Time	Export Format
Short ↓	SELF-PLAYING + DVD-VIDEO (OPT) ↓ SELF-PLAYING + DVD-VIDEO (NO OPT) ↓ DVD-VIDEO (OPT) ↓ DVD-VIDEO (NO OPT) ↓ ONLY SELF-PLAYING
↓ Long	

- See page 113 for guidelines to the amount of time required for exporting data onto DVDs.

Using DVD

Playing Back Exported Images on DVD

It is possible to playback the images that have been exported from the hard disk to DVDs. Set the export format to format including "SELF-PLAYING" when exporting the data.

* DVD images can be played back when recording onto the HDD.

1. Press the [HDD(DVD)] button.

- The display indicator will be illuminated, and the DVD operation mode will be activated.
- It is not possible to switch across to the DVD operation mode during HDD playback.

2. Press the [MENU] button.

- The [DVD MENU] screen will be displayed.

DVD MENU	
DVD INFORMATION	
STATUS	ST-BY
MEDIA TYPE	DVD-RW
DISC FORMAT	SELF-PLAYING+DVD-VIDEO (OPT)
DVD PLAY ..	
DVD EXPORT ..	
CANCEL DVD EXPORT	

* If the [MENU] button is pressed during DVD playback, playback will be halted and the [DVD MENU] screen will be displayed.

3. Select [DVD PLAY] with [▲/▼], and then press the [SET] button.

- The DVD title list will be displayed.
The titles are created in accordance with the periods specified at the time of export (up to a maximum of 99 titles.)

DVD TITLE LIST					TYPE
NO	DATE/TIME(START)	DATE/TIME(END)	ch	TYPE	
**	**/**/** **:*:*	**/**/** **:*:*	**	****	all: All recordings.
**	**/**/** **:*:*	**/**/** **:*:*	**	****	EMG: Emergency and
**	**/**/** **:*:*	**/**/** **:*:*	**	****	Passcode error
**	**/**/** **:*:*	**/**/** **:*:*	**	****	recordings.
**	**/**/** **:*:*	**/**/** **:*:*	**	****	R.TERM: Alarm recordings made
01	10/01/05 10:01:00	10/01/05 10:59:00	1	all	with the alarm terminal.
02	10/02/05 10:01:00	10/02/05 10:59:00	1	all	M.DET: Alarm recordings made
03	10/03/05 10:01:00	10/03/05 10:59:00	1	all	with motion detection.
04	10/04/05 10:01:00	10/04/05 10:59:00	1	all	
05	10/05/05 10:01:00	10/05/05 10:59:00	1	all	
Select with SET button.					

4. Select the title that is to be played back with the [▲/▼] keys, and then press the [SET] button.

- The chapter list for the selected title will be displayed.
The chapters are divided into alarm recordings (up to a maximum of 99 chapters.)

DVD CHAPTER LIST					TYPE
NO	DATE/TIME(START)	DATE/TIME(END)	ch	TYPE	
**	**/**/** **:*:*	**/**/** **:*:*	**	****	normal: Normal recordings.
**	**/**/** **:*:*	**/**/** **:*:*	**	****	EMG: Emergency recordings.
**	**/**/** **:*:*	**/**/** **:*:*	**	****	R.TERM: Alarm recordings made
**	**/**/** **:*:*	**/**/** **:*:*	**	****	with the alarm terminal.
**	**/**/** **:*:*	**/**/** **:*:*	**	****	M.DET: Alarm recordings made
01	01/10/05 10:01:00	01/10/05 10:05:59	01	normal	with motion detection.
02	01/10/05 10:06:00	01/10/05 10:10:59	01	normal	P.ERR: Passcode error
03	01/10/05 10:11:00	01/10/05 10:15:59	01	normal	recordings.
04	01/10/05 10:16:00	01/10/05 10:20:59	01	normal	PRE: Pre-alarm recordings.
05	01/10/05 10:21:00	01/10/05 10:25:59	01	normal	
Play with PLAY/PAUSE button.					

5. Select the chapter that is to be played back with the [▲/▼] keys, and then press the [PLAY/PAUSE] button.

- Playback will be carried out continuously in sequence from the selected chapter.
When the final chapter has been played back, playback will return to the first chapter and start again (loop playback for one title.)

6. Press the [PLAY STOP] button to stop playback.

- The display will return to the chapter list screen.

Operations when the Chapter List Screen is Displayed

7. Press the [RETURN] button to play other titles.

- The display will return to the title list screen.
Perform the operations explained in procedures #4 to #6 to continue with playback.

8. Press the [PLAY STOP] button to return to the live screen.

- The display will return to the live screen.

MEMO

- The display will return to the DVD MENU if the [RETURN] button is pressed when the title list screen is being displayed.
- The display will return to the live screen if the [MENU] button is pressed for several seconds when the chapter list, the title list or the DVD MENU are being displayed.

Possible Operations in the DVD PLAYBACK Mode

- Pause
- Changing the playback speed with the shuttle dial
- A single frame playback with the jog dial
- It is possible to jump to the previous or next chapters with the [SKIP] button.

Returning to the HDD Operation Mode

Press the [HDD(DVD)] button when displaying the live screen.

- The display indicator will be extinguished, and the HDD Operation mode will be activated.
- It is not possible to switch across to the HDD operation mode when the DVD list or DVD MENU is being displayed, or when a DVD is being played back.

* DVD-Video (DVD-ROM) disks available on the open market cannot be played back. The discs created in the DVD-Video format cannot be played back on the VR-509. Only the discs that can be created in the self-playing format with the VR-509 can be played back.


DVD-Video Format Menus and Playback

The following title menus and chapter menus are created for DVDs that are formatted in the DVD-Video and DVD-Video (OPT) formats for exporting purposes.

- * DVDs that are created in the DVD-Video and DVD-Video (OPT) cannot be played back on the VR-509.


They can be played back on DVD players that support the DVD-R/RW format.

Title Menu

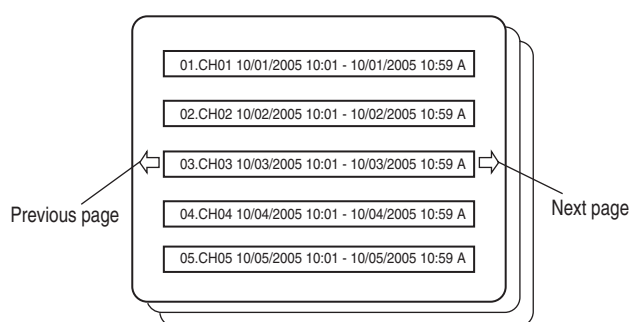

- The title menu is displayed when a disc is inserted in the DVD player. The title menu can also be displayed with the top menu key, etc., on the remote controller.
- A maximum of 99 titles is possible. Five titles will be displayed on each page (maximum 20 pages.) Turn the pages with the [Previous Page] and [Next Page] keys on either side of the screen.
- The name of the title consists of the serial number, the camera number, the starting time, the ending time and the type of search recording. The symbols for the type of search recording are shown below.
A: All recordings.
R: Alarm recordings taken with the alarm terminal.
M: Alarm recordings taken with motion detection.
E: Emergency recordings.
- When a title is selected, the playback will commence continuously from the first chapter within the title. When the final chapter has been played back, playback will return to the first chapter and start again (loop playback for one title.)

Chapter Menu

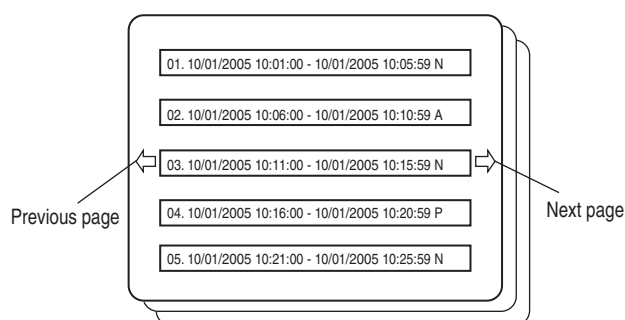

- The chapter menu can be displayed with the menu keys on the remote controller when a title is being played back.
- The chapters are divided into recording types (although the chapters will not be divided if there are internal links for alarm files.)
- A maximum of 99 chapters is possible within a single title. Five chapters will be displayed on each page (maximum 20 pages.) Turn the pages with the [Previous Page] and [Next Page] keys on either side of the screen.
- The name of the title consists of the serial number, the starting time, the ending time and the recording type. The symbols for the recording types are shown below.
N: Normal recordings.
E: Emergency recordings.
R: Alarm recordings taken with the alarm terminal.
M: Alarm recordings taken with motion detection.
C: Passcode error recordings.
P: Pre-alarm recordings.
- When a chapter is selected, the playback will commence continuously from that chapter.
- When the final chapter has been played back, playback will return to the first chapter and start again (loop playback for one title.)

DVD-Video Playback


- The channel number for the chapter (camera number) and recording type, such as ALARM (alarm mark,) will not be displayed during playback.
- If the [TIME/DATE] parameter on the DVD Export menu was set at "ON" when the data was exported, the time that the data was recorded onto the hard disk will be displayed.
- The audio sound will break up when switching between chapters during playback.

Using Other External Devices

Capturing Still Images on the Flash Memory

It is possible to capture still images onto USB flash memories when in the playback mode.

1. **Connect a USB flash memory to the [SERIAL] port on the front or rear panel.**
2. **Set the VR-509 in the playback mode. (See page 40)**
3. **Press the [PLAY/PAUSE] button when the image that is to be captured is displayed to pause playback.**
4. **Once playback has been paused, press the [0] button while pressing down on the [FUNCTION] button.**
 - The [STILL PICTURE] menu will be displayed.
 - * Camera numbers that are not displayed on the split screen cannot be selected.

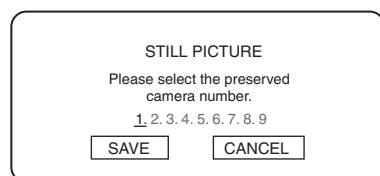

5. **Select the camera channel to which the still image is to be saved with the [◀/▶] keys, and then press the [SET] button.**

- * This cannot be selected when the [COVERT CHANNEL] parameter is set at [ENABLE]. In this event, either make sure that the [SELECT OUTPUT] setting does not include [MONITOR OUT], or set [PLAY PERMISSION] to [ON].
- * Camera channels that are not being played back cannot be selected.

6. **Select [SAVE] with the [▲/▼] keys, and then press the [SET] button.**

- A message stating “The still picture is being preserved” will be displayed on screen.

7. **A message stating “Still picture preservation success” will be displayed when the still image has been saved. Press the [SET] button.**

- The capturing procedure will be completed, and the [STILL PICTURE] menu will be closed.
- The file name for the still image will be set automatically.
- If a file with the same name exists on the USB flash memory, it will be overwritten.

8. **Disconnect the USB flash memory from the port.**

- * Do not disconnect the flash memory when the still image is being saved.

■ When the flash memory is not acknowledged

A message stating “The USB flash memory cannot be recognized” will be displayed on screen.

- To continue, make sure the flash memory is connected correctly, select [RETRIAL] on the screen, and then press [SET].
- To abort the procedure, select [CANCEL] on the screen, and then press [SET].

* This message will be displayed in the following circumstances:

When a flash memory has not been connected.

When the flash memory contains a different file system.

■ A message stating “Still picture preservation failure” will be displayed on screen if the procedure for saving a still image fails.

In this event, select [CANCEL] on the screen and then press [SET].

- * See Troubleshooting on page 98 for details on the cause and recovery methods when an error is triggered.

Still Image File Names

File names are automatically assigned in accordance with the following conventions:

Example: An image captured at 12:34:56:012 on February 20th 2006 from camera 9 in the normal recording mode.

n09_20060220123456012.jpg

n	09	2006	02	20	12	34	56	01	2	.jpg
		Year		Day	Minute	Hour		Second	Fixed	
Image mode	Month					Month		Millisecond		

n: Normal Rec

t: Timer Rec

p: Pre Alarm Rec

a: Alarm Rec

m: Motion Alarm Rec

e: Emergency Rec

c: Passcode Error Rec

l: Only used when in the Live Web mode (See page 69)

- * Flash memories connected to the VR-509 will be registered automatically the first time. A maximum of ten flash memories can be registered. The registration will be erased when the power to the VR-509 is switched off.
- * Image distribution onto a network will be suspended when capturing still images.
- * There are cases where images recorded close to the times of power failures will not playback normally, and capturing still images will not be possible.
- * Contact your nearest JVC dealer for details on the flash memories that can be used.

Storing Set Data in the Flash Memory

1. Connect the flash memory to the [SERIAL] port on the front or on the rear panel.

2. Press the [MENU] button.

- Open the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE] → [MAINTENANCE/LOG].

MAINTENANCE/LOG	
TOTAL TIME	***** h
POWER FAIL TIME LIST	
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
REBOOT	EXEC
OPERATION LOG	EXEC
RECORD LOG	EXEC
DOWNLOAD SETTING	EXEC
UPLOAD SETTING	EXEC

3.

3. Select [DOWNLOAD SETTING] with [▲/▼], and then press the [SET] button.

- A message stating “Set data is being saved” will be displayed on the screen.

4. The menu settings will be saved in the flash memory when the message is cleared from the screen.

5. Disconnect the flash memory from the [SERIAL] port.

Loading Set Data from the USB Memory

1. Connect the flash memory to the [SERIAL] port on the front or on the rear panel.

2. Press the [MENU] button.

- Open the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [MAINTENANCE] → [MAINTENANCE/LOG].

MAINTENANCE/LOG	
TOTAL TIME	***** h
POWER FAIL TIME LIST	
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
PL - ****	**/**/20** ** : **
REBOOT	EXEC
OPERATION LOG	EXEC
RECORD LOG	EXEC
DOWNLOAD SETTING	EXEC
UPLOAD SETTING	EXEC

3.

3. Select [UPLOAD SETTING] with [▲/▼], and then press the [SET] button.

- A message stating “Set data is being confirmed” will be displayed on the screen.
- The upload confirmation screen will be displayed on the screen when the setting data has been confirmed.

4. Select [EXEC] on the confirmation screen, and then press the [SET] button.

- A message stating “Set data is being updated” will be displayed on the screen.
- The system will reboot when uploading has been completed.

5. Disconnect the flash memory from the [SERIAL] port.

■ When the flash memory is not acknowledged

A message stating “The USB flash memory cannot be recognized” will be displayed on screen.

- To continue, make sure the flash memory is connected correctly, select [RETRIAL] on the screen, and then press [SET].
- To abort the procedure, select [CANCEL] on the screen, and then press [SET].

* This message will be displayed in the following circumstances:

When a flash memory has not been connected.

When the flash memory contains a different file system.

■ A message stating “Set data save failure” or “Set data of the USB flash memory cannot be recognized” will be displayed on screen if the procedure for downloading/updating the data fails.

In this case, select [CANCEL] on the screen and then press [SET].

* See Troubleshooting on page 98 for details on the cause and recovery methods when an error is triggered.

- * Flash memories connected to the VR-509 will be registered automatically the first time. A maximum of ten flash memories can be registered. The registration will be erased when the power to the VR-509 is switched off.
- * Image distribution onto a network will be suspended when setup data is being downloaded or uploaded.
- * Contact your nearest JVC dealer for details on the flash memories that can be used.

- The name of the setting data file
(Example) E01-00_060220040750.509
VR-509 software version yymmddhhmmss. 509
- When loading setting data
It is not possible to change the file extension (509). It is possible to change the file name (although only with single-byte alphanumerals.)
- When loading setting data
Only one item of setting data can be saved onto a USB flash memory (the file is placed in the root directory.)
The most recently saved data will be loaded when multiple setup data files exist on the root directly.

Using Other External Devices

External Hard Disk Drives

The VR-509 allows connection of one external hard disk drives in addition to the 2 built-in hard disks. Follow the procedure below to alter the connection setup of the hard disk. There are 3 ways of altering connection setup, namely “NEW”, “CHANGE” and “DISCONNECT”.

1. Switch off the power.

- Switch off the power to the VR-509 by observing the instructions provided in the section on “Switching Off the Power” in Switching the Power ON/OFF. (Page 16)
- External hard disk will not respond to any operations when the VR-509 is in the OPERATION OFF mode. Disconnect the power cable and then reboot the system.

2. Connect the external hard disk to the [SERIAL] port on the front or on the rear panel and then plug in the power cable.

- Make sure the power to the external hard disk is switched on before switching on the power to the VR-509. Note that it is necessary to switch on the power to the external hard disk that was first connected, otherwise external hard disk will not be recognized.

3. Switch on VR-509.

- The HDD reconfiguration confirmation screen will be displayed.

4. Select [EXEC], and then press the [SET] button.

- The HDD reconfiguration confirmation screen will be displayed.

5. Select [EXEC] and then press the [SET] button once again.

- The external hard disk will be formatted.
- The FORMATTING SUCCESSFUL screen will be displayed when the process has been completed. The system will then automatically return to normal operations.
- The disconnection process will be performed instead of the formatting process if it is disconnected.

- * It is impossible to disconnect an external hard disk from the VR-509 and connect it to a personal computer in order to view the images.
- * Consult with your nearest JVC dealer for details on the external hard disks that can be used.
- * It is recommended that a UPS is used to ensure system safety.

Connecting a UPS

UPS: Uninterruptible Power Supply

Connecting a UPS to the hard disk will protect it from damage by automatically powering down all operations prior to switching off the power supply.

1. Connection

- Connect the UPS communication cable to the [SERIAL] port on the front or rear panel.
- Connect the VR-509 power cord to the UPS power output connector.

2. Switching on the power

- Switch on the power to the UPS.
- Switch on the power to the VR-509.

- * Make sure the UPS communication cable is connected before switching on the power to the VR-509.
- * Do not disconnect the communication cable when operations are being carried out.
- * Consult with your nearest JVC dealer for details on the UPS that can be used.

USB Hub

A USB hub is required when a UPS and an external hard disk are to be used simultaneously.

Make sure that the USB hub supports USB 2.0.

Depending on the USB hub in use, there is a chance that USB 1.1 will be operated in the event of both USB 2.0 and USB 1.1 equipment being connected. It is recommended that this type of USB hub is avoided.

Connecting to a PC

You Can Do the Following

- Viewing Live Images Using a PC (Page 69)
- Record Program Using a PC (Page 70)
- Viewing Playback Image Using a PC (Page 73)
- Useful Functions Using a PC (Page 76)
 - Camera titles (Page 76)
 - Mail Notification (Page 77)
 - NTP server registration (Page 78)
 - Downloading VR-509 Settings (Page 79)
 - Uploading VR-509 Settings (Page 80)
- Changing a Network Settings (Page 82)
- Changing VR-509 Settings Using a PC (Page 83)

Minimum PC Specifications Required

- OS: Windows XP Professional SP2 / Windows XP Home Edition SP2
 - CPU: Pentium III 1GHz and above
 - Memory: 256 MB and above
 - Monitor: XGA (1024 x 768 pixels) and above required SXGA (1280 x 1024 pixels) recommended
- * Supports Internet Explorer Ver. 6.0.
In addition, Internet Explorer 5.0 is not supported.
(Set Java Script and ActiveX control to [ENABLE] and Pop-Up Block to [DISABLE].)
- * See page 108 for details on activating ActiveX Control.
- The PC specifications are merely recommended examples for using the application software with ease, and operations are not guaranteed.
Even when the PC fulfils the necessary operating conditions, its performance may vary between individual users depending how the PC is used.


CAUTION

- As the VR-509 is only equipped with an auto-negotiation function, care must be taken when it is connected to the full duplex fixed equipment.
- The VR-509 does not support functions that amend NAT, NAPT (IP masquerade) or similar IP addresses, or port numbers.

Connecting Using a LAN Cable


Connecting the Network (LAN)

- Connect the PC to the hub and the VR-509 to the hub with the use of straight LAN cables.

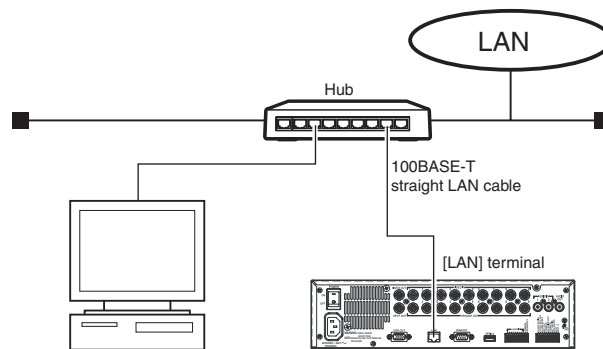


Peer-to-Peer Connection

- Connect the PC to the VR-509 with the use of a crossover LAN cable.

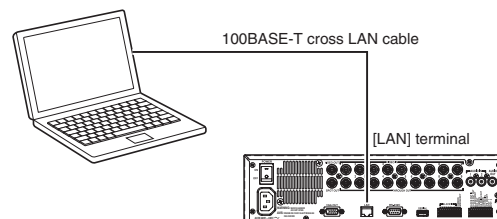

Connecting to Public Line Networks

- Connect the PC to a line terminal device (router, etc.) and the VR-509 to a line terminal device with a straight LAN cable.

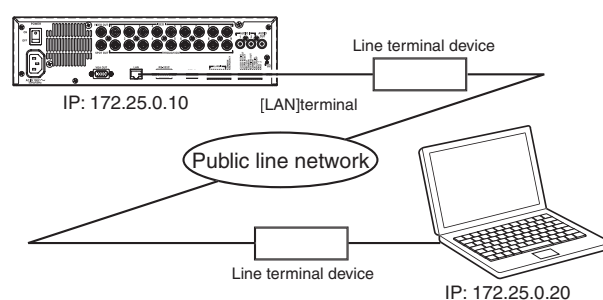

MEMO

Establish the settings for the line terminal device in accordance with the instructions provided for each individual device.

- * Always used LAN cables that are rated Enhanced Category 5 or Category 6.
- Consult the network administrator when connecting to an existing LAN line.
- Simultaneous playback of images from one VR-509 on multiple PCs is not possible.
- It is not possible to view live images from more than one PC simultaneously with the VR-509.

The VR-509 supports WAN (Wide Area Networks.)

Connecting to a PC

Setting up a Network for VR-509

Perform the initial setup procedure for the VR-509 while referring to the connected monitor screen.

1. Press the [MENU] button.

- Opens the menus in accordance with the instructions provided in Changing MENU Settings (page 17) in the sequence of [MENU] → [OPERATION MENU] → [NETWORK].

NETWORK

HOST NAME..	vr509
METHOD	STATIC IP
IP ADDRESS	192.168. 0. 10
NET MASK	255.255.255. 0
DEFAULT GATEWAY	192.168. 0.254
DNS SERVER	0. 0. 0. 0
MAC ADDRESS	00:80:88:40:b0:00

2. Select [HOST NAME] with the [▲/▼] keys, and then press [SET].

- The host name entry screen will be displayed.

HOST NAME:

[BACK]

3. Select your desired character with the [▲/▼/◀/▶] keys, and then press [SET].

- A single character will be entered in the host name.
- * Press the [-] or [+] keys to move the cursor backward and forward along the name.
- Press the [CANCEL] button to delete the character in the name over which the cursor is located.

4. Select [BACK] with the [◀/▶] keys, and then press [SET].

- The screen will return to the [NETWORK] screen.

5. Select your desired item with the [▲/▼/◀/▶] keys, and then change the value of the setting with [-/+].

* The factory default settings are listed below.

- METHOD: STATIC IP (DHCP servers cannot be used.)
- IP ADDRESS: 192.168.0.10
- NET MASK: 255.255.255.0
- DEFAULT GATEWAY: 192.168.0.254

Consult with the network administrator for details on the settings required to connect the recorder to a LAN network.

6. Press the [SET] button.

- The settings will be saved.
- When a DHCP server has been set for METHOD, the IP address allocated by the DHCP server will be displayed the next time this menu is opened (cannot be amended.)
- When [DHCP] has been set for METHOD, the IP address acquisition process will only be performed when the recorder is rebooted or when the setting is amended to an IP address. If the network is enabled after a certain period of time has passed since rebooting, amend the METHOD setting to something different, and then change it back to [DHCP] in order to acquire the IP address.
- If setting acquisition from the DHCP server failed with [DHCP] set as the setup method, the previous STATIC IP values will be set.

* Press the [RETURN] button to return to the previous screen.

Setting up a PC Network


The following illustrates how to set up a small LAN using VR-509's factory settings.

1. Click on the button.

- Right-click on [My Network], and then select the "Properties".


2. Select the network that is connected to the PC that operates the Web browser.

- Right-click on "Properties".

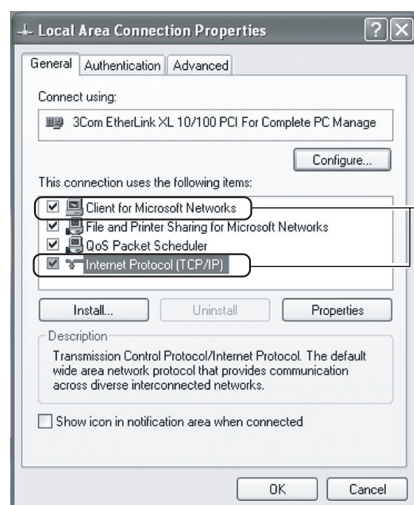


3. Confirm that this field is ticked.

3. Confirm that "Client for Microsoft Networks" and "Internet Protocol [TCP/IP]" are ticked.

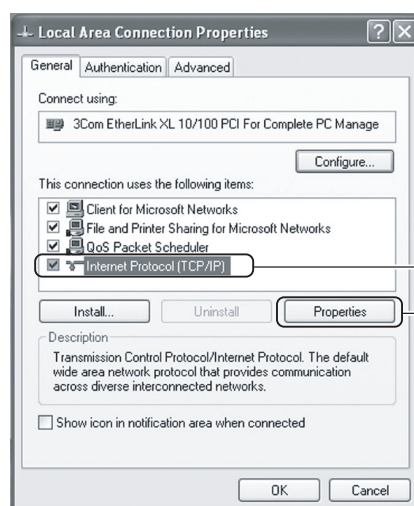

4. Select "Internet Protocol (TCP/IP)"
4. Click on "Properties"

4. Select "Internet Protocol (TCP/IP)", and then click on

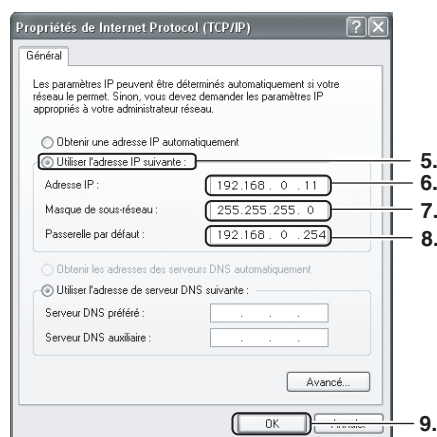


5. Select "Use the following address"

6. Set the "IP Address" to 192.168.0.11

7. Set the "Subnet Mask" to 255.255.255.0

8. Set the "Default gateway" to 192.168.0.254

9. Click on "OK"

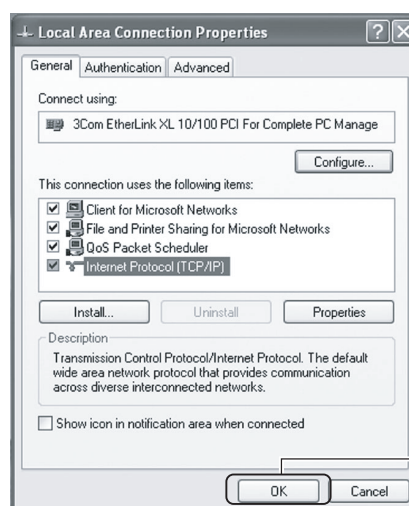

10. Click on "OK".


10. Click on the button on the "Local Area Connection Properties" screen.

- Ensure that the same IP address is not used within the same network environment.
- Do not register more than one IP address for each NIC when setting up the PC network environment.

Connecting to a PC

Connecting (Login) to the Network

1. Start up the Web browser.

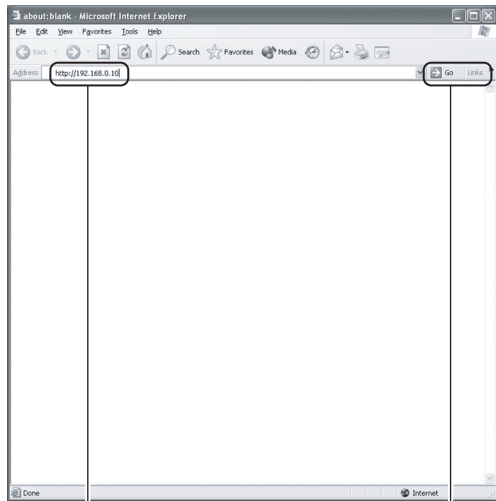

2. Enter
http://192.168.0.10

2. Click on "Go."

2. Enter the VR-509 IP address (default factory setting: 192.168.0.10) in the Address field, and then click on "Go".



3. Enter admin
(lower-case)

4. Enter "vr-509"
(lower-case)

5. Click on "OK."

3. Enter "admin" (small letter)


4. Enter "vr-509" (small letter)

5. Click on the OK button.

* See page 66 for details on the IP address.

- The Live Image window and the top page will be displayed if login is successful.

Top Page

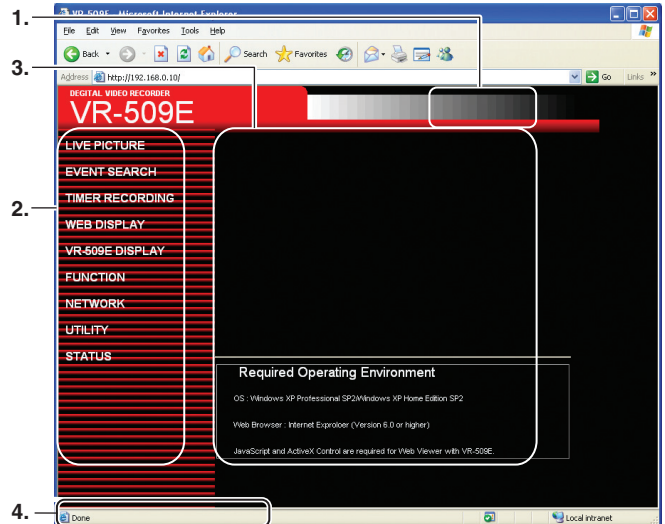


1. Displays the title.

2. Displays the selection menu.

3. Displays the setup screen.

4. The contents of each of the selection menu will be displayed when the cursor is placed over the top.

* If a dialog box similar to the one shown in the following illustration is displayed, click on [INSTALL] to execute the installation process.

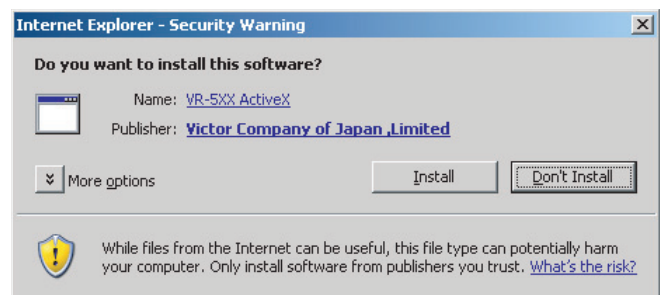

Viewing Live Images Using a PC

Live Image Display

1. Click on the [LIVE PICTURE].

- The Live Images display window will be displayed.



1. Live Image Display Area

Displays live images.

“REC” will be displayed when the VR-509 is recording.

2. [SPLIT VIEW]

Enables the selection of split screens.

Single, Quad, 6 Way, 9 Way

3. [CAM SELECT]

Selects the camera to display.

1 to 9

* Multiple settings for the same camera are not possible when the Quad, 6 Way or 9 Way split screens are being displayed.

4. [PIC. SIZE (%)]

Selects the size of the display.

25%, 50%, 75%, 100%, 200%, 400%, 800%

5. [PIC. QUALITY]

Selects the resolution of the display.

High, Normal, Basic, Lowest

6. Display Information

Selects whether or not information is to be displayed. The items that have been ticked will be displayed on the screen. CAMERA No., TITLE, VR-509E TIME, ALARM REPORT

7. [EXECUTE]

Executes the parameter settings from 1 to 6 when clicked.

8. [VIEW SETTING]

The layout of the display window can be saved. There are the following two methods.

[PC SET]

Click on this button to save the live image display window settings onto the personal computer, and to delete the live image display window settings from the personal computer. The [PC REGISTER/DELETE] screen will be displayed. Click on either [SAVE] or [DEL]. The saved data will be loaded when the live image display window is opened.

[VR-509 SET]

Click on this button to save the live image display window settings onto the VR-509. The saved data will be loaded when the live image display window is opened. (If data registered on the personal computer with the [PC REG.] button exists, that data takes precedence.)

9. [SNAPSHOT]

It is possible to capture still images from the live images. All displayed images will be captured.

Enter the name of the folder in which data is to be saved on the personal computer in the text box, and then click on [JPEG]. The still image will be stored on the personal computer. The name of the image is automatically allocated. (See Still Image File Names on page 62)

* Add “\” to the end of the folder name in which the file is to be stored.

MEMO

See the section of Registration Functions (page 75) for details on the folder name in which still images are saved.

CAUTION

- Close the playback image display window if it is open.
- There are cases where images recorded close to the times of power failures will not playback normally.

Record Program Using a PC

Adding to the Weekly Timer

- Click on “TIMER RECORDING” → “WEEKLY TIMER”.
 - The [WEEKLY TIMER SETUP] and program list (weekly timer settings) screen will be displayed.

WEEKLY TIMER SETUP can be customized. After adjustment, click the [SAVE] button below.

1. PROGRAM: No. 1

2. START: SUN ** **

3. END: *** ** **

4. MODE: Standard

5. EXEC: **

6. DAILY MODE: SUN MON TUE WED THU FRI SAT

7. SAVE RESET

- Select the [PROGRAM] number against which recording is to be reserved.
- Enter the [START] and [END] times.
- Select [MODE].
- Select [ON], [OFF] or [WEEKLY] for [EXEC].
 - * [WEEKLY] cannot be selected if [DAY] has been set for [START].
- Set the days on which recording is to be carried out in [DAILY MODE] if [DAY] has been selected for [START].
 - * These fields will be grayed out and selection not possible if any setting other than [DAY] has been selected for [START].
- Click on the [SAVE] button.
 - (Click on [RESET] to clear the settings already made.)
 - The settings will be saved.
 - The updated program list (weekly timer settings) screen will be displayed.

Program List (Weekly Timer Setting) Screen

Digital Video Recorder VR-509E
PROGRAM LIST FOR WEEKLY TIMER

Program for WEEKLY TIMER can be updated or deleted. Click the [UP] or [DEL] button.

No.	DAY/TIME (START)	DAY/TIME (END)	MODE	EXEC	
1	SUN ** **	*** ** **	**	**	UP DEL
2	MON ** **	*** ** **	**	**	UP DEL
3	TUE ** **	*** ** **	**	**	UP DEL
4	WED ** **	*** ** **	**	**	UP DEL
5	THU ** **	*** ** **	**	**	UP DEL
6	FRI ** **	*** ** **	**	**	UP DEL
7	SAT ** **	*** ** **	**	**	UP DEL
8	DAY ** **	*** ** **	**	**	UP DEL

CLOSE

- Click on [CLOSE] to close the window.

Changing and Deleting the Weekly Timer

- Click on “TIMER RECORDING” → “WEEKLY TIMER”.
 - The [WEEKLY TIMER SETUP] and program list (weekly timer settings) screen will be displayed.

Digital Video Recorder VR-509E
PROGRAM LIST FOR WEEKLY TIMER

Program for WEEKLY TIMER can be updated or deleted. Click the [UP] or [DEL] button.

2. UP DEL

CLOSE

Changing the Programs

- Click on the [UP] button.
 - A confirmation screen showing the amendments will be displayed.
- Click on the [UP] button on confirmation screen.
 - The program will be updated.
 - The updated program list (weekly timer settings) screen will be displayed.

Deleting the Programs

- Click on the [DEL] button.
 - A confirmation screen showing the details to be deleted will be displayed.
- Click on the [DEL] button on confirmation screen.
 - The program will be deleted.
 - The updated program list (weekly timer settings) screen will be displayed.

Adding to the Date Timer

- Click on “TIMER RECORDING” → “DATE TIMER”.
 - The [DATE TIMER SETUP] and program list (date timer settings) screen will be displayed.

DATE TIMER SETUP can be customized. After entering the special date, click the [SAVE] button.

PROGRAM No. 1

DATE(DD/MM) ** / **

*The VR-509E carries out the following record mode by a different date.
(A record mode is common to all DATE TIMER.)

START END

TIME (hh:mm) ** : **

MODE Standard

EXEC Off

[SAVE] [RESET]

- Select the [PROGRAM] number against which recording is to be reserved.
- Select the [DATE (DD:MM)] for the recording.
- Enter the [START] and [END] times.
- Select [MODE].
- Select [ON] or [OFF] for [EXEC].
- Click on the [SAVE] button.

(Click on [RESET] to clear the settings already made.)

 - The settings will be saved.
 - The updated program list (date timer settings) screen will be displayed.

Program List (Date Timer Setting) Screen

Digital Video Recorder VR-509E
PROGRAM LIST FOR DATE TIMER

Program for DATE TIMER can be deleted. Click the [DEL] button.

PROGRAM NO.	DATE(DD/MM)		PROGRAM NO.	DATE(DD/MM)	
1	** / **	[DEL]	9	** / **	[DEL]
2	** / **	[DEL]	10	** / **	[DEL]
3	** / **	[DEL]	11	** / **	[DEL]
4	** / **	[DEL]	12	** / **	[DEL]
5	** / **	[DEL]	13	** / **	[DEL]
6	** / **	[DEL]	14	** / **	[DEL]
7	** / **	[DEL]	15	** / **	[DEL]
8	** / **	[DEL]	16	** / **	[DEL]

[CLOSE]

- Click on [CLOSE] to close the window.

Deleting the Date Timer

- Click on “TIMER RECORDING” → “DATE TIMER”.
 - The [DATE TIMER SETUP] and program list (date timer settings) screen will be displayed.

Digital Video Recorder VR-509E
PROGRAM LIST FOR DATE TIMER

Program for DATE TIMER can be deleted. Click the [DEL] button.

PROGRAM NO.	DATE(DD/MM)		PROGRAM NO.	DATE(DD/MM)	
1	** / **	[DEL]	9	** / **	[DEL]
2	** / **	[DEL]	10	** / **	[DEL]
3	** / **	[DEL]	11	** / **	[DEL]
4	** / **	[DEL]	12	** / **	[DEL]
5	** / **	[DEL]	13	** / **	[DEL]
6	** / **	[DEL]	14	** / **	[DEL]
7	** / **	[DEL]	15	** / **	[DEL]
8	** / **	[DEL]	16	** / **	[DEL]

[CLOSE]

- Click on the [DEL] button.
 - A confirmation screen showing the details to be deleted will be displayed.
- Click on the [DEL] button on confirmation screen.
 - The program will be deleted.
 - The updated program list (date timer settings) screen will be displayed.

 
Record Program Using a PC

TIMER MODE

When the TIMER MODE is Deactivated

1. Click on “TIMER RECORDING” → “TIMER MODE” in that order.

TIMER MODE is currently deactivated on the VR-509E. To activate the timer recording setup, click the standby mode **[ON]** button below.




2. Click the [ON] button.
 - The TIMER MODE will be activated.

When the TIMER MODE is Activated

1. Click on “TIMER RECORDING” → “TIMER MODE” in that order.

 TIMER MODE is currently activated on the VR-509E. To deactivate the timer recording setup, click the standby mode **[OFF]** button below.



2. Click on the [OFF] button.
 - The TIMER MODE will be deactivated.

Viewing Playback Image Using a PC

ALARM SEARCH

1. Click on “EVENT SEARCH” → “ALARM SEARCH” in that order.

Search for moments of alarm input during the recorded video. Select the search conditions from the following options and then click the [SEARCH] button.

ALARM CHANNEL	All the alarm channels			2.
TYPE	All			
SEARCH DATE	DATE(DD/MM/YYYY)	TIME	BEFORE	
	17 / 1 / 2006	18 : 43		
	[SEARCH]		[RESET]	3.

2. Select the search conditions.

Settings

ALARM CHANNEL

All the alarm channels:

Searches for all recorded images regardless of the channel.

ch1 to ch9: Searches for recorded images only on the specified channel.

TYPE

All: Searches for all recorded images regardless of the alarm type.

Emergency terminal:

Searches for the images recorded with emergency port input.

Alarm terminal:

Searches for the images recorded with alarm port input.

Motion detect:

Searches for the images recorded with motion detection.

SEARCH DATE

Enter the year, month, date, hour and minutes required for the search.

BEFORE/AFTER

BEFORE: Searches for images recorded prior to the specified date.

AFTER: Searches for images recorded after the specified date.

3. Click on the [SEARCH] button.

- The “ALARM SEARCH” screen will be displayed.
(Click on [RESET] to clear the entry.)

ALARM SEARCH Screen

Digital Video Recorder VR-509E
Alarm search results This page making date: 17 / Jan 18:44:59

ALM No.	PREALARM	CAM. No.	DATE/TIME	TYPE	
687306		7	22/12/2005 18:37:59	M.DET	PLAY
687305		5	22/12/2005 18:37:59	M.DET	PLAY
687304		3	22/12/2005 18:37:59	M.DET	PLAY
687303		2	22/12/2005 18:37:59	M.DET	PLAY
687302		9	22/12/2005 18:37:59	M.DET	PLAY
687301		1	22/12/2005 18:37:59	M.DET	PLAY
687300		9	22/12/2005 18:36:59	M.DET	PLAY
687299		7	22/12/2005 18:36:59	M.DET	PLAY
687298		6	22/12/2005 18:36:59	M.DET	PLAY
687297		4	22/12/2005 18:36:59	M.DET	PLAY
687296		2	22/12/2005 18:36:59	M.DET	PLAY
687295		1	22/12/2005 18:36:59	M.DET	PLAY
687294		4	22/12/2005 18:36:41	M.DET	PLAY
687293		9	22/12/2005 18:36:41	M.DET	PLAY
687292		7	22/12/2005 18:36:41	M.DET	PLAY

Next 15 Lists

CLOSE

4.

5.

6.

7.

4. Select the recorded image to be played back from the list of search results.

- 15 items will be displayed for the recording image list at one time. Click on the button to open the page.

[Next 15 Lists]:

Displays the next screen.

[Before 15 Lists]:

Displays the previous screen.

5. Select Recording image list.

- Select the recording image to be played back by referring to the listed items.

Display Items

ALM No

The alarm number registered in the VR-509 database.

PREALARM

Pre-alarm recordings will be displayed in the check-box when available. Press the [PLAY] button after clicking on the relevant entry to commence playback from the pre-alarm recording.

CAM. No

Displays the recorded camera input.

DATE/TIME

Displays the date and time of detection.

TYPE

R.TERM: Alarm input terminal

M.DET: Motion detect

EMG: Emergency input terminal

P.ERR: Passcode error

6. Select whether to playback the pre-alarm recording.

- Add a tick to the checkbox to play-back pre-alarm recordings.

7. Click on the [PLAY] button.

- Playback will start. (Page 75)

Viewing Playback Image Using a PC

TIME/DATE SEARCH

1. Click on “EVENT SEARCH” → “DATE SEARCH” in that order.

Search for recorded video of the specified time/date. Select the search conditions from the following options and then click the **[SEARCH]** button.

	DATE(DD/MM/YYYY)	TIME(HH:MM)
SEARCH DATE	11 / 10 / 2005	16 : 31
CAMERA CHANNEL	ch 1	
<div>SEARCH RESET</div>		

2. 3. 4.

2. Enter the date and time of the search.
3. Select the channel to be searched.
4. Click on the [SEARCH] button.
 - Playback screen will be displayed.
(Click on the RESET button to clear the entry.)

Playback Image Display

1. Executes either the “ALARM SEARCH” or the “DATE SEARCH”.

- The Playback image display screen will be displayed.



1. Playback Image Display Area

Displays Playback images.

2. [REC TYPE]

Displays the recording mode.
NORMAL, TIMER, ALARM, etc.

3. [STATUS]

Displays the playback status.
TOP, END, -x5, ..., -x1, PAUSE, x1, ..., x5

4. [PIC. SIZE (%)]

Selects the size of the display.

5. Display Information

Selects whether or not information is to be displayed.
CAMERA No., TITLE, PB TIME DISP., ALARM REPORT

6. Operation Buttons

- ▶ : Normal playback.
- || : Playback is paused.
- ▶▶/◀◀ : Search playback in the forward or reverse directions.
The search playback will be performed at x1 speed with one click, x3 speed with two clicks, and x5 speed with three clicks (the speed will be displayed in the operation status display area.)
- ▶/◀ : Single frame playback in the forward or reverse directions.

7. [SNAPSHOT]

It is possible to capture still images.
Enter the name of the folder in which data is to be saved on the personal computer in the text box, and then click on [JPEG]. The still image will be stored on the personal computer. The name of the image is automatically allocated. (See Still Image File Names on page 62)
* Add “\” to the end of the folder name in which the file is to be stored.

CAUTION

- A message stating “There is not a reply of the VR-509E” will be displayed if the playback display window is opened with a window opened on the live display screen, but this is not a malfunction.
- Close the live image display window if it is open. There are cases where playback will fail if it is started immediately after closing the live screen. Leave a small amount of time between switching from the live screen to the playback screen.
- The playback window will be initialized whenever the [DATE SEARCH PLAYBACK] search is run.

MEMO

Registration Functions for the Name of the Folders in Which Still Images are Saved

This is a convenient function that remembers the details entered into the save still image text box to simplify the procedure the next time an image is saved.

■ Preparations

1. Click on the [Tools] → [Internet Options] → [Contents] → [Auto-Complete] buttons on Internet Explorer with the mouse.
2. Add a tick to the [Form] column check box.

■ Registration

Enter the name of the folder that is to be registered in the save still image text box, and then press the [ENTER] key to register it.

■ Selecting folder names that have been registered

Double-click on the left-hand mouse button over the save still image text box to display a pull-down menu of the folder names that have been registered before.

Select the required folder name from amongst those displayed.

Useful Functions Using a PC

Inputting a Camera Title

1. Click on “VR-509E DISPLAY” → “CAMERA TITLE” in that order.

Displays the camera titles currently stored on the recorder. To change them, enter new camera titles for each camera channel and then click the [SAVE] button.

CHECK	INPUT	TITLE	CHECK	INPUT	TITLE
<input type="checkbox"/>	CAM 1	CAM 01	<input type="checkbox"/>	CAM 4	CAM 04
<input type="checkbox"/>	CAM 3	CAM 03	<input type="checkbox"/>	CAM 6	CAM 06
<input type="checkbox"/>	CAM 5	CAM 05	<input type="checkbox"/>	CAM 8	CAM 08
<input type="checkbox"/>	CAM 7	CAM 07	<input type="checkbox"/>	CAM 9	CAM 09
<input type="checkbox"/>	CAM 9	CAM 09			

[SAVE] [RESET]

* When [CAM1 to CAM9] for the [INPUT No.] is grayed out, it indicates that the camera input setting for [CAMERA SETUP-1] is set at [DISCONNECT]. (See page 20)

CAUTION

There are cases where the camera title will not be displayed normally on the [VR-509E DISPLAY] → [CAMERA TITLE] field on personal computers if it has been set at ["] on the VR-509's [CAMERA TITLE] setup screen.

2. Check on your desired checkbox.

- It is not possible to enter camera titles unless the relevant checkbox has first been clicked.

3. Enter the camera title.

Valid Characters

A maximum of twenty single-byte alphanumerals may be used for entering the camera title.

4. Click on the [SAVE] button.

- Make sure that all camera titles that need to be changed have been entered before pressing the [SAVE] button.
- The camera titles that have been left blank when the [SAVE] button is pressed will be initialized.
- Character amendments are not possible once the [SAVE] button has been pressed. The entire title must be entered in full once again.
- Click on the [RESET] button to return the settings to the VR-509 default settings.

Covert Channel Setting for Live image/ Playback display screen

1. Click on “WEB DISPLAY” → “COVERT CHANNEL” in that order.

COVERT CHANNEL(WEB) SETUP can be customized. After adjustment, click the [SAVE] button below.

CAMERA 1	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
CAMERA 2	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
CAMERA 3	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
CAMERA 4	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
CAMERA 5	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
CAMERA 6	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
CAMERA 7	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
CAMERA 8	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
CAMERA 9	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
PLAY PERMISSION	<input checked="" type="radio"/> Off <input type="radio"/> On

[SAVE] [RESET]

2. Change the setting. (See on page 27 for details)

3. Click on the [SAVE] button.

- (Click on “RESET” to return to the setting values on the main unit.)

Mail Notification Setting During Alarm Input

1. Click on “NETWORK” → “E-MAIL” in that order.

Message recipients and email procedures in the case of alarm input can be specified. After adjustment, click the [SAVE] button. [Help]

MODE	<input checked="" type="radio"/> Off <input type="radio"/> Alarm
MAIL(SMTP) SERVER	
INTERVAL	15 min
TO E-MAIL	
FROM E-MAIL	
SUBJECT	Starting Alarm REC'd
DETAIL	
LIST FORM	<input checked="" type="radio"/> Normal <input type="radio"/> Short
LOCATION NAME	
NETWORK SETUP ON VR-509E	
DOMAIN NAME	localhost
DNS SERVER	0 0 0 0
[SAVE] [RESET]	

2. 3. 4.

2. Enter/Select the required parameter.

Settings

MODE

Off: Disables the alarm report.

Alarm: Transmits an e-mail when an alarm is input.

MAIL (SMTP) SERVER

Enters the domain name of the mail server.

INTERVAL

5 min, 10 min, 15 min, 30 min: The shortest mail transmission interval.

TO E-MAIL

Enters the mail address of the recipient.

Separate the addresses with spaces when multiple recipients are to be entered.

FROM E-MAIL

Enters the mail address of the sender.

SUBJECT

Enters the subject name.

LIST FORM

Normal Mail: Creates an e-mail with less than 80 characters on one line.

Short Mail: Creates an e-mail with less than 30 characters on one line.

LOCATION NAME

Enters the installment location.

3. Check the existing network settings.

Display Items

DOMAIN NAME

Displays the domain name.

DNS SERVER

Displays the DNS server.

4. Click on the [SAVE] button.

- An e-mail will be transmitted in accordance with the specified parameters when an alarm is input.

5. The mail sending report settings confirmation screen will be displayed.

- Test mail transmission is possible by clicking on [TEST MAIL], so check to ensure that mail can be received by the specified address.

CAUTION

- There are cases where mail notification will not be carried out depending on the licensing agreement with the mail server. (The mail server for which licensing is to be carried out cannot be accessed.)
- Consult with the network administrator for details on the parameter values of the mail server.
- Not all alarm lists can be received on mobile telephones depending on the setting that determines the number of characters that can be received.
- All though mail will be notified within ten minutes of the first alarm input regardless of the mail notification interval setting, additional time may be required until receipt depending on the network environment.


Useful Functions Using a PC

Adjusting Clocks with the NTP Server

If the times set in the system clocks of all VR-509 that are linked up to a multiple unit network are not synchronized, alarm searches cannot be performed accurately. It is therefore necessary to make sure that all system clocks are synchronized in accordance with the NTP server settings when multiple VR-509 are connected together.

Registering NTP Server

1. Click on “NETWORK” → “NTP SERVER” in that order.

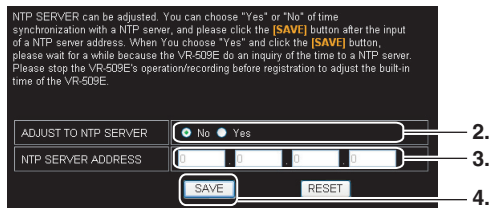

2. Select the [Yes] button.

3. Enter the NTP server address.

4. Click on the [SAVE] button.

- The system clock is synchronized with the NTP server.

5. Confirm the result of clock synchronization.

- The result of clock synchronization will be displayed.

When Clock Synchronization is Successful


- A message stating “Now time synchronization with a NTP server is “availability”.” will be displayed.

When Clock Synchronization Fails

- A message stating “The VR-509E failed in the inquiry to a designated NTP server.” will be displayed.
- Check to verify that the NTP server address was correctly entered, and then repeat the registration procedure.

Canceling NTP Server Registration

1. Click on “NETWORK” → “NTP SERVER” in that order.

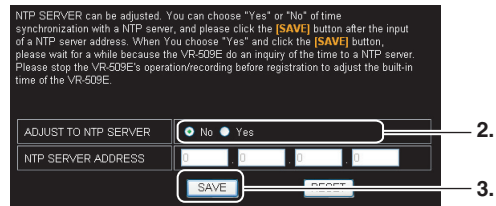

2. Select the [No] button.

3. Click on the [SAVE] button.


- The NTP server registration will be cancelled.
- A confirmation screen will be displayed.

MEMO

- The NTP server registration setting cannot be carried out when recording is in progress. It is possible to adjust the time during recording when NTP server registration has been set to [Yes].
When time synchronization with the NTP server has been enabled, time adjustment will be carried out once every hour.
- See page 107 for details on the personal computer settings (Windows XP and Windows 2000) for when the NTP server function is in use.


Downloading VR-509 Settings

 1. Click on “UTILITY” → “DOWNLOAD” in that order.




2. Click on the [EXEC] button.

- The “DOWNLOAD IN PROGRESS” screen will be displayed.
- A screen stating “Download data making completion” will be displayed when the download has finished.

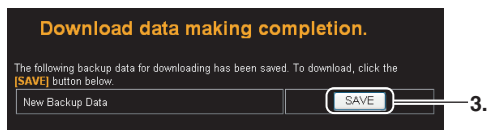


3. Click on the [SAVE] button.

- The “FILE DOWNLOAD” screen will be displayed.

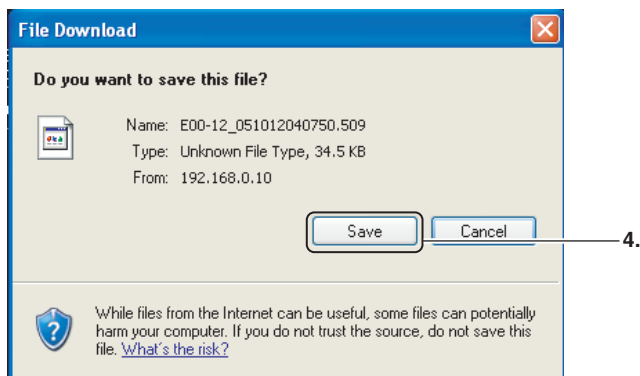

4. Click on the [SAVE] button.

- The “SAVE AS” screen will be displayed.

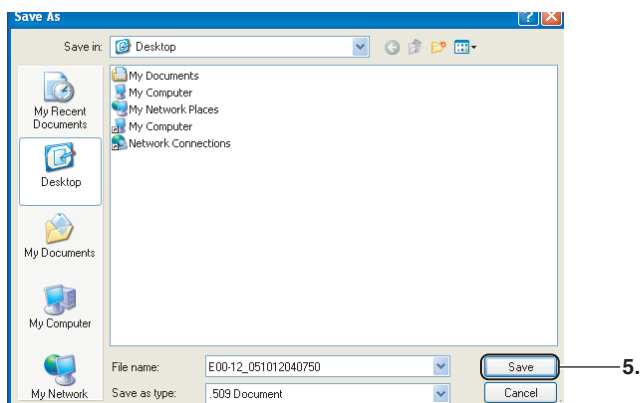


5. Click on the [SAVE] button.

- The downloading procedure will be activated.

Useful Functions Using a PC


Uploading VR-509 Settings

1. Click on “UTILITY” → “UPLOAD” in that order.

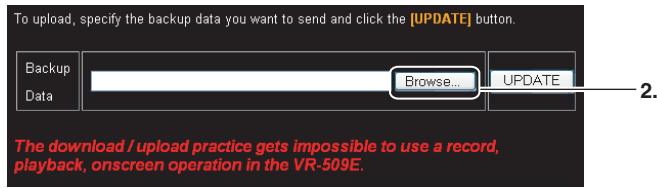

2. Click on the [Browse] button.


- The “FILE SELECTION” screen will be displayed.

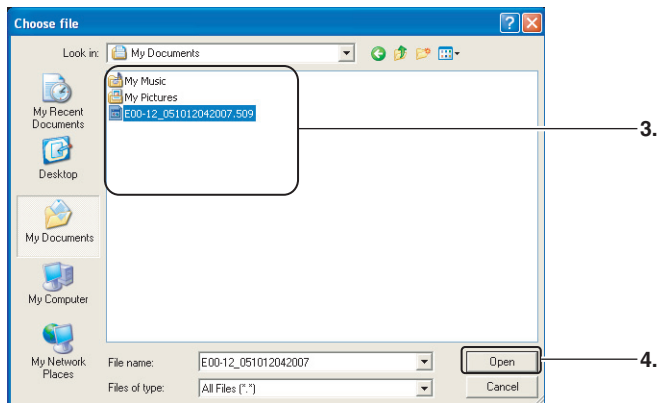

3. Click on the file that is to be uploaded.

4. Click on the [OPEN] button.


- The display will return to the “UPLOAD” screen.

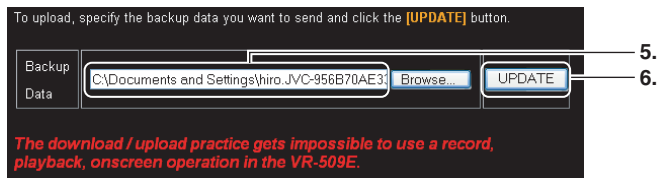

5. Check the name of the file to be uploaded.

6. Click on the [UPDATE] button.

- The “Upload re-confirmation to VR-509” screen will be displayed.

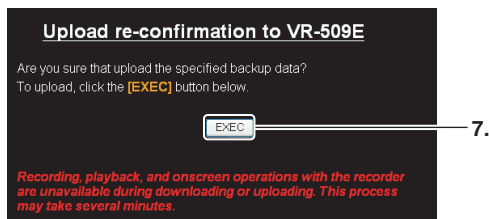

7. Click on the [EXEC] button.

- The uploading procedure will be activated.

8. Wait until the upload procedure has been completed.

- A screen stating “UPLOAD COMPLETE” will be displayed when the uploading procedure has finished.
- VR-509 will be automatically restarted.

MAINTENANCE

1. Click on “UTILITY” → “MAINTENANCE” in that order.

TOTAL TIME	17 H
POWER FAIL TIME LIST	
PL-1	02/02/2006 20:51
PL-2	02/02/2006 20:54
PL-3	02/02/2006 21:56
PL-4	02/03/2006 09:32

- Displays the usage time and power fail time list.

OPERATION LOG

1. Click on “UTILITY” → “OPE. LOG” in that order.

- Displays the OPERATION LOG.
- Displayed in the sequence of date/time the operation log was saved, date/time the operation was carried out, and the contents of the operation.

RECORDING LOG

1. Click on “UTILITY” → “REC LOG” in that order.

- Displays the RECORDING LOG.
- Displayed in the sequence of date/time the recording log was saved, date/time the recording was carried out, and the contents of the recording.

OPEN SOURCE

1. Click on “UTILITY” → “OPEN SOURCE” in that order.

Software information regarding this product, Model No. VR-509E
Copyright (C) 2005 Victor company of Japan Ltd.

The software of this product consists of the following software ;

1. the software which is developed by or for Victor Company of Japan, Ltd.;
2. the software which is licensed under the GNU GENERAL PUBLIC LICENSE (GPL); and
3. the software which is licensed under the GNU LESSER GENERAL PUBLIC LICENSE (LGPL).

Also this product includes:

4. the software developed by The Apache Software Foundation (<http://www.apache.org/>), and
5. PHP, freely available from <<http://www.php.net/>>
6. Others

For the software categorized as 2 and 3, the license is available in accordance with the GNU GPL and the GNU LGPL respectively.

These software are provided "as is" without any warranty. You may have the source code of these software, and may redistribute and/or modify such software pursuant to the terms of the GNU GPL and the GNU LGPL published by the Free Software Foundation.

We are ready to distribute you with the source code of such software at your costs, provided that you agree to the terms and conditions of GNU GPL and GNU LGPL. Please refer.
GPL(GNU Public License)
LGPL(GNU Public License)

- Displays the information concerning OPEN SOURCE.

STATUS

1. Click on “STATUS”.

This function displays setting contents of the VR-509E. Please click a below item for jumping to the status indication.

- WEEKLY TIMER
- DATE TIMER
- TIMER MODE
- COVERT CHANNEL(WEB)
- MONITOR
- ONSCREEN MODE
- SEQUENCE TIME
- QUAD DISPLAY
- COVERT CHANNEL(VR-509E)
- CAMERA TITLE
- RECORD SETUP
- REC PATTERN SET
- ALARM REC
- OPERATION
- AUDIO OUT
- ALARM TERMINAL
- REAR TERMINAL
- BUZZER
- ADDRESS
- E-MAIL
- NTP SERVER

- Displays all the setting items as a list. Click on your desired item, then you jumps to it.

Display Items

- WEEKLY TIMER
- DATE TIMER
- TIMER MODE
- COVERT CHANNEL (WEB)
- MONITOR
- ONSCREEN MODE
- SEQUENCE TIME
- QUAD DISPLAY
- COVERT CHANNEL (VR-509E)
- CAMERA TITLE
- RECORD SETUP
- REC PATTERN SET
- ALARM REC
- OPERATION
- AUDIO OUT
- ALARM TERMINAL
- REAR TERMINAL
- BUZZER
- ADDRESS
- E-MAIL
- NTP SAVER

* When [SEQUENCE TIME], [CAMERA TITLE], [REC PATTERN SET], [ALARM REC] and [ALARM TERMINAL] are grayed out, it indicates that the camera input settings for the [CAMERA SETUP-1] that correspond to the grayed out items have been set to [DISCONNECT]. (See page 20)

Changing Network Settings

Setting a Network Address

1. Click on “NETWORK” → “ADDRESS” in that order.

NETWORK SETUP can be adjusted. After adjustment, click the [SAVE] button. *If your IP has changed, update your computer network settings to avoid losing access.

METHOD	<input checked="" type="radio"/> Static <input type="radio"/> DHCP <input type="radio"/> Off
IP ADDRESS	192 168 0 10
NET MASK	255 255 255 0
DEFAULT GATEWAY	192 168 0 254
HOST NAME	vr509
DOMAIN NAME	localhost
DNS SERVER	0 0 0 0
MAC ADDRESS	00:80:88:41:d6:9e
<input type="button" value="SAVE"/> <input type="button" value="RESET"/>	

2. Change the settings. (For more details, see page 66)

- When network settings of VR-509 are changed, network settings need to be altered according at the PC. Consult the network administrator when making alterations.
- Upon changing network settings of VR-509, change the network settings at the PC as well, followed by restarting the Web browser.

3. Click on the [SAVE] button.

(Click on the [RESET] button to return to the setting values on the main unit.)

Registering an ACCESS USER

1. Click on “NETWORK” → “ACCESS USER SET” in that order.

Data for ACCESS USER can be added. Enter the user information and click the [SAVE] button.

USER NAME	
LOGIN NAME	
PASSWORD	
PASSWORD (AGAIN)	
ACCESS RIGHTS	<input checked="" type="radio"/> Administrators <input type="radio"/> Operators <input type="radio"/> Users
<input type="button" value="SAVE"/> <input type="button" value="RESET"/>	

2. Enter/selection user information.

Settings

USER NAME

Enter within 32 single-byte characters.

LOGIN NAME

Enter within 32 single-byte alphanumeric.

PASSWORD

Enter within 8 single-byte alphanumeric.

PASSWORD (AGAIN)

Enter the password once again for confirmation purposes.

ACCESS RIGHTS

Select from either Administrators, Operators or Users.

Access rights for each menu:

	Administrators	Operators	Users
Live Image Screens	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Event Search	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Timer Recording Reservation	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
WEB Displays	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Main Unit Displays	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Main Unit Operations	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Network	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Utilities	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Status	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

3. Click on the [SAVE] button.

Click on [RESET] to clear the entry.

ACCESS USER List Screen

1. Click on “NETWORK” → “ACCESS USER List”.

Displays the ACCESS USERs currently stored on the VR-509E. To update them, click the [UPDATE] button. To delete them, click the [DELETE] button.

USER NAME	LOGIN NAME	ACCESS RIGHTS	
Administrator	admin	Administrators	<input type="button" value="UPDATE"/> <input type="button" value="DELETE"/>
Guest	guest	Operators	<input type="button" value="UPDATE"/> <input type="button" value="DELETE"/>

2. This screen enables the access user profiles to be checked.

3. Click on the [UPDATE] button to make any amendments.

4. Click on the [DELETE] button to delete users.

MEMO

The following two user names are registered when the VR-509 is shipped from the factory.

	①	②
USER NAME	admin	guest
PASSWORD	vr-509	vr-509
ACCESS RIGHTS	Administrators	Operators


Changing VR-509 Settings Using a PC

It is possible to change the VR-509 settings with the use of a personal computer.

See the reference page for further details of the relevant parameters.

MONITOR

1. Click on “VR-509E DISPLAY” → “MONITOR” in that order.

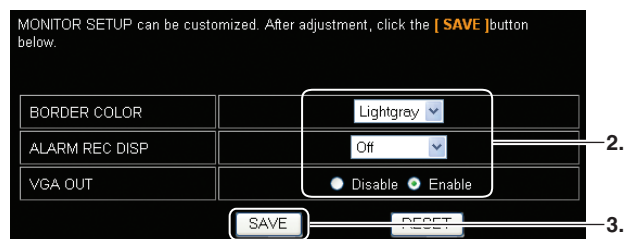

2. Change the settings. (See page 24 for details)
3. Click on the [SAVE] button.
(Click on the [RESET] button to return to the setting values on the main unit.)

ON-SCREEN MODE


1. Click on “VR-509E DISPLAY” → “ON-SCREEN MODE” in that order.



2. Change the settings. (See page 25 for details)
3. Click on the [SAVE] button.
(Click on the [RESET] button to return to the setting values on the main unit.)

SEQUENCE TIME


1. Click on “DISPLAY” → “SEQUENCE TIME” in that order.

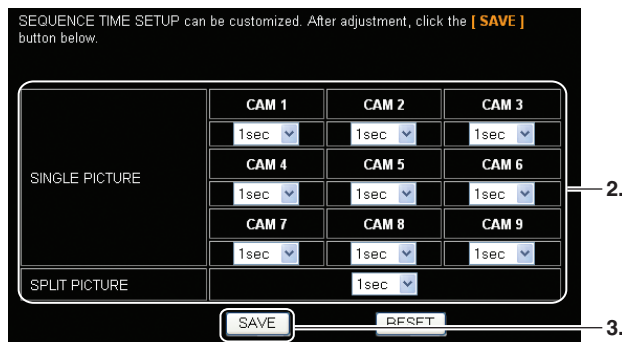

2. Change the settings. (See page 24 for details)
3. Click on the [SAVE] button.
(Click on the [RESET] button to return to the setting values on the main unit.)
* When the display is grayed out, it indicates that the camera input settings for the [CAMERA SETUP-1] that correspond to the grayed out cameras have been set to [DISCONNECT]. (See page 20)

QUAD DISPLAY

1. Click on “DISPLAY” → “QUAD DISPLAY” in that order.

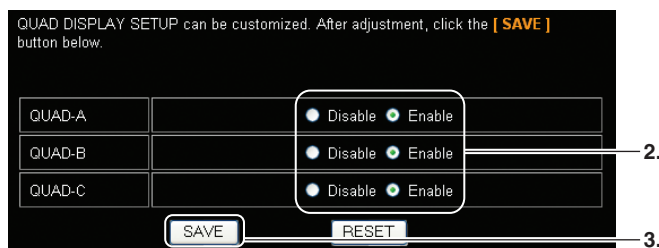

2. Change the settings. (See page 25 for details)
3. Click on the [SAVE] button.
(Click on the [RESET] button to return to the setting values on the main unit.)

Changing VR-509 Settings Using a PC

COVERT CHANNEL


1. Click on “WEB DISPLAY” → “COVERT CHANNEL” in that order.



2. Change the settings. (See page 27 for details)
3. Click on the [SAVE] button.
(Click on the [RESET] button to return to the setting values on the main unit.)

RECORD SETUP

1. Click on “FUNCTION” → “RECORD SETUP” in that order.

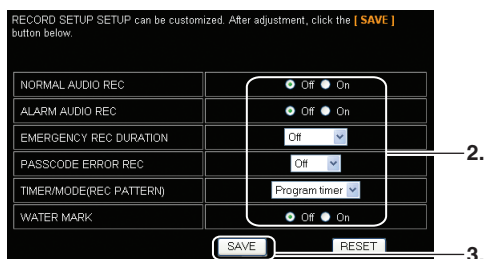


2. Change the settings. (See page 30 for details)
3. Click on the [SAVE] button.
(Click on the [RESET] button to return to the setting values on the main unit.)

REC PATTERN SET

It is possible to change the default recording parameters for each mode on the same screen as the setup mode selection screen.

1. Click on “FUNCTION” → “REC PATTERN SET” in that order.

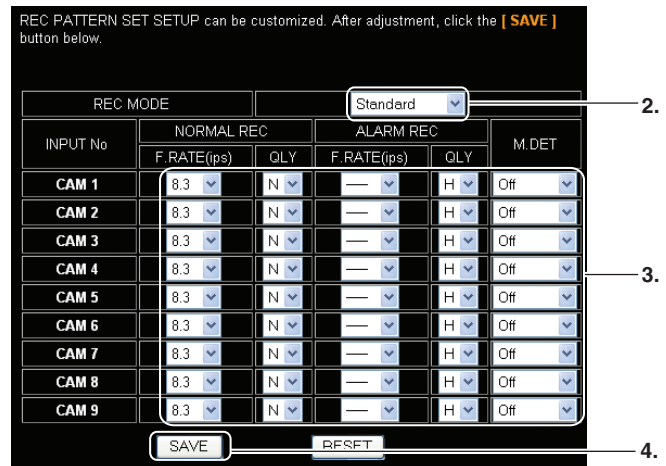


2. Select the mode to be set up.
3. Change the settings. (See page 31 for details)
4. Click on the [SAVE] button.
(Click on the [RESET] button to return to the setting values on the main unit.)

* When the display is grayed out, it indicates that the camera input settings for the [CAMERA SETUP-1] that correspond to the grayed out cameras have been set to [DISCONNECT]. (See page 20)

ALARM REC

1. Click on “FUNCTION” → “ALARM REC” in that order.

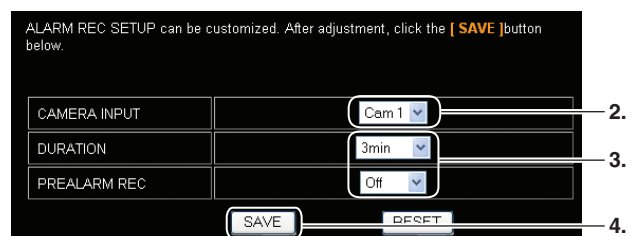

2. Select the camera to be set up.
3. Change the settings. (See page 31 for details)
4. Click on the [SAVE] button.

(Click on the [RESET] button to return to the setting values on the main unit.)

* When the display is grayed out, it indicates that the camera input settings for the [CAMERA SETUP-1] that correspond to the grayed out cameras have been set to [DISCONNECT]. (See page 20)

OPERATION

1. Click on “FUNCTION” → “OPERATION” in that order.




2. Change the settings. (See page 32 for details)

3. Click on the [SAVE] button.

(Click on the [RESET] button to return to the setting values on the main unit.)

AUDIO OUT

1. Click on “FUNCTION” → “AUDIO OUT” in that order.

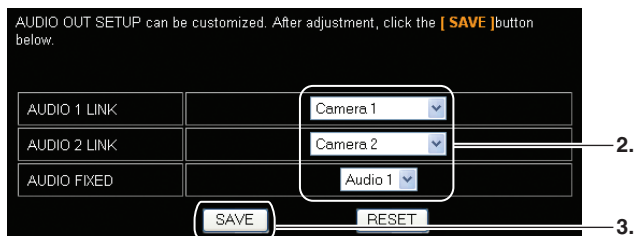


2. Change the settings. (See page 45 for details)

3. Click on the [SAVE] button.

(Click on the [RESET] button to return to the setting values on the main unit.)

ALARM TERMINAL

1. Click on “FUNCTION” → “ALARM TERMINAL” in that order.

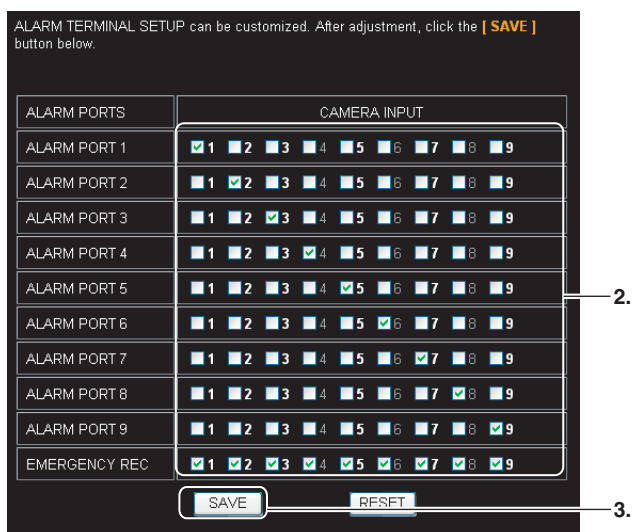

2. Change the settings.

- A table with the alarm input terminals laid out vertically and the camera inputs laid out horizontally will be displayed.

- If a check mark is added to the number that denotes the camera input to the right of a alarm terminal that has received an input, it means it has been enabled. If it remains blank, it means it is disabled.

3. Click on the [SAVE] button.

(Click on the [RESET] button to return to the setting values on the main unit.)

* When the display is grayed out, it indicates that the camera input settings for the [CAMERA SETUP-1] that correspond to the grayed out cameras have been set to [DISCONNECT]. (See page 20)

REAR TERMINAL

1. Click on “FUNCTION” → “REAR TERMINAL” in that order.




2. Change the settings. (See page 49 for details)

3. Click on the [SAVE] button.

(Click on the [RESET] button to return to the setting values on the main unit.)

BUZZER

1. Click on “FUNCTION” → “BUZZER” in that order.

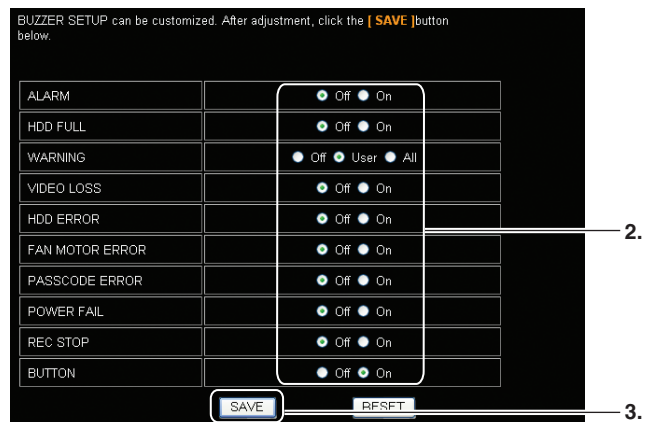


2. Change the settings. (See page 49 for details)

3. Click on the [SAVE] button.

(Click on the [RESET] button to return to the setting values on the main unit.)

Explanations

Menu Flowchart

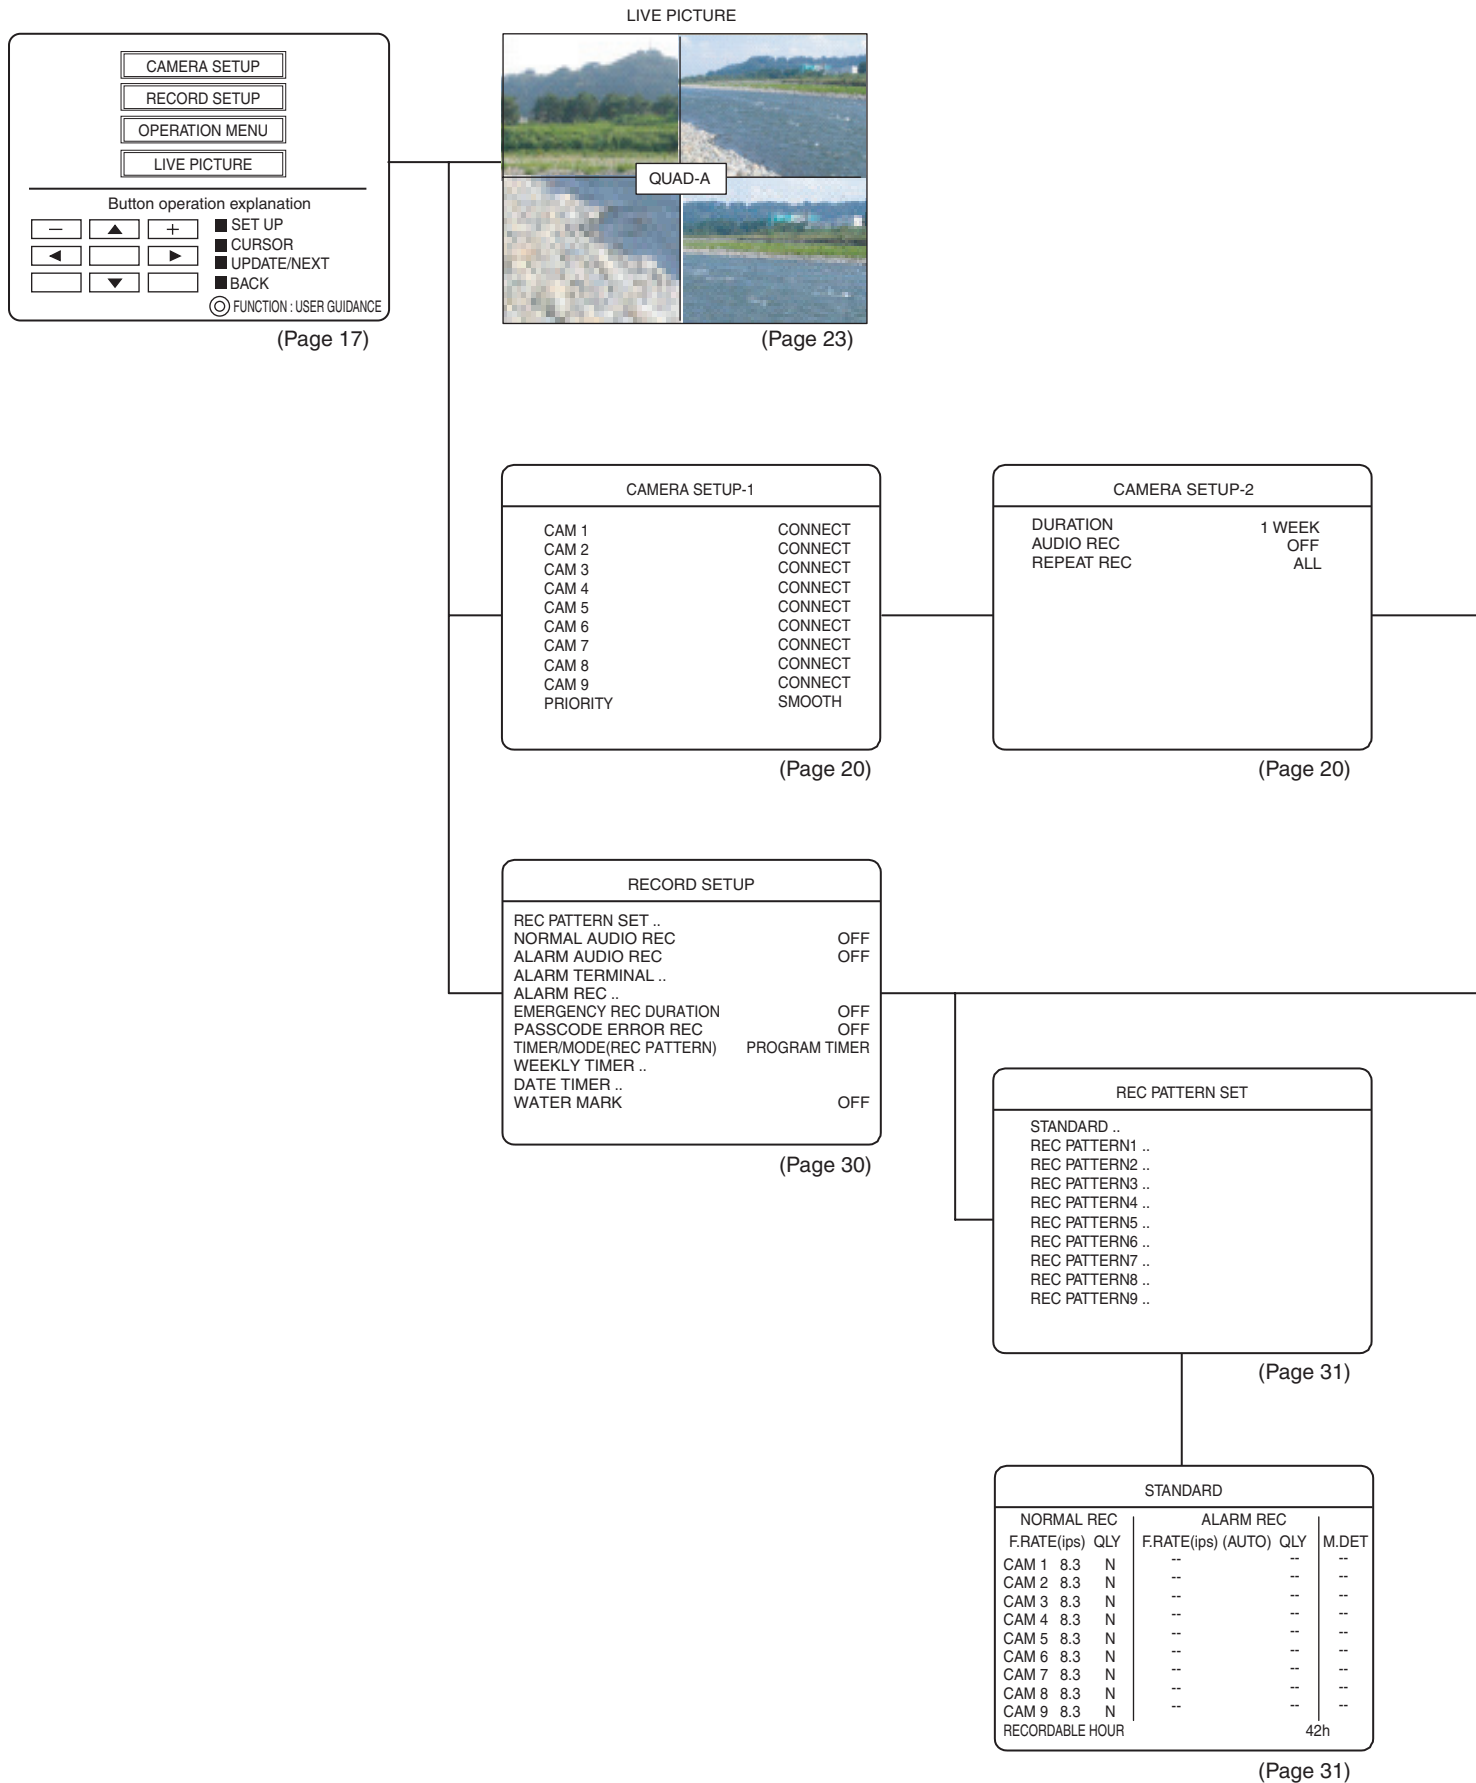

Menu Flowchart (continued)

RA SETUP-2
1 WEEK OFF ALL

(Page 20)

CAMERA SETUP-3					
NORMAL REC			ALARM REC		
F.RATE(ips)	QLY		F.RATE(ips) (AUTO)	QLY	M.DET
CAM 1	0.8	N	--	--	--
CAM 2	0.8	N	--	--	--
CAM 3	0.8	N	--	--	--
CAM 4	0.8	N	--	--	--
CAM 5	0.8	N	--	--	--
CAM 6	0.8	N	--	--	--
CAM 7	0.8	N	--	--	--
CAM 8	0.8	N	--	--	--
CAM 9	0.8	N	--	--	--
SET DETAIL MORE			FINISH		

(Page 20)

PATTERN SET

(Page 31)

ALARM TERMINAL	
ALARM PORT	
PORT1	(1)(-)(-)(-)(-)(-)(-)(-)(-)
PORT2	(-)(2)(-)(-)(-)(-)(-)(-)(-)
PORT3	(-)(-)(3)(-)(-)(-)(-)(-)(-)
PORT4	(-)(-)(-)(4)(-)(-)(-)(-)(-)
PORT5	(-)(-)(-)(-)(5)(-)(-)(-)(-)
PORT6	(-)(-)(-)(-)(-)(6)(-)(-)(-)
PORT7	(-)(-)(-)(-)(-)(-)(7)(-)(-)
PORT8	(-)(-)(-)(-)(-)(-)(-)(8)(-)
PORT9	(-)(-)(-)(-)(-)(-)(-)(-)(9)
EMERGENCY REC	
(1)(2)(3)(4)(5)(6)(7)(8)(9)	

(Page 33)

WEEKLY TIMER				
	START	END	MODE	EXEC
SUN	**:*	**	**:*	****
MON	**:*	**	**:*	****
TUE	**:*	**	**:*	****
WED	**:*	**	**:*	****
THU	**:*	**	**:*	****
FRI	**:*	**	**:*	****
SAT	**:*	**	**:*	****
DAY	**:*	-	**:*	****
REC DATE SET				
SUN	MON	TUE	WED	THU
FRI	SAT			

(Page 38)

STANDARD		
ALARM REC		
F.RATE(ips) (AUTO)	QLY	M.DET
--	--	--
--	--	--
--	--	--
--	--	--
--	--	--
--	--	--
--	--	--
42h		

(Page 31)

ALARM REC	
CAMERA INPUT	CAMERA 1
DURATION	3MIN
PREALARM REC	OFF
MOTION DETECT SET	
DYNAMIC SENSITIVITY LEVEL (DEFAULT:8)	8
STOP LEVEL (DEFAULT:2)	2
TARGET AREA LEVEL (DEFAULT:2)	2
MOTION DETECT AREA SET ..	
The camera is changed with a [Right/Left] key.	

(Page 34, 36, 37)

DATE TIMER			
START	END	MODE	EXEC
:*	**:*	***	**
DD/MM		DD/MM	
1.** / **		9.** / **	
2.** / **		10.** / **	
3.** / **		11.** / **	
4.** / **		12.** / **	
5.** / **		13.** / **	
6.** / **		14.** / **	
7.** / **		15.** / **	
8.** / **		16.** / **	

(Page 39)

Menu Flowchart (continued)

CAMERA SETUP

RECORD SETUP

OPERATION MENU

LIVE PICTURE

Button operation explanation

—

▲

+

■

 SET UP

◀

▶

■

 CURSOR

■

 UPDATE/NEXT

▼

■

 BACK

© FUNCTION : USER GUIDANCE

(Page 17)

OPERATION MENU

MONITOR ..

AUDIO OUT ..

ONSCREEN/OPERATION ..

NETWORK ..

MAINTENANCE ..

CLOCK SET ..

MONITOR

BORDER COLOR

SEQUENCE TIME ..

QUAD DISPLAY ..

COVERT CHANNEL ..

CAMERA TITLE ..

ALARM REC DISP

VGA OUT

LIGHTGRAY

OFF

ENABLE

(Page 24, 26)

AUDIO OUT

AUDIO 01 LINK

AUDIO 02 LINK

AUDIO FIXED

(NOT DESIGNATED)

(NOT DESIGNATED)

AUDIO 1

(Page 45)

ONSCREEN/OPERATION

ONSCREEN MODE ..

OPERATION ..

BUZZER ..

REAR TERMINAL ..

NETWORK

HOST NAME ..

METHOD

IP ADDRESS

NET MASK

DEFAULT GATEWAY

DNS SERVER

MAC ADDRESS

vr509

STATIC IP

192.168. 0. 10

255.255.255. 0

192.168. 0.254

0. 0. 0

00:80:88:40:b0:00

(Page 66)

MAINTENANCE

AUTO SCAN DISK

MANUAL SCAN DISK

ALARM LIST CLEAR

DEFRAG DATABASE..

FORMAT..

MIRRORING..

PASSCODE SET..

MAINTENANCE/LOG..

AREA SELECT..

OFF

EXEC

EXEC

(Page 50)

CLOCK SET

D / M / Y

H : M

.. / .. / 20 ..

.. : ..

(Page 19)

SEQUENCE TIME

CAMERA 1

CAMERA 2

CAMERA 3

CAMERA 4

CAMERA 5

CAMERA 6

CAMERA 7

CAMERA 8

CAMERA 9

SPLIT PICTURE

1 SEC

1 SEC

1 SEC

1 SEC

1 SEC

1 SEC

1 SEC

1 SEC

(Page 24)

ONSCREEN MODE

DATE/TIME

ALARM COUNT

ALARM DETECT

DISK CAPACITY

PLAYBACK

CAMERA TITLE

WARNING

REC TO STOP MESSAGE

ON

ON

ON

ON

ON

ON

OFF

(Page 25)

DEFRAG DATABASE

TIMER CONTROL

DATE AND HOUR

MANUAL

01 DATE 00 HOUR

EXEC

(Page 51)

FORMAT

HDD

IDE1

IDE2

EXTERNAL

CAPACITY

149GB

149GB

--GB

STATUS

NORMAL

NORMAL


DISCONNECT

FORMAT

EXEC

(Page 51)

Menu Flowchart (continued)

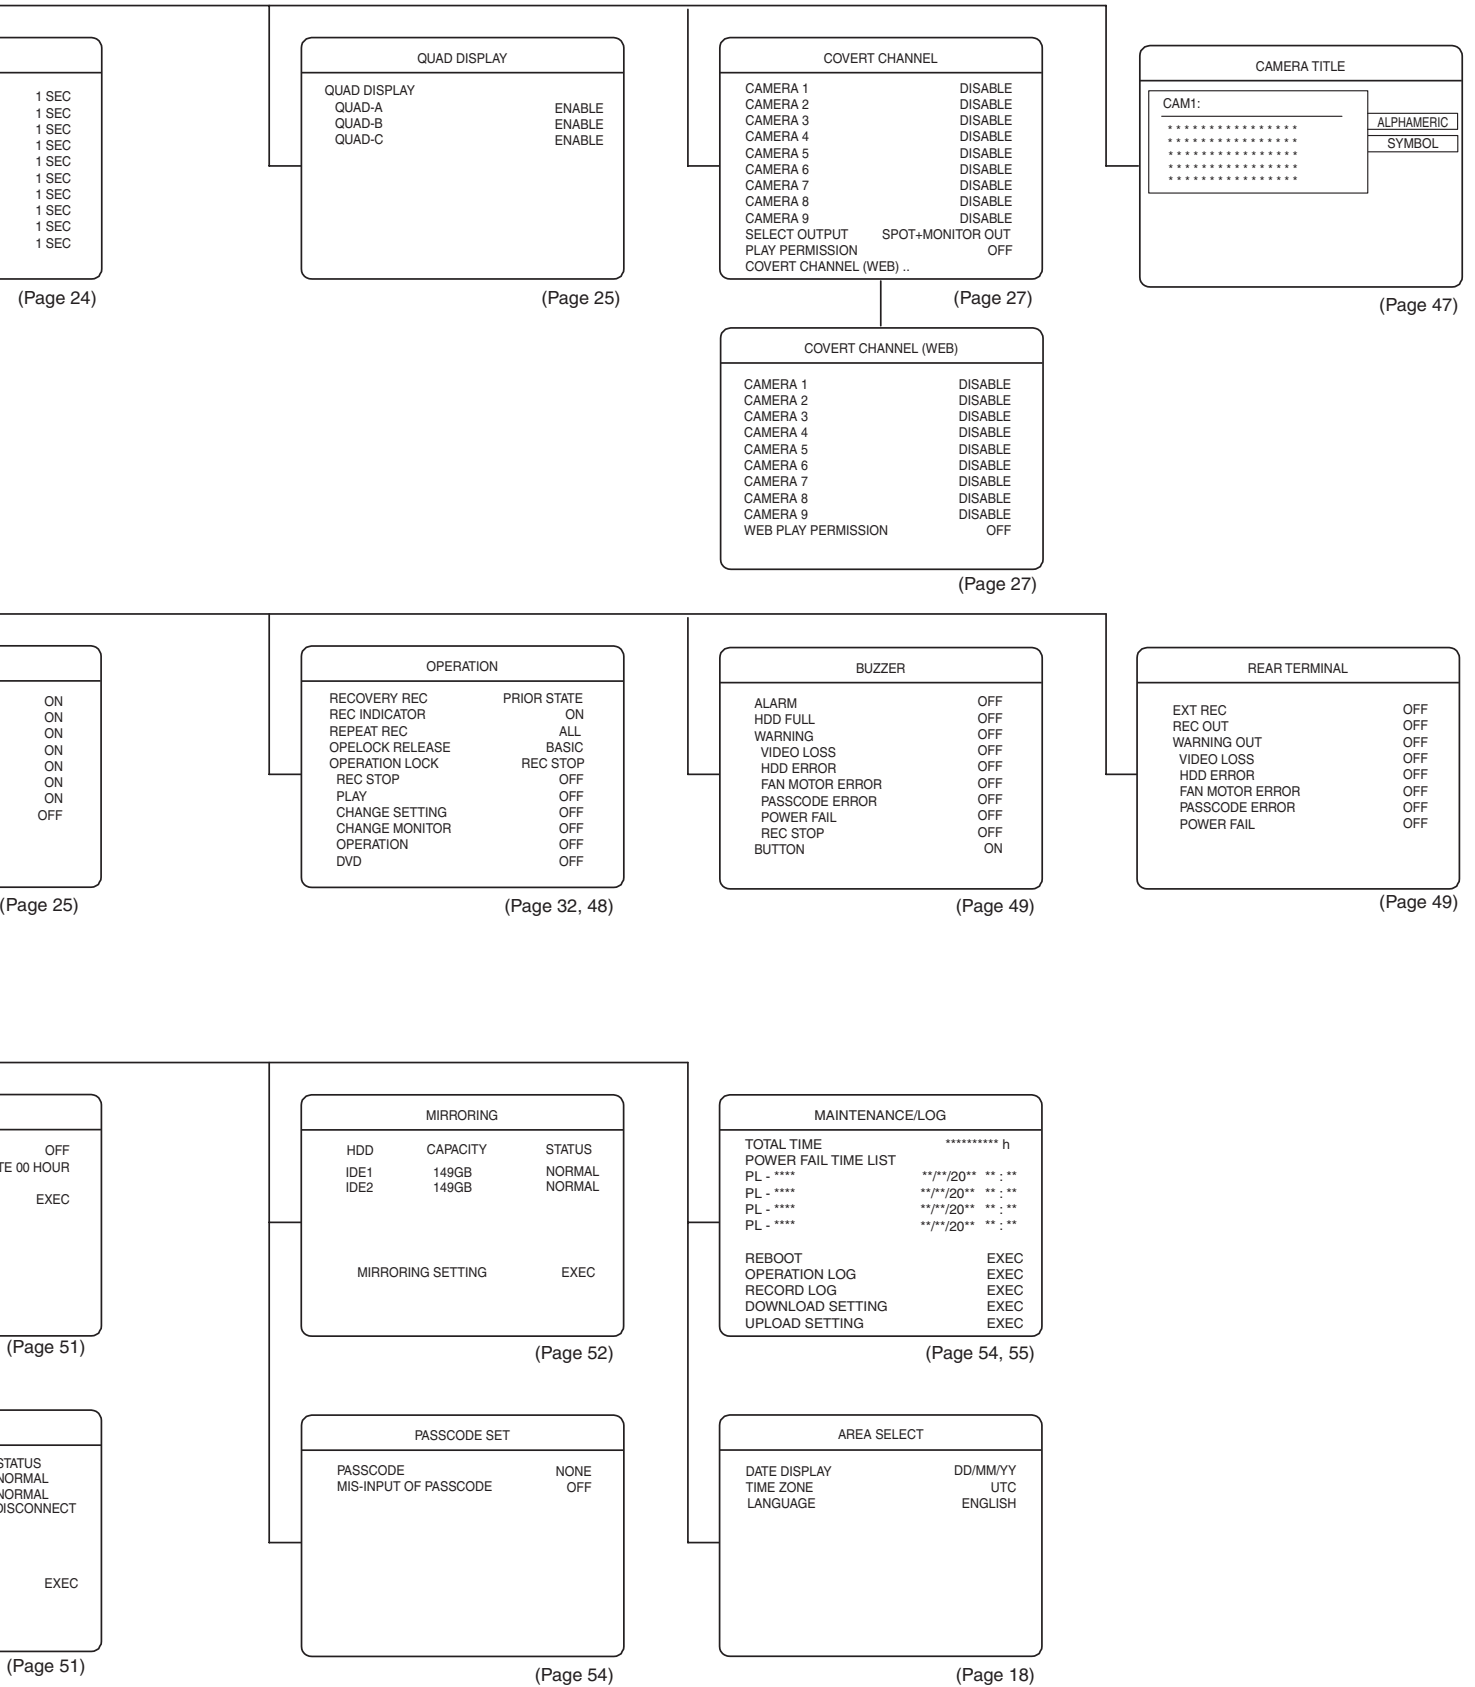

Explanations

Menu List

[●] are factory settings.

CAMERA SETUP-1 (Page 20)	
Items	Settings
CAM 1 to 9	● CONNECT, DISCONNECT
PRIORITY	● SMOOTH, HIGH-RESOLUTION

CAMERA SETUP-2 (Page 20)	
Items	Settings
DURATION	1DAY, 3DAYS, 5DAYS, ● 1WEEK, 2WEEKS, 3WEEKS, 1MONTH, 2MONTH, 3MONTH
AUDIO REC	ON, ● OFF
REPEAT REC	OFF, ● ALL, ALARM LOCK

RECORD SETUP (Page 30)	
Items	Settings
NORMAL AUDIO REC	ON, ● OFF
ALARM AUDIO REC	ON, ● OFF
EMERGENCY REC DURATION	● OFF, 30SEC, 1MIN, 5MIN, 10MIN, 20MIN, CONTINUE, MANUAL
PASSCODE ERROR REC	● OFF, 10SEC, 20SEC, 30SEC
TIMER/MODE (REC PATTERN)	● PROGRAM TIMER, REC PATTERN 1 to 9
WATER MARK	ON, ● OFF

NORMAL REC (Page 31)	
Items	Settings
F.RATE(ips) (NORMAL REC)	-, 0.08, 0.2, 0.4, 0.8, 1.7, 2.5, 5, ● 8.3, 12.5, 25(ips)
QLY (NORMAL REC)	H(High), ● N(Normal), B(Basic), L(Lowest)
F.RATE(ips) (ALARM REC)	0.8, 1.7, 2.5, 5, 8.3, 12.5, 25(ips), ● ---, AUTO
QLY (ALARM REC)	● H(High), N(Normal), B(Basic), L(Lowest)
M.DET	● OFF, NORM, USER, DOOR H, DOOR L, HALL H, HALL L, CHECK H, CHECK L, ATM H, ATM L, LOBBY H, LOBBY L, GATE H, GATE L, PARK H, PARK L, DARK H, DARK L, ELEVATR, COUNTER

ALARM TERMINAL (Page 33)	
Items	Settings
ALARM PORT 1 to 9	DISABLE (-), ● ENABLE (1) to (9)
EMERGENCY REC	DISABLE (-), ● ENABLE (1) to (9)

Menu List (continued)

[●] are factory settings.

ALARM REC (Page 34)	
Items	Settings
CAMERA INPUT	● CAMERA1, CAMERA2, CAMERA3, CAMERA4, CAMERA5, CAMERA6, CAMERA7, CAMERA8, CAMERA9
DURATION	10SEC, 15SEC, 30SEC, 1MIN, ● 3MIN, 5MIN, MANUAL
PREALARM REC	● OFF, 10SEC, 30SEC, 60SEC
MOTION DETECT SET	
DYNAMIC SENSITIVITY LEVEL	1 to 10(Factory setting: 8)
STOP LEVEL	1 to 3 (Factory setting: 2)
TARGET AREA LEVEL	1 to 10(Factory setting: 2)

WEEKLY TIMER (Page 38)	
Items	Settings
START DAY	SUN, MON, TUE, WED, THU, FRI, SAT, DAY
START TIME	00:00 to 23:59
END DAY	SUN, MON, TUE, WED, THU, FRI, SAT
END TIME	00:00 to 23:59
MODE	STANDARD, REC.P 1 to 9
EXEC	OFF, ON, WEEK
REC DATE SET	SUN, MON, TUE, WED, THU, FRI, SAT

DATE TIMER (Page 39)	
Items	Settings
START TIME	00:00 to 23:59
END TIME	00:00 to 23:59
MODE	STANDARD, REC.P 1 to 9
EXEC	OFF, ON
DATE SET	1/1 to 12/31

MONITOR (Page 24)	
Items	Settings
BORDER COLOR	BLACK, DARKGRAY, GRAY, ● LIGHTGRAY
ALARM REC DISP	● OFF, FIX, SEQUENCE
VGA OUT	● ENABLE, DISABLE

Explanations

Menu List (continued)

[●] are factory settings.

SEQUENCE TIME (Page 24)	
Items	Settings
CAMERA 1 to CAMERA 9	OFF, ● 1SEC, 2SEC, 3SEC, 5SEC, 10SEC
SPLIT PICTURE	● 1SEC, 2SEC, 3SEC, 5SEC, 10SEC

QUAD DISPLAY (Page 25)	
Items	Settings
QUAD DISPLAY	
QUAD-A	● ENABLE, DISABLE
QUAD-B	● ENABLE, DISABLE
QUAD-C	● ENABLE, DISABLE

COVERT CHANNEL (Page 27)	
Items	Settings
CAMERA 1 to CAMERA 9	ENABLE, ● DISABLE
SELECT OUTPUT	OFF, SPOT OUT, MONITOR OUT, ● SPOT + MONITOR OUT
PLAY PERMISSION	ON, ● OFF

COVERT CHANNEL (WEB) (Page 27)	
Items	Settings
CAMERA 1 to CAMERA 9	ENABLE, ● DISABLE
WEB PLAY PERMISSION	ON, ● OFF

CAMERA TITLE (Page 47)	
Items	Settings
CAM 1 to CAM 9	(20 one-byte characters) Factory setting: CAM 01 to CAM 09

AUDIO OUT (Page 45)	
Items	Settings
AUDIO 01 LINK	● (NOT DESIGNATED), CAMERA 1 to 9
AUDIO 02 LINK	● (NOT DESIGNATED), CAMERA 1 to 9
AUDIO FIXED	OFF, ● AUDIO1, AUDIO2

Menu List (continued)

[●] are factory settings.

ONSCREEN MODE (Page 25)	
Items	Settings
DATE / TIME	● ON, OFF
ALARM COUNT	● ON, OFF
ALARM DETECT	● ON, OFF
DISK CAPACITY	● ON, OFF
PLAYBACK	● ON, OFF
CAMERA TITLE	● ON, OFF
WARNING	● ON, OFF
REC TO STOP MESSAGE	ON, ● OFF

OPERATION (Page 32, 48)	
Items	Settings
RECOVERY REC (Page 32)	OFF, ● PRIOR STATE, COMPULSION REC
REC INDICATOR (Page 32)	● ON, OFF
REPEAT REC (Page 32)	OFF, ALARM LOCK, ● ALL
OPE LOCK RELEASE (Page 48)	● BASIC, PASSCODE
OPERATION LOCK (Page 48)	OFF, ● REC STOP, ALL, USER
REC STOP	ON, ● OFF
PLAY	ON, ● OFF
CHANGE SETTING	ON, ● OFF
CHANGE MONITOR	ON, ● OFF
OPERATION	ON, ● OFF
DVD	ON, ● OFF

BUZZER (Page 49)	
Items	Settings
ALARM	ON, ● OFF
HDD FULL	ON, ● OFF
WARNING	● OFF, USER, ALL
VIDEO LOSS	ON, ● OFF
HDD ERROR	ON, ● OFF
FAN MOTOR ERROR	ON, ● OFF
PASSCODE ERROR	ON, ● OFF
POWER FAIL	ON, ● OFF
REC STOP	ON, ● OFF
BUTTON	● ON, OFF

Explanations

Menu List (continued)

[●] are factory settings.

REAR TERMINAL (Page 49)		
Items		Settings
EXT REC		● OFF, TRIGGER, MANUAL
REC OUT		● OFF, ALL, ALARM REC, STOP REC
WARNING OUT		● OFF, USER, ALL
	VIDEO LOSS	ON, ● OFF
	HDD ERROR	ON, ● OFF
	FAN MOTOR ERROR	ON, ● OFF
	PASSCODE ERROR	ON, ● OFF
	POWER FAIL	ON, ● OFF

NETWORK (Page 66)	
Items	Settings
HOST NAME	● vr509
METHOD	OFF, ● STATIC IP, DHCP
IP ADDRESS	● 192.168.0.10
NET MASK	● 255.255.255.0
DEFAULT GATEWAY	● 192.168.0.254
DNS SERVER	● 0.0.0.0
MAC ADDRESS	Cannot set

MAINTENANCE (Page 50, 53)	
Items	Settings
AUTO SCAN DISK (Page 50)	ON, ● OFF
MANUAL SCAN DISK (Page 50)	EXEC
ALARM LIST CLEAR (Page 53)	EXEC

DEFRAG DATABASE (Page 51)		
Items		Settings
TIMER CONTROL		ON, ● OFF
DATE AND HOUR	Date	1 to 31 (specified date), SUN, MON, TUE, WED, THU, FRI, SAT (specified day of the week)
	Hour	0 to 23
MANUAL		EXEC

FORMAT (Page 51)	
Items	Settings
FORMAT	EXEC

Menu List (continued)

[●] are factory settings.

MIRRORING (Page 52)	
Items	Settings
MIRRORING	
(When in MIRRORING OFF)	EXEC
(When in MIRRORING ON)	EXEC

PASSCODE SET (Page 54)	
Items	Settings
PASSCODE	● NONE, DONE (Factory setting: 0000)
MIS-INPUT OF PASSCODE	● OFF, ONCE, TWICE, THRICE

MAINTENANCE / LOG (Page 54, 55)	
Items	Settings
REBOOT (Page 55)	EXEC
OPERATION LOG (Page 54)	EXEC
RECORD LOG (Page 54)	EXEC
DOWNLOAD SETTING (Page 63)	EXEC
UPLOAD SETTING (Page 63)	EXEC

AREA SELECT (Page 18)	
Items	Settings
DATE DISPLAY	● DD/MM/YY, MM/DD/YY, YY/MM/DD
TIME ZONE	● UTC, London, Berlin, Rome, Madrid, Paris, CET, GMT+1, EET, GMT+2, GMT+3, GMT+4, GMT+5, GMT+6, GMT+7, GMT+8, Japan, GMT+9, GMT+10, GMT+11, GMT+12, GMT-12, GMT-11, Hawaii, GMT-10, Alaska, GMT-9, Pacific, GMT-8, Arizona, Mountain, GMT-7, Central, GMT-6, East-Indian, Eastern, GMT-5, Atlantic, GMT-4, GMT-3, GMT-2, GMT-1
LANGUAGE	ENGLISH

CLOCK SET (Page 19)	
Items	Settings
Y	2005 to 2037
M	1 to 12
D	1 to 31
H	0 to 23
M	0 to 59

Troubleshooting

Problems Related to Error Code and On-screen Display

On-screen Message	Cause and Recovery	Refer to Page
“E-01 DETECTED.” *1, *2	<ul style="list-style-type: none"> System restarted due to error in the functioning of the hard disk. Continues operation with the intact hard disk. The data in the disconnected hard disk will not be recovered if the manual scan disk is executed. <p>→ Switch the power supply off and then on again, and try the formatting or defrag functions once again.</p> <p>→ Consult your nearest JVC dealer.</p>	—
“E-02 NO IDE 1 HDD” “E-02 NO HDD” “E-02 IDE 1 FORMAT NG” “E-02 MIRRORING NG”	<ul style="list-style-type: none"> Abnormality with hard disk operations (cannot be started up.) <p>→ Switch the power supply off and then on again, and try the formatting or defrag functions once again.</p> <p>→ Consult your nearest JVC dealer.</p>	—
“NO VIDEO IN** INPUT (E-03)” *2	<ul style="list-style-type: none"> No video input signals. <p>→ Stop operations and check the connection.</p> <p>→ Double-check settings in the [CAMERA SETUP-1] Menu.</p> <p>* Recording may fail if it is continued after the error message is displayed. Set the [CAMERA] setting to “DISCONNECT” in the [CAMERA SETUP-1] Menu or eliminate the cause of the error immediately.</p>	P15 P20
“E-05 DETECTED.” *1, *2	<ul style="list-style-type: none"> Error in the fan motor. <p>→ Consult your nearest JVC dealer.</p>	—
“E-06 DETECTED.” *1, *2	<ul style="list-style-type: none"> EEPROM error. <p>→ If this error occurs due to alteration of a menu setting, turn the equipment off/ on and check the setting.</p> <p>→ If this error keeps occurring due to alteration of a menu setting or during operation, consult your nearest JVC dealer.</p>	—
“E-07 DETECTED.” *1, *2	<ul style="list-style-type: none"> Codec 1 error. (Mostly used for recording and VR-509 playback) <p>* HDD/DVD playback, and recording onto the HDD will not be carried out normally if this is displayed.</p> <p>→ Consult your nearest JVC dealer.</p>	—
“E-08 DETECTED.” *1, *2	<ul style="list-style-type: none"> Codec 2 error. (Mostly used for transmission and DVD trans-coding) <p>* USB still image capturing, DVD export processing and live/playback transmission to the network will not be carried out normally if this is displayed.</p> <p>→ Consult your nearest JVC dealer.</p>	—
“E-09 DETECTED.” *1, *2	<ul style="list-style-type: none"> Error on one of the built-in hard disk drives. (This error is detected only when in the Mirroring Setting mode.) <p>→ Consult your nearest JVC dealer.</p>	—
“E-10 DETECTED.”	<ul style="list-style-type: none"> Abnormality with the DVD drive. <p>→ Consult your nearest JVC dealer.</p>	—
“POWER FAILURE” *2	<ul style="list-style-type: none"> Displayed when a power fail occurs. <p>→ This is not an error. Press the [CANCEL] button to clear the message.</p>	P54

*1 to *3: See the next page

Troubleshooting (continued)

Problems Related to Error Code and On-screen Display (continued)

On-screen Message	Cause and Recovery	Refer to Page
“HARD-DISK CAPACITY IS VERY LITTLE”	<ul style="list-style-type: none"> Recordable space on the hard disk is running out. → When hard disk space is about to run out, make changes accordingly such as formatting the hard disk or changing the setting to the Repeat Record mode. * All event record data will be deleted when formatting is executed.	P51 P32
“NO HARD-DISK REMAINING CAPACITY” *1, *3	<ul style="list-style-type: none"> No space available on the hard disk for recording. → Format the hard disk to create recording space or set Repeat REC to values other than “OFF”. * All event record data will be deleted when formatting is executed.	P51 P32
“MAINTENANCE PROCEEDING”	<ul style="list-style-type: none"> Self-diagnosis of VR-509 in progress. → This is not an error. * When maintenance is in progress there are cases where the audio sound may break up or the images be displayed after a delay during playback. In this event, wait until the “MAINTENANCE PROCEEDING” message has disappeared before restarting playback.	—
“NTP SERVER CONNECTION ERROR”	<ul style="list-style-type: none"> The NTP server registration has been enabled, but a connection to the NTP server failed. → Repeat the NTP server registration procedure, or set the NTP server function to DISENABLE.	P78
“SYSTEM REBOOTED TO CHECK HARD DISK”	<ul style="list-style-type: none"> The system has been rebooted due to temporary unstable operations in the HDD (power fail to additional hard disk units, etc.) Displayed during HDD substitute sector processing. → Operations may be continued without problem if the system returns to normal after rebooting. Consult your nearest JVC Dealer if this problem occurs frequently.	P55

*1: The buzzer will sound when an error occurs.

*2: A signal will be output to the [WARNING OUT] terminal when an error occurs.

*3: When the hard disk is full, priority is given to this display even when the command to start recording is received by pressing the [REC/STOP] button or alarm input during playback. (Blinks for 5 seconds)

Explanations

Troubleshooting (continued)

Problems with the DVD

If the following messages are displayed during DVD exporting or DVD playback, press the [CANCEL] button to delete the message, and then check the cause of the problem.

On-screen Message	Cause and Recovery	Refer to Page
“DVD export data retrieval was discontinued (D-01)” “DVD export data retrieval was discontinued (D-02)” “DVD export data retrieval was discontinued (D-03)”	<ul style="list-style-type: none"> No relevant retrieval data. The result of the search exceeds the disc capacity. Search processing error. 	P57
“DVD export data conversion was discontinued (D-01)” “DVD export data conversion was discontinued (D-02)” “DVD export data conversion was discontinued (D-03)”	<ul style="list-style-type: none"> No relevant conversion data. The result of the conversion exceeds the disc capacity. Conversion processing error. 	P57
“DVD export data disc making was discontinued (D-01)” “DVD export data disc making was discontinued (D-02)” “DVD export data disc making was discontinued (D-03)”	<ul style="list-style-type: none"> Disc creation failed. → There is a chance that an error occurred on the relevant disc. The inserted disc is not supported. Disc deletion failed. → There is a chance that an error occurred on the relevant disc. 	P57
“There is no file can be reproduced in DVD (D-01)” “There is no file can be reproduced in DVD (D-02)” “There is no file can be reproduced in DVD (D-03)”	<ul style="list-style-type: none"> The directory for list creation does not exist. The file for list creation does not exist. List creation failed. 	P60

Problems with Flash Memories

On-screen Message	Cause and Recovery	Refer to Page
“Still picture preservation failure” “Set data save failed”	<ul style="list-style-type: none"> The flash memory was disconnected during writing operations. The flash memory is set for read-only operations. → Disable the read-only function. The flash memory does not have sufficient capacity. → Increase the available capacity, or connect a new flash memory. Sufficient capacity is available, but writing is not possible. (There are limits to the number of files a USB flash memory can store in the root directory.) → Either store the new file in a sub-directory, or delete some of the other files. 	P62 P63
“Set data of the USB flash memory cannot be recognized”	<ul style="list-style-type: none"> The flash memory was disconnected during reading operations. No menu setting data exists on the flash memory. The VR-509 version does not match up with the menu setting data version. The menu setting data file is damaged. 	P63

Troubleshooting (continued)

Other Problems

Symptom	Cause and Recovery	Refer to Page
Power cannot be turned on.	→ Check to ascertain that the power cable has been plugged in correctly.	—
[REC/STOP] and [PLAY/PAUSE] buttons do not work.	→ Check to ascertain if the OPERATION LOCK is activated. → Check to ascertain if the TIMER STANDBY mode is activated.	P48 P38, P39
Playback image is not displayed on the monitor.	→ Check the monitor connection. → Select a camera that has a recorded image.	P15 P41
Unable to start program recording using the Program Timer	→ Check the DATE/TIME settings. → Check to ascertain if the TIMER STANDBY mode is activated. → Check the TIMER PROGRAM.	P19 P38 P39
Menu screen is not displayed.	→ Check to ascertain if the OPERATION LOCK is activated. → Check to ascertain if the TIMER STANDBY mode is activated.	P48 P38
No on-screen display of date/time and title.	→ Check to ascertain that the settings on the [ONSCREEN MODE] screen are set to "ON".	P25
Date/Time is not recorded.	→ Check the DATE/TIME settings.	P19
[TIMER] indicator blinks.	<ul style="list-style-type: none"> The PROGRAM TIMER has not been reserved, or there is no recording reservation that can be executed. → Check the PROGRAM TIMER. <ul style="list-style-type: none"> There is no space left on the hard disk. → Format the hard disk to create recording space or set [REPEAT REC] in the [OPERATION] menu to values other than "OFF".	P38, P39 P51, P32
Unable to play back audio sound.	→ Make recordings with the [AUDIO REC] in the [RECORD SETUP] menu set to "ON". * Sound audio cannot be recorded when the [F.RATE] setting on the [REC PATTERN SET] menu has been specified as "0.08" or "0.2".	P30, P31
Unable to execute Skip Jump or Direct Jump	→ Check the DATE/TIME setting. → Check the SKIP setting.	P19 P44
Cannot mount rack fittings	→ Rack mount fittings are optional. Please consult the nearest JVC dealer for details.	—

Troubleshooting (Web Browser)

Problems that Trigger Error Messages

Error Message	Cause and Recovery
[Normal Recording in Progress: (5XX2)]	Perform operations via the Web browser after stopping or ending all operations on the VR-509.
[Timer Recording in Progress: (5XX3)]	
[Alarm Recording in Progress: (5XX5)]	
[Emergency Recording: (5XX6)]	
[On-screen/Menu Control: (5XX7)]	
[Timer Mode Standby: (5XX8)]	
[Warning: Disable JavaScript in your web browser]	JavaScript is prohibited on the Web browser currently in use. → Alter the security level in the [Internet Options] Menu of the Web browser.
[Authorization Required]	User Name and password verification during access to the VR-509 failed. → Access the VR-509 again and enter the correct user name and password.
[Timer Mode Standby cannot be activated]	There is no timer program in the Weekly Timer or Date Timer to be executed. → Double-check settings in the Weekly Timer and Date Timer.
[***: (4xxx)] [***: (xxxx)]	Processing of setting request from the Web browser failed. → Select the menu item using the Menu button and resend the request, or refresh the URL and perform operations via the Web browser again.
[SYSTEM ERROR (E_xx): ***]	System error has been detected on the VR-509. * The live screen and playback screen cannot be viewed in this event. Also, the VR-509 settings cannot be amended. → Check the operational status of the VR-509.

Troubleshooting (Web Browser) (continued)


Problems that Trigger Error Messages

Error Message	Cause and Recovery
Unable to gain access by entering the specified URL at the browser.	→ Disable the use of proxy servers in the [Internet Options] Menu of the Web browser.
User name and password are requested when “CONFIGURATION” and “TIMER RECORDING” are selected.	→ Login by entering a registered user name and password with a higher level of access rights.
Password for Administrator rights forgotten and menu screen for Web browser operation cannot be displayed.	Clients should manage important information such as passwords. → Deactivation of passwords that involve security issues need to be repaired. Consult your nearest JVC dealer.
Daily mode in the Weekly Timer cannot be selected.	→ In the Program List for Weekly Timer, click the [+] [–] button of the program for which the starting day is set as [DAY]. Set this to the Daily mode.
New programs cannot be added to the Weekly Timer/Date Timer	To add new programs, do so using the [+] [–] and [CANCEL] buttons in the Program List.

Web Browser Glossary

Domain name	The network name to which the network-connected PC belongs.
Host Name	<p>Name of PC (or VR-509) on the network.</p> <p>The name of the PC connected to the network is managed by a database called DNS (Domain Name System). DNS links the IP address assigned to each PC with the domain names, and enables a user to specify a PC to access.</p>
IP Address	<p>An identification number assigned to each PC connected to the network. This is used for communication between network devices.</p> <p>There are 2 types of IP address, namely Global IP Address and Local IP Address (Private IP Address).</p> <div style="display: flex; align-items: center; justify-content: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">IP Address</div> <div style="margin: 0 10px;">↔</div> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">Host Name</div> <div style="margin: 0 10px;">↔</div> <div style="border: 1px solid black; padding: 2px;">Domain Name</div> </div> <div style="display: flex; align-items: center; justify-content: center; margin-top: 5px;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">192.168.0.10</div> <div style="margin: 0 10px;">Convert</div> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">.vr509</div> <div style="border: 1px solid black; padding: 2px;">jvc-victor.co.jp</div> </div> <p>IP addresses assigned by the PC are converted by the DNS server into host names and domain names.</p>
Global IP Address	Just as separate IP addresses are required on a network, this is also required for all PCs that are connected to the Internet throughout the world. These IP addresses are known as Global IP Addresses, and are usually assigned by the Internet service provider.
Local IP Address	Separate IP addresses can be used freely within networks that are not connected to the Internet (eg. within a family or company). These are known as Local IP Addresses.
DHCP (Dynamic Host Control Protocol)	<p>This is a method that automatically assigns IP addresses on the network.</p> <p>The DHCP server will automatically assign an IP address to a PC when it is connected to the network.</p>
Subnet mask	<p>A mechanism that manages a network by segmenting it into multiple virtual networks (subnets).</p> <p>Subnet mask is a 32-bit value that is used to define how many bits are to be used within the IP address for identifying the subnet.</p>
LAN (Local Area Network)	A network that is built within a comparatively confined area such as within a building, company or office.
Default Gateway	Hardware and software that are used mutually for the translation of different protocols during communication of a PC with one that does not belong to the same network. In Windows, setting of a default gateway is required when setting the IP address.
Protocol	A set of rules used for communication of PCs or devices via the network.
TCP/IP	Abbreviation for Transmission Control Protocol/Internet Protocol. This is one of the protocols used by the network.
Login	Refers to the commencement of use upon connection of a PC terminal to an online database or server.
Peer-to-Peer	A small-scale network that connects PCs on a peer level (1-to-1).
NTP	<p>A system that automatically synchronizes the system clocks of equipment connected to the network.</p> <p>The NTP Server function is built into WindowsXP, Windows 2000 as a standard feature. (Page 107)</p> <p>The NTP server can also be accessed and used via the Internet.</p>

Normal Recording

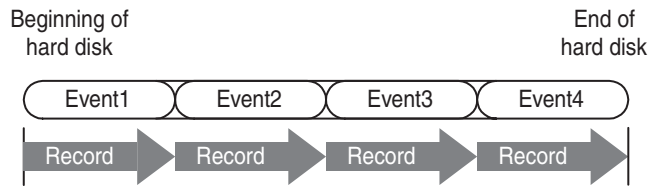

- Recording is executed from the start till the end of the hard disk during normal recording.
- A recording operation from the time it starts till it ends is referred to as an “Event”.
- Recording will stop when it reaches the end of the hard disk, and further recording will not be possible.
- When playback of events is executed as in the above diagram, the playback (audio and video) image will freeze for an instant at the boundaries of events.


Repeat Recording

When recording reaches the end of the hard disk and there is no space left for recording, it returns to the start of the hard disk to overwrite old data. Such an operation is known as Repeat Record. Display the [OPERATION] menu screen to execute [REPEAT REC]. (Page 32)


OPERATION	
RECOVERY REC	OFF
REC INDICATOR	ON
REPEAT REC	OFF
OPELOCK RELEASE	BASIC
OPERATION LOCK	OFF
REC STOP	OFF
PLAY	OFF
CHANGE SETTING	OFF
CHANGE MONITOR	OFF
OPERATION	OFF
DVD	OFF

Set


- When “ALARM LOCK” is selected
 - Executes repeat recording in the normal recording area (free space) excluding alarm recording data.

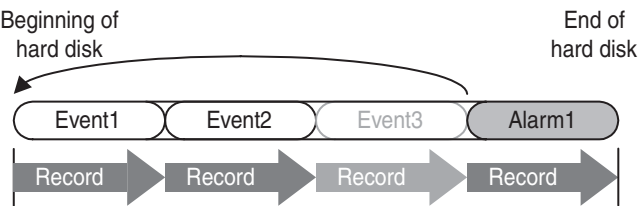

- Stops when there are too many alarm records and no space is left for the normal recording area.

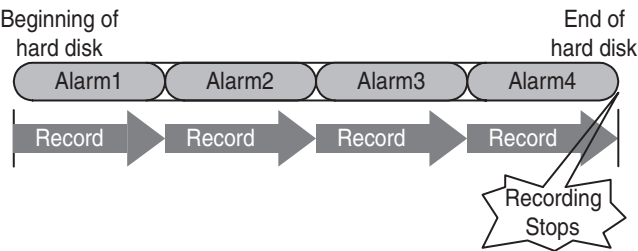

- When “ALL” is selected
 - Execute repeat recording regardless of alarm recording/normal recording area.
 - Recording will continue lastingly until stopping the recording.

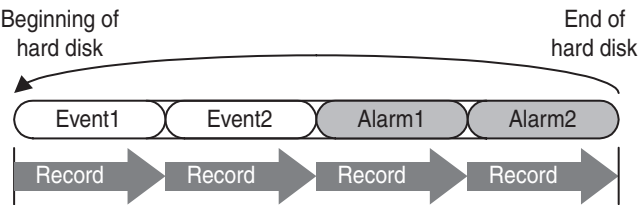

Notes on Repeat Recording

- The illustrations above on recording models are merely image diagrams and is different from the actual method of recording.
- Repeat Record overwrites from the oldest event. Data that has been overwritten will be totally deleted.
- There are cases where the deletion time for each channel does not match up.

Pre-alarm Recording


Prealarm Recording is a feature that works hand-in-hand with Alarm Recording that starts recording automatically by tracing back to the time prior to the input of alarm signals.

Display the [ALARM REC] menu screen to execute PREALARM REC or PREALARM TIME. (Page 34)

ALARM REC	
CAMERA INPUT	CAMERA 1
DURATION	3MIN
PREALARM REC	OFF
MOTION DETECT SET	
DYNAMIC SENSITIVITY LEVEL (DEFAULT:8)	8
STOP LEVEL (DEFAULT:2)	2
TARGET AREA LEVEL (DEFAULT:2)	2
MOTION DETECT AREA SET ..	

Set

- When alarm signals are input, the alarm recording starts simultaneously.
 - When the alarm recording starts, the pre-alarm recording for the set time is performed automatically.

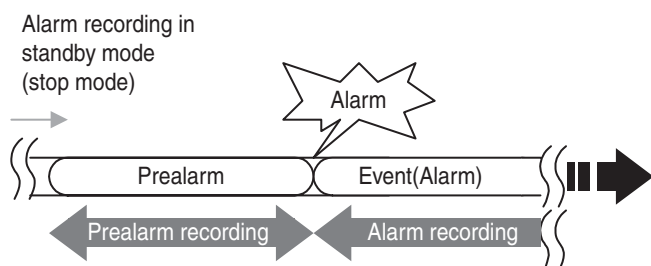

Pre-alarm Recording Preset Values and Actual Recording Duration


Settings	Actual Recording Duration
10 sec	10 to 20 seconds
30 sec	30 to 40 seconds
60 sec	60 to 70 seconds

Notes On Pre-alarm Rec

- When alarm recordings that have pre-alarms have been selected, the display will jump to the starting position of the pre-alarm recordings during the alarm search.
- There are cases where pre-alarm recording cannot be performed at the specified time if alarm signals are input immediately after pre-alarm recording has been started.
- There are cases where the alarm's recording time is longer than actually specified when the time set for this is shorter than the value set for pre-alarm recording.
- The alarm recording parameters for pre-alarm recording are only activated when recording is suspended.


Skip jump

There are 3 types of Skip Jump, namely “TIME”, “ALARM” and “EVENT”, which can be specified in the search menu. Display the [SKIP SET] menu screen to execute Skip Jump setting. (Page 44)

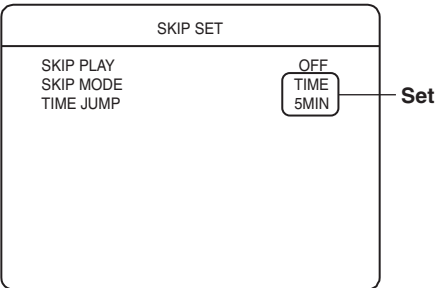


When “TIME” is selected

- Selecting “1HOUR” for Time Jump Setting enables jumps in 1 hour intervals every time the [SKIP] button is pressed. Jumps to the closest position from the specified time onwards if the time to jump to is not found.

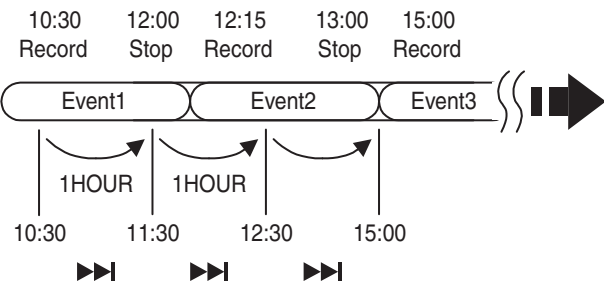

When “ALARM” is selected


- Pressing [SKIP] each time enables a jump to the start position of alarm or sensor recording.

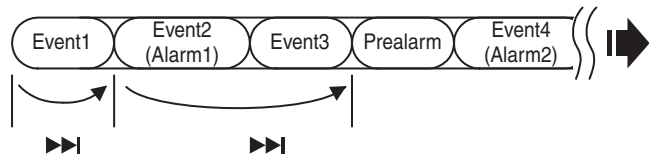

- The display will jump to the starting position of the pre-alarm recording when pre-alarm recordings exist.


When “EVENT” is selected

- Pressing [SKIP] each time enables a jump to the start position of recording (start of an event).

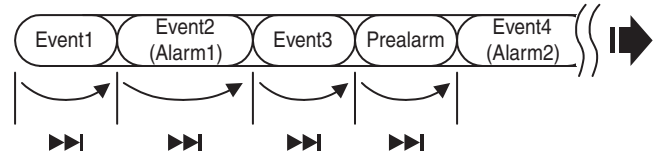

SKIP PLAY

If the [SKIP] button is pressed during playback with the [SKIP PLAY] setting on the [SKIP PLAY] menu temporarily set to “10 SEC”, the playback and skip operations will be repeated at intervals of ten seconds until no more relevant recorded images can be found.

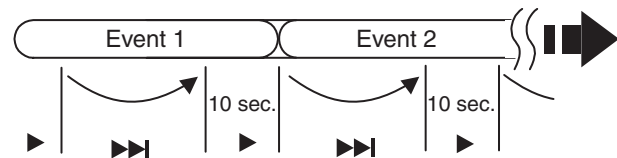

Using the NTP Server Function

- The NTP Server function is enabled in accordance with the following procedure with Windows XP.

1. Click on [START] and then click on [Run...]

Enter the “regedit” command and then click [OK].

2. Set the following registry value to [5].

HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time\Config\AnnounceFlags

3. Set the following registry value to [1].

HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time\TimeProviders\NtpServer\Enabled

4. End “regedit” once the settings have been amended.

5. Enter the following command in the command prompt, press the [Enter] key and then reboot the Windows Time service.

net stop w32time && net start w32time

Caution: For Windows XP users

If the firewall is set to [ENABLE] with Windows XP, it is also necessary to set the UDP port : 123 parameter that is used by NTP to [ENABLE]. This parameter is set in accordance with the following procedure.

Windows XP SP1 users (not necessary if the firewall is set at [DISABLE].)

1. Open the [Local Area Connection Property], and then open the [Advanced Setting] tab.
2. Press the [Set] button for the [Internet Connection Firewall], and then open the [Advanced Settings].
3. Press the [Add (D)] at the bottom of the [Advanced Settings] to display the [Service Settings] screen.
4. Set the parameters to allow NTP access.
5. Service Description: NTP
Name or Address: IP or name of the PC
External, Internal Port Numbers: 123 UDP
Set the parameters as shown above.

Windows XP SP2 users (the firewall is set at [ENABLE] in the initial settings.)

1. Open the [Local Area Connection Property], and then open the [Advanced Setting] tab.
2. Press the [Set] button for the [Windows Firewall], and then open the [Exceptions] tab.
3. Press the [Add Port (O)] at the bottom of the screen to display the [Add Port] screen.
4. Set the parameters to allow NTP access.
5. Name: (Example) NTP
Port Number: 123 UDP
Set the parameters as shown above.

- The NTP Server function is enabled in accordance with the following procedure with Windows 2000.

1. Start up the command prompt (DOS screen) and enter the following command.

net time /setsntp: Server IP address

Example: net time /setsntp: 192.168.0.1

2. Open the [Control Panel] → [Administration Tools] → [Services].

3. Double-click on [Windows Time], set [Start-up Type] to [Automatic], and then click on the [Start] button.

4. Set the following registry value to [1] (the default is [0].)

HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time\parameters\LocalNTP

It is very risky to amend the registry. It is recommended that a back-up of the registry is taken prior to commencing the editing for safety purposes. JCV cannot be held responsible for any problems that arise from this.

5. Reboot Windows Time Service (= Stop → Start)

- This is performed by opening the Windows Time Service property from the [Service] screen on [Administration Tools].

Activating ActiveX Control and Plug-ins


Follow the procedures explained below to activate ActiveX Control and plug-ins with Internet Explorer if they are not already activated.

■ Starting up Internet Explorer

Select [Tools] → [Internet Options] → [Security], and then click on [Trusted Sites].

This will enable the [Trusted Sites [Site...]] window to be opened. Click on this to open the [Trusted Sites] window. Enter the IP address that is set in the VR-509 [Setting up a Network] field in the [Add this Website to the zone:] field, and then press the [Add] button. (Note that the http://192.168.0.10 IP address listed in the following illustration is only an example.)


Remove the tick from the [Require server verification (https:) for all sites in this zone] check box.

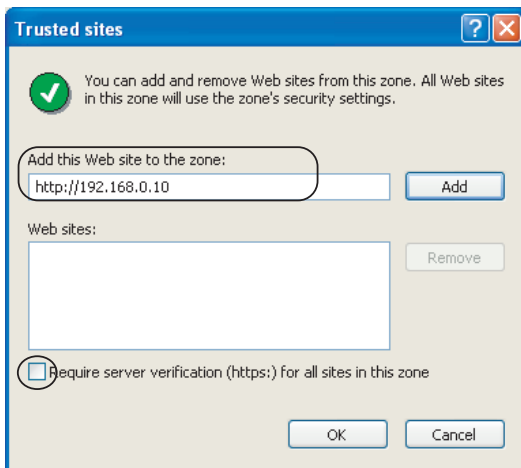

■ Select [Tools] → [Internet Options] → [Security], and then click on [Trusted Sites].

Select the [Custom Level] button and open the [Security Settings] window.

Set all of the [ActiveX Controls and Plug-ins] fields to [Enable] on the open window.

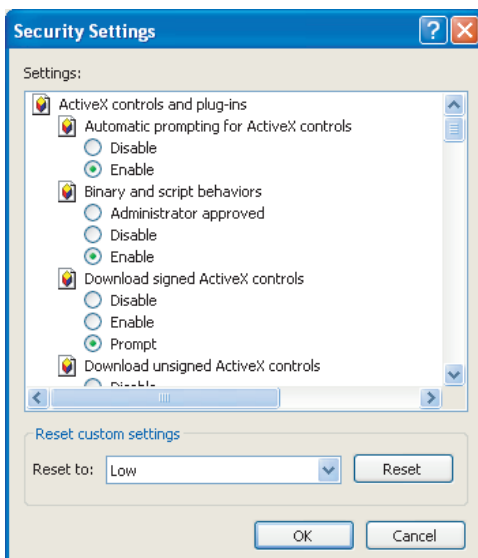

Notes Related to Summer Time

The VR-509 makes use of Time Zone to perform automatic switching for Summer Time and Winter Time.

* The starting/ending time of Summer Time may differ from the actual time in your local area.

1. Changing the Time Zone

After changing the Time Zone during operations, make sure to format all the hard disks. If the hard disk is not formatted after changing the Time Zone, the following problems will arise.

- During playback on the main unit or a web browser, the time display will be different from the actual recorded time.
- The Alarm List will be different from the actual recorded time.
- The list for the DVD-R/RW copy will be different from the actual recorded time.

2. Changing the time

The Summer Time time change will be performed automatically according to the setting value of the selected area in [TIME ZONE] setting. On the day when switching from Summer time to Winter time, there is a duplicated period where the same time will be reached twice. During this period, do not amend the date/time setting (Menu/RS-232C/Front Display) and clock reset (rear terminal/Front Panel).

3. Searching

For the Alarm List of the duplicated period of Summer/Winter Time, the data will be displayed in the order the actual recording time starts.

On the day when switching from Winter time to Summer time, there are certain times that do not exist. Do not perform [SEARCH DATE] for these times.

When searching for images recorded during the duplicated period on the day when switching from Summer time to Winter time, two images with the same time will exist. The operation of the various searches is shown below.

- 1) [SEARCH DATE] in the [EVENT SEARCH] menu on the main unit
It will search for Winter Time. When searching for the "Summer Time" of the duplicated period, search using the jog/shuttle dial or [SKIP] buttons after performing [SEARCH DATE].
- 2) [ALARM LIST SEARCH] in the [EVENT SEARCH] menu on the main unit
It will search for Winter Time. When searching for the "Summer Time" of the duplicated period, search using the jog dial or [SKIP] buttons.
- 3) Search using the web browser
It will search for Winter Time. When searching for the "Summer Time" of the duplicated period, specify the starting time at an earlier period before the duplicated period to search.

4. Playback

- 1) Playback using the main unit
When playing back recordings that straddle the Summer and Winter Time, the playback time (date/time displayed on the OSD) of this portion may differ from the actual time.
- 2) Playback using the web browser
When playing back recordings that straddle Summer and Winter Time, the ending time and the clock counter displayed may differ from the actual time.

5. Timer Programming

When the time changes from Summer to Winter or vice versa during TIMER REC, the recording will be divided and recorded as a different event at the changing point. In addition, a few seconds will not be recorded at the changing point.

On the day when switching from Summer time to Winter time, there is a duplicated period where the same time will be reached twice.

Do not set the starting/ending time within the duplicated period on the day when switching from summer time to winter time.

6. DVD-R/RW COPY

- 1) Selecting the data list of the DVD-R/RW
 - The specified starting time search of the Summer/Winter duplicated period will be searched as Winter Time.
 - For the data list of the DVD-R/RW of Summer/Winter duplicated period, the data will be displayed in the order of the actual recording start time.
 - On the day when switching from Winter Time to Summer Time, there are certain times that do not exist. Do not perform specified starting time search for these times.
- 2) Cutting of the DVD-R/RW record
 - The starting/ending time of the data crossing the Summer and Winter cannot be changed. When copying, the original starting/ending time will be copied.

7. PC environment settings

When searching or playing back from the web browser, set the PC TIME ZONE setting to the same as the VR-509 [TIME ZONE] setting.

8. The alarm list for mail notification

- For the message content of the mail notification, the local time will be recorded.
- When duplicated times are recorded due to Summer Time, to differentiate the message recorded in Summer Time or Winter Time, check the time sent stated on the mail header.

Explanations

Recording Duration

Actual recording duration varies according to the input image as well as hard disk conditions. The table below is an example of detailed images (eg. in a convenience store) that illustrates the recording duration based on different modes of recording priority. Refer to the following table when recording detailed images.

Requirements: Upon setup of standard HDD (320 GB) (1/2)

VR-509 Recording duration Repeat off / Audio off

• In the case of 1ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x1 ips	180	262	380	551	99	168	286	487
12.5x1 ips	292	424	615	893	160	273	464	789
8.3x1 ips	439	637	923	1339	240	409	696	1183
5x1 ips	615	892	1293	1875	337	573	974	1657
2.5x1 ips	683	991	1437	2084	374	637	1083	1841
1.7x1 ips	1025	1486	2155	3126	562	955	1624	2761
0.8x1 ips	2050	2973	4311	6252	1124	1911	3249	5523
0.4x1 ips	4101	5947	8623	12504	2248	3822	6498	11047
0.2x1 ips	10254	14868	21560	31262	5621	9556	16246	27619
0.08x1 ips	20508	29737	43120	62524	11243	19113	32493	55239

24~168

1 day to 1 week

169~720

1 week to 1 month

721~2160

1 month to 3 month

2161~

3 month or more

• In the case of 4ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x4 ips	45	65	95	137	40	68	116	197
12.5x4 ips	73	106	153	223	60	102	174	295
8.3x4 ips	109	159	230	334	84	143	243	414
5x4 ips	153	223	323	468	93	159	270	460
2.5x4 ips	170	247	359	521	102	174	295	490
1.7x4 ips	256	371	538	781	140	238	406	690
0.8x4 ips	512	743	1077	1563	281	477	812	1380
0.4x4 ips	1025	1486	2155	3126	562	955	1624	2761
0.2x4 ips	2563	3717	5389	7815	1405	2389	4061	6904
0.08x4 ips	5127	7434	10780	15631	2810	4778	8123	13809

24~168

1 day to 1 week

169~720

1 week to 1 month

721~2160

1 month to 3 month

2161~

3 month or more

• In the case of 6ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x6 ips	48	70	102	148	40	68	116	197
12.5x6 ips	73	106	153	223	60	102	174	295
8.3x6 ips	102	148	215	312	84	143	243	414
5x6 ips	113	165	239	347	93	159	270	460
2.5x6 ips	113	165	239	347	93	159	270	460
1.7x6 ips	170	247	359	521	102	174	295	490
0.8x6 ips	341	495	718	1042	187	318	541	920
0.4x6 ips	683	991	1437	2084	374	637	1083	1841
0.2x6 ips	1709	2478	3593	5210	936	1592	2707	4603
0.08x6 ips	3418	4956	7186	10420	1873	3185	5415	9206

24~168

1 day to 1 week

169~720

1 week to 1 month

721~2160

1 month to 3 month

2161~

3 month or more

• In the case of 9ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x9 ips	48	70	102	148	40	68	116	197
12.5x9 ips	73	106	153	223	60	102	174	295
8.3x9 ips	102	148	215	312	84	143	243	414
5x9 ips	113	165	239	347	93	159	270	460
2.5x9 ips	113	165	239	347	93	159	270	460
1.7x9 ips	170	247	359	521	102	174	295	490
0.8x9 ips	341	495	718	1042	187	318	541	920
0.4x9 ips	683	991	1437	2084	374	637	1083	1841
0.2x9 ips	1709	2478	3593	5210	936	1592	2707	4603
0.08x9 ips	3418	4956	7186	10420	1873	3185	5415	9206

24~168

1 day to 1 week

169~720

1 week to 1 month

721~2160

1 month to 3 month

2161~

3 month or more

VR-509 Recording duration Repeat off / Audio on

• In the case of 1ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x1 ips	171	243	341	472	96	160	263	424
12.5x1 ips	269	376	519	703	153	252	407	637
8.3x1 ips	388	534	722	954	224	364	575	872
5x1 ips	518	702	930	1197	306	488	753	1104
2.5x1 ips	566	763	1002	1279	336	534	816	1183
1.7x1 ips	783	1026	1306	1608	480	741	1090	1506
0.8x1 ips	1266	1567	1873	2166	839	1212	1640	2071
0.4x1 ips	1833	2128	2394	2619	1339	1775	2194	2549
0.2x1 ips	—	—	—	—	—	—	—	—
0.08x1 ips	—	—	—	—	—	—	—	—

24~168

1 day to 1 week

169~720

1 week to 1 month

721~2160

1 month to 3 month

2161~

3 month or more

• In the case of 4ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x4 ips	44	64	92	132	39	66	112	186
12.5x4 ips	71	102	147	209	60	102	174	295
8.3x4 ips	106	152	215	304	84	143	243	414
5x4 ips	146	208	294	410	93	159	270	460
2.5x4 ips	162	230	324	450	102	174	295	490
1.7x4 ips	237	334	463	632	140	238	406	690
0.8x4 ips	444	607	813	1062	281	477	812	1380
0.4x4 ips	783	1026	1306	1608	480	741	1090	1506
0.2x4 ips	—	—	—	—	—	—	—	—
0.08x4 ips	—	—	—	—	—	—	—	—

24~168

1 day to 1 week

169~720

1 week to 1 month

721~2160

1 month to 3 month

2161~

3 month or more

• In the case of 6ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x6 ips	48	69	99	142	40	68	116	197
12.5x6 ips	71	102	147	209	60	102	174	295
8.3x6 ips	99	142	202	285	84	143	243	414
5x6 ips	110	157	223	314	93	159	270	460
2.5x6 ips	110	157	223	314	93	159	270	460
1.7x6 ips	162	230	324	450	102	174	295	490
0.8x6 ips	309	431	590	792	177	290	465	720
0.4x6 ips	566	763	1002	1279	336	534	816	1183
0.2x6 ips	—	—	—	—	—	—	—	—
0.08x6 ips	—	—	—	—	—	—	—	—

24~168

1 day to 1 week

169~720

1 week to 1 month

721~2160

1 month to 3 month

2161~

3 month or more

• In the case of 9ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x9 ips	48	69	99	142	40	68	116	197
12.5x9 ips	71	102	147	209	60	102	174	295
8.3x9 ips	99	142	202	285	84	143	243	414
5x9 ips	110	157	223	314	93	159	270	460
2.5x9 ips	110	157	223	314	93	159	270	460
1.7x9 ips	162	230	324	450	102	174	295	490
0.8x9 ips	309	431	590	792	177	290	465	720
0.4x9 ips	566	763	1002	1279	336	534	816	1183
0.2x9 ips	—	—	—	—	—	—	—	—
0.08x9 ips	—	—	—	—	—	—	—	—

24~168

1 day to 1 week

169~720

1 week to 1 month

721~2160

1 month to 3 month

2161~

3 month or more

Recording Duration (continued)

Requirements: Upon setup of standard HDD (320 GB) (2/2)

VR-509 Recording duration Repeat on / Audio off

• In the case of 1ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x1 ips	170	247	358	519	93	158	270	459
12.5x1 ips	275	400	580	841	151	257	437	743
8.3x1 ips	413	600	870	1261	226	385	655	1114
5x1 ips	579	840	1218	1766	317	540	918	1560
2.5x1 ips	643	933	1353	1962	352	600	1020	1734
1.7x1 ips	965	1400	2030	2944	529	900	1530	2601
0.8x1 ips	1931	2800	4061	5888	1058	1800	3060	5202
0.4x1 ips	3863	5601	8122	11777	2117	3600	6120	10405
0.2x1 ips	9657	14004	20305	29443	5294	9001	15301	26013
0.08x1 ips	19315	28008	40612	58887	10589	18002	30603	52026

24~168 169~720 721~2160 2161~
1 day to 1 week 1 week to 1 month 1 month to 3 month 3 month or more

• In the case of 6ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x6 ips	45	66	96	140	37	64	109	185
12.5x6 ips	68	100	145	210	52	90	153	260
8.3x6 ips	96	140	203	294	58	100	170	289
5x6 ips	107	155	225	327	88	150	255	433
2.5x6 ips	160	233	338	490	176	300	510	867
1.7x6 ips	321	466	676	981	352	600	1020	1734
0.8x6 ips	643	933	1353	1962	822	1500	2550	4335
0.4x6 ips	1609	2334	3384	4907	1764	3000	5100	8671
0.08x6 ips	3219	4668	6768	9814	3520	6000	10200	17342

24~168 169~720 721~2160 2161~
1 day to 1 week 1 week to 1 month 1 month to 3 month 3 month or more

• In the case of 4ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x4 ips	42	61	89	129	37	64	109	185
12.5x4 ips	68	100	145	210	52	90	153	260
8.3x4 ips	103	150	217	315	58	100	170	289
5x4 ips	144	210	304	441	88	150	255	433
2.5x4 ips	160	233	338	490	176	300	510	867
1.7x4 ips	241	350	507	736	352	600	1020	1734
0.8x4 ips	482	700	1015	1472	822	1500	2550	4335
0.4x4 ips	965	1400	2030	2944	1764	3000	5100	8671
0.2x4 ips	2414	3501	5076	7360	3520	6000	10200	17342
0.08x4 ips	4828	7002	10152	14721	7040	12000	20400	34684

24~168 169~720 721~2160 2161~
1 day to 1 week 1 week to 1 month 1 month to 3 month 3 month or more

• In the case of 9ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x9 ips	45	66	96	140	37	64	109	185
12.5x9 ips	68	100	145	210	52	90	153	260
8.3x9 ips	96	140	203	294	58	100	170	289
5x9 ips	107	155	225	327	88	150	255	433
2.5x9 ips	160	233	338	490	176	300	510	867
1.7x9 ips	321	466	676	981	352	600	1020	1734
0.8x9 ips	643	933	1353	1962	822	1500	2550	4335
0.4x9 ips	1609	2334	3384	4907	1764	3000	5100	8671
0.2x9 ips	3219	4668	6768	9814	3520	6000	10200	17342
0.08x9 ips	6438	9336	13536	19628	7040	12000	20400	34684

24~168 169~720 721~2160 2161~
1 day to 1 week 1 week to 1 month 1 month to 3 month 3 month or more

VR-509 Recording duration Repeat on / Audio on

• In the case of 1ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x1 ips	161	229	321	445	90	151	248	400
12.5x1 ips	253	354	489	662	144	237	383	600
8.3x1 ips	365	503	680	898	211	343	541	821
5x1 ips	488	662	876	1128	288	460	709	1040
2.5x1 ips	533	718	944	1205	317	503	768	1114
1.7x1 ips	737	966	1230	1515	452	698	1026	1418
0.8x1 ips	1193	1476	1764	2040	790	1141	1545	1950
0.4x1 ips	1726	2004	2254	2467	1261	1671	2067	2401
0.2x1 ips	—	—	—	—	—	—	—	—
0.08x1 ips	—	—	—	—	—	—	—	—

24~168 169~720 721~2160 2161~
1 day to 1 week 1 week to 1 month 1 month to 3 month 3 month or more

• In the case of 6ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x6 ips	45	65	93	134	37	62	105	175
12.5x6 ips	67	96	138	197	52	87	145	240
8.3x6 ips	93	134	190	269	58	96	161	264
5x6 ips	103	148	210	296	85	143	235	380
2.5x6 ips	153	217	305	424	167	273	438	678
1.7x6 ips	291	406	556	746	317	503	768	1114
0.8x6 ips	533	718	944	1205	—	—	—	—
0.4x6 ips	—	—	—	—	—	—	—	—
0.2x6 ips	—	—	—	—	—	—	—	—
0.08x6 ips	—	—	—	—	—	—	—	—

24~168 169~720 721~2160 2161~
1 day to 1 week 1 week to 1 month 1 month to 3 month 3 month or more

• In the case of 4ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x4 ips	42	60	87	124	37	62	105	175
12.5x4 ips	67	96	136	197	52	87	145	240
8.3x4 ips	100	143	203	286	58	96	161	264
5x4 ips	138	196	277	386	85	143	235	380
2.5x4 ips	153	217	305	424	167	273	438	678
1.7x4 ips	224	314	436	595	317	503	768	1114
0.8x4 ips	418	571	766	1000	—	—	—	—
0.4x4 ips	737	966	1230	1515	—	—	—	—
0.2x4 ips	—	—	—	—	—	—	—	—
0.08x4 ips	—	—	—	—	—	—	—	—

24~168 169~720 721~2160 2161~
1 day to 1 week 1 week to 1 month 1 month to 3 month 3 month or more

• In the case of 9ch recording

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25x9 ips	45	65	93	134	37	62	105	175
12.5x9 ips	67	96	138	197	52	87	145	240
8.3x9 ips	93	134	190	269	58	96	161	264
5x9 ips	103	148	210	296	85	143	235	380
2.5x9 ips	153	217	305	424	167	273	438	678
1.7x9 ips	291	406	556	746	317	503	768	1114
0.8x9 ips	533	718	944	1205	—	—	—	—
0.4x9 ips	—	—	—	—	—	—	—	—
0.2x9 ips	—	—	—	—	—	—	—	—
0.08x9 ips	—	—	—	—	—	—	—	—

24~168 169~720 721~2160 2161~
1 day to 1 week 1 week to 1 month 1 month to 3 month 3 month or more

- * Recording duration may shorten by about 10% depending on the hard disk conditions as well as type of image.
- * When in the Repeat Record mode, recording will be deleted from the oldest data to create recording space when it is running out on the hard disk.
- * Recording duration may be shortened due to wear and tear of the hard disk over time.
- * When new hard disks are added, recording duration may slow down proportionately in accordance with the capacity of the new disk.
- * Recording duration will be reduced by half when the mirroring settings are activated. (Upon setup of a standard HDD)

Explanations

DVD Recording Duration

The following charts provide guidelines to the recording time for one channel that can be recorded onto a single DVD.

The charts are listed by export format.

The conditions for all of these are as follows:

Tie Date Recording: No

Audio: Yes (however, audio will not be recorded for 0.2ips or 0.08ips.)

The following charts have been created under the assumption that only one channel will be used. Additionally, the times listed do not apply to multiple channels for which different frame rates and resolutions have been selected.

■ Export format : DVD-Video (OPT)

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25 ips	1 h 50 min	2 h 30 min	3 h 20 min	4 h 10 min	50 min	1 h 10 min	1 h 40 min	2 h 10 min
12.5 ips	2 h 30 min	3 h 20 min	4 h	4 h 50 min	1 h 20 min	2 h	2 h 10 min	2 h 50 min
8.3 ips	3 h 20 min	4 h	4 h 40 min	5 h 20 min	1 h 40 min	2 h 30 min	2 h 50 min	3 h 30 min
5 ips	3 h 50 min	4 h 30 min	5 h 10 min	5 h 50 min	2 h 30 min	3 h 30 min	3 h 40 min	4 h 30 min
2.5 ips	4 h	4 h 40 min	5 h 10 min	5 h 50 min	3 h 10 min	3 h 50 min	4 h 50 min	5 h 20 min
1.7 ips	4 h 40 min	5 h 20 min	5 h 40 min	5 h 50 min	3 h 50 min	4 h 30 min	5 h 20 min	5 h 50 min
0.8 ips	4 h 40 min	5 h 20 min	5 h 40 min	5 h 50 min	3 h 50 min	4 h 30 min	5 h 20 min	5 h 50 min
0.4 ips	4 h 40 min	5 h 20 min	5 h 40 min	5 h 50 min	3 h 50 min	4 h 30 min	5 h 20 min	5 h 50 min
0.2 ips	8 h	10 h	12 h	13 h	5 h 50 min	7 h 30 min	10 h 30 min	12 h
0.08 ips	8 h	10 h	12 h	13 h	6 h	7 h 30 min	10 h 30 min	12 h

■ Export format : ONLY SELF-PLAYING

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25 ips	2 h 20 min	3 h 40 min	5 h 20 min	7 h 40 min	1 h 20 min	2 h 20 min	4 h 10 min	6 h 50 min
12.5 ips	3 h 50 min	6 h	8 h 30 min	11 h 50 min	2 h 10 min	3 h 50 min	6 h 30 min	10 h 40 min
8.3 ips	6 h	8 h 40 min	12 h 10 min	16 h 50 min	3 h 20 min	5 h 50 min	9 h 30 min	15 h 10 min
5 ips	8 h 20 min	11 h 50 min	16 h 20 min	22 h 10 min	4 h 40 min	7 h 50 min	12 h 50 min	20 h 10 min
2.5 ips	9 h 20 min	13 h	17 h 50 min	24 h	5 h 20 min	8 h 40 min	14 h	21 h 50 min
1.7 ips	13 h 20 min	18 h 20 min	24 h 40 min	32 h 10 min	7 h 50 min	12 h 30 min	19 h 40 min	29 h 30 min
0.8 ips	23 h 40 min	31 h	39 h 40 min	49 h	14 h 30 min	22 h 30 min	33 h 10 min	45 h 50 min
0.4 ips	38 h 30 min	47 h 40 min	57 h	66 h	25 h 30 min	36 h 50 min	49 h 50 min	63 h
0.2 ips	160 h	230 h	340 h	480 h	85 h	150 h	250 h	430 h
0.08 ips	320 h	460 h	680 h	960 h	170 h	300 h	500 h	860 h

■ Export format : SELF-PLAYING + DVD-Video (OPT)

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25 ips	1 h	1 h 30 min	2 h	2 h 40 min	30 min	50 min	1 h 10 min	1 h 40 min
12.5 ips	1 h 30 min	2 h 10 min	2 h 50 min	3 h 30 min	50 min	1 h 20 min	1 h 40 min	2 h 10 min
8.3 ips	2 h 10 min	2 h 50 min	3 h 20 min	4 h	1 h 10 min	1 h 50 min	2 h 10 min	2 h 50 min
5 ips	2 h 40 min	3 h 10 min	3 h 50 min	4 h 30 min	1 h 40 min	2 h 20 min	2 h 50 min	3 h 30 min
2.5 ips	2 h 50 min	3 h 20 min	4 h	4 h 40 min	2 h	2 h 40 min	3 h 30 min	4 h 20 min
1.7 ips	3 h 30 min	4 h	4 h 40 min	5 h 10 min	2 h 30 min	3 h 20 min	4 h 20 min	4 h 50 min
0.8 ips	3 h 50 min	4 h 20 min	5 h	5 h 30 min	3 h	3 h 50 min	4 h 40 min	5 h 10 min
0.4 ips	4 h 10 min	4 h 40 min	5 h 20 min	5 h 40 min	3 h 20 min	4 h	4 h 50 min	5 h 20 min
0.2 ips	7 h	8 h 30 min	9 h 50 min	11 h	5 h	6 h 30 min	8 h 50 min	10 h
0.08 ips	7 h 10 min	8 h 50 min	10 h 20 min	11 h 30 min	5 h 20 min	6 h 40 min	9 h 10 min	10 h 20 min

Time Required for DVD Exporting

The following chart provides guidelines to the amount of time required for exporting one hour's worth of recorded data for a single channel in the self-playing + DVD-Video (OPT) format. Note that the exporting times are merely estimates, and the actual times may differ greatly depending on the DVD media in use, and the status of the VR-509.

Framerate	SMOOTH				HIGH-RESOLUTION			
	High	Normal	Basic	Lowest	High	Normal	Basic	Lowest
25 ips	1 h 10 min	45 min	40 min	30 min	1 h 45 min *	1 h 40 min **	1 h 55 min	1 h 45 min
12.5 ips	45 min	35 min	30 min	25 min	1 h 40 min **	1 h 30 min	1 h 35 min	1 h 20 min
8.3 ips	40 min	30 min	25 min	25 min	1 h 40 min	1 h 20 min	1 h 15 min	1 h 10 min
5 ips	30 min	25 min	25 min	20 min	1 h 10 min	1 h	55 min	50 min
2.5 ips	30 min	25 min	25 min	20 min	55 min	50 min	35 min	35 min
1.7 ips	25 min	20 min	20 min	20 min	45 min	40 min	30 min	30 min
0.8 ips	25 min	20 min	20 min	20 min	40 min	35 min	30 min	30 min
0.4 ips	25 min	20 min	20 min	20 min	40 min	35 min	30 min	30 min
0.2 ips	20 min	15 min	15 min	15 min	30 min	25 min	20 min	20 min
0.08 ips	20 min	15 min	15 min	15 min	30 min	25 min	20 min	20 min

Note *: The High 25ips in the high-resolution mode represents 30-minutes worth of data.

Note **: The High 12.5ips and Normal 25ips in the high-resolution mode represents 50-minutes worth of data.


RS-232C Interface

1. Electrical Specifications

1. D-Sub 9-pin Connector Specifications

Pin No.	Signal	Operations	Signal Direction
3	TXD	Sending data	HDR → CPU
2	RXD	Receiving data	HDR ← CPU
6	DSR	Data set ready	HDR ← CPU
5	GND	Signal earth	
4	DTR	Data terminal ready	HDR → CPU


Output level
 OFF: -5V or less
 ON : +5V or more

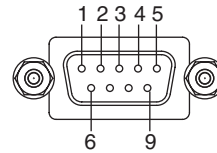

2. Data Format


Mode: Asynchronous
 Character Length: 8bit
 Parity Check: None
 Stop Bit: 1bit
 Data Speed: 9600bps

 Configuration




3. Command Format and ACK/NAK

Control: No control sequence

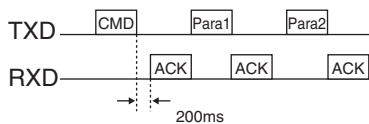

- The ACK (NAK) response will be returned within 200ms for a 1byte transmission command from the CPU.
- The NAK response is returned only when a non-defined command is received (however, NAK is returned for certain commands depending on the status.)
- The parameters for data that have elapsed for five or more seconds after the previous receipt are not recognized as parameters.
- Only one retry is made when a time-out is triggered. In this event, the resending is performed from the first byte of the relevant command.

4. SENSE Commands

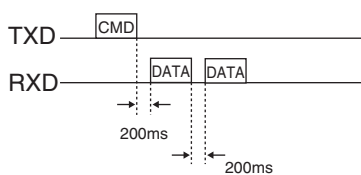

2. List of RS-232C Commands

BASIC TABLE

→Top ↓Bottom	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0				Data 0	ENTER							ALARM FWD				
1				Data 1	CLEAR ERROR							ALARM REV				
2	ERROR			Data 2												
3				Data 3												
4				Data 4												
5				Data 5								SHUTTLE FWD				
6				Data 6		CLEAR						SHUTTLE REV				JVC-1 TABLE
7				Data 7										STATUS SENSE		BASIC TABLE
8				Data 8												
9				Data 9												
A	ACK			PLAY	REV PLAY								REC			REC REQUEST
B	NAK			FWD x3	REV x3						FF					VTR/HDR INQ
C				FWD SLOW	REV SLOW						REW					
D				FWD STILL	REV STILL						FWD STEP					
E				FWD x15	REV x15				DATE SET		REV STEP	DATE SENSE				
F				STOP	STILL				TIME SET			TIME SENSE				

JVC-1 TABLE


→Top ↓Bottom	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0				Data 0	ENTER		TIMER ON			TD SKIP FWD		ALARM FWD	OPE LOCK ON			
1				Data 1	CLEAR ERROR		TIMER OFF			TD SKIP REV		ALARM REV	OPE LOCK OFF	DEVICE TYPE		
2	ERROR			Data 2			PRG	ROM VER		TD SEARCH				HOURLY METER SENSE		
3				Data 3			DOWN			EVENT SKIP FWD				NETWORK SENSE		
4				Data 4			RIGHT	ON SCREEN SELECT		EVENT SKIP REV						
5				Data 5			Vol +					SHUTTLE FWD				
6				Data 6		CLEAR	Vol -	CANCEL	HDR PB CAMERA SET			SHUTTLE REV		VR STATUS SENSE		JVC-1 TABLE ON
7				Data 7										STATUS SENSE		BASIC TABLE
8				Data 8			LEFT							RECMODE SENSE		
9				Data 9			UP							ALARM MODE SENSE		
A	ACK			PLAY			SEQ						REC	VR MODE SENSE		REC REQUEST
B	NAK						MENU ON				FF			MONITOR MODE SENSE		VTR/HDR INQ
C							MENU OFF				REW			MOTION DETECT SENSE		MAC SENSE
D							MENU ON/OFF				FWD STEP					
E									DATE SET		REV STEP	DATE SENSE		MONITOR OUT STATUS SENSE		
F				STOP	STILL	PB STOP			TIME SET			TIME SENSE		ACTIVE SENSE	MENU RESET	

3. Details of the Commands

The numbers within parenthesis indicate the corresponding table.

3.1. RETURN CODE

- ERROR (02H) [BASIC/JVC-1]**
 The ERROR is returned when the VR-509 receives an un-receivable command related to a series of commands. This command will not be accepted when sent, and only the status SENSE command will be returned (the status SENSE command is also valid in error modes, and is returned.) Enter the CLEAR ERROR (41H) or CLEAR (56H) commands to clear this mode.
 Enter the CLEAR ERROR (41H) command to delete numerical commands entered (transmitted) at the end of TD SEARCH and other numerical commands, and enter the CLEAR (56H) command to clear all commands.
 Buffering will not be performed for other parameters that are received while the error mode is in progress.
- ACK (0AH) [BASIC/JVC-1]**
 The return code that is returned when a command that is defined on the specified table is received, regardless of the operation.
- NAK (0BH) [BASIC/JVC-1]**
 The return code that is returned when a non-defined command or a command belonging to a function with which the VR-509 is not equipped is received. NAK is returned and the system set at standby to receive the next command when five or more seconds elapse after parameter receipt.
- STOP (3FH) [BASIC/JVC-1]**
 Activates the STOP mode. Activates the REC mode when in the REC+PLAY mode (only playback stopped.)
 Does not stop recording.
 * During playback: Displays the playback menu.
 During playback menu display: To the EE screen
- REV PLAY (4AH) [BASIC]**
 Activates the -x1 PLAY mode.
- SHUTTLE REV x3 (4BH) [BASIC]**
- SHUTTLE REV SLOW (4CH) [BASIC]**
- SHUTTLE REV STILL (4DH) [BASIC]**
- SHUTTLE REV x15 (4EH) [BASIC]**
 Activates the shuttle reverse mode.
- STILL (4FH) [BASIC/JVC-1]**
 Activates the STILL mode during playback.
- PB STOP (5FH) [JVC-1]**
 The STOP command for specific use during playback.
 Activates the REC mode when in the REC+PLAY mode.
 * During PB: Displays the playback menu.
 During playback menu display: To the EE screen.
- TIMER/MODE ON (60H) [JVC-1]**
 TIMER/MODE switch: Set of ON.
- TIMER/MODE OFF (61H) [JVC-1]**
 TIMER/MODE switch: Set of OFF.

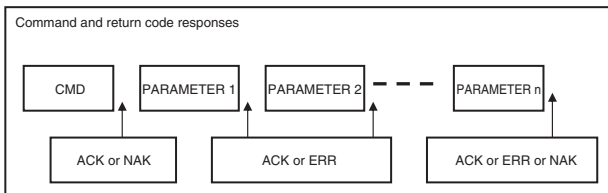

3.2. Operation Commands

- PLAY (3AH) [BASIC/JVC-1]**
 Activates the PLAY mode.
 * During EE: Displays the playback menu
 During playback menu display:
 Playback (when continual playback has been selected)
 During PB (when paused): Playback
 During PB (other situations): Still
- SHUTTLE FWD x3 (3BH) [BASIC]**
- SHUTTLE FWD SLOW (3CH) [BASIC]**
- SHUTTLE FWD STILL (3DH) [BASIC]**
- SHUTTLE FWD x15 (3EH) [BASIC]**
 Activates the shuttle forward mode.
- TD SKIP FWD (90H) [JVC-1]**
 The command to jump in the forward direction for the time set in the MENU x the number of jumps. The number of jumps is a numerical command that is specified with two characters. Only valid during PB (maximum 99.)
 TXD 90H 30H 30H
 RXD 0AH 0AH 0AH
- TD SKIP REV(91H) [JVC-1]**
 The command to jump in the reverse direction for the time set in the MENU x the number of jumps. The number of jumps is a numerical command that is specified with two characters. Only valid during PB (maximum 99.)

3. Details of the Commands (continued)

3.2. Operation Commands (continued)

- TD SEARCH(92H) [JVC-1]

The command to cue-up data in the specified date location. The date is specified by month, day, year, hour and minute in a numerical command with ten characters.

Month Day Year

TXD 92H 3□H 3□H 3□H 3□H 3□H 3□H
 RXD 0AH 0AH 0AH 0AH 0AH 0AH 0AH

Hour Minute

TXD 3□H 3□H 3□H 3□H
 RXD 0AH 0AH 0AH 0AH

- EVENT SKIP FWD (93H) [JVC-1]

The command to jump in the forward direction the x number of events (one event is from the start of recording to the end.) The number of events to jump is a numerical command with two characters. This is only valid during PB (maximum 10 times.)

TXD 93H 3□H 3□H
 RXD 0AH 0AH 0AH

- EVENT SKIP REV(94H) [JVC-1]

The command to jump in the reverse direction the x number of events (one event is from the start of recording to the end.) The number of events to jump is a numerical command with two characters. This is only valid during PB (maximum 10 times.)

- FF (ABH) [BASIC/JVC-1]

When the VR-509 is in the EE mode: Moves to the most recent time stamp sector when repeat recording is ON, and moves to the final address sector of the recording area's LBA when repeat recording is OFF, and becomes STILL. When the VR-509 is in the PB mode: Jumps in the forward direction to the alarm, date/time or event in accordance with the skip setting.

- REW (ACH) [BASIC/JVC-1]

When the VR-509 is in the EE mode: Moves to the oldest time stamp sector when repeat recording is ON, and moves to the first address sector of the recording area's LBA when repeat recording is OFF, and becomes STILL. When the VR-509 is in the PB mode: Jumps in the reverse direction to the alarm, date/time or event in accordance with the skip setting.

- FWD STEP (ADH) [BASIC/JVC-1]

Advances approximately one frame in the forward direction when in the STILL mode, and becomes STILL. Enters the STILL mode when in any other playback mode.

- REV STEP (AEH) [BASIC/JVC-1]

Advances approximately one frame in the reverse direction when in the STILL mode, and becomes STILL. Enters the STILL mode when in any other playback mode.

- ALARM FWD(B0H) [BASIC/JVC-1]

The command to perform the alarm jump in the forward direction for the specified number of times. The number of jumps is a numerical command with two characters. This is only valid during PB with the VR-509 (maximum 10 times.)

TXD B0H 3□H 3□H
 RXD 0AH 0AH 0AH

- ALARM REV(B1H) [BASIC/JVC-1] (Maximum 10 times)

The command to perform the alarm jump in the reverse direction for the specified number of times. The number of jumps is a numerical command with two characters. This is only valid during PB with the VR-509 (maximum 10 times.)

- SHUTTLE FWD(B5H) [BASIC/JVC-1]

- SHUTTLE REV(B6H) [BASIC/JVC-1]

Activates the shuttle FWD/REV modes. The speed (30 - 3AH) is specified with a single character.

TXD B5H 3□H
 RXD 0AH 0AH

Data	30	31	32	33	34	35	36	37	38	39	3A
Speed	Still	Slow	—	—	—	1	3	5	15	60	360

- OPE LOCK ON (C0H) [JVC-1]

Activates the lock for all of the VR-509's key operations. The operation lock level is in accordance with the menu settings.

- OPE LOCK OFF (C1H) [JVC-1]

Releases the operations lock status.

* The passcode entry screen will be displayed when a passcode has been set.

- REC (FAH CAH) [BASIC/JVC-1]

The recording mode is activated when this command is transmitted immediately after the REC/DUB REQUEST (FAH) command. However, the NAK (0BH) response is returned when repeat recording is set at OFF and capacity is 0.

Caution: Compatibility with older models is required for the REC/DUB REQUEST (FAH) command.

TXD FAH CAH
 RXD 0AH 0AH

3. Details of the Commands (continued)

3.3. Setup Commands

- DOWN (63H) [JVC-1]
- RIGHT (64H) [JVC-1]
- LEFT (68H) [JVC-1]
- UP (69H) [JVC-1]

Shifts the parameter settings when the timer PRG and the alarm search parameters have been set.

Shifts the selection fields with the [UP] and [DOWN] when the menu is being displayed.

- Vol +, – (65H, 66H) [JVC-1]
Changes the set values with + (ascending) and – (descending).
- SEQ (6AH) [JVC-1]
Changes the monitor output screen mode.
- MENU ON (6BH) [JVC-1]
Displays the menu.
- MENU OFF (6CH) [JVC-1]
Clears the menu.
- MENU ON/OFF (6CH) [JVC-1]
Switches between menu displays/clear.
- ON SCREEN SELECT (74H) [JVC-1]

1st byte 2nd byte
TXD 74H 00H
RXD 0AH 0AH

Switches the contents displayed on screen (REMAIN display is not performed when repeat recording is set at ON.)

Second byte		
Bit	Status	Detail
7	1 / 0	REC TO STOP MESSAGE : 1(ON) / 0(OFF)
6	1 / 0	WARNING : 1(ON) / 0(OFF)
5	1 / 0	CAMERA TITLE : 1(ON) / 0(OFF)
4	1 / 0	PLAYBACK : 1(ON) / 0(OFF)
3	1 / 0	DISK CAPACITY : 1(ON) / 0(OFF)
2	1 / 0	ALARM DETECT : 1(ON) / 0(OFF)
1	1 / 0	ALARM COUNT : 1(ON) / 0(OFF)
0	1 / 0	DATE/TIME : 1(ON) / 0(OFF)

- CANCEL (76H) [JVC-1]
Cancels the program data on the program timer setup screen.
- HDR PB CAMERA SET (86H) [JVC-1]
Specifies the playback camera. The monitor output camera is specified during recording.

1st byte 2nd byte 3rd byte
TXD 86H 00H 00H
RXD 0AH 0AH 0AH

Second byte		
Bit	Status	Detail
7 to 4	Fixed at "3"	
3 to 0	0 / 1 / 2	0: FULL size specification / 1: FULL size sequential display
	3 / 4 / 5	2: QUAD specification / 3: QUAD sequential display
	6	5: 6 WAY specification / 6: 9 WAY specification

- * FULL size sequential display, QUAD sequential display and 6 WAY specification are invalidated when in the playback mode (include when recording and playback are performed at the same time.)
- * The FULL size sequential display ⇔ QUAD sequential display specifications are invalid.

Third byte		
Bit	Status	Detail
7 to 4	Fixed at “3”	
3 to 0	8 to 0	Second BYTE: During FULL size specification 8: Camera 9 specification to 0: Camera 1 specification Second BYTE: During QUAD specification 2: QUAD-C 1: QUAD-B 0: QUAD-A Values that do not correspond to each setting are invalidated.

- * Invalid with Second Byte: FULL size sequential display, QUAD sequential display, 6 WAY screen and 9 WAY specifications.

- DATE SET(8EH) [BASIC/JVC-1]
Sets the month, day and year in the VR-509.
(Cannot be set when the NTP Client function is enabled, or when the VR-509 is in the recording mode.)

Month Day Year
TXD 8EH 30H 30H 30H 30H 30H 30H
RXD 0AH 0AH 0AH 0AH 0AH 0AH 0AH

- TIME SET(8FH) [BASIC/JVC-1]
Sets the hours, minutes and seconds in the VR-509.
(Cannot be set when the NTP Client function is enabled, or when the VR-509 is in the recording mode.)

Hours Minutes Seconds
TXD 8FH 30H 30H 30H 30H 30H 30H
RXD 0AH 0AH 0AH 0AH 0AH 0AH 0AH


- MENU RESET (EFH) [JVC-1]
Initializes the menu setup values.
(Cannot be set when the VR-509 is in the recording mode, or when the operation lock has been activated.)

3. Details of the Commands (continued)

3.4. SENSE Commands


- ROM VER (72H) [JVC-1]

Returns the RS-232C software version.

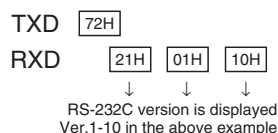

- STATUS SENSE (D7H) [BASIC/JVC-1]

 Returns the status data related to the VR-509 in 11 bytes.




STATUS SENSE Return Data

byte No.	bit No.	
		PB STATUS
1	bit 7	Execution mode: 00H : PB STOP 01H : PLAY 02H : STILL 0BH : SHUTTLE FWD 0CH : SHUTTLE REV 0DH : JOG FWD 0EH : JOG REV
	bit 6	
	bit 5	
	bit 4	
	bit 3	
	bit 2	
	bit 1	
	bit 0	
		REC STATUS (Camera 1)
2	bit 7	During passcode error REC, "1" output
	bit 6	During emergency REC, "1" output
	bit 5	During motion REC, "1" output
	bit 4	During normal REC, "1" output
	bit 3	During alarm REC, "1" output
	bit 2	(Not defined) "0" output
	bit 1	During pre-alarm REC, "1" output
	bit 0	During timer REC, "1" output
		REC STATUS (Cameras 2 to 9)
3 to 11	bit 7 to 0	Same content as the second byte (cameras 2 to 9)

- DATE SENSE (BEH) [BASIC/JVC-1]

 Returns the month, day and year currently set in the VR-509.




- TIME SENSE (BFH) [BASIC/JVC-1]

Returns the hours, minutes and seconds currently set in the VR-509.




- DEVICE TYPE (D1H) [JVC-1]

 Returns the type of the connected equipment in ASCII code.




- HOURLY METER SENSE (D2H) [JVC-1]

 Returns the HOUR METER (time).



- NETWORK SENSE (D3H) [JVC-1]

 Returns the network setup data.



NETWORK SENSE Return Data

byte No.	bit No.	
		Host Name
1 to 16	bit 7 to 0	Host name (1st byte to 16th byte)
17	bit 7	Undefined (fixed at "0")
	bit 6	Undefined (fixed at "0")
	bit 5	Undefined (fixed at "0")
	bit 4	Undefined (fixed at "0")
	bit 3	Undefined (fixed at "0")
	bit 2	Undefined (fixed at "0")
	bit 1	Setup method: 00: Off, 01: Fixed, 10: DHCP
	bit 0	
		IP Address
18 to 21	bit 7 to 0	IP address value (00H to FFH: 4BYTE)
		Net mask
22 to 25	bit 7 to 0	Net mask address value (00H to FFH: 4BYTE)
		Gateway
26 to 29	bit 7 to 0	Gateway address value (00H to FFH: 4BYTE)
		Name Server
30 to 33	bit 7 to 0	Name server address value (00H to FFH: 4BYTE)

3. Details of the Commands (continued)

3.4. SENSE Commands (continued)

- VR STATUS SENSE (D6H) [JVC-1]

Returns the status data related to the VR-509.

TXD D6H

RXD □□□ □□□ □□□ □□□ □□□
1st byte 2nd byte 3rd byte 8th byte

VR STATUS SENSE Return Data

byte No.	bit No.	
1	On-screen Settings	
	bit 7	"1" output with the rec to stop message display at [ON].
	bit 6	"1" output with the warning display at [ON].
	bit 5	"1" output with the camera title display at [ON].
	bit 4	"1" output with the playback display at [ON].
	bit 3	"1" output with the disk capacity display at [ON].
	bit 2	"1" output with the alarm detection display at [ON].
	bit 1	"1" output with the alarm count display at [ON].
	bit 0	"1" output with the date/time display at [ON].
2	Buzzer Settings	
	bit 7	(Not defined) "0" output
	bit 6	(Not defined) "0" output
	bit 5	(Not defined) "0" output
	bit 4	"1" output with the button operation sound at [ON].
	bit 3	(Not defined) "0" output
	bit 2	(Not defined) "0" output
	bit 1	"1" output with the HDD full buzzer setting at [ON].
	bit 0	"1" output with the alarm buzzer display at [ON].
3	Warning Buzzer Settings	
	bit 7	"1" output with rec stop at [ON].
	bit 6	"1" output with power fail at [ON].
	bit 5	"1" output with passcode error at [ON].
	bit 4	"1" output with fan motor error at [ON].
	bit 3	"1" output with HDD error at [ON].
	bit 2	"1" output with video loss at [ON].
	bit 1	Warning buzzer settings: 00: OFF, 01: User, 10: All
	bit 0	
4	Buzzer Operations	
	bit 7	"1" output with rec stop buzzer at [ON].
	bit 6	"1" output with power fail buzzer at [ON].
	bit 5	"1" output with passcode error buzzer at [ON].
	bit 4	"1" output with fan motor error buzzer at [ON].
	bit 3	"1" output with HDD error buzzer at [ON].
	bit 2	"1" output with video loss buzzer at [ON].
	bit 1	"1" output with HDD full buzzer at [ON].
	bit 0	"1" output with alarm buzzer at [ON].
5	Warning 1/4	
	bit 7	"1" output with Codec 1 error.
	bit 6	"1" output with fan motor error.
	bit 5	"1" output with error init.
	bit 4	"1" output with eeprom error.
	bit 3	"1" output with mirroring error.
	bit 2	"1" output with low HDD capacity.
	bit 1	"1" output with HDD FULL.
	bit 0	"1" output with HDD error.
6	Warning 2/4	
	bit 7	"1" output with error ethernet.
	bit 6	"1" output with up failed.
	bit 5	"1" output with Flash memory error.
	bit 4	(Not defined) "0" output
	bit 3	(Not defined) "0" output
	bit 2	"1" output with DVD connection error.
	bit 1	"1" output with USB connection error.
	bit 0	"1" output with Codec 2 error.
7	Warning 3/4	
	bit 7	Camera 1: "1" output with input error.
	bit 6	Camera 2: "1" output with input error.
	bit 5	Camera 3: "1" output with input error.
	bit 4	Camera 4: "1" output with input error.
	bit 3	Camera 5: "1" output with input error.
	bit 2	Camera 6: "1" output with input error.
	bit 1	Camera 7: "1" output with input error.
	bit 0	Camera 8: "1" output with input error.
8	Warning 4/4	
	bit 7	Camera 9: "1" output with input error.
	bit 6	(Not defined) "0" output
	bit 5	(Not defined) "0" output
	bit 4	(Not defined) "0" output
	bit 3	(Not defined) "0" output
	bit 2	(Not defined) "0" output
	bit 1	(Not defined) "0" output
	bit 0	(Not defined) "0" output

- REC MODE SENSE (D8H) [JVC-1]

Returns the status data for the input recording settings.

(Current operating mode status. The status at the time of operations will be returned when in the timer mode.)

TXD D8H

RXD □□□ □□□ □□□ □□□ □□□
1st byte 2nd byte 3rd byte 10th byte

REC MODE SENSE Return Data


byte No.	bit No.	
1	Input Recording Settings (Audio)	
	bit 7	(Not defined) "0" output
	bit 6	(Not defined) "0" output
	bit 5	(Not defined) "0" output
	bit 4	(Not defined) "0" output
	bit 3	(Not defined) "0" output
	bit 2	"1" output with audio recording during normal operations at [ON].
	bit 1	"1" output with audio recording at [ON].
	bit 0	Recorded image mode: SMOOTH: "0", HIGH-RESOLUTION: "1"
2	Input recording Settings (Camera 1)	
	bit 7	(Not defined) "0" output
	bit 6	Normal Operations: Recording frame rate:
	bit 5	0000: 0.08 0001: 0.2 0010: 0.4 0011: 0.8 0100: 1.7
	bit 4	0101: 2.5 0110: 5 0111: 8.3 1000: 12.5 1001: 25
	bit 3	1111: NotRec
	bit 2	Normal Operations: Recording resolution 00: L 01: B
	bit 1	10: N 11: H
	bit 0	"1" output with camera 1 at [Connected].
3 to 10	Input Recording Settings (Camera 2 to 9)	
	bit 7 to 0	The contents are the same as 2BYTE.

3. Details of the Commands (continued)

3.4. SENSE Commands (continued)

- ALARM MODE SENSE (D9H) [JVC-1]

 Returns the status data for the alarm recording settings.
(Current operating mode status. The status at the time of operations will be returned when in the timer mode.)



ALARM MODE SENSE Return Data

byte No.	bit No.	
Alarm Recording Settings (All)		
1	bit 7	Recording time during passcode input errors:
	bit 6	00: NotRec, 01: 10 seconds, 10: 20 seconds, 11: 30 seconds
	bit 5	Recording time during emergency detection:
	bit 4	000: NotRec, 001: 30 seconds, 010: 1 minute, 011: 5 minutes,
	bit 3	100: 10 minutes, 101: 20 minutes, 110: Continual, 111: Manual
	bit 2	"1" output with audio recording during alarm operations at [ON].
	bit 1	"1" output with audio recording at [ON].
2	bit 0	Recorded image mode: SMOOTH: "0", HIGH-RESOLUTION: "1"
	Alarm Recording Settings 1/2 (Camera 1)	
	bit 7	Not defined: "0" output
	bit 6	Alarm recording: Recording frame rate:
	bit 5	0011: 0.8 0100: 1.7 0101: 2.5 0110: 5 0111: 8.3
	bit 4	1000: 12.5 1001: 25 1110: Auto 1111: NotRec
	bit 3	
3	bit 2	Recording resolution: 00 : L 01 : B 10 : N 11 : H
	bit 1	
	bit 0	Not defined: "0" output
	Alarm Recording Settings 2/2 (Cameras 2 to 9)	
	bit 7	Not defined: "0" output
	bit 6	Not defined: "0" output
	bit 5	Recording time:
4/6/,, /18	bit 4	000 : 10 001 : 15 010 : 30 011 : 60 100 : 180 101 : 300
	bit 3	110: Manual
	bit 2	Pre-sensor recording time:
	bit 1	00: 10, 01: 30, 10: 60 (seconds), 11: [OFF]
	bit 0	"1" output with pre-alarm recording at [ON].
	Alarm Recording Settings 1/2 (Cameras 2 to 9)	
	bit 7	The contents are the same as 2BYTE.
5/7/,, /19	bit 7	
	to 0	Alarm Recording Settings 2/2 (Cameras 2 to 9)
	bit 7	The contents are the same as 3BYTE.
	to 0	

- VR MODE SENSE (DAH) [JVC-1]

Returns the status data for the operation settings.



VR MODE SENSE Return Data


byte No.	bit No.	
1	Skip Settings	
	bit 7	Not defined: "0" output
	bit 6	Continuous skip playback:
	bit 5	00: OFF, 01: 1 second, 10: 5 seconds, 11: 10 seconds
	bit 4	Time jump settings:
	bit 3	000: 1minute, 001: 5 minutes, 010: 10 minutes, 011: 30 minutes,
	bit 2	100: 1 hour, 101: 4 hours, 110: 1 day, 111: 1 week
2	bit 1	Skip button settings:
	bit 0	00: Time, 01: Alarm, 19: Event, 11: Motion detection
	Operation Settings 1/5	
	bit 7	Repeat recording:
	bit 6	00: OFF, 01: Alarm lock, 10: All
	bit 5	"1" output with the operation lock release method at [Passcode].
	bit 4	Range of operation lock activation:
3	bit 3	00: OFF, 01: Prohibit stop recording, 10: Prohibit all, 11: User settings
	bit 2	"1" output with rec indicator at [ON].
	bit 1	Power failure restoration operations:
	bit 0	00: OFF, 01: Maintained prior to power failure, 10: Enforced recording
	Operation Settings 2/5	
	bit 7	Not defined: "0" output
	bit 6	Not defined: "0" output
4	bit 5	Recorded image storage period:
	bit 4	0000: 1 day, 0001: 3 days, 0010: 5 days, 0011: 1 week,
	bit 3	0100: 2 weeks, 0101: 3 weeks, 0110, 1 month, 0111: 2 months,
	bit 2	1000: 3 months
	bit 1	Repeat recording:
	bit 0	00: OFF, 01: Alarm lock, 10: All
	Operation Settings 3/5	
5	bit 7	Not defined: "0" output
	bit 6	Not defined: "0" output
	bit 5	"1" output with DVD at [ON].
	bit 4	"1" output with OPERATION at [ON].
	bit 3	"1" output with CHANGE MONITOR at [ON].
	bit 2	"1" output with CHANGE SETTING at [ON].
	bit 1	"1" output with PLAY at [ON].
6	bit 0	"1" output with STOP REC at [ON].
	Operation Settings 4/5	
	bit 7	Audio 2 link destination:
	bit 6	0000: No specification, 0001: Camera 1; 0010: Camera 2;
	bit 5	0011: Camera 3; 0100: Camera 4; 0101: Camera 5; 0110: Camera 6;
	bit 4	0111: Camera 7; 1000: Camera 8; 1001: Camera 9
	bit 3	Audio 1 link destination:
	bit 2	0000: No specification, 0001: Camera 1; 0010: Camera 2;
	bit 1	0011: Camera 3; 0100: Camera 4; 0101: Camera 5; 0110: Camera 6;
	bit 0	0111: Camera 7; 1000: Camera 8; 1001: Camera 9
	Operation Settings 5/5	
	bit 7	Not defined: "0" output
	bit 6	Not defined: "0" output
	bit 5	Not defined: "0" output
	bit 4	Not defined: "0" output
	bit 3	"1" output with mirroring operation at [ON].
	bit 2	"1" output with auto scandisk at [ON].
	bit 1	AUDIO FIXED setting:
	bit 0	00: OFF, 01: Audio 1, 10: Audio 2

3. Details of the Commands (continued)

3.4. SENSE Commands (continued)

- MONITOR MODE SENSE (DBH) [JVC-1]

 Returns the status data for the monitor display settings.




MONITOR MODE SENSE Return Data

byte No.	bit No.	
1		Monitor Display Settings 1/11
	bit 7	Not defined (fixed at "0")
	bit 6	Not defined (fixed at "0")
	bit 5	Border color:
	bit 4	00: BLACK, 01: DARK GRAY, 10: GRAY, 11: LIGHT GRAY
	bit 3	"1" output with VGA output at [ON].
	bit 2	Not defined (fixed at "0")
	bit 1	Alarm detection display:
	bit 0	00: OFF, 01: Fixed, 10: Sequential
		Monitor Display Settings 2/7
2	bit 7	Not defined (fixed at "0")
	bit 6	Not defined (fixed at "0")
	bit 5	Not defined (fixed at "0")
	bit 4	Not defined (fixed at "0")
	bit 3	Quad display sequence time setting:
	bit 2	
	bit 1	
	bit 0	
		0001: 1, 0010: 2, 0011: 3, 0100: 5, 0101: 10 (seconds)
		Monitor Display Settings 3/7
3	bit 7	Automatic switch setting (camera 2):
	bit 6	
	bit 5	
	bit 4	
	bit 3	Automatic switch setting (camera 1):
	bit 2	
	bit 1	
	bit 0	
		0000: OFF, 0001: 1, 0010: 2, 0011: 3, 0100: 5, 0101: 10 (seconds)
		Monitor Display Settings 4/7 to 6/7
4 to 6	bit7 to 0	Contents the same as 3BYTE (cameras 3 to 8)
		Monitor Display Settings 7/7
7	bit 7	Not defined (fixed at "0")
	bit 6	Not defined (fixed at "0")
	bit 5	Not defined (fixed at "0")
	bit 4	Not defined (fixed at "0")
	bit 3	Automatic switch setting (camera 9):
	bit 2	
	bit 1	
	bit 0	
		0000: OFF, 0001: 1, 0010: 2, 0011: 3, 0100: 5, 0101: 10 (seconds)

- MOTION DETECT SENSE (DCH) [JVC-1]

Returns the status data for the motion detection settings.

 (Current operating mode status. The status at the time of operations will be returned when in the timer mode.)



MOTION DETECT SENSE Return Data

byte No.	bit No.	
1		Motion Detection Settings 1/9
	bit 7	Operation setting (camera 1):
	bit 6	
		Detection sensitivity (camera 1):
	bit 5	
	bit 4	
	bit 3	
	bit 2	
	bit 1	
	bit 0	
		Motion Detection Settings 2/9 to 9/9
2 to 9	bit7 to 0	Contents the same as 1BYTE (cameras 2 to 9)

- MONITOR OUT STATUS SENSE (DEH) [JVC-1]

Returns the status data for monitor output.



7	6	5	4	3	2	1	0
0:Live	Split-screen mode*			Camera number*			
1:PLAY							

* Split-screen mode

 
000: 9 WAY, 001: QUAD-A, 010: QUAD-B,
011: QUAD-C, 101: 6 WAY, 110: Single screen

* Camera number

Displays the relevant camera number when a single-screen monitor is in use. (0 to 9) Displays the top left-hand camera number when split-screen monitors are in use.

- MAC SENSE (FCH) [JVC-1]

Acquires the MAC address (6 bytes.)



3. Details of the Commands (continued)

3.5. Other Commands

- Data “0” to “9” (30H to 39H) [BASIC/JVC-1]
Used for numeral input.
- ENTER (40H) [BASIC/JVC-1]
This command is used as the input end mark when the transmission of all numerical commands has been completed.
- CLEAR ERROR (41H) [BASIC/JVC-1]
Clears only the last numerical command entered (transmitted.) Also clears the error status.
- CLEAR (56H) [BASIC/JVC-1]
Clears the current mode, and clears the error status. The system is ready to receive new commands after this command has been received.
- ACTIVE SENSE (DFH) [JVC-1]
Returns the ACK response. (This is the command to check that the connected equipment is operating normally.)
- JVC TABLE 1 ON (F6H) [BASIC/JVC-1]
The command to activate the JVC TABLE 1. JVC TABLE 1 is maintained until F7H is output once this has been set.
- BASIC TABLE ON (F7H) [BASIC/JVC-1]
The command to set the BASIC TABLE to ON.
- REC/DUB REQUEST (FAH) [BASIC/JVC-1]
This command must be sent before the REC command is transmitted.
- VTR/HDR INQ (FBH) [BASIC/JVC-1]
Returns the ACK response. (This is the command to check that the connected equipment is the VR-509.)

CAUTION

The only method of clearing the warning mode when an error occurs with the VR-509 is to switch the power supply OFF and then ON again.

Others

Specifications

<General>

Video compression:	MPEG-2 (Conformity)
Capacity:	160 GB × 2
Interface:	RS-232C, SERIAL, LAN
Power supply:	AC 220 V to 240 V ~, 50 Hz/60 Hz
Power consumption:	0.5 A
Allowable operating temperature:	5°C to 40°C
Allowable storage temperature:	-20°C to 60°C
Allowable operating humidity:	30% to 80 %
Mass:	Approx, 7.0 kg

<Video signal>

Video input:	9 lines (supports asynchronous input)
Video output:	9 lines (Through)
	Video output × 3 lines (Front × 1, rear × 2)
Line input:	1.0 V (p-p), 75Ω (BNC unbalanced)
Line output:	1.0 V (p-p), 75Ω (BNC unbalanced)
Number of effective pixels:	720 × 288 (HIGH-RESOLUTION) : 360 × 288 (SMOOTH)



<Audio signal>

Audio input:	2 line
Audio output:	2 lines (Front × 1, Rear × 1)
Line input level:	-8 dBs, 50 kΩ (Unbalanced)
Line output level:	-8 dBs, 1 kΩ (Unbalanced)
Frequency:	100 Hz to 10 kHz
Audio recording format:	PCM (8-bit 12 kHz sampling)

<Accessories>

Instructions	× 1
Power cord (For continental Europe, etc.: 2.5 m)	× 1
Power cord (For U.K. only: 2 m)	× 1

<Appearance>

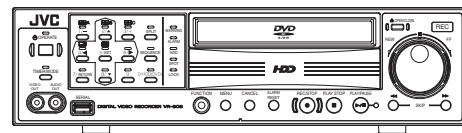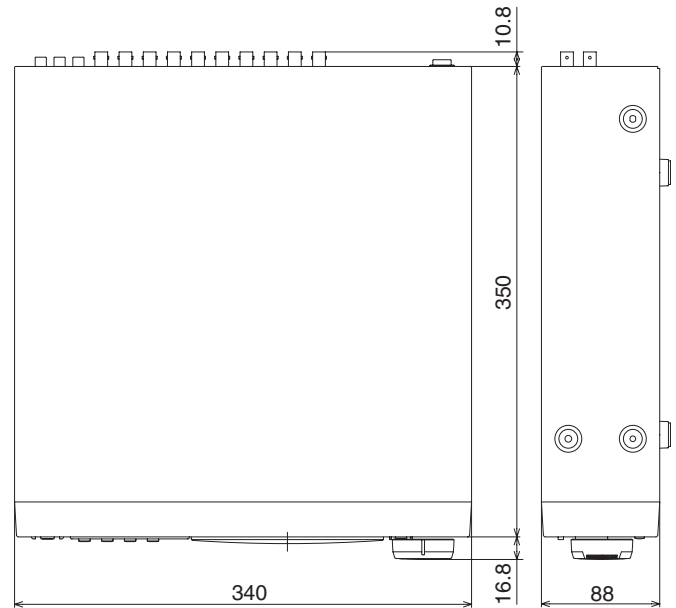

[unit: mm]

* Specifications and appearance of this unit are subject to change for improvement purposes without prior notice.

Index

A		M	
Alarm		Menu	
Alarm Reset	11	MENU Flowchart.....	86, 88
Deleting Alarm Lists	53	MENU Screen Operations	17
Searching with the Alarm List	42		
Setting ALARM Recording.....	34	O	
Setting up the ALARM TERMINAL	33	ONSCREEN MODE	25
Using the Motion Detection Function	35	OPERATION LOCK.....	48
C		P	
CAMERA TITLE	47	Part Names and Functions	10
CLOCK SET	19	PC	
COVERT CHANNEL	27	Adjusting Clocks with NTP Server	78
		Downloading VR-509 Settings	79
D		Mail Notification Setting During Alarm Input	77
DVD		Record Program Using a PC	70
DVD Recording Duration	112	Uploading VR-509 Settings	80
Exporting Data on DVD	57	Viewing Live Images Using a PC.....	69
Playing Back Exported Images on DVD	60	Viewing Playback Images Using a PC.....	73
		Playback	
F		Jog/Shuttle Dial.....	43
Flash Memory		Simultaneous Playback Mode	40
Loading Set Data from the Flash Memory	63	Skipping Recording Images.....	44
Storing Set Data in the Flash Memory	63	SPLIT Screen	41
		PRECAUTIONS.....	8
H		R	
Hard Disk		REC	
AUTO SCAN DISK	50	Recording Duration	110
DEFRAG DATABASE.....	51	Setting ALARM Recording.....	34
External Hard Disk Drives.....	64	Setting NORMAL Recording	31
Initializing the Hard Disk ("FORMAT")	51	Types of Recording.....	28
MANUAL SCAN DISK	50		
Setting up the Hard Disk for Mirroring	52	S	
How to Read this Manual	7	SEARCH DATE	43
		SPLIT Screen	22, 41
I		T	
Installation Settings	20	Timer	
		DATE TIMER	39
L		WEEKLY TIMER.....	38
LAN	65	Troubleshooting.....	96
Live Camera Images			
SEQUENTIAL	22, 24	V	
SPLIT Screen	22	VGA OUT	24
		W	
		Web Browser Glossary.....	102

JVC