 


Keep this **USER'S MANUAL** and **SET-UP DISC** for future reference as they contain important information.

TABLE OF CONTENTS

1. BATTERY INSTALLATION	2
2. 3-POSITION MEMORY SWITCH	3
3. SETTING UP THE CONTROLLER	
• WHAT YOU'LL NEED TO SET UP THE CONTROLLER	4
• METHOD 1 - PROGRAMMING THE UNIT USING THE REMOTE LEARNING METHOD	4
• METHOD 2 - PROGRAMMING THE UNIT USING THE MANUFACTURER CODES	6
• METHOD 3 - PROGRAMMING THE UNIT USING MANUAL SEARCH	7
4. TESTING THE CONTROLLER	8
5. HOW TO PLAY	9
6. MANUFACTURERS CODES	10
7. CONSUMER INFORMATION	22

BATTERY INSTALLATION

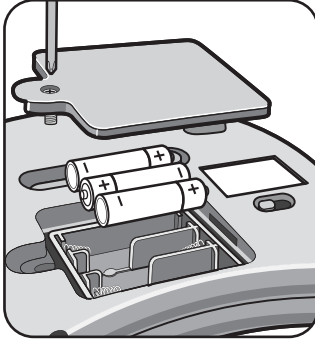

- The battery compartment is located on the back of the unit.
- Unscrew and lift the cover away from the battery compartment.
- Insert 3 “AA” batteries as shown.
- For longest life and best performance use only alkaline batteries.
- Replace the battery compartment cover.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage;


- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

NOTE:

- *If your DVD player does not respond properly to the controller, you may have to replace the batteries.*
- *After replacing the batteries, you do **NOT** have to re-program the codes into your controller - the codes you programmed will be automatically saved.*

3-POSITION MEMORY SWITCH


Your InteracTV unit can be set-up to be played with 3 different DVD players. There is a 3-position memory switch and a blank label located on the back of the unit to indicate which DVD player you want to program.

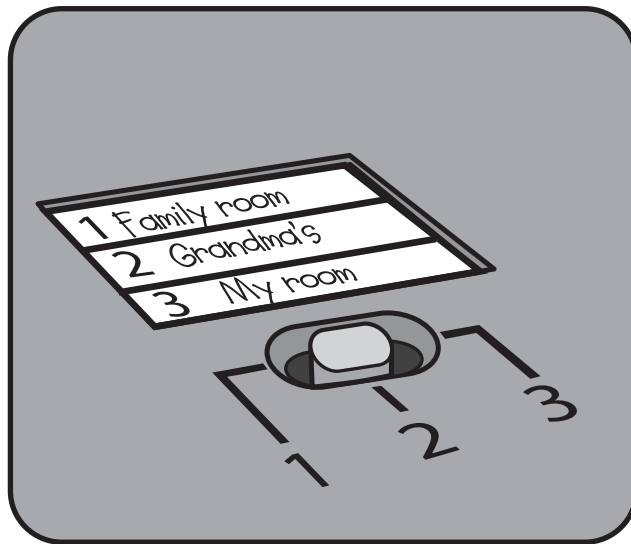

Before programming the unit slide the switch to position 1, 2, or 3. Don't forget to mark the label for easy reference. Remember - you must perform the following steps for each DVD player you wish to use with the controller.


Now you are ready to program the controller.

There are 3 methods that can be used to set-up the controller for each DVD player. Begin with method 1.

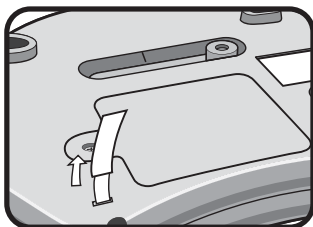

SETTING UP THE CONTROLLER

BEFORE YOU BEGIN: Make sure you have removed the TRY ME pull-tab from the back of the InteracTV controller.

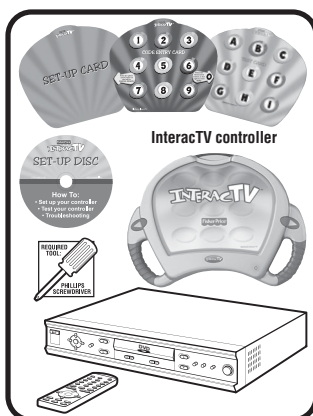

WHAT YOU'LL NEED TO SET UP THE CONTROLLER

To set up the InteracTV controller to work with your DVD Player, you will need the following:

- The InteracTV controller
- A DVD player
- Your DVD Player's remote control
- SET-UP disc
- SET-UP card
- CODE ENTRY card
- TEST card




METHOD 1 - PROGRAMMING THE UNIT USING THE REMOTE LEARNING METHOD

This method is the same method of programming that is described in your DVD tutorial and on the QUICK SET-UP INSTRUCTIONS.

1. Make sure your DVD player is turned off while programming your InteracTV controller.
2. Set the 3-position switch on the back of your InteracTV controller to the desired setting.
3. Insert the SET-UP card into your InteracTV controller. When the card is properly inserted, the light on the bottom of your controller will blink twice.

4. Place the InteracTV controller on a flat surface facing your DVD Player's remote, approximately 3 inches apart.


NOTE: Always be sure your hand is not covering the red window on the front of the controller.

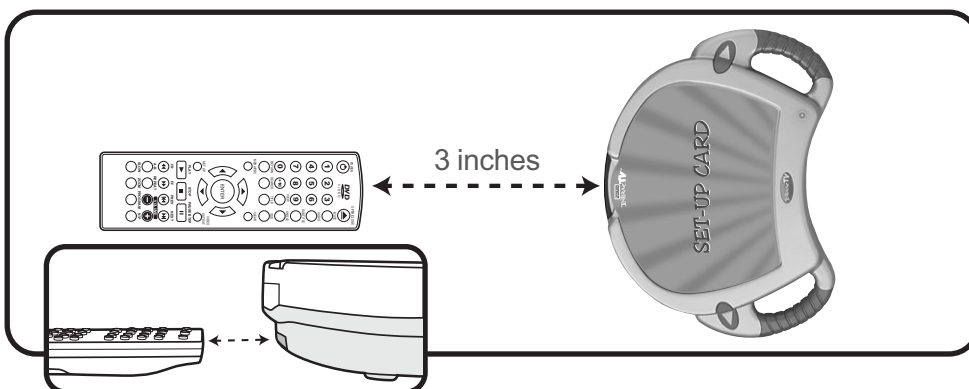

5. Follow the step-by-step audio instructions from the InteracTV controller, pressing the buttons on your DVD player's remote when prompted by the voice from the controller.

When pressing the buttons on your DVD player's remote, make sure you press each button firmly, and hold until the green light goes off on the controller.

If you hit the wrong button on your DVD player's remote during the SET-UP procedure, simply begin the SET-UP procedure again by removing the SET-UP card and re-inserting it again. This resets the controller back to the beginning of programming mode. Begin the REMOTE LEARNING METHOD again starting from step 4.

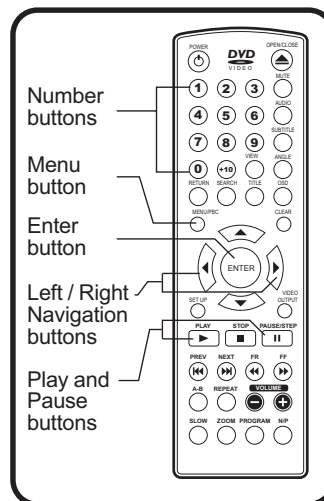

NOTE:

- DVD remote controls can vary. On some remotes, both the **PLAY** and **PAUSE** functions are dedicated to one button. If your DVD player's remote uses the same button for both **PLAY** and **PAUSE**, simply press this same button at both prompts during the **SET-UP** procedure.
- If your DVD player's remote control does not have all of these buttons, refer to the two alternate methods for programming your InteracTV controller.

6. Once you've entered all the buttons as instructed, remove the SET-UP card and test that the controller is programmed properly by proceeding to the **TESTING YOUR CONTROLLER** section of this manual.


METHOD 2 - PROGRAMMING THE UNIT USING THE MANUFACTURER CODES



1. Insert the CODE ENTRY card into your InteracTV controller. When the card is properly inserted, the light on the bottom of your controller will blink twice.
2. Look up the manufacturer's code for your DVD player in the back of this USER'S MANUAL. If there are multiple codes for a particular manufacturer, start with the first code.
3. Enter the first code number using the number buttons on the InteracTV controller.
4. After the 4th digit is pressed, the Green LED light will display a long blink.
5. Remove the CODE ENTRY card from the InteracTV controller and test that the controller is programmed properly by proceeding to the TESTING YOUR CONTROLLER section of this manual.
6. If all nine letter buttons and both arrow buttons do not light up on your TV screen properly during the TEST, begin the SET-UP procedure again from STEP 1 of this method using the next manufacturer's code listed for your DVD player.
7. If you have tried all the codes for your manufacturer and all the buttons still do not light up on your TV screen properly during the TEST, try programming the unit using the next method.

METHOD 3 - PROGRAMMING THE UNIT USING MANUAL SEARCH

1. Turn off the power to your DVD player.
2. Insert the CODE ENTRY card into your InteracTV controller. When the card is properly inserted, the light on the bottom of your controller will blink twice.
3. Point the controller directly at the DVD player and begin pressing the Backwards Arrow Button.

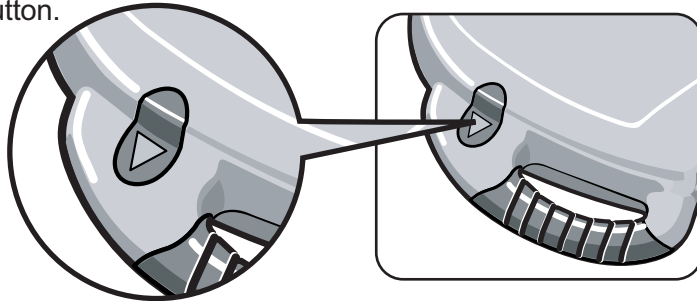

The green LED will blink a short blink each time the Backwards Arrow Button is pressed. As you press the Backwards Arrow Button, your controller will search through all its codes to find a proper code for your DVD player.

4. Continue pressing the Backwards Arrow Button SLOWLY until the power to your DVD player turns ON. When the power goes on, the controller has found a code that should work. Stop pressing the Backwards Arrow Button and remove the CODE ENTRY card.

NOTE: THIS STEP MAY TAKE SEVERAL MINUTES - PLEASE BE PATIENT.

5. Test that the controller is properly programmed by proceeding to the TESTING YOUR CONTROLLER section of this manual.
6. If all nine letter buttons and both arrow buttons do NOT light up on your TV screen properly during the TEST, begin the MANUAL SEARCH procedure again from STEP 1.
7. If you have manually searched through all the DVD codes, the Green LED button will no longer blink. To start over, remove and re-insert the CODE ENTRY card. This resets the controller back to the beginning of programming mode. Try the MANUAL SEARCH method again starting from step 3.

IMPORTANT!

If you continue to experience trouble programming your InteracTV controller, DO NOT RETURN THE PRODUCT TO THE STORE. We're just a phone call away. Call our consumer affairs hotline toll free at 1-800-432-5437 or visit us online at service.fisher-price.com.

TESTING YOUR CONTROLLER



1. Turn your DVD player on and insert the Set-Up disc.
2. Using your DVD player's remote, select "Test Your Controller" from the main menu.
3. Insert the TEST card into your InteracTV controller and follow the "Test Your Controller" instructions to make sure your InteracTV controller has been set up correctly.
4. If all nine letter buttons and both arrow buttons light up on your TV screen properly during the TEST, then your controller is now set up for this DVD player and you're ready to play!
5. If all nine letter buttons and both arrow buttons do NOT light up on your TV screen properly during the TEST, begin the SET-UP procedure again.
6. If after a second attempt all nine letter buttons and both arrow buttons do NOT light up on your TV screen properly during the TEST, refer to one of the other two methods for setting up your InteracTV controller.

NOTE:

- During the TEST procedure and when you are playing InteracTV, your controller should always be pointed directly at your DVD player.
- During the TEST procedure and when you are playing InteracTV, make sure there are no objects between your controller and your DVD player.
- During the TEST procedure, always make sure you press all nine letter buttons and both arrow buttons on your controller one at a time, and then wait a moment for the corresponding letter or arrow button to light up on your TV screen.

HOW TO PLAY

To play InteracTV you will need your InteracTV Controller, an InteracTV disc, and one of the InteracTV Activity Cards.

- Insert the InteracTV disc into your DVD player.
- Insert an Activity Card, picture side up, into the slot on the face of the InteracTV controller. When the Activity Card is properly inserted, the light on the bottom of the controller blinks twice and the show begins! The game displayed on your TV should be the same as the card you just inserted.
- There are key points throughout the show that will prompt your child to respond to interactive questions. When your child is asked a question, various answers -- including the correct one -- appear on the screen.
- Your child selects an answer by pressing the picture or symbol on the Activity Card that corresponds with the same picture or symbol on screen. InteracTV is so simple to use, that after a little help from you, your child will be able to play for hours.
- At any time, your child can replay or skip sections using the controller's arrow buttons.

InteracTV turns television from an inactive to an *inter-active* experience!

MANUFACTURER	MODEL	CODE
3DLab	ALL MODELS	0463
Acoustic Solutions	ALL MODELS	1113
Advent	dvd8200	1173
Advent	ALL MODELS	1053,1173,1179
AEG	ALL MODELS	1114,1069,1134
Afreey	ALL MODELS	1130
Aim	ALL MODELS	1029
Aiwa	portable	0465
Aiwa	XDDV370	0465
Aiwa	XDDW1	0465
Aiwa	ALL MODELS	0465,0456, 1022,1063,1064,0921
Aiwa	AVD57	0921
Aiwa	XDAX1	1022
Akai	DVPS760	0884
Akai	DVM9500	1136
Akai	ALL MODELS	1152,0884,0878,1139, 1051,1124,1114,1136, '1174
Akai	DVDP5851	1174
Akira	ALL MODELS	1129,1029
Alba		0456,1129,0460,1132, 1124,1045,1044
Albatros	ALL MODELS	1111,1110,1067
Alco	ALL MODELS	0878*
Allegero	ABV341	1136
Allergo	ALL MODELS	1081,0475*, 1136
Alpine	ALL MODELS	1098
Amitech	ALL MODELS	1069,1134, 1056
Amoisonic	ALL MODELS	1152
Amstrand	ALL MODELS	1124
AMW	T352	1140
AMW	ALL MODELS	1140,1141
Anaba	ALL MODELS	1143
Anam	ALL MODELS	0894,0201
Anim	ALL MODELS	0201
Apex	AD1225	1006
Apex	ADV3800	1006
Apex	GT2015DV	1009
Apex	GT2715DV	1009
Apex	HA7000	1031
Apex	MD100	1059
Apex	PD450	1060
Apex	PD650	1060
Apex	AD1100W	1067
Apex	AD1201	1067
Apex	PD100	1075
Apex	AD1010W	0437
Apex	AD1110W	0437
Apex	AD1200	0437
Apex	AD1500	0437
Apex	AD1600	0437
Apex	AD1700M	0437
Apex	AD500	0437
Apex	ADR1000	0437
Apex	AD1000	0437
Apex	AD3201	0437
Apex	AD500	0437
Apex	AD5131	0437
Apex	AD660	0455
Apex	AD700	0455
Apex	ALL MODELS	0455,1132,0460,0437, 0921,0461,0485,1067, 1068,1069,1070*,1073*,1156,1157,1158,1030, 1031, 1010,1009,1006,1089, 1059
Apex	AD2100	0460
Apex	AD2600	1006
Apex	HT150	1006
Apex	AD2500	1030
Apex	AD2100	1030

MANUFACTURER	MODEL	CODE
Apex	AD2500	1030
Apex	PD10	1075
Apex	PD50	1075
Apex	portable	1075,1059,1060
Apex	AD800A	1132
Apex	DRX9000	1156
Apex	AD800	1157
Apex	GT2025DV	1158
Apex	AT2014DV	1159
Arena	ALL MODELS	1139
Aria	ALL MODELS	1145
Arianet	ALL MODELS	1145
Ariston Acoustics	ALL MODELS	1035,1034
Aspire Digital	AD1100	1171
Aspire Digital	ALL MODELS	1171
A-Trend	ALL MODELS	1130
Audiosonic	ALL MODELS	1152
Audiovox	DVD1210	1042
Audiovox	D2010	1115
Audiovox	D1800	0437
Audiovox	ALL MODELS	0878,0437, 1115
Audiovox	ME20	1042
Audiovox	PE702	1042
Audiovox	VBP4000	1042
Audiovox	D1501	1062
Audiovox	VBP5000	1062
Audiovox	VOD806	1062
Audiovox	portable	1062,1042,1046,0437,1132
Audiovox	D1530	1132
Audiovox	D1730	1132
Audiovox	D1830	1132
Audiovox	PE701	1132
Auvio	ALL MODELS	1036,1037
AWA	ALL MODELS	1113
Baier	ALL MODELS	0986
Black Dimand	ALL MODELS	1124
Blaupunkt	ALL MODELS	1132,0460,0658*
Blue Parade	ALL MODELS	0453
Blue Sky	ALL MODELS	0457,0437,0456,1129, 1024,1037
Boman	ALL MODELS	0881
Bose	Bose321	0489
Bose	ALL MODELS	0489
Brain Wave	ALL MODELS	1069,1134
Brandt	ALL MODELS	1120,0457
Brooksonic	ALL MODELS	0925*,0456
Bush	ALL MODELS	1152,0456,1129,0460,1132,1029, 1045,1124,1123
California Audio	ALL MODELS	0445
Cambridge	SoundWorks	1143
Cambridge	ALL MODELS	1143, 1046,1121
Cary	ALL MODELS	0459
CAT	ALL MODELS	1129,0448, 1055,1054,1053
Celestial	ALL MODELS	1006, 0437
Centrex	ALL MODELS	0437, 1030
Centrios	EDW8020	1167
Centrios	ALL MODELS	1167
Centrum	ALL MODELS	0448, 1124
CGE	ALL MODELS	1044
cineULTRA	ALL MODELS	1129
CineVision	ALL MODELS	1081, 1024
Classic	PV7000	1047
Classic	portable	1047,1141
Classic	ALL MODELS	1113
Claton	ALL MODELS	1124
Clatronic	ALL MODELS	1114
Coby	DVD707	1021

MANUFACTURER	MODEL	CODE
Coby	DVD7500	1115
Coby	portable	1021,1115
Coby	ALL MODELS	1029, 1113,1115
Concept	ALL MODELS	0460,0877
Conia	ALL MODELS	1152,0437,1139, 1109
Continental Edison	ALL MODELS	1141
Crown	ALL MODELS	1152,1069,1134,0457
C-Tech	ALL MODELS	0484
Cybercom	ALL MODELS	1005
Cyberhome	CHDVD500	1172
Cyberhome	CHDVD300	1130
CyberHome	ALL MODELS	1130, 1172
Cytron	ALL MODELS	0884, 0457
Daewoo	DVG4000S	1061
Daewoo	DV6T834B	1106
Daewoo	DVG5200S	1154
Daewoo	DVG9000N	1061
Daewoo	DVG3000D	1069
Daewoo	ALL MODELS	1130,1141,0884,1106*,1129,1130,1069,1134, 1029, 1061,1154
Dalton	ALL MODELS	1055
Dansai	ALL MODELS	1069,1134,0881
Dantax	ALL MODELS	1045
Dargon	ALL MODELS	1005
Dawoo	portable	1061
Daytek	ALL MODELS	1141
Dayton	ALL MODELS	1141
DEC	ALL MODELS	1129,1029
Decca	ALL MODELS	1069,1134
Denon	portable	0886
Denon	DVD1500KE3	0886
Denon	DVD1000	0886
Denon	DVD2800	0886
Denon		0886
Denon	ALL MODELS	0886,0477,0472,0478,0439,0869,0481,0482,0444, 0884,0452
Denver	ALL MODELS	1129,1029, 1114
Denzel	ALL MODELS	1141
Desay	DS501	1163
Desay	ALL MODELS	1102, '1163
Diamond	ALL MODELS	1029,0457,0484, 1045,1046
Digihome	ALL MODELS	1124
digiRED	ALL MODELS	1132,0460
Digital I	ALL MODELS	1145
Digitor	ALL MODELS	1069
Digitrex	ALL MODELS	1067,0437
DIK	ALL MODELS	1005
Dinamic	ALL MODELS	1114
Disney	DVD2000C	0487
Disney	ALL MODELS	0487
DiViDo	ALL MODELS	0884
DK	ALL MODELS	1005
DMTECH	ALL MODELS	0881,0878
Dual	ALL MODELS	0457,1141,0881,0878, 1124,1113
Duraband	ALL MODELS	0448
DVD2000	ALL MODELS	0470, 1033
DVX	ALL MODELS	1041
E-Boda	ALL MODELS	1045
Eclips	ALL MODELS	1045
Electrohome	ALL MODELS	1069,1134
Elin	ALL MODELS	1069,1134
Ellion	ALL MODELS	1056
Elta	ALL MODELS	1152,1069,1134,0878, 1114
Emerson		0487
Emerson	Ewd7002	0487

MANUFACTURER	MODEL	CODE
Emerson	EWD2004	0487
Emerson	EWD2204	0487
Emerson	DVD2000	1136
Emerson	ALL MODELS	1151,1136,0884,0487*, 1097, '1168
Encore	ALL MODELS	1130
Enterprise	ALL MODELS	1136,1097
Enzer	ALL MODELS	1141,0438
esa	DP3220	1004
esa	E4000	1106
esa	ALL MODELS	1004,1106
Escent	dvd100	0451
Escent	ALL MODELS	0451
Fahrenheit	portable	1038
Fahrenheit	ALL MODELS	1144, 1038
Ferguson	ALL MODELS	0457
Finlux	ALL MODELS	1136,1069,1134,0881
Firstline	ALL MODELS	1136,0484, 0457
Fisher	DVDS1100	0436
Fisher	DVDS1500	0436
Fisher	DVDS2000	0436
Fisher	DVDS1000	0436
Fisher	ALL MODELS	1137,0445,1154,0436
Funai	ALL MODELS	1074,0456
Funi	ALL MODELS	1019
GE	GE1401p	0450
GE	ALL MODELS	0450,0460,1132,0441, 1108
GE		0460/1132
Genica	ALL MODELS	1102
Giec	GX3500	1178
Giec	ALL MODELS	1178
Global Solutions	ALL MODELS	0484
Global Sphere	ALL MODELS	0484
Goldstar	ALL MODELS	1136,0475
Goodmans	ALL MODELS	1152,0881,0878, 1030,0457,1045
GoVideo	portable	1008,0460,1113
GoVideo	ALL MODELS	1128,0881,1107,0446,0466, 460,1076,1106
Go-Video	DP7030	1008
Go-Video	DV2150	1106
Go-Video	DVR4300	1107
Go-Video	DVR5000	107
Go-Video	GVP5850	0460/1131
GPX	DV1010	1005
GPX	portable	1005
GPX	ALL MODELS	1129, 1005
Gradiente	ALL MODELS	0457
Graetz	ALL MODELS	1141
Greenhill	ALL MODELS	1132,0878,0460
Grundig	ALL MODELS	0457,0436,0456,0438,0884,0878, 1045,0463,1124,1112
Grunkel	ALL MODELS	1069,1134
H&B	ALL MODELS	1124
Haaz	ALL MODELS	0484
Hanseatic	ALL MODELS	1136
Harmon Kardon	DVD 25	1088
Harmon Kardon	DVD5RC	0468
Harmon Kardon	DVD22	0468
Harmon Kardon	ALL MODELS	0468, 1028,1025,1088
HDT	ALL MODELS	0884
He	ALL MODELS	1113
HenB	ALL MODELS	1124
Himage	ALL MODELS	1041,1040
Himax	ALL MODELS	1037
Hitachi	DVP505	0447
Hitachi	DVP315	0447
Hitachi	DVP533u	0447

MANUFACTURER	MODEL	CODE
Hitachi	DVP743u	0447
Hitachi	ALL MODELS	1141,0447,0464, 1072
Hitech	D2108	0437
Hitech	D2004	0437
Hitech	ALL MODELS	0437
Hiteker	ALL MODELS	0437, 1031
HMC	ALL MODELS	1114
Home Electronics	ALL MODELS	1113
Hypson	ALL MODELS	1035
Hyundai	ALL MODELS	0881, 1058,1057,1056
i2dvd	ALL MODELS	1122
Ingelen	ALL MODELS	1114
initial	portable	0460,1132
Initial	RC1700	1132
Initial	CDS160	1132
Initial	ALL MODELS	0460
Integra	ALL MODELS	0488
IRT	ALL MODELS	0881
ISP	ALL MODELS	0456
Jaton	ALL MODELS	1141
JBL	ALL MODELS	0468,0022*, 1028
Jeken	ALL MODELS	1129,1029
Jensen	ALL MODELS	1053
Jindian	ALL MODELS	0484
JMB	ALL MODELS	0456
JNL	ALL MODELS	1103
JVC	HRXVC1U	1150
JVC	HRXVC25U	1150
JVC	HRXVC27	1150
JVC	MXJ70	0485
JVC	XV421BK	0485
JVC	XV521BK	0485
JVC	XVM555BK	0485
JVC	XVM567GD	0485
JVC	XVN30BK	0485
JVC	XVN33SL	0485
JVC	XVN3SL	0485
JVC	XVN50BK	0485
JVC	XVN55SL	0485
JVC	XVS300BK	0485
JVC	XVS302SL	0485
JVC	XVS402SL	0485
JVC	XVS500BK	0485
JVC	XVS502SL	0485
JVC	XVS550SL	0485
JVC	XVS62SL	0485
JVC	XVS65SL	0485
JVC	XVSA70BK	0485
JVC	XVS30BK	0485
JVC	XVS40BK	0485
JVC	XVS45BK	0485
JVC	XVS200	0485
JVC	XVSA602SL	0485
JVC	XVN310	0485
JVC	XVNP10SL	0485
JVC	HRXVC25U	1144
JVC	ALL MODELS	1144,0461,0485,0451,1133,1150, 0463, '1185
JVC	HRXVC26U	1185
Jwin	ALL MODELS	1138
Karcher	ALL MODELS	0881
Kawasaki	SVP500	0878
Kawasaki	ALL MODELS	0878
Kendo	ALL MODELS	1129
Kenwood	DV5700	1180
Kenwood	ALL MODELS	0452,0480, 0482,1122, '1180

MANUFACTURER	MODEL	CODE
Kenwood	DVF3080	1122
Kiirō	ALL MODELS	1069,1134
King DHome	ALL MODELS	0484
Kiss	ALL MODELS	1141
KLH	ALL MODELS	1132,0448,0878*,0460, 1013
Konka	ALL MODELS	1099,1116,1117
Koss	DVP2161	1176
Koss	KD270	0457
Koss	KD210	0457
Koss	KS4110	0457
Koss	KS4127	0457
KOSS	ALL MODELS	0457*, 1003, '1176
Koss	portable	1003
Koss	KD305A	1003
Koss	DVD3116	1003
Krell	ALL MODELS	1095
Kyocera	ALL MODELS	0869,0481,0482,0439
Lasonic	DVD8092	0484
Lasonic	ALL MODELS	0484
Lawson	ALL MODELS	0884,0484
Lecson	ALL MODELS	1121
Legacy	portable	1039
Legacy	LDVD35	1039
Lenco	ALL MODELS	1129,1069,1134,1029, 0457
Lenox	ALL MODELS	1152,0448
Lexia	ALL MODELS	1129
Lexicon	ALL MODELS	1093,1094
Lg	ALL MODELS	1081*,1136,1097,0475
Lifetec	ALL MODELS	0457
Light On	DVDRHD04	1175
Light On	LWV5101	1181
Light On	ALL MODELS	1175,1181
Limit	ALL MODELS	0484
Loewe	ALL MODELS	0463
LogicLab	ALL MODELS	0484
Logix	ALL MODELS	0884,0881
Lumatron	ALL MODELS	0884
Luxman	ALL MODELS	0464
Luxor	ALL MODELS	1030
LXI	ALL MODELS	0553*
Magnavox	27MDTR20/17	1074
Magnavox	MDV422	1086
Magnavox	27MDTR10S	1153
Magnavox	DVD611	0463
Magnavox	MDV530	1023
Magnavox	ALL MODELS	1153,1074,0477,0472,0478,0870,0463,0451, 0487,0435,1023,1086,1145
Magnavox	PLDVD01	0463, 1023
Magnavox	MDV410SL	1023
Magnex	ALL MODELS	1045
Manhattan	ALL MODELS	0884
Marantz	ALL MODELS	0463, 1080,1087
Marantz	portable	1086,1087
Mark	ALL MODELS	1124,1049,0451
Matsui	ALL MODELS	0456, 0457
MBO	ALL MODELS	1152,1113
MDS	ALL MODELS	1129,1029
Mediencom	ALL MODELS	1101
Medion	ALL MODELS	0881, 1005,0457
Memorex	MVD2027	1005
Memorex	MVD2256	0456
Memorex	ALL MODELS	0456,0487, 1005,1124
Memorex	DVD2000	0487
Meridian	ALL MODELS	1092
Metz	ALL MODELS	0453

MANUFACTURER	MODEL	CODE
Mico	ALL MODELS	1045,1046
Micromaxx	ALL MODELS	0456
Micromedia	ALL MODELS	0451, 0463
Micromega	ALL MODELS	0463
Microsoft	ALL MODELS	0450
Microstar	ALL MODELS	1005
Minato	ALL MODELS	0986
Minax	ALL MODELS	1124
Minoka	ALL MODELS	1069,1134
Mintek	RC-320H	0460,1132
MinTek	ALL MODELS	1132,0460,0469
Mitsubishi	DD4020	0470
Mitsubishi	DD4030	0470
Mitsubishi	DD6030	0470
Mitsubishi	DD6040	0470
Mitsubishi	ALL MODELS	0477,0472,0478,0470, 1124
Monyka	ALL MODELS	1141
MP	ALL MODELS	1037
MPX	ALL MODELS	1037
Mustek	portable	1113
Mustek	ALL MODELS	1113
Mx Onda	ALL MODELS	1045,1046,0457
Myryad	ALL MODELS	0466, 1091
NAD	ALL MODELS	1135,1136,0477,0472,0478,0894
Naiko	ALL MODELS	1069,1134
Nakamichi	ALL MODELS	1090
NEC	ALL MODELS	1135,1136,0894
Nesa	ALL MODELS	1132,0460
Neufunk	ALL MODELS	1141
NextBase	ALL MODELS	1058
NexxTech	DP3222	1162
NexxTech	EDP3110	1162
Nexxtech	ALL MODELS	1162
Nickelodeon	SB325	1005
Nickelodeon	ALL MODELS	1005
Nintaus	ALL MODELS	1142
Norcent	ALL MODELS	1131,0448, 1141,1047, '1161
Norcent	DP312	1161
Norcent	DP315	1161
Nordmende	ALL MODELS	1005
Noriko	ALL MODELS	0986
Okano	ALL MODELS	0986
Omni	ALL MODELS	1130,1129,1029, 1152
Onix	ALL MODELS	1051
Onkyo	ALL MODELS	0488,0032*,0451,0553, 1002
Optimus	ALL MODELS	0453,0474, 0458
Optiview	ALL MODELS	1143
Orion	ALL MODELS	0456, 1124
Oritron	DVD100	0457
Oritron	DVD3116	0457
Oritron	DVD4119	0457
Oritron	ALL MODELS	1067,0457
Pacific	ALL MODELS	0484,0878, 1005,1124
Palladium	ALL MODELS	0456
Palsonic	ALL MODELS	1152,1139,0437, 1123
Panasonic	PV-DM2791	1083
Panasonic	PVD4742	1084
Panasonic	PVD47545	1177
Panasonic	SCHT720	0434
Panasonic	PVD4743	0439
Panasonic	ALL MODELS	0439,0869,0481,0482,0445,1096,0479,1020,0486, 0477,0472,0478,0434,0886,0452,0488, 1011,1083, 1084,1085, '1177
Panasonic	DMRE85Hs	0452
Panasonic	DMRE30	0452

MANUFACTURER	MODEL	CODE
Panasonic	DMRE50	0452
Panasonic	DVDLV55	0452
Panasonic	DVDLV60	0452
Panasonic	DVDRV20	0452
Panasonic	DVDRV30	0452
Panasonic	DVDRV31K	0452
Panasonic	DVDRV65	0452
Panasonic	DVDS25	0452
Panasonic	PVD4752	0452
Panasonic	DMRE50S	0452
Panasonic	DMRE85HS	0452
Panasonic	DVD547	0452
Panasonic	DVDF875	0452
Panasonic	DVDF86K	0452
Panasonic		0452,0482
Panasonic	DVDCV52P	0456
Panasonic	DVDS27	0481
Panasonic	DVDRP56	0482
Panasonic	CXdv700u	0486
Panasonic	DVDF84	0869
Panasonic	DVDRV32K	0869
Panasonic	DVDS35	0869
Panasonic	DVDLS5	0869
Panasonic	portable	1043,0452
Panda	ALL MODELS	0881
Philco	ALL MODELS	1114, 1152, 1045, 1044
Philips	DVD750VR	1023
Philips	DVDR985	1027
Philips	DVD740VR	1166
Philips	DVD724AT	0463
Philips	ALL MODELS	0463,0870,0451,0435,1074, 1027, 1023, 1105, 1080, 1086, 1087, 1082, '1166, 1165
Philips	DVP620VR	1165
Philips	DVP642	1166
Philips*	DVD712	0463
Philips*	DVD726	0463
Philips*	DVD711/171	1086, 1087, 1023
Phonotrend	ALL MODELS	1129
Pile	PLDVD82	1048
Pile	PLDVD140	1048
Pile	ALL MODELS	1048
Pioneer	DVR310S	1182
Pioneer	portable	0453
Pioneer	V434	0453
Pioneer	DV414	0453
Pioneer	DV440	0453
Pioneer	DV578AS	0453
Pioneer	DV275S	0453
Pioneer	DV270S	0453
Pioneer	DV-45A	0453
Pioneer	DVC302D	0453
Pioneer	ALL MODELS	0477,0472,0478,0453,0458,0869,1146,1014,0021*, 1078,1079,1077,0481, '1182
Pointer	ALL MODELS	1069,1134
Polaroid	PDV0700	1141
Polaroid	portable	1141
Polaroid	ALL MODELS	1141, 1115
Polkaudio	ALL MODELS	0463
Popular_Mech	ALL MODELS	0471
Prima	ALL MODELS	1053
Proline	ALL MODELS	0437,0878, 0457
Proscan	ALL MODELS	0450,0441
Prosonic	ALL MODELS	1129
Provision	ALL MODELS	1129
Pyle	portable	1038,1048

MANUFACTURER	MODEL	CODE
Quasar	ALL MODELS	0445, 1039
Qwestar	portable	1039,1048
Radionette	ALL MODELS	1136
Raite	ALL MODELS	1141
RCA	DRC105N	0450
RCA	DRC350N	0450
RCA	RC5220	0450
RCA	RC5240P	0450
RCA	RC5231Z	0450
RCA	RT-DVD-1	0450
RCA	ALL MODELS	0450,0477,0472,0478,0878*,0894,0201*,0440, 0441, 1012,1007,0457,0453,1132
RCA	DRC108N	0457
RCA	portable	0460,1132,0450
RCA*	DRC220N	0450
RCA*	DRC6100N	0450, 0441
Realistic	ALL MODELS	0474
REC	ALL MODELS	0452, 0482,1123
Red Star	ALL MODELS	1134,1069, 1114
Reoc	ALL MODELS	0986,0484
Revoy	ALL MODELS	1129
Rex	ALL MODELS	1051
Rilo	DVDR04	1175
Rilo	ALL MODELS	1175
Rio Audio	ALL MODELS	1136
Roadstar	ALL MODELS	1129, 1124,1152
Ronin	ALL MODELS	1141
Rotel	ALL MODELS	1133,0485
Rowa	ALL MODELS	0490, 1030
Saba	ALL MODELS	0457
Sabaki	ALL MODELS	0484
Salora	ALL MODELS	1136
Sampo	portable	0986
Sampo	ALL MODELS	1148,1130,0986,1029
Samsung		1107
Samsung	DVDV3500	1107
Samsung	DVDHD841	1126
Samsung	portable	0464
Samsung	DVDM301	0464
Samsung	DVDP231	0464
Samsung	DVDP421	0464
Samsung	DVDS221	0464
Samsung	DVDS321	0464
Samsung	DVDC631p	0464
Samsung	DVDp241	0464
Samsung	ALL MODELS	1016,1129,1126,0464,0447,0452,1107,0466, 0446*, 1076,1072,1160
Samsung	DVDV1000	1107
Samsung	DVDV2000	1107
Samsung	DVDVR4600	1107
Samsung	DVDP241	1126
Samsung	DVD511	1130
Samsung	HTDB600	1160
Samsung	DVDV2500	1107
Sansui	VRDVD4000	0456
Sansui	CDVD2500	0456
Sansui	ALL MODELS	0456,0484,1069,1134, 1045,1046
Sanyo	RBDMW770	1137
Sanyo	DWM1000	1137
Sanyo	DVD5010	0436
Sanyo	DVD1100	0436
Sanyo	DVD9201	0436
Sanyo	DVD9501	0436
Sanyo	DVD1500	0436
Sanyo	DVD6000	0436

MANUFACTURER	MODEL	CODE
Sanyo	DVD6040	0436
Sanyo	DVD6070	0436
Sanyo	DMW360	0436
Sanyo	DVD7000	0436
Sanyo	RB470MT	0436
Sanyo	DMW380	0436
Sanyo	DMW1000	1137
Sanyo	ALL MODELS	1154,0436,0827,0456,0878,1137,0476
Scan	ALL MODELS	1152,0884, 1056
ScanMagic	ALL MODELS	1113
Schaub Lorenz	ALL MODELS	1069,1134, 1114
Schneider	ALL MODELS	0884,0881,0878, 1005,1114,0457
Schwaiger	ALL MODELS	0986
Scientific Labs	ALL MODELS	0484
Scott	ALL MODELS	1144,0437, 0457
SEG	ALL MODELS	1141,0484, 1124
Shanghai	ALL MODELS	0437
Sharp	portable	0491
Sharp	DVS1U	0491
Sharp	DVL70	0491
Sharp	DVL78	0491
Sharp	DV600U	0491
Sharp	DVSR3U	0491
Sharp	ALL MODELS	0491,0986,0456,0480, 1017
Sharp	DV740U	0986
Sherwood	VD4500	1026
Sherwood	ALL MODELS	1132,1136,0460, 1026
Shinco	DVD868	1132
Shinco	ALL MODELS	1132,0460
Shinsonic	ALL MODELS	0469,0460, 1015
Shinsonic	portable	1132
Shinsonic	ODELS	1005,1114
Simaudio	ALL MODELS	1087
Singer	ALL MODELS	1152,1045,1046
Skymaster	ALL MODELS	0484, 1113
Slim Art	ALL MODELS	1069,1134
SM Electronic	ALL MODELS	1152,0484, 1113
Smart	ALL MODELS	0884, 1124
Sonic Blue	ALL MODELS	1136
Sony	DAVS300	1015
Sony	SLVD100	1118
Sony	S1V300P	1118
Sony	SLVD300P	1118
Sony	DVPC670D	0469
Sony	DVPF21	0469
Sony	DVPNC600	0469
Sony	DVPNS300	0469
Sony	DVPNS325	0469
Sony	DVP-NS315	0469
Sony	DVPNS415	0469
Sony	DVPNS425P	0469
Sony	DVPNS700	0469
Sony	DVPNS715	0469
Sony	DVP-NS725P	0469
Sony	DVP-S560D	0469

MANUFACTURER	MODEL	CODE
Sony	DVPNs975V	0469
Sony	DVPNC615	0469
Sony	DVPPQ1	0469
Sony	DVPNS575P	0496
Sony	portable	0827
Sony	ALL MODELS	1018,0469,1015,0464,0827,0024*,0443, 1118, '1169,1170
Sony	RDRGX300	1169
Sony	RDRGX300	1170
Soundmaster	ALL MODELS	0484
Soundmax	ALL MODELS	0484
Soundwave	ALL MODELS	0881
Standard	ALL MODELS	0484, 0457
Starmedia	ALL MODELS	1145, 1058
Sungale	ALL MODELS	1139
Sunwood	ALL MODELS	1114
Supervision	ALL MODELS	0484, 1113
SVA	ALL MODELS	0437
Sylvania	6520FDE	1074
Sylvania	DVC860D	0487
Sylvania	DVL100	0487
Sylvania	DVL700E	0487
Sylvania	ALL MODELS	0487*,1074*,1107,0446, 1168
Sylvania	portable	1074,0487
Symphonic	ALL MODELS	1074,0487*, 1168
Symphonic	WF20D4	1168
Synn	ALL MODELS	0484
Tag McLaren	ALL MODELS	1091
Tandberg	ALL MODELS	1124
Tandy	ALL MODELS	0658*
Tatung	ALL MODELS	1069,1134, 0466
Teac	ALL MODELS	1132,1136,0438,0871,0872,0882,0453,0894, 1135,0460,0484,0878
Technics	ALL MODELS	1096,1151,0445,0479,1020,0452,1136,0434, 0488, 1011
Technika	ALL MODELS	1069,1134, 0482
Techwood	ALL MODELS	0894,1135, 1124
Tensai	ALL MODELS	1152,0457
Tevion	ALL MODELS	0484, 0457
Thakral	ALL MODELS	0438
Theta Digital	ALL MODELS	0870,0453,0435
Thompson	ALL MODELS	1120
Tokai	ALL MODELS	1130, 1141,1114
Tokaido	ALL MODELS	1130
Tokiwa	ALL MODELS	0884
Toshiba	SD1200	0451
Toshiba	SD1700	0451
Toshiba	SD2150	0451
Toshiba	SD2705	0451
Toshiba	SD2800	0451
Toshiba	SD2900	0451
Toshiba	SD3750	0451
Toshiba	SD3800	0451
Toshiba	SD3900	0451
Toshiba	SD3960	0451
Toshiba	SD4700	0451
Toshiba	SD4900	0451
Toshiba	SDP2500	0451
Toshiba	SDV280	0451
Toshiba	SDV290	0451
Toshiba	SDV291	0451
Toshiba	SD1800	0451
Toshiba	SDP1400	0451
Toshiba	SDV392	0451
Toshiba	portable	0451,0456

MANUFACTURER	MODEL	CODE
Toshiba	ALL MODELS	0463,0456,0925,0451*,0477,0472,0478,0892, 0452,0480, 1104,1071
Trans-Continents	ALL MODELS	1141
Tredex	ALL MODELS	0484, 1102
TView	ALL MODELS	1143
Umax	ALL MODELS	1152
United	ALL MODELS	1141,1113,0878
Universum	ALL MODELS	1136, 1124
Urban Concepts	ALL MODELS	0451
US Logic	portable	0460
Uslogic		1132
V inc	ALL MODELS	1125
Venture	ALL MODELS	0878*, 1065,0491
Venturer	portable	0491
Vieta	ALL MODELS	0884
Vocapro	DVG390K	1164
Vocapro	ALL MODELS	1164
Voxson	ALL MODELS	1005,1113
Walkvision	ALL MODELS	1132,0460
Welkin	ALL MODELS	1005
Wesder	ALL MODELS	1129
Wharfedale	ALL MODELS	1130,0986, 1121,1045,1046
Windy Sam	ALL MODELS	0464
XLogic	ALL MODELS	1069,1134,1144,0484
XMS	ALL MODELS	1123,1114
Xoro	ALL MODELS	1052
Xwave	ALL MODELS	1119
Yahoo	YDP305	1183
Yahoo	YDP700	1184
Yahoo	ALL MODELS	1183,1184
Yamada	ALL MODELS	1030
Yamaha	ALL MODELS	0462,0471,0439,0869,0481,0482,0473,1027, 1023,1100,1066,1086,0452,0463
Yamaha	DVD5550	0463
Yamaha	DVS5750	0463
Yamaha	DVDSL100	0463
Yamakawa	ALL MODELS	1141
Yukai	ALL MODELS	1113
Zenith	XBV342	1081
Zenith	ALL MODELS	1081*,1136,1097,0475, 0451
Zenith	XBV442	1097
Zenith	XBV443	1097
Zenith	portable	1136
Zenith	DVB312	1136

*combo model (DVD/VCR or DVD/TV or DVD/VCR/TV)

FCC NOTE (UNITED STATES ONLY)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FISHER-PRICE and MATTEL shall not be liable for operational, technical, or editorial errors/omissions made in this manual.

The information in this manual may be subject to change without prior notice.

B9376-0922-G2

©2003, 2005 Viacom International Inc. All Rights Reserved.

Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

InteracTV is a mark of Beep Telecommunications and Computing, L.L.C. Used under license.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

PRINTED IN CHINA.

Manufactured for Fisher-Price. ©2003, 2005 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packaging and address should be retained for future reference.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-432-5437.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe,

Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

Questions?

service.fisher-price.com

In US and Canada

1-800-432-5437

 


ITEM NO. B9376

Fisher-Price®

INTERACTV™

DVD BASED LEARNING SYSTEM

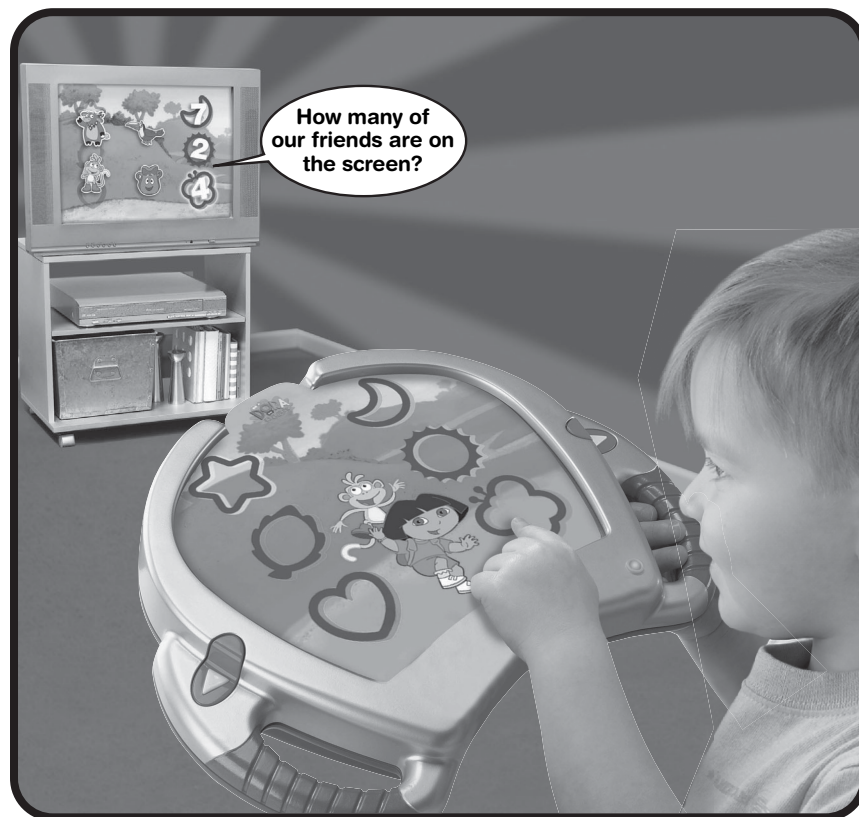

User's Manual