


KNOW YOUR KENWOOD OVEN

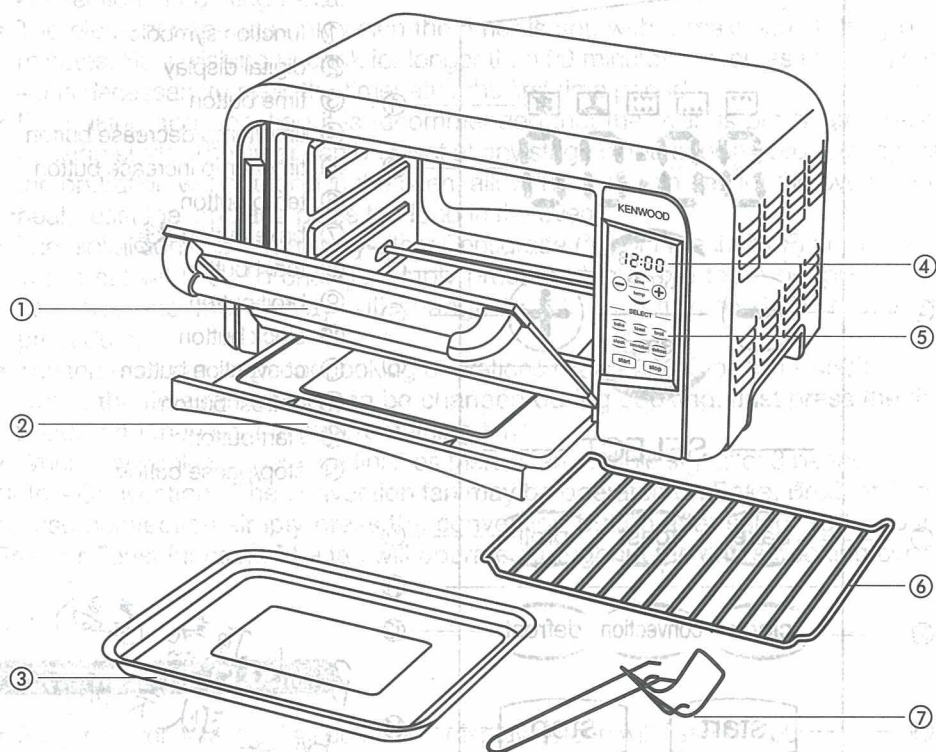

key

- | | |
|-------------------|----------------------|
| ① door handle | ⑤ control panel |
| ② crumb tray | ⑥ slide-in wire rack |
| ③ baking dish | ⑦ tray/dish handle |
| ④ digital display | |

THE CONTROL PANEL (MO716)



key

- ① function symbols
- ② digital display
- ③ time button
- ④ time/temp decrease button
- ⑤ time/temp increase button
- ⑥ temp button
- ⑦ bake button 烤
- ⑧ toast button
- ⑨ broil button
- ⑩ clock button
- ⑪ convection button
- ⑫ defrost button
- ⑬ start button
- ⑭ stop/pause button

Broil 頂熱 (最高)
 bake 可以卡 min
 Toast 卡

control panel ①
 control panel ②
 control panel ③
 control panel ④

control panel ①
 control panel ②
 control panel ③
 control panel ④

USING YOUR KENWOOD OVEN

- This oven has 2 height settings for trays. Depending on the recipe and quantity of food being cooked, the lower level is generally used when defrosting, toasting or roasting and baking and the upper level when broiling (grilling), toasting with convection or cooking pizza.
 - The elements operate only when the timer is set, with a maximum setting of 99 minutes. So if wishing to cook for longer than 99 minutes – such as roasting meat – it is necessary to reset the timer after the first time period.
 - For baking and roasting it is recommended that the oven is pre-heated before cooking starts. The timer can be reset at any stage of the cooking process, so start the operation without food in the oven, allow 10 or 15 minutes for the oven to pre-heat, reset the time and place the food in the oven.
 - The digital controls can display either Centigrade (°C) or Fahrenheit (°F) or . The oven is pre-set with °C. To change simply press and hold the temp button (6) for 3 seconds and the display will change to °C. To return to degF repeat the procedure.
 - The temperature range for cooking operations is 65 - 230°C or 150 - 450°F
- Note :** the time remaining can be changed during cooking. Just press the time button and then set the new remaining time.
- When any cooking operation finishes there is an audible signal of 3 beeps.

Note – Convection : The convection fan may be operated on Bake, Broil, or Toast. To use convection simply press the convection button after selecting the Bake, Broil, or Toast function. The fan will operate throughout the entire cooking cycle.

SETTING THE CLOCK

- Plug the oven into the wall outlet; the display screen will flash “00:00”
- Press clock key and use the + or – buttons to adjust to the correct hour.
- Press the clock key and use the + or - buttons to adjust to the correct minute.
- Press the clock key again to set the clock.

SETTING COOKING TEMPERATURE

- After the cooking function is selected, the pre-set temperature will be displayed
- To alter it, press the temp button and then press the + or – buttons to set the desired temperature.

Note : in defrost or toast function the temperature cannot be adjusted. For toast+convection (which can be used for roasting) temperature can be adjusted.

SETTING COOKING TIME

- After selecting cooking mode, press the time button and the pre-set time will be displayed
- Press the + or - buttons to set the desired time

Note : the time can be adjusted rapidly by holding down the time button. After 2 seconds the display will begin advancing rapidly in 10 minute steps.

CONVECTION

The convection fan may be operated on Bake, Broil, or Toast functions. To use convection simply press the convection button after selecting the Bake, Broil, or Toast function. The fan will operate throughout the entire cooking cycle.

DEFROST

Use the 'defrost' function to defrost frozen food or warm up cold food. The defrost function uses both top and bottom elements plus the convection fan. The pre-set time is 30 minutes; and it can be manually set from 1 minute to 99 minutes. The temperature cannot be adjusted.

To use the defrost function, insert the baking tray or rack in either upper or lower position depending on the food.

Set the time and press the start button. The display will show the time counting down and when the time is finished 3 beeps will sound.

BAKE

The baking function uses the lower elements. Baking results are generally improved if convection is used as well.

Pre-set temperature and time are 170°C and 30 minutes.

Put the Baking Pan into the lower rack guide. For cooking pizza, put the Baking rack into the upper or lower rack guide depending on recipe and use a Pizza Pan.

Press the bake button

Adjust the temperature and time as desired

Press convection button if this is required

Press the start button.

TOAST

For just toasting, both upper and lower elements are used. The time and temperature are pre-set and cannot be adjusted. It is recommended to use the lower rack for toasting bread but for heavier items such as cheese on toast or depending on preference, use the upper rack.

Press the toast button. The display will show the pre-set "—" (light) toasting setting. To adjust to "二" (medium) or "三" (dark) setting, press the toast button again. Press start.

TOAST + CONVECTION (ROASTING)

If both toast and convection functions are selected, then temperature and time can be adjusted, enabling cooking such as roasting larger pieces of meat. Upper or lower racks can be used depending on the type of food being cooked. Cooking cheese on toast or pizza might be improved by using toast + convection functions with the top rack.

Press the toast button.
Press the convection button.
Adjust the time and the temperature.
Press start.

BROIL (GRILL)

Broil (or grill) uses only the top elements for quick cooking of thinner meats such as cutlets and meat slices. Use the upper rack.

Press the broil button.
Adjust the time and the temperature.
Press the convection button if desired.
Press start.

PAUSE

To pause the cooking at any time, press stop button. To restart, press start button.

CHANGE COOKING FUNCTION

If you select a cooking function but then want to change to another, cancel your initial selection by pressing the stop button, then select a new function.

CANCEL

To cancel a cooking operation completely, press the stop button twice.

CLEANING

Turn the oven off and unplug from the wall and allow it to cool down before cleaning.

Cleaning inside the oven : wipe with a damp cloth. Stubborn stains or burnt-on residues should be removed using a damp cloth or foam based cleaner or soft plastic scouring pad.

Do not use an abrasive cleaner or pad as these can scratch or damage the surfaces.

After cleaning, dry with a paper towel or soft, dry cloth.

Take care when cleaning around the element.

Cleaning the outside and door : clean the outside and door with a non-abrasive cleaner or wipe with a damp cloth; dry thoroughly.

Trays, racks, pans and accessories : wash immediately after use in hot sudsy water, rinse and dry.

It is recommended that the oven is cleaned after each use to prevent any build up of grease or odors.

SERVICE AND CUSTOMER CARE

- If the cord is damaged it must, for safety reasons, be repaired by Kenwood or an authorized Kenwood repairer.
- If you need help with :
 - using your oven, or
 - servicing or repairs (in or out of guarantee) contact the Kenwood distributor or authorized Kenwood repairer. Have your model number ready - it's on the rear of the oven.