



website <http://www.lgservice.com>
e-mail <http://www.lgeservice.com/techsup.html>

LG

LG Ceiling Duct-Type Air Conditioner

OWNER'S MANUAL

IMPORTANT

- Please read this owner's manual carefully and thoroughly before installing and operating your room air conditioner.
- Please retain this owner's manual for future reference after reading it thoroughly.

TABLE OF CONTENTS

Safety Precautions.....3

Operating Instructions.....8

Care and maintenance.....22

Before you call for service ..23



FOR YOUR RECORDS

Write the model and serial numbers here:

Model # _____

Serial # _____

You can find them on a label on the side of each unit.

Dealer's Name _____

Date Purchased _____

■ Staple your receipt to this page in the event you need it to prove date of purchase or for warranty issues.



READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of

Troubleshooting Tips first, you may not need to call for service at all.



PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.



Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

⚠ WARNING This symbol indicates the possibility of death or serious injury.

⚠ CAUTION This symbol indicates the possibility of injury or damage.

- Meanings of symbols used in this manual are as shown below.



Be sure not to do.



 
Be sure to follow the instruction.

⚠ WARNING

■ Installation


Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.

- There is risk of fire or electric shock.

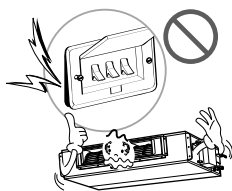


For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.

 - Do not disassemble or repair the product. There is risk of fire or electric shock.

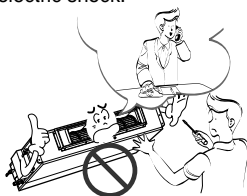


Always ground the product.

 - There is risk of fire or electric shock.

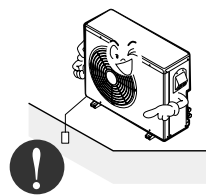

Install the panel and the cover of control box securely.

 - There is risk of fire or electric shock.

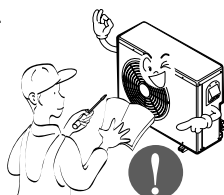


Always install a dedicated circuit and breaker.

- Improper wiring or installation may cause fire or electric shock




Use the correctly rated breaker or fuse.

 - There is risk of fire or electric shock.

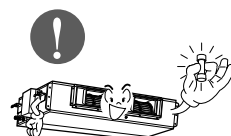

Do not modify or extend the power cable.

 - There is risk of fire or electric shock.

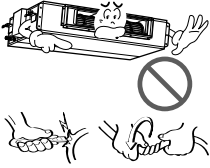

Do not install, remove, or re-install the unit by yourself (customer).

- There is risk of fire, electric shock, explosion, or injury.



 
Be cautious when unpacking and installing the product.

- Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.



For installation, always contact the dealer or an Authorized Service Center.

- There is risk of fire, electric shock, explosion, or injury.

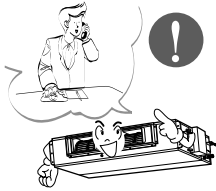


Do not install the product on a defective installation stand.

- It may cause injury, accident, or damage to the product.



Be sure the installation area does not deteriorate with age.

 - If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.

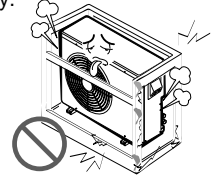

■ Operation

 
Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.

- Moisture may condense and wet or damage furniture.




Take care to ensure that power cable could not be pulled out or damaged during operation.

- There is risk of fire or electric shock.

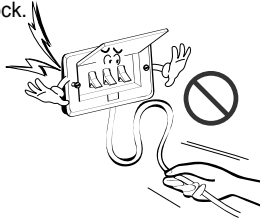


Do not place anything on the power cable.

 - There is risk of fire or electric shock.

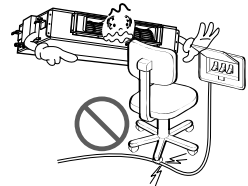

Do not plug or unplug the power supply plug during operation.

 - There is risk of fire or electric shock.

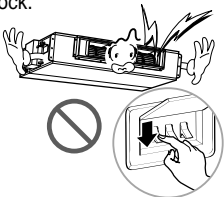


Do not touch (operate) the product with wet hands.

- There is risk of fire or electrical shock.




Do not place a heater or other appliances near the power cable.

 - There is risk of fire and electric shock.

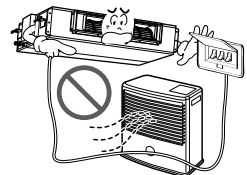

Do not allow water to run into electric parts.

 - It may cause There is risk of fire, failure of the product, or electric shock.

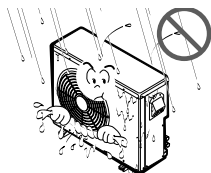


Do not store or use flammable gas or combustibles near the product.

- There is risk of fire or failure of product.




Do not use the product in a tightly closed space for a long time.

 - Oxygen deficiency could occur.

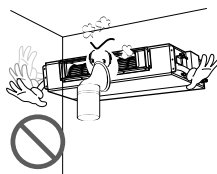

When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.

 - Do not use the telephone or turn switches on or off. There is risk of explosion or fire

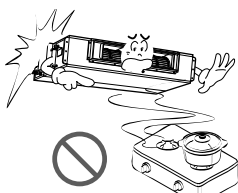


If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.

- There is risk of electric shock or fire.



Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.

 - There is risk of property damage, failure of product, or electric shock.

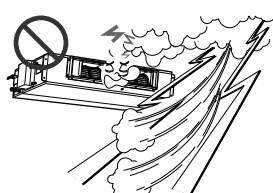

Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)

- There is risk of physical injury, electric shock, or product failure.



 
When the product is soaked (flooded or submerged), contact an Authorized Service Center.

- There is risk of fire or electric shock.




Be cautious that water could not enter the product.

- There is risk of fire, electric shock, or product damage.

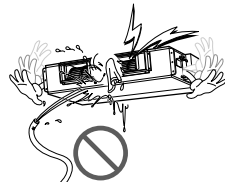

Ventilate the product from time to time when operating it together with a stove, etc.

 - There is risk of fire or electric shock.

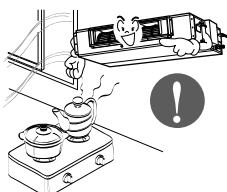


Turn the main power off when cleaning or maintaining the product.

- There is risk of electric shock.



When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.

 - There is risk of product damage or failure, or unintended operation.

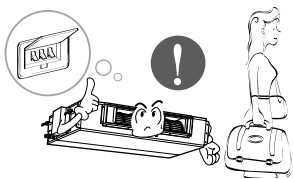

Take care to ensure that nobody could step on or fall onto the outdoor unit.

- This could result in personal injury and product damage.

 


CAUTION

Installation


Always check for gas (refrigerant) leakage after installation or repair of product.

- Low refrigerant levels may cause failure of product.

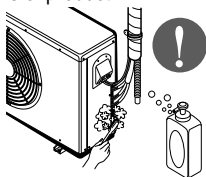


Install the drain hose to ensure that water is drained away properly.

 - A bad connection may cause water leakage.

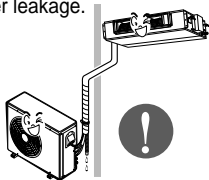

Keep level even when installing the product.

 - To avoid vibration or water leakage.

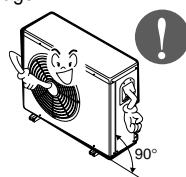


Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.

- It may cause a problem for your neighbors.



Use two or more people to lift and transport the product.

 - Avoid personal injury.

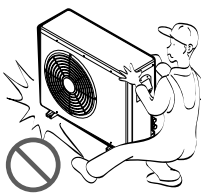

Do not install the product where it will be exposed to sea wind (salt spray) directly.

 
- It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.



Operation


Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)

- This could harm to your health.

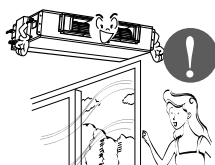


Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.

 - There is risk of damage or loss of property.

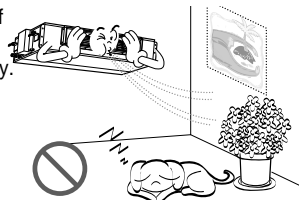


Do not block the inlet or outlet of air flow.

 - It may cause product failure.

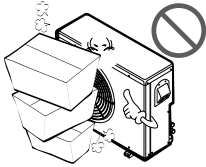


Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.

 - There is risk of fire, electric shock, or damage to the plastic parts of the product.

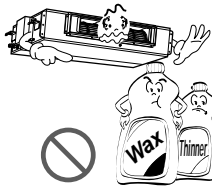


Do not step on or put anything on the product. (outdoor units)

 - There is risk of personal injury and failure of product.

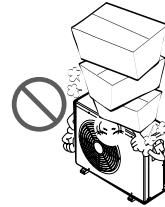

Do not insert hands or other objects through the air inlet or outlet while the product is operated.

 - There are sharp and moving parts that could cause personal injury.

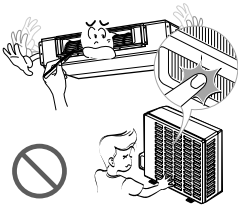

Do not drink the water drained from the product.

- It is not sanitary and could cause serious health issues.



 
Use a firm stool or ladder when cleaning or maintaining the product.

- Be careful and avoid personal injury.




Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.

- There is risk of fire or explosion

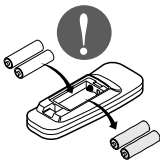

Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire.

 
- They may burn or explode.

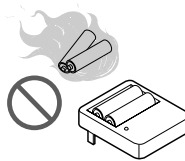

If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked.

 - The chemicals in batteries could cause burns or other health hazards.



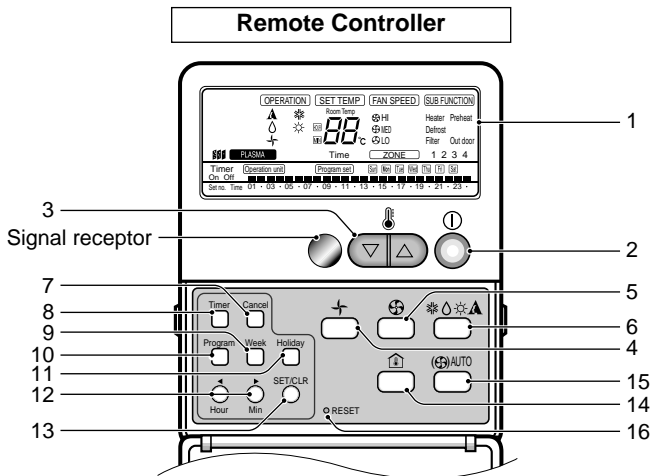

Displays the operation conditions.

Operation starts when this button is pressed, and stops when the button is pressed again.

Used to set the temperature when the desired temperature is obtained.

Used to circulate room air without cooling or heating.

Used to set desired fan speed.

Used to select the operation mode.

- Auto Operation Mode.
- Cooling Operation Mode.
- Soft Dry Operation Mode.
- Heating Operation Mode.(except cooling model)

Used to cancel the timer.

Used to set the timer when the desired time is obtained.

Used to set a day of the week.

Used to set the weekly timer.

Used to set a holiday of the week.

Used to set the time of the day and change the time in the weekly timer Function.

Used to set and clear the weekly timer.

Used to check the room temperature.

Used to control the Indoor air flow when the comp is off.

Used to set the current time and clear the setting time.

* Display temperature can be different from actual room temperature if the remote controller is installed at the place where sun-rays are falling directly or the place nearby heat source.

Optional Function

 
• WIRELESS REMOTE CONTROLLER

This air-conditioner is equipped with wired remote controller basically. But if you want to have the wireless remote controller, you can buy it.

Remote Controller

Signal transmitter

Transmits the signals to the signal receptor.

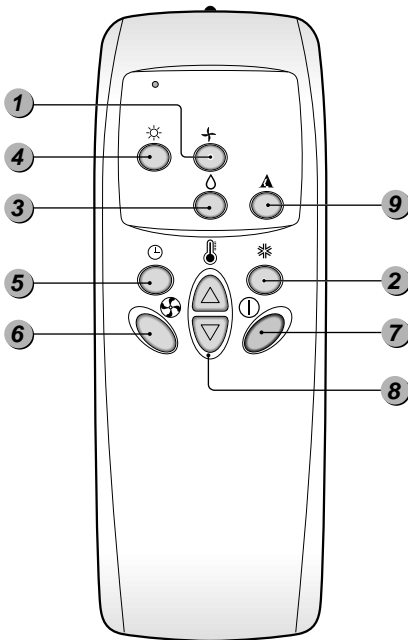

1. FAN Operation Button

Used to circulate room air without cooling or heating.

2. Cooling Operation Button

3. Soft Dry Operation Button

Used to dehumidify without overcooling.

4. Heating Operation Button

(Heat pump model only)

5. Timer Set Button

Used to set the timer when the desired time is obtained. Then the wired remote controller is set up to 24 hours by an hour but the wireless remote controller is set up to 7 hours by an hour. Therefore, if you want to set over 7 hours, use the wired remote controller.

6. Fan Speed Button

Used to set the desired fan speed.

7. On/Off Button

Operation starts when this button is pressed, and stops when the button is pressed again.

8. Set Temperature Button

Used to set the temperature when the desired temperature is obtained

9. Auto Operation Button



 
 
CAUTION:for handling the Remote Controller


- Aim at the signal receptor on the wired remote controller so as to operate.
- The remote control signal can be received at a distance of up to about 7m.
- Be sure that there are no obstructions between the remote controller and the signal receptor.
- Do not drop or throw the remote controller.
- Do not place the remote controller in a location exposed to direct sunlight, or near the heating unit, or any other heat source.
- Block a strong light over the signal receptor with a curtain or etc. so as to prevent the abnormal operation. (ex:electronic quick start, ELBA, inverter type fluorescent lamp)

Set the Current Time and a day of the Week



1 Press the '  ' button.

Each time the button is pressed, the number is changed from 00 to 23.
You can set the number of the current hour.

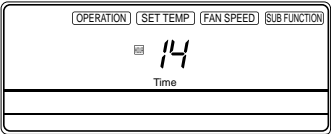


2 Press the '  ' button.

  
Each time the button is pressed, the number is increased from 00 to 59.
You can set the number of the current minute.

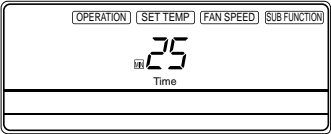


3 Press '  ' button.

 Each time the button is pressed, a day of the week is shifted from Sunday to Saturday.
You can set the day of the week.

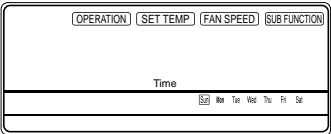



4 Press the '  RESET ' button.


 
If you want to reset the current time and a day of the week, click the Reset button.

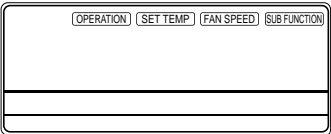


Weekly Programming

 
1 Press the Program button.

  
The remote controller is displayed like a picture. Then '  ', '  ' and '01' is blinked.

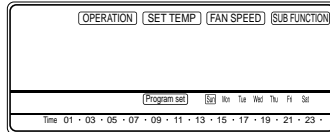



2 Press the ' ' button.

 

Press  button repeatedly until desired mode appears.




For example, if you want Thu, press  button 4 times.

 
3 Select the time you want.

Press  or  button, then blinking letter is shown.


If you press  button, then '  ' shape appears.

'  ' shape means that five o'clock is reserved.

Using below buttons, you can reserve time.



 * For example, the air-conditioner is on 6,7,8 and 13~22 o'clock.

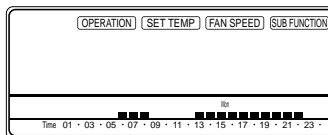

4 Press the Program button again to finish weekly programming.




Holiday Setting


If Tuesday is a holiday in this week, you may set a holiday.

- 1


Press the Program button.


- 2

 
Press the Week button.
Select the Tuesday.


- 3

Press the Holiday button.




Then the remote controller will be displayed 'Tue'.
The outside rectangular means holiday.

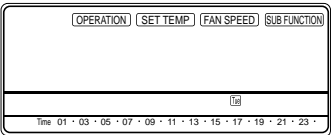

- 4

Press the Program button again to finish holiday setting.

 


Timer Setting(Delay start/Pre-set stop)


This function is used to turn on or turn off in several hours.

- 1


Press the Timer button
to turn Timer on or off.


- 2

 Change the timer setting until the desired time is set.


- 3

 If you want to cancel the timer setting, press the Cancel button.



Auto Function Setting(Way to set Fan Option)

- 1


Press the "Timer + Fan Speed" button more than 3 seconds at the same time.
- 2

Press the Fan Auto button, then choose "■" or "■ ■ ■ ■".
- 3

Repeat the first step to keep the setting.


AIRFLOW SETTING IN WIRE REMOTE CONTROLLER	FAN OPTION CONDITION	COMP ON	COMP OFF
Low Airflow	■ ■ ■	Setting Airflow(Low Airflow)	Low Airflow
Medium Airflow	■ ■ ■	Setting Airflow(Medium Airflow)	Low Airflow
High Airflow	■ ■ ■	Setting Airflow(High Airflow)	Low Airflow
Low Airflow	■	Setting Airflow(Low Airflow)	Setting Airflow(Low Airflow)
Medium Airflow	■	Setting Airflow(Medium Airflow)	Setting Airflow(Medium Airflow)
High Airflow	■	Setting Airflow(High Airflow)	Setting Airflow(High Airflow)
Low Airflow(Choose to AUTO)	■ ■ ■	Setting Airflow(Low Airflow)	FAN OFF
Medium Airflow(Choose to AUTO)	■ ■ ■	Setting Airflow(Medium Airflow)	FAN OFF
High Airflow(Choose to AUTO)	■ ■ ■	Setting Airflow(High Airflow)	FAN OFF
Low Airflow(Choose to AUTO)	■	Setting Airflow(Low Airflow)	FAN OFF
Medium Airflow(Choose to AUTO)	■	Setting Airflow(Medium Airflow)	FAN OFF
High Airflow(Choose to AUTO)	■	Setting Airflow(High Airflow)	FAN OFF

 Operation Mode

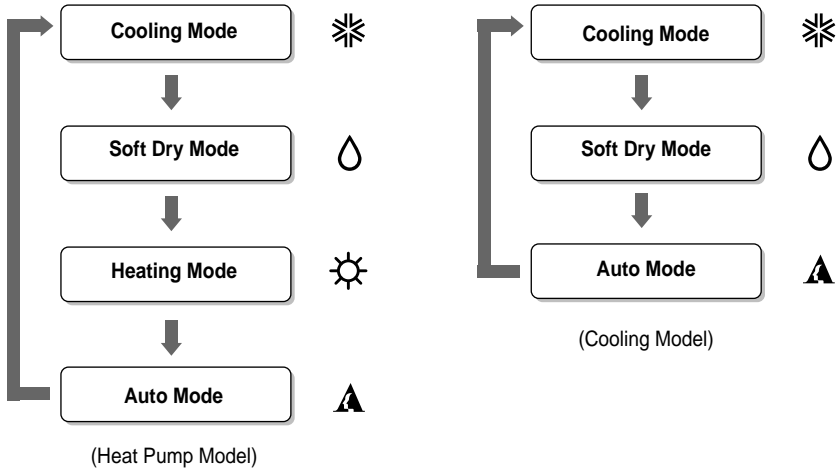


Operation Procedure

 - 1st** On/Off Button
- 2nd** Operation Mode Selection Button
- 3rd** Room Temperature Setting Button
- 4th** Indoor Fan Speed Selection Button

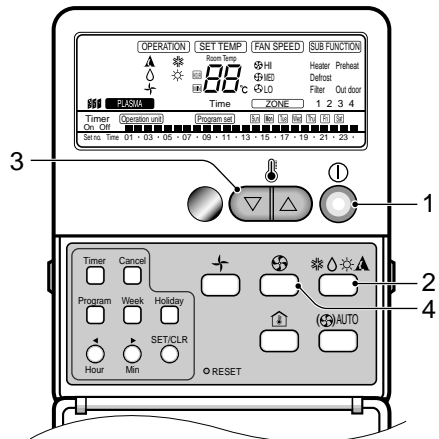


Cooling Operation Mode

 1 Press the On/Off Button.




2 Select Cooling Operation.
Press the Operation Mode Selection Button.
Each time the button is pressed, the operation mode is shifted in the arrow direction.

 
HEAT PUMP MODEL

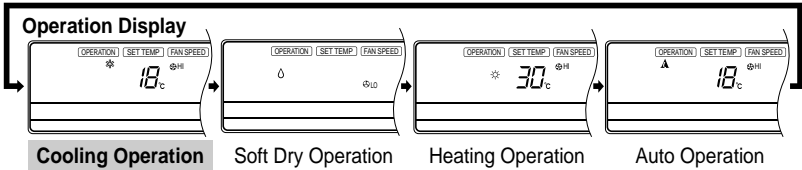


COOLING MODEL

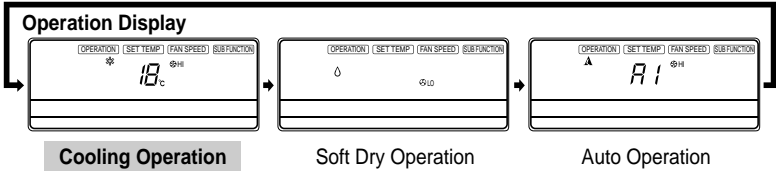 

 
3 Set the temperature lower than the room temperature.

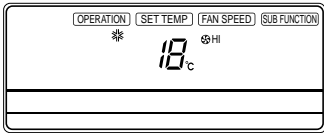

 • The temperature can be set within a range of 18°C ~ 30°C by 1°C .



4 Set the fan speed.

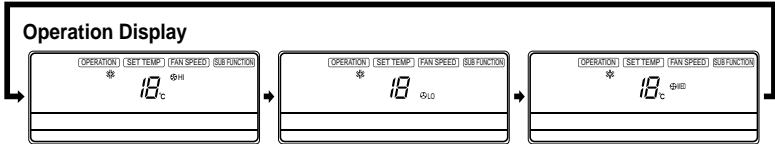 

- Select the fan speed in three steps- high, low, medium.
- The display shows high fan speed.
- Each time the button is pressed, the fan speed mode is shifted.

Soft Dry Operation Mode

This mode dehumidifies without overcooling.

1 Press the On/Off Button.

 


2 Select Soft Dry Operation.


Press the operation Mode Selection Button.

Each time the button is pressed, the operation mode is shifted in the arrow direction.

HEAT PUMP MODEL

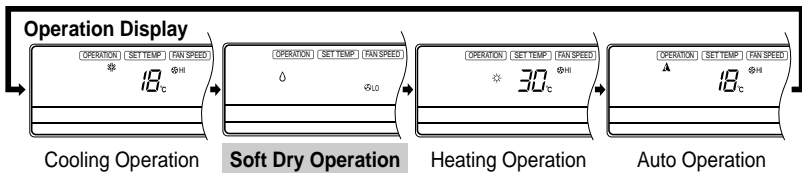

COOLING MODEL

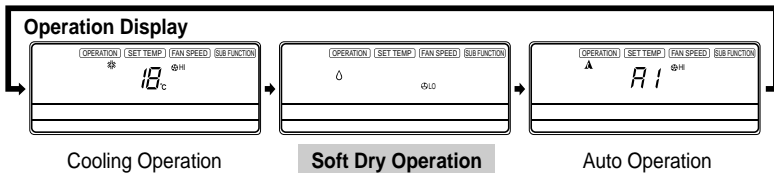 


3 During Soft Dry Operation.

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because it's already being set to the best speed for Dry Operation by Micom Control.

Heating Operation Mode (Heat pump model only)

1

Press the On/Off Button.




2

Select Heating Operation.

Press the Operation Mode Selection Button.

Each time the button is pressed, the operation mode is shifted in the arrow direction.



Operation Display

Cooling Operation

Soft Dry Operation

Heating Operation

Auto Operation

3

Set the temperature.

OPERATION

SET TEMP

FAN SPEED

 
SUB FUNCTION

☀

30℃

⊕HI

• The temperature can be set within a range of 16℃ ~ 30℃ by 1℃.




To raise the Temperature.

To lower the Temperature.

4

 Set the fan speed.



Operation Display

OPERATION

SET TEMP

FAN SPEED

SUB FUNCTION

☀

30℃

⊕HI

OPERATION

SET TEMP

FAN SPEED

SUB FUNCTION

☀

30

⊕LO

OPERATION

SET TEMP

FAN SPEED

SUB FUNCTION

☀

30℃

⊕MD

• Select the fan speed in three steps - high, low, medium.

• The display shows high fan speed

• Each time the button is pressed, the fan speed mode is shifted.

5

This air-conditioner is set to the hot start control in order not to discharge the cold air during the heating operation. This time, the remote controller indicates 'Preheat'.

OPERATION

SET TEMP

FAN SPEED

SUB FUNCTION

☀

30℃

⊕HI

Preheat

6

If the outdoor temperature is too low during the heating operation, this air-conditioner is set to the defrosting operation and the remote controller indicates 'Defrost'.

OPERATION

SET TEMP

FAN SPEED

SUB FUNCTION

☀

30℃

 
⊕HI

Defrost

16 Ceiling Duct Type Air Conditioner

Auto Operation Mode

1 Press the On/Off Button.




2 To select **Auto Operation**, press the Operation Mode Selection button.
Each time the button is pressed, the operation mode is shifted in the direction of the arrow.

HEAT PUMP MODEL



 
Operation Display

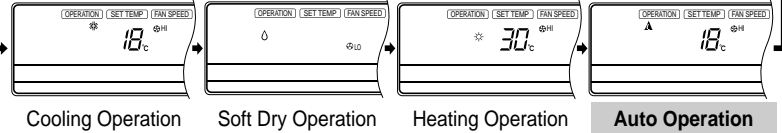

COOLING MODEL



 
Operation Display

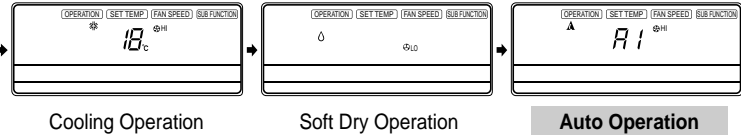

3

HEAT PUMP MODEL

 Set the temperature lower than the room temperature.
The temperature can be set within a range of 18°C ~ 30°C by 1°C.





To raise the Temperature.

To lower the Temperature.

COOLING MODEL

  Set the temperature upper or lower than the standard temperature.
The temperature can be set within a range of -2 ~ 2 by 1 level.



To raise the Temperature.
(When you feel too cool or cold.)

To lower the Temperature.
(When you feel too warm or hot.)

(This indication will be shifted to the initial Auto Mode Display state after 4 seconds.)

During Auto Operation:

- ☐ You can switch the indoor fan speed.
- ☐ The system will automatically switch from the cooling mode to the heating mode as the room temperature and set temperature.(Heat pump model only)

FAN Operation

 
1 Press the On/Off Button.



2 Press FAN Operation Button.



3 Each time Indoor Fan Speed button is pressed, the fan speed mode is shifted in the arrow direction.

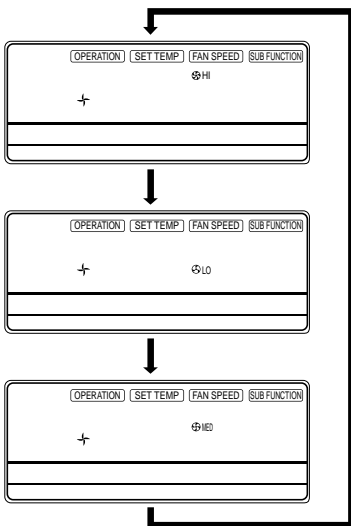

• Fan speed is high.

• Fan speed is low.

• Fan speed is medium.

* You can't set the temperature in Fan Operation mode. To exit this mode, press 'Operation Mode' button.

Child Lock Function

By using this function, children cannot operate the air conditioner.

Operation procedure

 
1 To set the Child-Lock Function

Press the Timer button and Minute Set button for three seconds. Then the operation mode shift to child lock mode and it is displayed 'CL' in the operation display.

When you press any button in this time, the remote controller is not converted to any selected mode and the 'CL' is displayed in the remote controller for about three seconds. But the Room Temperature function is operated in spite of child lock mode.

2 To cancel the Child-Lock Function

Press the Timer button and Minute Set button for three seconds. Then the child-lock mode is cancelled and the preselected mode is displayed in the remote controller.

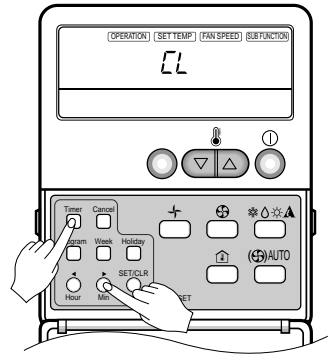

Telephone Control Operation(optional)

Calling from outside, you can start the air conditioner to keep the room comfortable.
Even though you went out with the air conditioner on, you can turn it off using the phone outside.

1 TURN ON



- ① Dial the number which is connected with the air conditioner.
- ② After ringing 5 times.
- ③ You can hear the "Beep" sound (if the air conditioner is off), then press "0" "0" "7" "8" accordingly.
- ④ With the sound "Beep, Beep" the air conditioner starts on.
- ⑤ Hang up the phone.

2 TURN OFF



- ① Dial the number which is connected with the air conditioner.
- ② After ringing 5 times.
- ③ You can hear the "Beep Beep" sound (if the air conditioner is on), then press "0" "0" "7" "9" accordingly.
- ④ With the sound "Beep---" the air conditioner is turned off.
- ⑤ Hang up the phone.

NOTICE

- ❑ This product works after telephone rings 5 times.
- ❑ If internal user picks up the phone before 5 rings, Telephone control function does not work.
- ❑ If user doesn't push the telephone button 25 seconds after beep, Telephone control function doesn't work.
- ❑ If it is connected through EPABX system, Tele control doesn't work.

Telephone Control Operation(When using along with ARS telephone)

Calling from outside, you can start the air conditioner to keep the room comfortable.
Even though you went out with the air conditioner on, you can turn it off using the phone outside.

1 TURN ON



- 1 Dial the number which is connected with the air conditioner.
- 2 OGM guide is provided after signal sound rings four times and then "Beep"(sounds from telephone itself) sounds so that outside recording can be done.
- 3 Slowly press password "0" "0" "7" and "8" in order.
- 4 With the sound "Beep, Beep" the air conditioner starts on.
- 5 Hang up the phone.

2 TURN OFF



- 1 Dial the number which is connected with the air conditioner.
- 2 OGM guide is provided after signal sound rings four times and then "Beep"(sounds from telephone itself) sounds so that outside recording can be done.
- 3 Slowly press password "0" "0" "7" and "9" in order.
- 4 With the sound "Beep---" the air conditioner is turned off.
- 5 Hang up the phone.

NOTICE

- ☐ The numbers of response bell should be adjusted to four times if pressing "Out-of-office" button or taking other action for automatic response.
- ☐ The recording time of OGM (Outgoing Message) should be less than approximately 15 seconds.
- ☐ If it is connected to key phone, it cannot be worked.

Self-Diagnosis Function

'CH' will flash in the remote controller display when a problem occurs. Then please contact your dealer.

Care and maintenance



CAUTION: Before performing any maintenance, turn off the main power to the system.

When the air conditioner is not going to be used for a long time.

When it is not going to be used for a long time.

1 Operate the air conditioner on Air circulation mode for 2 to 3 hours.

- This will dry out the internal parts.

2 Turn off the circuit breaker.



CAUTION: Turn off the circuit breaker when the air conditioner is not going to be used for a long time.

Dirt may collect and may cause a fire.

When the air conditioner is to be used again.

■ Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.

Helpful information

The air filters and your electric bill.
If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.

Operation Tips

Do not overcool the room.

This is not good for the health and wastes electricity.

Clean the air filter regularly.

Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.

 
Keep blinds or curtains closed.

Do not let direct sunshine enter the room when the air conditioner is in operation.

Ventilate the room occasionally.

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

Make sure that the doors and windows are shut tight.

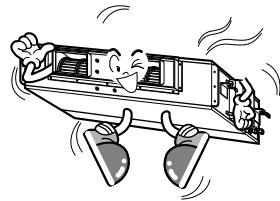

Avoid opening doors and windows as much as possible to keep the cool air in the room.

Before you call for service...

Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persist, please contact your dealer.

Case	Explanation	See page
The air conditioner does not operate.	<ul style="list-style-type: none"> • Have you made a mistake in timer operation? • On first starting, the indoor unit operates in fifteen seconds. • Has the fuse blown or has the circuit breaker been tripped? 	12 - -
The room has a peculiar odor.	<ul style="list-style-type: none"> • Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room. 	-
It seems that condensate is leaking from the air Conditioner.	<ul style="list-style-type: none"> • Condensation occurs when the airflow from the air conditioner cools the warm room air. 	-
Air conditioner does not operate for about 3 minutes when restart.	<ul style="list-style-type: none"> • This is the protector of the mechanism. • Wait about three minutes and operation will begin. 	-
Does not cool or heat effectively.	<ul style="list-style-type: none"> • Is the air filter dirty? • The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down. • Has the setting temperature been set incorrectly? • Are the indoor unit's air inlet or outlet vents obstructed? 	14, 16 -
The air conditioner operation is noisy.	<ul style="list-style-type: none"> • For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit. • For a noise that sounds like the compressed air releasing into atmosphere. -This is the sound of the dehumidifying water being processed inside the air conditioning unit. 	-
Crack sound is heard.	<ul style="list-style-type: none"> • This sound is generated by the expansion/contraction of the inlet grille, etc. due to changes of temperature. 	
Remote control display is faint, or no display at all.	<ul style="list-style-type: none"> • Has the circuit breaker been tripped? 	-

