

LinkSys PAP2-NA ATA Analogy Telephone Adapter – Setup Guide

Important

This guide is provided to assist in the setup of the LinkSys ATA with PlusNet's PlusTalk VoIP service. Please note that PlusNet does not supply the LinkSys ATA and cannot provide further support for this hardware.

- 1 Connect your phone to **Phone 1** on your LinkSys ATA.
- 2 Connect your router to the ATA using the Ethernet socket on the ATA.
- 3 Browse to your ATA on the ATA's IP normally <http://192.168.1.6>
- 4 Click on **Admin login**. (See Figure1).

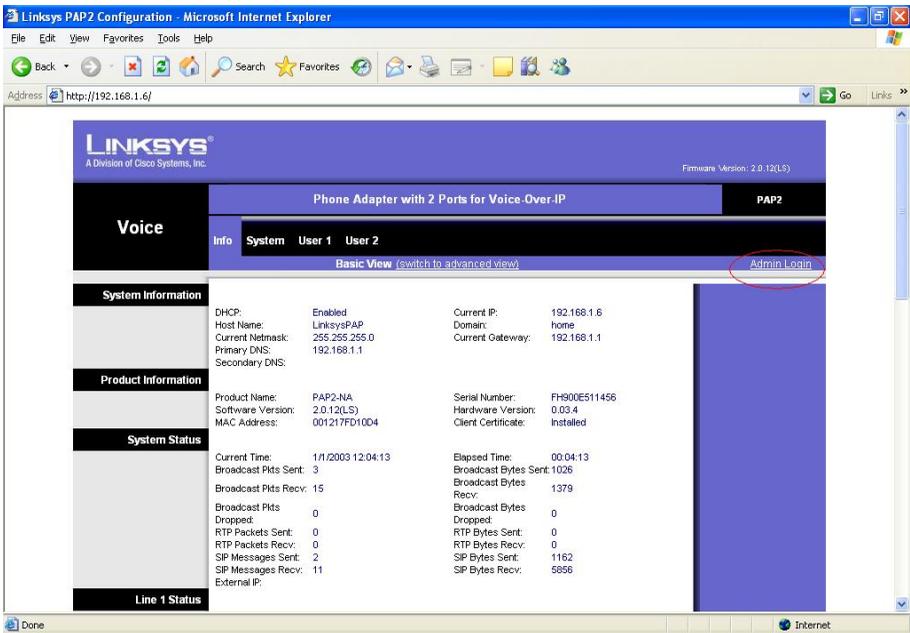


Figure 1

Instructions continue on other side

5 Click on **Line 1** and configure as shown in Figure 2.

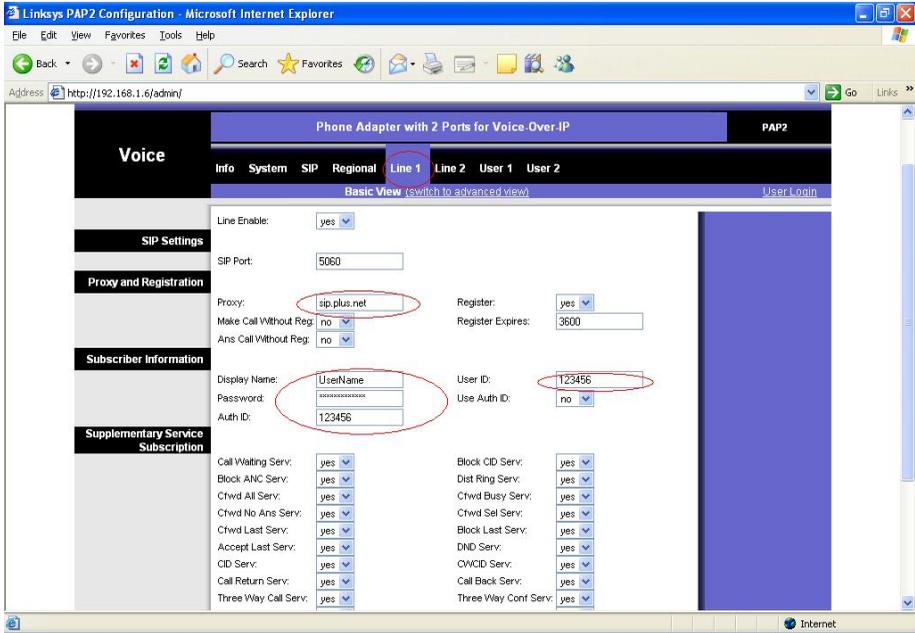


Figure 2

- 6 Setup the adapter as shown here:
Proxy is your VoIP server address: (For PlusTalk - sip.plus.net)
User ID and Auth ID: (SIP Number - for example 123456)
Password: is your ADSL password
Display name: is the name you want to present to other VoIP/PlusTalk users.
- 7 Scroll to the bottom of this screen and click **Save Settings**. Allow 30 seconds for your device to register.

Your Linksys ATA is now ready to use pick up your handset and you will hear a dial tone.

Remember to press # after each dialled number

You can find more information by visiting the support section of the LinkSys website at <http://www.linksys.com/>

