

# Evaluation Board For PLL Frequency Synthesizer

## EVAL-ADF421XEB1

### FEATURES

- General Purpose PLL Evaluation Board excluding Synthesizer, VCOs, Loop Filters for generating generic PLL standards.
- Compatible with ADF4210 and ADF4216 synthesizer families.
- Accompanying Software allows complete control of synthesizer functions from PC
- Battery Operated: Choice of 3V or 5V supplies

#### **GENERAL DESCRIPTION**

This board is designed to allow the user to evaluate the performance of the ADF421X Frequency Synthesizer for PLL's (Phase Locked Loops). The block diagram of the board is shown below. It contains the footprint for a ADF421X synthesizer, a pc connector, SMA connector for the reference input, power supplies and RF output. There is also a footprint for a loop filter and a VCO for both the RF and IF section on board. A cable is included with the board to connect to a pc printer port.

The package also contains windows software to allow easy programming of the synthesizer.



#### **BLOCK DIAGRAM**

#### REV.PrA 02/00

© Analog Devices, Inc., 1999

Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices.

One Technology Way, P.O. Box 9106, Norwood, MA 02062-9106, U.S.A. Tel: 781-329-4700 Fax: 781-326-8703

#### **Hardware Description**

The evaluation board comes with a cable for connecting to the printer port of a PC. The silk screen and cable diagram for the evaluation board are shown below. The board schematic is shown on pages 3 and 4.



Figure 1. Evaluation Board Silkscreen

The board is powered from a single 9V battery. The power supply ciruitry allows the user to choose either 3V or 5V for the ADF4113  $V_{DD}$  and  $V_P$ , and for the VCO supply. The default settings are 3V for the ADF411X  $V_{DD}$  and 5V for the ADF411X  $V_P$  and for the VCO supply. It is very important to note that the ADF4113  $V_{DD}$  should never exceed the ADF411X  $V_P$ . This can damage the device.

All components necessary for LO generation are catered for on-board. The TCXO connector provides the necessary Reference Input. The PLL is made up of the ADF411X, passive loop filter and the VCO 190-XXXT from Vari-L. The output is available at RFOUT through a standard SMA connector. If the user wishes they may use their own power supplies and reference input. In this case, they need to insert SMA connectors to as shown on the silkscreen and block diagram.

The AD7706 A/D converter is used to monitor the power supply voltage and current consumption of the ADF411X. This helps the user pick the optimum synthesizer settings for power consumption and also provides an alert if the battery



Figure 2. PC Cable Diagram

voltage is too low to sustain the required 3V or 5V for the board supply.

Loop component values shown in the circuit diagram are for 900MHz RF output, 5mA CP current, VCO190-902T, 200kHz channel spacing and 20kHz loop bandwidth.



Figure 3. Evaluation Board Circuit Diagram (Page 1)



Figure 4. Evaluation Board Circuit Diagram (Page 2)

#### Software Description

The software comes on a set of two floppy disks (Disk 1 and Disk 2). If the user double clicks on "setup.exe" on Disk 1, then the install wizard installs the software. Follow the on-screen directions. The software will be installed in a default directory called "C:/Program Files/Project1". To run the software, simply double-click on "adf411X.exe".

The front panel of the evaluation board software is shown below.

When the main software screen appears, follow the steps below for initial setup to interface to the part.

Click on Choose Device, and the Device window will appear. Choose the device being evaluated and click OK.

Click on Choose Port, and the Port Connector window will appear. Choose the port that the cable is connected to on the PC and click OK. (Normally LPT1)

Click on Osc In, and the Crystal Frequency window will appear. Enter the reference frequency being used and click OK.

Click on RF VCO Output Frequency, and the Output Frequency window will appear. Enter the output frequency and PFD reference frequency, and click OK.

Click On Prescaler, and the Prescaler window will appear. Grab the pointer, and choose the desired prescaler value. Click OK.

Click on the RF PD Polarity button to set the RF PD Polarity bit High.

Click on Charge Pump Current Setting 2 or Charge Pump Current Setting 1 and the Current Setting window will appear. Grab the pointer to set the Charge Pump Current Setting. Click OK.

The data is now set up, and other features can now be examined by the user.



Table 1. Bill of Materials for the EVAL-ADF411XEB1	Table	1.	Bill	of	Materials	for	the	EVAL-ADF411XEB1
--	-------	----	------	----	-----------	-----	-----	-----------------

Qty	Reference	Description	Manufacturer	PCB DECAL	VALUE
1	U1	Do Not Insert	ADI	TSSOP-20	
1	U2	AD7706BR	ADI	SO16WB	AD7706BR
1	U3	AD780AR	ADI	SO8NB	AD780AR
1	U4	ADP3300ART-5	ADI	SOT23-6	ADP3300ART-5
1	U5	ADP3300ART-3	ADI	SOT23-6	ADP3300ART-3
1	VCO1	Do Not Insert	Vari-L		
1	VCO2	Do Not Insert	Vari-L		
1	Y1	4.9152MHz Crystal	Vectron International	HC49 low profile	VXA1-1011
1	Y2	10 MHz TCXO	Vectron International	· · ·	T-1185
1	D1	SD103C Schottky Di	General Semiconductor	DO35	SD103C
1	D2	IN4001		D035	FEC 365-117
1	D3	Red Low Power LED	Vishav	LED	FEC 657-130
1	D4	Green Low Power LED (Do Not Insert	Vishav	I FD	FEC 657-141
			Vienay		. 20 001 111
6	C1 C5 C7 C9 C11 C41	Multi Laver Ceramic Capacitor	Murata	Case 06	0.1uE
1	C2	Tantalum Canacitor	AVX	CAP\TAL B	10µE 6.3V
3	C3 C29 C31	Tantalum Capacitor	AVX	CAP\TAJ A	22µE 6.3V
7	C4 C6 C8 C10 C12 C30 C32	Multi Laver Ceramic Canacitor	Murata	Case 06	10pF
2	C13-14	Multi Laver Ceramic Capacitor	Murata	Case 06	1nE
6	C15-17 C26-28	Multi Laver Ceramic Capacitor	Murata	Case 06	100pE
1	C18	Do Not Insert	Murata	Case 08	10001
1	C19	Do Not Insert	Murata	Case 08	
1	C20	Do Not Insert	Murata	Case 08	
2	C21-22	Multi Laver Ceramic Canacitor	Murata	Case 06	33nE
1	C23	Do Not Insert	Murata	Case 08	
1	C24	Do Not Insert	Murata		
1	C25	Do Not Insert	Murata		
2	C23 C26 C40	Multi Lover Coromia Consoiter	Murata		10pE
3	$C_{24}$ $C_{27}$	Tontolum Consoitor			
2	034 037	Tantalum Capacitor			
2					4.70F 10V
	039 042	Tantalum Capacitor	AVX		100F 6.3V
4	D4	Desister (Curfese Maunt	Daviera	0	20- 1.0%
7		Resistor (Surface Mount	Bourns		20F 1.0%
1	R2 R5-10	Resistor (Surface Mount	Bourns	Case 06	330F 1.0
1	R3	Resistor (Surface Mount	Bourns	Case 06	3K3 1.0
1	R4	Do Not Insert	Bourns		
1	R11	Do Not Insert	Bourns	Case 06	40.4.0%
6	R12-14 R21-23	Resistor (Surface Mount	Bourns	Case 06	18r 1.0%
2	R15 R24	Resistor (Surface Mount	Bourns	Case 06	51r 1.0%
1	R16	Do Not Insert		Case 08	
1	R1/	Do Not Insert	<b>D</b>	Case 08	414 4 00/
1	R18	Resistor (Surface Mount	Bourns	Case 06	1M 1.0%
1	R19	Do Not Insert		Case 08	
1	R20	Do Not Insert		Case 08	
1	R25	Do Not Insert	<b>D</b>	Case 08	
1	R26	Resistor (Surface Mount	Bourns	Case 06	2k7 1.0
3	K27-29	Resistor (Surface Mount	Bourns	Case Ub	10K 1.U
6	R30-33 R40-41	Resistor (Surface Mount	Meggitt	Case 06	100k 0.1%
2	K34-35				
2	K30 K3/	Resistor (Surface Mount	Bourns		330K 1.0%
2	K38 K39	Resistor (Surface Mount	Bourns	Case Ub	
1	K4Z	Resistor (Surface Mount	Bourns	Case 06	4K/ 1.U
<u> </u>					FF0 470 000
	SW1	Push Button Switch	Omron	ISW YB-SMALL	FEC 1/6-986
1	5vv2	SUI Switch - (Washable)	Apem	5W_SIP-3P	FEC 150-559
0.4	T4 04	Ded Testesint	W Lluckee	TEOTROINIT	FF0 040 045
21	11-21				FEC-240-345
		9 PIN D-ITPE MALE (HURIZ)		DCON9M	FEC 150-750
4	JZ J3 J4 J5 J6			SMA	DE 1110
2	<u> </u>	GOLD 5002 SMA SOCKET	Pasternack	SMA	PE4118
3	LK1 LK4 LK5	3 pin header	Harwin	SIP-3P	FEC 512-047
3	LK2 LK3 LK6	4 pin header (2x2)	Harwin		FEC 512-035
6	LK1-6	Shorting Shunt	Harwin		FEC 150-410
4	Each Corner	Rubber Stick-On Feet	3M		FEC 148-922
2	P1	Pair PCB snap-on battery connector	Keystone	BATT_PP3	FEC 723-988
1	P1	9V PP3 Battery	Duracell		FEC 908-526
1	РСВ	EVAL-ADF421XEB-5 (Rev. A)			
	Parts Free issued by ADI.				
_		I	I	I	