



這份《快速啟動指南》的目的，是在協助您快速的架設並使用您的電視。有關安裝及安全注意事項的詳盡資訊，請務必參閱隨附的《使用手冊》。

前視圖

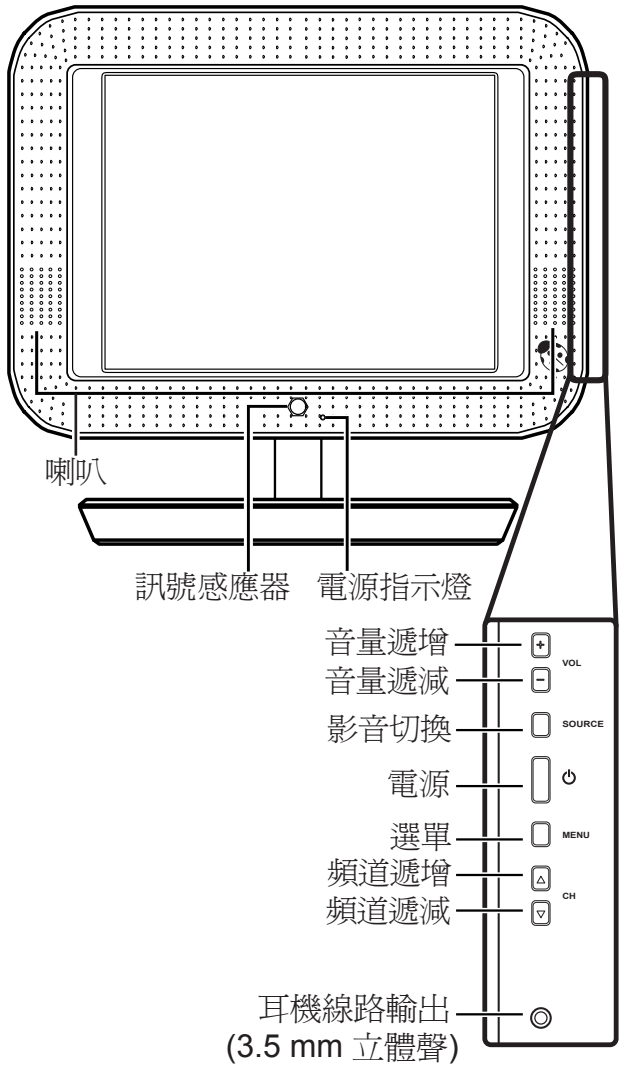


後視圖

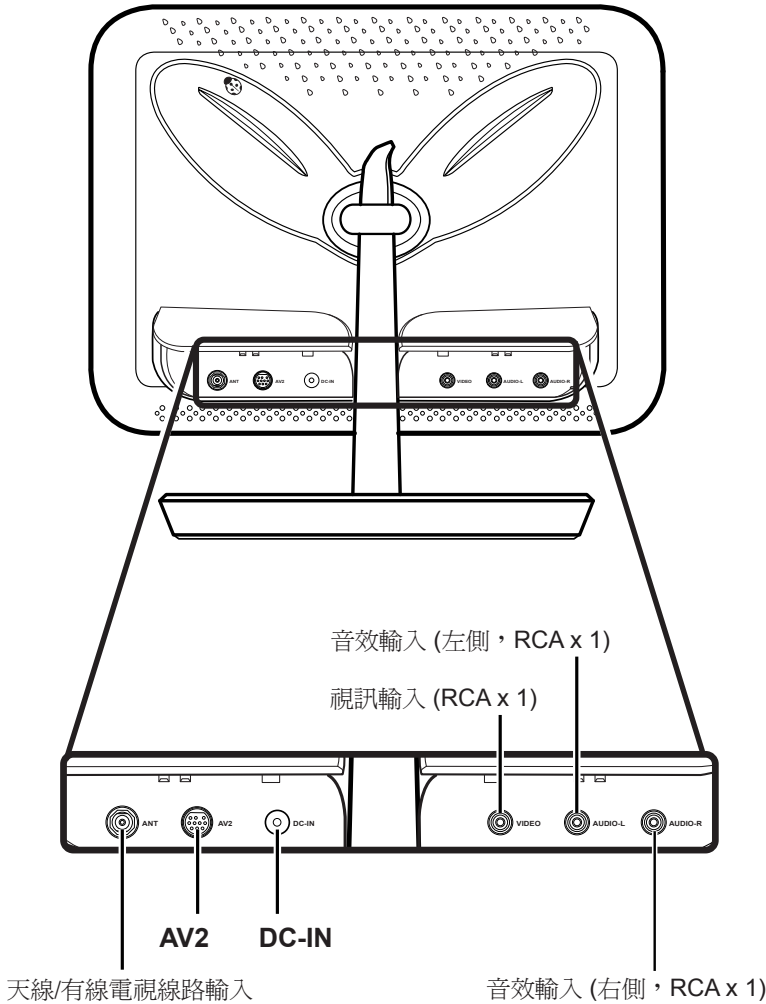


連接各式接線

連接天線/有線電視

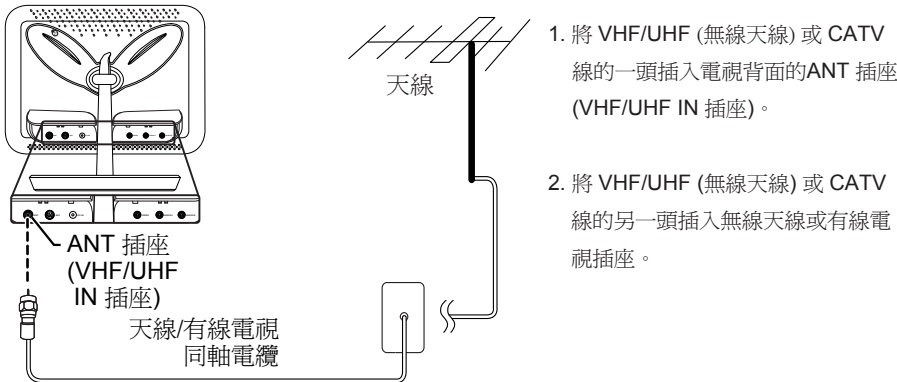


1. 將 VHF/UHF (無線天線) 或 CATV 線的一頭插入電視背面的ANT 插座 (VHF/UHF IN 插座)。
2. 將 VHF/UHF (無線天線) 或 CATV 線的另一頭插入無線天線或有線電視插座。

連接 VCR、VCD 或 DVD 播放機

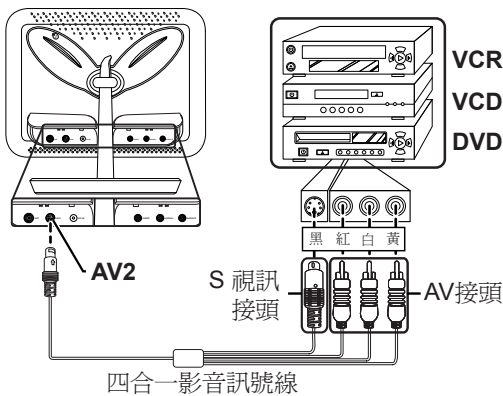

1. 下圖示範與 VCR、VCD 或 DVD 播放機的連接方式。關於每種設備的詳細說明，請參閱各設備隨附的使用手冊。
2. 接線皆已標有顏色作為區分黑色、紅色、白色、黃色。請將各標示顏色的連接線分別連接至外接裝置的接頭上。

連接電源轉換器

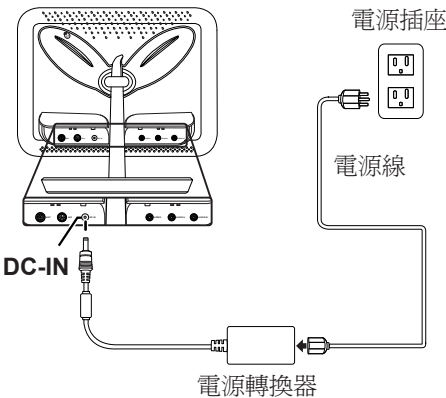

1. 依照圖示連接電源線與電源轉換器。
2. 將電源轉換器接頭插入電視後面板的 DC-IN 輸入插座。
3. 將電源線另一端的三蕊插頭插入電源插座。

開始操作

觀賞無線或有線電視




- 1 按下**電源**按鈕，開啓電視。
- 2 按下 **SOURCE** 按鈕，並選擇電視。
- 3 按下 **MENU** 按鈕，開啓選單。
- 4 按一下**頻道遞增**按鈕，選擇電視設定後再按 **MENU** 按鈕。
- 5 按一下**頻道遞增**按鈕，選擇電視/有線電視後再按 **MENU** 按鈕。
- 6 按一下**頻道遞增**按鈕，選擇 TV (無線電視) 或 CATV (有線電視)。
- 7 按下**MENU** 按鈕，確認您的選擇。

選擇 AV1 與 AV2

- 1 請確定您的電視已開啓，同時已連接如 DVD 播放機的裝置。
- 2 按下控制面板上的 **SOURCE** 按鈕，選擇其他訊號源。電視螢幕上會出現 AV1 或 AV2 的頻道號碼。

調整主選單設定值

按 **MENU** 按鈕進入選單。利用控制面板上的**頻道選擇**鍵，以調整設定。

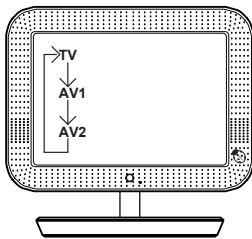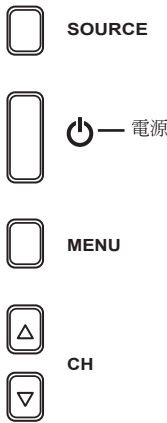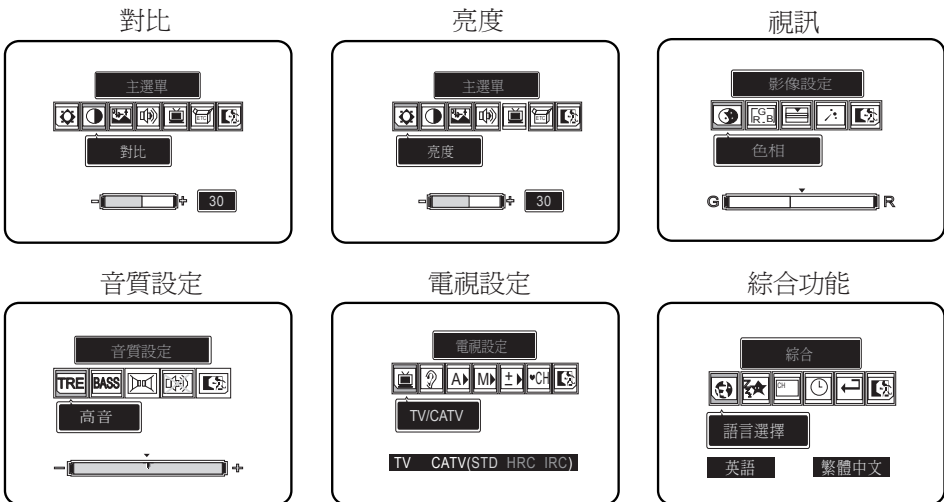


HANNspree Quick Start Guide


LT0R-12A1 12.1" Liquid Crystal Display TV

This Quick Start Guide is designed to help you set up and start using your LCD TV. Refer to the User's Manual for more detailed installation and safety instructions.

Front View

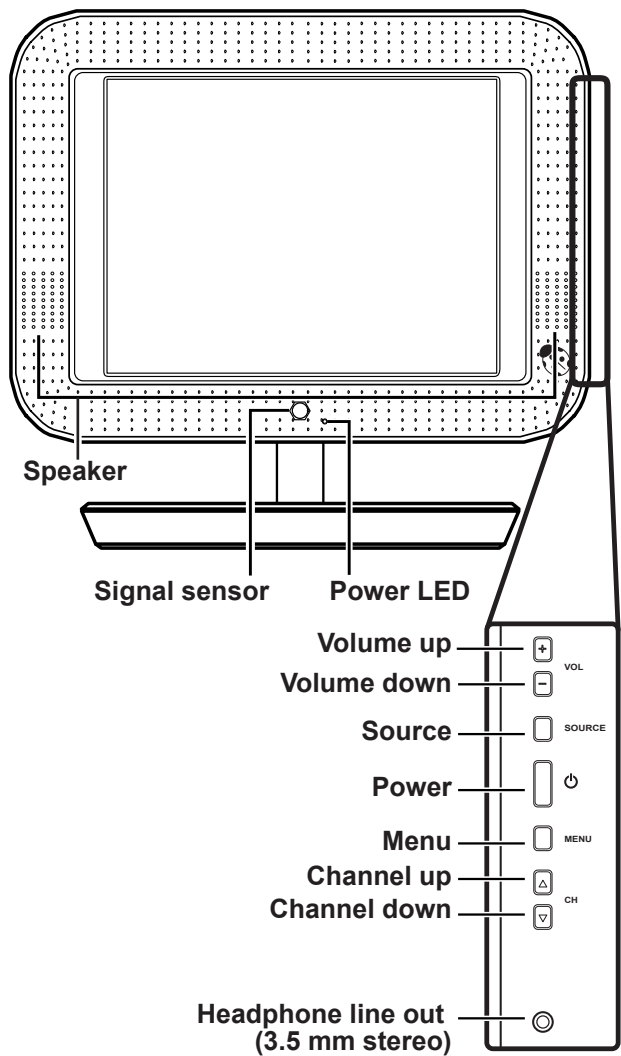


Rear View

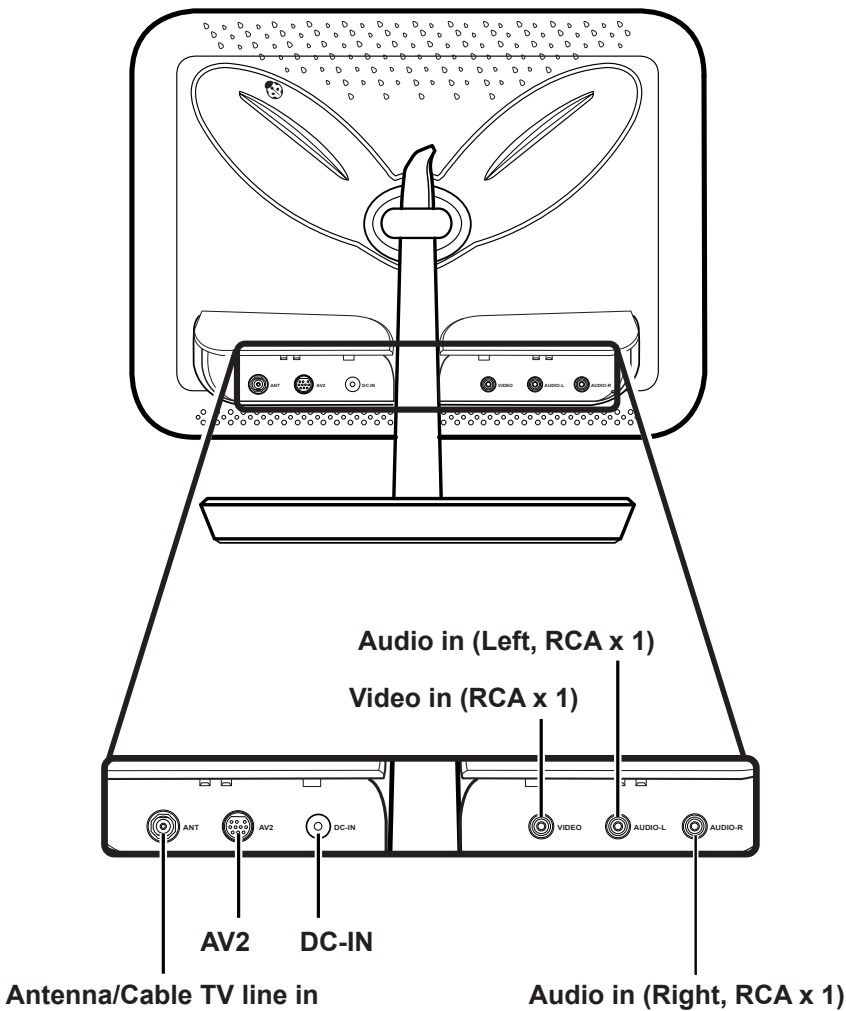


Making Connections

Connecting to Antenna/Cable TV

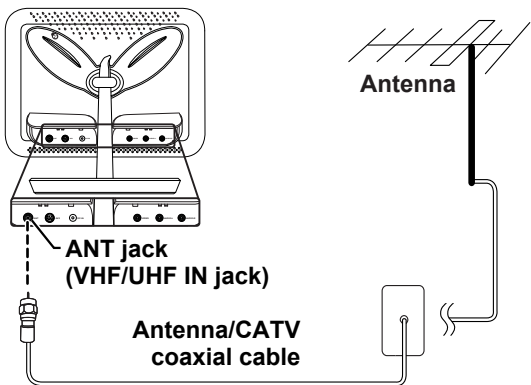


1. Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.
2. Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.

Connecting to a VCR, VCD or DVD Player

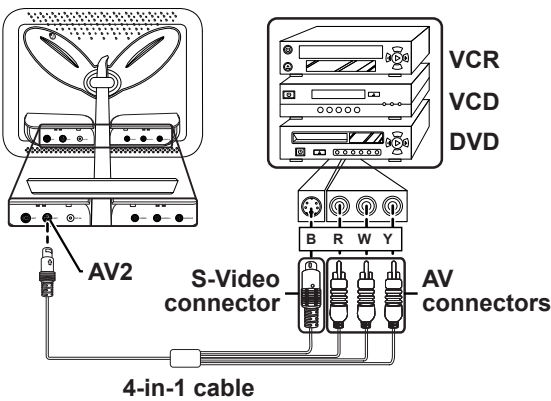

1. The illustration presented here shows you how to connect your TV to a VCR, VCD or DVD player. Refer to the user's manual included with your device for more detailed instructions.
2. The cables are color-coded black, red, white, and yellow. Connect each color-coded cable to the appropriate connector on your device.

Connecting the Power Adapter

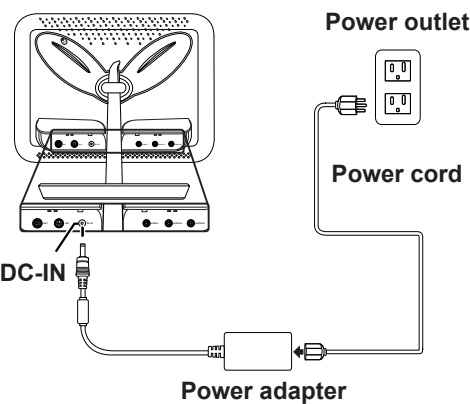


1. Connect the power cord to the power adapter as illustrated.
2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.
3. Insert the three-pronged plug at the other end of the power cord into a power outlet.

Getting Started


Watching Broadcast or Cable TV

- 1 Press the **POWER** button to turn on your TV.
- 2 Press **SOURCE** to select "TV".
- 3 Press **MENU** to open the OSD menu.
- 4 Press the **CH UP** button to select "TV Setting" and press **MENU**.
- 5 Press the **CH UP** button to select "TV/CATV" and press **MENU**.
- 6 Press the **CH UP** button to select either TV (broadcast television) or CATV (cable TV).
- 7 Press **MENU** to confirm your selection.

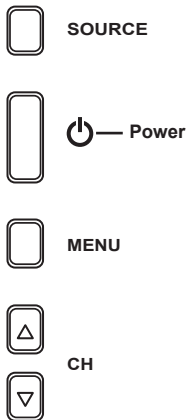

Selecting AV1 and AV2

- 1 Make sure your TV is turned on and a device such as a DVD player is connected.
- 2 Press the **SOURCE** button on the control panel to select different source signals. The channel number, "AV1" or "AV2" appears on the screen.

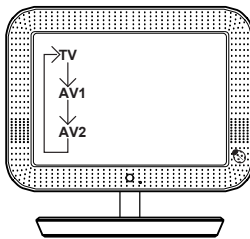

Adjusting OSD Settings

Press **MENU** to enter the OSD menus. Use the arrow buttons on the control panel to adjust settings.

