

诺基亚 N8-00 使用指南



目录

安全事项.....	3
关于用户指南.....	4
使用设备中的用户指南....	4
使用入门.....	4
按键和组成部分.....	4
音量和扬声器控制.....	5
锁定或解锁屏幕.....	5
插入 SIM 卡或移除.....	6
插入存储卡或移除.....	7
给该设备充电.....	8
如果您的设备停止响应....	9
打开设备电源.....	9
诺基亚户口和 OVI 服务....	9
复制联系人和图片从您 的旧设备.....	9
设备配置.....	10
安装 OVI 到您的计算机...	10
触摸屏操作.....	11
主屏幕互动元素.....	12
呼叫联系人.....	12
保存联系人和电邮地址....	13
发送文字信息.....	13
个性.....	13
个性铃声.....	13
主题元素.....	13

主屏直接切换.....	14
个性化主幕.....	14
添加项目到主幕.....	14
运营商.....	14
关于通讯.....	14
拍摄图片.....	15
上传图片或视频短片到 服务器.....	15
在电视上观看您的图片 和视频短片.....	16
连接 USB 大容量存储设 备.....	16
备份重要文件.....	16
寻找更多帮助.....	17
支持.....	17
保持您的设备软件和应用 最新.....	17
故障排除.....	18
保密项.....	18
绿化.....	

安全事项

请阅读这些简明的规则。不遵守这些规则可能会导致危险或触犯法律。本用户手册中提供了有关安全事项的更详细信息。



安全开机

当禁止使用手机或手机的使用会引起干扰或危险时，请不要开机。



首先要注意交通安全

请遵守当地的所有相关法律法规。请尽量使用双手驾驶汽车。驾车时应首要考虑交通安全。



干扰

所有的手机都可能受到干扰，从而影响性能。



在医院里应关机

请遵守任何相关的限制规定。在医疗设备附近时请关机。



在飞机上应关机

请遵守任何相关的限制规定。手机会对飞机产生干扰。



加油时应关机

请勿在加油站内使用手机。在燃料或化学制品附近时请不要使用手机。



在爆破地点附近应关机

请遵守任何相关的限制规定。请勿在进行爆破操作的地方使用手机。



合理的使用

如产品文档所述，仅可在正常位置上使用手机。如非必要，请勿接触天线区域。



使用合格的维修服务

只有合格的维修人员才可以安装或修理本手机。



配件和电池

只可使用经认可的配件和电池。请勿连接不配套的产品。



防水性

您的手机不具备防水性能。请保持其干燥。



制作备份

切记为手机中储存的全部重要信息制作备份或保留一份手写记录。



连接其他设备

连接其他设备时，请阅读该设备的用户手册以获得详细的安全说明。请勿连接不配套的产品。



紧急呼叫

确保手机处于开机状态且在服务区内。根据需要，反复按结束键以清除屏幕内容并返回待机状态。输入紧急号码，然后按通话键。告知您所在的位置。未经允许，请不要挂断电话。

About this user guide

This short user guide helps you get started with your device. With a short printed user guide, Nokia helps save energy and paper.

Your device also has a complete user guide, so that you can get more support when you need it. To open the complete user guide, select **Menu > Applications > User guide** in your device.

For even more support information, go to www.nokia.com/support, or using a mobile device, www.nokia.mobi/support.

关于用户指南

他短暂的用户 指南可以帮助您开始使用与您的设备。在短印刷用户指导，诺基亚帮助节省能源和纸张。您的装置也有一个完整的用户指导，让你可以得到更多的支持当你需要它。要打开完整的用户指南，选择“菜单>应用程序”>在您的用户指南设备。对于更多的支持信息，请访问 www.nokia.com/support

Get started

开始使用

Keys and parts

按键和主成部分

Top

上方



- 1 Nokia AV connector (3.5 mm) 诺基亚 AV 集线器 (3.5mm)
- 2 HDMI™ connector HDMI 连接线
- 3 Power key 电源键

Front

前置



 
- 1 Earpiece 听筒
- 2 Menu key 菜单按键
- 3 Microphone 麦克风
- 4 Secondary camera lens 副摄像头

Back 背面



- 1 Camera flash 散光灯
- 2 Camera lens 摄像镜头
- 3 Loudspeaker 扬声器
- 4 Microphone 麦克风

Sides 侧面

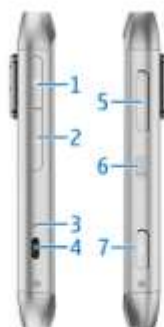

- 1 Memory card slot 存储卡插座
- 2 SIM card slot SIM 卡插座
- 3 Charging indicator light 充电指示灯
- 4 Micro USB connector MicroUSB 插孔
- 5 Volume/Zoom key 音量/缩放按键
- 6 Lock switch 锁键
- 7 Camera key 相机键

Bottom 下方



- 1 Charging connector 充电连接插孔
- 2 Wrist strap 腕带

Touch screen 触屏

To control your device, lightly touch the screen with your fingertips. The screen does not respond when you use your fingernails.

If your fingertips are cold, the screen may not respond to your touch.

To avoid scratching the touch screen, never use a pen, pencil, or other sharp object to write on the touch screen.

用来控制您的设备，使用您的手指轻触。屏幕没有回应当您使用指甲。

如果您的手指很冷，屏幕不能回应。

避免划伤屏幕，必须使用钢笔，铅笔或其它尖的物体用来写触屏。

Volume and loudspeaker control 音量和扬声器

Adjust the volume of a phone call, song, or video

Use the volume keys.

调整音量的呼叫，歌曲或视频

使用音量键

The built-in loudspeaker allows you to speak and listen from a short distance without having to hold the device to your ear.

扬声器准许您聆听短距离设备没有靠近您的耳朵

Activate or deactivate the loudspeaker during a call

Select Loudspeaker or Activate handset.

打开或关闭免提扬声器

选择扬声器或激活听筒

Lock or unlock the keys and screen 锁或解锁按键和屏幕

You can lock the keys and screen to avoid accidental calls or keypresses.

Slide the lock switch.

您可以锁上按键和屏幕避免无意中呼叫或按

侧面锁键



Set the keys and screen to lock automatically

 
- 1 Select Menu > Settings and Phone > Display > Screen/keylock time-out.
- 2 Define the length of time after which the touch screen and keys are locked automatically.

设置按键和屏幕自动锁

1. 选择菜单》设置和手机》显示》屏幕/按键锁时
2. 长时间没有使用屏幕和按键将自动锁上

Insert or remove the SIM card 插入和移除 SIM 卡

Do not attach any stickers to your SIM card. 请勿贴任何贴纸在您的 SIM 卡上

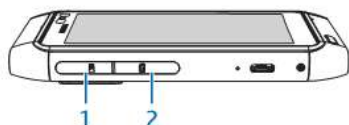


- 1 Memory card slot cover 1. 存储卡插座
- 2 SIM card slot cover 2. SIM 卡插座

Insert the SIM card 插入 SIM 卡

- 1 Use your fingernail to open the cover of the memory card slot.

 使用您的指甲打开存储卡插座盖子

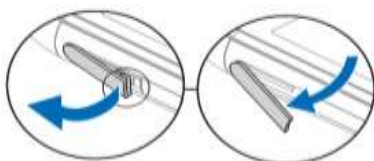

- 2 Open the cover of the SIM card slot.

打开 SIM 卡插座的盖子



 
- 3 Insert the SIM card. Push the card in, until you hear a click. Make sure the contact area of the card is facing down.

插入 SIM 卡，推卡进和按确定固定的卡面积是朝下



Remove the SIM card

- 1 Use your fingernail to open the cover of the memory card slot.
- 2 Open the cover of the SIM card slot, and push the card in, until you hear a click.
- 3 Pull the card out.

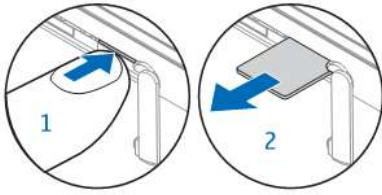

移除 SIM 卡

1. 使用您的指甲打开存储卡盖子
2. 打开 SIM 卡插座和推卡进，您可以听见一声
3. 拖出卡

Insert or remove the memory card 插入和移除储存卡

Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



Memory cards are sold separately.

Do not attach any stickers to your memory card.

只能使用诺基亚指定的存储卡到该设备.不符合的卡可能损毁存储卡和您的设备与在卡上的数据

 
请勿贴纸在存储卡上

Insert the memory card

- 1 Use your fingernail to open the cover of the memory card slot.

插入存储卡

- 1.使用您的指甲打开存储卡插座盖子

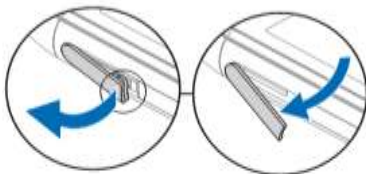

- 2 Make sure the contact area of the memory card is facing down. Push the card in, until you hear a click.

确保存储卡的规定面积是朝下

 


Remove the memory card

- 1 Use your fingernail to open the cover of the memory card slot.
- 2 Push the card in, until you hear a click.
- 3 Pull the card out.

移除存储卡

1. 使用您的指甲打开存储卡插座盖子
2. 推卡进，直到您听见“击”一声
3. 拖出卡

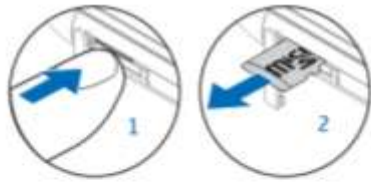

Charging

About the battery

Your device has an internal, nonremovable, rechargeable battery. Use only Nokia approved chargers designated for this device. You can also use a compatible USB data cable to charge your device.

Do not attempt to remove the battery from the device. Take the device to the nearest authorised service facility for replacement of the battery.

Authorised retail points may also offer a battery replacement service.

When your device is low on power, it goes into power save mode. To deactivate power save mode, press **⏻**, and select **Deactivate power saving**. When power save mode is activated, you may not be able to modify the settings of certain applications.

Charge the battery

Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your device for the first time.

If the device indicates a low charge, do the following:

充电

 
关于电池

您的设备是内部，移动，重新充电的电池.只能使用诺基亚指定的充电器，你也可以使用 usb 数据线为您的设备进行充电.

请勿自行拆除设备电池，系带您的设备到附近的产商更换电池

当您的设备电源过低时，它能自动转入节能模式.要取消节能模式，按电源，和选择取消节能模式

如果电量过低时，做一下步骤：

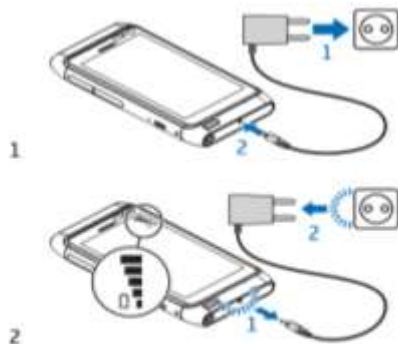


You do not need to charge the battery for a specific length of time, and you can use the device while it is charging.

If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

 Tip: You can also use a compatible USB charger to charge your battery.

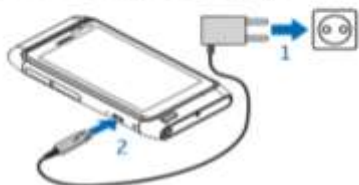

诺基亚充电器

Tips: 您也可以使用 usb 数据线为您的电池充电

Charge the battery with a USB data cable

Battery low, but you don't have a charger with you? To charge the battery, you can use a USB data cable to connect your device to a compatible device, such as a PC.



When the battery is charging, the charging indicator light next to the USB connector is lit. When the battery charge is low, the charging indicator light flashes. It may take a while for charging to start.

Charging with the USB data cable is slower than charging with the charger. Charging with the USB data cable may not work if you use a non-powered USB hub.

You can transfer data while charging.

If your device stops responding

If your device stops responding, to reset your device, press and hold **⏻** for about 8 seconds. When the device switches off, it vibrates three times. To switch your device on again, press **⏻**.

No content, such as contacts or messages, is deleted.

Switch the device on

Press and hold **⏻**.



Switch the device off

Press and hold **⏻**.

使用 USB 数据线为您的电池充电

低电量, 但是你没有充电器怎么办? 使用 USB 数据线连接您的设备比如 PC

当电池正在充电, 充电指示灯显示 USB, 当电量过低时充电指示灯是闪

使用 USB 数据线是慢过直冲充电器, 如果 USB 无法插座, 您可以使用 USB 集线器

您可以转移数据同时充电

如果您的设备停止响应


如果您的设备停止响应, 需重置您的设备, 按住电源直 8 秒, 当设备关闭, 它震动 3 次.在次启动您的设备, 按电源



If your old Nokia device does not have the Phone switch application, your new device sends it in a message. Open the message in the old device, and follow the instructions.

- 1 Select the device you want to connect to, and pair the devices. Bluetooth needs to be activated.
- 2 If the other device requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both devices. The passcode in some devices is fixed. For details, see the user guide of the device.
The passcode is valid only for the current connection.
- 3 Select the content and OK.

Device set-up

To define some basic settings for your device, select the Phone set-up widget  which is on one of your home screens. To switch between home screens, swipe left or right. With the Phone set-up widget, you can do the following:

如果你的旧诺基亚设备没有电话开关应用程序，你的新设备发送它在信息.打开信箱在您的旧设备，和跟随说明

1. 选择您想要连接的设备蓝牙必须激活.
2. 如果其他设备需要口令，输入口令自己的口令，两个设备的口令必须符合.
3. 选择确定

设备设置

 
要一下基本设定设备，选择设置 widget

Install Ovi Suite on your PC

With the Nokia Ovi Suite PC application, you can manage content on your device, and keep it in sync with your computer.

You can download the latest version of Ovi Suite in www.ovi.com/suite. To install Ovi Suite from your device, do the following:

- 1 Use a compatible USB data cable to connect your device to your computer. If you are using Windows XP or Windows Vista, change the USB mode of your device to Mass storage. Your device's mass memory and memory card appear as removable disks on your PC.

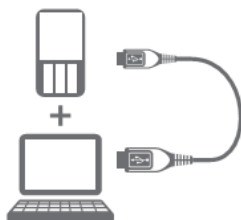

- 2 On your computer, select **Install Nokia Ovi Suite**.

安装 OVI 进您的计算机

诺基亚 OVI PC 套件程序，您可以管理联系人在您的设备保持同步您的计算机

您可以下载最新的 OVI 套件在 www.ovi.com/suite, 要安装 OVI 套件在您的设备，做一下：

1. 使用标准 USB 数据线连接您的设备之计算机.如果您使用 Windows xp 或 vista，改变您的 USB 模式到大容量存储. 您的设备大容量记忆和记忆卡出现在您的计算机移动设备.
2. 在您的计算机，选择安装诺基亚 OVI 套件



To open the installation file manually, select **Open folder to view files**, and double-click **Install_Nokia_Ovi_Suite.exe**.



- 3 Follow the instructions.
- 4 When you finish the installation procedure, change the USB mode of your device to Media transfer.

To learn more about Ovi Suite, go to www.ovi.com.

Touch screen actions

To interact with the user interface, tap or tap and hold the touch screen.

Open an application or other screen element

Tap the application or element.

View item-specific options

Tap and hold the item. A pop-up menu with available options opens. For example, to send an image or delete an alarm, tap and hold the image or alarm, and from the pop-up menu, select the appropriate option.

要手动打开安装文件选择打开文件夹
Install_nokia_OVI_suite.exe

3. 跟随说明
4. 当你完成安装, 改变你的 USB 模式到媒体转移

触屏行动

打开应用程序或其他显示屏
观看特别项目选项
弹出选单计划选项打开. 比如要发送图片或
删除警报, 按住图片或警报, 和弹出菜单