


Panasonic®

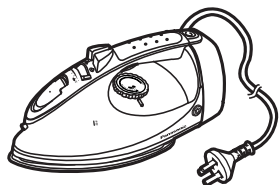

使用说明书 Operating Instructions 蒸汽电熨斗 Electric Steam Iron 型号/Model No. NI-U60R/U70R

安全信息

电熨斗的安全使用.....	2
重要安全指示.....	2-3
特别提示.....	3

功能

各部位的名称功能.....	4
功能表.....	4
抗钙防垢功能.....	5
自动绕线功能.....	5
自动断电功能.....	5
防漏水功能.....	5

操作

蒸汽电熨斗的使用方法.....	6-7
干式电熨斗的使用方法.....	8
喷水(喷雾)功能的使用.....	8
衣物纤维及熨衣方式.....	8

规格

规格.....	8
---------	---

保养方法

保养方法.....	9
-----------	---

常见故障及处理方法

常见故障及处理方法一览表.....	9
-------------------	---

售后服务

售后服务.....	9
-----------	---

SAFETY INFORMATION

SAFE USE OF THE IRON.....	10
IMPORTANT SAFETY INSTRUCTIONS.....	10-11
SPECIAL INSTRUCTIONS.....	11

FUNCTION

COMPONENTS IDENTIFICATION.....	4
FUNCTION.....	4
ANTI CALCIUM FUNCTION.....	12
INSTRUCTIONS FOR THE PROPER USE OF THE RETRACTABLE POWER CORD.....	12
AUTOMATIC SHUT-OFF.....	12
AUTOMATIC WATER SEAL.....	12

OPERATION

HOW TO USE AS A STEAM IRON.....	13-14
HOW TO USE AS A DRY IRON.....	15
HOW TO USE THE SPRAY FEATURE.....	15
FABRIC AND IRONING RECOMMENDATIONS.....	15

SPECIFICATION

SPECIFICATION.....	15
--------------------	----

MAINTENANCE

MAINTENANCE.....	16
------------------	----

GENERALLY MALFUNCTION AND TACKLING MET

GENERALLY MALFUNCTION AND TACKLING METHOD.....	16
--	----

AFTER SERVICE

AFTER SERVICE.....	16
--------------------	----

衷心感谢使用松下电器蒸汽电熨斗！

为了保证您能正确使用产品，请仔细阅读使用说明书并妥善保管本使用说明书。

Sincerely thanks for using Electric Steam Iron of Matsushita Electric.

Before operating this unit, please read these instructions completely and save these instructions carefully.

松下·万宝（广州）电熨斗有限公司

Panasonic Wanbao Home Appliances Electric Iron (Guangzhou) Co., Ltd.

中国广东省广州市番禺区钟村镇万宝基地 电话：(020) 84773998 84770888

Wanbao Base Zhongcun Town Panyu District Guangzhou City Guangdong Province China

松下电器客户咨询服务热线：800-810-0781

Matsushita Electric customer and service hot line: 800-810-0781

感谢您购买松下电熨斗！

您的电熨斗只能在熨衣板上熨烫衣物。

电熨斗的安全使用

您和他人的安全是最重要的

我们在产品和说明书上提供了重要的安全资讯，请认真阅读并遵守相关条款：



这是安全警告符号，它警告您潜在的危險，有可能使您和他人受伤甚至死亡。相关安全条款附在文字“警告”或“注意”之后，它们的含义是：



警告

如果阁下没有遵照此指示操作，阁下可能会导致严重的伤害甚至死亡。



注意

阁下必须注意，否则潜在的危險可能使阁下受到轻度或中度的伤害。

安全条款告诉您哪些潜在的危險，怎样减少被伤害的几率和阁下未按照此指示操作时可能会导致的后果。

重要安全指示



警告

为减少烫伤、电击、火灾或伤害到身体，请您使用此熨斗时，必须遵守相关的安全预防措施，包括：

使用此电熨斗前请认真阅读此说明书中所有的条款。

在使用前请认真阅读以下内容

1. 在电熨斗接通电源期间，使用者不能离开，并避免让小孩接触熨斗。
2. 不允许用电源线缠绕熨斗底板。
3. 本产品的电源线有任何损坏时，为了确保安全，请勿擅自更换电源线，务必委托本公司的维修站更换。
4. 使用过程中，应避免底板和隔热板等高温部位接触身体和不耐热物体，以免烫伤或损坏物体。
5. 给水箱加水时必须拔出插头，切断电源。
6. 本熨斗必须插入带地线连接的电源插座中。
7. 如果任由电源线自由地卷回，快速卷回的电源线和插头可能会对您个人造成伤害。请用一只手握着电源线和插头，用另一只手按下卷线按钮，使电源线慢慢地卷回；从而避免受到“鞭打”的潜在风险而导致的对面部，眼睛等的伤害。决不允许小孩子拿电熨斗或可卷回的电源线来玩。当保管时，应把电源线卷回到绕线盘里。

8. 发生异常时（有烧焦、冒烟等）须立即停止使用并拔出插头，以免造成火灾及触电；然后向本公司的维修站咨询。
9. 电熨斗损坏或曾经掉落并能看到明显损坏的痕迹或漏水，用户请不要自行拆机维修，应送指定维修中心修理，否则后果自负。
10. 电熨斗必须放在稳固的表面，当竖立放在台面时，保证下面支撑面是稳固的。
11. 不要在电源线缠结的状态下使用电熨斗，否则电源线可能会很快被损坏。

注意

不要用手接触高温部（底板表面，隔热板、水箱下面）。



禁止接触


（会造成烫伤。）

不要让热的蒸汽碰到手或身体其它部位。



（会造成烫伤。）

熨斗垂直放在稳固的地方。

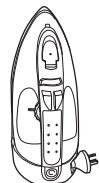

（防止底板刮花，避免熨斗倒下时造成身体受伤、烫伤。）

使用蒸汽时不要倾斜、晃动太厉害！



（会造成热水飞出而造成烫伤。）



禁止此类情况发生。



请按图示去做。

特别提示

警告

触电或火灾的危害

请不要在同一个电路回路中使用其它高功率的电器，以免电路过载。

注意

为减少个人伤害或损伤电熨斗：


1. 不要使用清洁产品清洗电熨斗，这样可能会导致损害电熨斗的工作部分。
2. 在蒸汽电熨斗里请不要使用水添加剂或其它像柠檬、香水等水代替品，它们会沾污衣物。
3. 如果在使用后未将蒸汽旋钮设在干式位置，残留的水可能流到底板而致在下一次使用时造成烫伤。

各部位的名称功能 COMPONENTS IDENTIFICATION

喷水（喷雾）按钮
Spray Mist Button

蒸汽旋钮
Steam/Dry Selector

每拨一次可切换
Switch as the following

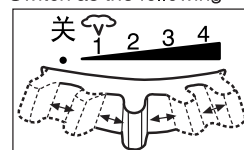

干式 轻蒸汽 中档蒸汽 高档蒸汽 最高档蒸汽

Dry Low Steam Medium Steam High Steam Maximum Steam

注水口盖
Water Fill Cover

喷水（喷雾）嘴
Spray Nozzle

水箱
Water Reservoir
(Water Window)

底板
Soleplate

水量指示（满水）
Water Level Indication (MAX)

调温旋钮
Temperature
Selector Dial

蒸汽喷射按钮/垂直喷射按钮
Jet of Steam Button/Vertical Steam Button

卷线按钮
Cord Wind Button

警告指示
使用前请阅读警告。
Warning Instruction
Please read warning before use.

交流电源线
AC Power Cord

调温刻度对照表
Temperature
Select Indication

绕线盘元件
Cord Reel Unit

温度指示灯
Thermostat
Operating
Indicator
Light

隔热板
Heat-insulated Plate

抗钙防垢装置
Anti Calcium Cassette

调温刻度对照位置
Temperature Select
Scale Position



水杯（附送）

本产品采用日本松下电器技术设计，符合GB4706.1-1998 GB4706.2-2003

GB4343.1-2003 GB17625.1-2003国家标准。


This product is designed by Matsushita Electric in Japan, conforms to GB4706.1-1998 GB4706.2-2003 GB4343.1-2003 GB17625.1-2003 standard.

功能表 FUNCTION

功 能	Function	NI-U60R	NI-U70R
四档蒸汽	Four level steam	是 Yes	是 Yes
喷水（喷雾）	Spray	是 Yes	是 Yes
抗钙防垢装置	Anti calcium cassette	是 Yes	是 Yes
钛金底板	Titanium coated soleplate	是 Yes	是 Yes
喷射蒸汽	Jet of steam	是 Yes	是 Yes
垂直喷射蒸汽	Vertical jet of steam	是 Yes	是 Yes
自动断电	Automatic shut-off	是 Yes	是 Yes
防漏水装置	Automatic water seal	是 Yes	是 Yes

抗钙防垢功能

- 在水箱里装有抗钙防垢装置，能软化水质，降低水中矿物质含量；使水垢不会积聚在熨斗中，延长熨斗的使用寿命。
- 一般自来水也能长期使用，而不降低蒸汽性能。

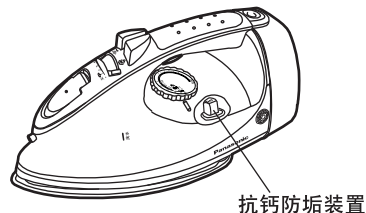


自动绕线功能

请阅读第2页的警告


1. 拉出电源线到足够的长度后插进电源插座，使电熨斗能操作。
2. 如果电源线没有正确回卷而难于卷回时，轻轻拉一拉，直到它被释放。
3. 当卷回电源线时，请先用一只手握着插头，然后再用另一只手按卷线按钮，让电源线慢慢地卷回。
4. 如果电源线不能完全卷回，把它轻轻地拉出，再一次按卷线按钮一边引导它卷进绕线盘，一边把它再次卷回。

自动断电功能（仅NI-U70R）当您忘记切断电源时，可自动断电

- 电熨斗水平状态下或侧面放置时

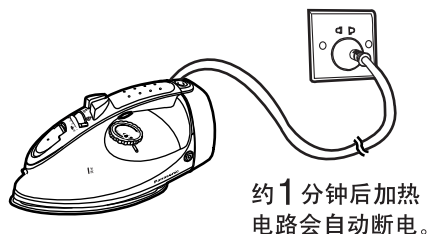

- 电熨斗竖立状态下放置时

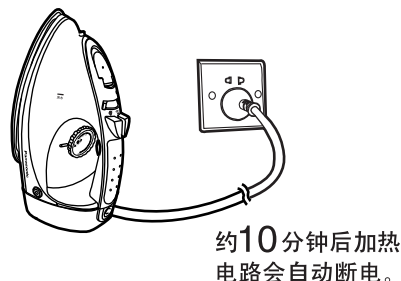


- 再通电

- * 若要再通电，可拿起电熨斗前后移动或拔出电源线插头再插上。
- * 在自动断电状态下遇到停电再通电情况时，电熨斗会处于加热状态，然后再自动断电。

防漏水功能

在底板上面装有防漏水装置，在使用时，底板温度低于约110℃时，防漏水装置就会动作，将蒸汽水槽封闭，避免因水滴漏出底板沾污衣物。

此外，使用后不用通电底板也会自动干燥，防止底板腐蚀；电熨斗冷却后即可保存。

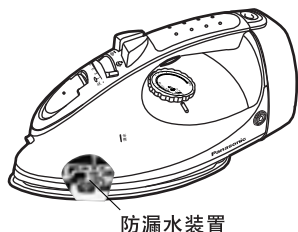

蒸汽电熨斗的使用方法


对于低温，中温及热敏感的布料，可在衣服不易看到的地方试熨，必要时垫布熨烫。

- 1 a) 将调温旋钮调至"MIN"位置，拔出插头。
b) 按如图的方式握着电熨斗。
c) 将蒸汽旋钮拨至“关”位置。
d) 用水杯加水。

注意：① 加水时，注意竖立熨斗观察水量。
加水不要超过“满水”刻度。
② 要使用干净的自来水。
③ 给水箱加水时，插头不能插入电源插座。



- 2 将插头插入电源插座，接通电源。
注意：在电熨斗接通电源期间，使用者不能离开。

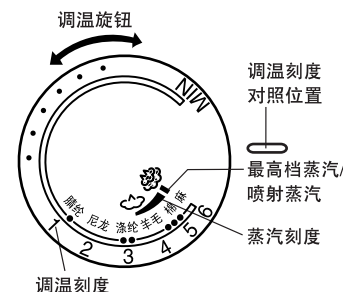


- 3 应选择“蒸汽范围”内的温度（4-6档）。


温度区域	蒸汽旋钮位置	推荐
☁ 到 ☁☁	低档蒸汽	薄的或轻的衣物时推荐使用。
☁☁ 到 ☁☁☁	中档蒸汽	这个温度足以产生一般的蒸汽量。处于这个温度时，你可以根据衣物选择低档蒸汽、中档蒸汽、高档蒸汽。
	高档蒸汽	
☁☁☁	最高档蒸汽	你可以在这区域选择所有档次的蒸汽，包括适用于要求大量蒸汽的衣物的最高档蒸汽（例如厚布料，顽固的皱折部位）。

- 4 a) 待电熨斗升温至指示灯自动熄灭。
b) 拨动蒸汽旋钮，选择所需的蒸汽量，即可开始熨衣。

蒸汽旋钮（每拨一次如下图切换）

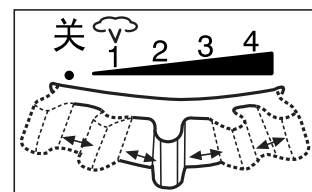


干式 | 轻蒸汽 | 中档蒸汽 | 高档蒸汽 | 最高档蒸汽
(1) | (2) | (3) | (4)

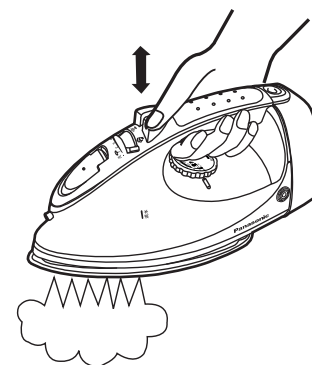

5 喷射蒸汽的使用

- ① 适用于特厚布料及难于消除皱折的布料，在使用的同时清洗蒸汽孔。
- ② 开始使用时可能不出蒸汽，空打喷射按钮几次直到蒸汽出来。
- ③ 为了防止热水从底板滴出，按动喷射按钮的间隔为2-5秒。
- ④ 使用垂直喷射蒸汽时，可将衣物挂在衣架上。将熨斗离开身体远一些，使其靠近衣物但不接触它。熨烫多皱纹的衣物时，用空的手拉紧衣物并隔2-5秒按动喷射按钮。


注：a)使用喷射蒸汽功能时，应将蒸汽旋钮切换至“关”位置，并将调温旋钮调至第“6”档，否则可能有水滴出。
b)不要对人身部分和穿在身上的衣服使用喷射蒸汽。

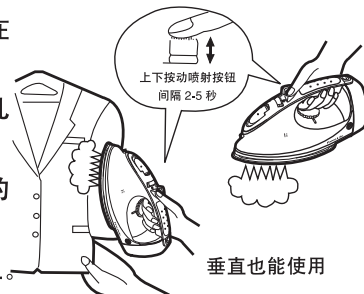

- ⑥ 无论电熨斗水平或竖立都能清楚观察水量。当水量较少时，请拔出插头，重新加水，其操作按1-2步骤进行。




- ⑦ a)熨衣完毕，请立即拔出插头。
b)拨动蒸汽旋钮至“关”位置。
c)将电熨斗底板向上，摇晃直至将水倒空。

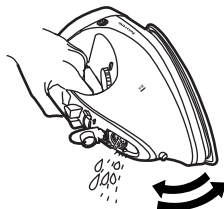


- ⑧ 电熨斗使用后，拔下插头。然后用一只手握着插头，用另一只手按卷线按钮。收线时，手不要松开插头，顺电源线回收方向回送，以免给插头碰伤。当电源线收不回时，将电源线向外拉一下再让线往回卷便可收回。冷却后再将电熨斗放在纸箱内，置于安全处保管。

注：在冷却和保管时，应将蒸汽旋钮保持“关”位置。

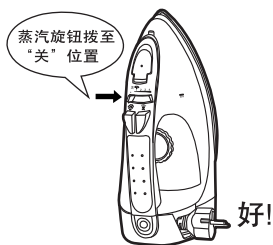


干式电熨斗的使用方法

1. 将蒸汽旋钮拨至“关”位置。
2. 将调温旋钮调至“MIN”位置后，将插头插入电源插座，接通电源。
3. 根据《调温刻度对照表》第4页，将调温旋钮调至适当的温度位置。
4. 待电熨斗加热至指示灯自动熄灭，即可开始熨衣。
5. 熨衣完毕，请拔出插头，参照第5页绕线方法，将电线卷进绕线盘。冷却后放入纸箱内，置于安全处保管。

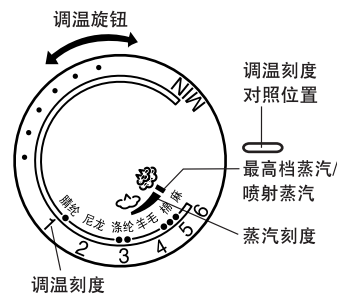

喷水（喷雾）功能的使用

重复按喷水（喷雾）按钮，直至喷雾产生，即可使用。
喷水（喷雾）功能主要用于熨烫较厚的棉、麻布料。

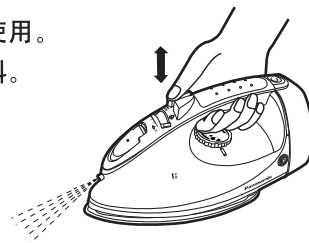

衣物纤维及熨衣方式

注意：1. 对于热敏感的布料，应垫布在衣物上熨烫，以免变形或损坏。
2. 熨混纺衣物时，应根据耐热性较差的纤维来选择温度。
3. 熨不同布料的衣物时，先熨烫耐热性较差的衣物。

衣物纤维	温度设定	较好的熨衣方式
腈纶 醋酸纤维	1	干熨衣物里面或垫布在衣物上熨烫。
尼龙 丝绸	2	干熨衣物里面。
涤纶 人造丝	3	干熨衣物背面；熨衣领、衣袖、口袋时，可轻轻地熨烫衣物正面。
羊毛	4	轻轻地熨烫衣物正面。
棉布	5	宜采用蒸汽熨烫，可根据衣物的厚薄和皱折程度进行喷雾，对黑色衣物应熨背面，以免出现“镜面”现象。
亚麻	6	


规格

额定电源	220V~ 50Hz	功 能	蒸汽/干式熨烫
功 率	2000W	蒸汽产生方式	下滴方式
插头/电源线	单相三极插头/2.0m自动绕线式	自动温控器	调温范围1-6（约80℃-200℃）
尺 寸	长约30cm，宽约13cm，高约15cm	熨 烫 面 积	226cm ²
重 量	约1.8kg	贮 水 量	300ml
放置方式	自立式	指 示 灯	指示灯调温指示

保养方法


拔出插头，待电熨斗充分冷却后

- 用软布擦拭电熨斗底板及其他部份。
- 出现较严重的污渍时，可用软布沾中性洗涤剂擦拭。

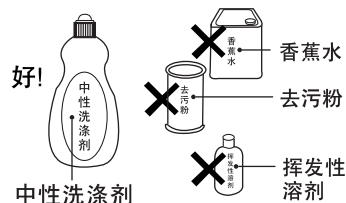

自动清洗

- 利用喷射蒸汽清洗底板气化室和蒸汽孔。

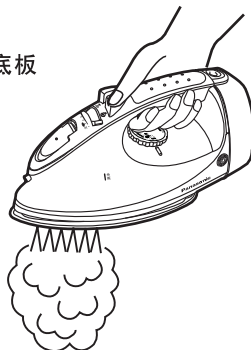

常见故障及处理方法一览表

(请参照本表格进行检查)

检查部位	插头	调温旋钮	蒸汽旋钮	蒸汽喷射按钮	蒸汽孔	排水方法	调温刻度对照表
故障							
不出蒸汽	○	○	○		○		
蒸汽量太小		○	○		○		
蒸汽孔漏水	○	○		○			
熨烫表面腐蚀						○	
不发热	○	○					
布料烧焦萎缩		○					○
处理方法 (不能处理时与销售店联系)	是否插好?	确认位置是否正确?	来回2-3次拨蒸汽旋钮, 回复到蒸汽位置。保管时拨至干式位置。	按按钮的间隔在2-5秒。	参考<保养方法>进行清洁处理。	冷却前未进行排水。	根据指示适当设定温度。垫布在衣物上熨烫。

售后服务

关于售后服务等，如有不明白之处，请向销售店或致电800-810-0781 咨询

① 保修证（另附）

在购买本产品时从销售店领取，阅读完后，妥善保管。必须确认保修证上是否记载了[购买日期、销售店名]等。

② 需要修理时

按上述表格自我检查后仍然不能处理时，请与销售店或维修店联系。

保 修 期 内

按保修证规定，向销售店提交需修电熨斗及保修证。

超过保修期内

向销售店要求修理，按规定进行收费修理。如不在销售店修理，请向附近的松下修理站联系。

Thank you for purchasing a Panasonic Iron

Your iron is an appliance to be used only for ironing fabrics on an ironing board.

SAFE USE OF THE IRON

Your safety and the safety of others are very important

We have provided important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. It is used to alert you to potential hazards that can kill or injure you and others. The safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION". These words mean:



WARNING

You can be killed or seriously injured if you don't follow these instructions.



CAUTION

You can be exposed to a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

The safety messages will tell you what the potential hazard is, how to reduce the chance of injury, and what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of burns, electric shock, fire, or injury during the usage of this iron,

basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE IRON

1. Do not leave the iron unattended while it is connected to the electrical source. Keep it away from children.
2. Do not loop cord around iron Soleplate.
3. If the supply cord is damaged it must be replaced by our service agent in order to avoid a hazard.
4. During operating, should prevent such high-temperature parts as the Soleplate or Heat-insulated Plate etc., from contacting body and thermo-labile objects so as not to scald or damage of objects.
5. Should unplug and cut off the power supply before you add in or empty out water from Water Reservoir.
6. This iron must use the electrical outlet with earth connection.
7. The Power Cord and plug may present a risk of personal injury when the cord is allowed to retract freely. Always hold the plug and cord with one hand while pressing the Cord Wind Button with other hand, and retract the cord slowly to reduce the risk of the cord "WHIPPING", which has the potential risk of causing injury to the face, eyes. etc. Never allow children to play with the iron or the retractable power cord. Retract cord into

Cord Reel Unit when storing.

8. Should stop using and pull out the plug immediately while abnormal occurs (such as scorch, smoke etc.) to avoid fire or electric shock, then contact with our service agent.
9. If the iron was damaged or has been dropped and there are visible signs of damage or if it is leaking, do not repair the iron by yourself, it should be repaired by the designated service center ; otherwise the user should take all responsibilities of damage.
10. The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface under the stand is stable.
11. Do not use the appliance with the cord in tangled condition. The supply cord might be damaged soon.

CAUTION

Don't touch the high temperature parts (such as soleplate surface, heat-insulated plate, underside of the water tank)




Don't touch.
(May be scalded.)




Don't touch the hot steam with your hands or other parts of your body.



(May be scalded.)

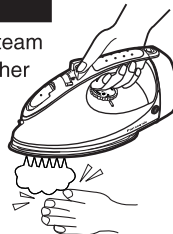

Set the iron vertically at stable place.

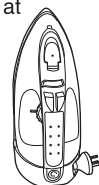


(To avoid scratch on the surface or hurt by the dropped iron.)

Don't slant or shake the iron too much.



(May be scalded by hot water.)

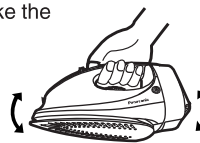

Prohibit such accident occurring.



Operating accord with the drawing.

SPECIAL INSTRUCTIONS

WARNING

Do not operate another high wattage appliance in the same circuit, to avoid a circuit overload.

CAUTION


To reduce the risk of electric shock or fire:

To reduce the risk of personal injury and damage to your iron:

1. Never use steam iron cleaning products in the iron, as they may damage working parts of the iron.
2. Do not use water additives or substitute water such as linen or scented water in the steam iron. They can stain fabrics.
3. If the Steam/Dry Selector is not at Dry(关) position after using, remaining water will move into the Soleplate and can result in burns at the next use of the iron.

ANTI CALCIUM FUNCTION

- The built-in anti calcium cassette in the Water Reservoir, softens water; continuously reduces mineral content in the water. Reduces scale build up in the vaporizing chamber of the iron, making it possible to use steam function for a long period of time.
- Ordinary water can be used in this iron for a long time, and steam function doesn't weaken.

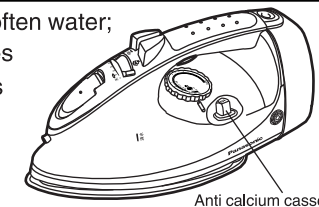

Anti calcium cassette

INSTRUCTIONS FOR THE PROPER USE OF THE RETRACTABLE POWER CORD


Please see warning on page 10

1. Unwind the AC Power Cord far enough to plug into a wall outlet, allowing enough length to operate the iron.
2. If the AC Power Cord seems hard to unwind due to improper winding, pull firmly until it is released.
3. When retracting the AC Power Cord, always hold the Plug with one hand while pressing the Cord Wind Button with the other hand, and retract the cord slowly.
4. If the AC Power Cord does not retract completely, pull it out slightly, pressing the Cord Wind Button, wind it again while guiding it into the Cord Reel Unit.

AUTOMATIC SHUT-OFF (NI-U70R only)


When you forget shutting off power, it will automatically shut off.

- When the iron is left unmoved horizontally

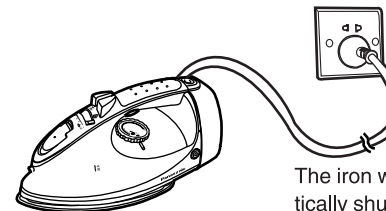

The iron will automatically shut off power to the heater by itself for approx. 1 minute.

- When the iron is left unmoved on its heel rest.

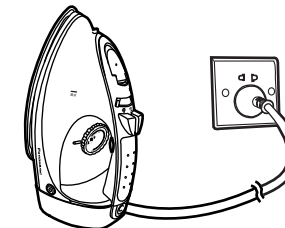

The iron will automatically shut off power to the heater by itself for approx. 10 minutes.


- Turn iron back on

- * To turn the iron back on to resume ironing, simply move the iron in any way, or unplug the supply cord then plug the AC Power Cord into electrical outlet again.
- * At the situation of Auto Shut-off, if the supply power shut off, after electricity resume, the iron will heat itself; then automatically shut off.

AUTOMATIC WATER SEAL

Auto-valve system built-in the Soleplate, when the temperature of the soleplate drops below 110°C, The valve for the vaporizing chamber in the iron automatically closes and stops the water from going in further. This prevents from water spitting out the Soleplate, staining the clothes.

Besides it is unnecessary for you to heat the soleplate again and it will automatically dry, store the iron after it cooled.

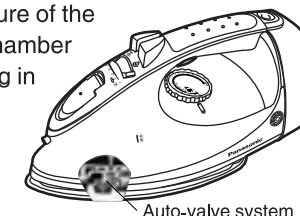

Auto-valve system

HOW TO USE AS A STEAM IRON

(For low, medium temperature and heat-sensitive fabric, try to iron invisible place of fabric; If necessary use a press cloth on top of fabric.)

- 1 a) Set the temperature selector dial to "MIN" position, pull out of the plug.
- b) Place the iron horizontal.
- c) Move the Steam/Dry Selector to the Dry(关) position.
- d) Fill the iron with water.

Notice:


- ① Observe the volume of water at upright position, do not overfill above MAX(满水) indication.
- ② Using pure tap water.
- ③ While fill Water Reservoir with water, don't plug the AC Power Cord into electrical outlet.



Temperature selector

- 2 Plug the AC Power Cord into electrical outlet; connect to power supply.

Notice: Do not leave the iron unattended while it is connected to the electrical source.

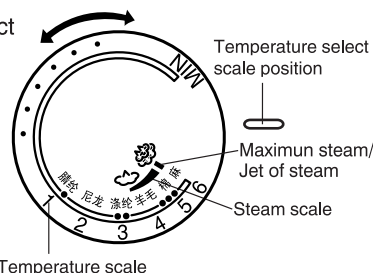


- 3 Choose temperature within the temperature selector dial(4-6 scale).


Temperature Zone	Steam/Dry Selector Position	Recommendations
☁ to ☀	☀ Low Steam	This is recommended for thin or delicate fabrics.
... to ☀	☀ Medium Steam	The Temperature is enough for normal steam generation. From this temperature you can select Low Steam, Medium Steam, High Steam according to the fabric.
	☀ High Steam	
☀	☀ Maximum Steam	There you can select any amount of steam, including Maximum Steam, for fabrics requiring a lot of steam (i.e. thick materials, items with stubborn wrinkles).

- 4 a) Preheat the iron until the indicator light goes out.
- b) Move Steam/Dry Selector, select steam quantity; and start ironing.

Steam/Dry Selector (switch as the following)

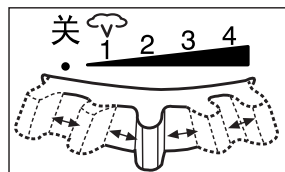

Dry	Low Steam	Medium Steam	High Steam	Maximum Steam
	(1)	(2)	(3)	(4)

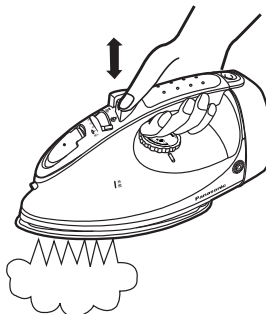


5 How to use the Jet of Steam feature

- ① For fabrics of thick materials and with stubborn wrinkles, and cleaning the steam vents at the same time.
- ② Pump the Jet of Steam Button several times before using for the first at each ironing session.
- ③ The interval should not less than 2-5 seconds when using the jet of steam, to avoid the hot water dripped from the soleplate.
- ④ When using vertical steam, hang the garment on a clothes hanger. Hold the iron away from your body close to but not touching the fabric.

Pull the fabric tight with your free hand and after 2-5 seconds press the Jet of Steam Button.


Notice: a) When using jet of steam, keep the Steam/Dry Selector on the Dry(关) position, and set the Temperature Selector Dial to "6" zone, or some water will drop from iron.

b) Never iron clothes on the body or point your iron at anyone when steaming.

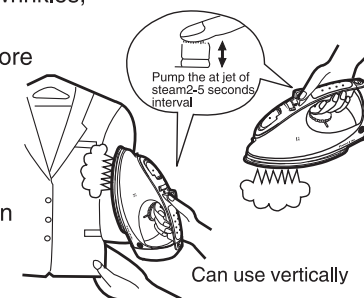

Can use vertically


- 6 The water volume can be observed very clearly whatever in vertical or horizontal position. Please pull out the plug when the volume of water is low, and refill the iron according to the step 1-2.

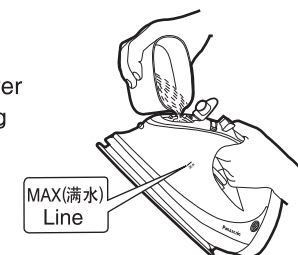

- 7 a) Pull the plug out after ironing finished.
- b) Move the Steam/Dry Selector to the Dry(关) position.
- c) Turn over electric iron and let soleplate up, shake it until empty water from iron.




- 8 After then, hold the plug with one hand while pressing the Cord Wind Button with other hand, and retract the cord slowly. When retracting power cord, always grasp the plug as this may cause the cord to " whip " and cause injury. If the Power Cord seems hard to rewind, pull it out slightly and wind it again while guiding it into Cord Reel Unit. Store the iron inside the box to a safe place after the iron is cold.
- Notice:** While cooling and keeping, should keep Steam/Dry Selector on the Dry(关) position.

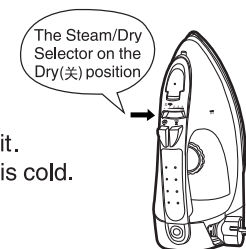

OK!

HOW TO USE AS A DRY IRON


1. Move the Steam/Dry Selector to Dry(关) position.
2. Set temperature selector dial to " MIN ", plug the AC cord into electrical outlet.
3. According to 《 Temperature Select Indication 》 (page 4) set the Temperature Selector Dial to the desired position.
4. Preheat the iron until the Indicator Light goes out, and start ironing.
5. After complete ironing, pull out plug, rewind the cord back to Cord Reel Unit accord page 12, store the iron inside the box to a safe place after the iron is cold.

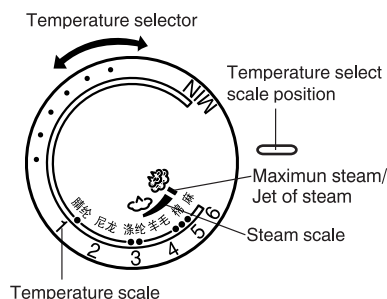

HOW TO USE THE SPRAY FEATURE

Repeat to pump the Spray Mist Button till it works.

The spray feature is particularly helpful for ironing thick materials such as cotton, linen fabric.

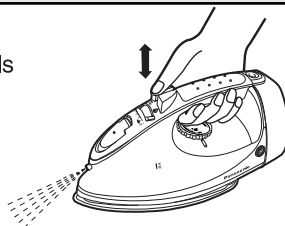

FABRIC AND IRONING RECOMMENDATIONS

- Notes : 1. For heat-sensitive fabric, try to iron using a press cloth on top of fabric, otherwise it will ruin or damage.
 2. Iron belended fabrics, setting temperature for lower-temperature fiber.
 3. Iron clothes with worse heat resistance first while ironing the different kinds of cloth.

Fabric	Temperature setting	Ironing recommendations
ACRYLIC ACETATE	1	Dry iron on reverse side, or use a press cloth on top of fabric.
NYLON SILK	2	Dry iron on reverse side.
POLYESTER RAYON	3	Dry iron on reverse side. To touch-up collars, cuffs, pockets, etc., iron lightly on right side.
WOOL	4	Iron lightly on right side.
COTTON	5	Steam ironing is suggested. Sprinkle water on the fabric, depending on its thickness or stubborn wrinkles; iron dark fabrics on reverse side to avoid unwanted sheen.
LINEN	6	


SPECIFICATION

Rated voltage	220V~ 50Hz	Function	Steam/Dry iron
Power	2000W	Steam generation way	drop
Plug/Cords	three-pole plug/ 2.0m long cordreel	Thermostat	temperature range:1-6(80℃-200℃)
Dimensions	30cm long 13cm width 15cm height	Iron surface	226cm ²
Weight	about 1.8kg	Reservoir capacity	300ml
Stand mode	self stand	Lamp	Temperature select Indicator

MAINTENANCE


Unplug iron, wait until iron cools completely.

- Wipe off iron soleplate and other part with a damp and soft cloth.
- For serious stain, use a neutral detergent.

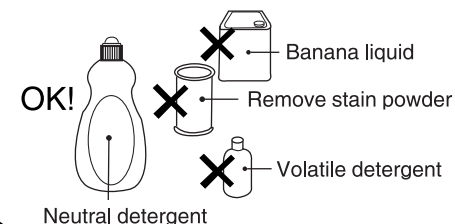

Self-cleaning

- Cleaning the steam chamber of soleplate and steam vents with Jet of Steam.

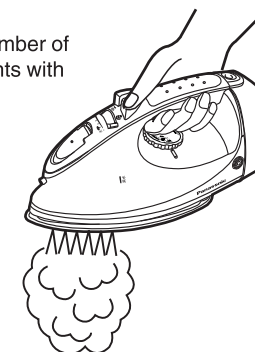

GENERALLY MALFUNCTION AND TACKLING METHOD (please check with this table)

Check	Plug	Temperature selector dial	Steam/Dry Selector	Jet of steam button	Steam hole	The way of drainage	Temperature select indicator
Malfuction							
No steam	○	○	○		○		
Too small steam		○	○		○		
Dripping	○	○		○			
Corroding						○	
No heat	○	○					
Scorch		○					○
Dealing method (Contact with sales agent if can't deal with)	Connect well?	Position is correct?	Move Steam/Dry Selector 2 - 3 times, reset to steam position, keep on Dry(关) position while storing.	The interval time of pressing button should be 2-5 seconds.	Cleaning according to "MAIN-TENANCE."	Drainage before the iron cooling.	Select temperature according to indication or use a press cloth.

AFTER SERVICE

For after service, if there are any questions, please inquiry to shop or telephone 800-810-0781

① Warranty card (append)	Get the warranty card from shop when purchases this product. Read completely and store carefully, confirm the warranty card have been recorded [purchased date, name of the shop etc.].
② Require repairing	Contact with sales agent if can't deal according to above table.
Warranty period	According to the warranty card, provide the shop with the electric iron and warranty card.
Exceed Warranty period	Repair by sales agent, it will be charged according to regulations, if repair by others, please contact with the nearby service agent.

PWHAEIG 0606-01 i82005 - 6N26A

© 2006 松下·万宝(广州)电熨斗有限公司版权所有, 未经许可不得复制和散发, 否则违法必究。
 © 2006 Panasonic Wanbao Home Appliances Electric Iron (Guangzhou) Co., Ltd. All right reserve.