
User Manual	4
使用说明书	58

Thank you for choosing Philips.

Need help fast?

Read your Quick Use/Start Guide and/or User Manual first for quick tips that make using your Philips product more enjoyable.

*If you have read your instructions and still need assistance, you may access our online help at **www.philips.com/support***



PHILIPS

LASER

Type	Semiconductor laser
	InGaAlP (DVD)
	AlGaAs (CD)
Wave length	658 nm (DVD)
	790 nm (CD)
Output Power	30 mW(DVD±RW write)
	1.0 mW (DVD read)
	1.0 mW (CD read)
Beam divergence	84 degrees (DVD)
	61 degrees (CD)

Due to the inconsistency of disc formats provided by various disc manufacturers, your DVD system/ player/recorder may require a playability enhancement or upgrade. As DVD technology advances, these enhancement will become common and will be easy to complete. Go to www.philips.com/support for software upgrade.

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

'CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.'

Microsoft, Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

For Customer Use:

Read carefully the information located at the bottom or rear of your DVD Recorder and enter below the Serial No. Retain this information for future reference.

Model No. DVD RECORDER DVDR 3408
Serial No. _____

This product incorporates copyright protection technology that is protected by US patents. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

U.S. Patent Number 4,631,603; 4,819,098; 4,907,093; 5,315,448; and 6,516,132.

English.....	4
中文(简体)	58

Special Features



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



DivX®, DivX Certified, and associated logos are trademarks of DivX Networks, Inc and are used under license.



This connection is also known as 'FireWire' and 'IEEE 1394.' This connection is used for the transfer of high bandwidth digital signals as used by digital video (DV) camcorders. Audio and video signals are transmitted using a cable.



Philips DVD recorders support 'dual media' recording – the ability to create recordings on + and - discs (DVD+R/+RW, DVD+R DL, DVD-R/-RW).

What kind of disc should I use for recording?

You can only record on a DVD-R, DVD+R, DVD-RW, DVD+RW and DVD+R DL discs. DVD±R/±RW is the most compatible recordable DVD format on the market today. They are fully compatible with most of the existing DVD-Video players and DVD-ROM drives in computers.

What is the capacity of a DVD±R/±RW disc?

4.7GB, or equivalent to 6CDs. You can store only one hour of recordings on a single disc at the highest quality (DVD standard) and about 6 hours recordings at the lowest quality (VHS standard).

The recording mode indicates the number of hours that will fit on a single disc.

What is the difference between DVD±R and DVD±RW?

DVD±R is “recordable” and DVD±RW is “erasable” and “rewritable”. With a DVD±R, you can record multiple sessions on the same disc, but when the disc is full, you cannot record any more on the disc. The DVD±RW allows you to record over the same disc repeatedly.

What is DV?

Using DV, also known as i.LINK, you can connect a DV-equipped camcorder to this recorder using a single DV cable for input and output of audio, video, data and control signals.

- This recorder is only compatible with DV-format (DVC-SD) camcorders. Digital satellite tuners and Digital VHS video recorders are not compatible.
- You cannot connect more than one DV camcorder at one time to this recorder.
- You cannot control this recorder from the external equipment connected via the DV IN jack.


Can I copy a VHS tape or DVD from an external player?

Yes, but only if the VHS tape or DVD is not copy protected.

What are Titles and Chapters?

A DVD disc contains Titles and Chapters, which are similar to the Titles and Chapters of

a book. A Title is often a complete movie and is broken down into Chapters, or individual scenes from the movies.

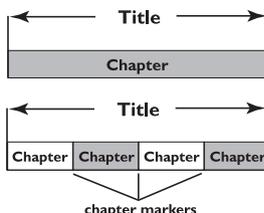

Programs are recorded as a single title; it may consist of one chapter or a few chapters within a title, depending on the recording settings.

How do I set up Titles and Chapters?

The DVD recorder automatically creates a new Title every time you start a new recording. You can then add Chapters to these recordings manually or have them automatically inserted at 5-minute intervals.

What does “finalizing” a disc do?

Finalizing a disc locks the disc so it can no longer be recorded and is only required for DVD±R/+R DL. It will then be compatible with virtually any DVD player. To close a disc without finalizing it, simply stop recording and eject the disc. You will still be able to record on the disc if there is room for more recordings.

How good is the quality of the recording?

There are a few quality levels to choose from, ranging from “1 hour mode” (High Quality) to “6 hours mode” (VHS quality). Press REC MODE button on the remote control to choose the quality level that best suits your purpose and the length of material.

Maximum Recording Time per disc		
1 hour	HQ(High Quality)	1 hour mode
2 hours	SP(DVD quality-Standard Play)	2 hours mode
2.5 hours	SP+(DVD quality- Stand play plus)	2.5 hours mode
3 hours	LP(VHS quality- Long play)	3 hours mode
4 hours	EP(VHS Extended Play)	4 hours mode
6 hours	SLP(VHS quality-Super Long Play)	6 hours mode

Contents

Index	3
-------------	---

Special Features	4
------------------------	---

Frequently Asked Questions	5
----------------------------------	---

Care and Safety Information

Setup	8
Cleaning discs	8
About recycling	8

General Information

Introduction	9
Accessories supplied.....	9
Region codes.....	9
Copyright notice.....	9

Basic Connections - DVD recorder

Step 1: Connecting the antenna cables	10
Step 2: Connecting the video cable	11
Option 1: Using Video(CVBS) jack	11
Option 2: Using S-Video jack	11
Option 3 : Using Component Video jack	11
Step 3: Connecting the audio cables ...	12
Option 1: Using Audio jacks	12
Option 2: Using Coaxial jack.....	12

Optional Connections

Connecting to a Cable Box or Satellite Receiver	13
Connecting to a VCR or other similar device.....	14
Connecting to a VCR and Cable Box/ Satellite Receiver	15
Connecting a camcorder to the front jacks	16
Option 1: Using DV IN jack	16
Option 2: Using S-VIDEO In or VIDEO In jack	16

Main Unit.....	17
----------------	----

Jacks behind the flap.....	17
----------------------------	----

Remote control	18-20
----------------------	-------

Display window	21
----------------------	----

Getting Started

Step 1 : Inserting Batteries.....	22
Using the remote control to operate the system	22
Step 2 : Finding your viewing channel	22
Step 3 : TV channel programming.....	23
Automatic TV channel search	23
Modifying Channel Information	24
Sorting the TV channels.....	25
Step 4 : Setting the time & date.....	25

Recording

Discs for recording.....	26
Recording settings	26
Auto Chapter Markers.....	27
Default Source.....	27
Default Recording Quality.....	27
Manual recording	28
One Touch Recording - automatic turn-off	28
About timer recording.....	29
Timer recording (manually).....	29
Setting a timer recording from an external Cable Box/ Satellite Receiver..	30
Changing/ Deleting a timer recording.	31
Watching another TV channel during recording.....	31

Editing/Finalizing Recording

About Disc editing.....	32
Accessing disc editing menu.....	32
Rename disc	33
Erase disc (DVD±RW only)	33
Record a new title.....	33
Overwrite disc (DVD±RW only)	33
Lock/Unlock disc (DVD±RW only)	34

Playing your recordings (DVD±R/±RW /+R DL) on other DVD players.....	34
About title editing	35
Accessing title editing menu	35
Editing video	35
Rename title	36
Erase title	36
Overwrite title (DVD±RW only).....	36
Overwrite from the selected title	36
Append recording	36
About video editing.....	36
Accessing video edit.....	37
Accessing video editing menu.....	37
Selecting a title.....	38
Selecting a chapter.....	38
Creating chapter marker	38
Hiding an unwanted chapter.....	39
Changing Index Picture	39
Splitting a title (DVD±RW only).....	39

Playback

Playable discs.....	40
Inserting a disc.....	40
Starting disc playback.....	41
Playing a DVD video disc	41
Playing a (Super) Video CD.....	41
Playing an audio CD	41
Playing a DVD±R/±RW /+R DL disc.....	41
Playing a Divx disc.....	42
Playing an MP3 disc.....	42
Playing a picture disc (or musical slide show).....	42-43

Additional Playback Features

Changing to another title/chapter/ track	44
Pausing playback and step play	44
Searching forward/backward.....	44
Zooming in	44
Using TITLE options	45
Selecting various repeat/shuffle functions	45
Programming disc tracks.....	46
Changing the audio soundtrack language	46
Changing subtitle language	47
Switching camera angles.....	47
Time search	47

DVD System Menu Options

Accessing System Menu - General	48
Screen Saver	48
Progressive/ Interlace	49
Video Output Format.....	49
Restore Factory settings.....	49
Accessing System Menu -Playback.....	50
TV Aspect Ratio.....	50
rating level.....	51
Setting or changing the password	52
Digital Audio Output.....	52
Accessing System Menu - Record.....	53
Accessing System Menu - Channel Setup	53
Accessing System Menu - Clock.....	53
Date and Time	53

Specifications..... 54

Troubleshooting 55~56

Glossary..... 57

Care and Safety Information

CAUTION!

High voltage! Do not open the device. You run the risk of getting an electric shock.

The machine does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.


Setup

Finding a suitable location

- Place the set on a flat, hard and stable surface. Do not place the set on a carpet.
- Do not position the set on top of other equipment that might heat it up (e.g., receiver or amplifier).
- Do not put anything under the set (e.g., CDs, magazines).
- Install this unit near the AC outlet and where the AC power plug can be reached easily.

Space for ventilation

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10 cm (4") clearance from the rear and the top of the set and 5cm (2") from the left and right to prevent overheating.

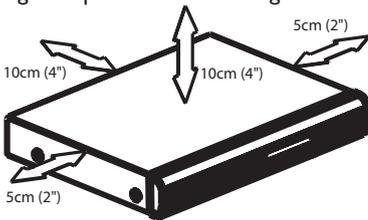


Avoid high temperatures, moisture, water and dust

- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g., liquid filled objects, lighted candles).

Cleaning discs

Some problems occur because the disc inside the recorder is dirty (frozen picture, sound disruptions, picture distortions). To avoid these problems, discs should be cleaned on a regular basis.

To clean a disc, use a micro fibre cleaning cloth and wipe the disc from the center to the edge in a straight line.

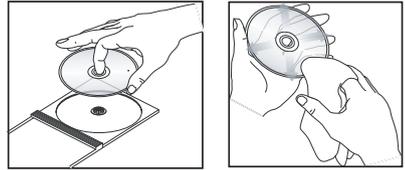

CAUTION!

Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static sprays intended for analog discs. Since the optical unit (laser) of the DVD recorder operates at a higher power than regular DVD or CD players, cleaning CDs intended for DVD or CD players may damage the optical unit (laser). Therefore, refrain from using a cleaning CD.

About recycling

These operating instructions have been printed on non-polluting paper. This electronic equipment contains a large number of materials that can be recycled. If you are disposing of an old machine, please take it to a recycling center. Please observe the local regulations regarding disposal of packaging materials, exhausted batteries, and old equipment.

Introduction

Your Philips DVD recorder allows you to record the TV programs or duplicate camcorder recordings to a DVD±RW or DVD±R/+R DL and play pre-recorded DVDs. The recordings you make on the recorder will play on most of the DVD players and DVD-ROM drives. The DVD±R/+R DL discs have to be finalized before they can be played on other DVD players.

Please take time to read this user manual before using your DVD recorder. It contains important information and notes regarding operation.

Helpful Hints:

- If you have questions or if problems come up during operation, please see the chapter 'Troubleshooting'.
- If you need further assistance, please call the customer support service for your country. The corresponding telephone numbers and e-mail addresses are given in the guarantee booklet.
- Refer to the type plate on the rear or bottom of the product for identification and supply ratings.

Accessories supplied

- Remote control and batteries
- Audio/Video (AV) cables
- RF coaxial cable
- Quick Start Guide
- User Manual

Region codes

DVD films are usually not released at the same time in all regions of the world, thus all DVD players are keyed to a specific region code.

The regional code is shown at the back panel of this device. If the DVD is marked with a different region code, it cannot be played on this device.

Region	DVD that can be played
China, Calcos Islands, Walls and Futuna Islands	 


Copyright notice

The making of unauthorised copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Be responsible
Respect copyrights

Basic Connections - DVD recorder

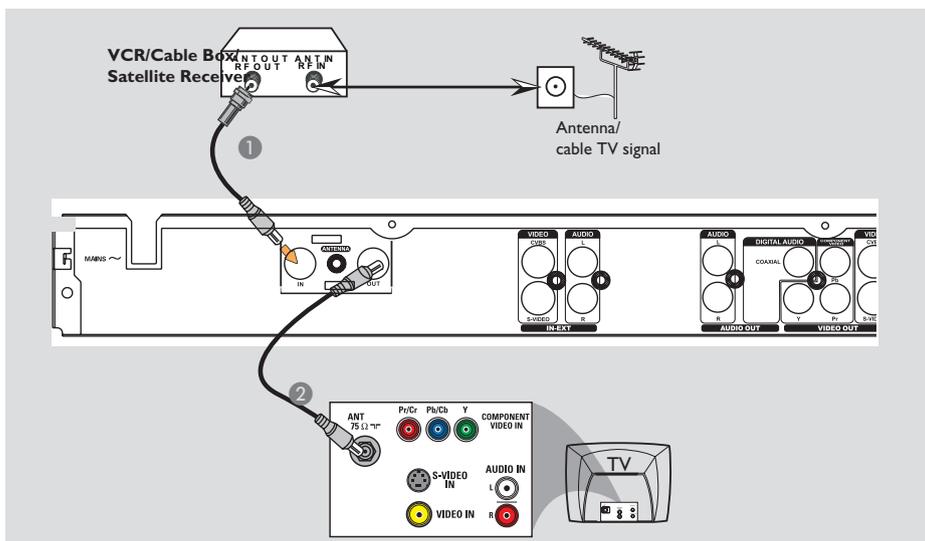


Step 1: Connecting the antenna cables

These connections enable you to watch and record TV programs using the DVD recorder. If the antenna signal is connected via a VCR, Cable Box or Satellite Receiver, ensure that these devices are turned on in order to watch or record the cable programs.

- **If you want to connect to a VCR and/or Cable Box/Satellite Receiver,** see page 13~15 for the complete connection to your TV.

- 1 Connect existing Antenna/Cable TV signal (or from the Cable Box/Satellite Receiver {RF OUT or TO TV}) to the **ANTENNA IN** jack on the DVD recorder.
- 2 Use the supplied RF coaxial cable to connect **ANTENNA OUT** jack on the DVD recorder to the antenna input jack on your TV (VHF/UHF RF IN).

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

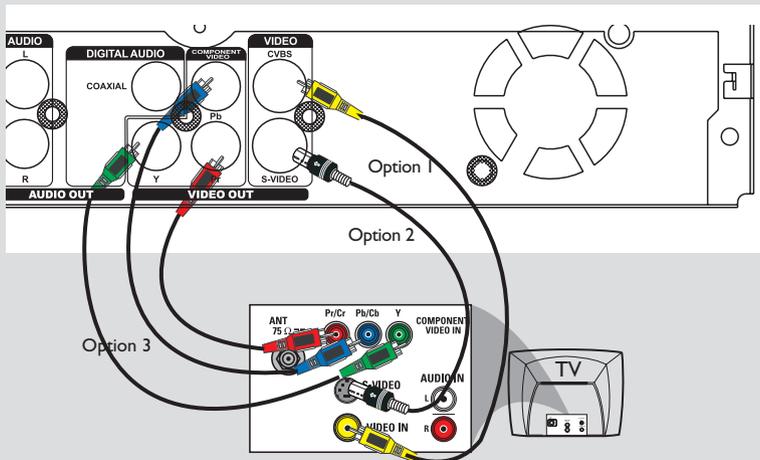

Step 2: Connecting the video cable

This connection enables you to view the disc playback from the DVD recorder. You only need to choose one of the options below to make your video connection.

Option 1: Using Video (CVBS) jack (good picture quality)

- Use the supplied audio/video cables (yellow plug) to connect **VIDEO (CVBS)-OUT** jack on the DVD recorder to the video input jack (or labeled as A/V In, Video In or Composite) on the TV.

Option 2: Using S-Video jack (excellent picture quality)

- Use an S-video cable (not supplied) to connect **S-VIDEO** jack on the DVD recorder to the S-Video input jack (or labeled as Y/C or S-VHS) on the TV.

Option 3 : Using Component Video jack (best picture quality)


- 1 Use the component video cables (red/blue/green - not supplied) to connect the **Y Pb Pr -OUT** jacks on the DVD recorder to the corresponding component video input jacks (or labeled as Y Pb/Cb Pr/Cr or YUV(Y/Pb/Pr)) on the TV.
- 2 If your TV accepts Progressive Scan signal, see page 49 for detailed Progressive Scan set up.

IMPORTANT!

The progressive scan video quality is only available through Y Pb Pr connection and a progressive TV is required. It is strongly advised to complete the DVD recorder installation first, before enabling the progressive scan feature.

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

Basic Connections - DVD recorder (continued)

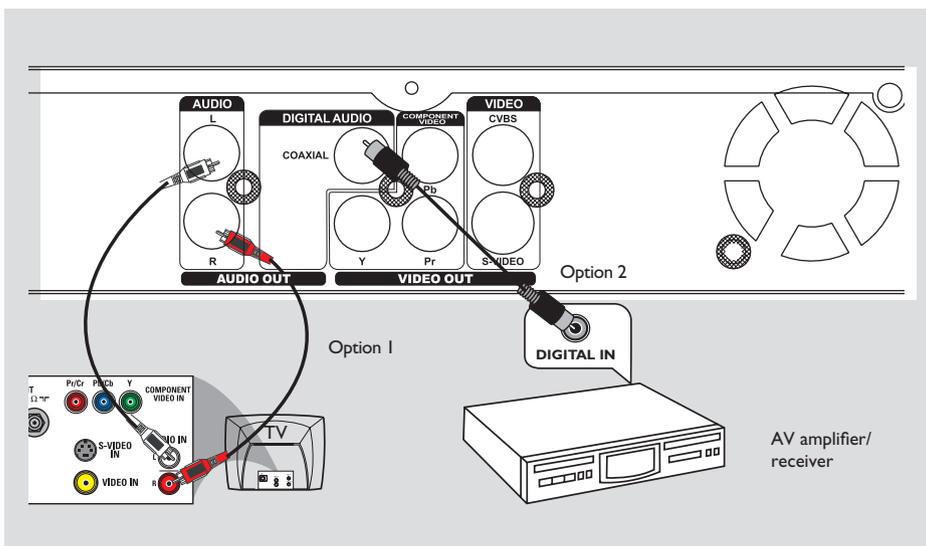

Step 3: Connecting the audio cables

This connection enables you to listen to the sound.

Option 1: Using an Audio cable

You can connect the DVD recorder to a two channel stereo system or receiver in order to enjoy the stereo sound system.

- Use the supplied audio cable (red/white ends) to connect **AUDIO L/R OUT** jacks to one of the following devices with the same input jacks.
 - a stereo system (for example, TV or mini system).
 - a receiver with two channel analog stereo.

Option 2: Using a Coaxial cable

You can connect the DVD recorder to an AV amplifier/receiver in order to enjoy multichannel surround sound.


- Use a coaxial cable (not supplied) to connect the COAXIAL socket on the DVD recorder to the digital input on the AV amplifier/ receiver with a digital multi-channel sound decoder.

Before you start operating, set the Digital Audio Output accordingly (see page 55). If the Digital Output setting does not match your stereo's capabilities, the stereo may produce a strong, distorted sound or no sound at all.

Helpful Hint:

– Do not connect your TV's audio output jacks to the AUDIO L/R (IN-EXT) jacks on this DVD recorder as this may cause unwanted noise.

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

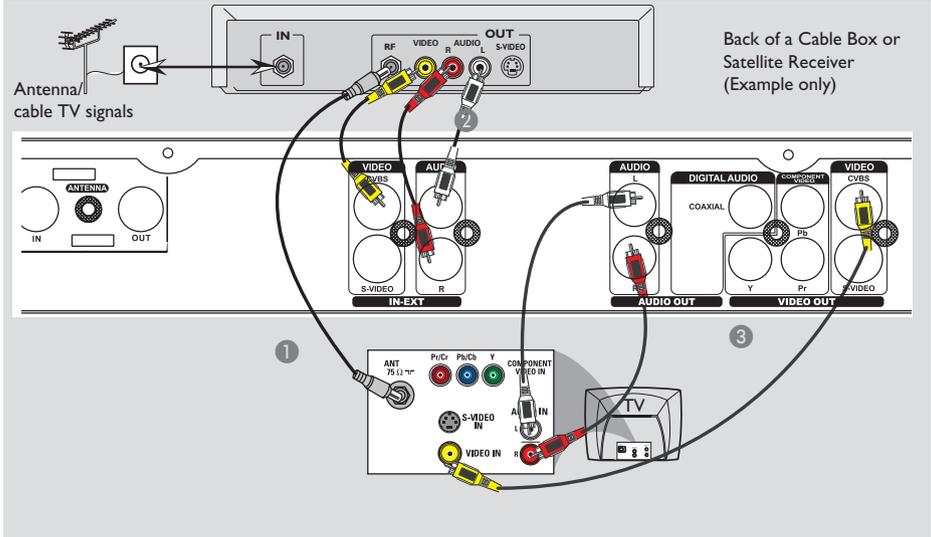

Connecting to a Cable Box or Satellite Receiver

Option 1

If your Cable Box/Satellite Receiver has only an antenna output jack (RF OUT or TO TV), refer to “Connecting the antenna cables” on page 10 for the complete connection to your TV.


Option 2

If your Cable Box/Satellite Receiver has video/audio output jacks,

- 1 Keep the existing antenna connection from the Cable Box/Satellite Receiver to your TV.
- 2 Use the audio/video cables to connect the **VIDEO/AUDIO IN-EXT** on the DVD recorder to the matching VIDEO/AUDIO output jacks on the Cable Box/Satellite Receiver.
- 3 Use the audio/video cables to connect the **VIDEO/AUDIO OUT** on the DVD recorder to the matching VIDEO/AUDIO input jacks on the TV.

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

Optional Connections (continued)

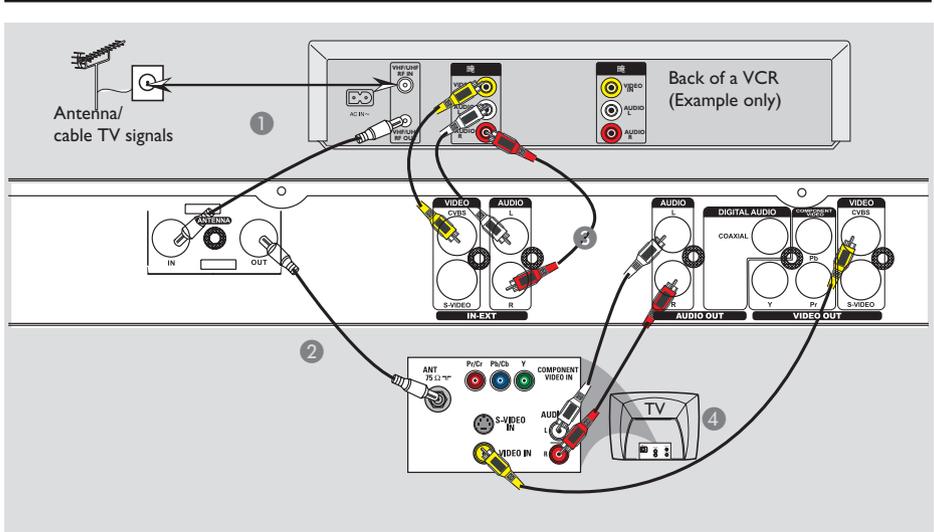

Connecting to a VCR or other similar device

This connection enables you to record from video tape to a DVD±R/±RW and allows the VCR to be used for playback if the DVD recorder is turned off.


- 1 Connect the Antenna/Cable TV signal to the antenna input (RF IN) jack on the VCR, then connect the antenna output (RF out) jack on the VCR to the **ANTENNA IN** jack on the DVD recorder.
- 2 Use the supplied RF coaxial cable to connect the **ANTENNA OUT** jack on the DVD recorder to the antenna input jack on the TV.

- 3 Use the audio/video cables to connect the **VIDEO/AUDIO IN-EXT** on the DVD recorder to the matching VIDEO/AUDIO output jacks on the VCR.
- 4 Use the audio/video cables to connect the **VIDEO/AUDIO OUT** on the DVD recorder to the matching VIDEO/AUDIO input jacks on the TV.

Helpful Hints:

- You may use the S-VIDEO (Y/C) jack instead of VIDEO (CVBS) jack if the connected device has the same S-VIDEO input/output jack. This video connection provides better picture quality.
- Most commercial video cassettes and DVDs are copy-protected and therefore cannot be recorded.
- Connect the DVD recorder directly to the TV. If there is a VCR or an additional device in between, the picture quality may be poor because of the copy protection system built into the DVD recorder.

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

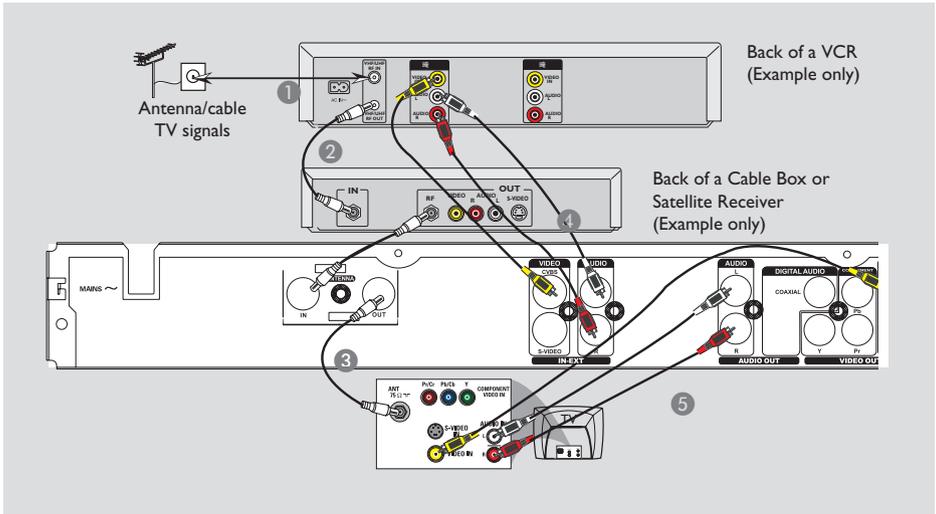

Connecting to a VCR and Cable Box/Satellite Receiver

- 1 Connect the Antenna/Cable TV signal to the antenna input (RF IN) jack on the VCR.
- 2 Connect the antenna output (RF OUT) jack on the VCR to the input (RF IN) jack on the Cable Box/Satellite Receiver. Then connect the RF out on the Cable Box/Satellite receiver to the **ANTENNA IN** jack on the DVD recorder.
- 3 Use the supplied RF coaxial cable to connect the **ANTENNA OUT** jack on the DVD recorder to the antenna input jack on the TV .
- 4 Use the audio/video cables to connect the **VIDEO/AUDIO IN-EXT** on the DVD recorder to the matching VIDEO/AUDIO output jacks on the VCR.


- 5 Use the audio/video cables to connect the **VIDEO/AUDIO OUT** on the DVD recorder to the matching VIDEO/AUDIO input jacks on the TV.

Helpful Hints:

– You may use the **S-VIDEO (Y/C)** jack instead of **VIDEO (CVBS)** jack if the connected device has the same **S-VIDEO** input/output jack. This video connection provides better picture quality.

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

Optional Connections (continued)

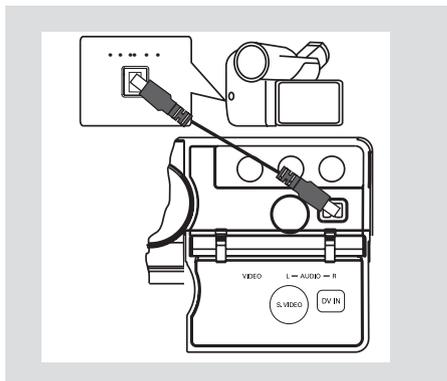

Connecting a camcorder to the front jacks

You can use the front jacks to copy camcorder recordings. These jacks are located behind the flap on the right hand side; it provides convenient connections for a camcorder.

Option 1: Using DV IN jack


Use this connection if you have a Digital Video or Digital 8 camcorder. The DV jack conforms to the i.LINK standard. It provides the best picture quality.

- Use an i.LINK 4-pin cable (not supplied) to connect **DV IN** jack on the DVD recorder to the appropriate DV OUT jack on the camcorder.

Before you start operating, press **REC SOURCE** on the remote control repeatedly to select 'DV' as the input channel. For recording, see pages 26~28.

Helpful Hints:

- The DV IN jack does not support a connection to a Personal Computer.
- It is not possible to record from the DVD recorder to your camcorder via the DV IN jack on your DVD recorder.

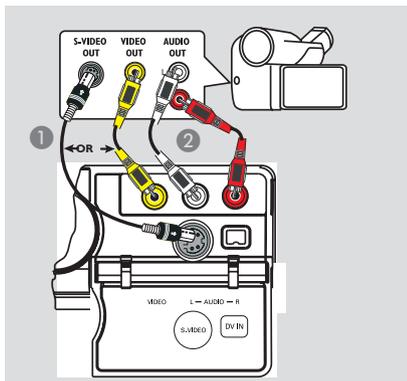

Option 2: Using S-VIDEO In or VIDEO In jack


Use S-VIDEO connection if you have a Hi8 or S-VHS(C) camcorder. It provides better picture quality.

Alternatively, you can use VIDEO connection if your camcorder has only a single video output (Composite Video, CVBS).

- 1 Connect the **S-VIDEO** or **VIDEO** jack at the front panel of the DVD recorder to the corresponding S-VHS or Video output jack on the camcorder.
- 2 Use an audio cable (red/white ends) to connect the **AUDIO L/R** jacks at the front panel of the DVD recorder to the audio output jacks on the camcorder.

Before you start operating, press **REC SOURCE** on the remote control repeatedly to select 'Front S-VIDEO' or 'Front CVBS' as the input channel, depending on your connections. For recording, see pages 26~28.

TIPS: Before making or changing any connections, make **SURE** that all the devices are disconnected from the power outlet.

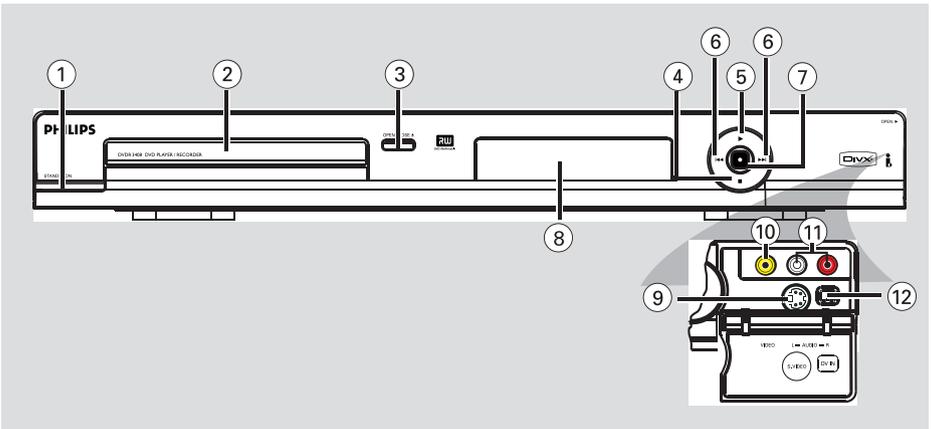


- ① **STANDBY-ON**
- Turns on or off the DVD recorder.
- ② **Disc tray**
- ③ **OPEN CLOSE**
- Opens/closes the disc tray.
- ④ **■ STOP**
- Stop playback/recording.
- ⑤ **▶ PLAY**
- Play a disc.
- ⑥ **⏮ ⏭**
- Skips to previous or next Chapter/Track.
- ⑦ **RECORD** ●
- Start recording the current TV channel or the current video input source.
- Press repeatedly to set up a One Touch Recording at 30 minutes interval.
- ⑧ **System display panel**
- Show information about the current status of the DVD recorder.

Jacks behind the flap

Flip down the door as indicated by the **OPEN** label at the right hand corner.

- ⑨ **S-VIDEO**
- S-video input for SVHS/Hi8 camcorders or SVHS/Hi8 video recorders.
- Press **REC SOURCE** on the remote control to select 'Front S-Video' in order to view the input source.
- ⑩ **VIDEO**
- Video input for camcorders or video recorders.
- Press **REC SOURCE** on the remote control to select 'Front CVBS' in order to view the input source.
- ⑪ **L/R AUDIO**
- Audio input for camcorders or video recorders.
- ⑫ **DV IN**
- Input for digital camcorders or other suitable devices using this connector.
- Press **REC SOURCE** on the remote control to select 'DV' in order to view the input source.

Remote Control

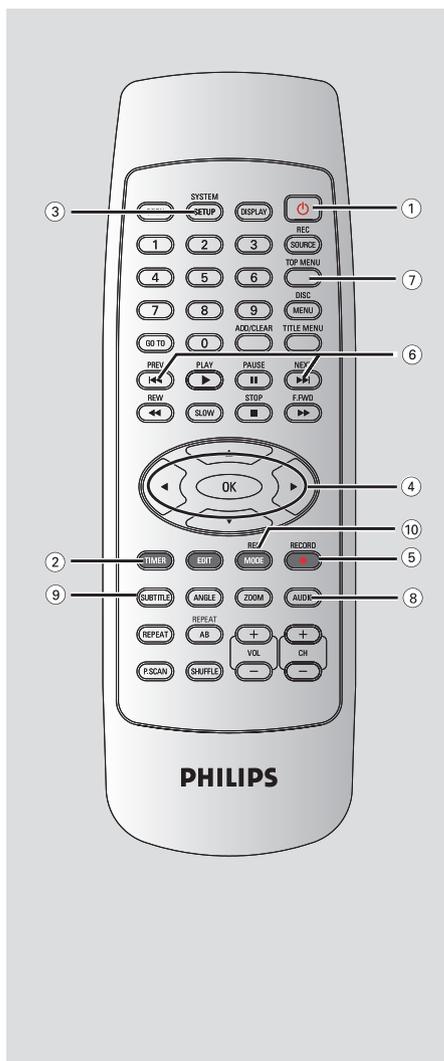

- ① **STANDBY-ON** 
 - Turns on the DVD recorder or to standby mode.
- ② **TIMER**
 - Enters/exits the timer recording menu.
- ③ **SYSTEM-SETUP**
 - Enters/exits the system menu.
- ④   : Cursor buttons for moving to the left or right.
  : Cursor buttons for moving up/down.
- ⑤ **REC** ●
 - Starts recording the current TV channel or the current video input source.
- ⑥  
 - Skips to previous or next Chapter/Track.
- ⑦ **TOP MENU** (For DVD±R/±RW and DVD+R DL only)
 - Enters the disc editing menu.
- ⑧ **AUDIO**
 - Selects an audio language (DVD, VCD) or an audio channel.
- ⑨ **SUBTITLE**
 - Selects a DVD subtitle language.
- ⑩ **REC MODE**
 - Toggles between recording modes :
1, 2, 2.5, 3, 4 and 6 hours mode.
This determines the quality of the recording and the amount/length of time you can record on a DVD±R/±RW/+R DL.

11 NUMERIC KEYPAD

- Selects a chapter/track number to play.
- Selects the recorder's preset TV tuner channel.

12 REC SOURCE

- Selects the recorder's input source.

13 DISC-MENU

- Access DVD disc menu or Index Picture screen of a DVD±R/±RW/+R DL.
- Switch PBC on or off.

14 OK

- Stores/confirms an entry.
- Confirms a selection.

15 PLAY ►

- Plays a disc.

16 STOP ■

- Stops playback/recording.

17 II

- Pauses the playback or recording.
- Press repeatedly to advance a paused picture one frame at a time.

18 EDIT (For DVD±R/±RW/+R DL only)

- Enters/exits the video editing menu.

19 ZOOM


- Enlarges a picture on the TV screen.

20 TITLE MENU

- Enters/exits the TITLE menu.

21 ADD/CLEAR

- Selects/Removes a track/chapter/file in the program menu.
- Clears a timer entry.

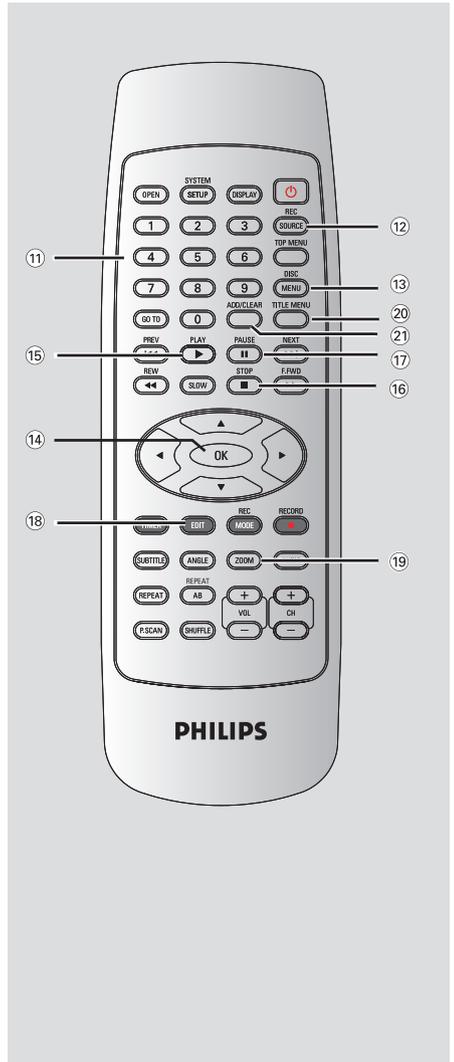

Remote Control (continued)

22 OPEN

- Open/close the disc tray.

23 DISPLAY

- Show and adjust the playback status.

24 GO TO

- Go to desired title/chapter/time and play.

25 REW

- Fast reverse, there are four modes: 2X, 4X, 16X, 32X.

26 F.FWD

- Fast forward, there are four modes: 2X, 4X, 16X, 32X.

27 SLOW

- Slow forward, there are four modes: 1/2, 1/4, 1/8, 1/16.

28 ANGLE

- Change camera angle (must be supported by the disc).

29 REPEAT

- Set repeat functions.

30 REPEAT AB

- Repeat specified program segment.

31 P.SCAN

- Switch the scanning mode of video output (Progressive/Interlace).

32 CH+/-


- Select TV channel or external signal source.

33 SHUFFLE


- Play program in random sequence.

34 VOL+/-

- Adjust the audio output volume.

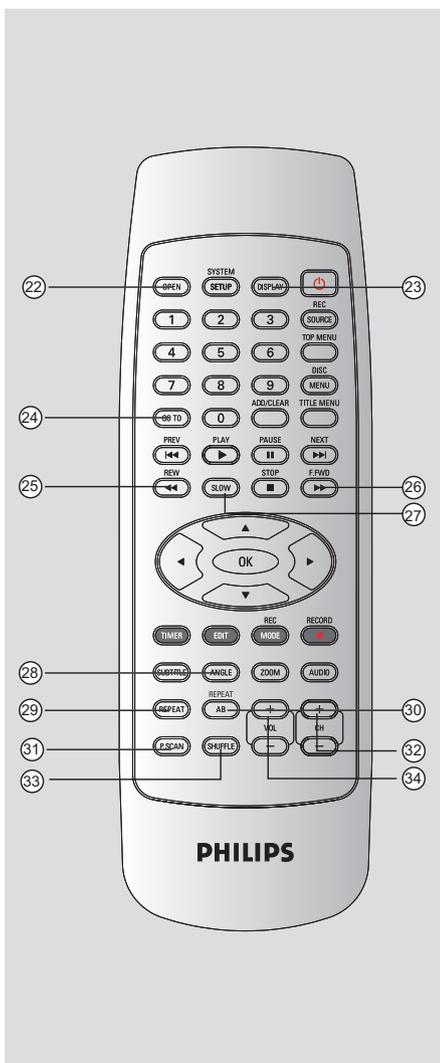


Display window

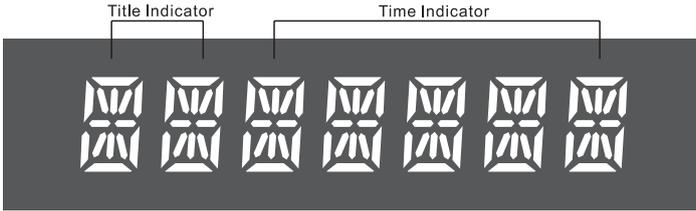

TIPS: DTS discs are supported via passthrough mode through Digital Coaxial connection only.

Getting Started

Step 1 : Inserting Batteries

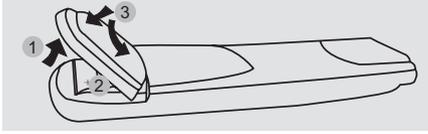


- 1 Open the battery compartment.
- 2 Insert two batteries type R03 or AAA, following the indications (+ -) inside the compartment.
- 3 Close the cover.

CAUTION!

- Remove batteries if they are exhausted or if the remote is not to be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Using the remote control to operate the system

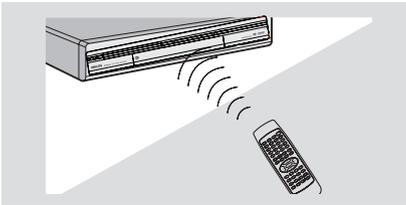

- 1 Aim the remote control directly at the remote sensor (IR) on the front panel.
- 2 Press the **REC SOURCE** button on the remote control to select the mode you wish to control (for example Front-CVBS).

Step 2 : Finding your viewing channel

- 1 Press **STANDBY-ON**  on the DVD recorder to turn it on.
- 2 Turn on the TV and set it to the correct video-in channel. You should see the blue DVD background screen.
 - Usually this channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO. See your TV's manual for more details.
 - Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.
 - Or, the TV remote control may have a button or switch that chooses different video modes.

IMPORTANT!

When you complete the connections and turn on the DVD recorder for the first time, it is advisable that you make several basic settings.


Please see the following pages on using the **System Menu** features to program TV channels and menu language settings. This will improve the performance of this DVD recorder considerably.

Step 3 : TV channel programming

Before the DVD recorder can start recording the TV channel programs, you need to search for the available TV channels and store them in the recorder.

Note: Make sure you have successfully made all the required connections to the DVD recorder, the TV and Satellite Receiver/ Cable Box (if any) and switched them on.

Tuner settings can only be changed when there is no disc in the disc tray.

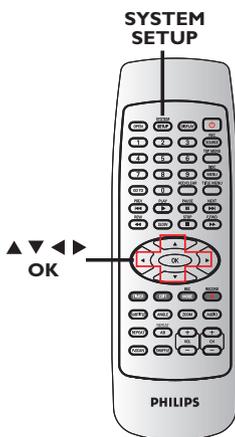

Automatic TV channel search

This will automatically scan all the receivable TV channels and the cable programs from the Cable Box/Satellite Receiver and store these channels on the DVD recorder.

- 1 Press **SYSTEM-SETUP** on the remote control.
→ The system menu appears on the TV.
- 2 Use ▲▼ keys to highlight  { **System Setup - Channel Setup** } and press OK.



- 3 Use ▲▼ keys to highlight { **Channels Search** } and press **OK**.
→ The automatic TV channel search starts. This process may take several minutes. Once complete, the total number of channels found appears on the TV.

TIPS: Press ◀ to go back to previous menu item.
Press **SYSTEM-SETUP** to exit the menu.

Getting Started (continued)

Modifying Channel Information

You can set a TV channel to your preference and improve the reception and the sound quality of the TV channel.

1 Press **SYSTEM-SETUP**


→ The system menu appears.

2 Use ▲▼ keys to highlight 

{ **System Setup - Channel Setup** } and press **OK**.

3 Use ▲▼ keys to highlight { **Modify Channel Information** } and press **OK**.

→ The channel menu appears.

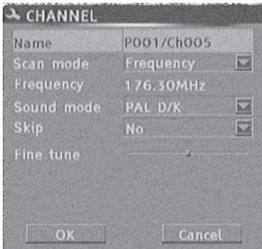

4 Use ▲▼ keys to select one of the options and press **OK**.

{ Name }

You can use the **numeric keypad 0-9** to select the channel preset number which you wish to change.

– Use ▲▼ keys to change alphabet/number and use ◀▶ keys to select different entry fields, then press **OK** to confirm.

{ Scan Mode }

Select TV channel search mode based on channel allocation or frequency.

– Use ▲▼ keys to select { **Channel** }, { **S-Channel** } (Special Channel) or { **Frequency** }, then press **OK** to confirm.

{ Frequency }

Shows the frequency of the current TV channel.

– If required, use ◀▶ keys to start the automatic frequency search or press **STOP stop** search.

{ Sound mode }

Set the TV system that produces the least distortion of picture and sound.

– Use ▲▼ keys to select a suitable sound mode, then press **OK** to confirm.

(See chapter “TV System Guide” at the back of this manual for more information).

{ Skip }

Select this to set the channel to be skipped.

The skipped channels can only be accessed by pressing the corresponding number button on the remote control.

– Use ▲▼ keys to choose { **Yes** } if you wish to skip this channel, then press **OK** to confirm.

{ Fine Tune }

Select this to fine-tune the TV channel manually if the reception is poor.

– Use ◀▶ keys to adjust the frequency.

5 Once complete, select in the menu and press **OK** to confirm and exit to the previous menu page.


→ If you do not wish to save any changes, select and press **OK**.

TIPS: Press ◀ to go back to previous menu item. Press **SYSTEM-SETUP** to exit the menu.

TIPS: By default, PAL D/K is TV System for most parts of China. Change to PAL I if you are sure your area support PAL I.

Sorting the TV channels


You may not agree with the sequence in which the individual TV channels have been allocated to the program numbers. You can use this function to rearrange all the stored TV channels.

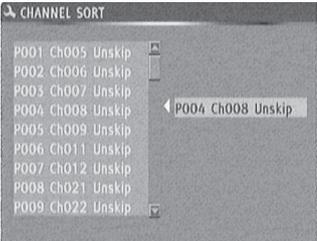- 1 Press **SYSTEM-SETUP**.
→ The system setup appears.
- 2 Use ▲▼ keys to highlight  { **System Setup - Channel SETUP** } and press **OK**.
- 3 Use ▲▼ keys to highlight { **Sort Channels** } and press **OK**.
→ The list of TV channel programs appears.
 
- 4 Use ▲▼ keys to highlight the channel you want to change and press **OK** or ►.
→ The selected channel will move to the right side of the screen.
- 5 Use ▲▼ keys to shift the TV channel to the desired position and press **OK** or ◀.
→ The selected channel will be inserted before the current position.
- 6 Repeat steps 4~5 until you have sorted all the TV channels you want.

Step 4 : Setting the time & date

If the DVD recorder has not set the time and date correctly, set the clock manually by following the steps below.

- 1 Press **SYSTEM-SETUP**.
→ The system menu appears.
- 2 Use ▲▼ keys to select  { **System Setup - Clock** } and press **OK** to confirm.

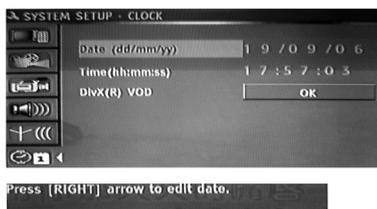

- 3 Press **OK** to set { **Date (dd/mm/yy)** }.
- 4 Use ▲▼ keys to change number and use ◀► keys to select different entry fields, then press **OK** to confirm.
 - Alternatively, you can key in the numbers using the **numeric keypad 0-9** on the remote control.
- 5 Press **OK** to confirm.
- 6 Move to { **Time (hh:mm:ss)** } and repeat step 4~5.

TIPS: Press ◀ to go back to previous menu item.
Press **SYSTEM-SETUP** to exit the menu.

Discs for recording

Several formats of DVD recordable discs can be used with this DVD recorder:



DVD±RW (DVD ReWritable)

– Discs that are re-writable can be used for multiple recordings once existing data is erased.



DVD±R (DVD Recordable)

– Discs can only be used for a single recording. Each new recording is always added at the end of all previous recordings as existing recordings cannot be overwritten.

– Editing can be made on any DVD±R discs as long as they have not been finalized. It is also possible to create additional chapter markers.

– To play a DVD±R on other DVD player, it must be finalized (see page 34 “Playing your recordings (DVD±R) on other DVD players”). After this is done, no more data can be added to the disc.



DVD+R DL (DVD+R Double Layer)– Like the DVD+R, these discs can only be used for a single recording. The only difference is the capacity- 8.5GB. It offers two recordable layers on a single DVD disc. The layers are accessible from the

same side of the disc, so recording can occur completely uninterrupted.

IMPORTANT!


Unrecordable pictures

Television programs, films, video tapes, discs, and other materials may be copy-protected and therefore cannot be recorded on this recorder.

Recording settings

The default recording settings allow you to set the auto chapter markers, preferred recording input source and recording mode. Any changes made using the remote control will only apply to the current recording settings, the default recording settings will remain for the next recording.

- 1 Press **SYSTEM-SETUP** on the remote control.
→ The system menu appears on the TV.
- 2 Use **▲▼** keys to select  { **System Setup - Record** } and press **OK** to confirm.

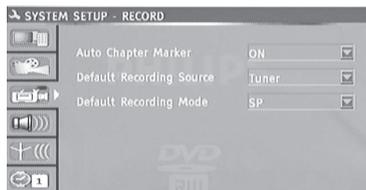

- 3 Use **▲▼** keys to select the setting you wish to change and press **OK** to confirm.
→ Instructions and explanation of the options are provided in the following pages.
- 4 To exit, press **SYSTEM-SETUP**.

TIPS: Press **◀** to go back to previous menu item.
Press **SYSTEM-SETUP** to exit the menu.

Auto Chapter Markers

You can insert chapter markers within a title during recording. This lets you access specific points on the recorded disc as you would choose a chapter on other DVDs.

- 1 Use ▲▼ keys to select { **Auto Chapter Marker** } and press **OK** to access its options.
- 2 Use ▲▼ keys to select one of the options.
 - { **Off** }
 - Disable this feature.
 - { **On** }
 - A chapter marker will be automatically inserted during recording. The interval depends on discs: 5 minutes per chapter for disc with single layer; 10 minutes per chapter for disc with double layer.
- 3 Press **OK** to confirm.

Default Recording Source

You can define your preferred source of recording. The default source is selected when the DVD recorder is turned on. To change the current recording source without changing the default setting, you can press **REC SOURCE** button on the remote control.

- 1 Use ▲▼ keys to select { **Default Recording Source** } and press **OK** to access its options.
- 2 Use ▲▼ keys to select one of the options.

{ **Front CVBS** }

Input source from the device connected to the VIDEO and AUDIO L/R jacks on the front panel.

{ **Front S-Video** }

Input source from the device connected to the S-VIDEO and AUDIO L/R jacks on the front panel.

{ **Rear CVBS** }

Input source from the device connected to the VIDEO (CVBS)-IN-EXT and AUDIO L/R jacks on the back panel.

{ **Rear S-Video** }

Input source from the device connected to the S-VIDEO (Y/C)-IN-EXT and AUDIO L/R jacks on the back panel.

{ **DV** }

Input source from the device connected to DV IN jack at the front panel.

{ **Tuner** }

Input source from TV programs.

- 3 Press **OK** to confirm.

Default Quality

The recording mode defines the picture quality of recordings and the maximum recording time for a disc.

This function can also be accessed via the **REC MODE** button on the remote control.

- 1 Use ▲▼ keys to select { **Default Recording MODE** } and press **OK** to access its options.
- 2 Use ▲▼ keys to select one of the following recording mode.

Maximum Recording Time per disc		
1 hour	HQ(Hight Quality)	1 hour mode
2 hours	SP(DVD quality -Standard Play)	2 hours mode
2.5 hours	SP+(DVD quality- Stand play plus)	2.5 hours mode
3 hours	LP(VHS quality- Long play)	3 hours mode
4 hours	EP(VHS Extended Play)	4 hours mode
6 hours	SLP(VHS quality-Super Long Play)	6 hours mode


- 3 Press **OK** to confirm.

TIPS: The underlined option is the factory default setting. Press ◀ to go back to previous menu item. Press **SYSTEM-SETUP** to exit the menu.

Recording (continued)

Manual recording

Use this feature to start recording immediately (e.g., to record a TV show already in progress).

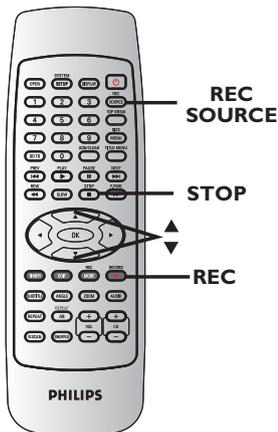

- 1 Turn on the TV power. Select the correct Video In channel at the TV.
- 2 Insert a DVD±R/±RW/+R DL into the DVD recorder.
- 3 Press **REC SOURCE** on the remote control to select { **Tuner** }, then use CH+ and CH- keys to select the TV channel you wish to record.
- To record from an external device, press **REC SOURCE** repeatedly to select the correct input channel that matches the jack which is connected to the DVD recorder.

Select from one of the following recording sources:

{ Front CVBS }

Input source from the device connected to the VIDEO and AUDIO L/R jacks on the front panel.

{ Front S-Video }

Input source from the device connected to the S-VIDEO and AUDIO L/R jacks on the front panel.

{ Rear CVBS }

Input source from the device connected to the VIDEO (CVBS)-IN-EXT and AUDIO L/R jacks on the back panel.

{ Rear S-Video }

Input source from the device connected to the S-VIDEO (Y/C)-IN-EXT and AUDIO L/R jacks on the back panel.

{ DV }

Input source from the device connected to DV IN jack at the front panel.

- 4 Press **REC ●** to start recording.
→ The recording will start automatically after the last recording on the DVD±R/±RW/+R DL.
- 5 To stop the recording, press **STOP ■**.

Pausing a recording

- 1 During a recording, press **II**.
→ You can use this function to avoid recording commercials.
- 2 To resume recording, press **REC ●**.

One Touch Recording - automatic turn-off

- 1 Follow the steps 1~3 of "Manual Recording" on page 28.
- 2 Press **REC ●** twice to start a 30 minutes recording. Each time you press **REC ●** after that, you will add 30 minutes to the recording time.
→ The recorder will stop recording at the designated end time and turn off automatically.
- Press **STOP ■** if you wish to stop the recording.


TIPS: Ensure that there is sufficient space available on the DVD±R/±RW/+R DL before recording. You have to finalize the DVD±R/+R DL, before it can be played on other players, see page 34.

About timer recording

Use 'Timer Recording' to automatically start and stop a recording at a later date/time. The DVD recorder will tune to the right program channel and begin recording at the specified time.

To make a timer recording, your DVD recorder needs to know:

- The date you want to make the recording.
- The recording input source.
- The start and stop time of the recording.
- The recording quality, see page 27.

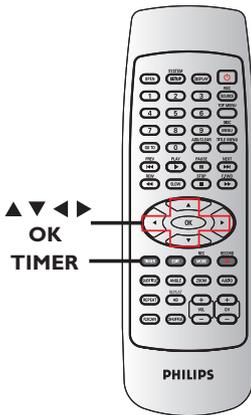

Timer recording (manually)

- 1 Turn on the TV power. Select the correct Video In channel at the TV.
- 2 Press **TIMER** on the remote control.
→ The timer schedule list appears.

Record scheduler

	Source	Rec. Mode	Date	Start	End
1	S-040	HQ	Daily	21:18	21:23
2	S-038	SP	Tuesday	21:18	21:48
3	S-028	HQ	Mon-Fri	22:08	22:23
4					
5					
6					

Press [OK] to program or [TIMER] to exit.

- 3 Press **OK** on the remote control.
→ The timer editor menu appears.

Item Editor

Source	S-040	▼
Rec. Mode	HQ	▼
Mode	Daily	▼
Date	Everyday	
Start	2 1 : 1 8	
End	2 1 : 2 3	

OK Cancel

Press [OK] to program or [TIMER] to exit.

- 4 Use **▲▼** keys to select an entry in the menu and press OK to enter its options.

TIPS: Ensure that there is sufficient space available on the DVD±R/±RW+R DL before recording. You have to finalize the DVD±R/+R DL, before it can be played on other players, see page 34.

Recording (continued)

{ Source }

– Use ▲▼ keys to select the recording input source.

{ Rec Mode }

– Use ▲▼ keys to select your option.
See pages 26~27 on “Recording settings - Default Recording Mode”).

{ Mode }

– Use ▲▼ keys to select { **Once** }, { **Daily** }, { **Weekly** }, { **Mon-Fri** } (Monday to Friday,) { **Mon-Sat** } (Monday to Saturday) or { **Weekend** } (Saturday and Sunday) recordings.

{ Date }

– Use ▲▼ keys or the **numeric keypad** **0-9** to enter the date for recording.

{ Start }

– Use ▲▼ keys or the **numeric keypad** **0-9** to enter the start time of recording.

{ End }

– Use ▲▼ keys or the **numeric keypad** **0-9** to enter the end time of recording.

- 5 Select in the menu and press **OK**.
→ The system will store the timer entry and return to the timer schedule list.

To cancel the above timer setting, select in the menu and press **OK**.

- 6 Press **TIMER** to exit the menu.
7 Insert a DVD±R/±RW into the DVD recorder.

- 8 Press **STANDBY-ON** to turn off the DVD recorder.
→ If the DVD recorder is not in standby mode, a warning message will appear three minutes before the recording starts.
→ If you ignore the warning message, the DVD recorder will automatically switch to standby mode to prepare for timer recording at the designated time.
→ After the timer recording is completed, the recorder will automatically switch to standby mode.

Helpful Hint:

– Set the timer recording one minute ahead of the program's start time. This helps to ensure the entire program is recorded as the disc requires about 30 seconds to prepare for recording.

Setting a timer recording from an external Cable Box/ Satellite

If you have a Satellite Receiver/Cable Box connected to this DVD recorder via the S-VIDEO (Y/C) or VIDEO (CVBS) (see page 13), follow the steps described below to program the recordings.

- 1 Select the channel you want to record at the Satellite Receiver/Cable Box.
2 Program the recording with the required information. Follow the steps 1~8 of “Timer Recording (manually)” on pages 29~30.

{ Source }


– Use **Source** keys to select { **TV Tuner** } as the input channel and press **OK** to confirm.

- 3 Leave the Satellite Receiver/Cable Box on for the recording.

TIPS: Ensure that there is sufficient space available on the DVD±R/±RW+R DL before recording. You have to finalize the DVD±R+R DL, before it can be played on other players, see page 34.

Changing/ Deleting a timer recording

- 1 Turn on the TV power. Select the correct Video In channel at the TV.
- 2 Press **TIMER** on the remote control.

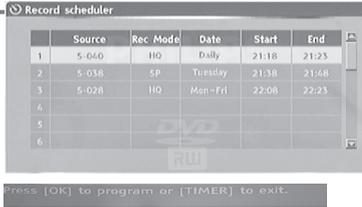

- 3 Use **▲▼** keys to select a timer program which you want to change/ delete.
- 4 **To delete the timer entry**, press **ADD/CLEAR** on the remote control.
- 5 To change the timer schedule, press **OK** to enter the timer editor menu of the selected timer program.



Select source for timer recording.

- 6 Select the entry field and make the necessary changes.
- 7 Once complete, select **OK** in the menu and press **OK** to save the changes.
- 8 Press **TIMER** to exit the menu.

Watching another TV channel during recording

You can watch another TV channel while recording is in progress by using the TV's remote control to change the TV channels.

Helpful hint:

– Remember to turn the TV back to its video input channel if you want to watch the TV channel through the DVD recorder or playback the recorded disc.

TIPS: Ensure that there is sufficient space available on the DVD±R/±RW/+R DL before recording. You have to finalize the DVD±R/+R DL, before it can be played on other players, see page 34.

Editing/Finalizing Recording

About Disc editing

This DVD recorder offers various disc edit options for various disc types. You can change the disc content and settings of a recorded DVD±R/±RW/+R DL from the disc editing menu. The edited contents may not be available if you play the disc on another DVD player.

The displayed options in the disc editing menu differ depending on the type of disc.

{ Play }

Start playing from the beginning of the disc.

{ Erase Disc } - DVD±RW only

Erase all the recordings in the disc.

{ Rename Disc }

Change the name of the disc.

{ Make Compatible } - DVD±RW only

Make the recording contents compatible on other DVD players.

{ Record New Title }

Start recording from the last empty title in the disc.

{ Overwrite Disc } - DVD±RW only

Start a new recording from the beginning of the disc; all the recorded content will be overwritten.


{ Lock/Unlock Disc } - DVD±RW only

Lock or unlock a disc to prevent accidental erasure or changes being made.

{ Finalize Disc } - DVD±R, DVD-RW and +R DL

Finalize the disc to enable playback on other DVD players. Further recording and editing to the disc are not allowed. It is not possible to unfinalize the disc.

Accessing disc editing menu

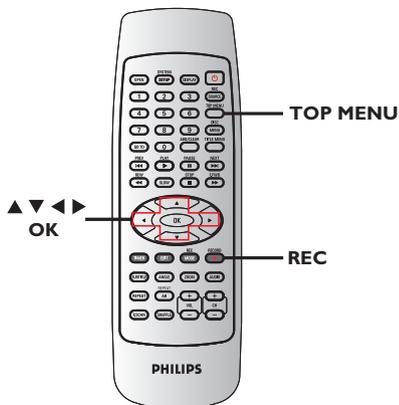

- 1 Insert a recorded DVD±R/±RW/+R DL into the DVD recorder.
→ The Index Picture screen appears on the TV.
- 2 Press **TOP MENU** on the remote control.
→ The disc editing menu appears. The edit options are varied for DVD±R, DVD±RW and +R DL.



- 3 Use **▲▼** keys to access different options and **OK** to select.
→ Instructions and explanation of the options are provided on the following pages.
- 4 To exit, press **TOP MENU** to go back to the disc Index Picture screen.

TIPS: No further recording and editing can be carried out on a finalized DVD±R/DVD-RW/DVD+R DL. Press **◀** to go back to the previous menu. Press **DISC MENU** to exit.

Rename disc

The original disc name is generated automatically by the DVD recorder. You can change the disc name by following the steps below.

- 1 Press **TOP MENU**, then use **▲▼** keys to select { **Rename Disc** } and press **OK**.
→ The keyboard screen appears.
- 2 Use **◀▶▲▼** keys to highlight a character on the keyboard and press **OK** to select.
→ The maximum input is up to 20 characters.
- You can use the following keys on the keyboard screen to edit your input:
 - BkSp** : to remove the character to the left of the cursor.
 - DELETE** : to remove the character to the right of the cursor.
 - SPACE** : to create a space between characters.
 - CAPS** : to toggle between upper and lower case characters.
 - CLEAR** : to clear the entry field completely.
- 3 To confirm your entry, select **OK** on the keyboard and press **OK**.
→ The info panel is now updated.
- To cancel the changes, select **EXIT** on the keyboard and press **OK**.

Erase disc (DVD±RW only)

This erases the content of the DVD±RW including those that was not recorded on this DVD recorder. Once the existing content is erased, it can be used for recording.

- 1 Press **TOP MENU**, then use **▲▼** keys to select { **Erase Disc** } and press **OK**.
→ A warning message will appear.
- 2 Select **YES** in the menu to proceed or **NO** to abort, then press **OK** to confirm.

Record a new title

This function allows you to start a new recording at the remaining empty space in the DVD±R/±RW/+R DL.

- 1 Press **TOP MENU**, then use **▲▼** keys to select { **Record a New Title** } and press **OK**.
- 2 Select the source you want to record from and press **REC ●** to start recording.

Overwrite disc (DVD±RW only)

This function allows you to start a new recording from the beginning of a DVD±RW regardless of the contents of the disc.

- 1 Press **TOP MENU**, then use **▲▼** keys to select { **Overwrite disc** } and press **OK**.
- 2 Select the source you want to record from and press **REC ●** to start recording.

TIPS: No further recording and editing can be carried out on a finalized DVD±R/DVD-RW/DVD+R DL. Press **◀** to go back to the previous menu.

Editing/Finalizing Recording (continued)

Lock/Unlock disc (DVD±RW only)

You can choose to protect the recorded DVD±RW in order to prevent accidental loss of recordings.

- 1 Press **TOP MENU**, then use **▲▼** keys to select { **Lock Disc** } and press **OK**.
→ The disc is locked for this DVD recorder only.
→ When the disc is locked, the option in the disc editing menu will change to { **Unlock Disc** }.
- 2 If you want to overwrite or edit on the protected disc, select { **Unlock Disc** }.

Finalize disc

(DVD±R, DVD-RW, DVD+R DL only)

- 1 Press **TOP MENU**, then use **▲▼** keys to select { **Finalize Disc** } and press **OK**.

Helpful Hint:

– There is no need for DVD+RW disc to do the finalization.

Playing your recordings (DVD±R/±RW/+R DL) on other DVD players

It is necessary to finalize a DVD±R, DVD-RW and DVD+R DL disc before you can play it on any other DVD player. Otherwise, the DVD±R or DVD-RW or DVD+R DL will only playback on this DVD recorder.

After a DVD±R, DVD-RW or DVD+R DL disc has been finalized, no further recordings or editing can be made to it. Make sure that you have completed all the recordings and editing before finalizing the disc.

- 1 Press **TOP MENU**, then use **▲▼** keys to select { **Finalize Disc** } and press **OK**.
→ A warning message will appear.
- 2 Select in the menu and press **OK** to start the process.
→ Finalization will take a few minutes. Do not try to open the disc tray or turn the power off as this may render the disc unusable.
- 3 Select to abort.

TIPS: No further recording and editing can be carried out on a finalized DVD±R/DVD-RW/DVD+R DL. Press **◀** to go back to the previous menu.

About title editing

You can change the individual title information in a recorded DVD±R/±RW/+R DL. If a DVD±R has been finalized, it cannot be edited.

The displayed options in the title editing menu differ depending on the type of disc.

{ Play Title }

Start playing a recording.

{ Erase Title } - DVD±RW only

Delete the title (recording).

{ Edit Title }

Access video editing menu.

{ Rename Title }

Change the name of the recording.

{ Overwrite Title } - DVD±RW only

Start a new recording, the existing title (recording) will be overwritten.

{ Append Title }

Insert a new recording to the last existing recording.

{ Overwrite Disc }

Overwrite from existing selected title onwards to the end of the disc.

Accessing title editing menu

- 1 Insert a recorded DVD±R/±RW/+R DL into the DVD recorder.
→ The Index Picture screen appears on the TV.
- During playback, press **DISC MENU** to access the Index Picture screen.
- 2 Use ▲▼ keys to highlight a title (recording), and press ►.
→ The title editing menu appears.



- 3 Use ▲▼ keys to access different options and **OK** to select.
→ Instructions and explanation of the options are provided in the following pages.
- 4 To exit, press ◀.

Editing video

This feature allows access to the video editing menu. See “About video editing” on pages 37~39 for more information.

- In title editing menu, use ▲▼ keys to select { **Edit Title** } and press **OK**.
→ The video editing menu appears.
→ The DVD recorder will play the selected title.

TIPS: No further recording and editing can be carried out on a finalized DVD±R/DVD-RW/DVD+R DL. Press ◀ to go back to the previous menu.

Editing/Finalizing Recording (continued)

Rename title

The original title name is automatically generated by the DVD recorder. You can give a new name to the title by following the steps below.

- 1 In title editing menu, use ▲▼ keys to select { **Rename Title** } and press **OK**.
→ The keyboard screen appears.
- 2 Use ◀▶ ▲▼ keys to highlight a character and press **OK** to select.
→ The maximum input is up to 20 characters.
- You can use the following keys on the keyboard screen to edit your input:
 - BkSp** : to remove the character to the left of the cursor.
 - DELETE** : to remove the character to the right the cursor.
 - SPACE** : to create a space between characters.
 - CAPS** : to toggle between upper and lower case characters.
 - CLEAR** : to clear the entry field completely.
- 3 To confirm your entry, select **OK** on the keyboard and press **OK**.
→ The info panel is now updated.
- To cancel the changes, select **EXIT** on the keyboard and press **OK**.

Erase title

You can delete a specific title (recording) from DVD±RW disc.

- 1 In title editing menu, use ▲▼ keys to select { **Erase Title** } and press **OK**.
→ A warning message will appear.
- 2 Select **YES** in the menu to proceed or **NO** to abort, then press **OK** to confirm.

Overwrite title (DVD±RW only)

This function allows you to record a new title from the beginning of the current title in the DVD±RW.

- 1 In title editing menu, use ▲▼ keys to select { **Overwrite Title** } and press **OK**.
- 2 Select the source you want to record from and press **REC ●** to start recording.

Overwrite from the selected title (DVD±RW only)

You can choose to overwrite only the recordings from a selected title to the end of the disc.

- 1 In video editing menu, use ▲▼ keys to select { **Overwrite Disc** } and press **OK**.
- 2 Select recording point, press “**REC**” key to start overwriting.

Append recording

This function allows you to append recording to the last existing title.

- 1 In title editing menu, use ▲▼ keys to select { **Append Title** } and press **OK**.
- 2 Press **REC SOURCE** to select the input channel to append.
- 3 Press **REC ●** to start append recording.
Warning! Once the recording has started, any prior recording from the point of the playback onwards will be overwritten.
- 4 To stop append recording, press **STOP ■**.

TIPS: No further recording and editing can be carried out on a finalized DVD±R/DVD-RW/DVD+R DL. Press ◀ to go back to the previous menu.

About video editing

After a recording has been made, this DVD recorder allows you to edit the video content. You can add/delete chapter markers, hide unwanted scenes, change the picture in the index picture screen and split one title (recording) into two.

When you playback a recording in video edit mode, the entire recording will be played back including hidden scenes.

The edit functions available in the disc editing menu are:

{ Title }

Select a title (recording) to play.

{ Chapter }

Select a chapter within the selected title.

{ Play }

Select different modes of playback.

{ Chapter Marker }

Insert a chapter marker in the recording or erase a chapter marker or erase all chapter marker.

{ Hide Chapter }

Hide the unwanted scene in the recording.

{ Index Picture }

Select a scene in the recording as the index picture screen.


{ Split Title }

Divide the recording into two under separate titles.

{ T-Elapsed:x:xx:xx }

Display the elapsed time.

Accessing video editing menu

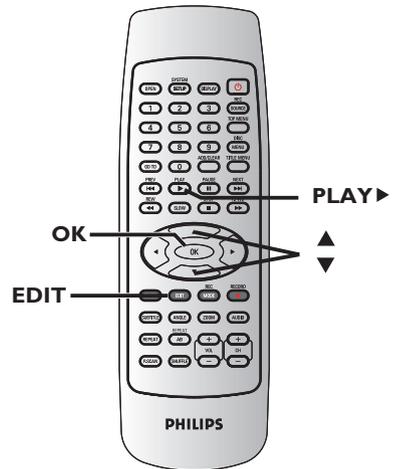

- 1 Insert a recorded DVD±R/±RW/+R DL disc into the DVD recorder.
→ The Index Picture screen appears on the TV.
- 2 Use ▲▼ keys to select a title (recording).
- 3 Press **PLAY** ► to start playback.
- 4 Press **EDIT** on the remote control.
→ The video editing menu appears.



Select title, To exit edit mode, press [EDIT].

- Note: DVD+R, DVD-R, DVD+R DL can not split title.
- 5 Use ▲▼ keys to access different options and press **OK** to select.
→ Instructions and explanation of the options are provided in the following pages.
 - 6 To exit, press **EDIT**.

TIPS: No further recording and editing can be carried out on a finalized DVD±R/DVD-RW/DVD+R DL. Press ◀ to go back to the previous menu.

Editing/Finalizing Recording (continued)

Selecting a title

It shows the current title and the total number of titles in the disc. It also allows you to select another title.

- 1 During playback, press **EDIT** to display the video editing menu, then use **▲▼** keys to select  { **Title** } and press **OK**.
- 2 Use the **numeric keypad 0-9** to key in a title and press **OK**.
→ The DVD recorder will play the selected title.

Selecting a chapter

It shows the current chapter and the total number of chapters in the title. It also allows you to select another chapter within the title.

- 1 During playback, press **EDIT** to display the video editing menu, then use **▲▼** keys to select  { **Chapter** } and press **OK**.
- 2 Use the **numeric keypad 0-9** to key in the chapter and press **OK**.
→ The DVD recorder will play the selected chapter.


Selecting a playback mode

You can fast forward/fast backward at two, four, sixteen, or thirty two times the normal playback speed. You also can slow forward at 1/2, 1/4, 1/8, or 1/16 time the normal playback.

- 1 During playback, press **EDIT** to display the video editing menu, then use **▲▼** keys to select  { **Play** } and press **OK**.
- 2 Use **▲▼** keys to select a playback mode and press **OK**.

Creating chapter marker

You can create a chapter by inserting chapter marker at any point within a title during playback. This will allow you to access a specific point in the recording easily or set a chapter you wish to hide.

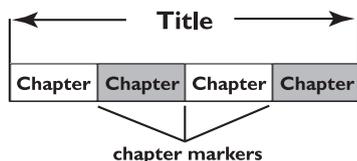

- 1 During playback, press **EDIT** to display the video editing menu, then use **▲▼** keys to select  { **Chapter Marker** } and press **OK**.
- 2 Use **▲▼** keys to select one of the options and press **OK** to confirm.

{ Insert Chapter Marker }

Select this to insert a new chapter marker at the current point of playback.

{ Delete Chapter Marker }

Select this to delete the current chapter marker (it refers to the closest marker before the current point of playback). The current chapter will then combine with the chapter before it.

{ Delete All Chapter Marker }

Select this to delete all the chapter markers in the current title.

TIPS: No further recording and editing can be carried out on a finalized DVD±R/DVD-RW/DVD+R DL. Press **◀** to go back to the previous menu.

Hiding an unwanted chapter

You can choose to hide certain scene from playback (e.g. skipping a commercial scene) or make it visible again.

- 1 Create a chapter marker at the scene you are going to hide. (See previous page on “Insert Chapter Marker”).
- 2 Select the chapter you want to hide and start playback. (See previous page on “Selecting a chapter”).
- 3 During playback, press **EDIT** to display the video editing menu, then use **▲▼** keys to select  { **Hide Chapter** } and press **OK**.
→ The current chapter will be hidden.
- If the video editing menu does not show, press **EDIT** on the remote control.

To unhide a chapter

- 1 Press **EDIT** on the remote control during playback.
→ The video editing menu appears.
→ While in editing mode, the hide chapter will play.
- 2 Use **▲▼** keys to select { **Unhide Chapter** } and press **OK**.
→ The current chapter will be visible during playback.

Helpful Hint:

– All the hidden chapters will be played back while in video editing mode.

Changing Index Picture

The index picture is the picture of the title you will see when the DVD recorder loads up the Index menu. Normally, the first frame of a recording is shown as the title's index picture.

- Press **EDIT** to display the video editing menu, then use **▲▼** keys to select  { **Index Picture** } and press **OK** to select the current scene as the index picture for the title.

Splitting a title (DVD±RW only)

You can divide the current title into two new titles. Each of these titles is characterized by its own index picture. **Warning!** Once a title is divided, it cannot be reversed.

- During playback, press **EDIT** to display the video editing menu, then use **▲▼** keys to select  { **Split Title** } and press **OK** to divide the title at the current playback position.
→ A new title will be shown at the Index Picture screen.

Playback

Playable discs

Using this DVD Recorder, you can play and record on the following discs:

Recording and Playback

DVD±RW

(DVD Rewritable); can be recorded on over and over.



DVD±R

(DVD Recordable); can be recorded only once.



DVD+R DL

(DVD+R Double Layer); can be recorded only once.



Playback only:

DVD Video (Digital Versatile Disc)



CD-RW (CD-Rewritable)
Audio/ MP3/ JPEG contents



CD-R (CD-Recordable)
Audio/ MP3/ JPEG contents



Audio CD (Compact Disc Digital Audio)



MP3/WMA-Disc



Video CD
(Formats 1.0, 1.1, 2.0)



Super Video CD

DivX Disc(DivX 3.11, 4.x, 5.x, 6)



SACD

Only support CD layer



IMPORTANT!

– If the inhibit icon (Error) appears on the TV screen when a button is pressed, it means the function is not available on the current disc or at the current time.

– DVD discs and players are designed with regional restrictions. Before playing a disc, make sure the disc is for the same region as your player.

– Do not push on the disc tray or put any objects other than discs on the disc tray. It may cause the disc player to malfunction.

Inserting a disc

- 1 Press **STANDBY-ON** to turn on the DVD recorder.
- 2 Press **OPEN CLOSE**  on the front of the DVD recorder.
→ The disc tray opens.
- 3 Carefully place the disc into the tray with the label facing up, then press **OPEN CLOSE** .
→ Make sure the disc label is facing up. For double-sided discs, load the side which you want to play facing down.
- 4 Turn on the TV power. Select the correct Video In channel at the TV (see page 23).
- 5 Playback will start automatically or a dialog will appear on the TV (see next page).

TIPS: Some discs cannot be played on this DVD recorder due to the configuration and characteristics of the disc, or due to the condition of recording and authoring software.

Starting disc playback

- Playback will begin automatically. If the disc has its own menu this will be loaded, otherwise the DVD recorder will launch an index screen.
- If the pin code entry dialog appears on the TV, this means that the parental control was activated for the inserted disc (see page 51).
→ Use the **numeric keypad 0-9** on the remote control to enter your pin code (password).
- For more playback features, see pages 44 ~ 47 “Additional Playback Features”.

Helpful Hints:

This set can support ISO-9660 and JOLIET file system. (Not support UDF)

Playing a DVD video disc

The DVD disc is usually formatted with a disc menu. You may have to make your selection (e.g., subtitle or audio language) within the disc menu.

- 1 Insert a DVD disc.

If the disc menu appears on the TV

- Use **numeric keypad 0-9** to input your selection or use ◀▶▲▼ keys to select a play option and press **OK** to start playback.

To select the previous or next chapter/title marker

- During playback, press **DISPLAY** on the remote control to access the DVD display menu. Then use ▲▼ keys to select { **Title** } or { **Chapter** } and input your title/chapter number using the **numeric keypad 0-9**.
- 2 To stop playback, press **STOP** ■.

Playing a (Super) Video CD

(Super) Video CDs may feature ‘PBC’ (Play Back Control). This allows you to play the video CDs interactively, following the menu on the display.

- 1 Insert a (Super) Video CD.

If the ‘PBC’ is on, the disc index menu will appear on the TV

- 2 Use **numeric keypad 0-9** to input your selection or to select a play option.
- Press **STOP** on the remote control to return to the previous menu.
- To turn on/off the Playback Control mode, press **DISPLAY** twice on the remote control during playback to access the VCD display menu. Then use ▲▼ keys to select { **PBC On** } or { **PBC Off** }.
- 3 To stop playback, press **STOP** ■.

Playing an audio CD

- 1 Insert an audio CD.
→ Playback starts automatically.
- 2 To stop playback, press **STOP** ■.

Playing a DVD±R/±RW/+R DL disc

- 1 Insert a DVD±R/±RW/+R DL disc.
→ The Index Picture screen appears.
- 2 Use ▲▼ keys to select a title and press **PLAY** ▶ to start playback.
- 3 To stop playback, press **STOP** ■.

Helpful Hint:

– If the message ‘BLANK’ appears on the display panel, this means that there are no recordings on this disc.

TIPS: Some discs cannot be played on this DVD recorder due to the configuration and characteristics of the disc, or due to the condition of recording and authoring software.

Playback (continued)

Playing a DivX disc

This DVD system supports the playback of DivX movies which you can copy from your computer onto a CD-R/RW, DVD+R/RW or DVD+R DL.

- 1 Insert a DivX disc.
→ The disc content menu appears.
- 2 Select the right subtitle file, then select the film.
- 3 Press **OK** to start playback.
- To select another subtitle file, press **DISPLAY** on the remote control.

Helpful Hints:


– Subtitle files with the following filename extensions (.srt, .smi, .sub, .ass, .ssa, .txt) are supported.

– It is normal to experience an occasional pixelation during MPEG-4/DivX playback due to poor clarity of digital contents during internet downloading.

– Support Divx 3.1 1/4/5.x and support playback of DivX 6.

Playing an MP3/WMA disc

- 1 Insert an MP3/WMA CD.
→ The disc content menu appears.

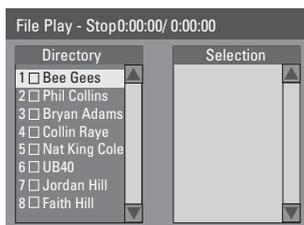

Note: It may require longer time for the DVD recorder to display the disc content menu on the TV due to the large number of songs/pictures compiled into one disc.

- 2 Use **▲▼** keys to navigate within the

menu and press **OK** to access the folder/album.

- 3 Use **▲▼** keys to select the track/file to play.
- To go to the previous menu, press **DISC MENU**.
- 4 To create a playlist, highlight the track/file and press **ADD/CLEAR**.
→ The selected tracks/files will appear on the right screen.
→ Use **◀▶** keys to toggle between the left and right screen.
- 5 Press **OK** to start playback.
- 6 During playback, you can press **◀◀ / ▶▶** to select the next/previous track.
- 7 To stop playback, press **STOP ■**.

Helpful Hints:

– Only the first session of a multi-session CD will play back.

– It is normal to experience an occasional “skip” while listening to your MP3 disc.


Playing a picture disc (or musical slide show)

You can display JPEG pictures in the selected roll automatically one after the other.

- 1 Insert a JPEG picture disc (CD, CD-R/RW, DVD±R/±RW).
→ The disc content menu appears.
- 2 Use **▲▼** keys to navigate within the menu and press **OK** to access the folder/album.
- 3 To create a playlist, highlight the track/file and press **Add/ Clear**.
→ The selected tracks/files will appear on the right screen.
→ To remove the track/file from the playlist, press **ADD/CLEAR**.


TIPS: Some discs cannot be played on this DVD recorder due to the configuration and characteristics of the disc, or due to the condition of recording and authoring software.

- 4 You can select to playback from the original disc content or from the playlist, just use ◀▶ keys to move to the correct screen before selecting the track/file for playback.

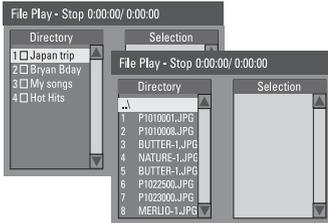

If the disc contains MP3/WMA music and JPEG picture files, you can start a musical slide show playback,

- Select an MP3/WMA file and press **OK** to start playback, then select a picture file in the menu and press **OK** to start the musical slide show playback.
- 5 During playback, you can press **DISPLAY** twice on the remote control to access various settings for the slide show playback.

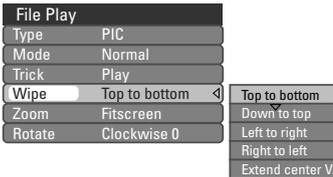

- Press **ANGLE** on the remote control repeatedly to choose a slide show playback animation.
 - The selected animation settings will appear in the top left corner of the TV screen.
- Press **ZOOM** on the remote control to enlarge the picture.
- 6 To stop playback, press **STOP** ■.

File format:

- The file extension has to be '.JPG,'

'JPE' or '.JPEG.'

- It can only display DCF-standard still pictures or JPEG pictures e.g. TIFF. It cannot play back moving pictures, Motion JPEG, progressive JPEG and other formats, or pictures in formats other than JPEG, or pictures associated with sound.
- It may require a longer time for the DVD recorder to display the disc content on the TV due to the large number of songs/ pictures compiled into one disc.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

Additional Playback Features

Changing to another title/ chapter/track

When a disc contains more than one track, title or chapter, you can change to a different track, title or chapter as follows.

During playback,

- Press **▶▶** to go to the next title/chapter/track.
- Press **◀◀** to return to the start of the previous title/chapter/track.
OR
- Use the **numeric keypad 0-9** to input the title/chapter/track number.
OR
- Press **TITLE MENU** to enter the title menu and use **▲▼** keys to select { **Title** } or { **Chapter** } and use **numeric keypad 0-9** to input the title/chapter/track number.

Helpful Hint:

– only for DVD disc.

Pausing playback and step play

- 1 During playback, press **||** to pause playback and display a still picture.
- 2 Press **||** again to move one frame forward.
- 3 To resume normal playback, press **PLAY ▶**.

Searching forward/backward

You can fast forward or fast reverse a disc at two, four, sixteen or thirty two times the normal playback speed.

- 1 During playback, press **◀◀** (REW) or **▶▶** (F.FWD) to switch to the search function.
→ The search status bar appears.
It displays the search speed:
2x,4x,16x,32x(backward or forward)
(DVD/VCD/CD/MP3/DivX);
→ The sound will be muted(DVD/VCD/WMA) or intermittent(CD).
- 2 Press **◀◀**(reverse) or **▶▶** (forward) to cycle through the search speeds.
- 3 To resume normal playback, press **PLAY ▶**.


Zooming in

This option allows you to enlarge the picture on the screen and pan through the enlarged picture.

- 1 Press **ZOOM** on your remote control to activate zoom : 150% or 200%.
- 2 Use **◀▶▲▼** keys to pan through the zoomed picture.
- 3 To exit, press **ZOOM** repeatedly until the picture returns to the normal size.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

Using TITLE options

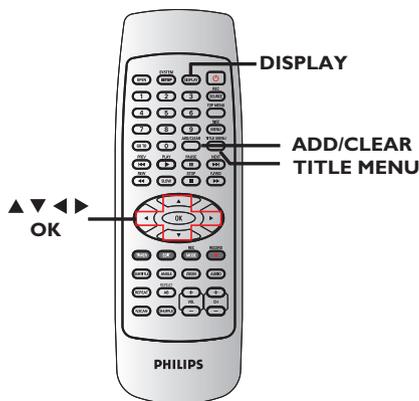

Selecting various repeat/shuffle functions

You can select various repeat play or random play mode during playback.

- 1 During disc playback, press **DISPLAY** twice on the remote control.
→ The TITLE menu appears.
- 2 Use ▲▼ keys to select { **Mode** } and press **OK**.
- 3 Use ▲▼ keys to select one of the repeat options.

{ Repeat A-B }

Select this to repeat the playback of a specific segment within a title/chapter/track. Press **OK** to mark the start and end of the segment you want to repeat.

{ Chapter Repeat }

Select this to repeat playback on the current chapter (DVD, DVD±R/±RW/+R DL only).

{ Repeat Track/Title }

Select this to repeat playback on the current track/title.

{ Repeat Directory }

Select this to repeat playback on the current folder/directory (MP3, JPEG, picture disc only).

{ Repeat Disc }

Select this to repeat playback on the entire disc.

{ Program }

Select this to program playback all the tracks within the disc.

{ Shuffle }

Randomly playback all the tracks within the disc (MP3/DivX/WMA and audio CDs).

{ Normal }

Select this to cancel the repeat mode and return to normal playback.

- 4 To cancel repeat playback, press **STOP** ■ or select { **Normal** } and press **OK**.

- 1 During playback, press **DISPLAY** twice on the remote control.
→ The TITLE menu appears on the TV.

▶ DVD	
MODE	NORMAL ▶
Trick Mode	PLAY
TITLE	02/06
CHAPTER	01/01
AUDIO	01/01-OTH
SUBTITLE	Off
ANGLE	01/01
Title	00:00:02/00:00:00

- 2 Use ▲▼ keys to select the setting you want to adjust.
→ Instructions and explanation of the options are provided in the following pages.
- 3 To exit, press **DISPLAY**.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

Additional Playback Features (continued)

Programming disc tracks

You can play the contents of the disc in the order you want by programming the tracks to be played.

- 1 Press **DISPLAY** twice on the remote control.
→ The TITLE menu appears.
- 2 Use **▲▼** keys to select { **Mode** } > { **Program** } and press **OK**.
→ The program menu appears.



- 3 If the disc is recorded with Titles/Folders/Albums, press **OK** to access the tracks/files/chapters.
 - Pressing **OK** at the highlighted track/file/chapter will start playback.
 - Use **◀▶** keys to toggle between the left and right screen.

To program your favourite track/file/chapter

- 4 Use **▲▼** keys to select the track/file/chapter to program and press **ADD/CLEAR** on the remote control.
→ The selected track/file/title will appear at the right screen.
→ The order on the right screen will be the order of program playback.

To remove the programmed item from your selection

- 5 Press **▶** key to move to the right screen. Select the track/file/chapter and press **ADD/CLEAR** on the remote control.

To start program play

- 6 Press **▶** key to move to the right screen and press **OK**.
→ Playback will start from the selected track/file/chapter according to the programmed sequence.

To exit program play

- 7 Press **STOP ■** to exit program play.

Changing the audio soundtrack language

This operation works only on DVDs with multiple soundtrack language or VCDs with multiple audio channels.

This function can also be accessed via the **AUDIO** button on the remote control.

- 1 During playback, press **DISPLAY** on the remote control.
→ The T/C menu appears.
- 2 Use **▲▼** keys to select { **Audio** } and press **▶** to access its options.
- 3 Use **▲▼** keys to select the audio language and press **OK** to confirm.
→ The languages may be numbered or abbreviated, such as “En” for English.
→ If the language selected is not available on the disc, the disc’s default setting for language will be used instead.

Helpful Hint:

– Some DVDs allow soundtrack language changes only via the DVD disc menu. To access the Disc Menu, press **DISC-MENU**.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

Additional Playback Features (continued)

Changing subtitle language

This operation works only on DVDs with multiple subtitle languages, you can change the language you want while playing the DVD.

This function can be also accessed via **SUBTITLE** key on the remote control.

- 1 Press **DISPLAY** twice on the remote control.
→ The **TITLE** menu appears.
- 2 Use **▲▼** keys to select { **Subtitle** } and press **▶** to enter the menu and find the different available options.
- 3 Use **▲▼** keys to select the subtitle and press **OK** to confirm.
→ The subtitle may be numbered or abbreviated, such as “En” for English.
→ If the subtitle selected is not available on the disc, the disc’s default setting subtitle will be used instead.

Helpful Hint:

– Some DVDs discs allow subtitle language changes only via the DVD disc menu. To access the disc menu, press **DISC-MENU**.

Switching camera angles

This option is only available with DVDs that contain sequences recorded from different camera angles. This allows you to view the picture from different angles.

This function can be also accessed via angle key on the remote control.

- 1 Press **DISPLAY** twice on the remote control.
→ The **TITLE** menu appears.
- 2 Use **▲▼** keys to select { **Angle** } and press **▶** to enter the menu.
→ The camera angles available for selection appears.
- 3 Use numeric keys(0-9) to select the camera angle you want to switch to, then press **OK** to confirm.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.


Time search

This option allows you to skip to a specific point in the current disc.

- 1 Press **GOTO** repeatedly on the remote control.
→ The **time search** screen appears.
- 2 Use the **numeric keypad (0-9)** to enter the time required and press **OK** to confirm.
→ Playback skips to the selected time.

DVD System Menu Options

Accessing System Menu - General

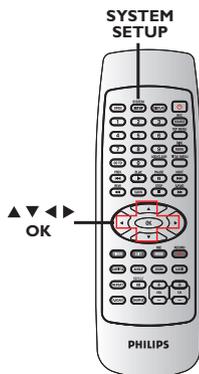

Screen Saver

A screen saver prevents damage to the TV screen by avoiding exposure to a static image for too long.

- 1 In '**System Setup-General**', use **▲▼** keys to highlight { **Screen Saver** } and press **OK**.

{ On }

Select this if you wish to turn off the TV screen, after playback has been stopped or paused for more than 5 minutes.

{ Off }

Select this to disable the screen saver.

- 2 Use **▲▼** keys to select a setting and press **OK** to confirm.

- 1 Press **SYSTEM-SETUP** on the remote control.
→ The system menu appears on the TV.
- 2 Use **▲▼** keys to select  { **System - General** } and press **▶** to access its options.



- 3 Use **▲▼** keys to select the setting you wish to change and press **OK** to confirm.
→ Instructions and explanation of the options are provided in the following pages.
- 4 To exit, press **SYSTEM-SETUP**.

TIPS: The underlined option is the factory default setting.
Press **◀** to go back to previous menu item. Press **SYSTEM-SETUP** to exit the menu item.

Progressive/ Interlace

Progressive scan delivers a higher picture quality than the standard interlaced TV channel scan. It only works when you have connected the DVD recorder Y Pb Pr jacks to your TV that supports the progressive video input. Otherwise, the image may not appear or will be distorted. Please check your TV user manual for more information.

- 1 In 'System Setup-General', use ▲▼ keys to select { **Progressive / Interlaced** } and press **OK**.

{ **Progressive** }

Select this to enable progressive scan feature.

{ **Interlaced** }

Select this to enable interlaced feature.

- 2 Use ▲▼ keys to select a setting and press **OK** to confirm.

Helpful Hints:

- Follow the instructions shown on the TV to confirm the selection (if any).
- If a blank/distorted TV screen appears, wait for 10 seconds for the auto recovery.

Video Output Format

The colour system of the DVD system, DVD and TV should match. Only then will it be possible to play a DVD on this system. Before changing the TV system, determine the colour system of your TV.

- 1 In 'System Setup-General', use ▲▼ keys to select { **Video Output Format** } and press **OK**.

{ **PAL** }

Select this if the connected TV has the PAL colour system. It will change the video signal of an NTSC disc and output it to PAL format.

{ **NTSC** }

Select this if the connected TV has the NTSC colour system. It will change the video signal of a PAL disc and output it to NTSC format.

- 2 Use ▲▼ keys to select a setting and press **OK** to confirm.

Helpful Hint:

- If a blank/distorted TV screen appears, wait for 10 seconds for the auto recovery.

Restore Factory settings


This will restore all the settings of this DVD Recorder, except for the PIN code.

- 1 In 'System Setup-General', use ▲▼ keys to select { **Restore Factory Settings** } and press **OK**.
→ A warning message will appear
- 2 Select in the menu to proceed or to abort, then press **OK** to confirm.

TIPS: The underlined option is the factory default setting.
Press ◀ to go back to previous menu item. Press **SYSTEM-SETUP** to exit the menu item.

DVD System Menu Options (continued)

Accessing System Menu - Playback

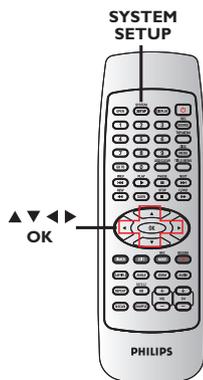

- 1 Press **SYSTEM-SETUP** on the remote control.
→ The system menu appears on the TV.
- 2 Use **▲▼** keys to select { **System Setup - Playback** } and press **▶** to access its options.



Select TV shape that suits your TV the best.

- 3 Use **▲▼** keys to select the setting you wish to change and press **OK** to confirm.
→ Instructions and explanation of the options are provided in the following pages.
- 4 To exit, press **SYSTEM-SETUP**.

TV Aspect Ratio

Set the aspect ratio of the DVD recorder according to the TV type you have connected. The format you select must also be available on the disc. If it is not, the setting for TV display will not affect the picture during playback.

- 1 In '**System Setup-Playback**', use **▲▼** keys to select { **TV Aspect Ratio** } and press **OK**.


{ **16:9** }

Select this for wide screen TV (frame ratio 16:9).



{ **4:3 panscan** }

Select this for a full-height picture with both side trimmed.

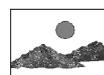

{ **4:3 Letterbox** }

Select this for a 'wide screen' display with black bands on the upper and lower portions of the TV screen.



- 2 Press **▲▼** to select a setting and press **OK** to confirm.

TIPS: The underlined option is the factory default setting.
Press **◀** to go back to previous menu item. Press **SYSTEM-SETUP** to exit the menu item.


Rating level

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children, or have certain discs played with alternative scenes.

- In 'System Setup-Playback', use ▲▼ keys to select { **Rating Level** } and press **OK**.
→ You will be prompted to enter your four-digit pin code.



- Use the numeric keypad 0-9 to enter your four-digit pin code.
→ When doing this for the first time, enter the default password '3308'.
→ The set rating level menu appears.

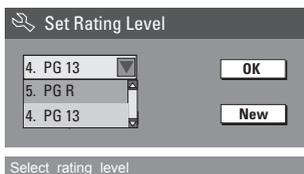

- If you forget your four-digit pin code, the default password is 3308.
- Use ▲▼ keys to select the top field and press **OK** to confirm.
- Use ▲▼ keys to select the desired parental level, then move to **OK** in the menu and press **OK** on the remote control to confirm.
→ To disable parental controls and allow all discs to play, select { **Cancel** }.

Rating explanations

{ Off }

– Parental Control is not active.

{ 8. Adult }

– Mature material; should be viewed only by adults due to graphic sexual material, violence or language.

{ 7. NC 17 }

– No children under age 17; not recommended viewing for children under age 17.

{ 5. PG R } ~ { 6. R }

– Restricted; recommended that parents restrict children under 17 from viewing or allow to view only when supervised by a parent or adult guardian.

{ 4. PG 13 }

– Unsuitable for children under age 13.

{ 3. PG }

– Parental Guidance suggested.

{ 2. G }

– General Audience; recommended as acceptable for viewers of all ages.

{ 1. Kid Safe } ~ { 2. G }

– Childsafe; acceptable for viewers of all ages.

- DVDs that are rated higher than the level you selected will not play unless you enter your four-digit pin code.

Helpful hints:

- This feature will not limit viewing if the disc manufacturer did not code the disc.
- VCD, SVCD, CD have no level indication, so parental control has no effect on these type of discs. This also applies to most illegal DVDs.
- Some DVDs are not coded with a rating though the movie rating may be printed on the Disc cover. The rating level feature does not prohibit play of such Discs.


TIPS: The underlined option is the factory default setting. Press ◀ to go back to previous menu item. Press **SYSTEM-SETUP** to exit the menu item.

DVD System Menu Options (continued)

Setting or changing the password

You need to enter your four-digit password to play a prohibited disc or if prompted for a pin code.

- 1 In 'System Setup-Playback', use ▲▼ keys to select { **Parental Rating Level** } and press **OK**.
→ You will be prompted to enter your four-digit pin code.

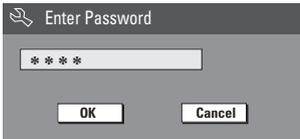

Enter password

- 2 Move to **New** in the menu and press **OK** to access new password menu.



Enter new password

- 3 Use the **numeric keypad 0-9** to enter your new four-digit pin code, then press ▼ to select the next entry field and enter the same pin code a second time.
- 4 Move to **OK** in the menu and press **OK** to confirm.
→ To abort the change, select **CANCEL** and press **OK**.

Digital Audio Output

After connecting the DVD recorder to your TV and other devices, you may need to change the digital output setting. Adjust the Digital Output only if you used the DVD recorder's coaxial jack.

- 1 In 'System Setup Playback', use ▲▼ keys to select { **Digital Audio Output** } and press **OK**.

{ ALL }

Select this if you use the COAXIAL jack to connect the DVD recorder to a stereo receiver that has a built in Multi-Channel decoder.

{ LPCM }

Select this if the connected audio equipment is not capable of decoding multichannel audio Dolby Digital and MPEG-2 multi - channel signals are converted to PCM (Pulse Code Modulation).

- 2 Use ▲▼ keys to select a setting and press **OK** to confirm.

TIPS: The underlined option is the factory default setting.
Press ◀ to go back to previous menu item. Press **SYSTEM-SETUP** to exit the menu item.

Accessing System Menu - Record

See pages 26~31 on “Recording settings”.

Accessing System Menu - Channel Setup

See pages 23~25 on “TV channel programming”

Accessing System Menu - Clock

Date and Time

See page 25 on “Setting the time & date”.

TIPS: The underlined option is the factory default setting.
Press ◀ to go back to previous menu item. Press **SYSTEM-SETUP** to exit the menu item.

Specifications

Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 10 bit, 54 MHz
- A/D converter: 10 bit, 27 MHz
- Picture enhancement: Progressive Scan

Sound

- D/A converter: 24 bit, 96 kHz
- A/D converter: 24 bit, 96 kHz
- Signal to noise ratio: 90 dB
- Crosstalk (1kHz): 80 dB
- Dynamic Range (1kHz): 80 dB

Video Recording

- Recording system: PAL, NTSC
- Compression formats: MPEG2
- Recording modes:
 - High Quality : HQ
 - Standard Play : SP
 - Standard Play Plus : SP+
 - Long Play : LP
 - Extended Play : EP
 - Super Long Play : SLP
- Audio compression: Dolby Digital

Video Playback

- Disc playback media: CD, CD-R/-RW, DVD, DVD-Video, DVD±R/±RW, SVCD, Video CD
- Compression formats: MPEG2, MPEG1, DivX
- Video disc playback system: PAL, NTSC

Audio Playback

- Disc playback media: CD, CD-R/-RW, MP3-CD, MP3-DVD, WMA
- Compression formats: Dolby Digital, MP3, MPEG2 Multichannel, PCM
- MP3 bit rates: 32~256 kbps and VBR

Still Picture Playback

- Disc formats: DVD+R/+RW, DVD-R/-RW, Picture CD
- Picture compression formats: JPEG
- Picture enhancement: Rotate

Storage Media

- Recording media: DVD±R, DVD±RW, DVD+R DL
- Recording speed: 2.4x

Tuner/Reception/Transmission

- TV system: PAL
- Aerial Input: 75 Ohm coaxial (IEC75)

Connectivity Rear

Connections:

- S-Video Out
- Video (CVBS) Out
- Audio left/right Out
- Digital audio out (coaxial)
- RF antenna in
- RF TV out
- Y, Pb, Pr out
- S-Video in
- Video(CVBS) in
- Audio left/right in

Front Connections:

- i.LINK DV in (IEEE 1394 4-pin)
- Video In
- Audio left/right In

Convenience

- Programming/Timer Enhancements: Daily/Weekly, Repeat Program, Manual Timer, One Touch Recording,
- Timer recording events: 20

Power

- Power supply: 110 – 240 V~; 50-60 Hz
- Consumption: 28 W (typical)
- Standby power consumption: < 4W

Cabinet

- Dimensions (wxhxd) : 427 x 48 x 318 mm
- Net Weight : < 3.5kg

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
No power.	<ul style="list-style-type: none"> - Press STANDBY-ON button on the front of the DVD recorder to switch on the system. - Make sure the AC outlet has power.
Remote control does not work.	<ul style="list-style-type: none"> - Aim the remote control directly at the sensor on the front of the DVD recorder (not towards TV). - Remove any obstacles between DVD recorder and the remote control. - Batteries are weak, replace the batteries. - Press REC SOURCE on the remote control to select an input source.
Disc does not play.	<ul style="list-style-type: none"> - Insert the disc with the label facing up. - Wrong region code. The DVD must be coded for ALL regions or Region 6 in order to play on this DVD recorder. - There is no recording on the disc or wrong disc type. Read chapter "Playback - Playable discs" for details. - Make sure the disc is not scratched or warped. Clean the disc or replace a new one. - Check if the disc is defective by trying another disc.
No sound.	<ul style="list-style-type: none"> - Check the audio connections, the red and white jacks. Read chapters "Getting Started - Connecting the audio cables" for details. - Set the Digital output correctly, based on the equipment you connected to the DVD recorder. Read chapter "Accessing System Menu - Digital Audio Output" for details.
Distorted sound coming from a connected hi-fi amplifier.	<ul style="list-style-type: none"> - Do not connect any cables from the DVD recorder to the 'Phono' input of your amplifier. - Do not connect the DVD recorder's Coaxial DIGITAL AUDIO OUT jack to an analog jack (red/white) on the connecting devices.
No picture.	<ul style="list-style-type: none"> - Switch on your TV and set to the correct Video In channel. Change the TV channel until you see the DVD screen. Read chapter "Getting Started - Finding your viewing channel" for details. - Check the video connection between the DVD recorder and the TV.

Troubleshooting (continued)

Problem	Solution
<p>The picture is distorted or black and white during playback.</p>	<ul style="list-style-type: none">- The disc does not match with the TV colour system standard (PAL/NTSC).- The disc is dirty, clean the disc.- Sometimes a small amount of picture distortion may appear. This is not a malfunction.- If you set the Record Mode to a low-quality speed, change to a higher-quality speed after you finish recording. Leaving the DVD recorder set to a low-quality speed may affect the picture quality when playing DVDs later. Read chapter "Recording - Recording settings" for details.- The recording can be made in colour only when the TV channels or the connected additional device sends a colour signal. In some situations, programs that are broadcast in black and white cannot be recorded.
<p>Recordings are not occurring as scheduled. New recordings cannot be made.</p>	<ul style="list-style-type: none">- The TV channel you want to record is not stored or you selected the wrong program number. Check TV channels stored.- If you adjust the clock after you set a timer recording, you have to reset the timer recording.- If the DVD recorder cannot read the disc, you cannot record.- You cannot use the DVD recorder to duplicate copyrighted materials (DVDs or videotapes) onto a DVD±R/±RW/+R DL.- A finalized DVD±R has been inserted. Change disc.
<p>No TV signal received from the DVD recorder.</p> <p>A DVD±R/±RW, DVD+R DL recorded on this DVD recorder does not play on a DVD player.</p>	<ul style="list-style-type: none">- Install the TV channel. Read chapter "Step 3 : TV channel programming" for details.- If a recording is too short, it is possible that a DVD player cannot detect it. Please observe the following 'minimum recording times'. Recording mode : {1 hour} - 5 minutes, {2 hours} - 10 minutes, {2.5 hours} - 13 minutes, {3 hours} - 15 minutes, {4 hours} - 20 minutes, {6 hours} - 30 minutes.- You have to finalize the DVD±R/R DL. Refer to chapter "Playing your recordings (DVD±R) on other DVD players" for details.
<p>Picture is fuzzy and brightness varies when copying DVD Video discs or prerecorded video cassettes.</p>	<ul style="list-style-type: none">- This happens if you try to copy DVDs or video cassettes that have been copy-protected. Even though the picture on the TV is fine, but the recording on a DVD±R/±RW/+R DL is faulty. This interference is unavoidable with copy-protected DVDs or video cassettes.- The DVD±R/±RW/+R DL has recording lifetime, please change a new disc for recording.

Analog: Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

Aspect ratio: The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

AUDIO OUT Jacks: Red and white jacks on the back of the system that send audio to another system (TV, Stereo, etc).

Chapter: Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

Component Video Out Jacks: Jacks on the back of the DVD System that send high-quality video to a TV that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc).

Digital: Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL. These jacks send audio through multiple channels, instead of just two channels as analog does.

Disc menu: A screen display prepared for allowing selection of images, sounds, subtitles, multi-angles, etc recorded on a DVD.

Dolby Digital: A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right, center and subwoofer).

Index Picture Screen: A screen that gives an overview of a DVD±RW, DVD±R or DVD+R DL. An Index Picture represents each recording.

JPEG: A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

MP3: A file format with a sound data compression system. "MP3" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. By using the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

MPEG: Motion Picture Experts Group. A collection of compression systems for digital audio and video.

Multichannel: DVDs are formatted to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

PBC: Playback Control. Refers to the signal recorded on video CDs or SVCDs for controlling playback. By using menu screens recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive playback and searching.

PCM: Pulse Code Modulation. A digital audio encoding system.

Parental control: Limits disc play according to the age of the users or the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

Region code: A system allowing discs to be played only in the region designated. This unit will only play discs that have compatible region codes. You can find the region code of your unit by looking on the product label. Some discs are compatible with more than one region (or ALL regions).

S-Video: Produces a clear picture by sending separate signals for the luminance and the color. You can use S-Video only if your TV has an S-Video In jack.

Surround: A system for creating realistic three-dimensional sound fields full of realism by arranging multiple speakers around the listener.

Title: The longest section of a movie or music feature on DVD. Each title is assigned a title number, enabling you to locate the title you want.

VIDEO OUT jack: Yellow jack on the back of the DVD system that sends the DVD picture video to a TV.

WMA: WMA is short for Windows Media Audio and refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 9.0 or Windows Media Player for Windows XP. Files are recognised by their file extension ".wma" or ".WMA".

特别功能



凭 Dolby Laboratories 的授权制造。
“Dolby” 和双 D 符号为 Dolby Laboratories 的商标。



DivX®、DivX Certified 和相关标志均为 DivX Networks, Inc 的商标且凭授权使用。

中文
(繁體)



这种连接亦称为“FireWire”和“IEEE 1394”，用于数位摄像机 (DV) 等高带宽的数位信号传输。影音频号通过电缆进行传输。



飞利浦DVD刻录机支持“双媒体”刻录, 可以在“+”和“-”碟片上进行刻录 (DVD+R/+RW, DVD+R DL, DVD-R/-RW)。

录制时该使用何种光碟？

您只能使用 DVD-R, DVD+R, DVD-RW, DVD+RW and DVD+R DL 光碟进行录制。DVD±R/±RW 是目前市场上相容性最高的 DVD 录制格式。这些格式与大多数现有的 DVD 播放机和电脑的 DVD 光碟机完全兼容。

DVD±R/±RW 光碟的容量如何？

4.7GB, 或相当于 6 片光碟。单片光碟上最高品质 (DVD 标准) 可录一小时, 最低品质 (VHS 标准) 可录六小时。选定录像模式后, 会标出单片光碟能够录制的时数。

DVD±R 和 DVD±RW 有何差异？

DVD±R 属于“可录制”光碟, DVD±RW 则属于“可删除”及“可重写”光碟。使用 DVD±R, 您可以在同一张光碟上录制多个段落, 但光碟被录满时无法再继续录制。DVD±RW 却让您在同一张光碟上重复录制上百次。

什么是 DV？

使用 DV (又称为 i.LINK), 您可以通过单一的 DV 电缆, 将 DV 摄像机和本 DVD 录像机连接, 即可传输影音、数据和控制信号。


- 本 DVD 录像机仅可与 DV 格式 (DVC-SD) 的摄像机相容, 不能与数位卫星调谐器和数位 VHS 录像机相容。
- 本 DVD 录像机一次仅可连接一台 DV 摄像机。
- 您无法经 DV IN 插孔外接的设备来控制本 DVD 录像机。

我可以从外接的播放机拷贝 VHS 录像带或 DVD 吗？

可以, 但仅限于不受版权保护的 VHS 录像带或 DVD。

什么是标题和章节？

DVD 光碟包含标题和章节, 与书的标题和章节类似。标题通常是指一部完整的影片, 影片再细分为数个章节或个别片段。

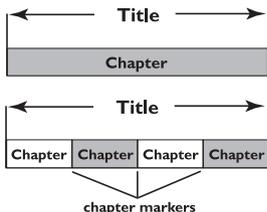

节目是以单一标题录制, 标题下可能含有一个或数个章节, 视录制的设定而定。

如何设定标题和章节？

每次开始录制新的节目时, 本 DVD 录像机会自动建立一个新标题。然后您就可以手动添加章节, 或以 5 分钟的间隔让其自动插入章节。

光碟“最终化处理”是做什么？

光碟最终化处理会将光碟锁定, 使其无法继续录制, 只有 DVD±R/+R DL 才需这个步骤。随后光碟即可与几乎任何 DVD 播放机相容。如欲在不要最终化处理的情况下关闭该光碟, 只需停止录制并将光碟退出即可。如果光碟内仍有空间, 您还可以继续录制。

录制的品质如何？

您可以在“一小时模式”(高品质)与“六小时模式”(VHS 品质)范围内, 选择数种品质等级。按动遥控器上的 REC MODE 按钮, 选择最适合您的用途与题材长度的品质等级。

Maximun Recording Time per disc		
1 hour	HQ(Hight Quality)	1 hour mode
2 hours	SP(DVD quality- Standard Play)	2 hours mode
2.5 hours	SP+(DVD quality- Stand play plus)	2.5 hours mode
3 hours	LP(VHS quality- Long play)	3 hours mode
4 hours	EP(VHS Extended Play)	4 hours mode
6 hours	SLP(VHS quality-Super Long Play)	6 hours mode

特别功能	58
------	----

常见问题解答	59
--------	----

保养和安全信息

设定	62
清洁光碟	62
关于回收	62

一般信息

简介	63
随附配件	63
区域码	63
版权声明	63

基本连接 - DVD 录放像机

步骤一: 连接天线	64
步骤二: 连接视频电缆	65
选项一: 使用视频 (CVBS) (良好影像品质)	65
选项二: 使用 S-VIDEO 插孔 (更好影像品质)	65
选项三: 使用色差视频插孔 (最好影像品质)	65
步骤三: 连接音频电缆	66
选项一: 使用音频电缆	66
选项二: 使用同轴电缆	66

选择性连接

连接至机顶盒或卫星接收器	67
连接至 VCR 或其他类似的装置	68
连接至 VCR 机顶盒和卫星接收器	69
连接摄像机和前方插孔	70
选项一: 使用 DV IN 插孔	70
选项二: 使用 S-VIDEO 或 VIDEO 输入插孔	70

主机

门盖后面的插孔	71
---------	----

遥控器	72-74
-----	-------

显示窗口	75
------	----

快速入门

步骤一: 放入电池	76
使用遥控器操作系统	76
步骤二: 查找收看频道	76
步骤三: 电视频道设定	77
自动电视频道搜寻	77
修改频道信息	78
电视频道排序	79
步骤四: 设定时间和日期	79

录像

录像光碟	80
录像设定	80
自动章节标记	81
预设来源	81
预设录影品质	81
手动录像	82
单键录像 - 自动关闭	82
关于定时录像	83
定时录像 (手动)	83
外接有线电视转换器/卫星接收器的定时录像设定	84
变更/删除定时录像	86
录像期间观看另一个电视频道	85

录像的编辑/最终化处理

关于光碟编辑	86
浏览光碟编辑菜单	86
重新命名光碟	87
删除光碟 (仅限于 DVD±RW)	87
录制新标题	87
重写光碟 (仅限于 DVD±RW)	87
锁定光碟/解除锁定 (仅限于 DVD±RW)	88
最终化处理光碟 (仅限于 DVD±R, DVD-RW和DVD+R DL)	88
其他DVD 播放机上播放录像光碟 (DVD±R/±RW/+R DL)	88
关于标题编辑	89

浏览标题编辑菜单	89
编辑录影	89
重新命名标题	90
清除标题	90
重写标题 (仅限于 DVD±RW)	90
从选定的标题开始重写 (仅限于 DVD±RW)	90
添加录影	90
关于录像编辑	91
浏览影像编辑菜单	91
选择标题	92
选择章节	92
选择播放模式	92
制作章节标记	92
隐藏不要的章节	93
变更索引影像	93
分割标题 (仅限于 DVD±RW)	93

播放

播放光碟	94
放入光碟	94
开始光碟播放	95
播放 DVD 影音光碟	95
播放超级影音光碟 (SVCD)	95
播放音乐光碟	95
播放 DVD±R/±RW+R DL 光碟	95
播放 DivX 光碟	96
播放 MP3/WMA 光碟	96
播放图片光碟 (或音乐幻灯片)	96-97

高级播放功能

转到另一个标题/章节/曲目	98
暂停播放和逐步播放	98
前进/倒转搜寻	98
放大	98
使用标题/章节选项	99
选择各种重复/随机播放的功能	99
设定光碟曲目	100
变更音讯声道语言	100
变更字幕语言	101
切换拍摄角度	101
时间搜寻	101
浏览系统菜单—普通	102
屏幕保护程序	102

DVD 系统菜单选项

视频输出格式	103
恢复原厂设定	103
工厂设置	103
浏览系统菜单—播放	104
电视长宽比	104
家长分级控制	105
设定或变更密码	106
数码音讯输出	106
浏览系统菜单—录像	107
浏览系统菜单—频道设定	107
浏览系统菜单—时钟	107

规格	108
----	-----

故障排除	109~110
------	---------

词汇表	111
-----	-----

警告！

高压电！请勿打开机盖。您会有触电的危险。

本机器内不存在客户可自行维修的部件。所有维修工作请交由专业人员处理。


设定

寻找合适的位置

- 将本机置于平稳坚固的表面。请勿将本机放在地毯上。
- 请勿将本机置于其他可能导致其温度升高的设备上面（如接收器或扩音器）。
- 请勿在机器下放置任何东西（如 CD 和杂志）。
- 将此设备安置在 AC 电源插座附近以及容易够着 AC 电源插头的地方。

通风空间

- 请将机器置于通风良好的地方，以免内部温度升高。机器后侧和上部请保持至少 10 公分（4.5 英寸）的空隙，左右两侧保持 5 公分（2.3 英寸）的空隙，以免过热。

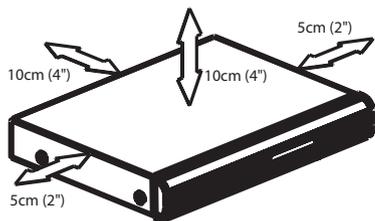


避免接触高温、湿气、水份和尘埃

- 避免让本机遭到滴水或溅水。
- 请勿在本机上放置任何危险物体（如盛满液体的物体、点燃的蜡烛）。

清洁光碟

有些问题（如影像冻结、声音中断、图像变形）属机内光碟不够清洁所致。欲避免这类问题，应定期清洁光碟。

清洁光碟时，请使用微纤维清洁布，由中间向外缘直线擦拭。

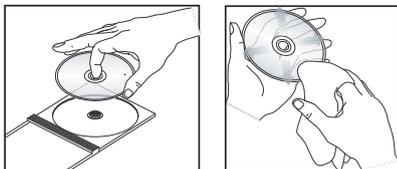

警告！

请勿使用苯、稀释剂、市售清洁剂或模拟光碟专用的抗静电喷雾剂等溶剂。由于本机的光学组件（镭射）与一般的 DVD 或 CD 播放机相比需要较高的功率，用 DVD 或 CD 播放机专用的清洁光碟来清洁本机可能损坏光学组件（镭射）。因此，请避免使用清洁光碟。

关于回收

本操作说明采用无污染纸张印制。本电子装置含有多种可回收材料。如果您要丢弃旧的机器，请将它送至回收中心。请遵守当地有关包装材料、废电池和旧设备的弃置规定。

简介

本飞利浦 DVD 录放像机可以录制电视节目或将摄像机所录制的影片复制到 DVD±RW 或 DVD±R/+R DL，并可播放预录的 DVD。本机所录下的影片可在大多数的 DVD 播放机和 DVD 光碟机上播放。DVD±R/+R DL 光碟必须进行最终化处理，才可以在其他的 DVD 播放机上播放。

使用本机之前，请抽空阅读此说明书。它包含了跟操作有关的重要信息及注意事项。

提示：

- 使用时如有疑问或遇到问题，请参阅“故障排除”一节。
- 如需进一步协助，请致电所在国家的客户支持服务中心。相关的电话号码和电邮地址请参阅保证书。
- 请参考产品后部或底部的类型标志牌上的标示信息和供电额定值。

随附配件

- 遥控器和电池（两节）
- 音频/视频（AV）连接线
- RF 同轴电缆
- 快速使用指南
- 用户手册

区域码


DVD 影片通常不会在世界各地同一时间发行，因此所有的 DVD 播放机均由特定区域码锁定。

区域码标示在本机背面。如果 DVD 上标示的是其它区域码，则无法在本机上播放。


区域	可以播放的 DVD
中国、Calcos Islands、Walls 和 Futuna Islands	 

版权声明

任何没有获得许可而对有版权保护的内容（包括电脑软件，广播，和音响录制等）进行的抄录行为可属版权侵犯，并构成刑事责任。此机器不应当被使用于以上行为。

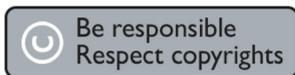

基本连接 - DVD 录放像机

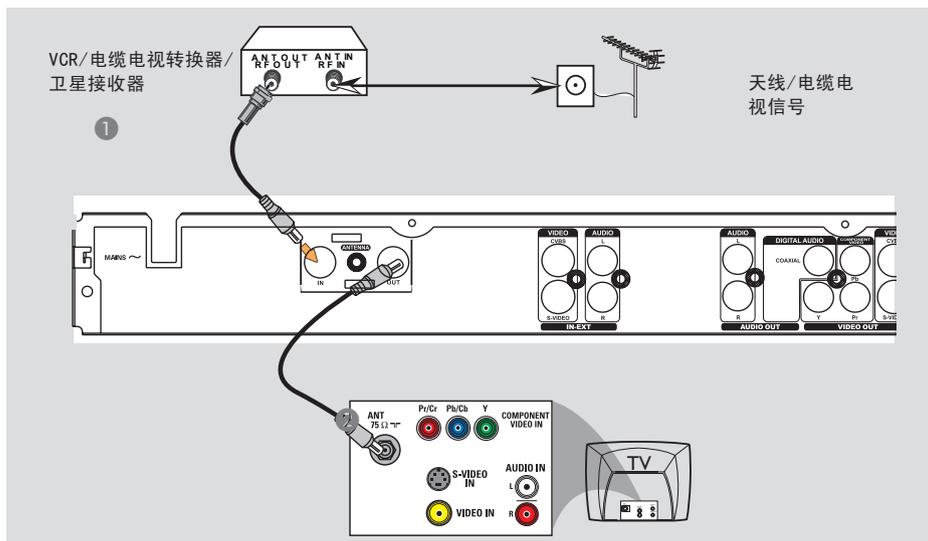


步骤一：连接天线

此连接可让您使用本 DVD 录放像机收看和录制电视节目。如果天线信号是经由 VCR、电缆电视转换器或卫星接收器连接的，请确定这些装置均有开启，才能收看或录制电缆电视节目。

- 如欲连接到 VCR 或机顶盒/卫星接收器，请参阅第 67-69 页，了解与电视的完整连接方式。

- 1 将现有的天线/电缆电视信号（或从电缆电视转换器/卫星接收器 {RF OUT 或 TO TV}）连接到 DVD 录放像机的 ANTENNA IN 插孔上。
- 2 使用随附的 RF 同轴电缆，连接 DVD 录放像机的 ANTENNA OUT 插孔和电视的天线输入插孔（VHF/UHF RF IN）。

提示： 在进行或变更任何连接之前，请确定拔下所有装置的电源插头。

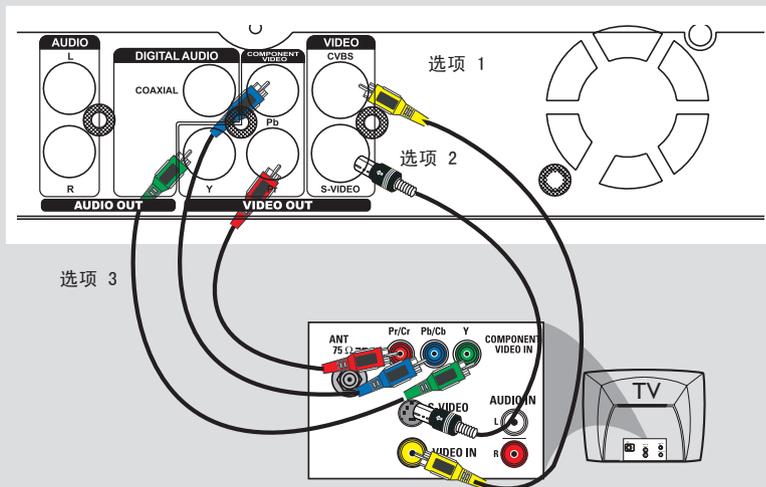

步骤二：连接视频电缆

此连接可让您观看 DVD 录放像机播放的光碟。只需选择下列其中一项进行视频连接

选项一：使用视频 (CVBS) 插孔 (良好影像品质)

- 使用随附的音频/视频电缆 (黄色接头)，连接 DVD 录放像机的 VIDEO (CVBS)-OUT 插孔和电视的视频输入插孔 (或标示为 A/V In、Video In 或 Composite)。

选项二：使用 S-VIDEO 插孔 (更好影像品质)

- 使用 S-VIDEO 电缆 (未提供)，连接 DVD 录放像机的 S-VIDEO 插孔和电视的 S-VIDEO 输入插孔 (标示为 R/C 或 S-VHS)。


选项三：使用色差视频插孔 (最好影像品质)

- ① 使用色差视频电缆 (红/蓝/绿 - 未提供)，连接 DVD 录放像机的 Y Pb Pr -OUT 插孔和电视对应的色差视频输入插孔 (标示为 Y Pb/Cb Pr/Cr 或 YUV (Y/Pb/Pr))。
- ② 如果您的电视可以接收逐行扫描信号，请参阅第 103 页，了解详细的逐行扫描设定。

重要!

逐行扫描视频品质仅可通过 Y Pb Pr 连接才能使用，且电视机需具有逐行扫描的功能。建议最好先完成 DVD 录放像机的安装，然后再启动逐行扫描功能。

提示： 在进行或变更任何连接之前，请确定拔下所有装置的电源插头。

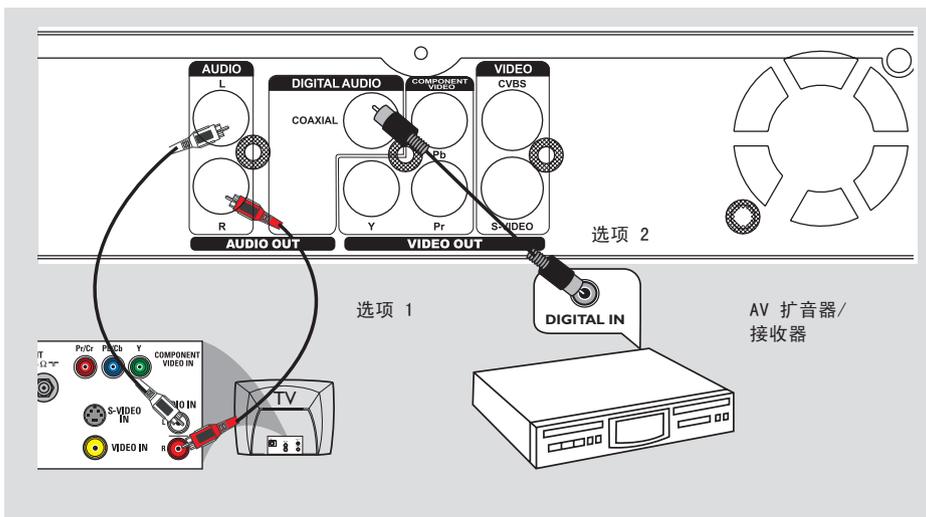

步骤三：连接音频电缆

此连接可让您听到声音。

选项一：使用音频电缆

您可以将 DVD 录放像机连接到双声道的立体音响系统或接收器，以享受立体音效系统。

- 使用随附的音频电缆（红/白接头），连接 **AUDIO L/R OUT**（音频输出）插孔和下列其中一个具有相同输入插孔的装置。
 - 立体音响系统（如电视或迷你音响系统）。
 - 双声道模拟立体声接收器。

选项二：使用同轴电缆

连接 DVD 录放像机和 AV 扩音器/接收器，即可享受多声道的环绕音效。


- 使用同轴电缆（未提供），连接 **COAXIAL** 插孔和具有相同输入插孔的装置（**COAXIAL IN** 或 **DIGITAL IN**）。
 - AV 扩音器/接收器，具有数位多声道的音效解码器。

在开始使用之前，请按照说明设定数码音频输出（请参阅第 106 页）。如果数位输出设定不符合您的立体声性能，立体声可能会发出强大刺耳的声音，或者无任何声音。

提示：

- 请勿将电视的音频输出插孔连接到 DVD 录放像机的 **AUDIO L/R (IN-EXT)** 插孔上，因为这会产生刺耳的噪音。

提示： 在进行或变更任何连接之前，请确定拔下所有装置的电源插头。

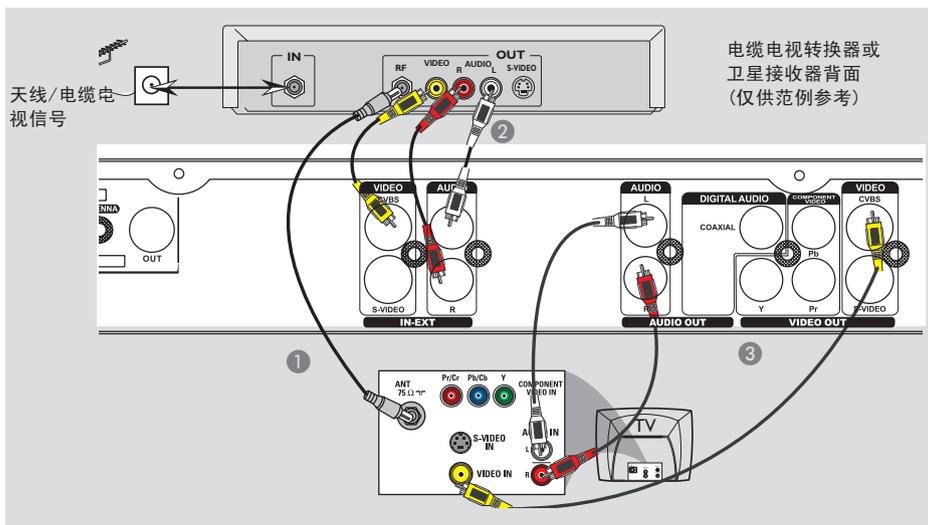

连接至机顶盒或卫星接收器

选项一

如果机顶盒/卫星接收器只有一个天线输出插孔 (RF OUT 或 TO TV)，请参阅第 64 页的“连接天线”，了解与电视的完整连接方式。


选项二

如果机顶盒/卫星接收器有多个视频/音频输出插孔，

- 1 请保留机顶盒/卫星接收器上现有天线和电视的连接。
- 2 使用音频/视频电缆，连接 DVD 录放像机的 VIDEO/AUDIO IN-EXT 和机顶盒/卫星接收器对应的 VIDEO/AUDIO 输出插孔。
- 3 使用音频/视频电缆，连接 DVD 录放像机的 VIDEO/AUDIO OUT 和电视对应的 VIDEO/AUDIO 输入插孔。

提示： 在进行或变更任何连接之前，请确定拔下所有装置的电源插头。

选择性连接 (继续)

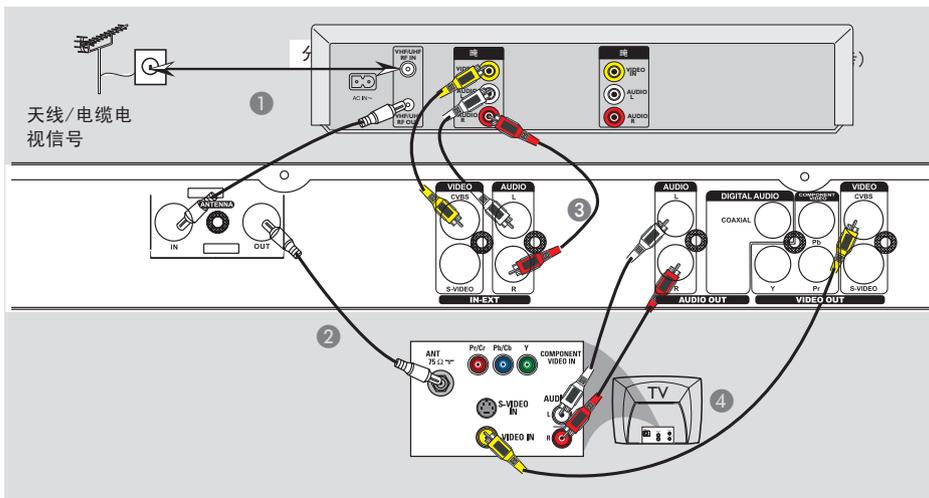

连接至 VCR 或其他类似的装置

此连接可让您从录像带转录到 DVD±R/±RW，而且如果 DVD 录放像机关闭的话，也可以使用 VCR 来播放。


- 1 连接天线/电缆电视信号到 VCR 的天线输入 (RF IN) 插孔，然后连接 VCR 的天线输出 (RF OUT) 插孔到 DVD 刻录机的 **ANTENNA IN** 插孔上。
- 2 使用随附的 RF 同轴电缆，连接 DVD 刻录机的 **ANTENNA OUT** 插孔和电视的天线输入插孔。

- 3 使用音频/视频电缆，连接 DVD 录放像机的 VIDEO/AUDIO IN-EXT 和 VCR 对应的 VIDEO/AUDIO 输出插孔。
- 4 使用音频/视频电缆，连接 DVD 录放像机的 VIDEO/AUDIO OUT 和电视对应的 VIDEO/AUDIO 输入插孔。

提示：

- 如果所连接的装置具有相同的 S-VIDEO 输入/输出插孔，您可以使用 S-VIDEO (Y/C) 插孔，代替视频 (CVBS) 插孔。此视频连接可提供较佳的影像品质。
- 多数市售的卡式录像带和 DVD 均有版权保护，因此不可转录。
- 将 DVD 录放像机直接连接至电视。如果在中间连接 VCR 或其他装置，由于 DVD 录放像机内含版权保护系统，影像品质可能不理想。

提示：在进行或变更任何连接之前，请确定拔下所有装置的电源插头。

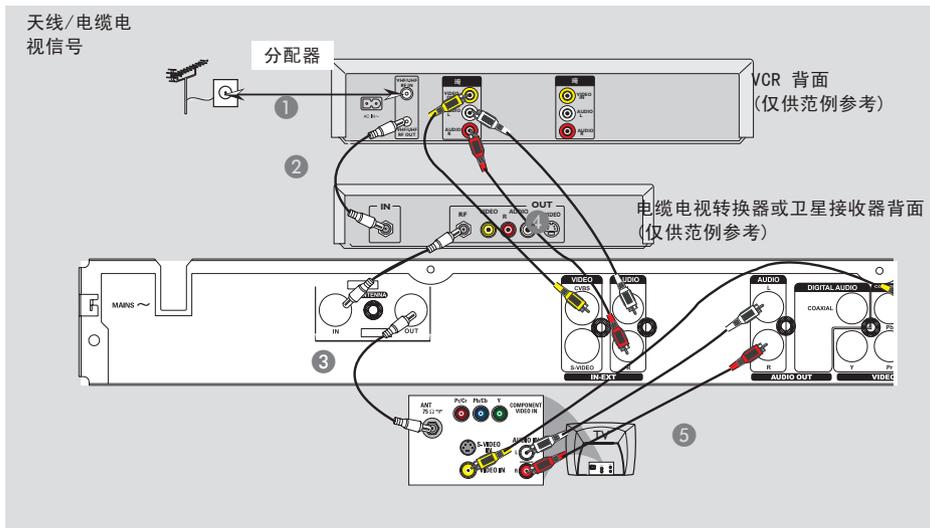


连接至 VCR 和机顶盒/卫星接收器

- 1 连接天线/有线电视信号到 VCR 的天线输入 (RF IN) 插孔上。
- 2 使用 RF 同轴电缆, 连接 VCR 的天线输出 (RF OUT) 插孔和机顶盒/卫星接收器的天线输入 (RF IN) 插孔, 然后, 连接机顶盒/卫星接收器的天线输出 (RF OUT) 插孔和 DVD 刻录机的 **ANTENNA IN** 插孔。
- 3 使用随附的 RF 同轴电缆, 连接 DVD 刻录机的 **ANTENNA OUT** 插孔和电视的天线输入插孔。
- 4 使用音频/视频电缆, 连接 DVD 录放像机的 **VIDEO/AUDIO IN-EXT** 和 VCR 对应的 VIDEO/AUDIO 输出插孔。
- 5 使用音频/视频电缆, 连接 DVD 录放像机的 **VIDEO/AUDIO OUT** 和电视对应的 VIDEO/AUDIO 输入插孔。

提示:

- 如果所连接的装置具有相同的 *S-VIDEO* 输入/输出插孔, 您可以使用 *S-VIDEO* (Y/C) 插孔, 代替视频 (CVBS) 插孔。此视频连接可提供较佳的影像品质。

提示: 在进行或变更任何连接之前, 请确定拔出所有装置的电源插头。

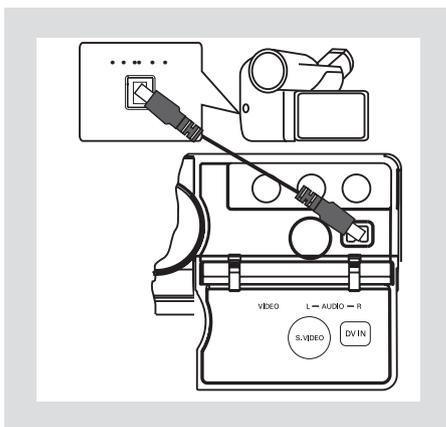

连接摄像机和前方插孔

您可以使用前方插孔来拷贝摄像机的录像记录。这些插孔位于右侧门盖的后面，便于连接摄像机。

选项一：使用 DV IN 插孔


如果您有 DV 或 D8 数位摄像机，即可使用此连接。DV 插孔符合 i.LINK 的标准，可提供最佳的影像品质。

- 使用 i.LINK 4 针 电缆 (未提供)，连接 DVD 录放像机的 **DV IN** 插孔和摄像机相应的 DV OUT 插孔。

在开始使用之前，重复按下遥控器上的 **REC SOURCE**，并选择“DV”作为输入通道。欲进行录像，请参阅第80~82 页。

提示：

- DV IN 插孔不支持与个人电脑的连接。
- 您无法通过 DVD 录放像机上的 DV IN 插孔，从 DVD 录放像机转录到摄像机。

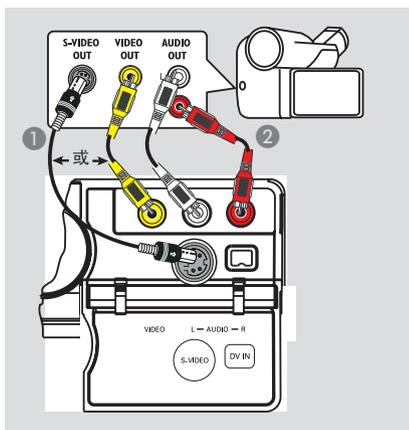

选项二：使用 S-VIDEO 或 VIDEO 输入插孔


如果您有 Hi8 或 S-VHS(C) 摄像机，即可使用 S-VIDEO 连接。此连接可提供较佳的影像品质。

或者，如果摄像机只有一个视频输出 (Composite Video、CVBS)，请使用 VIDEO 连接。

- 1 连接 DVD 录放像机前方面板上的 **S-VIDEO** 或 **VIDEO** 插孔和摄像机对应的 S-VHS 或视频输出插孔。
- 2 使用音频连接线 (红/白接头)，连接 DVD 录放像机前方面板上的 **AUDIO L/R** 插孔和摄像机的音频输出插孔。

在开始使用之前，重复按下遥控器上的 **REC SOURCE**，并选择“Front S-VIDEO”或“Front CVBS”作为输入通道，视连接的方式而定。欲进行录像，请参阅第 80~82 页。

提示：在进行或变更任何连接之前，请确定拔下所有装置的电源插头。

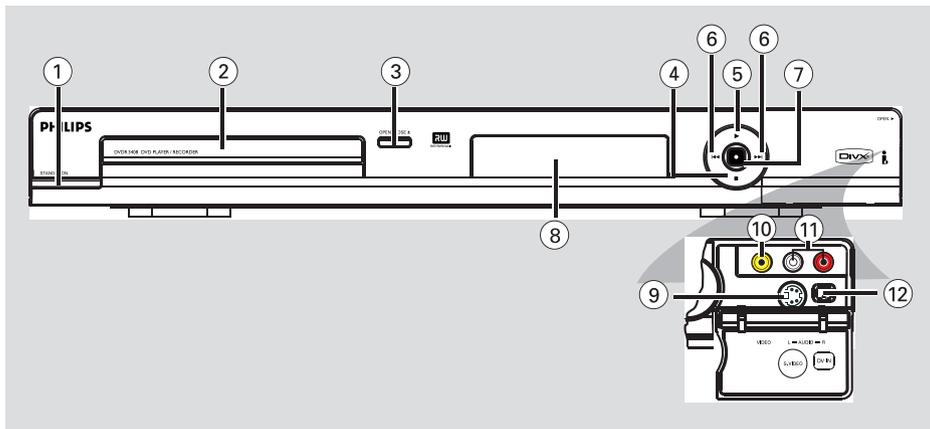


- ① **STANDBY-ON** (待机 - 开启)
- 启动或关闭 DVD 录放像机。
- ② **光碟托盘**
- ③ **OPEN CLOSE** (开启/关闭)
- 开启/关闭光碟托盘。
- ④ **STOP** (停止)
- 停止播放/录像。
- ⑤ **PLAY / PAUSE** (播放/暂停)
- 播放暂停/录像。
- ⑥ **⏮ ⏭** (上一曲/下一曲)
- 跳到前一个或下一个章节/曲目。
- ⑦ **RECORD** (录像)
- 开始录制目前的电视频道或目前的影像输入来源。
- 重复按下按钮, 即可设定 30 分钟间隔的单键录像功能。
- ⑧ **系统显示面板**
- 显示有关 DVD 录放像机目前状态的信息。

门盖后面的插孔

按照右边角落 **OPEN** 标签的指示, 打开门盖。

- ⑨ **S-VIDEO** (S 视频)
- SVHS/Hi8 摄像机或 SVHS/Hi8 录放像机的 S 视频输入。
按一下遥控器上的 **REC SOURCE** 并选择“Front S-Video”, 设定输入源。
- ⑩ **VIDEO** (视频)
- 摄像机或录放像机的视频输入。
按一下遥控器上的 **REC SOURCE** 键并选择“Front CVBS”, 设定输入源。
- ⑪ **L/R AUDIO** (左/右音频)
- 摄像机或录放像机的音频输入。
- ⑫ **DV IN** (数位摄像机输入)
- 数位摄像机或其他适合此连接装置的输入。
按一下遥控器上的 **REC SOURCE** 并选择“DV”, 设定输入源。

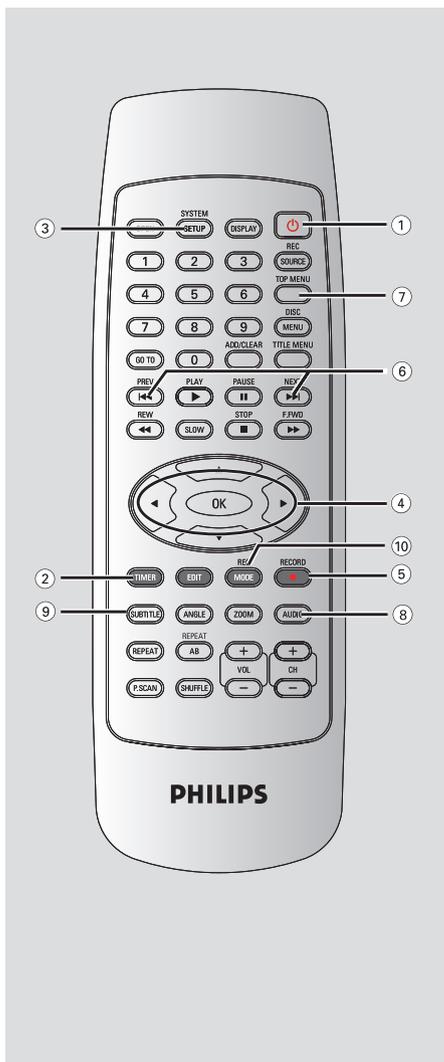

- ① **STANDBY-ON**  (待机 - 开启)
- 启动 DVD 录像像机或切换至待机模式。
- ② **TIMER** (定时录像)
- 进入/退出定时录像菜单。
- ③ **SYSTEM-SETUP** (系统 菜单)
- 进入/退出系统菜单。
- ④ **◀ ▶** : 左右键可以向左向右移动搜寻。
▲ ▼ : 上下键可以向上向下移动搜寻。
- ⑤ **REC**  (录像)
- 开始录制目前的电视频道或目前的影像输入来源。
- ⑥ **⏮ ⏭**
- 跳到前一个或下一个章节/曲目。
- ⑦ **TOP MENU** (编辑菜单) (仅限于 DVD±R/±RW/R DL)
- ⑧ **AUDIO** (音频)
- 选择音频语言 (DVD、VCD) 或声道。
- ⑨ **SUBTITLE** (字幕)
- 选择 DVD 的字幕语言。
- ⑩ **REC MODE** (录像模式)
- 在录像模式间切换:
1 小时、2 小时、2.5 小时、3 小时、4 小时和6 小时模式。
这会决定您在 DVD±R/±RW/R DL 上录制的品质和时间长短。

⑪ 数字键盘

- 选择要播放的章节/曲目号码。
- 选择录放像机的预设电视调谐频道。

⑫ REC SOURCE (录像输入源)

- 选择录放像机的输入来源。

⑬ DISC-MENU (光碟菜单)

- 浏览 DVD 的光碟菜单或 DVD±R/±RW/R DL 的索引画面。
- 切换PBC ON和OFF状态。

⑭ OK

- 储存/确认输入。
- 确认选取。

⑮ PLAY ▶ (播放)

- 播放光碟。

⑯ STOP ■ (停止)

- 停止播放/录像。

⑰ II

- 暂停播放或录像。
- 重复按下按钮, 将暂停画面逐次前进一帧。

⑱ EDIT (编辑) (仅限于 DVD±R/±RW/R DL)

- 进入/退出影像编辑菜单。

⑲ ZOOM (缩放)


- 放大电视画面的影像。

⑳ TITLE MENU (标题/章节)

- 进入/退出标题/章节菜单。

㉑ ADD/CLEAR (清除)

- 添加或清除设定菜单中的曲目/章节/文件。
- 清除定时录像。

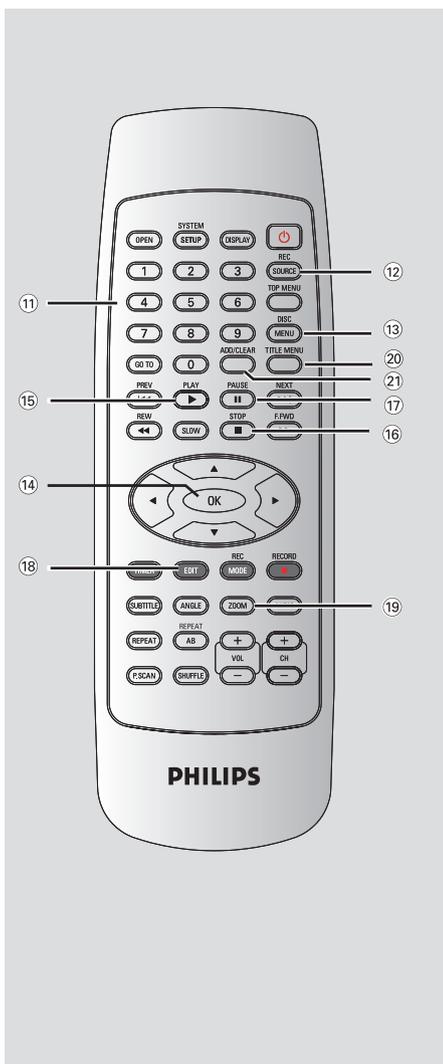

遥控器 (继续)

22 Open

- 打开/关闭碟片仓。

23 DISPLAY

- 显示或调节播放状态。

24 GO TO

- 按照标题/章节/时间进行搜索播放。

25 REW

- 快退，有四种模式：2X，4X，16X，32X。

26 F.FWD

- 快进，有四种模式：2X，4X，16X，32X。

27 SLOW

- 慢进，有四种模式：1/2，1/4，1/8，1/16。

28 ANGLE

- 对具有多角度镜头的碟片进行角度切换。

29 REPEAT

- 设置重复功能。

30 REPEAT AB

- AB段重复功能设置。

31 P.SCAN

- 切换本机视频输出的扫描方式（隔行/逐行）。

32 CH+/-


- 选择电视频道及外部信号输入源。

33 SHUFFLE


- 乱序播放功能。

34 VOL+/-

- 音量加/减。

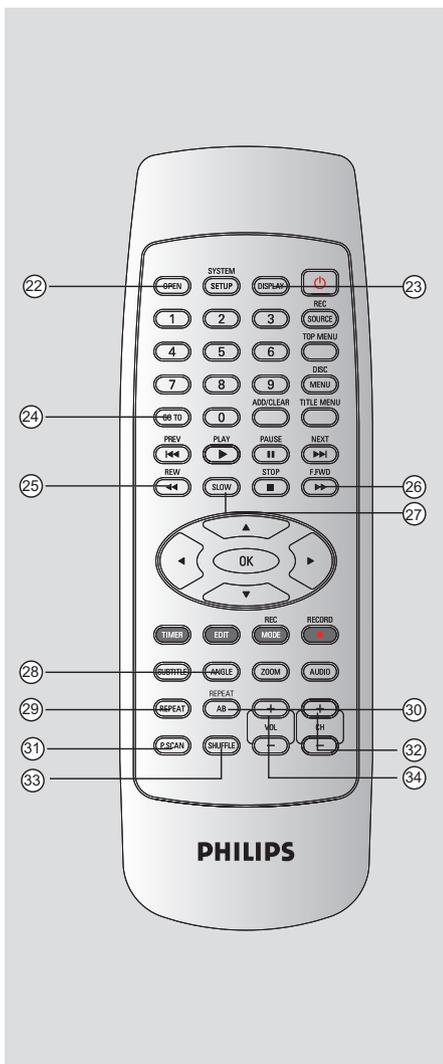


显示窗口

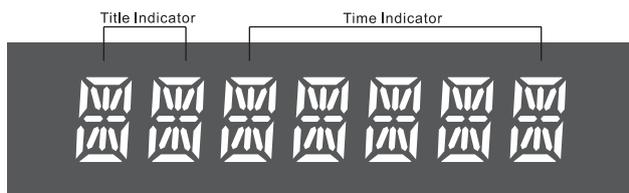

提示： 只有在数字同轴连接是时，通过直通模式支持DTS碟片。

步骤一：放入电池

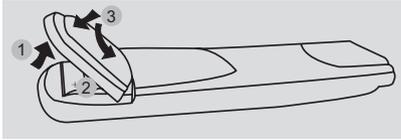


- 1 打开电池盒盖。
- 2 请按照盒内的正负极（+ -）指示放入两颗 R03 或 AAA 电池。
- 3 盖上电池盖。

警告！

- 如果电池耗尽或遥控器长时间不用，请将电池取出。
- 请勿将新旧电池或不同种类的电池混合使用。
- 电池含有化学物质，因此应妥善弃置。

使用遥控器操作系统

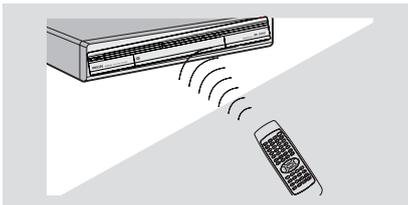

- 1 将遥控器直接对准前面板的传感器（IR）。
- 2 按一下遥控器上的 **REC SOURCE** 并选择所需的控制模式（如 Front-CVBS）。

步骤二：查找收看频道

- 1 在 DVD 录放像机上按一下 **STANDBY-ON** 将其启动。
- 2 打开电视机并设定正确的视频输入通道。您应该会看到蓝色的 DVD 背景画面。
 - 通常该通道是介于最低和最高之间的通道，可称为 FRONT、A/V IN 和 VIDEO。详情请参阅电视机的使用手册。
 - 或者，转到电视的第一频道，然后重复按“Channel Down”按钮，直到出现 Video In 通道。
 - 或者，电视遥控器可能有选择不同视频模式的按钮或开关。

重要！

在完成连接后初次启动 DVD 录放像机时，建议您先作几个基本设定。


请参阅下列页面有关使用系统菜单功能来设定电视频道和进行菜单语言设定。这将能大幅提升 DVD 录放像机的性能表现。

步骤三：电视频道设定

在 DVD 录放像机可以开始录制电视频道节目之前，您需要搜寻可以观看的电视频道，然后将这些频道储存在本机中。

注意：请确认 DVD 录放像机、电视、卫星接收器/有线电视转换器（如有）所有必要的连接均已妥善接好，且已开启。

当光碟托盘中没有光碟时，才可以变更调谐器的设定。

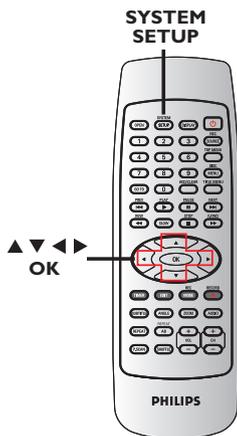

自动电视频道搜寻

这会自动扫描所有可以接收到的电视频道以及有线电视转换器/卫星接收器上的有线电视节目，并将这些频道储存在 DVD 录放像机上。

- 1 按一下遥控器上的 **SYSTEM-SETUP**。
→ 电视上会显示系统菜单。
- 2 使用 **▲▼** 键选取 { **System Setup - Channel Setup** }（系统设置-频道扫描）并按一下 **OK**。




- 3 使用 **▲▼** 键选取 { **Channel Search** }（扫台）并按一下 **OK**。
→ 开始自动搜寻电视频道。此步骤可能需要几分钟的时间。
搜寻完毕，电视上会显示搜寻到的频道数目。

提示：按一下 **◀** 回到前一个菜单项目。
按一下 **SYSTEM-SETUP** 退出菜单。

修改频道信息

您可以根据您的喜好设定电视频道，并调整电视频道的收讯和音效。

- 1 按一下 **SYSTEM-SETUP**。
→ 将出现系统菜单。
- 2 使用 **▲▼** 键选取 **{ System Setup - Channel Setup }** (系统设置-频道扫描) 并按一下 **▶**。
- 3 使用 **▲▼** 键选取 **{ Modify Channel Information }** (修改频道信息) 并按 **OK**。
→ 将出现频道菜单。

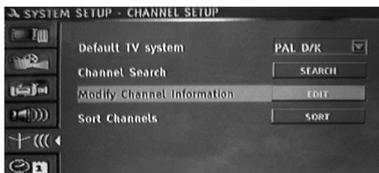

Modify Channel Information

- 4 使用 **▲▼** 键选择其中一项并按 **OK**。

{ Name } (名称)

使用**数字键盘 0-9** 选择要变更频道的预设号码。

- 使用 **▲▼** 键变更字母/号码，然后使用 **◀▶** 键选择不同的输入栏目并按一下 **OK** 确认。

{ Scan Mode } (扫台方式)

根据频道的位置或频率选择电视频道的搜寻模式。

- 使用 **▲▼** 键选择 **{ Channel }** (频道)、**{ S-Channel }** (特殊频道) 或 **{ Frequency }** (频率)，然后按 **OK** 确认。

{ Frequency } (频率)

显示目前电视频道的频率。

- 必要时，请使用 **◀▶** 键开始自动频率搜寻或按 **■** 键停止搜寻。

{ Sound Mode } (声音模式)

将电视系统的影像和音效调整至最低失真的情况。

- 使用 **▲▼** 键选择最适合的声音模式，然后按 **OK** 确认。
(详情请参阅本手册后面的“电视系统指南”章节)。

{ Skip } (跳台)

选择此项设定要略过的频道。您只能按下遥控器上相关的号码才可以使用跳过的频道。

- 如果要略过此频道，请使用 **▲▼** 键选择 **{ Yes }**，然后按 **OK** 确认。

{ Fine Tune } (微调)

如果收讯不良，请选择此项手动微调电视频道。

- 使用 **◀▶** 键调整频率。

- 5 完成后，在菜单内选择 **OK**，然后按 **OK** 确认并退出回到前一个菜单页面。
→ 如果不要储存变更，选择 **CANCEL** 并按 **OK**。

提示： 按一下 **◀** 回到前一个菜单项目。
按一下 **SYSTEM-SETUP** 退出菜单。

提示： 在中国大部分地区的电视默认制式为PAL D/K制式。如果你确信你所在地区支持PAL I制式，请将你的电视设置为PAL I制式。

电视频道排序

您可能不赞同各电视频道所分配设定号码的顺序。您可以使用此功能重新安排所有储存的电视频道。

- 1 按一下 **SYSTEM-SETUP**。
→ 将出现系统菜单。
- 2 使用 **▲▼** 键选取  { System Setup - Channel SETUP } (系统设置-频道扫描)，然后按一下 **▶**。
- 3 使用 **▲▼** 键选取 { Sort Channels } (频道排序)，然后按一下 **OK** 或 **◀**。
→ 将出现电视频道节目表。




- 4 使用 **▲▼** 键选取要变更的频道，然后按一下 **OK** 或 **▶**。
→ 选定的频道将移至画面右侧。
- 5 使用 **▲▼** 键将电视频道移至所需位置，然后再按一下 **OK**。
→ 选定的频道将会安插在目前位置之前。
- 6 重复步骤 4 至 5，直到将所有的电视频道按所需位置排好为止。

步骤四：设定时间和日期

如果 DVD 录放像机尚未正确设定时间和日期，请按照以下步骤手动设定时钟。

- 1 按一下 **SYSTEM-SETUP**。
→ 将出现系统菜单。
- 2 使用 **▲▼** 键选取  { System Setup - Clock } (系统设置-时间) 并按一下 **▶** 确认。

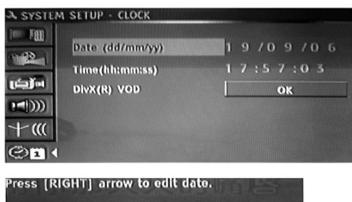

- 3 按一下 **OK** 设定 { Date (dd/mm/yy) } (日期：(日/月/年))。
- 4 使用 **▲▼** 键变更号码，并使用 **◀▶** 键选择不同的输入栏目，然后按 **OK** 确认。
● 或者，使用遥控器上的数字键盘 0-9 输入号码。
- 5 按一下 **OK** 确认。
- 6 移至 { Time (hh:mm:ss) } (时间 (时/分/秒))，然后重复步骤 4 至 5。

提示： 按一下 **◀** 回到前一个菜单项目。
按一下 **SYSTEM-SETUP** 退出菜单。

录像光碟

本 DVD 录放像机可使用几种可录制的 DVD 光碟格式：



DVD±RW (可重写 DVD)

- 可重写光碟指当现有资料被删除后，可多次录写的光碟。



DVD±R (可录制 DVD)

- 此种光碟只能录写一次。每次新的录像会接在之前所有录像的后面，因为现有的录像是无法被重写的。

- 任何 DVD±R 光碟只要未经最终化处理，便可进行编辑。而且还可以附加章节标记。

- 欲在其他 DVD 播放机上播放 DVD±R，该 DVD±R 必须进行最终化处理（请参阅第 88 页的“在其他 DVD 播放机上播放录制光碟 (DVD±R)”）。完成此程序后，该光碟就无法再增加任何数据了。



DVD+R DL DVD+R DL (DVD+R 双层)

- DVD+R 碟片仅用于单层刻录。唯一不同的是 DVD+R DL 的容量是 8.5G。在一张 DVD 碟片上有两个刻录层，这两层的刻录能在碟片的同一面实现，所以要完全不间断的刻录。


重要！ 不可录制影像

电视节目、影片、录像带、光碟和其他资料可能有版权保护，不可在本机上录制。

录像设定

预设录像设定可以设定自动章节标记、所需影像输入来源和录像模式。使用遥控器所做的任何变更仅适用于目前的录像设定，下次录像仍会使用预设的录像设定。

- 1 按一下遥控器上的 **SYSTEM-SETUP**。
→ 电视上会显示系统菜单。
- 2 使用 **▲▼** 键选择  { **System Setup - Record** } (系统设置-录制)，然后按一下 **▶** 确认。

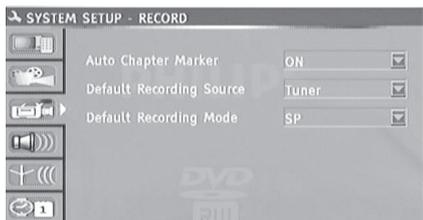

- 3 使用 **▲▼** 键选择您要变更的设定，然后按 **OK** 确认。
→ 下列页面将有选项的指示说明。
- 4 欲退出菜单，按一下 **SYSTEM-SETUP**。

提示： 按一下 **◀** 回到前一个菜单项目。
按一下 **SYSTEM-SETUP** 退出菜单。

自动章节标记

录像时，您可以在标题内插入章节标记。这样您就可以在录制好的光碟上浏览特定片段，就如同您在其他 DVD 上选择章节一样。

- 1 使用 ▲▼ 键选择 { Auto Chapter Marker } (自动分章节)，然后按一下 ► 浏览其中的选项。
- 2 使用 ▲▼ 键选择其中一项。

{ Off } (关闭)
关闭此功能。

{ On } (开启)
章节标记会在录像期间自动插入。其时间间隔为在单层碟中是5分钟一个章节；在双层碟中是十分钟一个章节。

- 3 按一下 OK 确认。

预设来源

您可以定义所需录像来源。当 DVD 录像像机开启时首先会选择预设来源。欲变更目前的录像来源，而不改变预设值，请按一下遥控器上的 REC SOURCE 按钮。

- 1 使用 ▲▼ 键选择 { Default Recording Source } (预设刻录模式)，然后按一下 OK 浏览其中的选项。
- 2 使用 ▲▼ 键选择其中一项。

{ Front CVBS } (前置 CVBS)
跟前方面板的 VIDEO 和 AUDIO L/R 插孔相连接的输入来源。

{ Front S-Video } (前置 S 视频)
跟前方面板的 S-VIDEO 和 AUDIO L/R 插孔相连接的输入来源。

{ Rear CVBS } (后置 CVBS)
跟背后面板的 VIDEO (CVBS)-IN-EXT 和 AUDIO L/R 插孔相连接的输入来源。

{ Rear S-Video } (后置 S 视频)
跟背后面板的 S-VIDEO (Y/C)-IN-EXT 和 AUDIO L/R 插孔相连接的输入来源。

{ DV } (数位摄像机)
跟前方面板的 DV IN 插孔相连接的输入来源。

{ Tuner } (电视频道)
来自电视节目的输入来源。

- 3 按一下 OK 确认。

预设录影品质

录像模式会限定录像的影像品质和光碟最长可容纳多少录像时间。您也可以按下遥控器上的 REC MODE 使用此功能。

- 1 使用 ▲▼ 键选择 { Default Recording Mode } (默认刻录质量)，然后按一下 ► 浏览其中的选项。
- 2 使用 ▲▼ 键选择下列其中一个录像模式。


Maximum Recording Time per disc		
1 hour	HQ(High Quality)	1 hour mode
2 hours	SP(DVD quality-Standard Play)	2 hours mode
2.5 hours	SP+(DVD quality- Stand play plus)	2.5 hours mode
3 hours	LP(VHS quality- Long play)	3 hours mode
4 hours	EP(VHS Extended Play)	4 hours mode
6 hours	SLP(VHS quality-Super Long Play)	6 hours mode

- 3 按一下 OK 确认。

提示：按一下 ◀ 回到前一个菜单项目。
按一下 SYSTEM-SETUP 退出菜单。

手动录像

使用此功能立即开始录像 (如录下播放中的电视节目)。

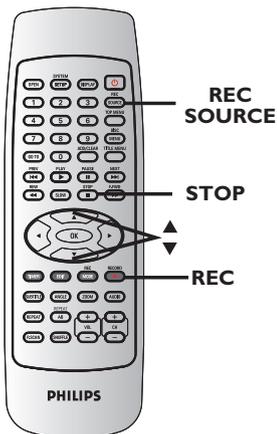

- 1 打开电视机电源。选择电视正确的视频输入通道。
- 2 在 DVD 录放像机中放入一片 DVD±R/±RW/+R DL。
- 3 按一下遥控器上的 **REC SOURCE** 并选择 { Tuner } (电视频道)，然后使用 **CH+** 和 **CH-** 键选择所要录像的电视频道。
- 欲从外接装置进行录像，重复按下 **REC SOURCE**，并选择跟连接至本 DVD 录放像机的插孔相符合的正确输入通道。

选择下列其中一个录像来源：

{ **Front CVBS** } (前置 CVBS)

跟前方面板的 VIDEO 和 AUDIO L/R 插孔相连接的输入来源。

{ **Front S-Video** } (前置 S 视频)

跟前方面板的 S-VIDEO 和 AUDIO L/R 插孔相连接的输入来源。

{ **Rear CVBS** } (后置 CVBS)
跟背后面板的 VIDEO (CVBS)-IN-EXT 和 AUDIO L/R 插孔相连接的输入来源。

{ **Rear S-Video** } (后置 S 视频)
跟背后面板的 S-VIDEO (Y/C)-IN-EXT 和 AUDIO L/R 插孔相连接的输入来源。

{ **DV** } (数位摄像机)

跟前方面板的 DV IN 插孔相连接的输入来源。

- 4 按一下 **REC** ● 开始录像。
→ 将接着 DVD±R/±RW/+R DL 上次录像的最后部份自动开始录制。
- 5 欲停止录像，按一下 **STOP** ■。

暂停录像

- 1 录像时，按一下 **II**。
→ 您可以使用此功能，避免录下广告片段。
- 2 欲继续录像，按一下 **REC** ●。

单键录像 - 自动关闭

- 1 请按照第 82 页的“手动录像”步骤 ① 至 ③ 进行。
- 2 按两次 **REC** ● 开始 30 分钟的录像。之后每按一次 **REC** ●，就会增加 30 分钟的录像时间。
→ 录放像机会在指定的结束时间停止录像，并会自动关闭。
- 如要停止录像，请按一下 **STOP** ■。

提示： 录像之前请确定 DVD±R/±RW/+R DL 有足够的空间。您必须先将 DVD±R/+R DL 最终化处理，才可以在其他播放机上播放，请参阅第88页。

- { **Source** } (输入源)
 - 使用 **▲▼** 键选择影像输入来源。
- { **Rec Mode** } (录像模式)
 - 使用 **▲▼** 键选择您的选项。请参阅第 80~81 页的“录像设定 - 预设录影品质”。
- { **Mode** } (模式)
 - 使用 **▲▼** 键选择 { **Once** } (一次)、{ **Daily** } (每天)、{ **Weekly** } (每周)、{ **Mon-Fri** } (星期一至五)、{ **Mon-Sat** } (星期一至六) 或 { **Weekend** } (星期六日) 录像。
- { **Date** } (日期)
 - 使用 **▲▼** 键或数字键盘 0-9 输入录像日期。
- { **Start** } (开始)
 - 使用 **▲▼** 键或数字键盘 0-9 输入录像开始时间。
- { **End** } (结束)
 - 使用 **▲▼** 键或数字键盘 0-9 输入录像结束时间。

- 5 在菜单上选择 **OK** 并按 **OK**。
→ 系统将储存定时录像的输入项目，然后回到定时录像的排程清单。

欲取消上述的定时录像设定，请在菜单上选择 **CANCEL** 并按 **OK**。

- 6 按一下 **TIMER** 退出菜单。
- 7 在 DVD 录放像机中放入一片 DVD±R/±RW/+R DL。

- 8 按一下 **STANDBY-ON** 关闭 DVD 录放像机。
→ 如果 DVD 录放像机不是处于待机模式，在开始录像之前将会出现警告讯息，并持续三分钟。
→ 如果您忽略此警告讯息，DVD 录放像机将自动切换至待机模式，以备在指定时间进行定时录像。
→ 在定时录像设定完成之后，刻录机自动切换到待机状态。

提示：

- 将定时录像设定比节目开始时间早一分钟。由于光碟约需 30 秒钟准备录像，这样可确保录下完整节目。

外接有线电视转换器/卫星接收器的定时录像设定

如果有通过 S-VIDEO (Y/C) 或 VIDEO (CVBS) 将卫星接收器/机顶盒连接到 DVD 录放像机 (请参阅第 67 页)，请按照以下步骤设定录像。

- 1 选择要在卫星接收器/有线电视转换器上录像的频道。
- 2 设定录像所需信息。请按照第 83 页的“定时录像 (手动)”步骤 1 至 9 进行。

{ **Source** } (来源)


- 使用 **Source** 键选择 { **TV Tuner** } 作为输入频道，然后按 **OK** 确认。

- 3 将卫星接收器/有线电视转换器开启以备录像。


提示：录像之前请确定 DVD±R/±RW/+R DL 有足够的空间。您必须先 will DVD±R/+R DL 最终化处理，才可以在其他播放机上播放，请参阅第88页。

变更/删除定时录像

- 1 打开电视机电源。选择电视正确的视频输入通道。
- 2 按一下遥控器上的 **TIMER**。
→ 将出现定时录像的排程清单。

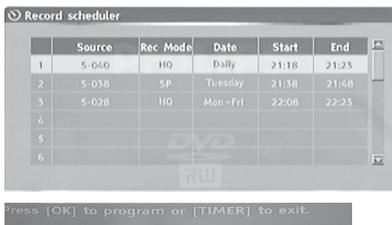

- 3 使用 **▲▼** 键选择要变更/删除的定时录像节目。
- 4 欲删除定时录像输入项目，请按一下遥控器上的 **ADD/CLEAR**。
- 5 欲变更定时录像排程，请按一下 **OK** 进入所选定时录像节目的定时录像编辑菜单。

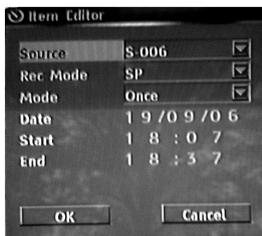

Select source for timer recording.

- 6 选择输入栏目，并进行必要的变更。
- 7 完成后，在菜单上选择 **OK** 并按 **OK** 储存变更。
- 8 按一下 **TIMER** 退出菜单。

录像期间观看另一个电视频道

在录像期间，您可以使用电视遥控器变更电视频道，观看另一个频道。

提示：

- 如果您想通过 DVD 录放像机观看电视频道或播放录制好的光碟，记得将电视转回其视频输入通道。

提示： 录像之前请确定 DVD±R/±RW/+R DL 有足够的空间。您必须先将 DVD±R/+R DL 最终化处理，才可以在其他播放机上播放，请参阅第 88 页。

录像的编辑/最终化处理

关于光碟编辑

本 DVD 录放像机为不同光碟类型提供多种光碟编辑选项。您可以从光碟编辑菜单中，变更已录制 DVD±R/±RW/+R DL 的光碟内容和设定。光碟经编辑后，如果在其它 DVD 播放机上播放，其内容可能无法读出。

光碟编辑菜单中所显示的选项会根据光碟类型而有所不同。

{ Play } (播放)
从光碟头开始播放。

{ Rename Disc } (重新命名光碟)
变更光碟的名称。

{ Erase Disc } (删除光碟)
- 仅限于 DVD±RW
删除光碟内的所有录制内容。


{ Record New Title } (录制新标题)
从光碟最后的空标题开始录像。

{ Overwrite Disc } (重写光碟)
- 仅限于 DVD±RW
从光碟头开始新的录像；所有先前录制的
内容将被重写。


{ Lock/Unlock Disc } (锁定光碟/
解除锁定) - 仅限于 DVD±RW
锁定光碟或解除锁定以避免发生意外删除
或变更。

{ Finalize Disc } (光碟最终化处理)
- 仅限于 DVD±R、DVD-RW和DVD+R DL
将光碟最终化处理，使其能在其它的 DVD
播放机上播放。此后无法再继续录像或编
辑该光碟。最终化处理无法取消。

浏览光碟编辑菜单

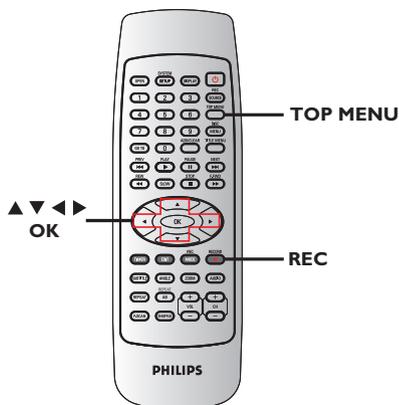

- 1 在 DVD 录放像机中放入一片录制好的 DVD±R/±RW/+R DL。
→ 电视上会显示索引影像的画面。
- 2 按一下遥控器上的 TOP MENU。
→ 将出现光碟编辑菜单。有各种 DVD±R /DVD±RW/+R DL 的编辑选项。

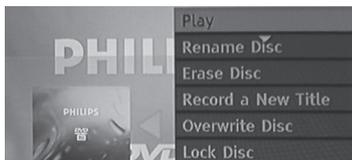

- 3 使用 ▲▼ 键浏览不同的选项并按 OK 进行选取。
→ 下列页面将有选项的指示说明。
- 4 欲退出，按一下 TOP MENU 回到光碟的索引影像画面。

提示：DVD±R/DVD-RW/+R DL 经过最终化处理后便无法再继续录制和编辑。
按一下 ◀ 回到前一个菜单项目。

重新命名光碟

光碟原本的名称是由 DVD 录放像机自动产生的。您可以按照以下步骤变更光碟的名称。

- 1 按一下 TOP MENU，使用 ▲▼ 键选择 { Rename Disc } (碟片重命名) 并按 OK。
→ 将出现键盘画面。
- 2 使用 ◀▶▲▼ 键在键盘上点选一个字符并按 OK 进行选取。
→ 最多可以输入20个 字符。
- 您可以使用以下键盘画面上的按键来编辑输入：
 - BkSp** : 删除光标左边的一个字符。
 - DELETE** : 移除光标前面的字符。
 - SPACE** : 在字符之间插一个空格。
 - CAPS** : 切换大小写。
 - CLEAR** : 删除整个输入栏目。
- 3 欲确认输入项目，在键盘上选择 **OK** 并按 OK。
→ 信息面板已立即更新。
- 欲取消变更，在键盘上选择 **EXIT** 并按 OK。

删除光碟 (仅限于 DVD±RW)

这会删除 DVD±RW 的内容，包括非在本 DVD 录放像机所录制的内容。一旦现有内容删除完毕后，即可再进行录像。

- 1 按一下 TOP MENU，使用 ▲▼ 键选择 { Erase Disc } (擦除碟片) 并按 OK。
→ 将出现警告讯息。
- 2 在菜单中选择 **YES** 继续进行或选择 **NO** 中止，然后按 OK 确认。

录制新标题

此功能可让您在 DVD±R/DVD±RW/+R DL 内剩余的空间录制新的内容。

- 1 按一下 TOP MENU，使用 ▲▼ 键选择 { Record a New Title } (录制一个新标题) 并按 OK。
- 2 选择要录像的来源并按一下 REC ● 开始录像。

重刻光碟 (仅限于 DVD±RW)

此功能可让您从 DVD±RW 光碟的起始处进行重新刻录，无论刻录碟的内容怎样。

- 1 按一下 TOP MENU，使用 ▲▼ 键选择 { Overwrite disc } (重新刻录光碟) 并按 OK。
- 2 选择要录像的来源并按一下 REC ● 开始录像。

提示： DVD±R/DVD-RW/+R DL 经过最终化处理后就无法再继续录制和编辑。
按一下 ◀ 回到前一个菜单项目。

锁定光碟/解除锁定 (仅限于 DVD±RW)

您可以选择保护录制好的 DVD±RW，以避免发生意外录像损失。

- 1 按一下 TOP MENU，使用 ▲▼ 键选择 { Lock Disc } (碟片加锁) 并按 OK。
→ 该片光碟将被锁定，仅限在本 DVD 录像像机上使用。
→ 当光碟被锁定时，光碟编辑菜单中的选项将变为 { Unlock Disc } (碟片解锁)。
- 2 如果您想在防护的光碟上进行重写或编辑，请选择 { Unlock Disc } (碟片解锁)。

最终化处理光碟 (仅限于 DVD±R, DVD-RW和DVD+R DL)

- 按一下 TOP MENU，使用 ▲▼ 键选择 { Finalize Disc } (封盘) 并按 OK。

提示：

- DVD+RW碟不需要做封盘。

在其他DVD 播放机上播放录像光碟 (DVD±R/±RW/+R DL)

DVD±R, DVD-RW或DVD+R DL 光碟必须先进行最终化处理，才可以在其他 DVD 播放机上播放。否则，该 DVD±R, DVD-RW或DVD+R DL 光碟 只能在本 DVD 录像像机上播放。

DVD±R, DVD-RW 或DVD+R DL 光碟在进行最终化处理后则无法再继续录制或编辑。在光碟进行最终化处理之前，请确定已完成所有的录制和编辑。

- 1 按一下 TOP MENU，使用 ▲▼ 键选择 { Finalize Disc } (封盘) 并按 OK。
→ 将出现警告讯息。
- 2 在菜单中选择 YES 并按 OK 开始进行。
→ 最终化处理需要几分钟时间。请勿开启光碟托盘或关闭电源，因为这样可能会使得该光碟无法使用。
- 3 选择 NO 退出。

提示：DVD±R/DVD-RW/+R DL 经过最终化处理后便无法再继续录制和编辑。
按一下 ◀ 回到前一个菜单项目。

关于标题编辑

您可以在录制好的 DVD±R/±RW/+R DL 中变更个别的标题信息。

如果 DVD±RW 已经进行最终化处理，则无法再编辑。

标题编辑菜单中所显示的选项会根据光碟类型而有所不同。

{ Play Title } (播放标题)
开始播放录像。

{ Edit Title } (编辑标题)
浏览影像编辑菜单。

{ Rename Title } (重新命名标题)
变更录像的名称。

{ Erase Title } (删除标题) - 仅限于 DVD±RW
删除标题 (录像)。

{ Overwrite Title } (重写标题)
- 仅限于 DVD±RW
开始新的录像，现有标题 (录像) 将会被重写。

{ Overwrite Disc } (重写光碟)
从光碟现有选取的标题开始重写到最后部份。

{ Append Title } (添加标题)
在上一次现有录像的最后部份插入新的录像。

浏览标题编辑菜单

- 在 DVD 录放像机中放入一片录制好的 DVD±R/±RW/+R DL。
→ 电视上会显示索引影像的画面。
- 播放期间，按一下 DISC MENU 浏览索引影像的画面。
- 使用 ▲▼ 键选取一个标题 (录像)，然后按一下 ►。
→ 将出现标题编辑菜单。



- 使用 ▲▼ 键浏览不同的选项并按 OK 进行选择。
→ 下列页面将有选项的指示说明。
- 欲退出，按一下 ◀。

編輯錄影

此功能可让您浏览影像编辑菜单。详情请参阅第91页的“关于录像编辑”。

- 在标题编辑菜单中，使用 ▲▼ 键选择 { Edit Title } (编辑标题) 并按 OK。
→ 将出现影像编辑菜单。
→ DVD 录放像机将播放选定的标题。

提示： DVD±R/DVD-RW/+R DL 经过最终化处理后便无法再继续录制和编辑。
按一下 ◀ 回到前一个菜单项目。

重新命名標題

标题原本的名称是由 DVD 录像像机自动产生的。您可以按照以下步骤为标题制订新名称。

- 1 在标题编辑菜单中，使用 ▲▼ 键选择 { **Rename Title** } (标题重命名) 并按 OK。
→ 将出现键盘画面。
- 2 使用 ◀▶▲▼ 键点选一个字符并按 OK 进行选取。
→ 最多可以输入20个 字符。
- 您可以使用以下键盘画面上的按键来编辑输入：
 - BkSp** : 删除光标左边的一个字符。
 - DELETE** : 移除光标前面的字符。
 - SPACE** : 在字符之间插一个空格。
 - CAPS** : 切换大小写。
 - CLEAR** : 删除整个输入栏目。
- 3 欲确认输入项目，在键盘上选择 **OK** 并按 OK。
→ 信息面板已立即更新。
- 欲取消变更，在键盘上选择 **EXIT** 并按 OK。

清除标题

您可以删除DVD±RW光碟上的特定标题（录像）。

- 1 在标题编辑菜单中，使用 ▲▼ 键选择 { **Erase Title** } (擦除标题) 并按 OK。
→ 将出现警告讯息。
- 2 在菜单中选择 **YES** 继续进行或选择 **NO** 中止，然后按 OK 确认。

重写标题 (仅限于 DVD±RW)

此功能可以让您从 DVD±RW 目前的标题片头开始录制一个新标题。

- 1 在标题编辑菜单中，使用 ▲▼ 键选择 { **Overwrite Title** } (覆盖标题) 并按 OK。
- 2 选择要录像的来源并按一下 REC ● 开始录像。

从选定的标题开始重写 (仅限于 DVD±RW)

您可以选择只从光碟选定的标题开始重写到最后部份。

- 1 在影像编辑菜单中，使用 ▲▼ 键选择 { **Overwrite Disc** } (覆盖整碟) 并按 OK。
- 2 选择您想要刻录的地方，按 REC 键开始刻录。

添加录影

此功能可让您接续上一次现有标题的最后部份添加新的录像。

- 1 在标题编辑菜单中，使用 ▲▼ 键选择 { **Record a New Title** } (录制一个新标题) 并按 OK。
- 2 按一下 REC SOURCE 选择要添加的输入频道。
- 3 按一下 REC ● 开始添加录像。
警告！当刻录一旦启动，所刻录的内容将被记载碟片上。
- 4 欲停止附加录像，按一下 STOP ■。

提示：DVD±R/DVD-RW+R DL 经过最终化处理后便无法再继续录制和编辑。
按一下 ◀ 回到前一个菜单项目。

关于录像编辑

录像结束后，本 DVD 录放像机可让您编辑录像的内容。您可以在索引影像画面中添加/删除章节标记、隐藏不要的画面、变更影像以及将标题（录像）一分为二。

当您在录像编辑模式中播放录像时，系统将会播放整个录制的内容，包括隐藏的画面。

光碟编辑菜单所提供的编辑功能如下：

{ Title } (标题)

选择要播放的标题（录像）。

{ Chapter } (章节)

在选定的标题内选择一个章节。

{ Play } (播放)

选择播放控制模式。

{ Chapter Marker } (章节标记)

在录像中插入一个章节或删除一个（或全部）章节标记。

{ Hide Chapter } (隐藏章节)

隐藏不要的录像画面。

{ Index Picture } (索引影像)

选择一个录像画面，作为索引影像的画面。


{ Split Title } (分割标题)

将录像分为两个个别的标题。

{ T-Elapsed: x:xx:xx } (标题播放: x:xx:xxx)

显示播放的时间。

浏览影像编辑菜单

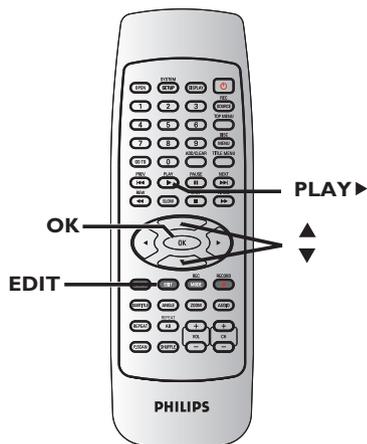

① 在 DVD 录放像机中放入一片录制好的 DVD±R/±RW/+R DL 光碟。

→ 电视上会显示索引影像的画面。

② 使用 ▲▼ 键选择一个标题（录像）。

③ 按一下 PLAY ► 开始播放。

④ 按一下遥控器上的 EDIT。

→ 将出现影像编辑菜单。



Select title, To exit edit mode, press [EDIT].

⑤ 使用 ▲▼ 键浏览不同的选项并按 OK 进行选择。

→ 下列页面将有选项的指示说明。

⑥ 欲退出，按一下 EDIT。

提示： DVD±R/DVD-RW/+R DL 经过最终化处理后便无法再继续录制和编辑。
按一下 ◀ 回到前一个菜单项目。

选择标题

系统将显示光碟内目前的标题和总标题数，同时还可让您选择另一个标题。

- 1 播放期间，按一下 **EDIT** 显示影像编辑菜单，然后使用 **▲▼** 键选择  { Title } (标题) 并按 **OK**。
- 2 使用数字键盘 **0-9** 输入标题并按 **OK**。
→ DVD 录放像机将会播放选定的标题。

选择章节

系统将显示标题内目前的章节和总章节数。您还可以在标题内选择另一个章节。

- 1 播放期间，按一下 **EDIT** 显示影像编辑菜单，然后使用 **▲▼** 键选择  { Chapter } (章节) 并按 **OK**。
- 2 使用数字键盘 **0-9** 输入章节并按 **OK**。
→ DVD 录放像机将播放选定的章节。


选择播放模式

你可以选择2, 4, 16和32倍速进行快进或快退播放。你可以选择1/2, 1/4, 1/8, 或1/16倍速进行慢放。

- 1 播放期间，按一下 **EDIT** 显示影像编辑菜单，然后使用 **▲▼** 键选择 { PLAY } (播放) 并按 **OK**。
- 2 使用 **▲▼** 键选择播放模式并按 **OK**。

制作章节标记

播放期间，您可以在标题的任何片段插入章节标记来制作章节。这样您就可以轻松浏览录像的特定片段或设定您要隐藏的章节。

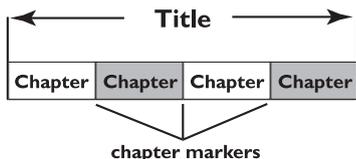

- 1 播放期间，按一下 **EDIT** 显示影像编辑菜单，然后使用 **▲▼** 键选择  { Chapter Marker } (章节标记) 并按 **OK**。
- 2 使用 **▲▼** 键选择其中一项并按 **OK** 确认。

{ Insert Chapter Marker } (插入章节标记)
选择此项在目前的播放点插入一个新的章节标记。

{ Delete Chapter Marker } (删除章节标记)
选择此项删除目前的章节标记 系指最靠近目前播放点之前的标记)。目前的章节将与之前的章节合并起来。

{ Delete All Chapter Marker } (删除所有章节标记)
选择此项删除目前标题内的所有章节标记。

提示： DVD±R/DVD-RW/+R DL 经过最终化处理后便无法再继续录制和编辑。
按一下 **◀** 回到前一个菜单项目。

隐藏不要的章节

您可以选择将特定片段（如略过广告片段）隐藏起来不播放，或让该片段再度显现。

- ① 在要隐藏的片段制作一个章节标记。（请参阅前一页的“插入章节标记”）。
- ② 选择要隐藏的章节并开始播放。（请参阅前一页的“选择章节”）。
- ③ 播放期间，按一下 **EDIT** 显示影像编辑菜单，然后使用 **▲▼** 键选择  { **Hide Marker** }（隐藏章节）并按 **OK**。
→ 目前的章节将被隐藏起来。
- 如果没有显示影像编辑菜单，按一下遥控器上的 **EDIT**。

欲取消隐藏章节

- ① 播放时按一下遥控器上的 **EDIT**。
→ 将出现影像编辑菜单。
→ 在编辑模式中，将会播放隐藏的章节。
- ② 使用 **▲▼** 键选择 { **Unhide Chapter** }（显示章节）并按 **OK**。
→ 目前的章节会在播放时出现。

提示：

- 所有隐藏的章节皆能在录像编辑模式中进行播放。

变更索引影像

索引影像是指当 DVD 录放像机载入索引菜单时您将会看到的标题影像。通常，录像的第一个画面会显示作为标题的索引影像。

- 按一下 **EDIT** 显示影像编辑菜单，然后使用 **▲▼** 键选择  { **Index Picture** }（标题图片）并按一下 **OK**，以选择目前画面为标题的索引影像。

分割标题（仅限于 DVD±RW）

您可以将目前的标题分成两个新的标题。每个标题均有各自的索引影像。

警告！ 标题一旦进行分割，就无法回复。

- 播放期间，按一下 **EDIT** 显示影像编辑菜单，然后使用 **▲▼** 键选择  { **Split Title** }（切分标题）并按 **OK** 在目前的播放位置分割标题。
→ 索引影像画面将会显示新的标题。

提示： DVD±R/DVD-RW/+R DL 经过最终化处理后便无法再继续录制和编辑。
按一下 **◀** 回到前一个菜单项目。

播放光碟

使用本 DVD 录放像机，您可以播放和录制下列光碟：

录像和播放

DVD±RW

(可重写 DVD)；
可反复录制。



DVD±R

(可录制 DVD)；
仅可单次录制。



DVD+R DL

(DVD)；can be recorded only once.



仅做播放

DVD Video

(数位多功能光碟)



CD-RW

(可重写光碟)
音乐/ MP3/
JPEG 内容



CD-R

(可录制光碟)
音乐/ MP3/
JPEG 内容



Audio CD

(数位音乐压缩光碟)



MP3/WMA Disc

(MP3 光碟)



Video CD

(影音光碟)
(格式 1.0、1.1、2.0)



Super Video CD

(超级影音光碟)



DivX Disc (DivX光碟)
(DivX 3.11, 4.x, 5.x, 6)



SACD

只支持CD层

重要！

- 按下按钮时如果电视画面上出现禁止图示 (错误)，即表示目前光碟上或目前时间下不提供该功能。
- DVD 光碟和播放机的设计有区域性限制。播放光碟之前，请确定光碟与您的播放机属于同一区域。
- 请勿推压光碟托盘或放入光碟以外的其他物件。这样可能会使光碟播放机发生故障。

放入光碟

- 1 按一下 **STANDBY-ON** 启动 DVD 录放像机。
- 2 按一下 DVD 录放像机前面的 **OPEN CLOSE** ▲。
→ 将开启光碟托盘。
- 3 小心将光碟放入托盘中，印标签面朝上，然后按一下 **OPEN CLOSE** ▲。
→ 请确定将光碟标签面朝上。
对于双面光碟，将要播放的一面光碟标签面朝上放置。
- 4 打开电视机电源。选择电视正确的视频输入通道 (请参阅第 76 页)。
- 5 将自动开始播放，或电视上会显示对话框 (请参阅下一页)。

提示：有些光碟由于光碟的配置和特性或因录制情况和制作软件而无法在本 DVD 录放像机上播放。

开始光碟播放

- 将自动开始播放。如果光碟本身备有菜单，系统将会载入该菜单，否则 DVD 录像机会开启索引画面。
- 如果电视上出现密码输入对话框，即表示该放入光碟有家长控制功能（请参阅第 105 页）。
→ 使用遥控器上的数字键盘 0-9 输入您的密码。
- 欲了解更多的播放功能，请参阅第 99-102 页的“高级播放功能”。

提示：本机可以支持 ISO-9660 和 JOLIET 文件系统。（不支持 UDF 文件系统。）

播放 DVD 影音光碟

DVD 光碟通常备有光碟菜单。您可能需要在此光碟菜单中进行选择（如字幕或声音语言）。

- 1 放入 DVD 光碟。

如果电视上显示光碟菜单

- 使用数字键盘 0-9 输入您的选择或使用 ◀▶▲▼ 键选择播放项目并按 OK 开始播放。

欲选择前一个或下一个章节/标题标记

- 播放期间，按两下遥控器上的 DISPLAY 菜单。使用 ▲▼ 键选择 { Title } (标题) 或 { Chapter } (章节)，然后使用数字键盘 0-9 输入标题/章节号码。
- 2 欲停止播放，按一下 STOP ■。

播放超级影音光碟 (SVCD)

超级影音光碟 (SVCD) 可能具有“PBC” (播放控制) 功能。此功能可让您以互动方式，按照显示的菜单播放影音光碟。

- 1 放入一片超级影音光碟。

如果“PBC”功能开启，电视上将会显示光碟索引的菜单

- 2 使用数字键盘 0-9 输入您的选择或选择播放项目。
- 欲开启/关闭播放控制模式，播放时请按两下遥控器上的 DISPLAY 菜单。然后使用 ▲▼ 键选择 { PBC On } (PBC开) 或 { PBC Off } (PBC关)。
- 3 欲停止播放，按一下 STOP ■。

播放音乐光碟

- 1 放入一片音乐光碟。
→ 将自动开始播放。
- 2 欲停止播放，按一下 STOP ■。
→ 显示面板上将会显示STOP。

播放 DVD±R/±RW/+R DL 光碟

- 1 放入一片 DVD±R/±RW/+R DL 光碟。
→ 将显示索引影像画面。
- 2 使用 ▲▼ 键选择标题，然后按一下 PLAY ▶ 开始播放。
- 3 欲停止播放，按一下 STOP ■。

提示：

- 如果显示面板上出现“BLANK” (空白) 的讯息，即表示该光碟内没有录像。

提示： 有些光碟由于光碟的配置和特性或因录制情况和制作软体而无法在本 DVD 录像机上播放。

播放 DivX 光碟

本 DVD 系统可支持播放从电脑上下载转码至 CD-R/RW、DVD+R/RW/+R DL 的 DivX 影片。


- 1 放入一片 DivX 光碟。
→ 将出现光碟内容菜单。
- 2 先选择所需播放的字幕文件，再选择影片。
- 3 按一下 **OK** 开始播放。
- 播放期间，请按 **DISPLAY** 选择您所需要的字幕。

提示：

- 本机可支持拥有以下后缀 (.srt、.ass、.ssa、.smi、.sub、.txt) 的字幕文件。
- 由于网络下载时数位内容的清晰度不佳，所以在播放 MPEG-4/DivX 期间偶尔出现马赛克是很正常的。
- 本机支持 Divx3.11/4/5.x，并且支持 Divx 6 播放。

播放 MP3/WMA 光碟

- 1 放入一片 MP3/WMA 光碟。
→ 将出现光碟内容菜单。

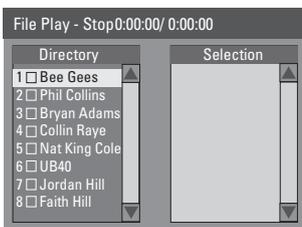

注意：由于光碟含有众多的歌曲/影像，因此 DVD 录放像机可能需要较长的时间，才能在电视上显示光碟的内容菜单。

- 2 使用 **▲▼** 键浏览菜单，然后按一下 **OK** 浏览文件夹/专辑。
- 3 使用 **▲▼** 键选择要播放的曲目/文件。
- 欲回到前一个菜单，请按一下 **DISC MENU**。

- 4 欲建立播放清单，请选取曲目/文件并按一下 **ADD/CLEAR**。
→ 选定的曲目/文件将会显示在右画面中。
→ 使用 **◀▶** 键切换左右画面。
→ 欲删除播放清单的曲目/文件，按一下 **ADD/CLEAR**。

- 5 按一下 **OK ▶** 开始播放。
- 6 播放期间，您可以按一下 **◀◀ / ▶▶** 选择下一个/前一个曲目。
- 7 欲停止播放，请按一下 **STOP ■**。

提示：


- 仅会播放多段落光碟的第一个段落。
- 收听 MP3 光碟时，偶尔会出现“跳跃”的情形是很正常的。

播放图片光碟 (或音乐幻灯片)

您可以在选定的片中自动连续播放 JPEG 图片。

- 1 放入一片 JPEG 图片光碟 (CD、CD-R/RW、DVD±R/±RW)。
→ 将出现光碟内容菜单。
- 2 使用 **▲▼** 键浏览菜单，然后按一下 **OK** 存取文件夹/专辑。
- 3 欲建立播放清单，请选取曲目/文件并按一下 **ADD/CLEAR**。
→ 选定的曲目/文件将会显示在右画面中。
→ 欲删除播放清单的曲目/文件，按一下 **ADD/CLEAR**。
- 4 您可以从原本的光碟内容或播放清单选择播放，只要使用 **◀▶** 键移至正确的画面，然后选择要播放的曲目/文件即可。


提示：有些光碟由于光碟的配置和特性或因录制情况和制作软件而无法在本 DVD 录放像机上播放。

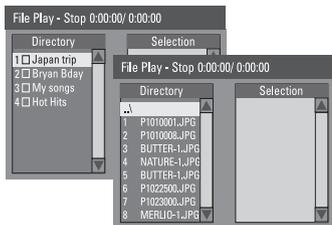

如果光碟含有 MP3/WMA 音乐和 JPEG 图片文件，您可以使用音乐幻灯片的播放形式。

● 选择一个 MP3/WMA 文件，按 OK 开始播放，然后在菜单中选择一个图片文件并按一下 OK 即可开始播放音乐幻灯片。

- 5 播放期间，您可以按两下遥控器上的 DISPLAY 浏览连续播放的各种设定。

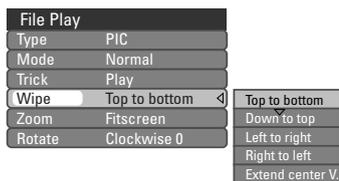

- 重复按下遥控器上的 ANGLE 并选择幻灯片播放动画。
→ 选定的动画设定将会显示在电视屏幕的左上角。
- 按一下遥控器上的 ZOOM 放大影像。
- 6 欲停止播放，请按一下 STOP ■。
可播放 JPEG 图片光碟

文件格式：

- 文件的后缀必须为“.JPG”、“.JPE”或“.JPEG”。
- 仅可显示 DCF 标准的静态图片或 JPEG 图片，如 TIFF。但无法播放移动影像、动态 JPEG、渐进式 JPEG 和其他格式，或是 JPEG 以外的影像格式或影音等。
- 由于光碟含有众多的歌曲/影像，因此 DVD 录放像机可能需要较长的时间，才能在电视上显示光碟的内容菜单。

提示： 此处所提及的操作功能可能不适用于某些光碟。
请务必参阅光碟的随附说明。

高级播放功能

转到另一个标题/章节/曲目

当光碟含有一个以上的曲目、标题或章节，您可以按照以下方式转到不同的曲目、标题或章节。

播放期间，

- 按一下 **▶▶** 到下一个标题/章节/曲目。
- 按一下 **◀◀** 回到上一个标题/章节/曲目的开始。

或者

- 使用**数字键盘 0-9** 输入标题/章节/曲目号码。
- 按**TITLE MENU**进入菜单，按**▲▼**键选择标题/章节，使用**数字键盘 0-9** 输入标题/章节/曲目号码。

提示：

- 本功能仅适合DVD碟。

暂停播放和逐步播放

- 1 播放期间，按一下 **||** 暂停播放並顯示靜止畫面。
- 2 再按一下 **||** 将会往前进一个画面逐帧播放。
- 3 欲继续一般播放，请按一下 **PLAY ▶**。

前进/倒转搜寻

您可以将光碟以一般播放速度的 2 倍、4 倍、16 倍或 32 倍进行快进或快倒。

- 1 播放期间，按一下 **◀◀** (快退) 或 **▶▶** (快进) 转到搜寻功能。
→ 将出现搜寻状态栏，并显示搜寻速度：2x, 4x, 16x, 32x (向后或向前) (适用于 DVD/VCD/CD/MP3/DivX)；
→ 声音将变成静音 (DVD/VCD/WMA) 或间歇 (CD) 的模式。
- 2 按一下 **◀◀** (快退) 或 **▶▶** (快进) 将循序变更搜寻速度。
- 3 欲继续一般播放，请按一下 **PLAY ▶**。


放大

此选项可让您放大屏幕影像并在放大影像中作平移调整。

- 1 按一下遥控器上的 **ZOOM** 启动放大功能：150% 或 200%。
- 2 使用 **◀▶▲▼** 键平移放大的影像。
- 3 欲退出，按一下 **ZOOM** 直到影像回到原来的大小为止。

提示： 此处所提及的操作功能可能不适用于某些光碟。
请务必参阅光碟的随附说明。

使用标题/章节选项

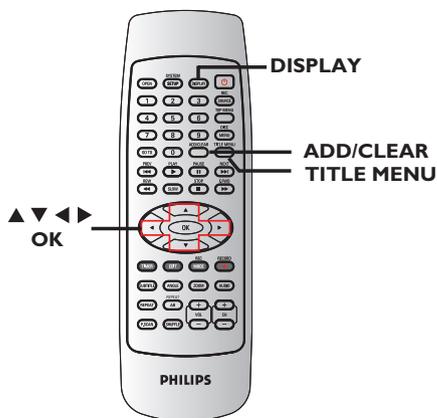

- 1 播放期间，按一下遥控器上的 DISPLAY。

→ 电视上将出现标题/章节菜单。

▶ DVD	
MODE	NORMAL
Trick Mode	PLAY
TITLE	02/06
CHAPTER	01/01
AUDIO	01/01-OTH
SUBTITLE	Off
ANGLE	01/01
Title	00:00:02/00:00:00

- 2 使用 ▲▼ 键选择想要调整的设置。
→ 下列页面将有选项的指示说明。
- 3 欲退出，按一下 DISPLAY。

选择各种重复/随机播放的功能

您可以在播放时选择各种重复播放或随机播放的模式。

- 1 播放期间，按两下遥控器上的 DISPLAY。
→ 将出现标题/章节菜单。
- 2 使用 ▲▼ 键选择 { Mode } 并按 OK。
- 3 使用 ▲▼ 键选择其中一个重复选项。

{ Repeat A-B } (重复 A-B)

选择此项重复播放标题/章节/曲目中的特定片段。按一下 OK 标注要重复的片段起始和结束点。

{ Chapter Repeat } (重复章节)

选择此项重复播放目前的章节（仅限于 DVD、DVD±R/±RW/+R DL）。

{ Repeat Track/Title } (重复曲目/标题)

选择此项重复播放目前的曲目/标题。

{ Repeat Directory } (重复菜单)

选择此项重复播放目前的文件夹/菜单（仅限于 MP3、JPEG 和影像光碟）。

{ Disc Repeat } (重复光碟)

选择此项重复播放整个光碟。

{ Program } (编程)

选择此项进行编程。

{ Shuffle } (随机播放)

选择此项随机播放光碟的所有曲目（仅限于 MP3、WMA 和音乐光碟）。

{ Normal } (一般)

选择此项取消重复播放模式，然后回到一般播放。


- 4 欲取消重复播放，按一下 STOP ■ 或选择 { Normal } (一般) 并按 OK。

提示： 此处所提及的操作功能可能不适用于某些光碟。
请务必参阅光碟的随附说明。

设定光碟曲目

您可以设定的曲目播放顺序来播放光碟内容。

- 1 按两下遥控器上的 **DISPLAY**。
→ 将出现标题/章节菜单。
- 2 使用 **▲▼** 键选择 { **Mode** } (模式) > { **Program** } (编程) 并按 **OK**。
→ 将出现设定菜单。

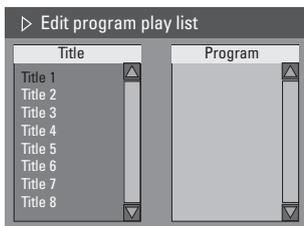

- 3 如果光碟有录制标题/文件夹/专辑，按一下 **OK** 浏览曲目/文件/章节。
 - 在选取的曲目/文件/章节上按一下 **OK** 开始播放。
 - 使用 **◀▶** 键切换左右画面。

设定喜爱的曲目/文件/章节

- 4 使用 **▲▼** 键选择曲目/文件/章节进行设定，然后按一下遥控器上的 **ADD/CLEAR**。
→ 选定的曲目/文件/标题将会显示在右画面中。
→ 右画面中的顺序将是设定播放的顺序。

删除选择的设定项目

- 5 按一下 **▶** 键移至右画面。
选择曲目/文件/章节，然后按一下遥控器上的 **ADD/CLEAR**。

欲开始设定播放

- 6 按一下 **▶** 键移至右画面并按 **OK**。
→ 将按照设定的顺序，从选定的曲目/文件/章节开始播放。

欲退出设定播放

- 7 按一下 **STOP** ■ 退出设定播放。

变更音声声道语言

此操作仅适用于具有多声道语言的 DVD 或多音频声道的 VCD。

您也可以按遥控器上的 **AUDIO** 使用此功能。

- 1 按两下遥控器上的 **DISPLAY**。
- 2 使用 **▲▼** 键选择 { **Audio** } (音频)，然后按一下 **▶** 浏览选项。
- 3 使用 **▲▼** 键选择声音语言并按 **OK** 确认。
→ 语言会以号码或缩写表示，如“En”即表示英文。
→ 如果光碟上没有所选择的语言，则会使用光碟的预设语言。

提示：

- 有些 DVD 只能从 DVD 的光碟菜单才可以变更声道语言。欲浏览光碟菜单，按一下 **DISC-MENU**。

提示： 此处所提及的操作功能可能不适用于某些光碟。
请务必参阅光碟的随附说明。

变更字幕语言

此操作仅适用于具有多字幕语言的 DVD，您可以在播放 DVD 时变更字幕语言。您也可以按遥控器上的 **SUBTITLE** 使用此功能。您也可以按遥控器上的字幕“语言”键使用此功能。

- ① 按下两下遥控器上的 **DISPLAY**。
→ 将出现标题/章节菜单。
- ② 使用 **▲▼** 键选择 { **Subtitle** } (字幕)，按 **▶** 进入菜单查找可供使用的各个选项。
- ③ 使用 **▲▼** 键选择语言，按 **OK** 确定所作选择。
→ 语言会以号码或缩写表示，如“En”即表示英文。
→ 如果光碟上没有所选择的语言，则会使用光碟的预设语言。

提示：

— 有些 DVD 只能从 DVD 的光碟菜单才可以变更字幕语言。欲浏览光碟菜单，按一下 **DISC-MENU**。

切换拍摄角度

此选项仅适用于含有不同拍摄角度所录制片段的 DVD。您可以从不同的角度检视影像。您也可以按遥控器上的“角度”键使用此功能。

- ① 按下两下遥控器上的 **DISPLAY**。
→ 将出现标题/章节菜单。
- ② 使用 **▲▼** 键选择 { **Angle** } (角度)，按 **OK** 输入数字。
→ 将出现可选择的拍摄角度。
- ③ 使用数字键盘 (0-9) 键选择要切换的拍摄角度，然后按 **OK** 确认。


时间搜寻

此选项可让您跳至目前光碟上某个特定的点。

- ① 按一下遥控器上的 **GOTO** 或 **DISPLAY**。
→ 将出现标题/章节菜单。
- ② 使用 **▲▼** 键选择 { **T-Time** }，然后使用数字键盘 (0-9) 输入所需时间。
→ 播放将跳至选定的时间。

提示： 此处所提及的操作功能可能不适用于某些光碟。请务必参阅光碟的随附说明。

浏览系统菜单 - 普通

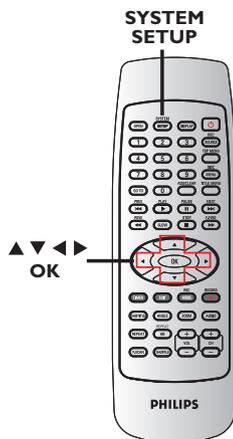

屏幕保护程序

屏幕保护程序可避免电视因处于静态影像下太久而受损。

- 1 在“System Setup-General”中，使用 ▲▼ 键选取 { Screen Saver } (屏幕保护) 并按 OK。

{ On } (开启)

如果您想在播放停止或暂停超过 5 分钟后关闭电视屏幕，请选择此项。

{ Off } (关闭)

选择此项关闭屏幕保护程序。

- 2 使用 ▲▼ 键选择设定，然后按 OK 确认。

- 1 按一下遥控器上的 SYSTEM-SETUP。
→ 电视上将出现系统菜单。

- 2 使用 ▲▼ 键选择  {System Setup-General} (系统设置-常规)，然后按一下  浏览选项。



- 3 使用 ▲▼ 键选择您要变更的设定，然后按 OK 确认。
→ 下列页面将有选项的指示说明。
- 4 欲退出，按一下 SYSTEM-SETUP。

提示： 此处所提及的操作功能可能不适用于某些光碟。
请务必参阅光碟的随附说明。

视频输出格式

与标准的交错电视频道扫描相比，顺序扫描可提供较高的影像画质。唯有将 DVD 录放像机的 Y Pb Pr 插孔和有支持顺序视频输入的电视机相连接才可以使用此功能。否则，画面可能无任何影像或影像变形。详情请查阅您的电视使用手册。

- 1 在“System Setup-General”中，使用 ▲▼ 键选取 { Video Output Format }（视频输出格式）并按 OK。

{ NTSC }

如果连接的电视具有 NTSC 颜色系统，请选择此项。系统将会变更 PAL 光碟的视频信号并将它输出为 NTSC 格式。

{ PAL }

如果连接的电视具有 PAL 颜色系统，请选择此项。系统将会变更 NTSC 光碟的视频信号并将它输出为 PAL 格式。

- 2 使用 ▲▼ 键选择设定，然后按 OK 确认。

提示：

- 请按照电视显示的说明确认选择（如有）。
- 如果电视画面出现空白/扭曲，请稍候 10 秒钟待自动恢复。

逐行扫描/隔行扫描

与标准的隔行扫描相比，逐行扫描可提供较高的影像画质。唯有将 DVD 录放像机的 Y Pb Pr 插孔和有支持逐行视频输入的电视机相连接才可以使用此功能。否则，画面可能无任何影像或影像变形。详情请查阅您的电视使用手册。

- 1 在“System Setup-General”中，使用 ▲▼ 键选取 { Progressive/Interlaced }（逐行/隔行）并按 OK。

{ Progressive }（逐行扫描）
选择此项启动逐行扫描功能。

{ Interlaced }（隔行扫描）
选择此项启动隔行扫描功能。

- 2 使用 ▲▼ 键选择设定，然后按 OK 确认。

提示：

- 请按照电视显示的说明确认选择（如有）。
- 如果电视画面出现空白/扭曲，请稍候 10 秒钟待自动恢复。

工厂设置


这会恢复本 DVD 录放像机的所有设定，除了 PIN（密码）之外。

- 1 在“System Setup-General”中，使用 ▲▼ 键选取 { Restore Factory Settings }（恢复厂家设置）并按 OK。
→ 将出现警告讯息
- 2 在菜单中选择 继续进行或选择 中止，然后按 OK 确认。


提示： 有下划线标示的选项是指原厂预设值。

按一下 ◀ 回到前一个菜单项目。按一下 SYSTEM-SETUP 退出菜单。

浏览系统菜单 - 播放

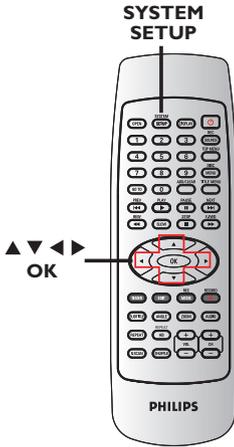

- 1 按一下遥控器上的 **SYSTEM-SETUP**。
→ 电视上将出现系统菜单。
- 2 使用 **▲▼** 键选择 { **System Setup - Playback** } (系统设置-播放)，然后按一下 **▶** 浏览选项。

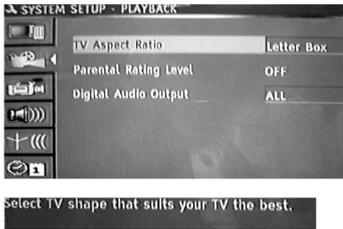

- 3 使用 **▲▼** 键选择您要变更的设定，然后按 **OK** 确认。
→ 下列页面将有选项的指示说明。
- 4 欲退出，按一下 **SYSTEM-SETUP**。

電視長寬比

按照所连接的电视设定 DVD 录放像机的长宽比。您所选择的格式必须符合光碟提供的格式。如果没有所选格式，播放时电视显示的影像设定将不会起作用。

- 1 在“System Setup-Playback”中，使用 **▲▼** 键选取 { **TV Aspect Ratio** } 并按 **OK**。

{ **16:9** }

对于宽屏幕电视 (画面比例 16:9)，请选择此项



{ **4:3 PanScan** }

对于全屏幕画面，左右边均被切除。



{ **4:3 Letterbox** }

对于电视屏幕上下部份显示为黑带的“宽屏幕”，请选择此项。



- 2 使用 **▲▼** 键选择设定，然后按 **OK** 确认。


提示： 有下划线标示的选项是指原厂预设值。
按一下 **◀** 回到前一个菜单项目。按一下 **SYSTEM-SETUP** 退出菜单。

家长分级控制


某些 DVD 在整张光碟或某些片段中设有分级限制。此功能可限制播放的等级。

分级限制分为 1 级至 8 级，并随国家而有所不同。您可以藉此禁播某些不适合您的小孩观看的光碟，或只播放光碟中其他画面。

- 在“System Menu-Playback”中，使用 ▲▼ 键选取 { Parental Rating Level } (父母锁) 并按 OK。
→ 系统会提示您输入四位数密码。

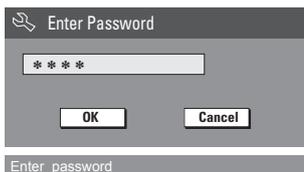

- 使用数字键盘 0-9 输入您的四位数密码。
→ 第一次进行此设定时，请输入预设密码“3308”。
→ 将出现设定分级菜单。

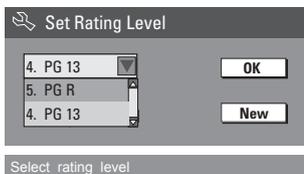

- 如果忘记您的四位数密码，预设密码为 3308。
- 使用 ▲▼ 键选择最上层栏目，然后按 OK 确认。
 - 使用 ▲▼ 键选择想要的家长控制级别，然后移至菜单的 并按一下遥控器上的 OK 确认。
→ 欲关闭家长控制功能并允许播放所有的光碟，请选择 { Cancel }。

分级说明

- { Off } (关闭)
- 不开启家长控制功能。

- { 8. Adult }
- 成人题材；因片中含有色情、暴力或粗话，仅限成人观看。

- { 7. NC 17 }
- 不适合 17 岁以下少儿；不建议让 17 岁以下的少儿观看。

- { 5. PG R } ~ { 6. R }
- 限制性；建议家长限制 17 岁以下的少儿观看或仅能在家长或监护人陪同下才可以收看。

- { 4. PG13 }
- 不适合 13 岁以下少儿。

- { 3. PG }
- 建议有家长辅导。

- { 2. G }
- 一般观众。

- { 1. Kid Safe } ~ { 2. G }
- 儿童安全；适合所有年龄观看。

- DVD 的限制级别如高于您所选定的等级将不能播放，除非输入您的四位数密码。

提示：

- 如果光碟制造商没有将光碟编码，此功能将不能限制收看。
- VCD、SVCD、CD 没有等级标示，因此家长控制功能对于这类光碟没有作用。这同样也适用于多数盗版 DVD。
- 有些 DVD 虽然在光碟封面上印有影片分级，但实际上并无分级编码。此分级限制功能并不会限制该光碟的播放。


提示：有下划线标示的选项是指原厂预设值。

按一下 ◀ 回到前一个菜单项目。按一下 SYSTEM-SETUP 退出菜单。

设定或变更密码

您需要输入四位数字密码，才能播放受限制的光碟，或者如果系统提示您输入密码，则需输入该四位数字密码。

- 1 在“System Setup-Playback”中，使用 ▲▼ 键选取 { **Parental Rating Level** } (父母锁) 并按 **OK**。
→ 系统会提示您输入四位数字密码。

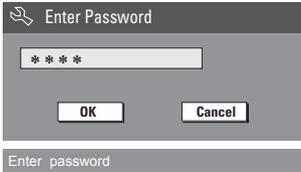

- 2 移至菜单中的 **New**，然后按一下 **OK** 浏览新的密码菜单。



- 3 使用数字键盘 **0-9** 输入新的四位数字密码，然后按一下 ▼ 选择下一个输入栏目，再输入一次同样的密码。
- 4 移至菜单中的 **OK** 并按一下 **OK** 确认。
→ 欲中止变更，请选择 **CANCEL** 并按 **OK**。

数码音频输出

将 DVD 录放像机和电视及其他装置连接后，您可能需要变更数位输出设定。如果使用 DVD 录放像机的同轴插孔，才需要调整数位输出。

- 1 在“System Setup-Playback”中，使用 ▲▼ 键选取 { **Digital Audio Output** } (数字音频输出) 并按 **OK**。

{ ALL }

如果将 DVD 录放像机的同轴插孔和内建多声道解码器的立体声接收器相连接，请选择此项。

{ LPCM }

如果连接的音响设备无法进行多声道 Dolby Digital (杜比数位) 音频解码，而且 MPEG-2 多声道信号转换为 PCM (脉冲编码调变)，请选择此项。

- 2 使用 ▲▼ 键选择设定，然后按 **OK** 确认。

提示： 有下划线标示的选项是指原厂预设值。
按一下 ◀ 回到前一个菜单项目。按一下 **SYSTEM-SETUP** 退出菜单。

浏览系统菜单 - 录像

请参阅第 80~85 页的“录像设定”。

浏览系统菜单 - 频道设定

请参阅第 77~79 页的“电视频道设定”。

浏览系统菜单 - 时钟

日期和时间

请参阅第 79 页的“设定时间和日期”。

提示: 有下划线标示的选项是指原厂预设值。
按一下 ◀ 回到前一个菜单项目。按一下 **SYSTEM-SETUP** 退出菜单。

影像/显示

- 长宽比：4:3、16:9
- D/A 转换器：10 bit、54 MHz
- A/D 转换器：10 bit、27 MHz
- 影像功能：顺序扫描

声音

- D/A 转换器：24 bit、96 kHz
- A/D 转换器：24 bit、96 kHz
- 讯噪比：90 dB
- 串音 (1kHz):80 dB
- 动态范围 (1kHz)：80 dB

录像

- 录像系统：PAL、NTSC
- 压缩格式：MPEG2
- 录像模式：1 小时 (高品质)、2 小时 (DVD 品质)、2.5 小时 (标准品质)、3 小时 (长时间播放)、4 小时 (VHS 品质)、6 小时 (VHS 品质)
- 音效压缩：Dolby Digital (杜比数位)

视频播放

- 光碟播放媒体：CD、CD-R/-RW、DVD、DVD-影音光碟、DVD±R/±RW、SVCD、VCD
- 压缩格式：MPEG2、MPEG1、DivX
- 影音光碟播放系统：PAL、NTSC

音频播放

- 光碟播放媒体：CD、CD-R/-RW、MP3-CD、MP3-DVD、WMA
- 压缩格式：Dolby Digital、MP3、MPEG2 多声道、PCM、DivX
- MP3 位元率：32~256 kbps 和 VBR

静态图片播放

- 光碟格式：DVD±R/±RW、影像光碟
- 影像压缩格式：JPEG
- 影像功能：旋转

储存媒体

- 录像媒体：DVD±R、DVD±RW、DVD+R DL、
- 录像速度：2.4 倍

调谐器/收讯/传输

- 电视系统：PAL
- 天线输入：75 Ohm 同轴电缆 (IEC75)

连接

后置连接：

- S-Video 输出
- 视频 (CVBS) 输出
- 左右音频输出
- 数位音频输出 (同轴)
- RF 天线输入
- RF 电视输出
- Y、Pb、Pr 输出
- S-Video 输入
- Video (CVBS) 输入
- 左右音频输入

前置连接：

- i.LINK DV 输入 (IEEE 1394 端子)
- S-Video 输入
- 视频输入
- 左右音频输入

便利性

- 设定/定时录像功能：每日/每周、重复设定、手动定时录像、单键录像
- 可设定定时刻录时间事件：20

电源

- 电源供应：110 - 240V~ 50-60Hz
- 耗电量：28 W (一般)
- 待机耗电量：低于 4W

机壳

- 尺寸 (宽x高x深)：427 x 48 x 318 mm
- 净重：< 3.5 kg

故障排除

警告

在任何情况下，不得试图擅自修理本机，这会使得保修无效。请勿打开机盖，会有触电的危险。

如发生故障，在将本机送往维修之前，请检查下列各项。如果按以下的方法仍无法解决问题，请向经销商或飞利浦寻求协助。

问题	解决方法
没有电。	<ul style="list-style-type: none">- 按一下 DVD 录放像机前面的 STANDBY-ON 按钮启动本系统。- 请确定交流电源插座有电源。
遥控器不能操作。	<ul style="list-style-type: none">- 将遥控器直接对准 DVD 录放像机前面的感应器（不是对准电视机）。- 将 DVD 录放影机和遥控器之间的任何障碍物移走。- 尝试将遥控器从不同角度和/或距离对准录放影机。- 电池电力减弱，请更换电池。- 按一下遥控器上的 REC SOURCE 选择输入来源。
光碟没有播放。	<ul style="list-style-type: none">- 将光碟标签一面朝上放入。- 区域码错误。DVD 必须以“ALL”（全区）或“第 6 区”编码才可以在本机上播放。- 光碟上没有任何录像或光碟类型错误。详情请参阅“播放 - 播放光碟”一节。- 请确定光碟并无刮损或变形。清洁光碟或更换一片新的光碟。- 尝试播放另一片光碟以检查该光碟是否有故障。
没有声音。	<ul style="list-style-type: none">- 检查音频连接（红白插孔）。详情请参阅“快速入门 - 连接音频电缆”一节。- 请根据与本机连接的设备，正确设定数位输出。详情请参阅“浏览系统菜单 - 数位音频输出”一节。
连接的 Hi-Fi 扩音器声音失真。	<ul style="list-style-type: none">- 请勿用任何电缆连接本机和扩音器的“Phono”输入。- 请勿将本机的同轴 DIGITAL AUDIO OUT 插孔和连接装置上的模拟插孔（红/白）相连接。
没有影像。	<ul style="list-style-type: none">- 打开电视机并设定正确的视频输入频道。变更电视频道，直到看到 DVD 画面为止。详情请参阅“快速入门 - 设定电视”一节。- 检查 DVD 录放像机和电视之间的视频连接。

问题

解决方法

播放时影像变形或变成黑白影像。

- 光碟不符合电视颜色系统的标准 (PAL/NTSC)。
- 光碟变脏, 请清洁光碟。
- 不要将相连设备的电缆绑在一起。
- 有时出现小部分的影像变形。这不是故障。
- 如果您将录像模式设定为低品质速度, 在录制完毕后将它改为高品质速度。让 DVD 录放像机停留在低品质速度会影响随后播放 DVD 影像的品质。详情请参阅“录像 - 录像设定”一节。
- 唯有当电视信号或外接的装置传送彩色信号时, 录像才会以彩色录制。在某些情况下, 系统无法录制黑白影像的播放节目。

录像未依照排程进行。无法进行新的录像。

- 您要录像的电视频道并没有被储存, 或您选错节目号码。检查储存的电视频道。
- 如果在设定定时录像后调整时钟, 您必须重新设定定时录像。
- 如果 DVD 录放像机无法读取光碟, 您就无法进行录像。
- 您无法用本机将有版权保护的资料 (DVD 或录像带) 拷贝到 DVD±R/±RW/+R DL 上。
- 可能使用了经过最终化处理的 DVD±R。请更换光碟。

DVD 录放像机收不到电视信号。

- 安装电视频道。详情请参阅“步骤三：电视频道设定”。

本机所录制的 DVD±R/±RW, DVD+R DL 无法在 DVD 播放机上播放。

- 如果录像的片长太短, DVD 播放机可能无法侦测到。请注意以下的“最短录像时间”。录像模式: {1 hour} (1 小时) - 5 分钟、{2 hours} (2 小时) - 10 分钟、{2.5 hours} (2.5 小时) - 13 分钟、{3 hours} (3 小时) - 15 分钟、{4 hours} (4 小时) - 20 分钟、{6 hours} (6 小时) - 30 分钟。
- 您必须将 DVD±R/+R DL 最终化处理。详情请参阅“在其他 DVD 播放机上播放录制光碟 (DVD±R/+R DL)”一节。

在拷贝 DVD 影音光碟或预录好的录像带时, 影像模糊且亮度不一。

- 如果试图拷贝有版权保护的 DVD 或录像带, 便会发生此种情况。尽管在电视上影像看似完好, 但转录到 DVD±R/±RW/+R DL 上影像就会有问题。这种失真情况对于受版权保护的 DVD 或录像带是无法避免的。
- DVD±R/±RW 有录制使用寿命, 请更换新的光碟进行录制。

模拟：声音并未转换为数字。模拟声音变化多端，而数位声音则具有特定的数值。这些插孔能通过左右两个声道传送声音。

长宽比：显示影像的垂直和水平大小比例。传统电视的水平与垂直比例是 4:3，而宽屏幕电视则是 16:9。

AUDIO OUT (音频输出) 插孔：位于系统背面的红白插孔，可将音频传送到另一系统（如电视、立体声等）。

章节：DVD 的影像或音乐片段，比标题小。标题是由多个章节组成。每一个章节均有编上章节号码，方便您搜寻。

色差视频输出插孔：位于 DVD 系统背面的插孔，可将高画质的影像传送到附有色差视频输入插孔（如 R/G/B、Y/Pb/Pr 等）的电视。

数位：已转换为数值的的声音。当您使用 DIGITAL AUDIO OUT COAXIAL（数位音频输出同轴）时，便可使用数位音效。模拟音效只能使用两个声道，但这些插孔能以多声道传送声音。

光碟菜单：能使用画面显示并选择收录在 DVD 中的影像、声音、字幕、多角度观赏等功能。

Dolby Digital (杜比数位)：由 Dolby Laboratories 开发的环境音效系统，包含多达六个声道的数位音效（前左、前右、环绕左、环绕右、中央和重低音扬声器）。

DTS：数位剧院系统。这是一种有别于 Dolby Digital（杜比数位）的环境音效系统。其格式是由不同公司所开发的。

索引影像画面：提供 DVD±RW 或 DVD±R/+R DL 总览的画面。一个索引影像即表示一个录像。

JPEG：一种相当普遍的数位静态图片格式。这是由 Joint Photographic Expert Group 所提出的静态图片资料压缩系统，尽管影像经过高度压缩，影像的品质仅稍微减低。

MP3：含有音效资料压缩系统的文件格式。MP3 是 Motion Picture Experts Group 1（或 MPEG-1）Audio Layer 3 的缩写。使用 MP3 格式，一片 CD-R 或 CD-RW 可以比一般 CD 包含多十倍以上的资料。

MPEG：全名为 Motion Picture Experts Group。是数位影音压缩系统的集合。

多声道：DVD 经过格式化后，将每个声轨构成一个音场。
多声道是指含有三个以上声道的声轨结构。

PBC：播放控制。指影音光碟或 SVCD 上所录制信号的播放控制。使用支持播放控制的影音光碟或 SVCD 上的菜单画面，您可以进行互动播放和搜寻。

PCM：脉冲编码调变。数位音频解码系统。

家长控制功能：根据使用者的年龄或不同国家的限制分级，来限制光碟播放。每张光碟的限制各有不同。启动分级后，如果软体的分级较使用者设定的等级为高，光碟将无法播放。

区域码：允许光碟仅于指定地区播放的系统。本机仅可播放标有相容区域码的光碟。您可以在产品标签上找到本机的区域码。有些光碟含有一个以上相容的区域码（或标有 ALL 全区）。

S-Video (S 视频)：分别传送亮度和色彩信号，可产生清晰的影像。如果您的电视附有 S-Video 输入插孔，即可使用 S 视频。

环绕：此系统可放置数个扬声器环绕着观众，藉以制造 3D 立体音场，仿佛身处现场一般。

标题：DVD 影片或音乐功能中最长的部份。每个标题均有编上标题号码，方便您搜寻。

VIDEO OUT (视频输出) 插孔：位于 DVD 系统背面的黄色插孔，可将 DVD 的视频传送到电视。

WMA：WMA 的全称是 Windows Media Audio，它是微软公司开发的一种音频压缩技术。WMA 数据可以由 Windows Media Player 9.0 版或 Windows XP 系统的 Windows Media Player 编码。该文件的扩展名 ".wma" 或 ".WMA"。



Be responsible
Respect copyrights



DVDR3408

**CLASS 1
LASER PRODUCT**