


TTX080

Mounting instruction 安装说明

4441 000 62591c



Type NO. 型号	Lamp 光源	Voltage/ Hz 电压/频率	Current 电流	Power 功率因数	Length (mm) 长度	kg
TTX080 TL-D3612 EBS	2X TL-D36W	220V~/ 50Hz	0.31A	0.98	1230	1.7kg
TTX080 TL-D3613 EBP	3X TL-D36W	220V~/ 50Hz	0.47A	0.98	1230	1.7kg
TTX080 TL-D3632 EBS	6X TL-D36W	220V~/ 50Hz	0.31A	0.98	3690	5.1kg
TTX080 TL-D3633 EBP	9X TL-D36W	220V~/ 50Hz	0.47A	0.98	3690	5.1kg
TTX080 TL-D3612 EBE	2X TL-D36W	220V~/ 50Hz	0.34A	0.95	1230	1.7kg
TTX080 TL-D3632 EBE	6X TL-D36W	220V~/ 50Hz	0.34A	0.95	3690	5.1kg

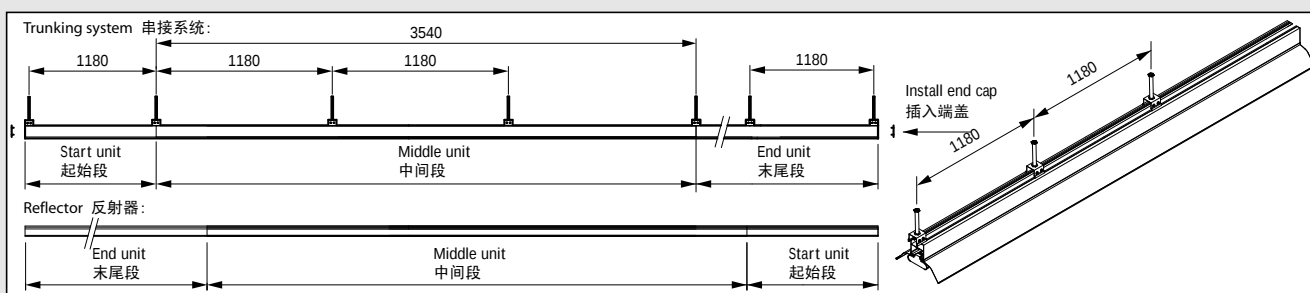

1. Reflector interface must be staggered with trunking system, to ensure the trunking system is straight.
反射罩接口位置需与灯带的接口错开，以保证灯带更为平直。
2. The position of suspend bar must be straight.
吊杆吊装位置必须保持平直。
3. Take apart the end caps from start units, and install them on the two ends of trunking system.
从起始段拆下端盖安装在一条灯带的两端。
4. If equipped with emergency kit, the power supply should come from L1 terminal and make sure the cable line close not connect to any neutral lines.
若灯带需安装应急电源系统，则电源供给须由L1端子拉出，并此线不可与任何零线交叉连接。

