

ARGtek ARG-1206 WLAN AP Router  
For 802.11b/g

无线路由器

**POWER KING**

快速安装手册


## 第一阶段：硬件接线方式

### \* 产品内容物

无线路由器	1
DC 12V 电源供应器	1
高增益天线	1
使用手册光盘	1
使用手册说明书	1

### \* 安装无线路由器

首先，请确保您的计算机能正常连接到互联网（如果有任何问题，可与您的ISP公司联系解决）然后依序进行以下安装步骤：

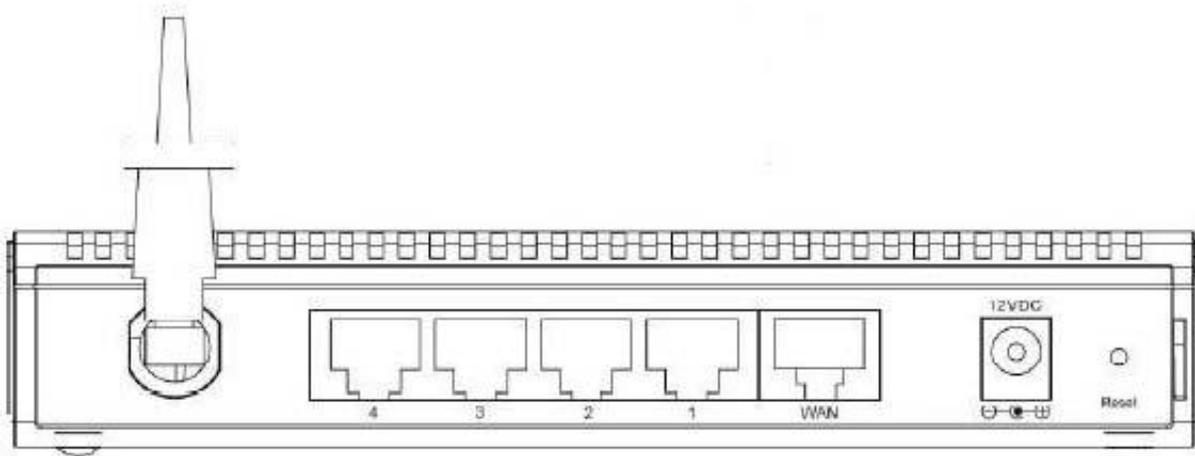

1. 关闭您的计算机、Cable/ ADSL数据机和路由器
2. 装设并且调整天线。在一般的情况下，将天线直立是效果较好的
3. 计算机、交换机、集线器等连接到路由器的LAN埠
4. Cable/ ADSL 数据机连接到路由器的WAN埠
5. 将电源供应器连接电源插座与路由器的电源连接孔，路由器将自动开始工作
6. 开启您的计算机与Cable/ ADSL数据机

## \* LED 灯号示意图



## \* 无线路由器的组态设置

本设备采用工厂预设参数如下：

默认IP地址： 192.168.1.254

默认IP子网掩码： 255.255.255.0

Web登录用户名： <空>

Web登录密码： <空>

本设备具有三种操作模式（Gateway/Bridge/WISP）

因默认的IP地址为192.168.1.254，因此您需要确保您的PC端之IP地址与设备在同一子网，如192.168.1.X，本设备将需要大约55秒完成开机程序

## 第二阶段：内部网页使用设定

### AP 模式设定(ADSL)

- 1、接天线，插电源线，将网络线一头接入本设备 LAN 埠(4 埠任 1 端口皆可)网络线另一头接入计算机的网卡，等待约 20 秒开机完成。
- 2、开 IE 浏览器、网址处输入 192.168.1.254 进入管理画面。如无法正常进入请按 Reset 键约 10 秒后放开等待 AP 重新启动回复初始设定后再重新进入。

管理画面左侧点选 **Setup Wizard** 点 **Next>>**

**WLAN Broadband Router**

**Broadband Router Status**

This page shows the current status and some basic settings of the device.

System	
Uptime	0day:0h:32m:9s
Firmware Version	v1.4.2
Wireless Configuration	
Mode	AP
Band	2.4 GHz (B+G)
SSID	MyWLAN_BG
Channel Number	11
Encryption	Disabled
BSSID	00:e0:4c:d3:a1:8d
Associated Clients	0
TCP/IP Configuration	
Attain IP Protocol	Fixed IP

### Setup Wizard

The setup wizard will guide you to configure access point for first time. Please follow the setup wizard step by step.

**Welcome to Setup Wizard.**

The Wizard will guide you the through following steps. Begin by clicking on Next.

1. Setup Operation Mode
2. Choose your Time Zone
3. Setup LAN Interface
4. Setup WAN Interface
5. Wireless LAN Setting
6. Wireless Security Setting

Next>>

1.Operation Mode 画面选 Gateway 点 Next>>

- Gateway:** In this mode, the device is supposed to connect to internet via ADSL/Cable Modem. The NAT is enabled and PCs in four LAN ports share the same IP to ISP through WAN port. The connection type can be setup in WAN page by using PPPOE, DHCP client, PPTP client or static IP.
- Bridge:** In this mode, all ethernet ports and wireless interface are bridged together and NAT function is disabled. All the WAN related function and firewall are not supported.
- Wireless ISP:** In this mode, all ethernet ports are bridged together and the wireless client will connect to ISP access point. The NAT is enabled and PCs in ethernet ports share the same IP to ISP through wireless LAN. You must set the wireless to client mode first and connect to the ISP AP in Site-Survey page. The connection type can be setup in WAN page by using PPPOE, DHCP client, PPTP client or static IP.

Cancel <<Back Next>>

2.Time Zone Setting 画面如不需修改点 Next>>

## 2. Time Zone Setting

You can maintain the system time by synchronizing with a public time server over the Internet.

**Enable NTP client update**

**Time Zone Select :** (GMT+08:00)Taipei

**NTP server :** 192.5.41.41 - North America

Cancel <<Back Next>>

3.LAN Interface Setup 画面可修改设定本基地台的 IP 位置后点 Next>>

## 3. LAN Interface Setup

This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP addresss, subnet mask, DHCP, etc..

**IP Address:** 192.168.1.254

**Subnet Mask:** 255.255.255.0

Cancel <<Back Next>>

4.WAN Interface Setup 画面选择连接宽带调制解调器的方式(ADSL 为 PPPoE)并输入电信公司给予的账号密码后点 **Next>>**

## 4. WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type.

WAN Access Type:

User Name:

Password:

5.Wireless Basic Setting 画面 Mode 选 AP 另可自行修改 SSID 后点 **Next>>**

## 5. Wireless Basic Settings

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point.

Band:

Mode:

Network Type:

SSID:

Channel Number:

Enable Mac Clone (Single Ethernet Client)

6. Wireless Security 画面选择加密方式后点 **Finished** 后等待本设备重新启动约 20 秒后完成设定

## 6. Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Encryption:

- None
- WEP
- WPA (TKIP)
- WPA2(AES)
- WPA2 Mixed

**Change setting successfully!**

注：使用本功能需将宽带业者提供之调制解调器网络线接至本设备 WAN 埠

## AP 模式设定(IP 分享器连接)

- 1、接天线，插电源线，将网络线一头接入本设备 LAN 埠(4 埠任 1 端口皆可)网络线另一头接入计算机的网卡，等待约 20 秒开机完成。
- 2、开 IE 浏览器、网址处输入 192.168.1.254 进入管理画面。如无法正常进入请按 Reset 键约 10 秒后放开等待 AP 重新启动回复初始设定后再重新进入。

管理画面左侧点选 **Setup Wizard** 点 **Next>>**

### WLAN Broadband Router

Site contents:

- Status
- Setup Wizard
- Operation Mode
- Wireless
- TCP/IP Settings
- Firewall
- VPN Setting
- Management

## Broadband Router Status

This page shows the current status and some basic settings of the device.

System	
Uptime	0day:0h:32m:9s
Firmware Version	v1.4.2
Wireless Configuration	
Mode	AP
Band	2.4 GHz (B+G)
SSID	MyWLAN_BG
Channel Number	11
Encryption	Disabled
BSSID	00:e0:4c:d3:a1:8d
Associated Clients	0
TCP/IP Configuration	
Attain IP Protocol	Fixed IP

## Setup Wizard

The setup wizard will guide you to configure access point for first time. Please follow the setup wizard step by step.

**Welcome to Setup Wizard.**

**The Wizard will guide you the through following steps. Begin by clicking on Next.**

1. Setup Operation Mode
2. Choose your Time Zone
3. Setup LAN Interface
4. Setup WAN Interface
5. Wireless LAN Setting
6. Wireless Security Setting

Next>>

### 1.Operation Mode 画面选 Bridge 点

- Gateway:** In this mode, the device is supposed to connect to internet via ADSL/Cable Modem. The NAT is enabled and PCs in four LAN ports share the same IP to ISP through WAN port. The connection type can be setup in WAN page by using PPPOE, DHCP client, PPTP client or static IP.
- Bridge:** In this mode, all ethernet ports and wireless interface are bridged together and NAT function is disabled. All the WAN related function and firewall are not supported.
- Wireless ISP:** In this mode, all ethernet ports are bridged together and the wireless client will connect to ISP access point. The NAT is enabled and PCs in ethernet ports share the same IP to ISP through wireless LAN. You must set the wireless to client mode first and connect to the ISP AP in Site-Survey page. The connection type can be setup in WAN page by using PPPOE, DHCP client, PPTP client or static IP.

Cancel

<<Back

Next>>

2. Time Zone Setting 画面如不需修改点 **Next>>**

## 2. Time Zone Setting

You can maintain the system time by synchronizing with a public time server over the Internet.

**Enable NTP client update**

**Time Zone Select :** (GMT+08:00)Taipei

**NTP server :** 192.5.41.41 - North America

Cancel

<<Back

Next>>

3. LAN Interface Setup 画面可修改设定本基地台的 IP 位置后点 **Next>>**

## 3. LAN Interface Setup

This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP addresss, subnet mask, DHCP, etc..

**IP Address:** 192.168.1.254

**Subnet Mask:** 255.255.255.0

Cancel

<<Back

Next>>

4. WAN Interface Setup 画面选择 DHCP Client 后点 **Next>>**

## 4. WAN Interface Setup

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE or PPTP by click the item value of WAN Access type.

**WAN Access Type:**

DHCP Client
Static IP
<b>DHCP Client</b>
PPPoE
PPTP

Cancel

<<Back

Next>>

5. Wireless Basic Setting 画面 Mode 选 AP 另可自行修改 SSID 后点 **Next>>**

## 5. Wireless Basic Settings

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point.

Band: 2.4 GHz (B+G) v

Mode: AP v

Network Type: AP v  
Client v  
WDS v  
AP+WDS v

SSID:

Channel Number: 11 v

Enable Mac Clone (Single Ethernet Client)

Cancel <<Back Next>>

6. Wireless Security 画面选择加密方式后点 **Finished** 等待本设备重新启动约 20 秒

## 6. Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Encryption: None v  
None  
WEP  
WPA (TKIP)  
WPA2(AES)  
WPA2 Mixed

Cancel <<Back Finished

管理画面左侧点选 TCP/IP Settings 后点选 LAN Interface  
DHCP 点选 Disable 后点 Apply Changes 等待本设备重新启动约 20 秒完成设定

This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP address, subnet mask, DHCP, etc..

IP Address:	<input type="text" value="192.168.1.254"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Default Gateway:	<input type="text" value="0.0.0.0"/>
DHCP:	<input type="text" value="Server"/> <input type="button" value="v"/>
DHCP Client Range:	<input type="text" value="192.168.1.1"/> - <input type="text" value="192.168.1.253"/> <input type="button" value="Show Client"/>
Domain Name:	<input type="text"/>
802.1d Spanning Tree:	<input type="text" value="Disabled"/> <input type="button" value="v"/>
Clone MAC Address:	<input type="text" value="000000000000"/>

Change setting successfully!

注：使用 IP 分享器连接本设备，请将网络线连至 LAN 端口其中 1 埠就可以。