



SAMSUNG

LCD TV

LA32M51B

LA32M51BS

LA40M51B

LA40M51BS

LA46M51B

Owner's Instructions

Before operating the unit,
please read this manual thoroughly,
and retain it for future reference.

**ON-SCREEN MENUS
PC DISPLAY
PICTURE IN PICTURE (PIP)
TELETEXT**

This device is a Class B digital apparatus.

Register your product at
www.samsung.com/global/register


Precautions When Displaying a Still Image

A still image may cause permanent damage to the TV screen.

- Digital Ready TV: When you select the regular screen (4:3) mode to watch an SD-grade digital broadcast (and the set-top box output is 480p).



- Digital Ready TV: When you select the wide screen (16:9) mode to watch an SD-grade digital broadcast (and the set-top box output is 1080i).

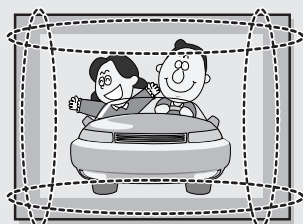


Although digital broadcasting must be in the wide screen (16:9) HD format, broadcasters sometimes show programs made originally in the regular screen format (4:3) by converting the signals into digital form, in which case the left and right side edges of the screen are cropped.

Note : If the borders at the left, right and the center of the screen remain fixed for an extended period of time, the amount of light transmission will also remain varied and as a result the borders may leave traces.

Do not leave the screen in pause mode for extended periods of time as you may experience temporary or permanent image burn.

- Digital Ready TV: When the TV receives HD-grade signals (and the set-top box output is 1080i).

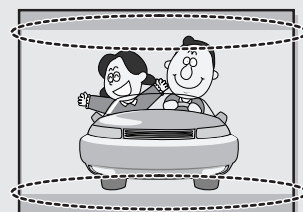

When you watch a digital HD-grade broadcast on a regular (4:3) TV with the screen size "16:9" or "Panorama" selected, you will be able to watch the program but the top and bottom edges of the screen will be cropped.


Note : If the borders at the top, bottom and the center of the screen remain fixed for an extended period of time, the amount of light transmission will also remain varied and as a result the borders may leave traces.

Do not leave the screen in pause mode for extended periods of time as you may experience temporary or permanent image burn.

- Integrated Digital TV (Wide-screen): When the TV receives SD-grade (regular) broadcasting signals (receives 480p regular signals).

- Digital Ready TV (wide-screen): digital TV: When the TV receives SD-grade (regular) broadcasting signals (with a set-top box).

- When you watch an analog (regular) broadcast on a wide-screen TV (with the 4:3 screen mode selected).

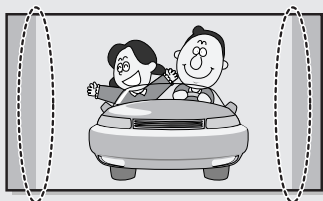


Although digital broadcasting must be in the wide screen (16:9) HD format, broadcasters sometimes show programs made originally in the regular screen format (4:3) by converting the signals into digital form, in which case the left and right side edges of the screen are cropped.

Note : If the borders at the left, right and the center of the screen remain fixed for an extended period of time, the amount of light transmission will also remain varied and as a result the borders may leave traces.

Do not leave the screen in pause mode for extended periods of time as you may experience temporary or permanent image burn.

- When you watch a DVD, CD or a video in wide-screen (21:9) format on a wide-screen (16:9) TV.

- When you connect a computer or a game console to the TV and select the 4:3 screen mode.

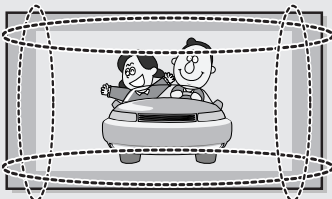

If you connect a DVD player, computer or a game console to the wide-screen TV and watch a movie or play a game in regular (4:3) or wide (21:9) screen mode, the left and right side edges, or the top and bottom edges of the screen will be cropped.

Note : If the borders at the left, right and the center of the screen remain fixed for an extended period of time, the amount of light transmission will also remain varied and as a result the borders may leave traces.

Do not leave the screen in pause mode for extended periods of time as you may experience temporary or permanent image burn.

Contents

◆ CONNECTING AND PREPARING YOUR TV

■ Viewing the Control Panel	4
■ Viewing the Connection Panel.....	5
- Connecting an Aerial or Cable Television Network	6
- Connecting External A/V Devices	6
- SERVICE	6
- Connecting Component Devices (DTV/DVD)	6
- Connecting HDMI/DVI	7
- Connecting Computer	7
- Connecting AUDIO	7
- Kensington Lock	7
■ Viewing the Remote Control (All Functions Except Teletext)	8
■ Viewing the Remote Control (Teletext Functions).....	9
■ Installing Batteries in the Remote Control	10
■ Switching On and Off	11
■ Placing Your Television in Standby Mode	11
■ Becoming Familiar with the Remote Control	12
■ Plug and Play	13
■ Choosing Your Language	14

◆ SETTING THE CHANNELS

■ Storing Channels Automatically	15
■ Storing Channels Manually	16
■ Editing the Channels	18
■ Sorting the Stored Channels	19
■ Assigning Channels Names	20
■ Fine Tuning Channel Reception	21

◆ SETTING THE PICTURE

■ Changing the Picture Standard	22
■ Adjusting the Custom Picture	23
■ Changing the Colour Tone	24
■ Resetting the Picture Settings to the Factory Defaults	24
■ Changing the Picture Size	25
■ Freezing the Current Picture.....	25
■ Using the Digital NR (Digital Noise Reduction) Feature.....	26
■ DNle (Digital Natural Image engine)	27
■ My Colour Control	28
■ Dynamic Contrast.....	29
■ Brightness Sensor.....	30
■ Viewing the Picture In Picture (PIP)	31

◆ SETTING THE SOUND

■ Adjusting the Volume	33
■ Switching the Sound Off Temporarily	34
■ Selecting the Sound Mode	34
■ Changing the Sound Standard	35
■ Adjusting the Sound Settings	35

Contents

◆ SETTING THE SOUND	
■ Setting the TruSurround XT (SRS TSXT)	36
■ Adjusting the Volume Automatically	37
■ Connecting Headphones	38
■ Selecting the Internal Mute	38
■ Listening to the Sound of the Sub Picture	39
◆ SETTING THE TIME	
■ Setting and Displaying the Current Time	40
■ Setting the Sleep Timer	41
■ Switching the Television On and Off Automatically	42
■ Activating the Child Lock	43
◆ SETTING THE OTHERS	
■ Setting the Blue Screen Mode	44
■ Selecting the Melody	44
■ Selecting a Device from External Sources	45
■ Viewing Pictures from External Sources	46
◆ SETTING THE PC	
■ Setting up Your PC Software (Based on Windows XP)	47
■ Adjusting the PC Screen Automatically	48
■ Coarse and Fine Tuning of the Image	49
■ Changing the Image Position	50
■ Initializing the Image Settings	51
◆ USING THE TELETEXT FEATURE	
■ Teletext Decoder	52
■ Displaying the Teletext Information	52
■ Selecting a Specific Teletext Page	53
■ Using Fastext to Select a Teletext Page	54
◆ RECOMMENDATIONS FOR USE	
■ Troubleshooting: Before Contacting Service Personnel	55
■ Installing the Wall Mount Kit (LA32M51B, LA40M51B, LA40M51BS)	56
■ Installing the Wall Mount Kit (LA46M51B)	58
■ Installing the Stand (LA32M51B/LA32M51BS)	60
■ Stand Swivel Function (32", 40" Only)	60
■ Using the Anti-Theft Kensington Lock	61
■ Technical and Environmental Specifications	62
■ Display Mode (PC)	63
■ Pin Configurations	64

Symbols



Press




Important



Note

Viewing the Control Panel

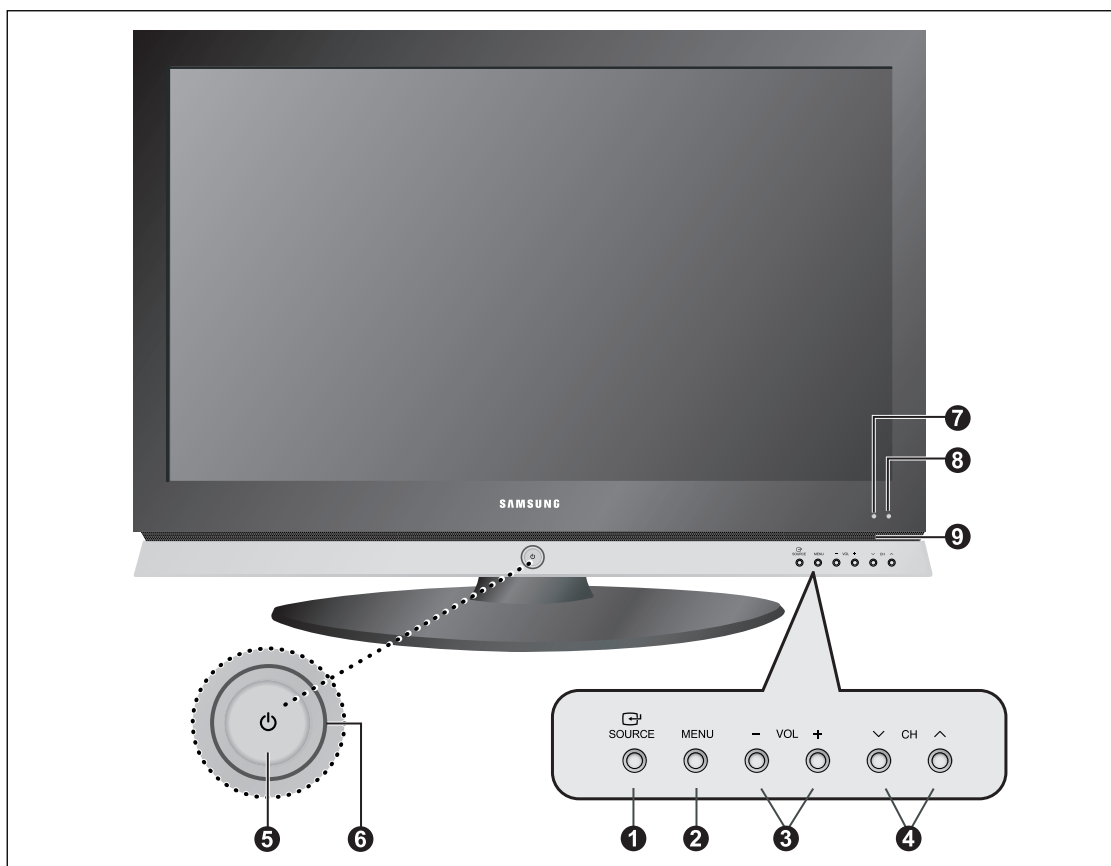

1 SOURCE

Displays a menu of all of the available input sources (TV, AV1, AV2, S-Video, Component1, Component2, PC, HDMI).

Also used to confirm your choice on the on-screen menu.

2 MENU

Press to see an on-screen menu of your TV's features.

3 - VOL +

Press to decrease or increase the volume. Also used to select items on the on-screen menu.

4 V CH ^

Press to change channels. Also press to highlight various items on the on-screen menu.

5 (Power)

Press to turn the TV on and off.

6 Power Indicator

Blinks and turns off when the power is on and lights up in stand-by mode.

7 Light Detecting Sensor


Adjusts brightness of screen automatically by detecting brightness of surrounding environment. This sensor works when Brightness Sensor is on. (Refer to page 30)

8 Remote Control Sensor

Aim the remote control towards this spot on the TV.

9 Speakers

Viewing the Connection Panel

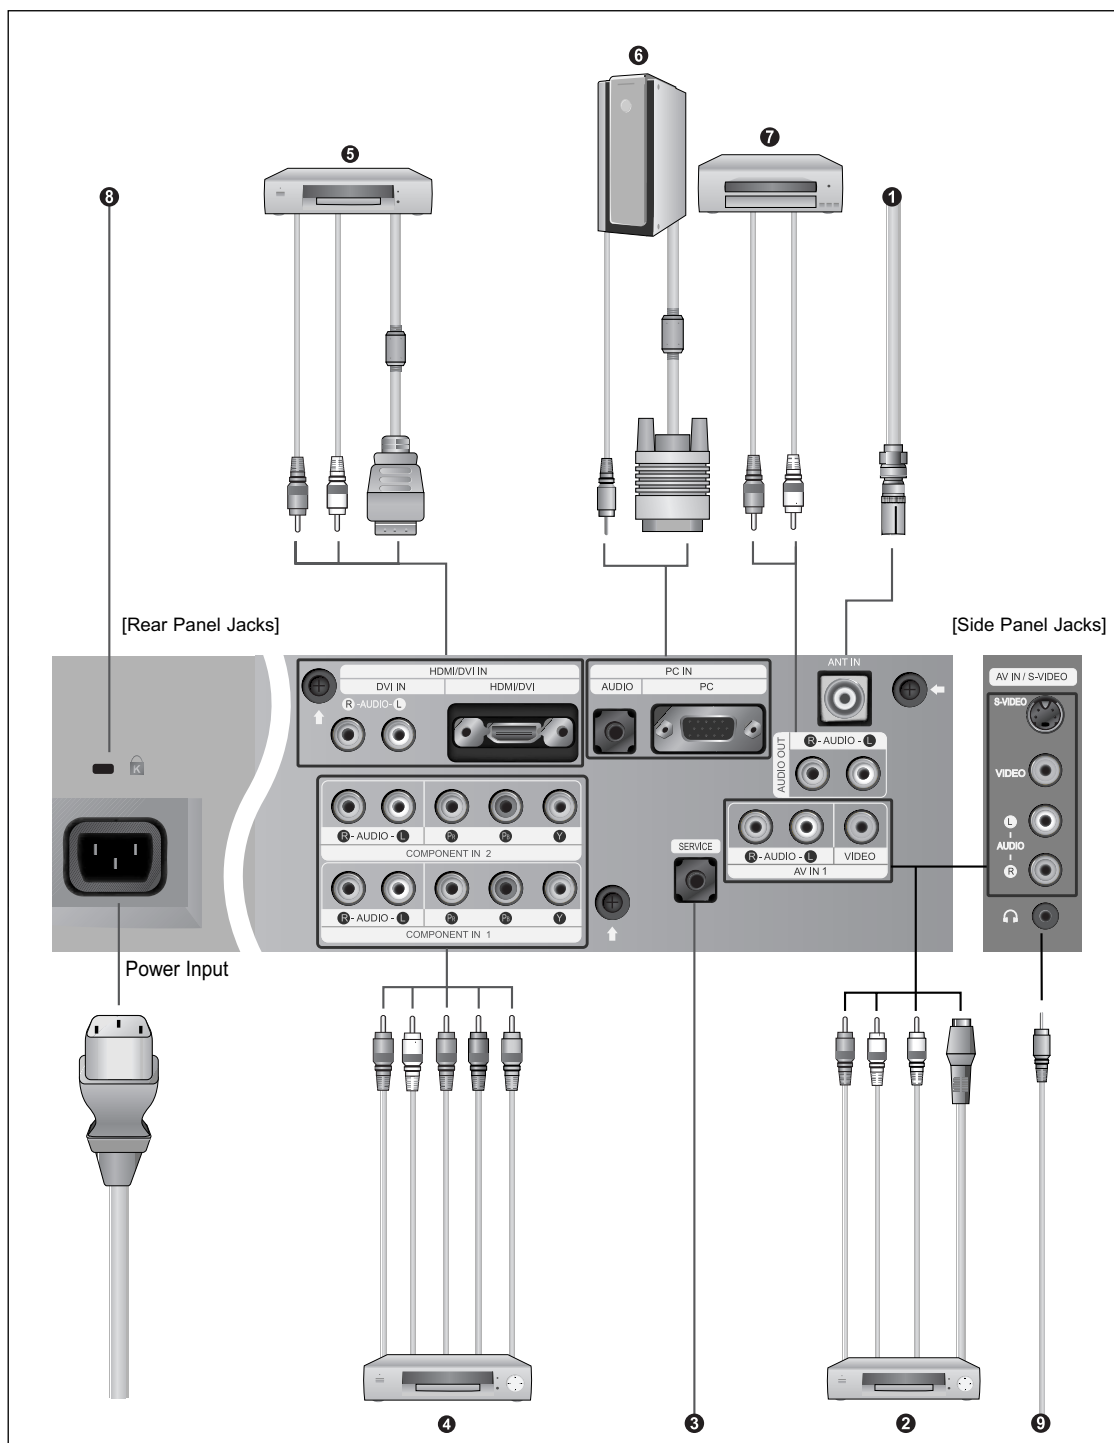

Whenever you connect an audio or video system to your set, ensure that all elements are switched off. When connecting an external device, match the colour of the connection terminal to the cable.

Viewing the Connection Panel

❶ Connecting an Aerial or Cable Television Network

To view television channels correctly, a signal must be received by the set from one of the following sources:

- An outdoor aerial
- A cable television network
- A satellite network

❷ Connecting External A/V Devices

- Connect RCA or S-VIDEO cable to an appropriate external A/V device such as VCR, DVD or Camcorder.
- Connect RCA audio cables to **"R - AUDIO - L"** on the rear of your set and the other ends to corresponding audio out connectors on the A/V device.
- Headphone may be connected to the headphone output (9) on the rear of your set. While the headphone is connected, the sound from the built-in speakers will be disabled.

❸ SERVICE

- Connector for engineer.

❹ Connecting Component Devices (DTV/DVD)

- Connect component video cables to component connector (**"PR"**, **"PB"**, **"Y"**) on the rear of your set and the other ends to corresponding component video out connectors on the DTV or DVD.
- If you wish to connect both the Set-Top Box and DTV (or DVD), you should connect the Set-Top Box to the DTV (or DVD) and connect the DTV (or DVD) to component connector (**"PR"**, **"PB"**, **"Y"**) on your set.
- The Y, P_B and P_R connectors on your component devices (DTV or DVD) are sometimes labeled Y, B-Y and R-Y or Y, Cb and Cr.
- Connect RCA audio cables to **"R - AUDIO - L"** on the rear of your set and the other ends to corresponding audio out connectors on the DTV or DVD.

	Video	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Resolution (Lines)
Source	PAL	15.625	50	575
	SECAM	15.625	50	575
	NTSC4.43	15.734	60	483
	NTSC3.58	15.704	60	483
Component1/2	480/60i	15.734	60	483
	480/60p	31.469	60	483
	576/50i	15.625	50	576
	576/50p	31.250	50	576
	720/60p	45.000	60	720
	1080/50i	28.125	50	1080
	1080/60i	33.750	60	1080

Viewing the Connection Panel

5 Connecting HDMI/DVI

- Supports connections between HDMI-connection-enabled AV devices (set top boxes, DVD players, AV receivers and digital TVs).
- No sound connection is needed for an HDMI to HDMI connection.

➤ What is HDMI?

- HDMI, or high-definition multimedia interface, is a next-generation interface that enables the transmission of digital audio and video signals using a single cable without compression.
- "Multimedia interface" is a more accurate name for it especially because it allows multiple channels of digital audio (5.1 channels). The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP (High Bandwidth Digital Copy Protection) coding feature installed, and supports multi - channel digital audio.
- Use the HDMI/DVI terminal for DVI connection to an extended device.

➤ You should use the DVI-to-HDMI cable or DVI-HDMI Adapter for the connection, and the "R - AUDIO - L" terminal on DVI for sound output.

6 Connecting Computer

- Connect the D- Sub cable to "PC (PC IN)" on the rear of your set and the other end to the Video Card of your computer.
- Connect the stereo audio cable to "AUDIO (PC IN)" on the rear of your set and the other end to "Audio Out" of the sound card on your computer.

7 Connecting AUDIO


- Connect RCA audio cables to "R - AUDIO - L" on the rear of your set and the other ends to corresponding audio in connectors on the Amplifier or DVD Home Theater.

	Speaker			Audio Out		
	RF	AV, S-Video	Component, PC, HDMI	RF	AV, S-Video	Component, PC, HDMI
Internal Mute Off	Speaker Output	Speaker Output	Speaker Output	Sound Output	Sound Output	Sound Output
Internal Mute On	Mute	Mute	Mute	Sound Output	Sound Output	Sound Output
Video No Signal	Mute	Mute	Mute	Mute	Sound Output	Sound Output

8 Kensington Lock


- Refer to "Using the Anti-Theft Kensington Lock" on page 59.
- The place of the Kensington Lock may be different depending on its model.

Viewing the Remote Control (All Functions Except Teletext)

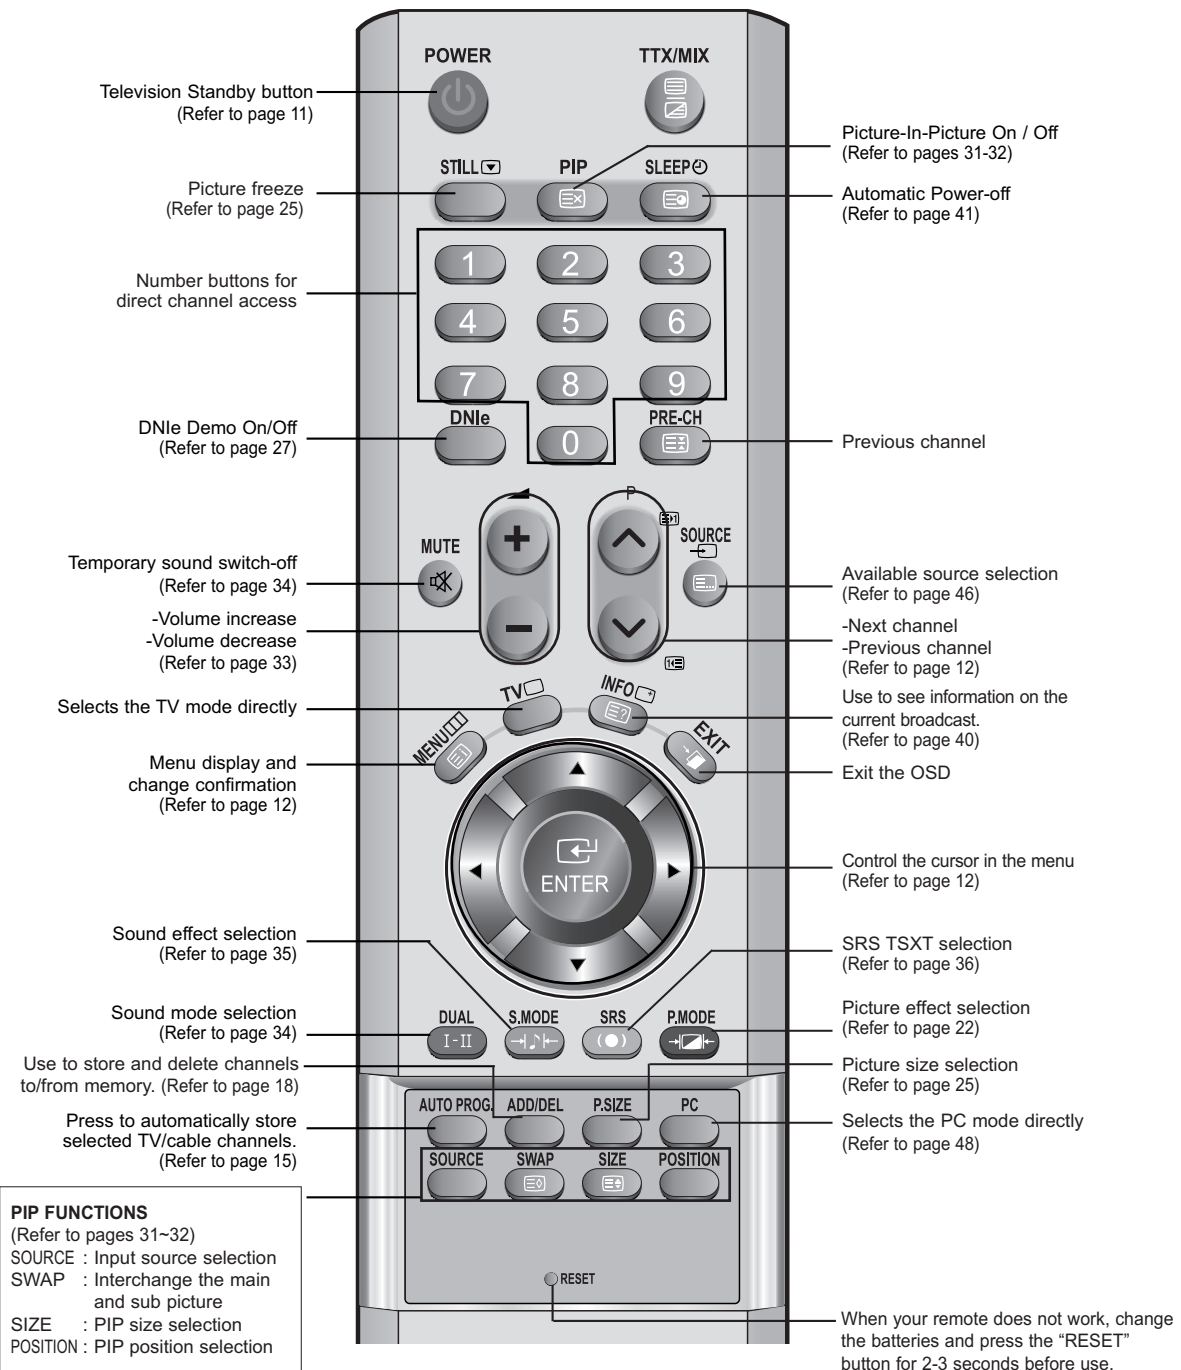




➤ The performance of the remote control may be affected by bright light.

Viewing the Remote Control (Teletext Functions)

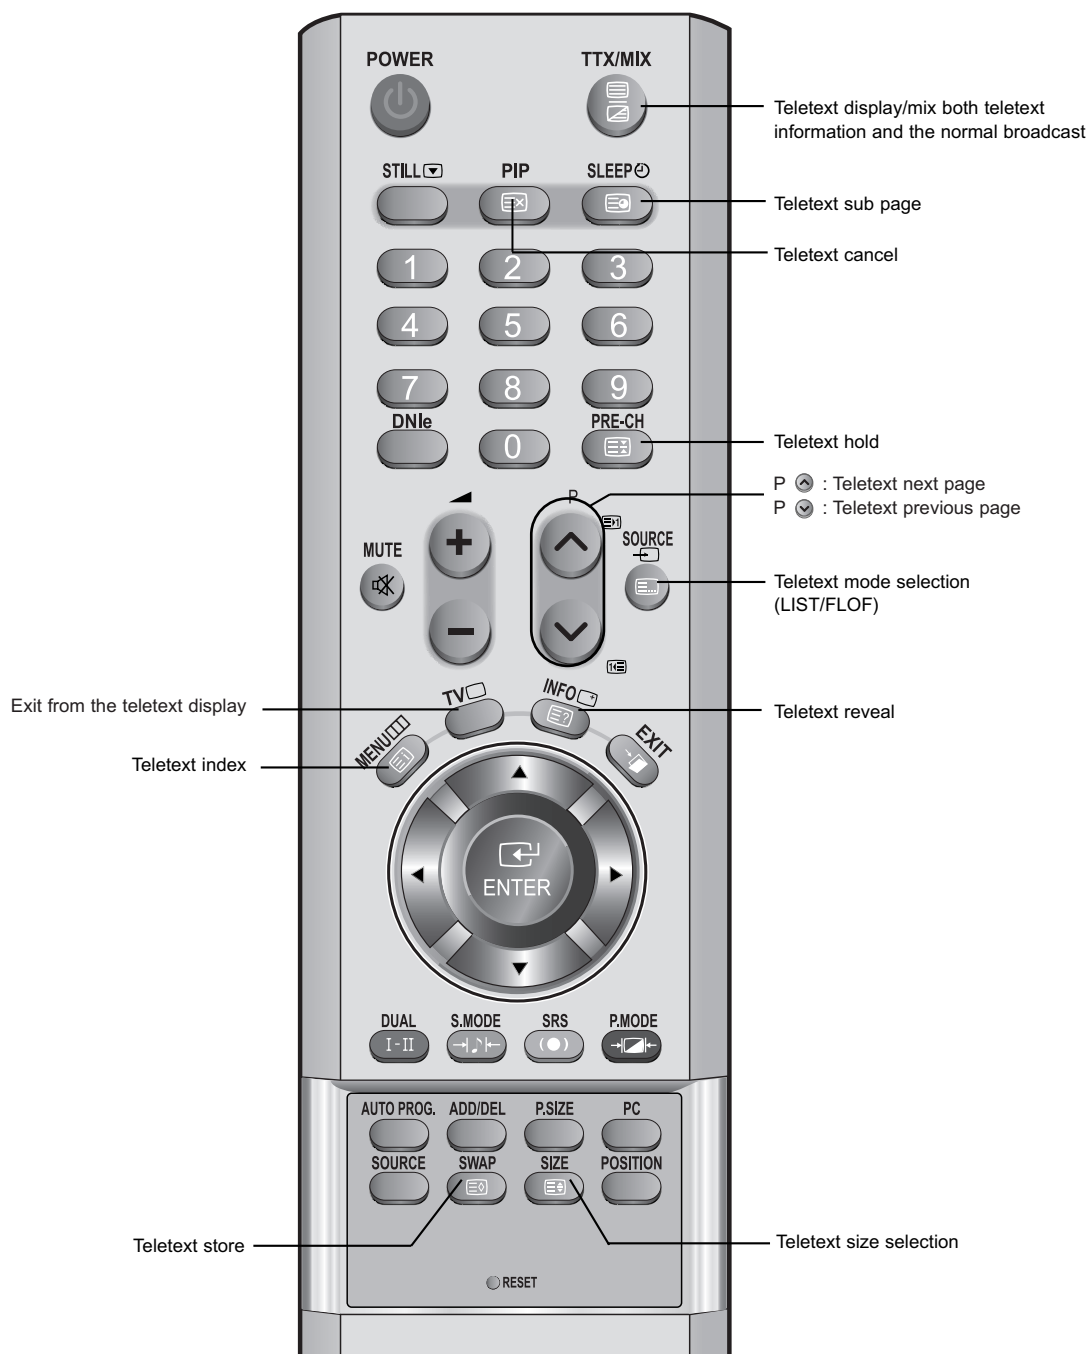

➤ Teletext Function : Refer to pages 52-54 for details

Installing Batteries in the Remote Control

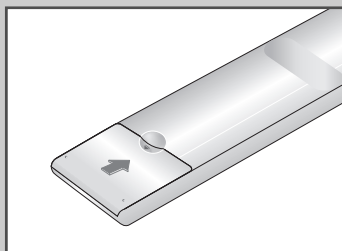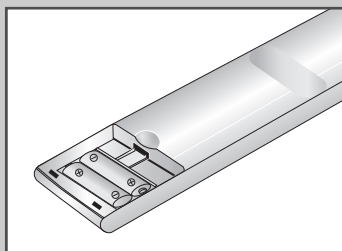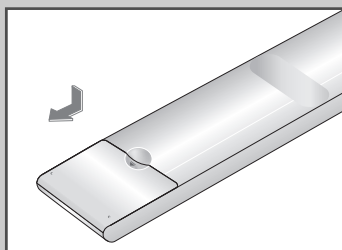

1 Slide the cover out completely.

2 Install two AAA size batteries.

➤ Make sure to match the “+” and “-” ends of the batteries with the diagram inside the compartment.

3 Replace the cover.

➤ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time. The remote control can be used up to about 23 feet from the TV. (Assuming typical TV usage, the batteries last for about one year.)







➤ **If the remote control doesn't work!**

Check the following:

- 1. Is the TV power on?**
- 2. Are the plus and minus ends of the batteries reversed?**
- 3. Are the batteries drained?**
- 4. Is there a power cut, or is the power cord unplugged?**
- 5. Is there a special fluorescent light or a neon sign nearby?**

Switching On and Off





The mains lead is attached to the rear of your set.


- 1 Plug the mains lead into an appropriate socket.
Result: The standby indicator lights up on the front panel.
➤ The main voltage is indicated on the rear of your set and the frequency is 50 or 60Hz.
- 2 Press the **POWER**  button on the front of the panel.
Result: The programme that you were watching last is reselected automatically.
- 3 Press the number button (0~9) or channel up/down (/) button on the remote control or  **CH**  button on the lower-right part of the panel.
➤ When you switch the set on for the very first time, you will be asked to choose language in which the menus are to be displayed (see page 14).
- 4 To switch your set off, press the **POWER**  button again.




Placing Your Television in Standby Mode

Your set can be placed in standby mode in order to reduce the power consumption. The standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).

- 1 Press the **POWER**  button on the remote control.
Result: The screen is turned off and a red standby indicator appears on the front of your set.
- 2 To switch your set back on, simply press the **POWER** , number buttons (0~9) or channel up/down (/) button on the remote control.
➤ Do not leave your set in standby mode for long periods of time (when you are away on holiday, for example). It is best to unplug the set from the mains and aerial.

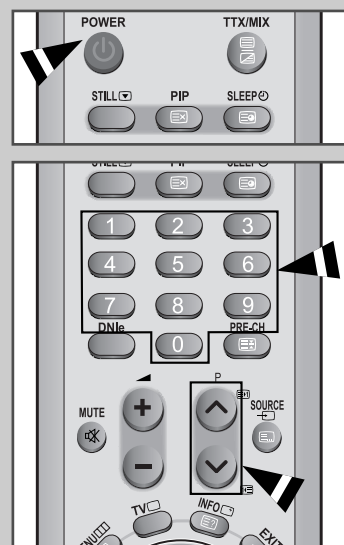

Becoming Familiar with the Remote Control

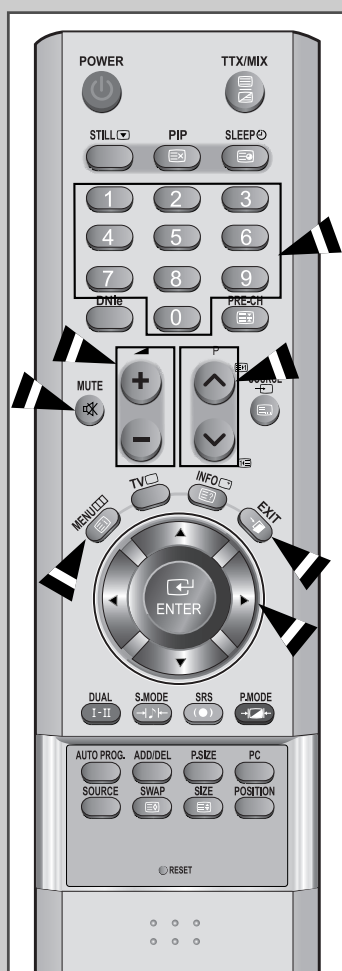

The remote control is used mainly to:


- ◆ Change channels and adjust the volume.
- ◆ Set up your set using the on-screen menu system.

The following table presents the most frequently used buttons and their functions.

Button	Viewing Function	Menu Function
	Used to display the next stored channel.	-
	Used to display the previous stored channel.	-
	Used to display the corresponding channels. ➤ For double digit channels, the second digit must be pushed immediately after the first. Failure to do this will result in a single digit channel being displayed.	-
	Used to increase the volume.	-
	Used to decrease the volume.	-
MUTE 	Used to switch the sound off temporarily. ➤ To turn the sound back on, press this button again, or press the button.	-
MENU 	Used to display the on-screen menu system.	Used to return to the previous menu or normal viewing.
EXIT 	Used to exit the on-screen menu system.	-
	<ul style="list-style-type: none"> ▲ ▼ Used to move among the menu items. ▶ Used to select a menu item or increase the value of the selected item. ◀ Used to return to the previous menu item or decrease the value of the selected item. 	-
ENTER 	-	Used to confirm your choice.

Plug and Play


*When the set is initially powered ON, several basic customer settings proceed automatically and subsequently.
The following settings are available.*

- 1 If the set is in standby mode, press the **POWER**  button on the remote control.

Result: The message **Start Plug & Play** is displayed.
It appears for a little while, and then the **Language** menu is automatically displayed.

- 2 Select the appropriate language by pressing the **▲** or **▼** button.


➤ The available languages are listed.
You can choose one of 5 languages.

- 3 Press the **ENTER**  button to confirm your choice.

Result: The message **Check antenna input.** is displayed with the **OK** selected.

- 4 Press the **ENTER**  button.


Result: The following areas are available:
**Asia/W.Europe - CIS/E.Europe - China -
Hong Kong/UK - Australia - NZL/Indonesia -
South Africa - America**



- 5 Select your **Area** by pressing the **▲** or **▼** button.
Press the **ENTER**  button.

Result: The **Auto Store** menu is displayed with the **Start** selected.

- 6 Press the **ENTER**  button.

Result: The channel search will start and end automatically.


➤ To stop the search before it has finished, press the **ENTER**  button with **Stop** selected.

- 7 Press the **ENTER**  button.
Select the hour, minute or am/pm by pressing the **◀** or **▶** button.
Set the hour, minute or am/pm by pressing the **▲** or **▼** button.
(Refer to "Setting and Displaying the Current Time" on page 40)
Press the **ENTER**  button.

- 8 Press the **ENTER**  button to confirm your setting.

Result: The message **Enjoy your watching.** is displayed, and then the channel which has been stored will be activated.

➤ You can also set hour and minute by pressing the number button on the remote control.

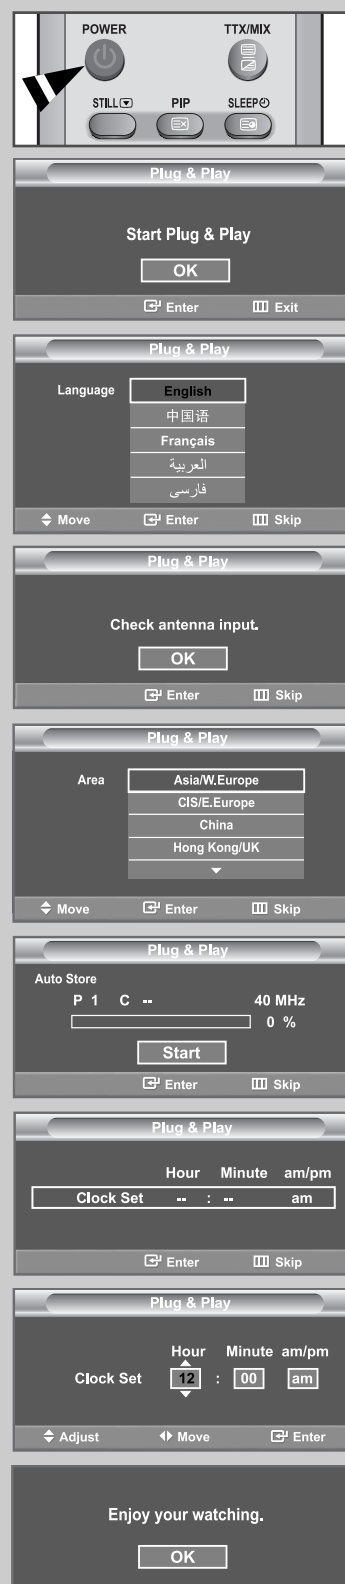

Plug and Play



If you want to reset this feature...

➤ This function does not work in PC mode.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.
Result: The options available in the **Setup** group are displayed.
- 3 The **Plug & Play** is selected.
- 4 Press the **ENTER** button.
Result: The message **Start Plug & Play** is displayed.
- 5 For further details on how to set, refer to the previous page.

Choosing Your Language



When you start using your set for the first time, you must select the language which will be used for displaying menus and indications.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** button.
- 4 Press the **▲** or **▼** button to select **Language**.
Press the **ENTER** button.
Result: The available languages are listed.
- 5 Select a particular language by pressing the **▲** or **▼** button repeatedly.
Press the **ENTER** button.
➤ You can choose one of 5 languages.
- 6 When you are satisfied with your choice, press the **EXIT** button to return to normal viewing.



Storing Channels Automatically

You can scan for the frequency ranges available to you (and availability depends on your country). Automatically allocated programme numbers may not correspond to actual or desired programme numbers. However, you can sort numbers manually and clear any channels you do not wish to watch.




- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Channel**.
Result: The options available in the **Channel** group are displayed.
- 3 Press the **ENTER** button.
Result: The **Area** is selected.
- 4 Press the **ENTER** button again. Select your **Area** by pressing the **▲** or **▼** button repeatedly.
Result: The following countries are available:
Asia/W.Europe - CIS/E.Europe - China - Hong Kong/UK - Australia - NZL/Indonesia - South Africa - America
- 5 Press the **ENTER** button.
- 6 Press the **▲** or **▼** button to select **Auto Store**. Press the **ENTER** button.
Result: The **Auto Store** menu is displayed with the **Start** selected.
- 7 Press the **ENTER** button to search the channels. The sub menu is changed from **Start** to **Stop** with channel search started.
Result: The search will end automatically. Channels are sorted and stored in an order which reflects their position in the frequency range (with lowest first and highest last). The programme originally selected is then displayed.
➤ To return to the previous menu, press the **MENU** button.
➤ To stop the search before it has finished, press the **ENTER** button with **Stop** selected.
- 8 After **Auto Store** proceeds, **Sort** menu appears automatically.
➤ Sort them in the order required (refer to page 19).
- 9 When the channels have been stored, you can:
◆ Assign names to the stored channels (refer to page 20)
◆ Add or delete the channels (refer to page 18)
◆ Fine tune channel reception if necessary (refer to page 21)

Channels can be stored automatically by simply pressing the **AUTO PROG.** button under the remote's cover.

- 1 Press the **AUTO PROG.** button while viewing a TV programme.
Result: The **Auto Store** menu is displayed with the **Start** selected.
- 2 Press the **ENTER** button.

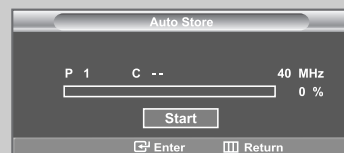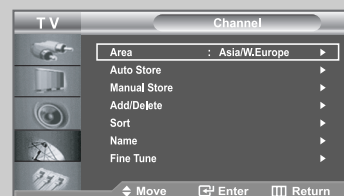

Storing Channels Manually

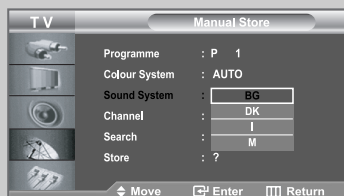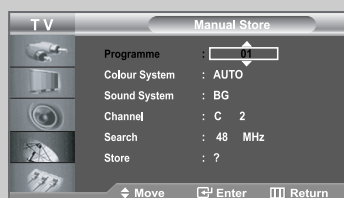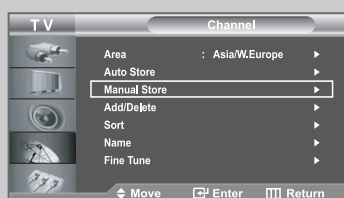

You can store up to 100 channels, including those received via cable networks. When storing channels manually, you can choose:

- ◆ Whether or not to store each of the channels found.
- ◆ The programme number of each stored channel which you wish to identify.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **Manual Store**. Press the **ENTER** button.

Result: The options available in the **Manual Store** menu are displayed with **Programme** selected.

- 5 Press the **ENTER** button again.

To assign a programme number to a channel, find the correct number by pressing the **▲** or **▼** button and then press the **ENTER** button.

➤ You can also set a programme number by pressing number buttons on the remote control.



- 6 Press the **▲** or **▼** button to select **Colour System** and then press the **ENTER** button. Select the colour standard required by pressing the **▲** or **▼** button repeatedly and then press the **ENTER** button.



Result: The colour standards are displayed in the following order:
AUTO - PAL - SECAM - NTSC 4.43 - NTSC 3.58

- 7 Press the **▲** or **▼** button to select **Sound System** and then press the **ENTER** button. Select the sound standard required by pressing the **▲** or **▼** button repeatedly and then press the **ENTER** button.

 
Result: The sound standards are displayed in the following order:
BG - DK - I - M

Storing Channels Manually


- 8** If you know the number of the channel to be stored,
- ◆ Press the ▲ or ▼ button to select **Channel** and then press the **ENTER**  button.
 - ◆ Select **C** (Air channel) or **S** (Cable channel) by pressing the ▲ or ▼ button.
 - ◆ Press the ► button to select channel.
 - ◆ Select the required number by pressing the ▲ or ▼ button and then press the **ENTER**  button.
 - If there is an abnormal sound or no sound, re-select the sound system required.
 - You can also set a channel by pressing number buttons on the remote control.

- 9** If you do not know the channel numbers, press the ▲ or ▼ button to select **Search** and then press the **ENTER**  button.
- Search** by pressing the ▲ or ▼ button and then press the **ENTER**  button.

Result: The tuner scans the frequency range until the first channel or the channel that you selected is received on your screen.


- 10** Press the ▲ or ▼ button to select **Store**.
Select **OK** by pressing the **ENTER**  button.
- Result: The channel and associated programme number are stored.

- 11** Repeat steps **8** to **10** for each channel to be stored.

- 12** Press the **MENU**  button to return to the previous menu or press the **EXIT** button to return to normal viewing.

Channel mode

- ◆ **P** (Programme mode): When tuning is completed, the broadcasting stations in your area will have been assigned to position numbers from P00 to P99. You can select a channel by entering the position number in this mode.
- ◆ **C** (Real channel mode): You can select a channel by entering the assigned number to each broadcast station in this mode.
- ◆ **S** (Cable channel mode): You can select a channel by entering the assigned number to each cable channel in this mode.

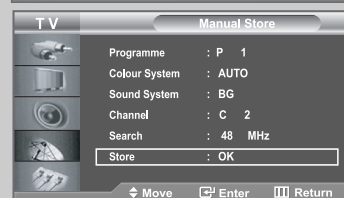

Editing the Channels



You can exclude the channels you chose from the channels you scanned. When you scan through the stored channels, those you have chosen to skip are not displayed.

All channels that you do not specifically choose to skip are displayed during scanning.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Channel**.
Press the **ENTER** button.
Result: The options available in the **Channel** group are displayed.
- 3 Press the **▲** or **▼** button to select **Add/Delete**.
Press the **ENTER** button.
Result: The state of the current channel is displayed.
- 4 Press the **▲/▼** button to select channel that you wish to add or delete.
Result: If the channel that you wish to edit is not in memory, the **Add** is selected and displayed.
Otherwise, if the channel that you wish to edit is in memory, the **Delete** is selected and displayed.
- 5 Press the **ENTER** button to add or delete channel.
- 6 Repeat steps 4 and 5 for each channel to be added or deleted.
- 7 Press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

➤ You can also add or delete channel by simply pressing the **ADD/DEL** button under the remote's cover.

Sorting the Stored Channels

You can exchange the numbers of two channels, in order to:

- ◆ *Modify the numeric order in which the channels have been automatically stored.*
- ◆ *Give easily remembered numbers to the channels that you watch most often.*

1 Press the **MENU**  button.

 
Result: The main menu is displayed.

2 Press the **▲** or **▼** button to select **Channel**.
Press the **ENTER**  button.


Result: The options available in the **Channel** group are displayed.

3 Press the **▲** or **▼** button to select **Sort**.
Press the **ENTER**  button.

Result: The **Prog.**, **Ch.** and **Name** are displayed.


4 Select the channel number that you wish to change by pressing the **▲** or **▼** button repeatedly.
Press the **ENTER**  button.




Result: The selected the channel number and name are moved to right side.

5 Press the **▲** or **▼** button to move to the position in which you would like to change and then press the **ENTER**  button.


Result: The selected channel is exchanged with the one previously stored to the chosen number.

 6 Repeat steps 4 to 5 for another channel to be sorted.

7 Press the **MENU**  button to return to the previous menu or press the **EXIT** button to return to normal viewing.

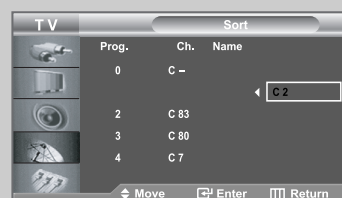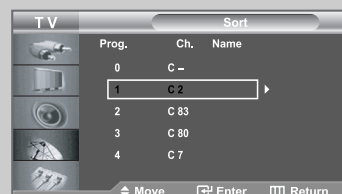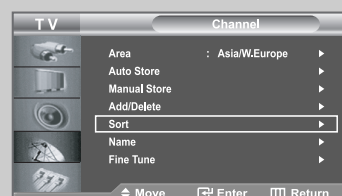

Assigning Channels Names

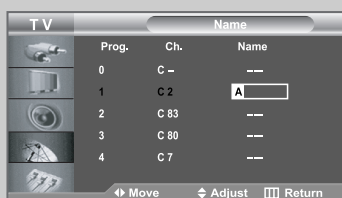

Channel names will be assigned automatically when channel information is broadcast. These names can be changed, allowing you to assign new names.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel**. Press the **ENTER** button.

Result: The options available in the **Channel** group are displayed.

- 3 Press the **▲** or **▼** button to select **Name**. Press the **ENTER** button.

Result: The current **Prog.**, **Ch.** and **Name** are displayed.

- 4 If necessary, select the channel to be assigned to a new name by pressing the **▲** or **▼** button. Press the **ENTER** button.

Result: The selection bar is displayed around the name box.

- | 5 | To... | Then... |
|---|-----------------------------------|---------------------------------------|
| | Select a letter, number or symbol | Press the ▲ or ▼ button |
| | Move on the next letter | Press the ▶ button |
| | Move back the previous letter | Press the ◀ button |
| | Confirm the name | Press the ENTER button |

- The characters available are :
- ◆ Letters of the alphabet (A~Z)
 - ◆ Numbers (0~9)
 - ◆ Special characters (-, space)

- 6 Repeat steps 4 to 5 for each channel to be assigned to a new name.

- 7 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

Fine Tuning Channel Reception

If the reception is clear, you do not have to fine-tune the channel, as this is done automatically during the search and store operation. If, however, the signal is weak or distorted, you may have to fine-tune the channel manually.

➤ Select the channel that you want to fine tune.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel**.
Press the **ENTER** button.

Result: The options available in the **Channel** group are displayed.

- 3 Press the **▲** or **▼** button to select **Fine Tune**.
Press the **ENTER** button.

Result: The horizontal bar is displayed.


- 4 Press the **◀** or **▶** button to reach the required setting.
Press the **ENTER** button.

Result: An asterisk "*" appears on the right-hand side of the channel number. The channel number turns red.




➤ To reset the fine-tuning, select **Reset** by pressing the **▲** or **▼** button and then press the **ENTER** button.

- 5 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

➤ Fine tuned channels that have been saved are marked with an asterisk "*" on the right-hand side of the channel number in the channel banner. And the channel number turns red.

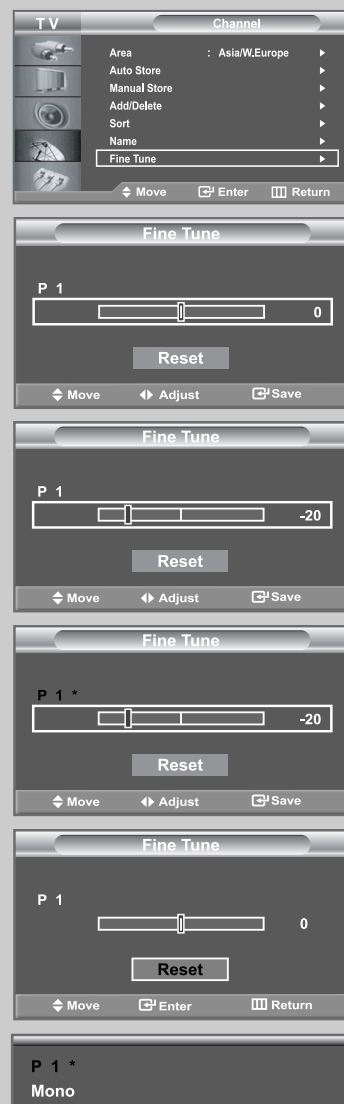

Changing the Picture Standard

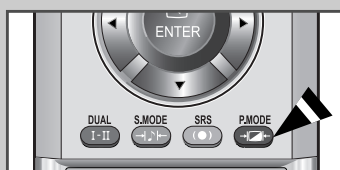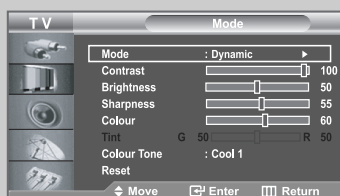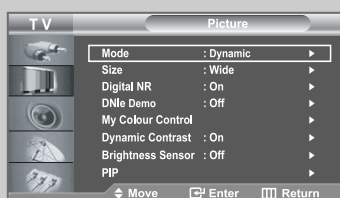

You can select the type of picture which best corresponds to your viewing requirements.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** button.
- 4 Press the **ENTER** button again.
Result: The options available in the **Mode** group are displayed.
- 5 Press the **ENTER** button.
Result: The **Mode** is selected.
- 6 Select the required picture effect by pressing the **▲** or **▼** button repeatedly.
Press the **ENTER** button.
Result: The following picture effects are available:
Dynamic - Standard - Movie - Custom
- 7 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

➤ You can also display by simply pressing the **P.MODE** (Picture Mode) button.

Adjusting the Custom Picture

Your set has several settings which allow you to control picture quality.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Picture**.

Result: The options available in the **Picture** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **ENTER** button again.

Result: The options available in the **Mode** group are displayed.

- 5 Select the option (**Contrast**, **Brightness**, **Sharpness**, **Colour**, **Tint**) to be adjusted by pressing the **▲** or **▼** button. Press the **ENTER** button.

Result: The horizontal bar is displayed.



In PC mode only Contrast and Brightness can be adjusted.

- 6 Press the **◀** or **▶** button to reach the required setting. Press the **ENTER** button.

- 7 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

 




- ◆ The adjusted values are stored according to the selected Picture mode.

- ◆ Each adjusted setting will be stored separately according to its input mode.

- ◆ The Tint is "inactivated" as following cases.

- Analog mode (RF, Video, S-Video)
In case of an input signal setting to PAL-50, PAL-CN, and SECAM.
- Component, DVI, and HDMI mode
In case of an input signal setting to 60Hz; 480i, 480p, 720p @60Hz, 1080i @60Hz.

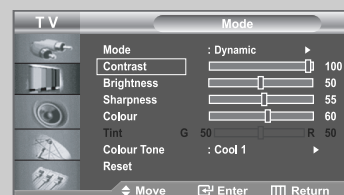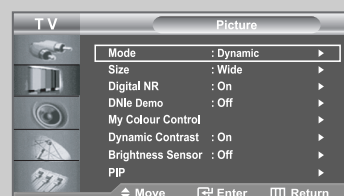

Changing the Colour Tone



You can select the most comfortable colour tone to your eye.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** button.
- 4 Press the **ENTER** button again.
Result: The options available in the **Mode** group are displayed.
- 5 Press the **▲** or **▼** button to select **Colour Tone** and press the **ENTER** button. Select the required option by pressing the **▲** or **▼** button repeatedly. Press the **ENTER** button.
Result: The following options are available:
Cool2 - Cool1 - Normal - Warm1 - Warm2
- 6 When you are satisfied with your choice, press the **EXIT** button to return to normal viewing.

➤ The **Colour Tone** will be set each picture mode.

Resetting the Picture Settings to the Factory Defaults



You can return to the factory defaults picture settings.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** button.
- 4 Press the **ENTER** button again.
Result: The options available in the **Mode** group are displayed.
- 5 Press the **▲** or **▼** buttons to select **Reset**, then press the **ENTER** button.
- 6 Press the **EXIT** button to return to normal viewing.

➤ The **Reset** will be set each picture mode.

Changing the Picture Size

You can select the picture size which best corresponds to your viewing requirements.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Picture**.

Result: The options available in the **Picture** group are displayed.

 
 
- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **Size** and press the **ENTER** button.

- 5 Select the required option by pressing the **▲** or **▼** button repeatedly.




Press the **ENTER** button.

Result: The following options are available:
Wide – Panorama – Zoom – 4:3

- **Wide:** Adjusts the picture size to 16:9 appropriate for DVDs or wide broadcasting.
- **Panorama:** Adjusts 16:9 to 4:3 in a natural way as for normal broadcasting.
- **Zoom:** Magnifies the 16:9 wide picture (in the vertical direction) to fit the screen size. Select  by pressing the **◀** or **▶** button. Use the **▲** or **▼** button to move the picture up and down. After selecting , use the **▲** or **▼** button to magnify or reduce the picture size in the vertical direction.
- **4:3:** This is the default setting for a video movie or normal broadcasting.



- ◆ You can select these options by simply pressing the **P.SIZE** (Picture Size) button under the remote's cover.
- ◆ In PC Mode, only Wide and 4:3 mode can be adjusted.
- ◆ If you press **P.SIZE** (Picture Size) button when PIP is set to on, PIP function will be cancelled and the picture size will be changed (except PC mode).

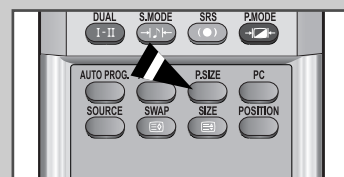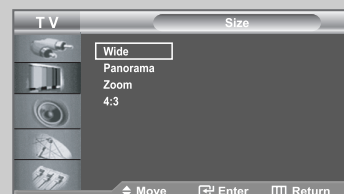
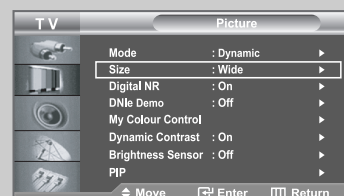


Freezing the Current Picture


*Press the **STILL** button to freeze a moving picture into a still one. Press again to cancel.*




Using the Digital NR (Digital Noise Reduction) Feature

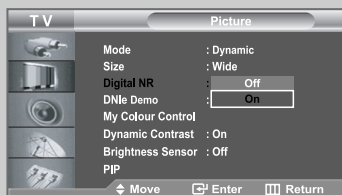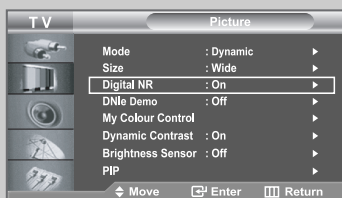



If the signal received by your television is weak, you can activate this feature to help reduce any static and ghosting that may appear on the screen.

-
- 1 Press the **MENU**  button.
Result: The main menu is displayed.

 - 2 Press the **▲** or **▼** button to select **Picture**.
Result: The options available in the **Picture** group are displayed.

 - 3 Press the **ENTER**  button.

 - 4 Press the **▲** or **▼** button to select **Digital NR**.
Press the **ENTER**  button.

 - 5 Press the **▲** or **▼** button to select **On**.
Press the **ENTER**  button.

 - 6 Press the **EXIT** button to return to normal viewing.
-

DNle (Digital Natural Image engine)

Samsung's new technology brings you more detailed images with contrast and white enhancement. A new image compensation algorithm gives viewers brighter and clearer images.

DNle technology will match every signal to your eyes.

You can see how DNle improves the picture by setting DNle Demo mode to On.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Picture**.

Result: The options available in the **Picture** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **DNle Demo** and then press the **ENTER** button.
Press the **▲** or **▼** button to select **On**.
Press the **ENTER** button.

➤ **DNle Demo: Off**
DNle Demo mode is deactivated.



DNle Demo: On

The right-hand side of the screen shows improved DNle image. The left-hand side of the screen shows the original image.







➤ You can also select these options by simply pressing the **DNle** button.

- 5 When you are satisfied with your choice, press the **EXIT** button to return to normal viewing.

- This function doesn't work when source is in PC mode.
- The **DNle Demo** is designed to show the difference between the regular and DNle pictures.
- By default, the product displays the picture with DNle applied.

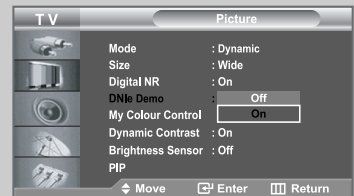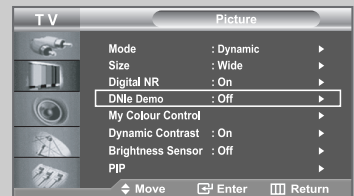

My Colour Control

 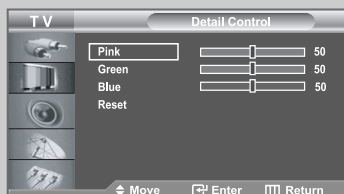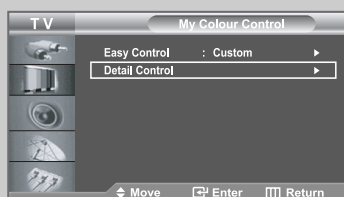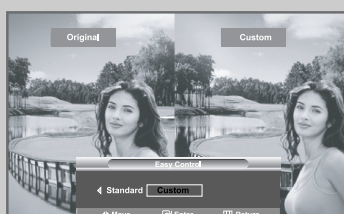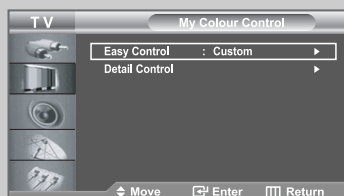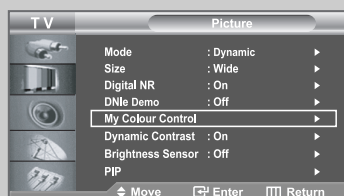

My Colour Control is to adjust the most preferred colours such as Blue, Green, Pink without interfering with other colours in order for each consumer to enjoy the screen colour of his/her choice.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Picture**.

Result: The options available in the **Picture** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **My Colour Control** and then press the **ENTER** button.

Result: The options available in the **My Colour Control** menu are displayed.

- 5 Press the **▲** or **▼** button to select **Easy Control** and press the **ENTER** button. Select a source of the sub picture by pressing the **◀** or **▶** button and press the **ENTER** button.

Result: The sources are displayed in the following order:
Blue - Green - Pink - Standard - Custom

- 6 Press the **▲** or **▼** button to select **Detail Control** and press the **ENTER** button. Select a source of the sub picture by pressing the **▲** or **▼** button and press the **ENTER** button.

Result: The sources are displayed in the following order:
Pink - Green - Blue - Reset

- 7 Press the **◀** or **▶** button to reach the required setting. Press the **ENTER** button.

- 8 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

- This function captures the current screen in a still image to adjust the colour.
- This function doesn't work when source is in PC mode and setting PIP.
- To return to the factory default settings for My Colour Control colours, select **Reset** by pressing the **▲** or **▼** button and then press the **ENTER** button.

Dynamic Contrast





Dynamic Contrast is to automatically detect distribution of inputted visual signal and adjust to create optimum contrast.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** button.
- 4 Press the **▲** or **▼** button to select **Dynamic Contrast**.
Press the **ENTER** button.
Result: The **Dynamic Contrast** menu is displayed.
- 5 Select **On** by pressing the **▲** or **▼** button.
Press the **ENTER** button.
- 6 When it has finished, press the **EXIT** button to return to normal viewing.

➤ This function doesn't work when source is in PC mode or PIP is set to on.



Brightness Sensor

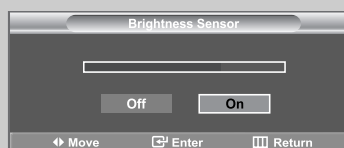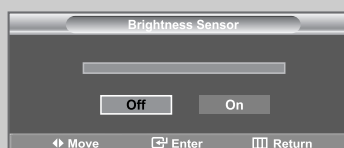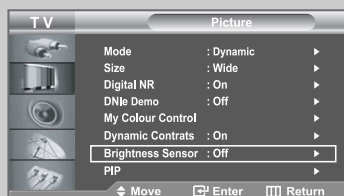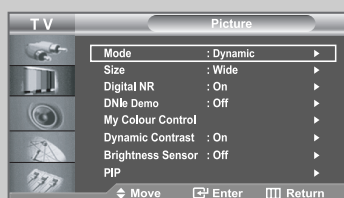

Brightness Sensor is to adjust brightness of screen either automatically or manually by detecting brightness of surrounding environment using light detecting sensor.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Picture**.

Result: The options available in the **Picture** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **Brightness Sensor**. Press the **ENTER** button.

Result: The **Brightness Sensor** menu is displayed.

- 5 Select **On** by pressing the **◀** or **▶** button. Press the **ENTER** button.

Result: Brightness on the screen is adjusted automatically according to brightness of surrounding environment.

- 6 When it has finished, press the **ENTER** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

➤ This function doesn't work when source is in PC mode.

Viewing the Picture In Picture (PIP)

You can display a sub picture within the main picture of set programme or video input. In this way, you can watch the picture of set programme or video input from any connected equipment while watching the main picture.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Picture**.

Result: The options available in the **Picture** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **PIP** and then press the **ENTER** button.

Result: The options available in the **PIP** menu are displayed.

- 5 Press the **ENTER** button again. Select **On** by pressing the **▲** or **▼** button and then press the **ENTER** button.

- 6 Press the **▲** or **▼** button to select **Source** and press the **ENTER** button. Select a source of the sub picture by pressing the **▲** or **▼** button and press the **ENTER** button.

Result: When the main picture is set to TV/AV1/AV2/S-Video/Component1/Component2, only HDMI can be selected and when the main picture is set to PC/HDMI, only TV/AV1/AV2/S-Video/Component1/Component2 can be selected.

➤ You can choose only those external devices that are connected to the TV.

- 7 Press the **▲** or **▼** button to select **Swap**. To interchange the main picture and the sub picture, select **Swap** option and press the **ENTER** button.

Result: The main picture and the sub picture are interchanged.




➤ If main picture is in **PC** mode, **Swap** is not available.

- 8 Press the **▲** or **▼** button to select **Size** of sub picture and then press the **ENTER** button. Select a size of the sub picture by pressing the **▲** or **▼** button and then press the **ENTER** button.

Result: The sizes are displayed in the following order:

□ - □ - □




➤ If main picture is in **PC** mode, **Size** is not available.

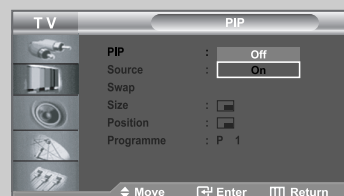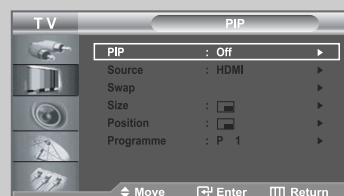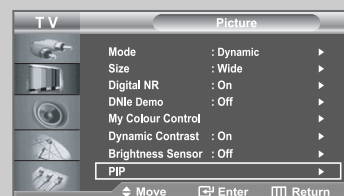



[TV/AV1/AV2/S-Video/Component1/Component2]



[PC/HDMI]

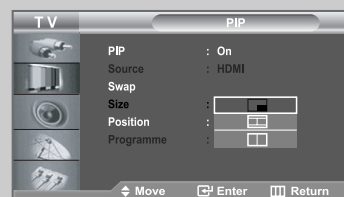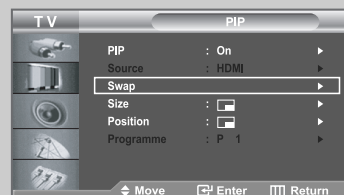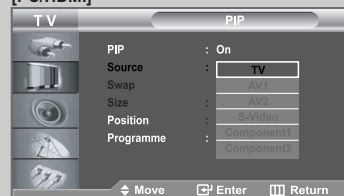

Viewing the Picture In Picture (PIP)

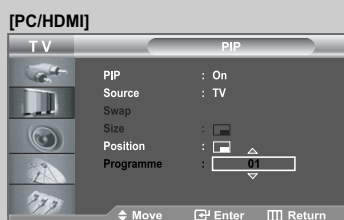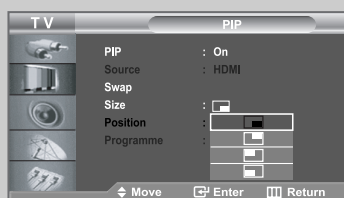

- 9 Press the ▲ or ▼ button to select **Position** and then press the **ENTER** button.
Select the position of the sub picture by pressing the ▲ or ▼ button and then press the **ENTER** button.

Result: You can move the sub picture.

➤ When the size of the sub picture is set to or , this feature does not work.

- 10 Press the ▲ or ▼ button to select **Programme** and then press the **ENTER** button. You can select the channel that you want to view through sub picture by pressing the ▲ or ▼ button. Press the **ENTER** button.

Result: The memorized **Programme** is displayed.

➤ **Main: PC/HDMI, Sub: TV**
"Programme" is inactive and not available in TV mode. However, they become active and available in PC/HDMI mode.

- 11 To return to normal viewing, press the **EXIT** button.

➤ **Remote-control functions while "PIP" is "On":**

Features	Description
PIP	Used to operate On/Off function of PIP directly.
SOURCE	Used to select a source of the sub picture.
SWAP	Used to interchange the main picture and the sub picture. ➤ When the main picture is in the video mode and the sub picture is in the TV mode, you might not hear the sound of the main picture when pressing the SWAP button after changing the sub picture channel. At this time, reselect the main picture channel.
POSITION	You also move the sub picture simply by pressing the POSITION button.
SIZE	Select a size of the sub picture by pressing the SIZE button.

➤ PIP Settings

O : PIP operates
X : PIP doesn't operate

Main \ Sub	TV	AV1	AV2	S-Video	Component1	Component2	PC	HDMI
TV	X	X	X	X	X	X	X	O
AV1	X	X	X	X	X	X	X	O
AV2	X	X	X	X	X	X	X	O
S-Video	X	X	X	X	X	X	X	O
Component1	X	X	X	X	X	X	X	O
Component2	X	X	X	X	X	X	X	O
PC	O	O	O	O	O	O	X	X
HDMI	O	O	O	O	O	O	X	X

Adjusting the Volume

You can adjust the volume using your remote control.

Press the **+** button to increase the volume.

Result: A horizontal bar is displayed and the volume increases until you release the button. The cursor moves to the right to indicate the volume.

Press the **-** button to decrease the volume.

Result: A horizontal bar is displayed and the volume decreases until you release the button. The cursor moves to the left to indicate the volume.

➤ Additional sound adjustments are available on your set. For further details, refer to pages **34** to **39**.



Switching the Sound Off Temporarily



You can switch the sound off temporarily.

Example: You wish to answer the telephone.

- 1 Press the **MUTE** button.
Result: The sound is switched off and **"Mute"** is displayed.
- 2 When you wish to turn the sound back on, press the **MUTE** button again or either of the volume buttons.
Result: The sound comes back on as the same volume as before and the **"Mute"** indication disappears.

Selecting the Sound Mode



You can set the sound mode by pressing the **"DUAL"** button.

When you press it, the current sound mode is displayed on the screen.

	Audio Type	DUAL I/II	Default
FM Stereo	Mono	MONO	Automatic change
	Stereo	STEREO ↔ MONO	
	Dual	DUAL I ↔ DUAL II	DUAL I
	Mono	MONO	Automatic change
NICAM Stereo	Stereo	MONO ↔ STEREO	
	Dual	<div> <div>MONO ↔ DUAL I</div> <div>DUAL II ←</div> </div>	DUAL I


- If the receiving conditions deteriorate, listening will be easier if the mode is set to **Mono**.
- ◆ If the stereo signal is weak and automatic switching occurs, switch to **Mono**.

Changing the Sound Standard

You can select the type of the special sound effect to be used when watching a given broadcast.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the **ENTER** button.
- 4 Press the **ENTER** button again.
Result: The **Mode** is selected.
- 5 Select the required sound effect by pressing the **▲** or **▼** button repeatedly and then press the **ENTER** button.
Result: The following sound effects are available:
Standard - Music - Movie - Speech - Custom
- 6 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

➤ You can also select these options by simply pressing the **S.MODE** (Sound Mode) button on the remote control.

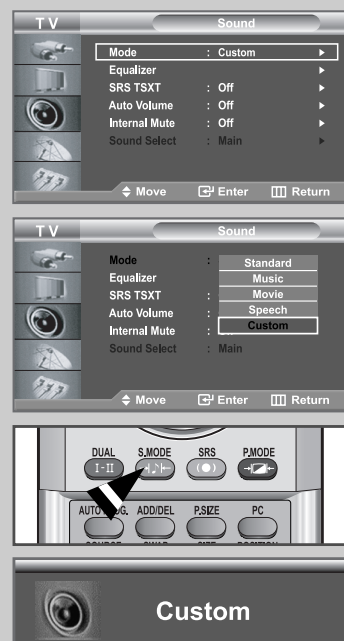

Adjusting the Sound Settings

The sound settings can be adjusted to suit your personal preferences.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the **ENTER** button.
- 4 Select **Equalizer** by pressing the **▲** or **▼** button and then press the **ENTER** button.
- 5 Select the required option by pressing the **◀** or **▶** button.
- 6 Press the **▲** or **▼** button to reach the required setting.
Press the **ENTER** button.
- 7 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

➤ If you make any changes to these settings, the Sound Mode is automatically switched to **Custom**.

➤ L/R Sound Balance Adjustment




To adjust the sound balance of the L/R speakers.

➤ Bandwidth Adjustment (100, 300, 1k, 3k, 10k)

To adjust the level of different bandwidth frequencies.



Setting the TruSurround XT (SRS TSXT)

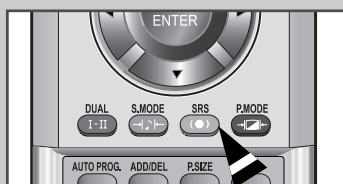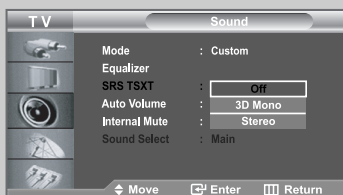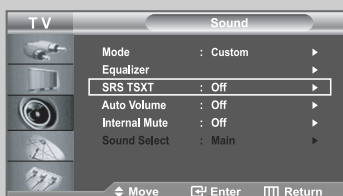

TruSurround XT is a patented SRS technology that solves the problem of playing 5.1 multichannel content over two speakers.

TruSurround delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Sound**.

Result: The options available in the **Sound** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **SRS TSXT** and then press the **ENTER** button.


- 5 Select the required option by pressing the **▲** or **▼** button. Press the **ENTER** button.

Result: The sources are displayed in the following order:
Off - 3D Mono - Stereo

- 6 Press the **EXIT** button to return to normal viewing.

➤ You can also set these options simply by pressing the **SRS** button on remote control.



TruSurround XT, SRS and  symbol are trademarks of SRS Labs, Inc. TruSurround XT technology is incorporated under license from SRS Labs, Inc.

Adjusting the Volume Automatically

Each broadcasting station has its own signal conditions, and so it is not easy for you to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Sound**.
Press the **ENTER** button.

Result: The options available in the **Sound** group are displayed.

- 3 Press the **▲** or **▼** button to select **Auto Volume**.
Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **On**.
Press the **ENTER** button.

- 5 Press the **EXIT** button to return to normal viewing.



Connecting Headphones




You can connect a set of headphones to your set if you wish to watch a TV programme without disturbing the other people in the room.

Plug a set of headphones into the 3.5mm mini-jack socket on the rear panel of the set.

Result: The sound is heard through the headphones.

- For further details on how to set your headphone preferences, refer to the section below.
 - When you insert the head set jack into the corresponding port, you can operate only **SRS TSXT**, **Internal Mute** and **Sound Select** (in PIP mode) in Sound menu.
-
- Prolonged use of headphones at a high volume may damage your hearing.
 - You will not receive sound from the speakers when you connect headphones to the system.

Selecting the Internal Mute

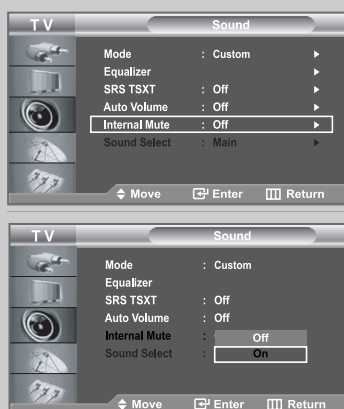

If you want to hear the sound through separate speakers, cancel the internal amplifier.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Sound**.

Result: The options available in the **Sound** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **Internal Mute**.
Press the **ENTER** button.

- 5 Press the **▲** or **▼** button to select **On**.
Press the **ENTER** button.

- 6 Press the **EXIT** button to return to normal viewing.

- When **Internal Mute** is set to **On**, the Sound menus except for **Sound Select** (in PIP mode) cannot be adjusted.

Listening to the Sound of the Sub Picture

During the PIP feature is activating, you can listen to the sound of the sub picture.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Sound**.

Result: The options available in the **Sound** group are displayed.

- 3 Press the **ENTER** button.

- 4 Press the **▲** or **▼** button to select **Sound Select** and then press the **ENTER** button.



Result: **Main** and **Sub** are displayed.

➤ You can select this option when the PIP is in "On".





- 5 Select the **Sub** by pressing the **▲** or **▼** button.
Press the **ENTER** button.

Result: You can listen to the sound of the sub picture.

➤ To listen the sound of the current main picture, set to **Main**.

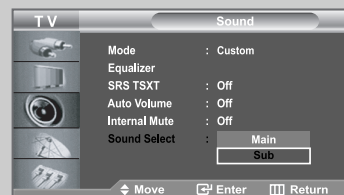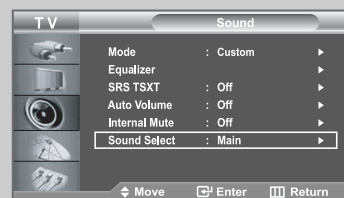

Setting and Displaying the Current Time

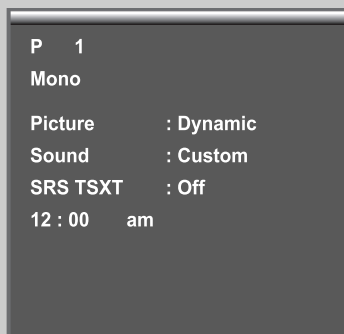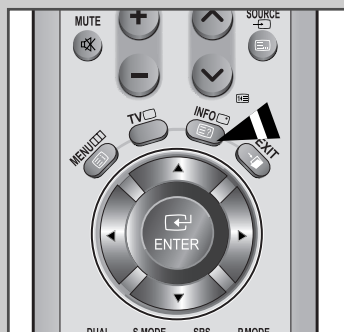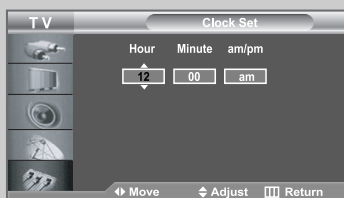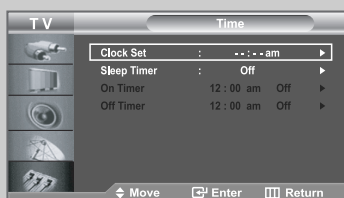

*You can set the TV's clock so that the current time is displayed when you press the **INFO** button. You must also set the time if you wish to use the automatic On/Off timers.*

➤ If you disconnect the power cord, you have to set the clock again.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.

Result: The options available in the **Setup** group are displayed.

- 3 Press the **▲** or **▼** button to select **Time**.
Press the **ENTER** button.

Result: The **Time** menu is displayed with **Clock Set** selected.

- 4 Press the **ENTER** button.

- 5

To...	Press the...
--------------	---------------------

Move to Hour , Minute or am/pm	◀ or ▶ button
---	---------------

Set the Hour , Minute or am/pm	▲ or ▼ button
---	---------------

Press the **ENTER** button.

- 6 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

- 7

To display the...	Press the...
--------------------------	---------------------

Current time and selected audio/video setting status	INFO button
--	--------------------

➤ You can also set hour and minute by pressing the number buttons on the remote control.

 



Setting the Sleep Timer

You can select a time period of between 30 and 180 minutes after which the television automatically switches to standby mode.





- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **▲** or **▼** button to select **Time**.
Press the **ENTER** button.
Result: The **Time** menu is displayed with **Clock Set** selected.
- 4 Press the **▲** or **▼** button to select **Sleep Timer**.
Press the **ENTER** button.
- 5 Press the **▲** or **▼** button repeatedly and cycle through the preset time intervals (Off, 30, 60, 90, 120, 150, 180).
Press the **ENTER** button.
Result: The TV automatically switches to standby mode when the timer reaches 0.
- 6 To cancel the sleep timer function, select **Off** by pressing the **▲** or **▼** button and then press the **ENTER** button.
- 7 Press the **EXIT** button to return to normal viewing.

You can set the sleep timer by simply pressing the **SLEEP** button on the remote control.

- 1 Press the **SLEEP** button on the remote control.
Result: If the sleep timer is not yet set, **Off** is displayed.
Otherwise, the remaining time before which the television switches to standby mode is displayed.
- 2 Select the preset time interval for staying on by pressing the **SLEEP** button repeatedly.

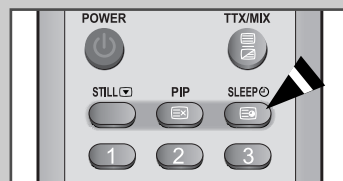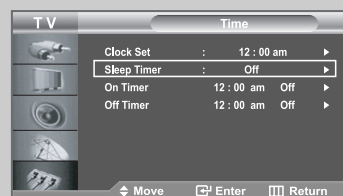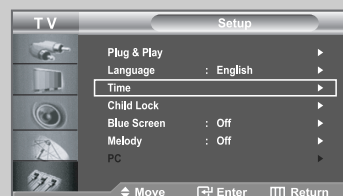

Switching the Television On and Off Automatically

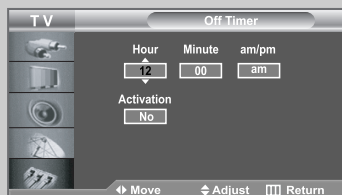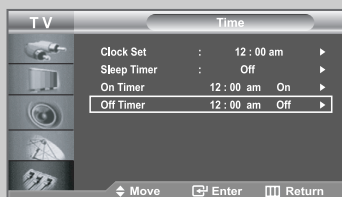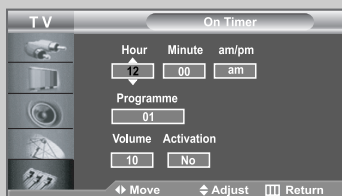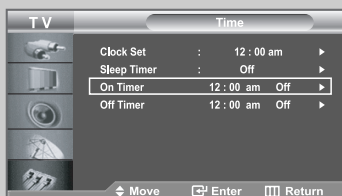

You can set the On/Off timers so that the set will:

- ◆ Switch on automatically and tune to the channel of your choice at the time you select.
- ◆ Switch off automatically at the time you select.

➤ The first step is to set the television's clock (refer to "Setting and Displaying the Current Time" on page 40).

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Setup**. Press the **ENTER** button.

Result: The options available in the **Setup** group are displayed.

- 3 Press the **▲** or **▼** button to select **Time**. Press the **ENTER** button.

Result: The **Time** menu is displayed with **Clock Set** selected.

- 4 Press the **▲** or **▼** button to select **On Timer**. Press the **ENTER** button.

Result: The **On Timer** menu is displayed.

- 5 Set the time, channel and volume level at which you wish the set to be switched on.

To...	Press the...
Move to Hour, Minute, am/pm, Programme and Volume	◀ or ▶ button
Set Hour, Minute, am/pm, Programme and Volume	▲ or ▼ button
Move to Activation	◀ or ▶ button
Select Yes to enable above setting	▲ or ▼ button

Press the **ENTER** button.

- 6 Press the **▲** or **▼** button to select **Off Timer**. In the same way, set the time at which you wish the set to be switched off automatically.

➤ You can set the hour, minute, programme, and volume directly by pressing the number buttons on the remote control.

Activating the Child Lock

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programmes by muting out video and audio. Child Lock cannot be released using the buttons on the lower-right side panel. Only the remote control can release the Child Lock setting, so keep the remote control away from children.

➤ *This function does not work in PC mode.*

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **▲** or **▼** button to select **Child Lock**.
Press the **ENTER** button.
Result: The options available in the **Child Lock** group are displayed.
- 4 Press the **ENTER** button again.
Result: The **Child Lock** is selected.
- 5 Press the **▲** or **▼** button to select **On**.
Press the **ENTER** button.
- 6 Press the **▲** or **▼** button to select **Programme**.
Press the **ENTER** button.
- 7 Press the **▲** or **▼** button to select the channels to lock.
Press the **ENTER** button.
- 8 Press the **▲** or **▼** button to select **Lock**.
Press the **ENTER** button.
- 9 Press the **▲** or **▼** button to select **Locked** to lock the channels.
Press the **ENTER** button.
- 10 Repeat steps 6 and 9 for each channel to be locked or unlocked.
- 11 Press the **EXIT** button to return to normal viewing.



Setting the Blue Screen Mode



*If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background.
If you wish to continue viewing the poor picture, you must set the "Blue Screen" mode to "Off".*

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **▲** or **▼** button to select **Blue Screen**.
Press the **ENTER** button.
- 4 Press the **▲** or **▼** button to select **On**.
Press the **ENTER** button.
- 5 Press the **EXIT** button to return to normal viewing.

Selecting the Melody



You can hear melody sound when the television is powered on or off.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **▲** or **▼** button to select **Melody**.
Press the **ENTER** button.
- 4 Press the **▲** or **▼** button to select **On**.
Press the **ENTER** button.
- 5 Press the **EXIT** button to return to normal viewing.

Selecting a Device from External Sources

Your set enables you to choose which audio/video signals are output to the external connector.

- 1 Press the **MENU** button.
Press the **ENTER** button to select **Input**.
Result: The options available in the **Input** group are displayed.
- 2 Press the **ENTER** button.
Result: The sources are displayed in the following order:
TV - AV1 - AV2 - S-Video - Component1 - Component2 - PC - HDMI
➤ You can choose only those external devices that are connected to the TV.
- 3 Select the required device by pressing the **▲** or **▼** button.
Press the **ENTER** button.
- 4 Repeat step 1.
Press the **▲** or **▼** button to select **Edit Name**.
Press the **ENTER** button.
Result: The options available in the **Edit Name** menu are displayed.
- 5 Select the device that you wish to edit by pressing the **▲** or **▼** button.
Result: The following options are available:
AV1 - AV2 - S-Video - Component1 - Component2 - PC - HDMI
- 6 Press the **ENTER** button.
- 7 Select the required device by pressing the **▲** or **▼** button repeatedly.
Press the **ENTER** button.
Result: The following options are available:
---- - **VCR - DVD - D-VHS - Cable STB - HD STB - Satellite STB - AV Receiver - DVD Receiver - Game - Camcorder - DVD Combo - DHR - PC**
- 8 When you are satisfied with the setting, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

➤ DHR: DVD HDD Recorder



Viewing Pictures from External Sources



Once you have connected up your various audio and video systems, you can view the different sources by selecting the appropriate input.


- 1 Check that all the necessary connections have been made.
 - 2 Press the **SOURCE** button.
Result: The edited device and audio status are displayed on top-left of the set.
 - 3 Press the **SOURCE** button until the required input source is selected.
➤ If you change the external source while viewing, pictures might take a short period of time to be switched.
- **TV** mode can be selected by pressing the **TV** or **▲/▼** button on the remote control but you cannot select it by pressing the **SOURCE** button.

Setting up Your PC Software (Based on Windows XP)


The Windows display-settings for a typical computer are shown below. But the actual screen on your PC will probably be different, depending upon your particular version of Windows and your particular video card. But even if your actual screen look different, the same, basic set-up information will apply in almost all cases. (If not, contact your computer manufacturer or Samsung Dealer.)



- 1 First, click on “Control Panel” on the Windows start menu.

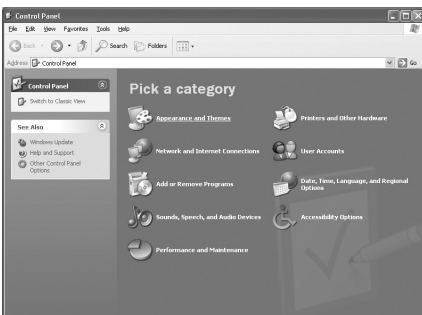

- 2 When the control panel window appears, click on “Appearance and Themes” and a display dialog-box will appear.

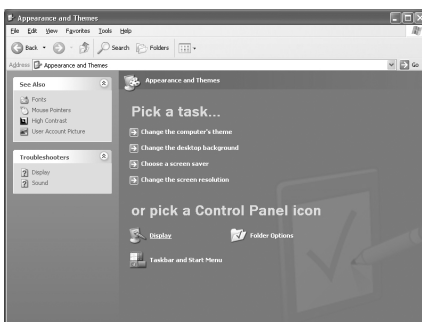

- 3 When the control panel window appears, click on “Display” and a display dialog-box will appear.



- 4 Navigate to the “Settings” tab on the display dialog-box.



The correct size setting (resolution)

Optimum: 1360 x 768

If a vertical-frequency option exists on your display settings dialog box, the correct value is “60” or “60 Hz”. Otherwise, just click “OK” and exit the dialog box.

*See “Display Modes” on page 61.

Adjusting the PC Screen Automatically

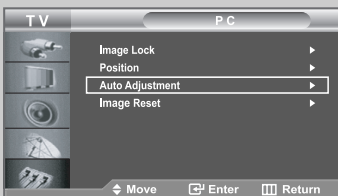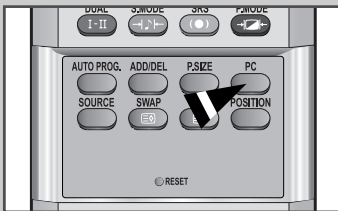

Auto Adjustment in progress.
Please wait.

*Auto adjustment allows the PC screen of set to self-adjust to the incoming PC video signal.
The values of fine, coarse and position are adjusted automatically.*

➤ Press the **PC** button under the remote's cover to select the PC mode.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.

Result: The options available in the **Setup** group are displayed.

- 3 Press the **▲** or **▼** button to select **PC**.
Press the **ENTER** button.

Result: The options available in the **PC** menu are displayed.


- 4 Press the **▲** or **▼** button to select **Auto Adjustment**.
Press the **ENTER** button.

Result: The screen quality and position are automatically adjusted.

Coarse and Fine Tuning of the Image


The purpose of picture quality adjustment is to remove or reduce picture noise. If the noise is not removed by Fine-tuning alone, then adjust the frequency as best as possible (coarse) and Fine-tune again. After the noise has been reduced, re-adjust the picture so that it is aligned on the center of screen.

➤ Press the **PC** button under the remote's cover to select the PC mode.

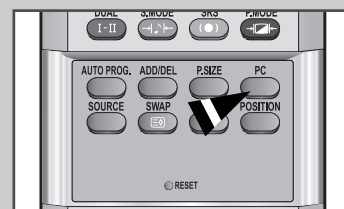

- 1 Press the **MENU** button.

Result: The main menu is displayed.

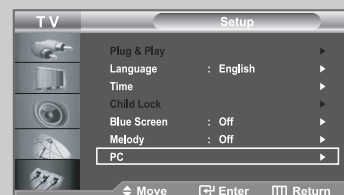


- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.

Result: The options available in the **Setup** group are displayed.

- 3 Press the **▲** or **▼** button to select **PC**.
Press the **ENTER** button.

Result: The options available in the **PC** menu are displayed.

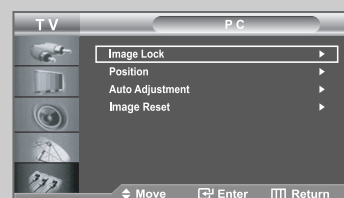


- 4 Press the **ENTER** button again.

Result: The **Image Lock** menu is selected.

- 5 Press the **▲** or **▼** button to select **Coarse** or **Fine**.
Press the **ENTER** button.

Result: The horizontal bar is displayed.

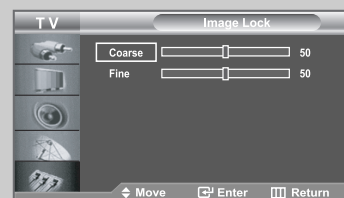





- 6 Press the **◀** or **▶** button to adjust the screen quality.
Press the **ENTER** button.

➤ Vertical stripes may appear or the picture may become blurry.



- 7 When you are satisfied with the settings, press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

Changing the Image Position

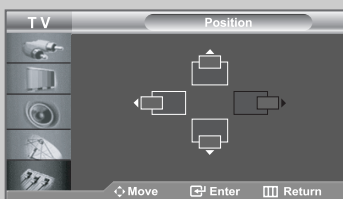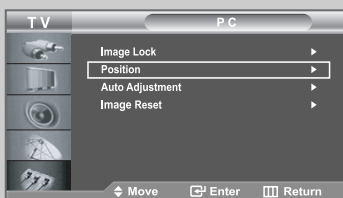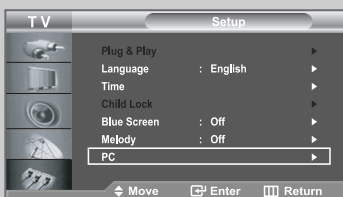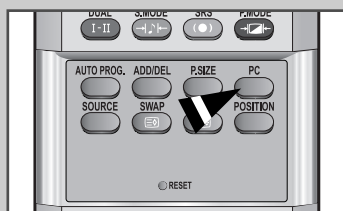

➤ Press the **PC** button under the remote's cover to select the PC mode.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.

Result: The options available in the **Setup** group are displayed.

- 3 Press the **▲** or **▼** button to select **PC**.
Press the **ENTER** button.

Result: The options available in the **PC** menu are displayed.

- 4 Press the **▲** or **▼** button to select **Position**.
Press the **ENTER** button.

Result: You can adjust the image **Position**.

- 5 Press the **◀** or **▶** button to adjust horizontal position.
Press the **▲** or **▼** button to adjust vertical position.
Press the **ENTER** button.

- 6 Press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

Initializing the Image Settings

You can replace all image settings with the factory default values.

➤ Press the **PC** button under the remote's cover to select the PC mode.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Setup**.
Press the **ENTER** button.

Result: The options available in the **Setup** group are displayed.





- 3 Press the **▲** or **▼** button to select **PC**.
Press the **ENTER** button.

Result: The options available in the **PC** menu are displayed.


- 4 Press the **▲** or **▼** button to select **Image Reset**.
Press the **ENTER** button.

Result: You can initialize all image setting to the factory default values.

- 5 Press the **MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

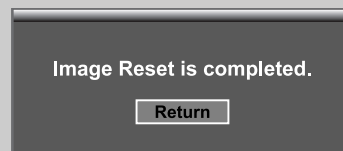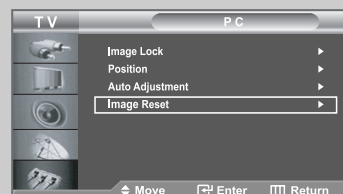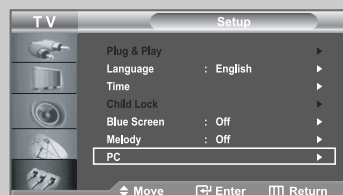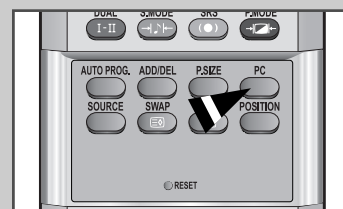

Teletext Decoder

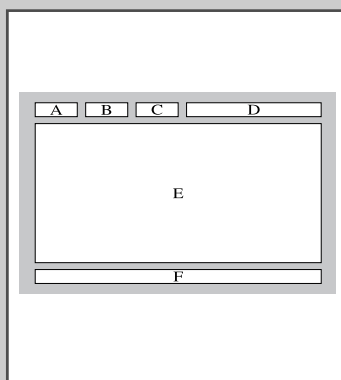

Most set channels carry “teletext”, pages of written information that provide information such as:

- ◆ Television programme times.
- ◆ News bulletins and Weather forecasts.
- ◆ Sports results.
- ◆ Subtitles for the hard of hearing.

The teletext pages are organized according to six categories:

Part	Contents
A	Selected page number.
B	Broadcasting station identity.
C	Current page number or search status.
D	Date and time.
E	Text.
F	Status information.

Displaying the Teletext Information



You can display teletext information at any time, but signal reception must be good. Otherwise:

- ◆ Information may be missing.
- ◆ Some pages may not be displayed.

To activate the teletext mode and display the contents page:

- 1 Using the (P) or (N) button, select the channel providing the teletext service.
- 2 Press the **TTX/MIX** (/) button to activate the teletext mode.
Result: The contents page is displayed. It can be redisplayed at any time by pressing the **MENU** () button.
- 3 Press the **TTX/MIX** (/) button again.
Result: The screen will split into two. This Double Teletext feature lets you view the actual broadcast and teletext information separately on the screen.
- 4 Press the **TTX/MIX** (/) button again.
Result: The actual broadcast will be displayed simultaneously with the teletext page on the screen.
- 5 To return to normal viewing, press the **PIP** () button.
- 6 Press the **TV** () button again to exit from the Text display.

➤ If any broken character appears while Text is being viewed, make sure that the Text language is identical with the language in the “Setup” menu mode. If both languages are different, select the same language with the Text language on the “Setup” menu.

Selecting a Specific Teletext Page

Press the number buttons on the remote control to enter the page number directly:

- 1 Enter the three-digit page number listed in the contents by pressing the corresponding numeric buttons.

Result: The current page counter is incremented and the page is then displayed.

- 2 If the selected page is linked with several secondary pages, the secondary pages are displayed in sequence. To freeze the display on a given page, press the **PRE-CH** (≡). Press the **PRE-CH** (≡) button again to resume.

- 3 Using the various display options:

To display...	Press the...
◆ Both teletext information and the normal broadcast	TTX/MIX (≡/⌂)
◆ Hidden text (answers to quiz games, for example)	INFO (ℹ)
◆ The normal screen	INFO (ℹ) again
◆ A secondary page, by entering its 4-digit number	SLEEP (⏸)
◆ The next page	Page Up (⏮)
◆ The previous page	Page Down (⏭)
◆ Double-size letters in the: <ul style="list-style-type: none"> • Upper half of the screen • Lower half of the screen 	SIZE (⏏) •Once •Twice
◆ Normal screen	•Three times



Using Fastext to Select a Teletext Page



The various topics included in the teletext pages are colour-coded, and can be selected by pressing the coloured buttons on the remote control.



- 1 Display the teletext contents page by pressing the **TTX/MIX** (≡/☐) button.
- 2 Press the coloured button corresponding to the topic that you wish to select (The available topics are listed on the status information line).

Result: The page is displayed with additional colour-coded information that can be selected in the same way.

- | 3 | To display the: | Press the: |
|---|-----------------|---------------|
| | Previous page | Red button. |
| | Next page | Green button. |
- 4 When you have finished, press the **PIP** (☒) button to return to the normal broadcast.

Troubleshooting: Before Contacting Service Personnel

Before contacting Samsung after-sales service, perform the following simple checks. If you cannot solve the problem using the instructions below, note the model and serial number of your set and contact your local dealer.


No sound or picture	<ul style="list-style-type: none"> ◆ Check that the mains lead has been connected to a wall socket. ◆ Check that you have pressed the POWER  buttons on the lower-right side panel. ◆ Check the picture contrast and brightness settings. ◆ Check the volume.
Normal picture but no sound	<ul style="list-style-type: none"> ◆ Check the volume. ◆ Check whether the MUTE  button has been pressed on the remote control. ◆ Check if "Internal Mute" is off.
No picture or black and white picture	<ul style="list-style-type: none"> ◆ Adjust the colour settings. ◆ Check that the broadcast system selected is correct.
Sound and picture interference	<ul style="list-style-type: none"> ◆ Try to identify the electrical appliance that is affecting the set and move it further away. ◆ Plug your set into a different mains socket.
Blurred or snowy picture, distorted sound	<ul style="list-style-type: none"> ◆ Check the direction, location and connections of your aerial. This interference is often due to the use of an indoor aerial.
Remote control malfunctions	<ul style="list-style-type: none"> ◆ Replace the remote control batteries. ◆ Clean the upper edge of the remote control (transmission window). ◆ Check the battery terminals.
"Check signal cable." message is displayed.	<ul style="list-style-type: none"> ◆ Check that the signal cable is firmly connected to the PC or video sources. ◆ Check that the PC or video sources are turned on.
On PC mode, "Not Supported Mode." message is displayed.	<ul style="list-style-type: none"> ◆ Check the maximum resolution and the frequency of the video adapter. ◆ Compare these values with the data in the Display Modes.
The image is too light or too dark.	<ul style="list-style-type: none"> ◆ Adjust the Brightness and Contrast.
On PC mode, horizontal bars appear to flicker, jitter or shimmer on the image.	<ul style="list-style-type: none"> ◆ Adjust the Fine function.
On PC mode, vertical bars appear to flicker, jitter or shimmer on the image.	<ul style="list-style-type: none"> ◆ Adjust the Coarse function and then adjust the Fine function.
On PC mode, screen is black and power indicator light blinks every 1 second.	<ul style="list-style-type: none"> ◆ The TV is using its power management system. ◆ Move the computer's mouse or press any key on the keyboard.
On PC mode, image is not stable and may appear to vibrate.	<ul style="list-style-type: none"> ◆ Check that the display resolution and frequency from your computer or video board is an available mode for your set. On your computer check: Control Panel, Display, Settings. ◆ If the setting is not correct, use your computer utility programme to change the display settings. <p>➤ Your set supports multiscan display functions within the following frequency domain:</p> <p>Horizontal frequency(kHz): 30~ 61</p> <p>Vertical frequency(Hz): 60~75</p> <p>Maximum refresh rate (at 60Hz): 1360 X 768</p>
On PC mode, image is not centered on the screen.	<ul style="list-style-type: none"> ◆ Adjust the horizontal and vertical position.

The TFT LCD panel uses a panel consisting of sub pixels (3,147,264) which require sophisticated technology to produce. However, there may be few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.


Installing the Wall Mount Kit (LA32M51B, LA40M51B, LA40M51BS)

➤ **This installation is to be used when attaching the wall mount to a concrete wall. When attaching to other building materials, please contact your nearest dealer.**

Components (Sold separately)

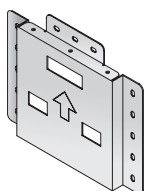

a Wall-Bracket

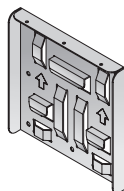

b Set-Bracket



 
M6 X L14

c Screw: 8EA



M4 X L25

d Wood Screw: 7EA




e Anchor: 7EA



M4 X L8

 f Screw: 3EA




g Installation Guide

How to assemble the Wall Mount Bracket

- 1 ① Mark the location of hole on the wall.
- ② Drill a hole of 35mm depth on the marked location.
- ③ Fix anchors **e** on each hole on the wall.
- ④ Connect wall-bracket **a** to the wall with wood screws **f** after fitting anchors **e** into the wall-bracket **a**.


Note: If the bracket is not firmly fixed to the wall, LCD TV can fall off.

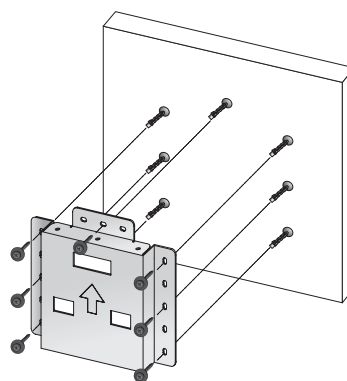

Installing the Wall Mount Kit (LA32M51B, LA40M51B, LA40M51BS)

How to assemble the Wall Mount Bracket


- 2 ① Turn the power off and unplug the power cord from the outlet.
 - ② Place the TV faced down on a soft cloth or cushion on a table.
 - ③ Remove the four screws from the back of the TV.
 - ④ Separate the stand from the TV.
 - ⑤ Cover the bottom hole with a cap
 - ⑥ Loosen two screws on the rear side of the TV set (only model LA40M51B/LA40M51BS applied).
 - ⑦ Attach the set-bracket ⑥ onto the rear side of the TV set and secure the screws ⑦.
- For 40 inches model, attach the bracket into the two holes with the two screws removed in step 6 above.

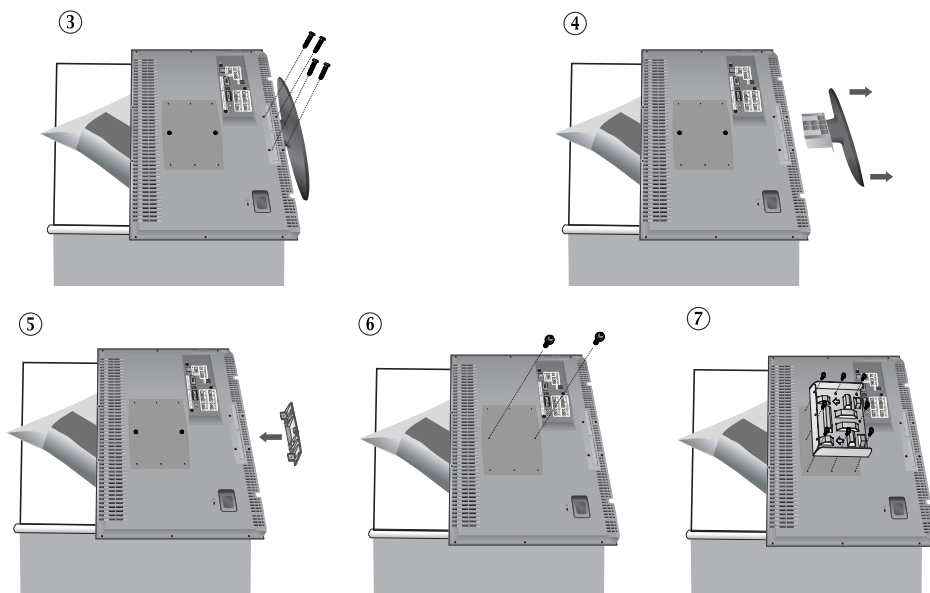

(Only Model LA40M51B/LA40M51BS Applied)

- 3 ① Insert three Hangers of the set-bracket ⑥ into the grooves of the wall-bracket ③.
- ② Fix set-bracket ⑥ and wall-bracket ③ with screws ①.

Note: Before installing the set on the wall, connect the cables to the set first.

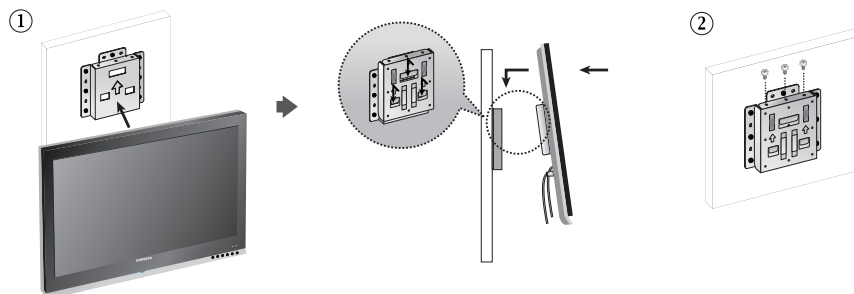

Installing the Wall Mount Kit (LA46M51B)


➤ Refer to the correct installation guide according to your wall bracket.

Installation Notes

- ◆ Contact a technician for installing the wall bracket.
- ◆ Samsung Electronics is not responsible for any damages to the product or harm to customers when the installation is done by the customer.
- ◆ This product is for installing on cement walls. The product may not stay in place when installed on plaster or wood.


Components (Sold separately)

- ◆ Only use the components and accessories shipped with the product.

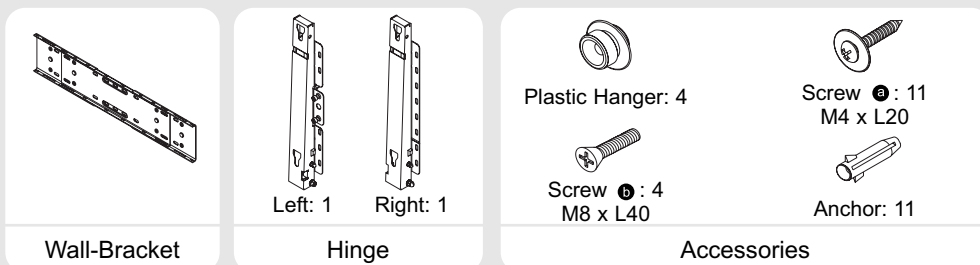


How to assemble the Wall Mount Bracket


- 1 ① Insert and tighten the Captive Screw in the direction of the arrow. When done, mount the wall bracket on the wall.

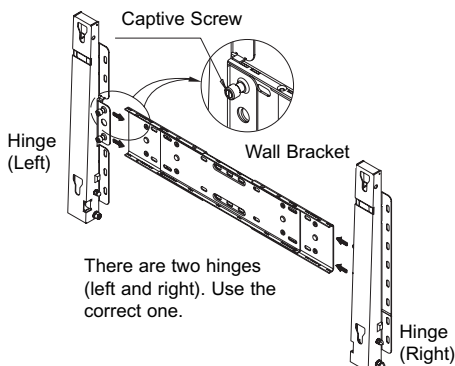

- 2 ② Before drilling into the wall, check if the length between the two locking holes at the back of the product is correct. If the length is too short or long, loosen all or some of the 4 screws on the wall bracket to adjust the length.

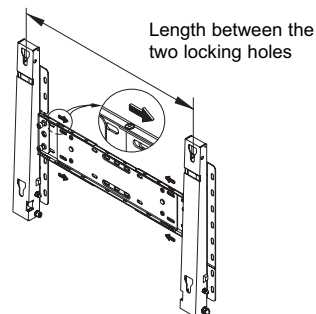

- 3 ③ Check the installation diagram and mark the drill points on the wall. Use the 5.0 mm bit to drill holes deeper than 35 mm. Fix each anchor in the corresponding hole. Match each of the brackets and hinge holes to the corresponding anchor holes and insert and tighten the 11 screws **a**.

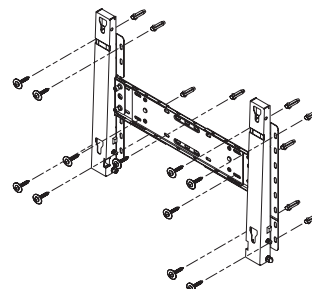


Installing the Wall Mount Kit (LA46M51B)


How to assemble the Wall Mount Bracket

- ◆ The shape of the product may vary depending on the model.
(The assemblies of the plastic hanger and the screw are the same)

- 2 ① Remove the 4 screws on the back of the product.

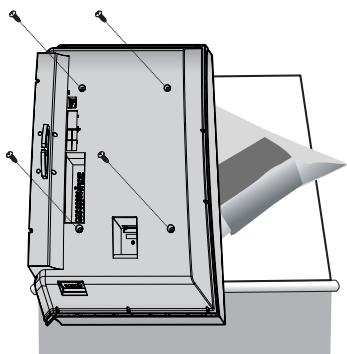


 - ② Insert the screw ⑥ into the plastic hanger. (See the figure below)




- ◆ Mount the product on the wall bracket and make sure it is properly fixed to the left and right plastic hangers.
- ◆ Be careful when installing the product on the bracket as fingers can be caught in the holes.
- ◆ Make sure the wall bracket is securely fixed to the wall, or the product may not stay in place after installation.

- ③ Tighten the 4 screws in step 2 (plastic hanger + screw ⑥) to the rear holes of the product.

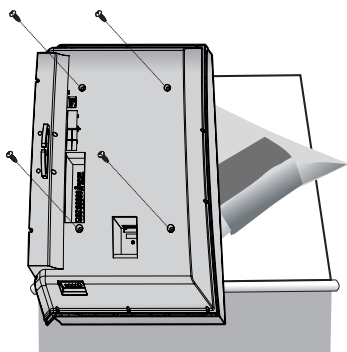


- ④ Remove safety pin (⑤) and insert the 4 product holders into the corresponding bracket holes (①). Then place the product (②) so that it is firmly fixed to the bracket. Make sure to reinsert and tighten the safety pin (⑤) to securely hold the product to the bracket.

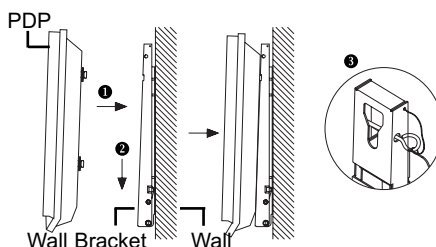


Wall Bracket Angle Adjustment

- Adjust the bracket angle to -2° before installing it on the wall.

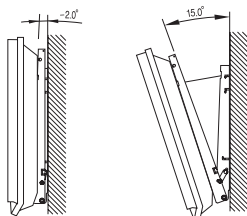


- 3 ① Fix the product to the wall bracket.
② Hold the product at the top in the center and pull it forward (direction of the arrow) to adjust the angle. (See the figure to the right)
③ You can adjust the bracket angle between -2° and 15° .

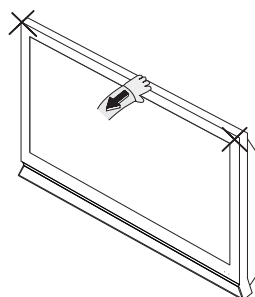

Make sure to use the top center, and not the left or the right side of the product to adjust the angle.

Installing the Stand (LA32M51B/LA32M51BS)

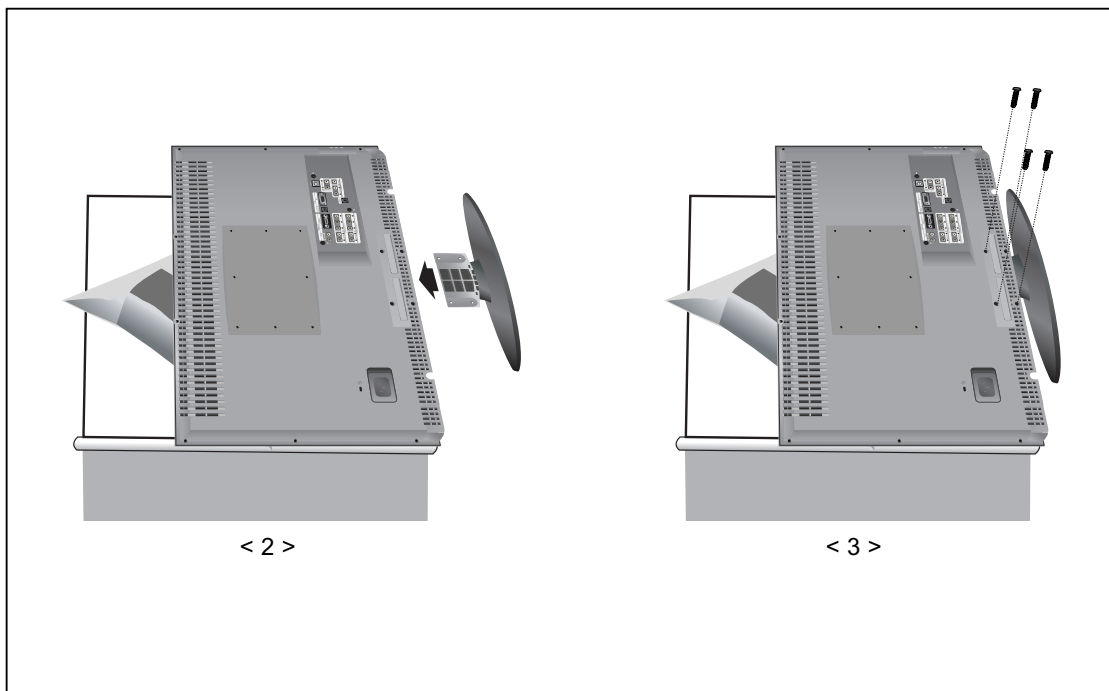


1. Place the TV faced down on a soft cloth or cushion on a table.
2. Attach the stand to the TV set as shown in the picture.
3. Use the four screws to tightly fix the stand.

Stand Swivel Function (32", 40" only)

Maximizing space is available with Stand swivel function

- This product supports left/right swivel function on the desk.
- You can adjust the angle up to 15° to the left or right.

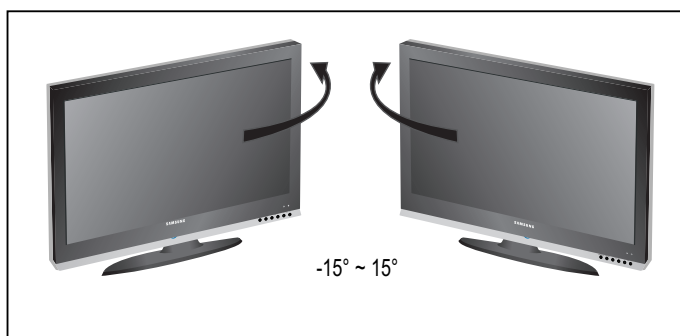

Please move away all the stuff around the monitor.

There should be enough space between the wall and the monitor.

Place the monitor on a flat and stable space to easily swivel the TV.


Using the Anti-Theft Kensington Lock

The Kensington lock is a device used to physically fix the system when using it in a public place.

The locking device has to be purchased separately.

The appearance and locking method may differ from the illustration depending on the manufacturer.

Please refer to the manual provided with the Kensington lock for proper use.

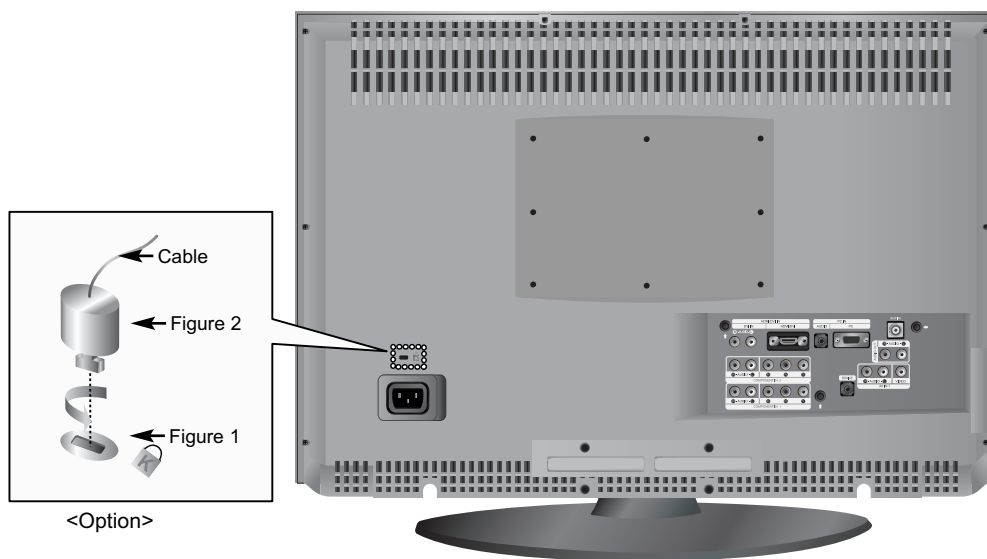


➤ The place of the Kensington Lock may be different depending on its model.

1. Insert the locking device into the Kensington slot on the LCD TV (Figure 1), and turn it in the locking direction (Figure 2).
2. Connect the Kensington lock cable.
3. Fix the Kensington lock to a desk or a heavy stationary object.

Technical and Environmental Specifications

Model Name	LA32M51B/LA32M51BS	LA40M51B/LA40M51BS	LA46M51B
Panel			
Size	32" Diagonal (16:9)	40" Diagonal (16:9)	46" Diagonal (16:9)
Display Size	697.68 (H) x 392.26 (V) mm (27.47 (H) x 15.44 (V) inches)	885.17 (H) x 497.66 (V) mm (34.85 (H) x 19.59 (V) inches)	1018.35 (H) x 527.54 (V) mm (40.09 (H) x 22.54 (V) inches)
Type	a-si TFT active matrix	a-si TFT active matrix	a-si TFT active matrix
Pixel Pitch	0.511 (H) x 0.511 (V) mm (0.0201 (H) x 0.0201 (V) inches)	0.648 (H) x 0.216 (V) mm (0.027 (H) x 0.0085 (V) inches)	0.2485 (H) x 0.7455 (V) mm (0.0098 (H) x 0.029 (V) inches)
Viewing Angle	170/170 (H/V)	170/170 (H/V)	170/170 (H/V)
Resolution	1366 (H) x 768 (V)	1366 (H) x 768 (V)	1366 (H) x 768 (V)
Frequency			
Horizontal	30 ~ 61 kHz	30 ~ 61 kHz	30 ~ 61 kHz
Vertical	60 ~ 75 Hz	60 ~ 75 Hz	60 ~ 75 Hz
Display Colour	16,777,216 colours	16,777,216 colours	16,777,216 colours
PC Resolution			
Maximum	1360 x 768 @ 60Hz	1360 x 768 @ 60Hz	1360 x 768 @ 60Hz
Optimum	1360 x 768 @ 60 Hz	1360 x 768 @ 60 Hz	1360 x 768 @ 60 Hz
Input Signal			
Sync.	H/V Separate, TTL, P. or N.	H/V Separate, TTL, P. or N.	H/V Separate, TTL, P. or N.
Video Signal	0.7 Vp-p @ 75 ohm	0.7 Vp-p @ 75 ohm	0.7 Vp-p @ 75 ohm
TV			
Colour System	PAL, SECAM-B/G, D/K, I, I/I, L/L', NTPB (AV3.58, 4.43)	PAL, SECAM-B/G, D/K, I, I/I, L/L', NTPB (AV3.58, 4.43)	PAL, SECAM-B/G, D/K, I, I/I, L/L', NTPB (AV3.58, 4.43)
Sound System	BG, DK, I, L	BG, DK, I, L	BG, DK, I, L
Video			
Colour System	PAL/NTSC/SECAM	PAL/NTSC/SECAM	PAL/NTSC/SECAM
Video System	CVBS, S-VHS, RGB	CVBS, S-VHS, RGB	CVBS, S-VHS, RGB
Component 1/2			
Video Input	1.0 Vp-p @ 75 ohm	1.0 Vp-p @ 75 ohm	1.0 Vp-p @ 75 ohm
Audio Input	500mVrms	500mVrms	500mVrms
Power Supply			
Input	AC 100 ~ 240 V, 60/50 Hz \pm 3Hz	AC 100 ~ 240 V, 60/50 Hz \pm 3Hz	AC 100 ~ 240 V, 60/50 Hz \pm 3Hz
Power Consumption			
Normal	170 W	275 W	275 W
Power Saving	< 1.5 W	< 1.5 W	< 1.5 W
Dimension (W x D x H)			
Body	804 x 113 x 564 mm (31.65 x 4.45 x 22.20 inches)	1004 x 115 x 680 mm (39.52 x 4.52 x 26.77 inches)	1126 x 140 x 752 mm (44.33 x 5.51 x 29.60 inches)
With stand	804 x 250 x 622.5 mm (31.65 x 9.84 x 24.50 inches)	1004 x 330 x 749 mm (39.52 x 12.99 x 29.49 inches)	1126 x 360 x 820 mm (44.33 x 14.17 x 32.28 inches)

Technical and Environmental Specifications

Model Name	LA32M51B/LA32M51BS	LA40M51B/LA40M51BS	LA46M51B		
Weight With stand	19.2 kg (42.33 lbs)	27.5 kg (60.63 lbs)	37 kg (81.57 lbs)		
Environmental Considerations Operating Temperature Operating Humidity Storage Temperature Storage Humidity	10°C to 40°C (50°F to 104°F) 10% to 80%, non-condensing -20°C to 45°C (-4°F to 113°F) 5% to 95%, non-condensing	10°C to 40°C (50°F to 104°F) 10% to 80%, non-condensing -20°C to 45°C (-4°F to 113°F) 5% to 95%, non-condensing	10°C to 40°C (50°F to 104°F) 10% to 80%, non-condensing -20°C to 45°C (-4°F to 113°F) 5% to 95%, non-condensing		
Audio Characteristics Audio Input Audio Input (PC) Headphone Output Frequency Response	RCA Jack (L, R), 0.5Vrms (-9dB) 3.5Ø Stereo Jack, 0.5Vrms (-9dB) Max. 10mW Output (3.5Ø Stereo Jack, 32Ω) RF: 80Hz ~ 15kHz (at -3dB) A/V: 80Hz ~ 20kHz (at -3dB)	RCA Jack (L, R), 0.5Vrms (-9dB) 3.5Ø Stereo Jack, 0.5Vrms (-9dB) Max. 10mW Output (3.5Ø Stereo Jack, 32Ω) RF: 80Hz ~ 15kHz (at -3dB) A/V: 80Hz ~ 20kHz (at -3dB)	RCA Jack (L, R), 0.5Vrms (-9dB) 3.5Ø Stereo Jack, 0.5Vrms (-9dB) Max. 10mW Output (3.5Ø Stereo Jack, 32Ω) RF: 80Hz ~ 15kHz (at -3dB) A/V: 80Hz ~ 20kHz (at -3dB)		
Sound Output 3D Surround Stereo	10 W X 2 SRS TruSurroundXT Nicam/A3	10 W X 2 SRS TruSurroundXT Nicam/A2	10 W X 2 SRS TruSurroundXT Nicam/A2		
Stand Swivel (Left/Right)  -15° ~ 15°	LA32M51B	LA32M51BS	LA40M51B	LA40M51BS	LA46M51B
	No	Yes	No	Yes	No

Display Mode (PC)


Both screen position and size will vary depending on the type of PC monitor and its resolution.
The table below shows all of the display modes that are supported:

Mode	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H/V)
IBM	640 x 480	31.469	59.940	25.175	- / -
	720 x 400	31.469	70.087	28.322	- / +
VESA	640 x 480	37.861	72.809	31.500	- / -
	640 x 480	37.500	75.000	31.500	- / -
	800 x 600	37.879	60.317	40.000	+ / +
	800 x 600	48.077	72.188	50.000	+ / +
	800 x 600	46.875	75.000	49.500	+ / +
	1024 x 768	48.364	60.000	65.000	- / -
	1024 x 768	56.476	70.069	75.000	- / -
	1024 x 768	60.023	75.029	78.750	+ / +
	1360 x 768	47.712	60.015	85.800	+ / +

- ◆ The interlace mode is not supported.
- ◆ The set might operate abnormally if a non-standard video format is selected.
- ◆ DVI dose not support PC function.

Pin Configurations

 PC Input Connector (15Pin)



Pin	Signal	Pin	Signal
1	Red (R)	9	Reserved
2	Green (G)	10	Sync Grounding
3	Blue (B)	11	Grounding
4	Grounding	12	Data (DDC)
5	Grounding (DDC)	13	Horizontal sync.
6	Red (R) Grounding	14	Vertical sync.
7	Green (G) Grounding	15	Clock (DDC)
8	Blue (B) Grounding		



Contact SAMSUNG WORLD WIDE

If you have any comments or questions regarding a Samsung products, please contact the SAMSUNG customer care center.

Country	Customer Care Center ☎	Web Site
AUSTRALIA	1300 362 603	www.samsung.com/au
CHINA	800-810-5858, 010- 6475 1880	www.samsung.com.cn
HONG KONG	2862 6001	www.samsung.com/hk
INDIA	3030 8282, 1600 1100 11	www.samsung.com/in
INDONESIA	0800-112-8888	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com/jp
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1800-10-SAMSUNG (7267864)	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG (7267864)	www.samsung.com/sg
SOUTH AFRICA	0860 7267864 (SAMSUNG)	www.samsung.com/za
TAIWAN	0800-329-999	www.samsung.com/tw
THAILAND	1800-29-3232, 02-689-3232	www.samsung.com/th
U.A.E	800SAMSUNG (7267864)	www.samsung.com/mea
VIETNAM	1 800 588 889	www.samsung.com/vn