



COLOUR TELEVISION

SP42W4/42W5

SP43T6/43T7/43T8/43W6

SP47Q7/47W1/47W3

SP48T6

SP52Q7

SP54T6/54T8

SP55W3

SP62T6/62T8

SP65W3

Owner's Instructions

Before operating the unit,
please read this manual thoroughly,
and retain it for future reference.

ON-SCREEN MENUS
PICTURE IN PICTURE (PIP)
TELETEXT



Important Warranty Information Regarding Television Format Viewing

Standard screen format televisions (4:3, the aspect ratio of the screen width to height) are primarily designed to view standard format full-motion video. The images displayed on them should primarily be in the standard 4:3 ratio format and constantly moving. Displaying stationary graphics and images on screen, such as the dark top and bottom letterbox bars (wide screen pictures), should be limited to no more than 15% of the total television viewing per week.

Wide screen format televisions (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature, and constantly moving. Displaying stationary graphics and images on screen, such as the dark side-bars on non-expanded standard format television video and programming, should be limited to no more than 15% of the total television viewing per week.


Additionally, viewing other stationary images and text such as stock market reports, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. ***Displaying any stationary images that exceed the above guidelines can cause uneven aging of picture tubes (CRTs) that leave subtle, but permanent burned-in ghost images in the television picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars.*** On television models that offer picture sizing features, use these controls to view the different formats as a full screen picture.

Be careful in the selection and duration of television formats used for viewing. Uneven CRT aging as a result of format selection and use, as well as other burned-in images, is not covered by your Samsung limited warranty.

Safety Instructions


ENG

- ◆ Do not expose the television to extreme temperature conditions or to extreme humidity conditions.
- ◆ Do not expose the television to direct sunlight and other sources of heat.
- ◆ Do not expose the television to any liquids.
- ◆ Never put objects of any kind into the television, and do not place a water-containing vessel on the television.
- ◆ During a storm conditions (especially when there is lightning) unplug the television from the mains socket and aerial.
- ◆ Do not step on or twist the power cord.
- ◆ Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock.
- ◆ Please use a soft and dry cloth (not containing volatile matter) when you clean the TV.
- ◆ If the television is broken, do not try to repair it yourself. Contact qualified service personnel.
- ◆ If the remote control is not used for a long period of time, remove the batteries and store it in a cool, dry place.
- ◆ Do not drop the remote control.

 Displaying any stationary images that exceed the long time, it can cause uneven aging of picture tubes that leave subtle, but permanent burned-in ghost images in the television picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars.


This device is not for use in industrial environments.

 Caution

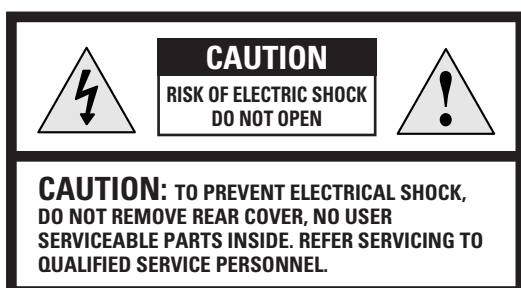


WARNING: TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 The lightning flash and arrow head within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.



 The main voltage is indicated on the rear of the TV set and the frequency is 50 or 60Hz.

Contents (continued)

◆ FOREWORD	
■ Important Warranty Information Regarding Television Format Viewing.....	2
■ Safety Instructions.....	3
■ Caution	3
◆ CONNECTING AND PREPARING YOUR TELEVISION	
■ Control Panels (depending on the model)	6~7
■ Connection Panels (depending on the model)	8
■ Using a Display Deck	9
■ Infrared Remote Control.....	10
■ Inserting the Batteries in the Remote Control.....	11
■ Connecting to an Aerial or Cable Television Network	11
■ Switching Your Television On and Off.....	12
■ Placing Your Television in Standby Mode	12
■ Becoming Familiar with the Remote Control	13
■ Plug & Play Feature.....	14~15
■ Choosing Your Language.....	15
■ Viewing the Demonstration.....	16
■ Adjusting Convergence	17
■ Viewing an External Signal Source	18
◆ SETTING THE CHANNELS	
■ Storing Channels Automatically.....	19
■ Sorting the Stored Channels	20
■ Viewing the Channel Scan Picture	20
■ Assigning Names to Channels	21
■ Storing Channels Manually.....	22~23
■ Activating the Child Lock and Skipping Unwanted Channels	24
■ Selecting a Channel by Informations.....	25
◆ USING YOUR TELEVISION (continued)	
■ Changing the Picture Standard	25
■ Adjusting the Picture Settings.....	26
■ Freezing the Current Picture	26
■ Extra Picture Settings	27
- Scan Mode	
- Digital NR	
- LNA (Low Noise Amplifier)	
■ Setting the Blue Screen.....	28
■ Selecting the Picture Size (depending on the model).....	29
■ Changing the Sound Standard	30
■ Adjusting the Sound Settings	30

Contents

◆ USING YOUR TELEVISION	
■ Adjusting the Volume Automatically	31
■ Setting the Melody Sound	31
■ Setting the Dolby Digital	32
■ Adjusting Your Dolby Preferences.....	33
■ Setting the External Sound.....	34
■ Selecting the Sound Mode (depending on the model)	35
■ Setting the Sleep Timer.....	36
■ Setting and Displaying the Current Time.....	36
■ Switching the Television On and Off Automatically	37
■ Viewing the Picture In Picture (PIP)	38~39
◆ USING THE TELETEXT FEATURE	
■ Teletext Feature	40
■ Displaying the Teletext Information	41
■ Selecting Display Options.....	42
■ Selecting a Teletext Page.....	43
■ Storing Teletext Pages	44
◆ ADDITIONAL INFORMATION ON CONNECTIONS	
■ Connecting to the External Input/Outputs.....	45
■ Connecting to the Audio Output	46
■ Connecting to the RCA Input (depending on the model).....	46
■ Connecting to the S-Video Input (depending on the model).....	47
■ Connecting Additional Speakers	47
■ Viewing Pictures From External Sources	48
■ Redirecting an Input to the External Output	49
◆ RECOMMENDATIONS FOR USE	
■ Programming the Remote Control for Other Components	50
- VCR Remote Control Codes	51~52
- Cable Box (CATV) Remote Control Codes	52
- DVD Remote Control Codes	52
■ SCART Connector Wiring (EXT1, EXT2 or EXT3)	53
■ Troubleshooting: Before Contacting Service Personnel.....	54
■ Wiring the Mains Power Supply Plug (UK Only).....	55

Symbols



Press



Important

 


Note


Control Panels (depending on the model)

➤ The actual configuration on your TV may be different, depending on your model.


SP47Q7
SP52Q7

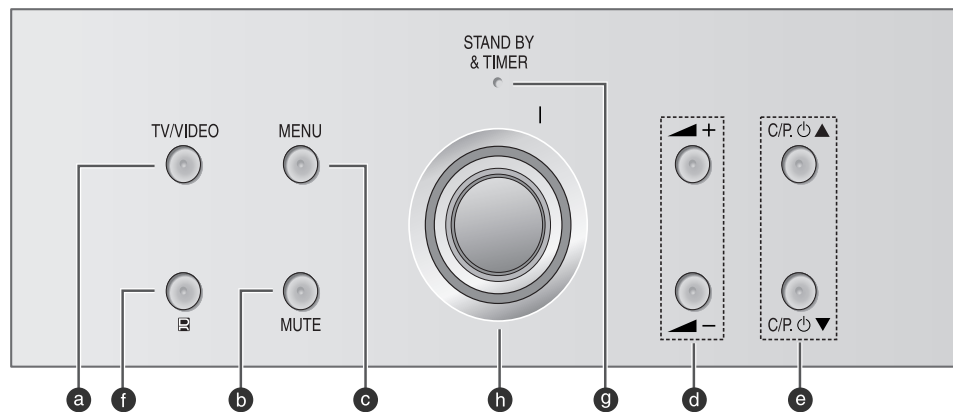


SP43T6
SP48T6
SP54T6
SP62T6

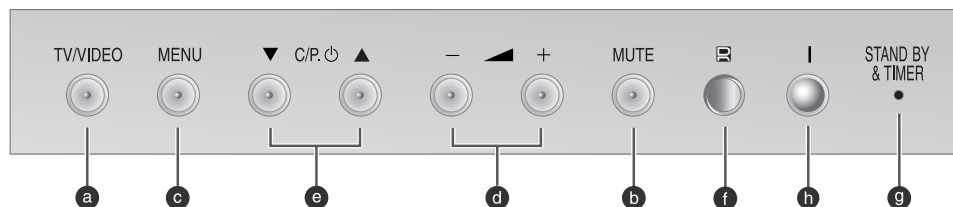 

SP43T7

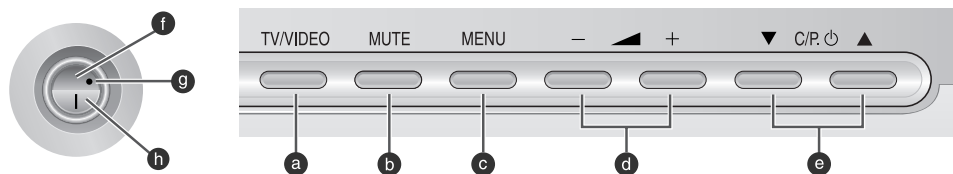 

SP43T8
SP54T8
SP62T8

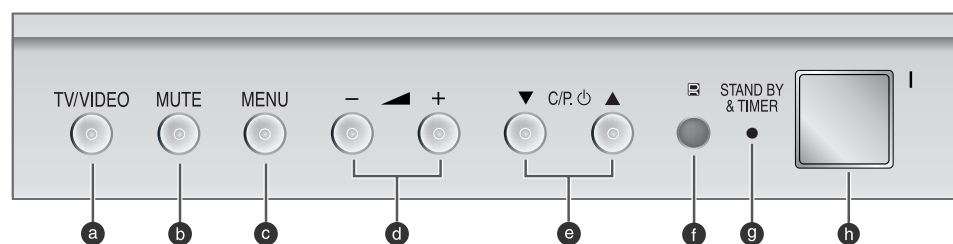 


- | | |
|--------------------------------|-------------------------------|
| (a) Input Source Selection | (e) Channel Selection |
| (b) Temporary Sound Switch Off | (f) Remote Control Sensor |
| (c) Menu Display | (g) Standby & Timer Indicator |
| (d) Volume Adjustment | (h) Power On/Off |

Control Panels (depending on the model) (continued)


➤ The actual configuration on your TV may be different, depending on your model.

ENG

 
SP47W1

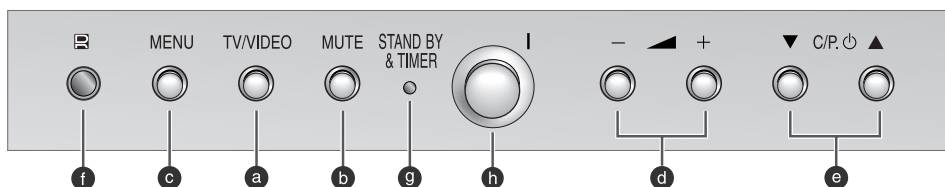


SP47W3
SP55W3
SP65W3

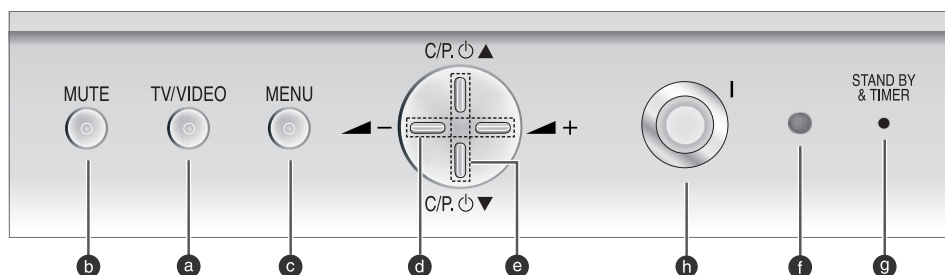 


SP42W4

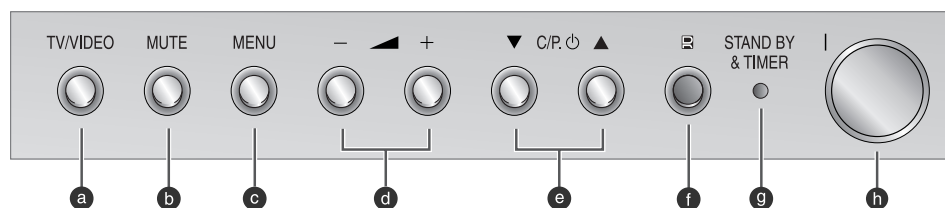 

SP42W5

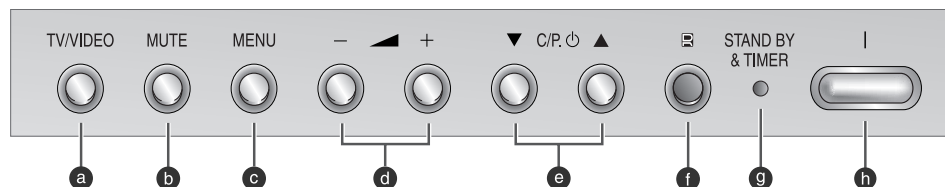 

SP43W6

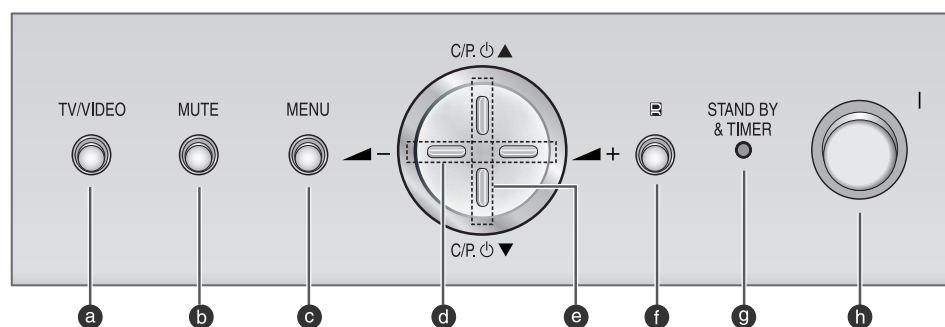 


- | | |
|--------------------------------|-------------------------------|
| (a) Input Source Selection | (e) Channel Selection |
| (b) Temporary Sound Switch Off | (f) Remote Control Sensor |
| (c) Menu Display | (g) Standby & Timer Indicator |
| (d) Volume Adjustment | (h) Power On/Off |


Connection Panels (depending on the model)

➤ The actual configuration on your TV may be different, depending on your model.

 
Side of the TV

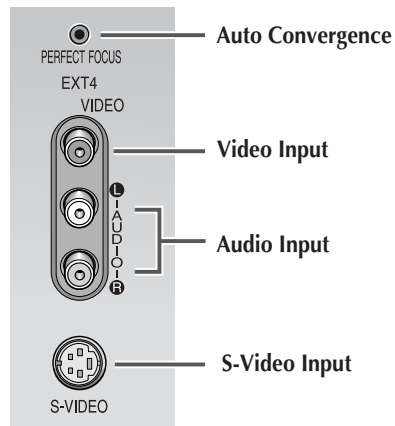

Front of the TV

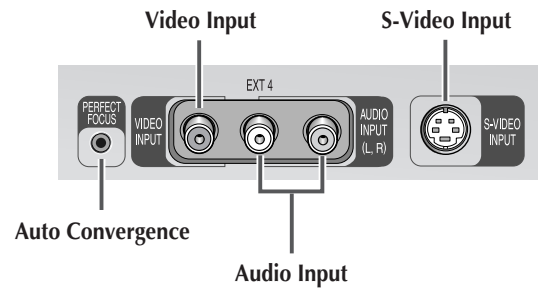 



Rear of the TV

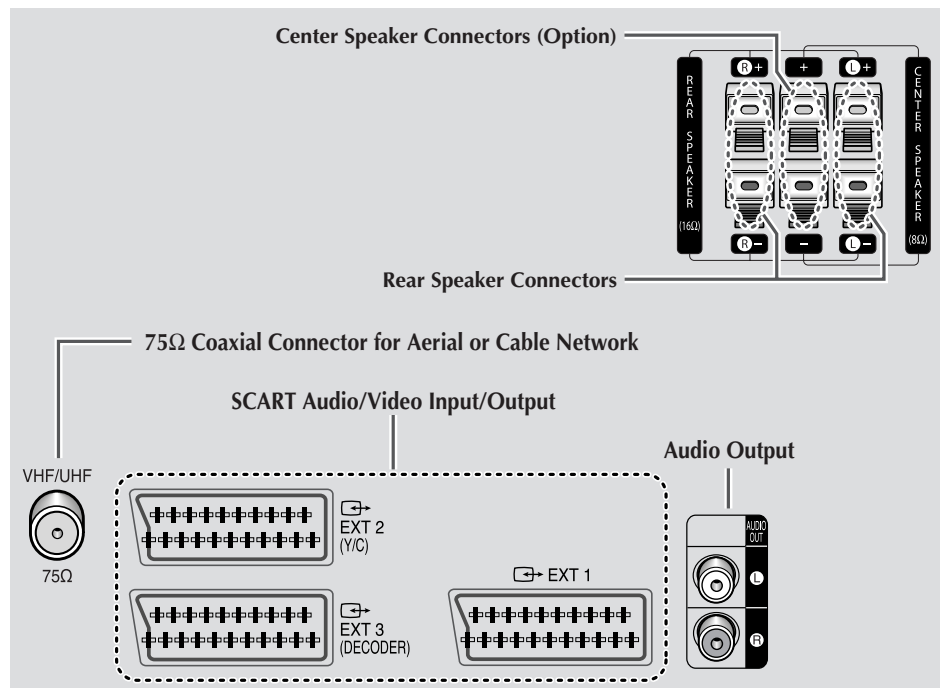 

Using a Display Deck

You can display a VCR or DVD Player, etc. by using the display deck.

 SP47W3/55W3/65W3


- 1 Press the symbol “” at the center of the display deck.
- 2 Hold the center of the door and lift it up in the direction of arrow till a ‘tok’ sound sounds.
- 3 After placing a component you have in the display deck, hold the center of the door and pull it down.
- 4 Shut the door by pressing the symbol “”.

SP54T8/62T8


- 1 Hold the center of the door and lift it up in the direction of arrow.
- 2 After placing a component you have in the display deck, hold the center of the door and pull it down.

➤ You should display only the component that is within 126mm high. When displaying a component in the display deck, please space it out 30mm from the front, 20mm from either end.

 
SP47W3/55W3/65W3

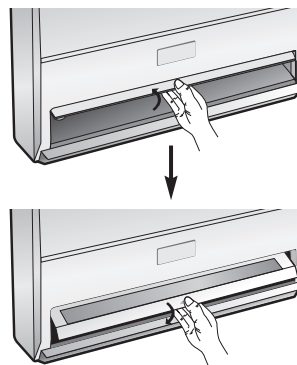


SP54T8/62T8

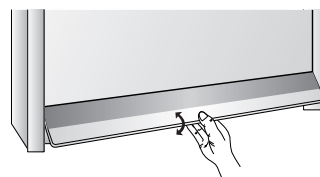 

SP43W6

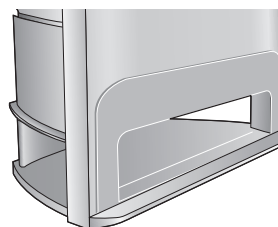 

Infrared Remote Control

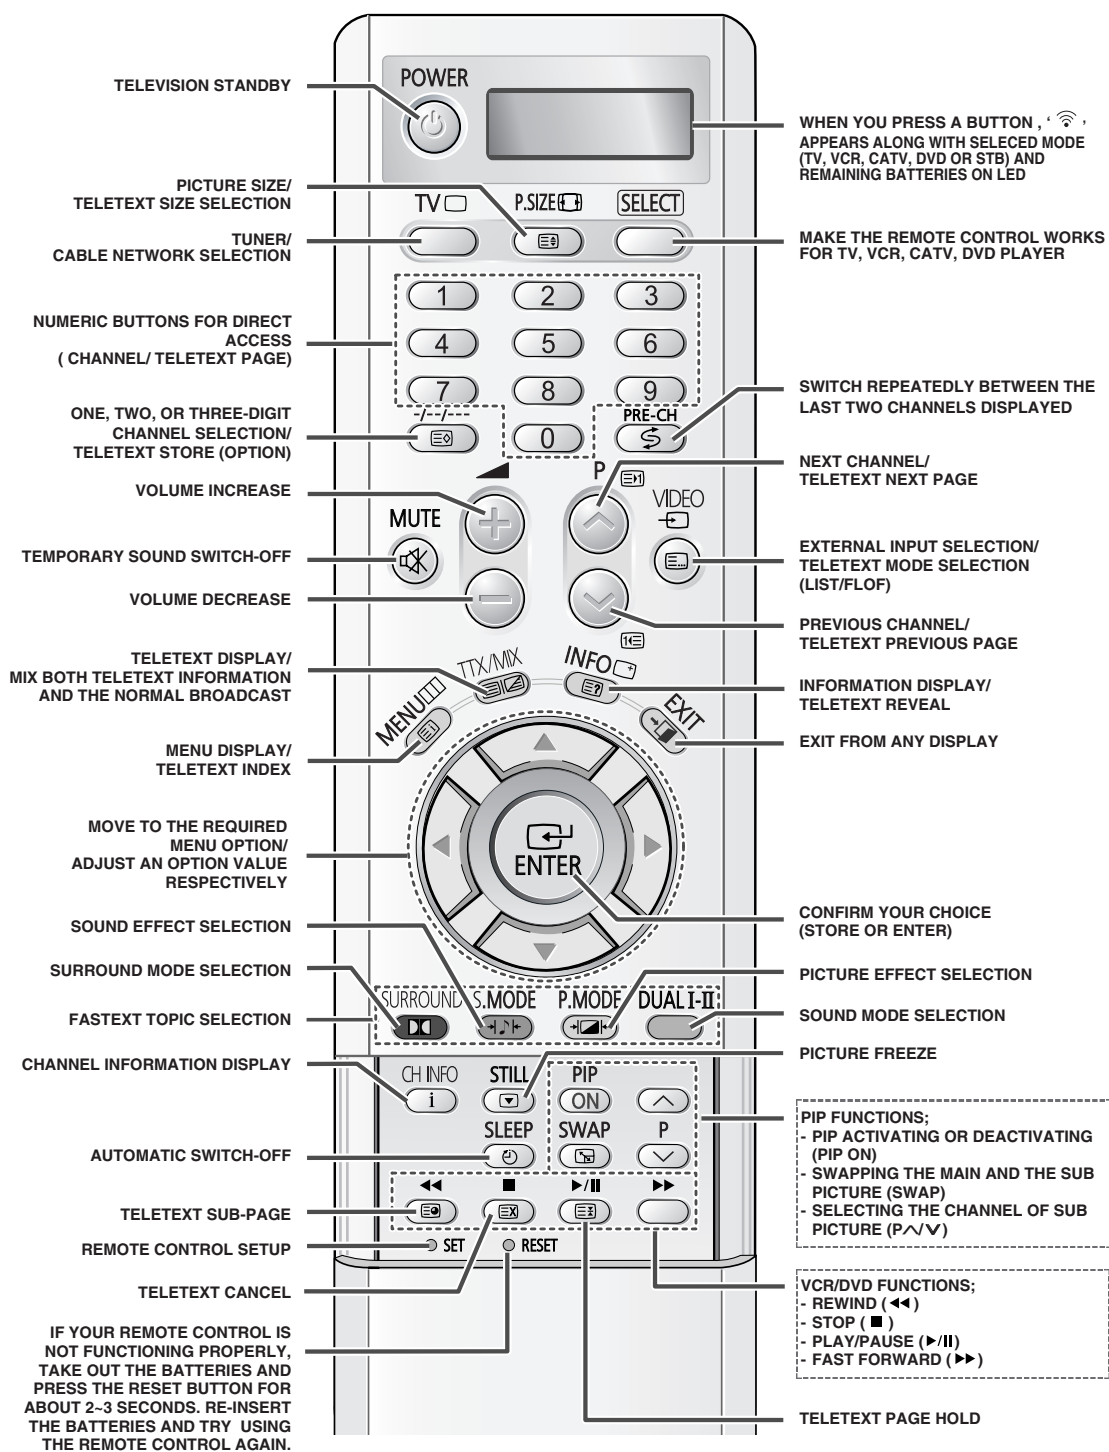 

➤ The performance of the remote control may be affected by bright light.

 
 
 
Inserting the Batteries in the Remote Control

ENG

You must insert or replace the batteries in the remote control when you:

- ◆ *Purchase the television*
- ◆ *Find that the remote control is no longer operating correctly*

- 1 Remove the cover on the rear of the remote control by pressing the symbol (▼) downwards and then pulling firmly to remove it.
- 2 Insert two R03, UM4, "AAA" 1.5V or equivalent batteries taking care to respect the polarities:
 - ◆ + on the battery against + on the remote control
 - ◆ - on the battery against - on the remote control
- 3 Replace the cover by aligning it with the base of the remote control and pressing it back into place.

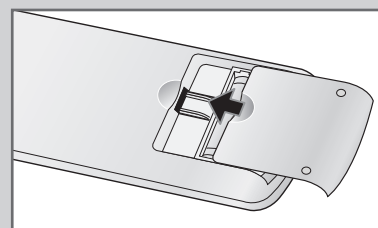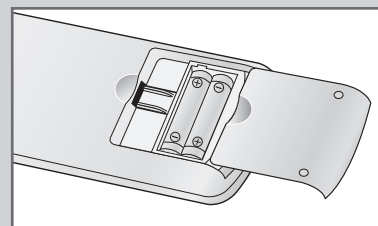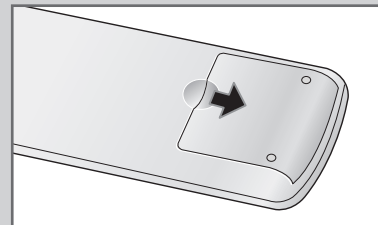


Connecting to an Aerial or Cable Television Network


To view television channels correctly, a signal must be received by the set from one of the following sources:

- ◆ *An outdoor aerial*
- ◆ *A cable television network*
- ◆ *A satellite network*

 - 1 In the first three cases, connect the aerial or network input cable to the 75Ω coaxial socket on the rear of the television.
- 2 If you are using an indoor aerial, you may need to turn it when tuning your television until you obtain a picture that is both sharp and clear.
For further details, refer to:
 - ◆ "Storing Channels Automatically" on page 19
 - ◆ "Storing Channels Manually" on page 20

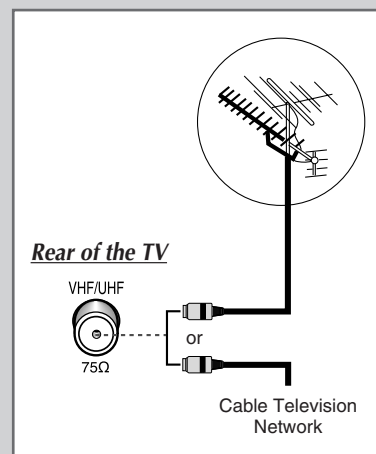

Switching Your Television On and Off

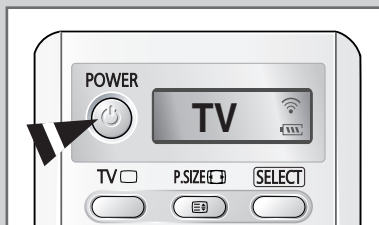 

The mains lead is attached to the rear of your television.

- ☞ If you have purchased this television in the United Kingdom, refer to page 55 for further instructions on plug wiring.

 
- 1 Plug the mains lead into an appropriate socket.
 - The main voltage is indicated on the rear of the television and the frequency is 50 or 60Hz.
- 2 Press the "I" button (On/Off) on the front of the television.

Result: The Standby indicator on the front of the television lights up.
- 3 Press the **POWER** (⏻) button on the remote control to switch the television on.

Result: The programme that you were watching last is re-selected automatically.

 - If you have not yet stored any channels, No clear picture appears. Refer to "Storing Channels Automatically" on page 18 or "Storing Channels Manually" on page 21.
- 4 To switch your television off, press the "I" button (On/Off) again.

Placing Your Television in Standby Mode

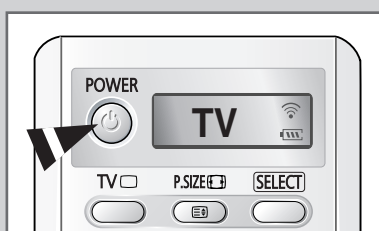

Your television can be placed in Standby mode, in order to reduce the power consumption.

The Standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).

- 1 Press the **POWER** (⏻) button on the remote control.

Result: The screen is turned off and the Standby indicator on the front of the television lights up in red.
- 2 To switch the television back on, simply press the **POWER** (⏻) button again.
 - You can also switch on by pressing the **P** (⏻) or (⏻) button.

- ☞ Do not leave your television in Standby mode for long periods of time (when you are away on holiday, for example). Turn your television off by pressing the "I" button (On/Off) on the front of the television. It is best to unplug the set from the mains and aerial.








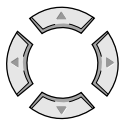

Becoming Familiar with the Remote Control


ENG

The remote control is used mainly to:

- ◆ Change channels and adjust the volume
- ◆ Set up the television using the on-screen menu system

The following table presents the most frequently used buttons and their functions.

Button	Viewing Function	Menu Function
	Used to display the next stored channel.	—
	Used to display the previous stored channel.	—
0 to 9	Used to display the corresponding channels. <ul style="list-style-type: none"> ➤ For double digit channels, the second digit must be pushed immediately after the first. Failure to do this will result in a single digit channel being displayed. 	
	Used to select a channel numbered ten or over. Press this button, and the “--” or “---” symbol is displayed. Enter the two or three-digit channel number (depending on the model).	
PRE-CH	Press the PRE-CH button. The TV will switch to the last channel viewed. To quickly switch between two channels that are far apart, tune to one channel, then use the number button to select second channel. Then, use the PRE-CH button to quickly alternate between them.	
	Used to increase the volume.	—
	Used to decrease the volume.	—
MUTE	Used to switch the sound off temporarily. <ul style="list-style-type: none"> ➤ To turn the sound back on, press this button again, or press the  or  button. 	
MENU	Used to display the on-screen menu system.	Used to return to the previous menu or normal viewing.
	—	Used to: <ul style="list-style-type: none"> ◆ Display a submenu containing selections for the current menu option ◆ Increase/decrease a menu option value
	—	Used to confirm your choice.
TV	Used to switch the television on when it is in Standby mode.	Used to exit from the menu system and return to normal viewing directly
EXIT	—	Used to exit from the menu system and return to normal viewing directly.

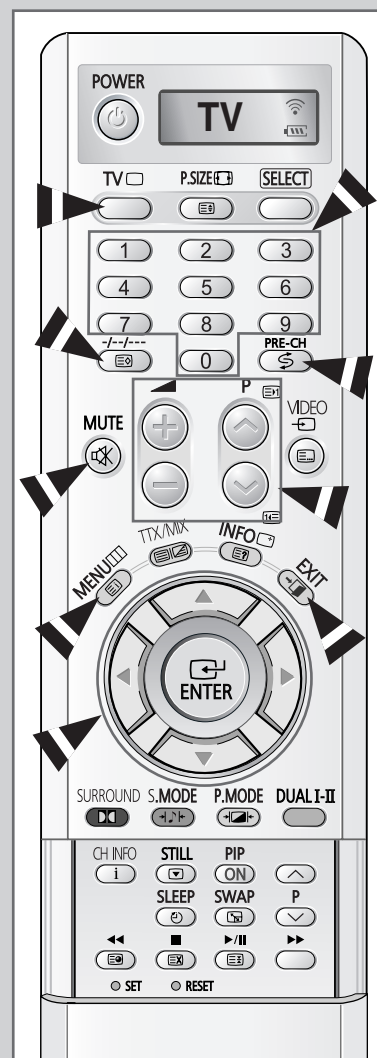 

Plug & Play Feature

Plug & Play

Language

English

БЪЛГАРСКИ

Hrvatski

Čeština

Nederland

Français

▲▼ Sel.

Enter

Antenna input check

◀ Sel.

Exit

ATM

Country

Belgium

0%

0 MHz

P0 -----

◀ Sel.

Start

Time

Clock

--:--

Timer


Off

▶ Sel.

Exit

Enjoy viewing your new TV.


 
When the television is initially powered on, several basic customer settings proceed automatically and subsequently. The following settings are available.


- 1 If the television is in Standby mode, press the **POWER** () button on the remote control.
Result: The message **Plug & Play** is displayed. It flickers for a little while and then **Language** menu is automatically displayed.
- 2 Select the appropriate language by pressing the ▼ or ▲ button.
- 3 Press the **MENU** button to confirm your choice.
Result: The message **Antenna input check** is displayed.
➤ If any language is not selected on the **Language** menu, the **Language** menu will disappear about 30 seconds later.
- 4 Make sure that the antenna is connected to the TV. Press the ◀ or ▶ button.
Result: The **ATM** menu is displayed.
- 5 Select your country by pressing the ◀ or ▶ button.
- 6 To search the channels, press the  button.
Result: The channels are stored in an order which reflects their positions in the frequency range. Finally, the search will end automatically. When the channels have been stored, the **Time** menu is displayed with **Clock** is selected.
➤ To stop the search before it has finished, press the **MENU** () button.
- 7 Press the ◀ or ▶ button to move to the hour or minute. Set the hour or minute by pressing the ▼ or ▲ button.
➤ Refer to "Setting and Displaying the Current Time" on page 36.
- 8 When you have finished, press the **MENU** () button.
Result: The message **Enjoy viewing your new TV** is displayed, and then the channel which has been stored will be activated.

Plug & Play Feature (continued)

ENG



 If you want to reset this feature...


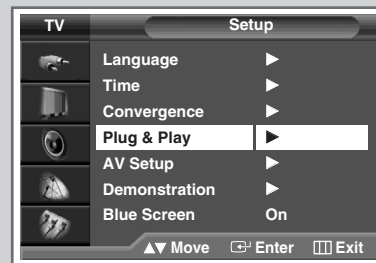
- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **Plug & Play**. Press the  button.
Result: This feature starts with the message **Plug & Play** is displayed.






Choosing Your Language

  When you start using your television for the first time, you must select the language which will be used for displaying menus and indications.

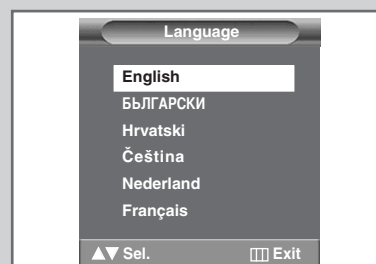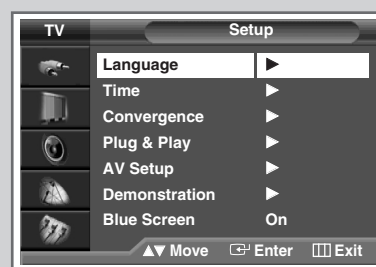

   
- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the  button.
Result: The **Language** is selected.
- 4 Press the  button again.
Result: The languages available are listed.
- 5 Press the ▼ or ▲ button to select the appropriate language.

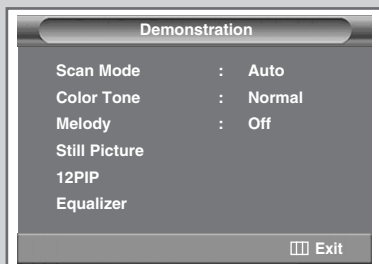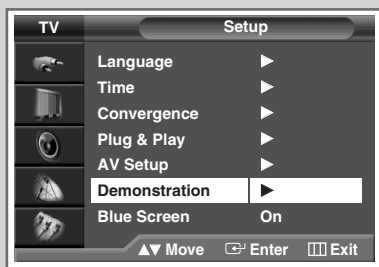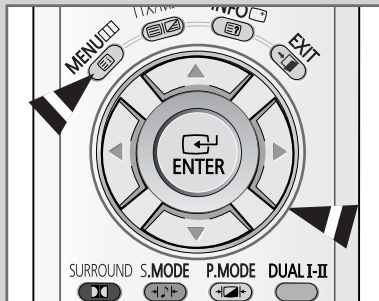

Viewing the Demonstration




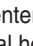
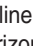
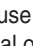




To become familiar with the various menus provided by your television, you can view the inbuilt demonstration.


- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **Demonstration**. Press the  button.
Result: Each of the menu options is displayed in turn.
 ➤ When you wish to exit from the demonstration, press the **MENU** () button on the remote control.

Adjusting Convergence

 
 
 
 
 
If the color appears spread out or “smeared” on the screen, the convergence probably needs alignment. Be sure to use the remote control for the convergence adjustments. (The Convergence Adjustment can not be made by using the control buttons on the front panel.)

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **Convergence**. Press the  button.
Result: The options available in the **Convergence** group are displayed with **Red** is selected.
- 5 Press the  button again.
Result: A crosshair pattern is appeared.
- 6 Adjust convergence by using your remote control.
 - ◆ Use the ▼/▲/◀/▶ buttons to all directions for select the position.
 - ◆ Press the “0” button to select red or blue convergence.
 - ◆ To move the line so that it is superimposed on the horizontal or vertical center-line, use the , , ,  buttons (i.e., make a signal horizontal or vertical line that is as white as possible).
 - ◆ Press the **MENU** () button to exit.



You can adjust convergence automatically for the optimum in the factory.

- 7 Select **Perfect Focus** in the **Setup** group, then press the  button.
Result: Perform Perfect Focus in the following sequence: green → red → blue.
After the cursor flickers for one second, the perfect focus feature ends.

➤ When the size of the sub picture is selected to the “**12 PIP**” or “**3 PIP**” mode, the Perfect Focus feature does not work.

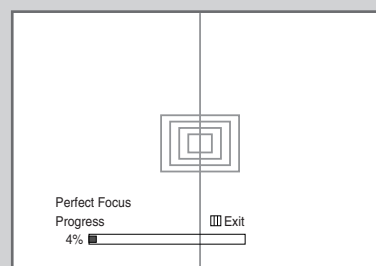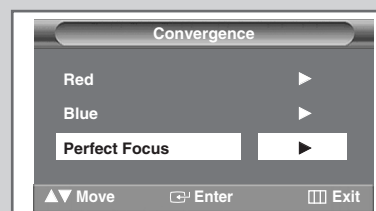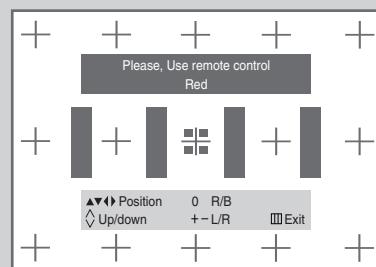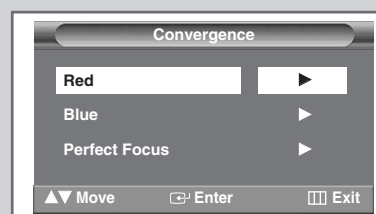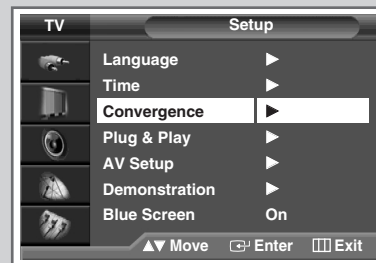

Viewing an External Signal Source

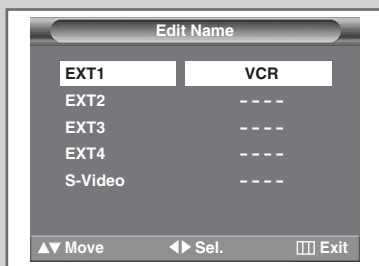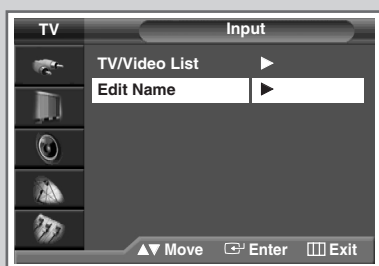  






Use the remote control to switch between viewing signal from connected equipment, such as VCR, DVD, Set-Top-boxes and the TV source (broadcast or cable)




- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Input** .
Result: The options available in the **Input** group are displayed.
- 3 Press the ⇨ button.
- 4 Press the ▼ or ▲ button to select **TV/Video List**. Press the ⇨ button.
Result: The options available in the **TV/Video List** group are displayed.
- 5 Press the ▼ or ▲ button to select signal source, then press the ⇨ button.
➤ When you connect equipment to the TV, you can choose between the following sets of jacks : **EXT1**, **EXT2** or **EXT3** on the TV's rear panel, and **EXT4** or **S-Video** on the TV's side panel.
- 6 Press the **MENU** button.
Result: The main menu is displayed.
- 7 Press the ▼ or ▲ button to select **Edit Name** .
Result: The options available in the **Edit Name** group are displayed.
- 8 Press the ⇨ button.
- 9 Press the ◀ or ▶ button to select external device :
VCR – DVD – Cable STB – HD STB – Satellite STB – AV Receiver – DVD Receiver – Game – Camcorder – DVD Combo – PC.
- 10 Set other signal sources (**EXT2**, **EXT3**, **EXT4**, **S-Video**) using the same method as listed above.

Storing Channels Automatically


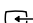
You can scan for the frequency ranges available to you (and availability depends on your country). Automatically allocated programme numbers may not correspond to actual or desired programme numbers. However you can sort numbers manually and clear any channels you do not wish to watch.

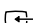- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Channel1**.
Result: The options available in the **Channel1** group are displayed.
- 3 Press the  button.
Result: The **Country** is selected.
- 4 Press the  button again. Select your country by pressing the ▼ or ▲ button.
The countries are displayed in the following order:
Belgium - Germany - Spain - France - Italy - Netherlands - Switzerland - Sweden - United Kingdom - East europe - Others.
➤ If you have selected the **Others** option but do not wish to scan the PAL frequency range, store the channels manually (see page 22).
- 5 Press the **MENU** button.
Result: The options available in the **Channel1** group are displayed again.
- 6 Press the ▼ or ▲ button to select **ATM**. Press the  button.
- 7 Press the  button again to start the search.
Result: The channels are stored in an order which reflects their positions in the frequency range. Finally, the search will end automatically.
➤ To stop the search before it has finished, press the **MENU** () button.
- 8 When the channels have been stored, you can:
 - ◆ Sort them in the order required (refer to page 20)
 - ◆ Assign a name to the stored channels (refer to page 21)
 - ◆ Clear a channel (refer to page 24)
 - ◆ Fine tune channel reception if necessary (refer to page 23)
 - ◆ Activate the Digital Noise Reduction feature (refer to page 27)

   ENG

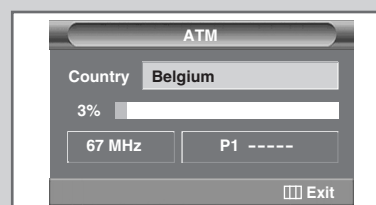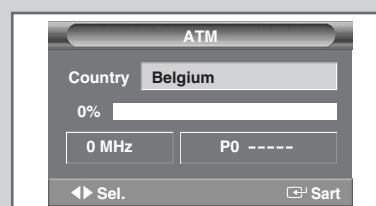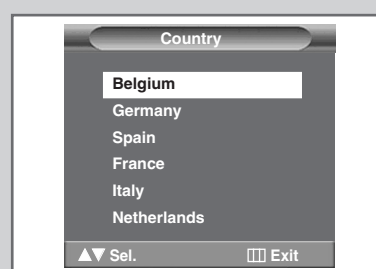

Sorting the Stored Channels

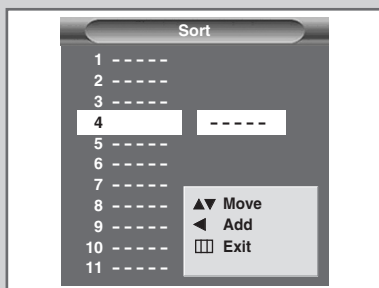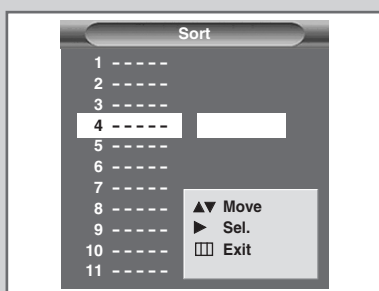  

This operation allows you to change the programme numbers of stored channels. This operation may be necessary after using auto store. You can delete the channels you do not want to keep.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Channel1**.
Result: The options available in the **Channel** group are displayed.
- 3 Press the ⇐ button.
- 4 Press the ▼ or ▲ button to select **Sort**. Press the ⇐ button.
Result: The **Sort** menu is displayed.
- 5 Select the channel that you wish to move by pressing the ▼ or ▲ button. Press the ► button.
- 6 Select the number of the programme to which the channel is to be moved by pressing the ▼ or ▲ button. Press the ◀ button.
Result: The channel is moved to its new position and all other channels are shifted accordingly.
- 7 Repeat Steps 5 to 6 until you have moved all the channels to the required programme numbers.




Viewing the Channel Scan Picture

 
 


- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Channel1**.
Result: The options available in the **Channel** group are displayed.
- 3 Press the ⇐ button.
- 4 Press the ▼ or ▲ button to select **Ch. scan**. Press the ⇐ button.
Result: You can view every memorized channel in order.



Assigning Names to Channels

Channel names will be assigned automatically when channel information is broadcast. These names can be changed, allowing you to assign new names.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Channel1**.
Result: The options available in the **Channel1** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **Name**. Press the  button.
Result: The **Name** menu is displayed with the current channel automatically is selected.
- 5 If necessary, select the channel to be assigned to a new name by pressing the ▼ or ▲ button. Press the ◀ or ▶ button.
Result: Arrow indications are displayed around the name box.
- 6 Press the ▼ or ▲ button to select a letter (A~Z), a number (0~9) or a symbol (-, space). Move on the previous or next letter by pressing the ◀ or ▶ button.
- 7 When you have finished entering the name, press the  button to confirm the name.
- 8 Repeat Steps 5 to 7 for each channel to be assigned to a new name.

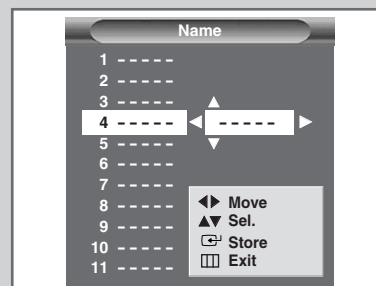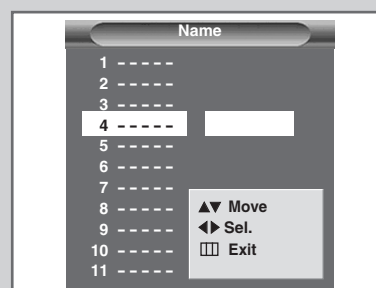

Storing Channels Manually

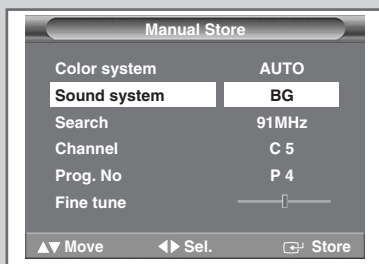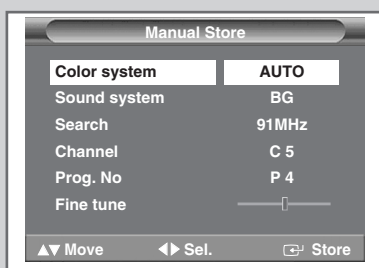  

You can store up to 100 television channels, including those received via cable networks.

When storing channels manually, you can choose:

- ◆ Whether or not to store each of the channels found
- ◆ The programme number of each stored channel which you wish to identify

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Channel**.
Result: The options available in the **Channel** group are displayed.
- 3 Press the **Enter** button.
- 4 Press the ▼ or ▲ button to select **Manual Store**. Press the **Enter** button.
Result: The options available in the **Manual Store** group are displayed with **Color system** selected.
- 5 Indicate the broadcasting standard required by pressing the ◀ or ▶ button repeatedly.
Result: The colour standards are displayed in the following order:
AUTO - PAL - SECAM - NTSC4.43.
- 6 Press the ▼ or ▲ button to select **Sound system**. Select the sound standard required by pressing the ◀ or ▶ button repeatedly.
Result: The sound standards are displayed in the following order:
BG - DK - I - L.

Storing Channels Manually (continued)

ENG

- 7 If you know the number of the channel to be stored, see the following steps.
- ◆ Press the ▼ or ▲ button to select **Channel**.
 - ◆ Press the ► button.
 - ◆ Press the ▼ or ▲ button to select **C** (Air channel) or **S** (Cable channel).
 - ◆ Press the ► button.
 - ◆ Press the ▼ or ▲ button to select indicate the required number.

➤ If no sound or abnormal sound, re-select the sound standard required.


- 8 If you do not know the channel numbers, select **Search** by pressing the ▼ or ▲ button. Press the ◀ or ▶ button to start the search.

Result: The tuner scans the frequency range until the first channel or the channel that you selected is received on your screen.

- 9 If reception is weak, you can fine tune a channel manually. Press the ▼ or ▲ button to select **Fine tune**. Press the ◀ or ▶ button until the picture and sound are both clear and sharp.

-
- ◆ You can ignore any changes made and return to the previous setting by pressing the Green (**S.MODE**) button.
 - ◆ If you are unable to fine tune a channel, check that the **Color System** and **Sound System** settings are correct.

- 10 To assign a programme number to a channel, select **Prog.No** by pressing the ▼ or ▲ button. Press the ◀ or ▶ button to find the correct number.

 
 
 
 
 
- 11 To store the channel and associated programme number, press the  button.

- 12 Repeat Steps 7 to 11 for each channel to be stored.






Channel mode

- ◆ **P** (Programme mode): When completing tuning, the broadcasting stations in your area have been assigned to position numbers from P00 to max P99. You can select a channel by entering the position number in this mode.
- ◆ **C** (Real channel mode): You can select a channel by entering the assigned number to each air broadcasting station in this mode.
- ◆ **S** (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

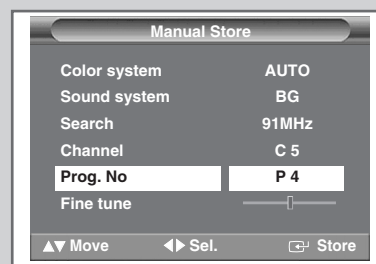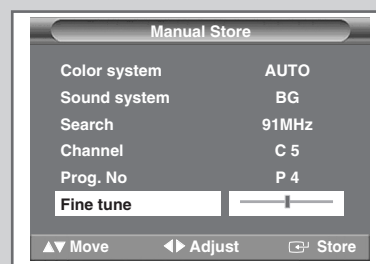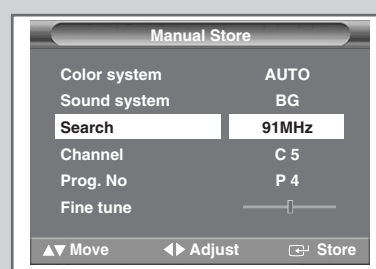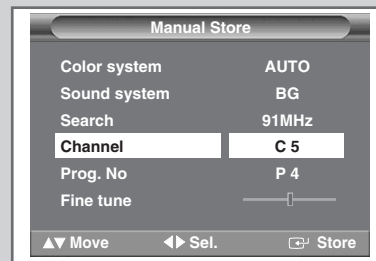

   Activating the Child Lock and Skipping Unwanted Channels

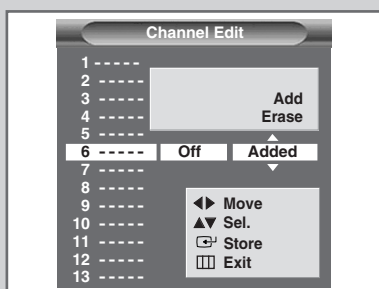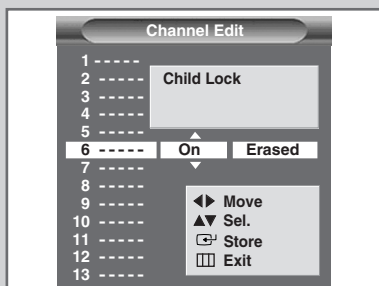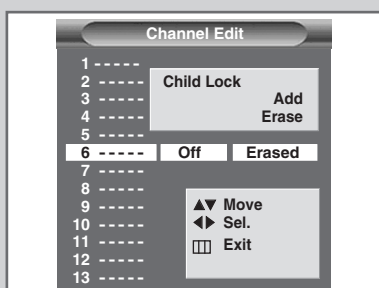

◆ Activating the child lock

This feature allows you to lock the television so that it cannot be switched on via the front panel. It can, however, still be switched on via the remote control. Thus, by keeping the remote control away from unauthorised users, such as children, you can prevent them from watching unsuitable programme.

◆ Skipping unwanted channels

You can exclude the channels of your choice from the channel scan operation. When you scan through the stored channels, those that you have chosen to skip are thus not displayed. All channels that you do not specifically choose to skip are displayed during scanning.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Channel**.
Result: The options available in the **Channel** group are displayed.
- 3 Press the **Enter** button.
- 4 Press the ▼ or ▲ button to select **Channel Edit**. Press the **Enter** button.
Result: The **Channel Edit** menu is displayed with the current channel automatically is selected.
- 5 Press the ▼ or ▲ button to select the number of the programme to which the channel is to be locked. Press the ► button.
- 6 Press the ► button.
- 7 To lock or unlock the channel, select **On** or **Off** by pressing the ▼ or ▲ button. Press the **Enter** button to confirm.
- 8 Press the ► button.
- 9 To erase or add the channel, select **Erased** or **Added** by pressing the ▼ or ▲ button. Press the **Enter** button to confirm.
- 10 Repeat Steps 5 to 9 for each channel to be edited.

Selecting a Channel by Informations

You can display the list of stored channels.

- 1 Press the **CH INFO** button.

Result: A list is displayed with the first 13 channels. Two text boxes to the right of the list indicate:

- ◆ Whether the Teletext feature is available.
- ◆ Which sound mode is being used.

- 2

To...	Then...
--------------	----------------

Scroll through the stored channels

Press the ▼ or ▲ button.

 
Result: The corresponding channel is displayed.

Select a specific channel

Press the **TV** () button.

Result: The corresponding channel is displayed and the **Information** box disappears.

- ◆ External inputs can be displayed and scrolled through in the same way.
- ◆ You can display the name of the channel or input by pressing the **CH INFO** button.

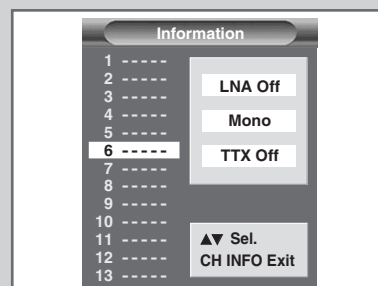

Changing the Picture Standard

You can select the type of picture which best corresponds to your viewing requirements.

- 1 Press the **MENU** button.

Result: The options available in the **Picture** group are displayed.

 
 
- 2 Press the  button.

Result: The **Mode** is selected.




- 3 Select the required picture effect by pressing the ◀ or ▶ button repeatedly.

Result: The following picture effects are available:
Standard – Movie – Custom – Dynamic.

- You can also set these options simply by pressing the **P.MODE** (Picture Mode) button.

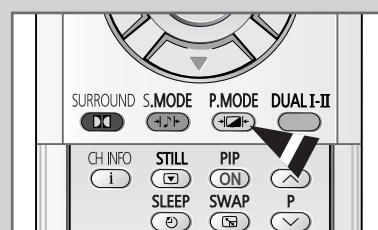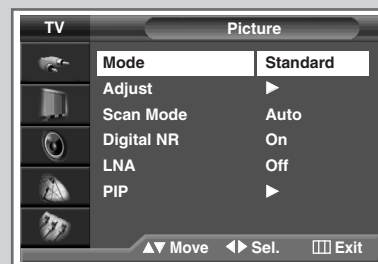

Adjusting the Picture Settings

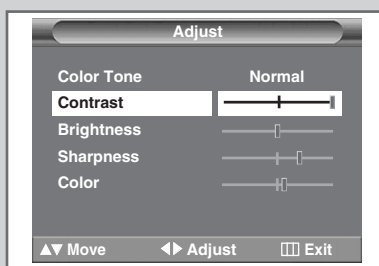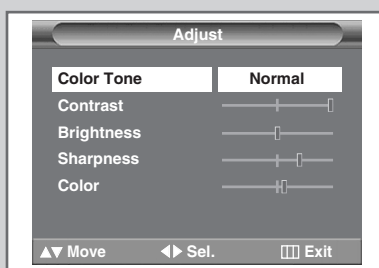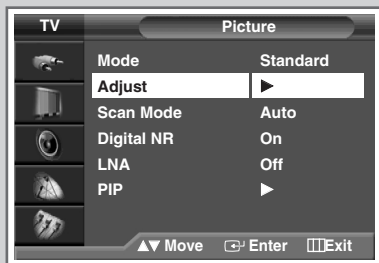   


Your television has several settings which allow you to control picture quality.

- 1 Press the **MENU** button.
Result: The options available in the **Picture** group are displayed.
- 2 Press the **Enter** button.
- 3 Press the **Down** or **Up** button to select **Adjust**. Press the **Enter** button.
Result: The options available in the **Adjust** group are displayed with **Color Tone** is selected.
- 4 Press the **Left** or **Right** button to select the option (**Cool2**, **Cool1**, **Normal**, **Warm1**, **Warm2**).
- 5 Press the **Down** or **Up** button to select the option (**Contrast**, **Brightness**, **Sharpness**, **Color** or **Tint-NTSC** only) to be adjusted. Press the **Left** or **Right** button.
Result: The horizontal bar is displayed. Move the horizontal bar's cursor left or right by pressing the **Left** or **Right** button.

➤ If you make any changes to these settings, the picture standard is automatically switched to **Custom**.

 Freezing the Current Picture

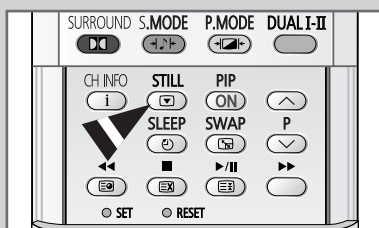

You can freeze the picture when watching a television programme simply by pressing the "STILL ()" button.

➤ To return to normal viewing, press this button again.

Extra Picture Settings

ENG

◆ Scan Mode

You will normally find that scan mode is best set to **Natural** to reduce any slight picture flicker. However, it is possible that some occasional broadcasts (NTSC-M) may benefit by changing the scan mode. **Auto**, **Natural**, **Digital** and **Progressive** modes are available.


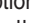



◆ Digital NR

 
 
 
 
If the signal received by your television is weak, you can activate this feature to reduce any static and ghosting that may appear on the screen.

◆ LNA


This feature is very useful in the situation that the TV is used in a weak signal and amplifies the TV signal in the weak signal area, but not noise.

This feature is working only in a weak signal condition, and that is memorized on current channel, additional.


- 1 Press the **MENU** button.
Result: The options available in the **Picture** group are displayed.
- 2 Press the  button.
- 3 Select the required option (**Scan Mode**, **Digital NR** or **LNA**) by pressing the  or  button.
- 4 Press the  or  button to change the setting.
 - ◆ **Scan Mode** : **Auto**, **Natural**, **Digital**, **Progressive**
 - ◆ **Digital NR** : **Off** or **On** (activating)
 - ◆ **LNA** : **Off** or **On** (activating)

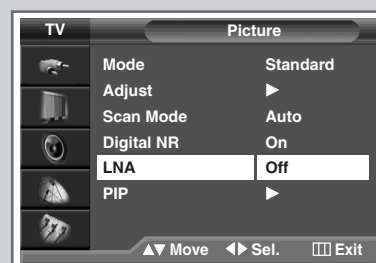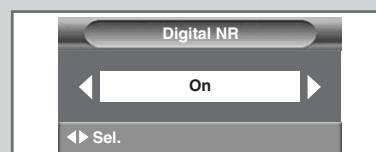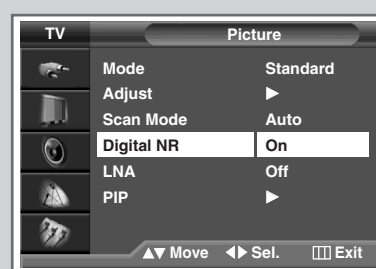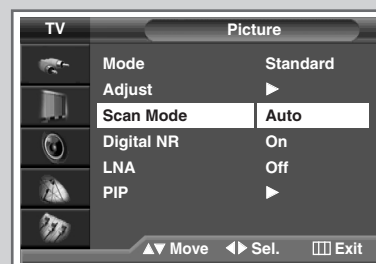

Setting the Blue Screen

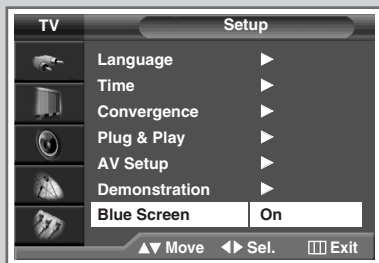 

If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background. If you wish to continue viewing the poor picture, you must set the "Blue Screen" mode to "Off".

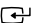- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **Blue Screen**.
- 5 Press the ◀ or ▶ button to change the setting. (**On** or **Off**).









Selecting the Picture Size (depending on the model)

You can select the picture size which best corresponds to your viewing requirements by pressing the "P.SIZE" button simply.

Depending on the model, the following picture sizes are available:

Auto wide	Expanding and pulling up the picture from 4:3 to 16:9 ratio.
Wide	Adjusting the ratio of picture from 4:3 to 16:9.
Panorama	Adjusting the wide picture to natural size.
Zoom1	Enlarging the normal 4:3 picture by 120%. Lifting is available.
Zoom2	Enlarging the normal 4:3 picture by 150%. Lifting is available.
Normal	Normal 4:3 ratio picture.
Cinema	Automatically expanding the broadcasting signal to appropriate picture.

        ➤ The picture size can not be changed in the PIP mode.

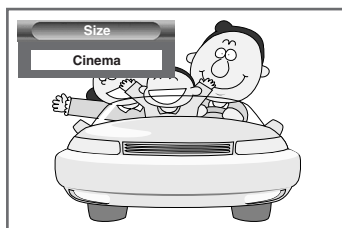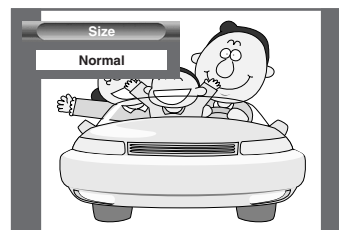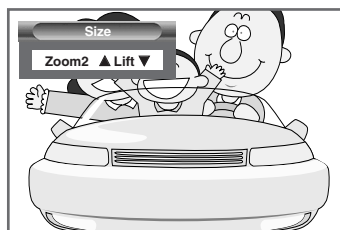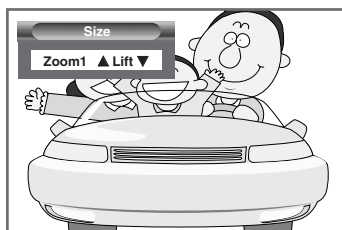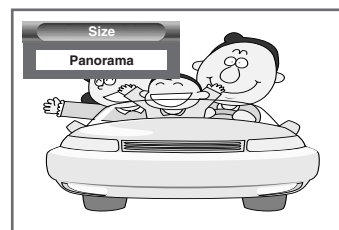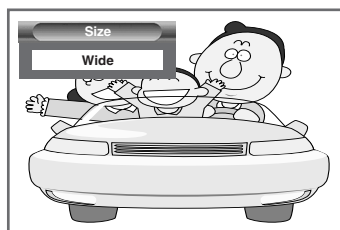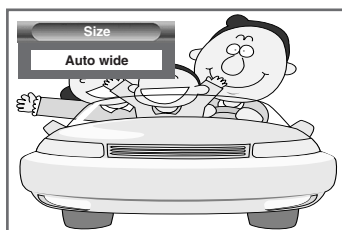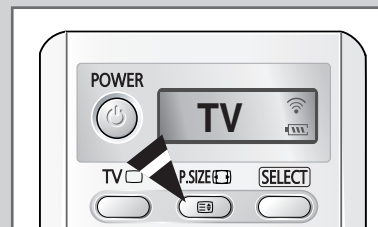

◆ Normal (4:3) Model

 
Normal - Zoom1 - Zoom2 - Cinema

◆ Wide (16:9) Model

Auto wide - Wide - Panorama - Zoom1 - Zoom2 - Normal - Cinema

ENG

Changing the Sound Standard


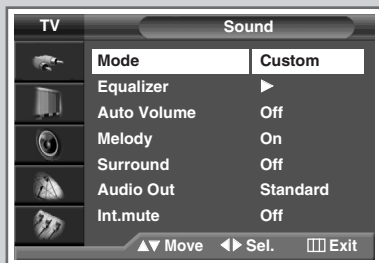


You can select the type of special sound effect to be used when watching a given broadcast.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the button.
Result: The **Mode** is selected.
- 4 Select the required sound effect by pressing the ◀ or ▶ button repeatedly.
Result: The following sound effects are available:
Custom – Standard – Music – Movie – Speech.

➤ You can also set these options simply by pressing the **S.MODE** (Sound Mode) button.

  Adjusting the Sound Settings

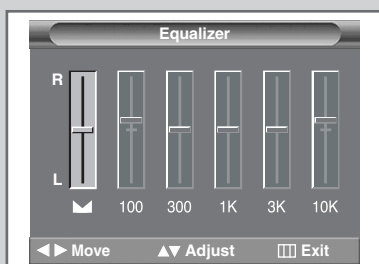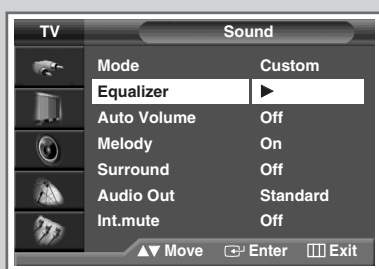


The sound settings can be adjusted to suit your personal preferences.

 
- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the button.
- 4 Press the ▼ or ▲ button to select **Equalizer**. Press the button.
Result: The options available in the **Equalizer** group are displayed.
- 5 Select the option to be adjusted by pressing the ◀ or ▶ button. Press the ▼ or ▲ button to reach the required setting.

➤ If you make any changes to these settings, the sound standard is automatically switched to **Custom**.

Adjusting the Volume Automatically


Each broadcasting station has its own signal conditions, and so it is not easy for you to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.


- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **Auto Volume**.
- 5 To activate, select **On** by pressing the ◀ or ▶ button.

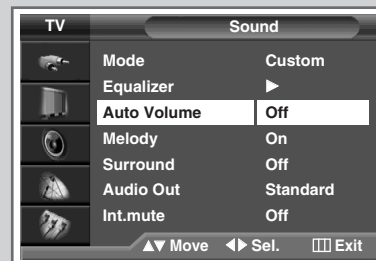

Setting the Melody Sound


You can hear clear melody sound when the television is powered on or off.

 - 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **Melody**.
- 5 To activate, select **On** by pressing the ◀ or ▶ button.





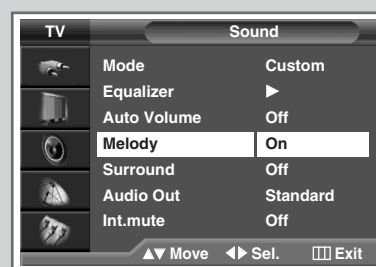


Setting the Dolby Digital

 Rear of the TV

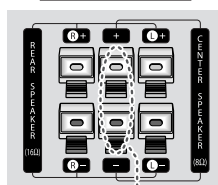

Option

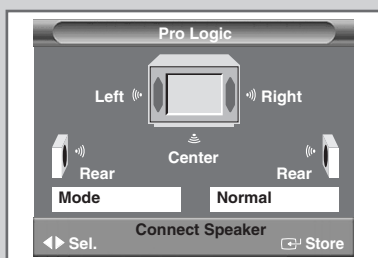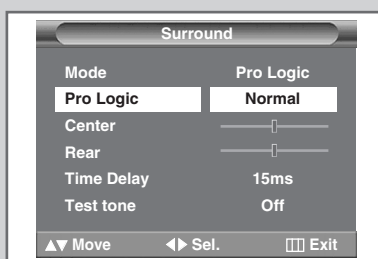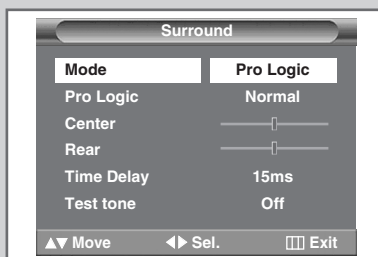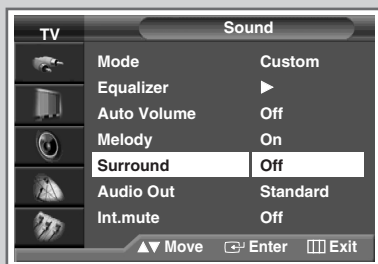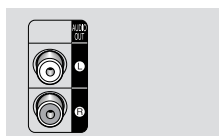     

This mode allows you enjoy Dolby Pro Logic Surround effect fully with only surround speakers are connected to TV. This allows various modes for the main, center and rear speakers to be selected.

Surround Mode	Input Signal	Speakers		
		Main	Center	Rear
Pro Logic - Normal	Stereo	✓	✓	✓
	Mono		✓	
- Phantom	Stereo	✓		✓
	Mono	✓		
- Wide	Stereo	✓	✓	✓
	Mono		✓	
3D sound	Stereo	✓		
	Mono	✓		
Hall	Stereo	✓		
	Mono	✓		
off	Stereo	✓		
	Mono	✓		

➤ ✓ ; Sound



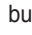
- Press the **MENU** button.
Result: The main menu is displayed.
- Press the ▼ or ▲ button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- Press the **Enter** button.
- Press the ▼ or ▲ button to select **Surround**. Press the **Enter** button.
Result: The **Surround** menu is displayed with the **Mode** is selected.
- Select the option by pressing the ◀ or ▶ button. The surround modes are displayed in the following order.
Pro Logic - 3D sound - Hall - Off
- If you select the **Pro Logic**, the options available are displayed.
- Press the ▼ or ▲ button to select **Pro Logic**. Press the ◀ or ▶ button.
- Select the option by pressing the ◀ or ▶ button. The modes are displayed in the following order.
Normal - Phantom - Wide
➤ You can also select these options simply by pressing the **SURROUND** button.
- When you are satisfied with the settings, press the **Enter** button to store them.

Adjusting Your Dolby Preferences

 
 
 
ENG

The following Dolby settings can be adjusted to suit your personal preferences.



- ◆ **Volume of the center and rear speakers**
- ◆ **Pro Logic delay time for the rear speakers (between 15 and 30 ms)**
- ◆ **Activation/deactivation of the test tone to simulate the volume on each speaker**

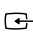- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **Surround**. Press the  button.
Result: The **Surround** menu is displayed with the **Mode** is selected.
- 5 Select **Pro Logic** by pressing the ◀ or ▶ button.
- 6 Select the option (**Center**, **Rear**, **Time Delay**, **Test tone**) by pressing the ▼ or ▲ button. Press the ◀ or ▶ button to reach the required setting.
- 7 When you are satisfied with the settings, press the  button to store them.

➤ Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.

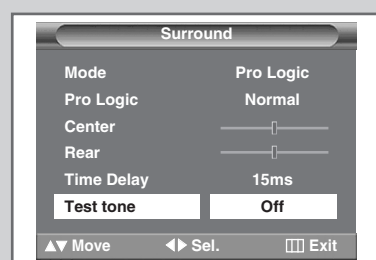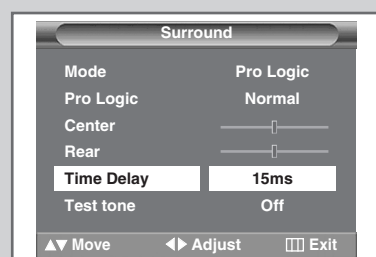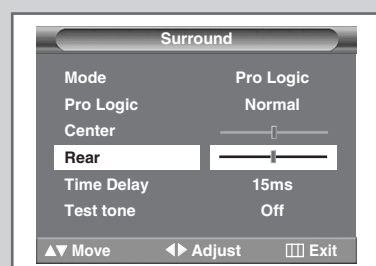

Setting the External Sound

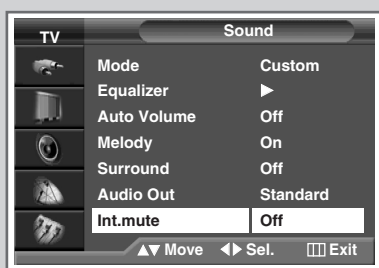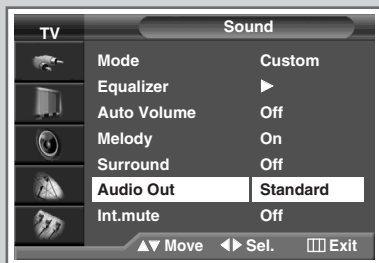  

This feature allows you can adjust to suit your personal preferences when the equipment with output is connected to the television.

- 1 Press the **MENU** button.

Result: The main menu is displayed.

- 2 Press the ▼ or ▲ button to select **Sound**.

Result: The options available in the **Sound** group are displayed.



- 3 Press the  button.

- 4 Press the ▼ or ▲ button to select **Audio Out**.

- 5 Select the required option (**Volume** or **Standard**) by pressing the ◀ or ▶ button

◆ If you want to adjust the volume level with the volume control on the TV or external amplifier, set to **Volume**.

◆ If you set to **Standard...**

- You can adjust the volume level with the volume control on the audio amplifier.
- The volume control buttons (**MUTE**,  or ) of the television and remote control do not work.

- 6 Press the ▼ or ▲ button to select **Int. mute**.
If you set to **On**, no sound output of internal speaker.

Selecting the Sound Mode (depending on the model)

The “DUAL I-II” button displays/controls the processing and output of the audio signal. When power is switched on, the mode is automatically preset to either “Dual-I ” or “Stereo”, depending on the current transmission.



	Type of broadcast	On-screen indication
NICAM Stereo	Regular broadcast (Standard audio)	Mono (Normal use)
	Regular + NICAM Mono	Mono Nicam ↔ Mono (Normal)
	NICAM Stereo	Stereo Nicam ↔ Mono (Normal)
	NICAM Dual-I/II	Dual-I Nicam → Dual-II Nicam → Mono (Normal) ↑—————↓
A2 Stereo	Regular broadcast (Standard audio)	Mono (Normal use)
	Bilingual or Dual-I/II	Dual-I ↔ Dual-II
	Stereo	Stereo ↔ Mono (Forced mono)

-
- ◆ If the receiving conditions deteriorate, listening will be easier if the mode is set to the **Mono**.
 - ◆ If the stereo signal is weak and an automatic switching occurs, then switch to the **Mono**.
 - ◆ When receiving a mono sound in the AV mode, connect to the “AUDIO-L” input connector on the panel (front or side). If the mono sound comes out only from left speaker, press the **DUAL I-II** button.

ENG




 
 
Setting the Sleep Timer

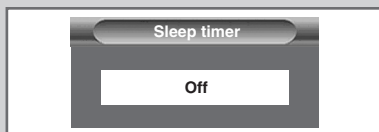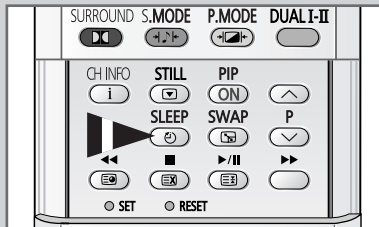

You can select a time period of between 30 and 180 minutes after the television automatically switches to Standby mode.

- 1 Press the **SLEEP** () button.
Result: The **Sleep timer** menu is displayed.
 - ◆ If the sleep timer is not yet set, **Off** is displayed. If the sleep timer is already set, the screen displays the remaining time and then before the television will be placed in standby mode.
- 2 Press the **SLEEP** () button repeatedly and cycle through the preset time intervals (30, 60, 90, 120, 150, 180).
Result: The television automatically switches to standby mode when the timer reaches 0.
- 3 To cancel the sleep timer feature, press the **SLEEP** () button repeatedly and select **Off**.

   Setting and Displaying the Current Time

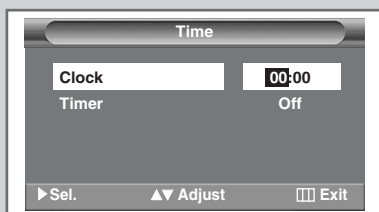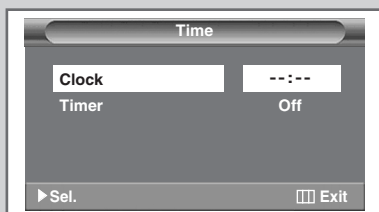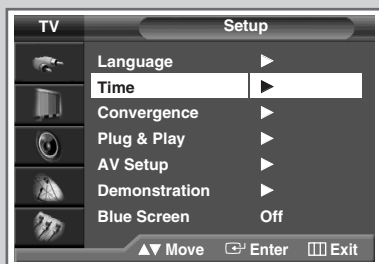

You can set the television's clock so that the current time is displayed by pressing the "INFO ()" button. You must also set the time if you wish to use the automatic on or off timers.

➤ When pressing the "I" button (On/Off) on the front of the television, the clock setting will be reset.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the button.
- 4 Press the ▼ or ▲ button to select **Time**. Press the button.
Result: The options available in the **Time** group are displayed with **Clock** is selected.
- 5 Press the ◀ or ▶ button to move to the hour or minute. Set the hour or minute by pressing the ▼ or ▲ button.
- 6 When you have finished, press the **TV** button to exit.
- 7 **To...** **Press the "INFO ()" button...**

display the channel information	Once.
display the current time	Twice.
remove the display	Three times.

Switching the Television On and Off Automatically

ENG

You can set the On/Off timers so that the television will:

- ◆ Switch on automatically and tune to the channel of your choice at the time you select
- ◆ Switch off automatically at the time you select

 
 
 
 
➤ The first step is to set the television's clock (refer to "Setting and Displaying the Current Time" on the previous page).

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **Enter** button.
- 4 Press the ▼ or ▲ button to select **Time**. Press the **Enter** button.
Result: The options available in the **Time** group are displayed.
- 5 Press the ▼ or ▲ button to select **Timer**.
- 6 Press the ◀ or ▶ button to set **On**.
Result: The **On Time** and **Off Time** are displayed.
- 7 Press the ▼ or ▲ button to select **On Time**. Set the time at which you wish the television to be switched on automatically.
 - ◆ Press the ◀ or ▶ button to move to the hour or minute. Set the hour or minute by pressing the ▼ or ▲ button.
- 8 Press the ▼ or ▲ button to select **Off Time**. In the same above, set the time at which you wish the television to be switched off automatically.






-
- ◆ When leave the television in Standby mode...
 - During Timer Off, the LED (Stand-by & Timer indicator) lights up Red.
 - During Timer On, the LED lights up Orange.
 - ◆ When switching the television On during Timer On, the LED lights up Green.

➤ Absent Power Off

When you set the timer "On", your television will eventually be turned off, if you do not operate any controls during the 3 hours after the TV is turned on by timer. This function is available in only the timer "On" mode and will prevent a leakage accident or overheating, caused by your TV left on for a long time due to the timer "On" (when you are away on holiday, for example).

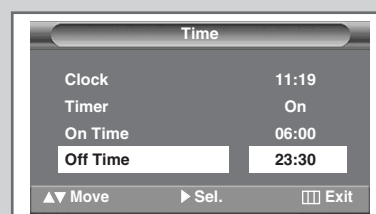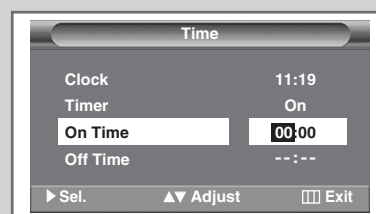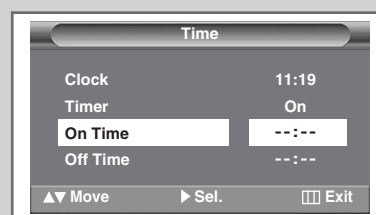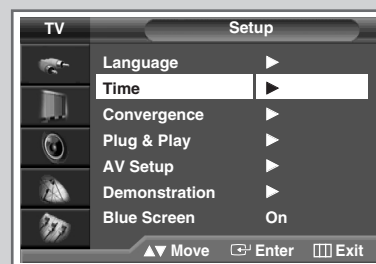

Viewing the Picture In Picture (PIP)

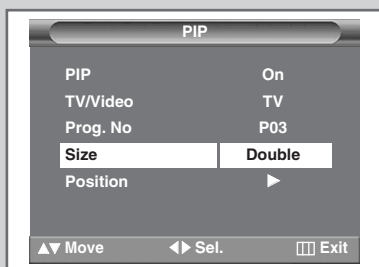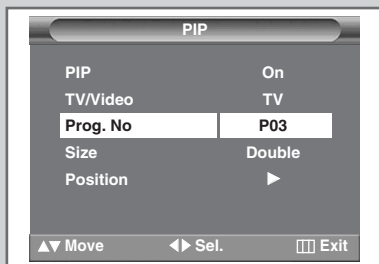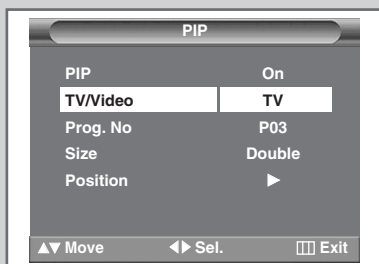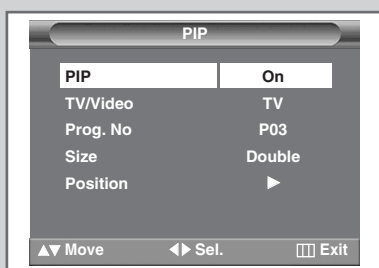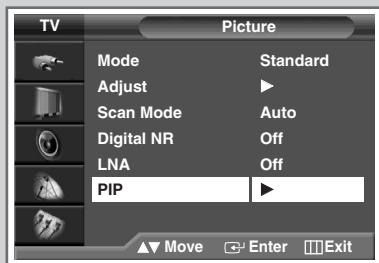     


You can display a sub picture within the main picture of TV program or external A/V devices such as VCR or DVD. In this way you can watch TV program or monitor the video input from any connected devices while watching TV or other video input.


- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the **▼** or **▲** button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **↵** button.
- 4 Press the **▼** or **▲** button to select **PIP**. Press the **↵** button.
- 5 Press the **◀** or **▶** button again to set **On**.
Result: The options available in the **PIP** group are displayed.
- 6 Press the **▼** or **▲** button to select **TV/Video**. Find a source of the sub picture by pressing the **◀** or **▶** button.
Result: The sources are displayed in the following order:
TV – Ext1 Video – Ext2 Video – Ext3 Video – Ext4 Video – S-Video.
- 7 Press the **▼** or **▲** button to select **Prog.No**. If you watching TV program, select the channel that you want to view through the sub picture by pressing the **◀** or **▶** button.
➤ When the source of the sub picture (**TV/Video**) is set to **TV**, you can select the channel of sub picture.
- 8 Press the **▼** or **▲** button to select **Size**. Select a size of the sub picture by pressing the **◀** or **▶** button.
Result: The sizes are displayed in the following order:
Double – Large – Small – 12 PIP – 3 PIP .
➤ ♦ **12 PIP** : You can view up to 12 memorized channels on the sub picture spontaneously.
♦ On the **12 PIP** or **3 PIP** mode, it is impossible to execute swap and position.

Viewing the Picture In Picture (PIP) (continued)


ENG

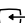
- 9 Press the ▼ or ▲ button to select **Position**. Select a position of the sub picture by using the  button.

 ➤ The **Position** is available in **Large** or **Small**.

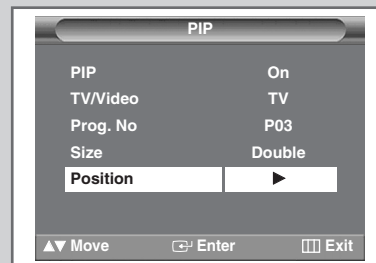


Easy functions of remote control

Buttons	Feature
PIP ON	Used to activate or deactivate the PIP function directly.
SWAP	Used to interchange the main picture and the sub picture. ➤ When the main picture is in the Video mode and the sub picture is in the TV mode, you might not hear the sound of main picture when pressing the SWAP () button after changing the sub picture channel. At this time, reselect the channel of main picture.
P ^ / v	Used to select the channel of sub picture.

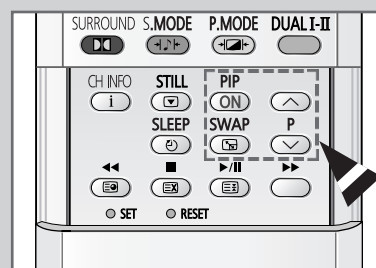 

Teletext Feature

 ENG

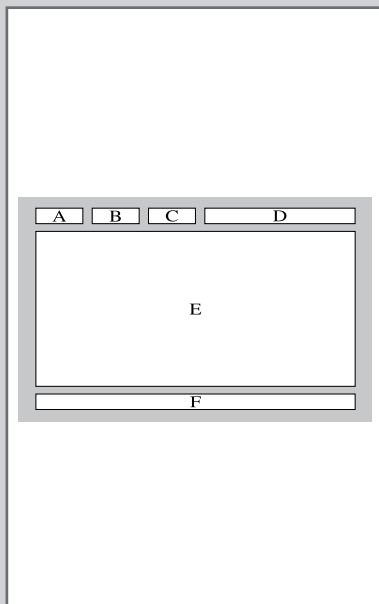

Most television channels provide written information services via teletext. Information provided includes:

- ◆ *Television programme times*
- ◆ *News bulletins and weather forecasts*
- ◆ *Sports results*
- ◆ *Travel information*

This information is divided into numbered pages (see diagram).

Part	Contents
A	Selected page number.
B	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
E	Text.
F	Status information. FASTEXT information.

➤ Teletext information is often divided between several pages displayed in sequence, which can be accessed by:


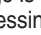

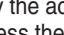
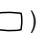
- ◆ Entering the page number
- ◆ Selecting a title in a list
- ◆ Selecting a coloured heading (FASTEXT system)


Displaying the Teletext Information

ENG


You can display Teletext information at any time on your television.

- ☞ For Teletext information to be displayed correctly, channel reception must be stable; otherwise:
 - ◆ Information may be missing
 - ◆ Some pages may not be displayed

 - 1 Select the channel providing the Teletext service using the **P** or **CH** button.
- 2 Press the **TTX/MIX** () button to activate the teletext mode.
Result: The contents page is displayed. It can be redisplayed at any time by pressing the **INDEX** () (index) button.
- 3 Press the **TTX/MIX** () button again.
Result: The screen will be split into two. This Double Teletext feature lets you view the actual broadcast and teletext information separately on the screen.
- 4 If you wish to display the actual broadcast at the same time as the teletext page, press the **TTX/MIX** () button again.
- 5 Press the **TV** () button again to exit from the teletext display.

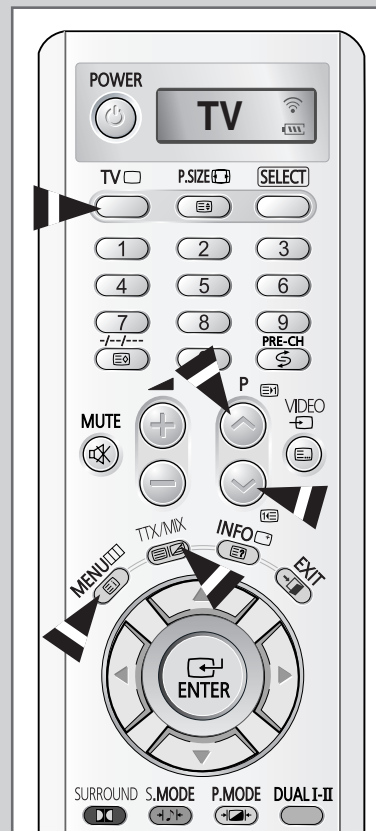

Selecting Display Options

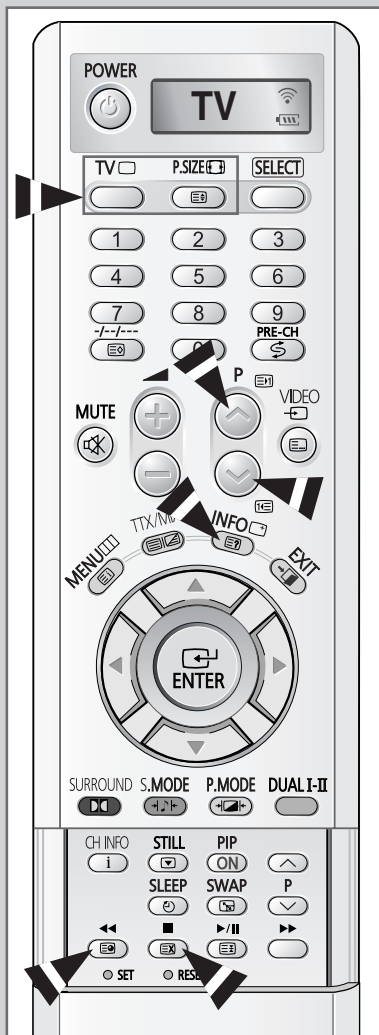 






When you have displayed a Teletext page, you can select various options to suit your requirements.


To display...	Press the...
◆ Hidden text (answers to quiz games, for example)	[REVEAL] (reveal)
◆ The normal screen	[REVEAL] (reveal) again
◆ A secondary page	[SUB-PAGE] (sub-page)
◆ The broadcast when searching for a page	[CANCEL] (cancel)
◆ The next page	[PAGE UP] (page up)
◆ The previous page	[PAGE DOWN] (page down)
◆ Double-size letters in the: <ul style="list-style-type: none"> • Upper half of the screen • Lower half of the screen 	[SIZE] (size) <ul style="list-style-type: none"> • Once • Twice
◆ Normal screen	• Three times

➤ To return to the normal display after using the reveal or size feature, press the **TV** (□) button again.

Selecting a Teletext Page


You can enter the page number directly by pressing the numeric buttons on the remote control.

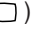- 1 Enter the three-digit page number given in the content by pressing the corresponding numeric buttons.
Result: The current page counter is incremented and the page is then displayed. If the selected page is linked with several secondary pages, the secondary pages are displayed in sequence. To freeze the display on a given page, press the  (hold). Press the it again to resume.
- 2 If the FASTEXT system is used by the broadcasting company, the different topics covered on a Teletext page are colour-coded and can be selected by pressing the coloured buttons on the remote control.
 Press the coloured button corresponding to the topic that you wish to select; the available topics are given on the status line.
Result: The page is displayed with other colored information that can be selected in the same way.
- 3 To display the previous or next page, press the corresponding coloured button.
- 4 To display the subpage, see the following steps.
 - ◆ Press the  (sub-page) button.
Result: The available subpages appear.
 - ◆ Select the required sub-page. Sub-pages can be scrolled by pressing the  or  button.
- 5 When you have finished, press th TV () button to return to your normal broadcast.

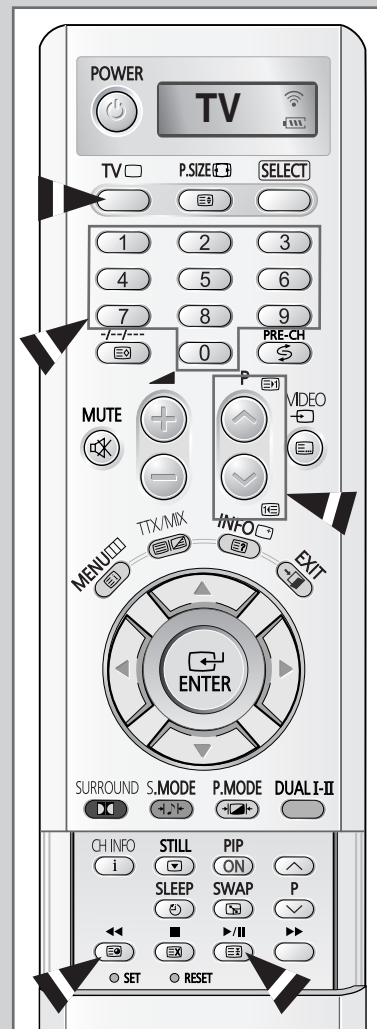 

ENG

 Storing Teletext Pages

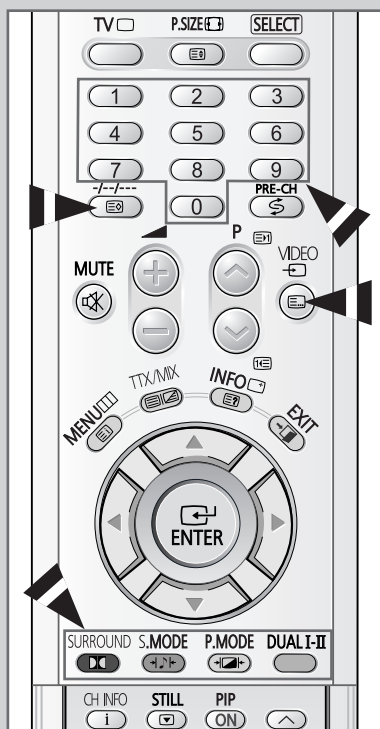

You can store up to four teletext pages to display them later at leisure.

 
 
- 1 Select the LIST mode using the button.
Result: Four 3-digit numbers are displayed in different colours.
 ➤ The button is used to switch between the LIST and FLOF modes.
- 2 Press the coloured button corresponding to the page that will be replaced.
- 3 Enter the new page number using the numeric buttons.
- 4 Repeat steps 2 and 3 for each page to be stored, using a different coloured button each time.
- 5 Press the (store) button until the corresponding blocks blink.

Connecting to the External Input/Outputs


ENG

- EXT1 is used for the equipment with an RGB output, such as video game devices or video disc players.

Rear of the TV

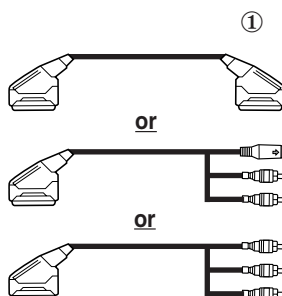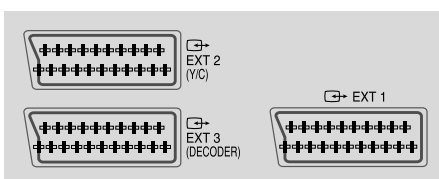

- ① This end can be fitted with:
 - ◆ A SCART connector
 - ◆ An S-Video connector and two audio RCA connectors (L+R); EXT 2
 - ◆ Three RCA connectors (VIDEO + AUDIO-L and R)
- ② If you have a second VCR and wish to copy cassette tape, connect the source VCR to EXT1 and the target VCR to EXT2 so that you can redirect the signal from EXT1 to EXT2.
- ③ If you have a decoder, connect the decoder to the VCR and the VCR to the television.
- ④ When you wish to record a programme, connect the receiver to EXT1 and the VCR to EXT2 so that you can redirect the signal from EXT1 to EXT2.

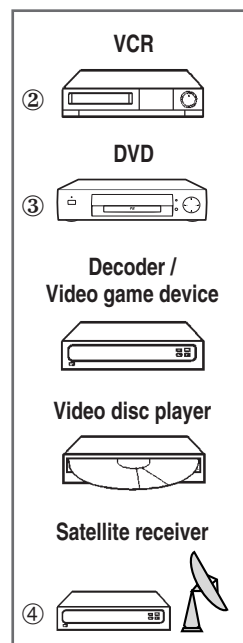 

☞ Whenever you connect an audio or video system to your television, ensure that all elements are switched off.

Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

Connecting to the Audio Output

- The **AUDIO OUT** RCA connectors are used for equipment, such as an audio system (to take full advantage of the Surround sound effect).

Rear of the TV



 
Audio system



Connecting to the RCA Input (depending on the model)

- The RCA (VIDEO + AUDIO-L and R) connectors are used for the equipment, such as camcorders, video disc players, and some video game devices.


Side of the TV

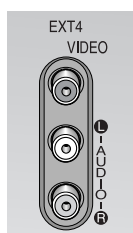

Camcorder



 
Video game device



Video disc player



 Front of the TV






Connecting to the S-Video Input (depending on the model)



ENG

- The S-VIDEO and RCA (AUDIO-L+R) connectors are used for equipment with an S-Video output, such as a camcorder or VCR.

   Side of the TV

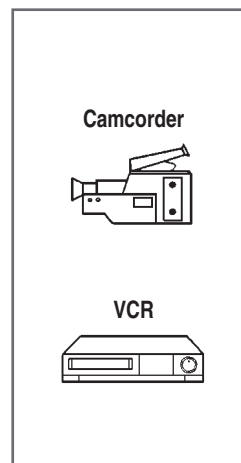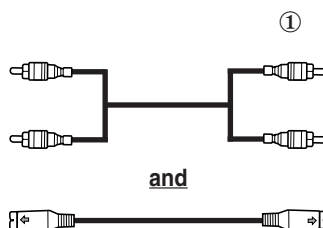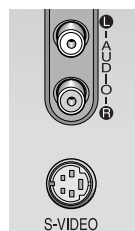

Front of the TV

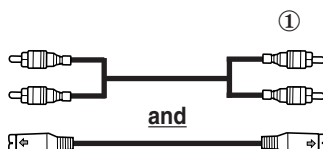  

- ① To play pictures and sound, both the S-VIDEO and RCA connectors must be used.

Connecting Additional Speakers

 
To take advantage of the surround sound system, connect additional speakers.

The speaker terminals are located on the rear of the television:


- ◆ Two for the left-hand surround speaker (marked **L**)
- ◆ Two for the right-hand surround speaker (marked **R**)
- ◆ Two for the center speaker (marked **C**) ; Option

- To improve the quality of the sound, connect the:
- ◆ Red wire to the red terminal
 - ◆ Black wire to the black terminal


Rear of the TV

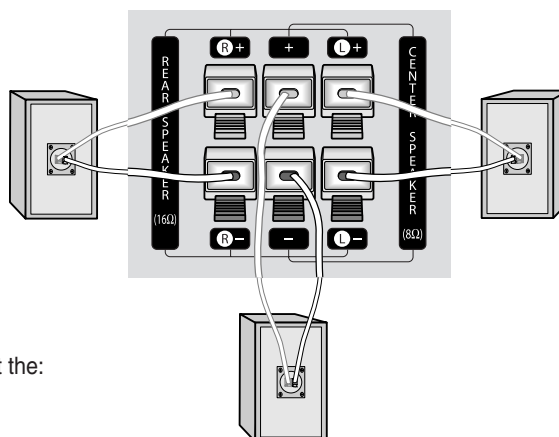

Viewing Pictures From External Sources

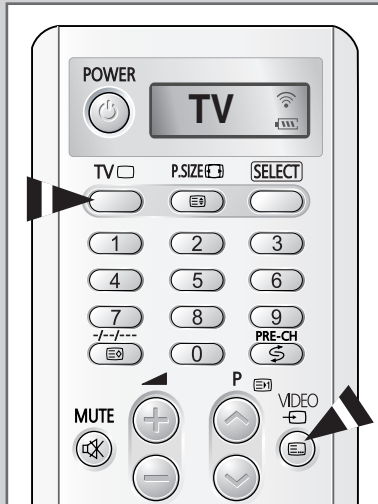 


Once you have connected up your various audio and video systems, you can view different sources by selecting the appropriate input.

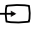- 1 Check that all the necessary connections have been made.
- 2 Switch your television on, then press the **VIDEO** () button repeatedly.



Result: The input sources are displayed in the following order:
TV – EXT1 – EXT2 – EXT3 – EXT4 – S-Video.

➤ Depending on the source selected, the pictures may appear automatically.

 
 
➤ To watch television programmes again, press the **TV** () button and select the number of the channel required.

Redirecting an Input to the External Output


Your television enables you to choose which audio/video signals are output to the external connector.

- 1 Press the **MENU** button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the  button.
- 4 Press the ▼ or ▲ button to select **AV Setup**. Press the  button.
Result: The options available in the **AV Setup** group are displayed.
- 5 Select the required output (**EXT1**, **EXT2** or **EXT3**) by pressing the ▼ or ▲ button.
- 6 Select the source to be directed to the output by pressing the ◀ or ▶ button.
 - **EXT1**, **EXT2** : Default
 - EXT3** : Variable

ENG

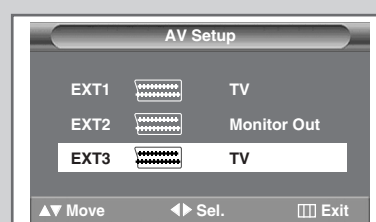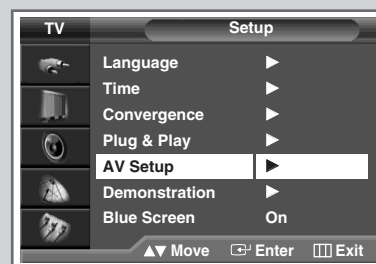

 Programming the Remote Control for Other Components

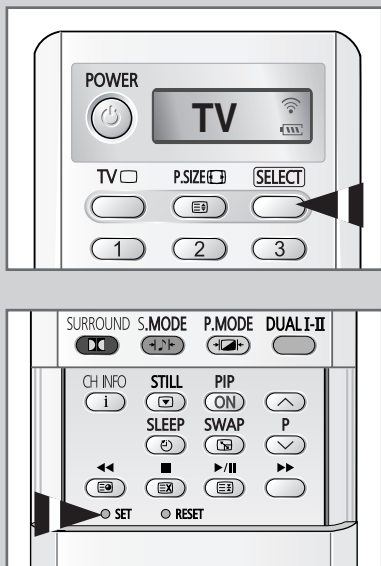

This TV's remote control can operate VCR, CATV, DVD, or Set-top box (STB), in addition to controlling the TV.

- The remote control might not be compatible with the TV manufactured by another company.

- 1 Turn off your VCR, Cable box, DVD or STB.
- 2 Press the **SELECT** button. Mode is changed whenever **SELECT** button is pressed.
- 3 Press the **SET** button.
- 4 Use the numeric buttons to enter the code by manufacturer. Each code must be three digits long.
 Example: To enter the code "6", press 0, 0, and 6.
 To enter the code "76", press 0, 7, and 6.
 ➤ See the remote control code tables to find the appropriate code for your particular component. If more than one code is listed, try each one separately until you find the one that works.
- 5 Press the **POWER** (⏻) button on the remote control. The component you select should turn on. If it turns on, your remote control is now set correctly.
 ➤ If it does not turn on, repeat steps above, but try one of the other codes listed for the brand of particular yours.
- 6 Once your remote control is set up, press the **SELECT** button any time you want to use the remote control to operate your VCR, Cable box, DVD or STB.
 ➤ ♦ When your remote control is in the **VCR, CATV, DVD** or **STB** mode, the volume buttons still control your television's volume.
 ♦ When your remote control is in the **TV** or **Cable** mode, the VCR or DVD control buttons (PLAY, PAUSE, etc.) still operate your VCR or DVD.

Programming the Remote Control for Other Components

ENG

VCR Remote Control Codes

Admiral	020	Marantz	007, 008, 018, 021, 026, 036, 037, 062
Aiwa	025	Marta	006
Akai	004, 027, 032	MEI	021
Audio Dynamics	007, 026	Memorex	006, 021, 024, 025
Bell&Howell	018	MGA	034
Broksonic	022	Midland	005
Candle	002, 003, 006, 008, 015, 055	Minolta	019, 041
Canon	021, 056	Mitsubishi	019, 034, 041, 046
Citizen	002, 003, 006, 008, 015, 055	Montgomery Ward	020
Colortyme	007	MTC	002, 025
Craig	002, 024	Multitech	002, 005, 025, 038
Curtis Mathes	002, 007, 008, 017, 021, 025, 056, 064, 066	NEC	007, 008, 018, 026, 037, 062, 064
Daewoo	003, 010, 011, 012, 013, 014, 015, 016	Optimus	020
DBX	007, 026	Panasonic	021, 056, 071, 072
Dimensia	017	Pentax	019, 041
Dynatech	034	Pentax Research	008
Emerson	001, 003, 006, 021, 022, 025, 030, 032, 034, 040, 047, 050, 052, 060, 063, 065, 066, 067, 069	Philco	021, 036, 056, 059
Fisher	018, 024, 028, 029, 048, 051, 061	Philips	021, 036
Funai	025	Pioneer	019, 026, 039, 053
General Electric	002, 005, 017, 021, 056	Portland	015, 049, 055
Go Video	002	PROSCAN	017
LG (Goldstar)	006, 007, 008, 009, 010	Quartz	018
Harman Kardon	007	Quasar	021, 056
Hitachi	019, 025, 041, 042	Radio Shack/Realistic	006, 018, 020, 021, 024, 025, 029, 034, 048, 056
Instant Replay	021	RCA	002, 017, 019, 021, 035, 041, 043, 057, 068
JC Penney	002, 007, 018, 019, 021, 026, 037, 041, 054, 056	Samsung	000, 001, 002, 003, 004, 005
JVC	007, 008, 018, 021, 026, 037	Sansui	026
Kenwood	007, 008, 018, 026, 037	Sanyo	018, 024
KLH	070	Scott	003, 047, 052, 067
Lloyd	025	Sears	006, 018, 019, 024, 028, 029, 041, 048, 051
Logik	038	Sharp	020, 034, 045, 015
LXI	025	Shimom	027, 033, 038, 058
Magnavox	021, 036, 056, 059	Signature	025
		Sony	027, 033, 044

Programming the Remote Control for Other Components

VCR Remote Control Codes (continued)

Sylvania	021, 025, 036, 056, 059	Totevision	002, 006
Symphonic	025	Unitech	002
Tandy	018, 025	Vector Research	007, 026
Tashika	006	Victor	026
Tatung	037	Video Concepts	007, 026
Teac	025, 037, 068	Videosonic	002
Technics	021	Wards	002, 003, 006, 019, 020, 021, 024, 025, 034, 038, 041
Teknika	006, 021, 025, 031		
TMK	066	Yamaha	007, 008, 018, 026, 037
Toshiba	003, 019, 029, 051, 052	Zenith	023, 027, 033, 073

Cable Box (CATV) Remote Control Codes

Anvision	017, 018	Regency	015, 023
GI	041	SA	042, 043
Hamlin	003, 024, 031	Samsung	000, 001, 002, 003, 004, 005, 006, 007
Hitachi	025, 030	Scientific Atlanta	042, 043
Jerrold	038, 039	Sprucer	022
Macom	025, 030	Stargate 2000	036
Magnavox	019, 023, 028	Sylvania	016
Oak	026	Texscan	016
Panasonic	003, 022, 027, 037, 044	Tocom	032
Philips	019, 021, 023, 028	Universal	033, 034
Pioneer	004, 018, 020, 044	Viewstar	019, 021, 023, 028
RCA	014, 022, 040	Wamer amex	046
Regal	003	Zenith	017, 029, 035, 037, 045

DVD Remote Control Codes

Samsung	000, 001	LG (Goldstar)	006
JVC	002	Sony	007
PROSCAN/RCA	003	Denon	008
Panasonic	005	Curtis Mathes	009

SCART Connector Wiring (EXT1, EXT2 or EXT3)

ENG

If you wish to connect other equipment via the SCART connectors on your television, contact your dealer or a qualified technician to wire the A/V cable as illustrated below.

Pin	Signal
1	Audio output R
2	Audio input R
3	Audio output L
4	Audio chassis return
5	Video chassis return (RGB blue)
6	Audio input L
7	RGB blue input
8	Switching voltage
9	Video chassis return (RGB green)
10	AV-Link (Ext 1)
11	RGB green input
12	-
13	Video chassis return (RGB red)
14	-
15	RGB red input
16	Blanking signal (RGB switching)
17	Video chassis return
18	Blanking signal ground
19	Video output
20	Video input
21	Screening/chassis return

- Pins 5, 7, 9, 11, 13, 15 and 16 are used for RGB processing and are only wired on the EXT1 or EXT3 connector.

Troubleshooting: Before Contacting Service Personnel

Before contacting Samsung after-sales service, perform the following simple checks.

If you cannot solve the problem using the instructions below, note the model and serial number of the television and contact your local dealer.

No sound or picture	<ul style="list-style-type: none"> ◆ Check that the mains lead has been connected to a wall socket. ◆ Check that you have pressed the "I" button (On/Off) and the POWER (⏻) button. ◆ Check the picture contrast and brightness settings. ◆ Check the volume.
Normal picture but no sound	<ul style="list-style-type: none"> ◆ Check the volume. ◆ Check whether the MUTE (🔇) button on the remote control has been pressed.
No picture or black and white picture	<ul style="list-style-type: none"> ◆ Adjust the colour settings. ◆ Check that the broadcast system selected is correct.
Sound and picture interference	<ul style="list-style-type: none"> ◆ Try to identify the electrical appliance that is affecting the television, then move it further away. ◆ Plug your television into a different mains socket.
Blurred or snowy picture, distorted sound	<ul style="list-style-type: none"> ◆ Check the direction, location and connections of your aerial. This interference is often occurs to the use of an indoor aerial.
Remote control malfunctions	<ul style="list-style-type: none"> ◆ Replace the remote control batteries. ◆ Clean the upper edge of the remote control (transmission window). ◆ Check the battery terminals.

Wiring the Mains Power Supply Plug (UK Only)

ENG

IMPORTANT NOTICE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and, if it requires replacing, a fuse approved to BS11362 of the same rating must be used.

Never use the plug with the fuse cover omitted if the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cut off the plug, remove the fuse and then safely dispose of the plug.

Do NOT connect the plug to a mains socket as there is a risk of shock hazard from the bared flexible cord.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

BLUE - NEUTRAL BROWN - LIVE

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK.

The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL, WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL \equiv , OR COLOURED GREEN OR GREEN AND YELLOW.

– AFTER SALES SERVICE

- Do not hesitate to contact your retailer or service agent if a change in the performance of your product indicates that a faulty condition may be present.



European Notice

Products with the CE marking comply with the EMC Directive (89/336/EEC), (92/31/EEC), (93/68/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms:

- **EN55013:1990**
Radio Frequency Interference
- **EN55020:1994**
Electromagnetic Immunity
- **EN61000-3-2:1995**
Power Line Harmonics
- **EN61000-3-3:1995**
Voltage Fluctuations
- **EN60065:1998**
Product Safety