



型号表示方法

[标准型] VHK 2 — 02S — 02S R L

[难燃型] VHK 2 R — 04F — 04F R L C



规格

阀种类	2通,3通
使用流体	空气
最高使用压力	1.0 MPa
*真空使用压力	-100kPa {10 Torr}
环境及流体温度	0 ~ 60℃
适合管子	尼龙、软尼龙、PU软管
配件 (任选)	托架

* 限2通阀 (VHK2系列)

品种	
2	2通阀
3	3通阀


1(P)口 接管口径	2(A)口 接管口径
04F	ø4
06F	ø6
08F	ø8
10F	ø10
12F	ø12
M5	M5 × 0.8
01S	R 1/8
02S	R 1/4
03S	R 3/8
04S	R 1/2

难燃罩	
无记号	无
C	有(仅快换接头)

托架	
无记号	无
L	L形托架


旋钮颜色	
无记号 (标准)	2通阀 灰色 3通阀 蓝色
R (可选项)	2通阀 红色 3通阀 红色

接管种类

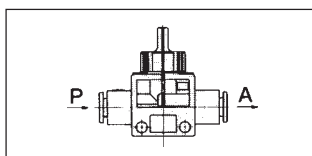


P: 快换接头 A: 快换接头

P	A	适合管子外径 (mm)				
		ø4	ø6	ø8	ø10	ø12
适合管子外径 (mm)	ø4	●				
	ø6	●	●			
	ø8		●	●		
	ø10			●	●	
	ø12				●	●

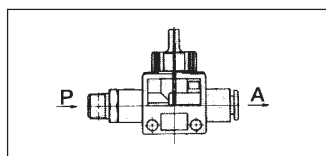


P: 外螺纹 A: 快换接头

P	A	适合管子外径 (mm)				
		ø4	ø6	ø8	ø10	ø12
螺纹口径 R	M5	●	●			
	1/8	●	●	●		
	1/4		●	●	●	●
	3/8		●	●	●	●
	1/2				●	●

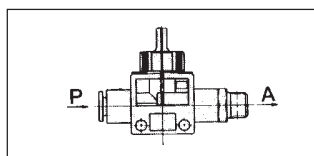

P: 快换接头 A: 外螺纹


P	A	螺纹口径 R				
		M5	1/8	1/4	3/8	1/2
适合管子外径 (mm)	ø4	●	●			
	ø6	●	●	●		
	ø8		●	●	●	
	ø10			●	●	●
	ø12			●	●	●

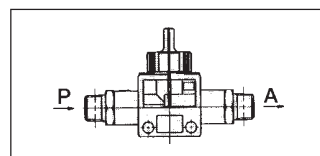

P: 外螺纹 A: 外螺纹


P	A	螺纹口径 R				
		M5	1/8	1/4	3/8	1/2
螺纹口径 R	M5	●				
	1/8	●	●			
	1/4		●	●		
	3/8			●	●	
	1/2				●	●

操作方法

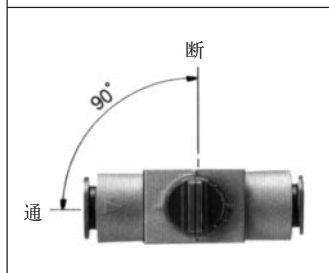

外形尺寸图 (毫米)

P及A: 快换接头

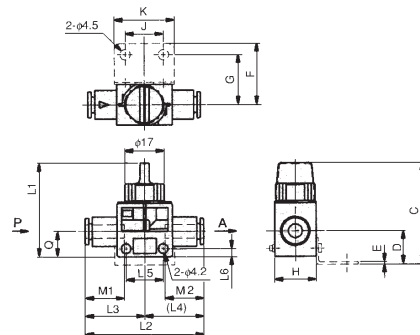

注1) 型号	适合管子外径(mm)		H	L1	L2	L3	L4	L5	L6	M1	M2	Q	有效截面积(mm²)		托架安装尺寸									
	P	A											P→A	※A→R	托架型号	C	D	E	F	G	J	K		
VHK□-04F-04F	4	4	18	41	47.6	23.8	23.8	16.5	3.5	15.8	15.8	11	3.4	1.2	VHK-B1A	44.5	14.5	1	27	22	16.5	26		
VHK□-06F-04F	6	4	18	41	48	24.3	23.7	16.5	3.5	16.8	15.8	11	5.1	1.2	VHK-B1A	44.5	14.5	1	27	22	16.5	26		
VHK□-06F-06F		6			48.6		24.3				16.8		7.2											
VHK□-08F-06F	8	6	18	41	50.5	26.2	24.3	16.5	3.5	18.7	16.8	11	9	1.2	VHK-B1A	44.5	14.5	1	27	22	16.5	26		
VHK□-08F-08F		8			52.4		26.2				18.7		9.7											
VHK□-10F-08F	10	8	22	46	58.5	30.5	28	21.5	4	20.8	18.7	14	13.7	3.2	VHK-B2A	49	17	1	30	25	21.5	31		
VHK□-10F-10F		10			61		30.5				20.8		16.1											
VHK□-12F-10F	12	10	22	46	62	31.5	30.5	21.5	4	21.8	20.8	14	17	3.2	VHK-B2A	49	17	1	30	25	21.5	31		
VHK□-12F-12F		12			63		31.5				21.8		17.5											


注1) □—代表阀种类
2=2通阀
3=3通阀

※只限3通阀


2通/3通手动阀: VHK系列

外形尺寸图 (毫米)


P: 外螺纹, A: 快换接头

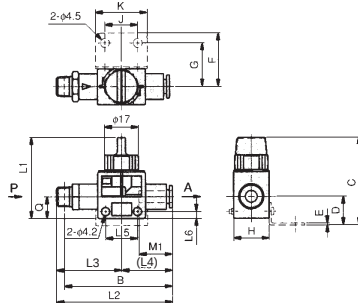

P: 快换接头, A: 外螺纹

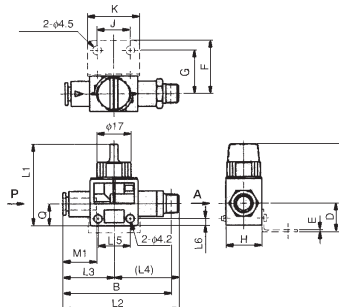

P及A: 外螺纹

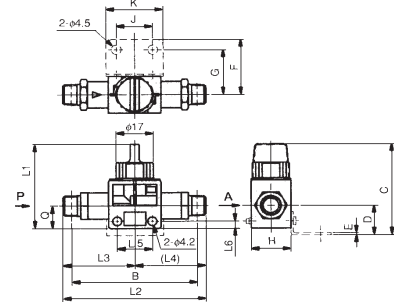

P: 外螺纹, A: 快速接头

注1) 型号	外螺纹		管子外径	H	L1	L2	L3	L4	L5	L6	M1	Q	有效截面积(mm ²)		*B	托架安装尺寸							
	P	A											P→A	※A→R		托架型号	C	D	E	F	G	J	K
VHK□-M5-04F	M5	4	18	41	52.9	23.8	29.1	16.5	3.5	15.8	11	11	2.0	1.2	49	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-M5-06F		6																					
VHK□-01S-04F	1/8	4	18	41	55.4	23.8	31.6	16.5	3.5	15.8	11	11	3.4	1.2	51	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-01S-06F		6																					
VHK□-01S-08F		8																					
VHK□-02S-06F	1/4	6	18	41	60.4	24.3	36.1	16.5	3.5	16.8	11	11	7.2	1.2	54	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-02S-08F		8																					
VHK□-02S-10F		10																					
VHK□-02S-12F		12																					
VHK□-03S-06F	3/8	6	18	41	62.4	24.3	38.1	16.5	3.5	16.8	11	11	7.2	1.2	56	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-03S-08F		8																					
VHK□-03S-10F		10																					
VHK□-03S-12F		12																					
VHK□-04S-10F	1/2	10	22	46	78.2	30.5	47.7	21.5	4	20.8	14	14	16.1	3.2	70	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-04S-12F		12																					

※只限3通阀 *安装螺纹后的参考尺寸。

P: 快换接头, A: 外螺纹

注1) 型号	管子外径		H	L1	L2	L3	L4	L5	L6	M1	Q	有效截面积(mm ²)		*B	托架安装尺寸							
	P	A										P→A	※A→R		托架型号	C	D	E	F	G	J	K
VHK□-04F-M5	4	M5	18	41	52.9	23.8	29.1	16.5	3.5	15.8	11	2.0	1.2	49	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-04F-01S		1/8																				
VHK□-06F-M5	6	M5	18	41	53.9	24.3	29.6	16.5	3.5	16.8	11	2.0	1.2	50	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-06F-01S		1/8																				
VHK□-06F-02S		1/4																				
VHK□-06F-03S		3/8																				
VHK□-08F-01S	8	1/8	18	41	62.2	26.2	36	16.5	3.5	18.7	11	9.7	1.2	58	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-08F-02S		1/4																				
VHK□-08F-03S		3/8																				
VHK□-10F-02S	10	1/4	22	46	73.8	30.5	43.3	21.5	4	20.8	14	16.1	3.2	68	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-10F-03S		3/8																				
VHK□-10F-04S		1/2																				
VHK□-12F-02S	12	1/4	22	46	76.3	31.5	44.8	21.5	4	21.8	14	17.5	3.2	70	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-12F-03S		3/8																				
VHK□-12F-04S		1/2																				

※只限3通阀 *安装螺纹后的参考尺寸。

P: 外螺纹, A: 外螺纹

注1) 型号	外螺纹		H	L1	L2	L3	L4	L5	L6	Q	有效截面积(mm²)		*B	托架安装尺寸							
	P	A									P→A	※A→R		托架型号							
														C	D	E	F	G	J	K	
VHK□-M5-M5	M5	M5	18	41	58.2	29.1	29.1	16.5	3.5	11	2.0	1.2	51	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-01S-M5	1/8	M5	18	41	61.6	32.6	29	16.5	3.5	11	2.0	1.2	54	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-01S-01S		1/8			65.2		32.6				8.6		57								
VHK□-02S-01S	1/4	1/8	18	41	71.6	39	32.6	16.5	3.5	11	9.0	1.2	62	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-02S-02S		1/4			78		39				9.7		66								
VHK□-03S-02S	3/8	1/4	22	46	85.1	44.3	40.8	21.5	4	14	13.7	3.2	73	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-03S-03S		3/8			88.6		44.3				16.1		76								
VHK□-04S-03S	1/2	3/8	22	46	93	48.7	44.3	21.5	4	14	15.1	3.2	79	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-04S-04S		1/2			97.4		48.7				17.5		81								