

This document is a text description of the control panel layout for the product listed below.

The complete operating instructions are available online in PDF format from the Customer Support section of www.panasonic.com.

If you need the operating instructions in an alternate format, please contact Customer Support.

Model Number KX-TG2226

2.4 GHz Digital Cordless Answering System

HANDSET

With the handset buttons facing you, you will find the antenna. It is the narrow, 2.8-inch long protrusion at the top right. To the top left of the handset is the ringer indicator. Just below the top of the front of the handset is a shallow oval concave. This is the earpiece. The smooth surface below the earpiece is the display.

Below the display are two soft keys. Each soft key is used to select the function shown on the display directly above it.

Below the soft keys, in the center of the handset, is a concave key called the Navigator key. The Navigator key also works as a volume key.

To the left of the Navigator key, is an oval button called the TALK button with a “nib”. The TALK button is also the Channel button.

To the right of the Navigator key, is an oval button called the OFF button.

The OFF button has a ridge in the center.

To the lower right of the Navigator Key, is the small oval MENU button. To the lower left of the Navigator Key, is a small oval called the Speakerphone button. The Speakerphone button is also the Channel button.

Below these buttons is the telephone keypad, which is laid out in the conventional telephone arrangement, with a “nib” on the 5 button. Immediately below the keypad are three thin buttons. The left-most button is the FLASH or the CALL WAIT button. The middle one is the REDIAL button. The right-most button is the MUTE button.

The small indentation just below the REDIAL button is the microphone.
The two metal ridges at the bottom of the handset are the charge contacts.

Along the sides of the handset are two indentations that secure the belt clip. The belt clip snaps into place with the small ridges on the curved arms locking into each of the indentations on the side of the handset.

With the handset still facing you, you will find the headset jack on the left side of the handset, parallel to the TALK button. It has a rubber cover that can be opened by pulling down, and is not removable.

Finally on the reverse side of the handset, to the top right is the ringer indicator. The textured area in the center of the handset, is the handset speakerphone's speaker. Just below the speaker is the battery compartment with a notch. Its upper edge is parallel to the speakerphone button and the MENU button.

BASE UNIT

With the base unit facing you, you will find antenna on the right side of the base unit. The antenna can be easily rotated so that they always point upward, whether the unit is placed on a desk or is wall-mounted.

The top of the base unit has a large hole in the center and slants a little down toward the front. This is the cradle for charging the handset standing up, which only fits one way. The two metal ridges on the sides are the charge contacts for the cordless handset.

The cordless handset stands upright in the cradle with the buttons facing the front. The unit beeps when the cordless handset is set properly in the cradle for charging.

To the front of the unit in the center in front of the cradle is a large textured area. This is the base unit speaker.

In front of the speaker, in the center, is a small depression with a display and five buttons. Below the display is the MESSAGE button with an indicator in the center. The MESSAGE button is also the SLOW TALK button.

Both sides of the MESSAGE button are two buttons in a horizontal row. The right side, from right to

left, are the SKIP button and the REPEAT button.

The left side, from right to left, are the STOP button and the ERASE button.

To the lower right of the speaker, are two round buttons arranged in a diagonal. They are the VOLUME buttons.

To the lower left of the speaker, are two round buttons arranged in a diagonal. The upper one is the GREETING CHECK button. The lower one is the GREETING REC button.

To the lower right of the VOLUME button, is the LOCATOR button. The LOCATOR button is also the INTERCOM button. To the left of the GREETING CHECK button, is a round depression. This is the IN USE or CHARGE indicator. Below the IN USE indicator, is the ANSWER ON button with an indicator in the center.

The base unit microphone is located at the bottom of the base unit just below the STOP button.