



PACIFIC RELOADERS STAND

OPERATION INSTRUCTIONS



SEATED POSITION

1. Screw 2" X 28" nipple (9-LM12) into base (9-LM8) and tighten.
2. Place collar (9-LM14) over tube and fasten brace bars (9-LM15) with bolts (9-LM24) provided.
3. Place collar at proper height so bottom of brace bars (9-LM15) will line up with the holes on the side of the base (9-LM8).
4. Tighten collet with set screw (9-LM26).
5. Screw channel (9-LM17) over nipple and tighten. Place top plate (9-LM22) over channel, and fasten with bolts (9-LM23) provided.

NOTE:

Use top hole for level position and bottom hole for tilted.

STANDING POSITION

6. To heighten stand, screw extra 2" X 8" nipple (9-LM11) and tighten.
7. Repeat step 5.

IMPORTANT

Caution should be taken in making sure all parts are in their proper place and securely fastened before attaching your Pacific tool.

The Pacific reloaders' stand is a versatile necessity to the reloader. It was designed in such a way as to permit its being used left or right handed, simply by rotating the top base plate. This keeps the proper foot on the base at all times, thus obtaining the greatest possible leverage.



MANUFACTURED IN U.S.A. BY
PACIFIC GUN SIGHT CO.


BOX 4495
LINCOLN 4, NEBRASKA





PACIFIC RELOADERS STAND

PARTS AND PRICE LIST

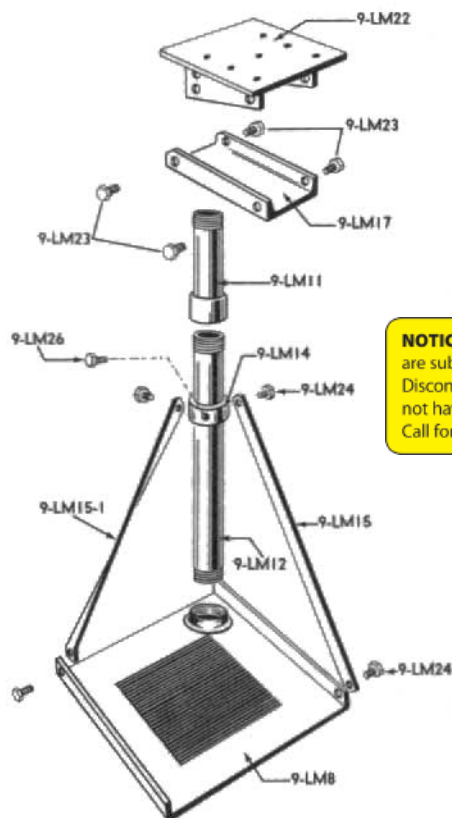

NOTICE: Prices and/or specifications are subject to change without notice. Discontinued products may or may not have replacement parts available. Call for availability 800-338-3220.

Part No.	Description	List Price
9-LM8	Base Assembly Complete.....	\$16.40
9-LM11	2" X 8 " nipple complete.....	3.60
9-LM12	2" X 28" nipple.....	3.80
9-LM14	Collar	2.60
9-LM15	Brace Straight.....	1.60
9-LM15-1	Brace Bent.....	2.60
9-LM17	Channel	5.20
9-LM22	Top Complete.....	9.00
9-LM23	Top Bolt20
9-LM24	Brace Bolt15
9-LM26	Collar Lock Screw.....	.15
9-LM27	Reloader stand Complete.....	\$49.50