

Digital Copier


Operating Instructions (For Facsimile)

DP-2000

Options

DA-AR250/AS200/DS200/DS210/FG230/FG231/FK200/FK210/FS200/MD200

DA-NE200/PC200/PC210/SM08B/SM16B/SM28B/UC200/XN200/XT200; UE-410047/410048/403171

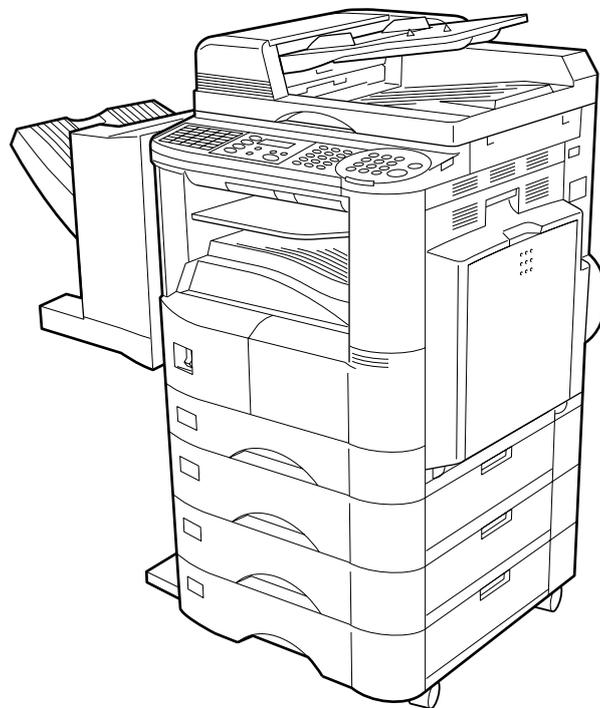

Before operating this equipment, please read these instructions completely and keep these operating instructions for future reference.

English

GETTING TO
KNOW YOUR
MACHINE

INSTALLING
YOUR MACHINE

PROGRAMMING
YOUR MACHINE

BASIC
OPERATIONS

ADVANCED
FEATURES

NETWORK
FEATURES

PRINTOUT
JOURNALS AND
LISTS

PROBLEM
SOLVING

APPENDIX

IMPORTANT INFORMATION

When requesting information, supplies or service always refer to the model and serial number of your machine. The model and serial number plate (Main Name Plate) is located on the machine as shown below. For your convenience, space is provided below to record information you may need in the future.

Model No.

Serial No.

Date of Purchase

Dealer

Address

Telephone Number


() -

Supplies Telephone Number

() -

Service Telephone Number

() -

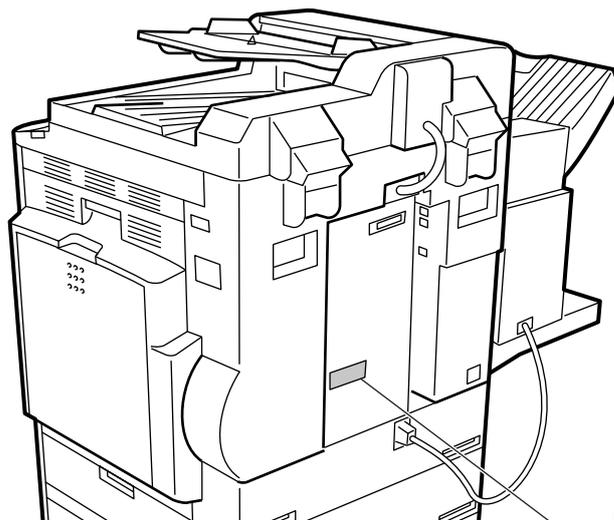

Model and Serial
Number

Table of Contents

Getting to Know Your Machine

Safety Information	5
Function Key	8
External View	9
Control Panel	10

Installing your Machine

Setting the Dialing Method (Tone or Pulse)	13
Adjusting the Volume	15
■ Setting the Monitor Volume	15
■ Setting the Ringer Volume	16
User Parameters	17
■ Setting the Date and Time	17
■ Setting Your LOGO	18
■ Setting Your Character ID	19
■ Setting Your ID Number (Fax Telephone Number)	20

Programming Your Machine

One-Touch/Abbreviated Dialing Numbers	21
■ Entering One-Touch/Abbreviated Dialing Numbers	21
■ Changing or Erasing One-Touch/Abbreviated Dialing Numbers	25
■ Printing Out a Directory Sheet	28
Customizing Your Machine	29
■ Setting the Fax Parameters	29
■ Fax Parameter Table	30

Basic Operations

Loading Originals	35
■ How To Load Originals	35
■ Sending Non-Standard Size Originals	35
■ Flatbed Scanning	35
Basic Transmission Settings	36
■ Contrast	36
■ Resolution	36
■ Original (Text/Photo)	37
■ Verification Stamp	37
■ Communication Journal (COMM. JOURNAL)	38
Sending Documents	39
■ Memory Transmission	39
■ Manual Number Dialing	41
■ One-Touch Dialing	43
■ Abbreviated Dialing	44
■ Directory Search Dialing	45
■ Multi-Station Transmission (Broadcasting)	47
■ Direct Transmission	49
■ Manual Number Dialing (Direct Transmission)	49
■ One-Touch Dialing (Direct Transmission)	50
■ Abbreviated Dialing (Direct Transmission)	51
■ Directory Search Dialing (Direct Transmission)	52
■ Rotated Transmission	53
■ Rotation XMT Fax Parameter set to:	53
■ Double-Sided Transmission (Receiving)	53
■ Duplex Scan Select Mode set to:	53
■ Duplex Print Fax Parameter set to:	53
■ Setting Rotation Transmission	54
■ Duplex Scan	55
■ Sending Document(s) Using Duplex Scan	55
■ Setting Duplex Print	57
■ Voice Mode Transmission	58
■ Off-Hook Dialing	58

Basic Operations (Continued)

	■ On-Hook Dialing	59
	■ Transmission Reservation	59
	■ Memory Transmission Reservation (Multi-tasking)	60
	■ Direct Transmission Reservation (Priority Transmission Reservation)	62
	■ Redialing	64
	■ Automatic Redialing	64
	■ Manual Redialing	64
Receiving Documents		66
	■ Automatic Reception	66
	■ Manual Reception	66
	■ Print Reduction	67
	■ Selecting the Print Reduction Mode	67
	■ Receiving Oversize Documents	68
	■ Substitute Memory Reception	69

Advanced Features

Batch Transmission		71
	■ Real-Time Batch Transmission	71
	■ Delayed Batch Transmission	71
Timer Controlled Communications		72
	■ Deferred Transmission	72
	■ Deferred Polling	73
Polling		75
	■ Setting the Polling Password	75
	■ Preparing to be Polled	76
	■ To Poll Documents from Another Station	77
Program Keys		78
	■ Setting for Group Dialing	78
	■ Setting for Deferred Transmission	79
	■ Setting for Deferred Polling	81
	■ Setting for Normal Polling	83
	■ Setting for One-Touch Key	85
	■ Changing or Erasing the Program Key Settings	86
Edit File Mode		87
	■ Printing a File List	87
	■ Viewing the Contents of a File List	88
	■ Changing the Start Time or the Station of a File	89
	■ Deleting a File	91
	■ Printing a File	92
	■ Adding Documents Into a File	93
	■ Retry an Incomplete File	94
Access Code		95
	■ Setting the Access Code	95
	■ Operating Your Machine with the Access Code (Restrict All Operations)	96
	■ Operating Your Machine with the Access Code (Restrict Access of Fax Parameters Only)	96
Receive To Memory		97
	■ Setting the RCV To Memory Password	97
	■ Setting RCV To Memory	98
	■ Printing Documents	99
Distinctive Ring Detector (DRD)		100
	■ Setting the Ring Pattern (DRD)	101
Fax Cover Sheet		102
	■ General Description	102
	■ Using the Fax Cover Sheet	102
PIN Code Access		105
	■ Selecting the Access Method (Prefix or Suffix)	105
	■ Dialing with a PIN Code	106
Department Code		108
	■ General Description	108
	■ Setting the Department Code	108
	■ Changing or Erasing the Department Code	110
	■ Sending a Document with Department Code	112
	■ Sending a Document with Department Code (Voice Mode Transmission) ...	113
	■ Printing a Department Code List	114
	■ Printing a Department Code Journal	115

Network Features

Selective Reception	117
■ Setting the Selective Reception.	117
Password Communications	118
■ General Description	118
■ Compatibility with Other Machines	118
■ Setting Password Transmission	119
■ Setting Password Reception	120
■ Using Password Transmission	121
■ Using Password Reception	122
Confidential Mailbox	123
■ Confidential Mailbox	123
■ Compatibility with Other Machines	123
■ Sending a Confidential Document to a Remote Station's Mailbox	124
■ Polling a Confidential Document from a Remote Station's Mailbox	126
■ Receiving a Confidential Document to Your Machine's Mailbox	127
■ Storing a Confidential Document in Your Machine's Mailbox	128
■ Printing a Confidential Document from Your Machine's Mailbox	129
■ Deleting a Confidential Document Stored in Your Machine's Mailbox	130
Sub-Addressing	132
■ General Description	132
■ To set the Sub-Address into a One-Touch/ABBR. Dialing Numbers	133
■ To send a Document with Sub-Address	134

Printout Journals and Lists

Journals and Lists	137
■ Transaction Journal	137
■ Individual Transmission Journal (IND. XMT JOURNAL)	139
■ Communication Journal (COMM. JOURNAL)	143
■ One-Touch/Abbreviated and Directory Search List	145
■ Program List	148
■ FAX Parameter List	149

Problem Solving

Troubleshooting	151
■ If You Have Any of These Problems	151
■ Information Codes	153
■ Verification Stamp	155
■ Checking the Telephone Line	156

Appendix


Specifications	157
Options and Supplies	159
FCC Notice for User in USA	160
Notice to User in Canada	162
Glossary	164
ITU-T Image No. 1	168
INDEX	169

This page is intentionally left blank.

Safety Information

⚠ WARNING denotes a potential hazard that could result in serious injury or death.

- TO PREVENT FIRE OR SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.
- TO MINIMIZE THE POSSIBILITY OF SHOCK OR DAMAGE TO THE MACHINE, IT MUST BE PROPERLY GROUNDED.
- THIS PRODUCT COMPLIES WITH FDA RADIATION PERFORMANCE STANDARDS, 21 CFR SUB-CHAPTER J. CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
- WHEN YOU OPERATE THIS EQUIPMENT, THE SOCKET-OUTLET SHOULD BE NEAR THE EQUIPMENT AND BE EASILY ACCESSIBLE.
- MAKE SURE THAT THE MACHINE IS INSTALLED IN A SPACIOUS OR WELL VENTILATED ROOM SO AS NOT TO INCREASE THE AMOUNT OF OZONE IN THE AIR. SINCE OZONE IS HEAVIER THAN AIR, IT IS RECOMMENDED THAT AIR AT FLOOR LEVEL BE VENTILATED.

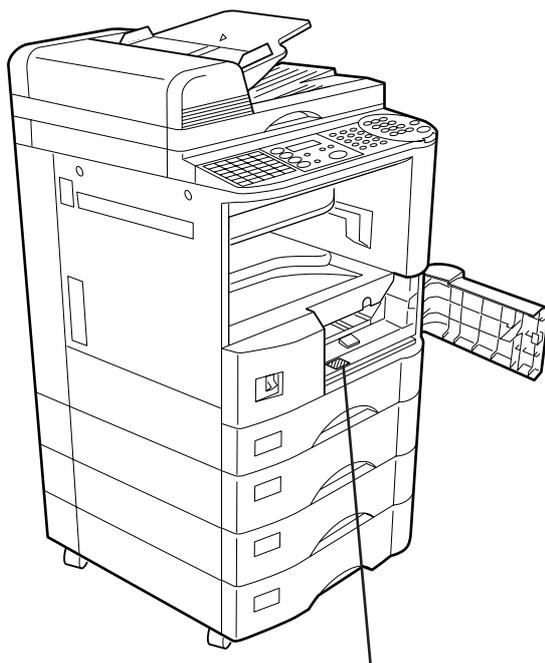

DANGER-Invisible and hazardous laser radiation when open and interlocks defeated. AVOID DIRECT EXPOSURE TO BEAM.

ATTENTION-Rayonnement laser invisible dangereux en cas d'ouverture et lorsque la sécurité est neutralisée. EXPOSITION DANGEREUSE AU FAISCEAU.

VORSICHT-Unsichtbare Laserstrahlung. wenn Abdeckung geöffnet und Sicherheitsverriegelung überbrückt. NICHT DEM STRAHL AUSSETZEN.

FBE8998A

Safety Information

⚠ CAUTION denotes hazards that could result in minor injury or damage to the machine.

- THIS PRODUCT CONTAINS A LITHIUM BATTERY. DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS OF YOUR LOCAL SOLID WASTE OFFICIALS.
- TO REDUCE THE RISK OF SHOCK OR FIRE, USE ONLY NO. 26 AWG OR LARGER TELEPHONE LINE CABLE.
- DISCONNECT ALL POWER TO THE MACHINE BEFORE COVER(S) ARE REMOVED. REPLACE THE COVER(S) BEFORE THE UNIT IS RE-ENERGIZED.


⚠ IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:


- DO NOT USE THIS PRODUCT NEAR WATER, FOR EXAMPLE, NEAR A BATH TUB, WASH BOWL, KITCHEN SINK OR LAUNDRY TUB, IN A WET BASEMENT OR NEAR A SWIMMING POOL.
- AVOID USING A TELEPHONE (OTHER THAN A CORDLESS TYPE) DURING AN ELECTRICAL STORM. THERE MAY BE A REMOTE RISK OF ELECTRIC SHOCK FROM LIGHTNING.
- DO NOT USE THE TELEPHONE TO REPORT A GAS LEAK IN THE VICINITY OF THE LEAK.
- USE ONLY THE POWER CORD AND BATTERIES INDICATED IN THIS MANUAL. DO NOT DISPOSE OF BATTERIES IN A FIRE, THEY MAY EXPLODE. CHECK WITH LOCAL CODES FOR POSSIBLE SPECIAL DISPOSAL INSTRUCTIONS.

Safety Information


⚠ CAUTION denotes hazards that could result in minor injury or damage to the machine.

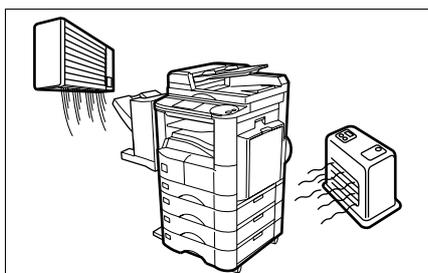


Do not install the machine near heating or an air conditioning unit.

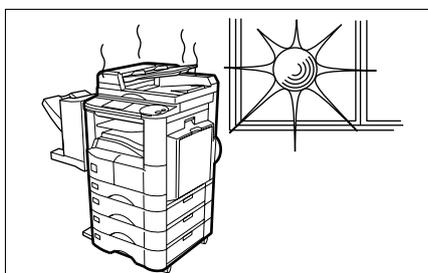


Avoid exposure to direct sunlight.

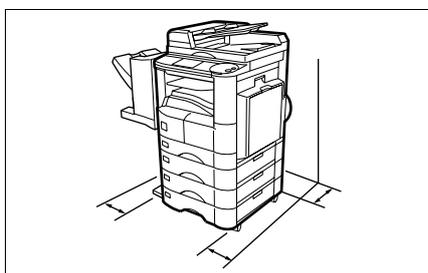

Install the machine on a flat surface, leave at least 4 inches (10 cm) of space between the machine and other objects.

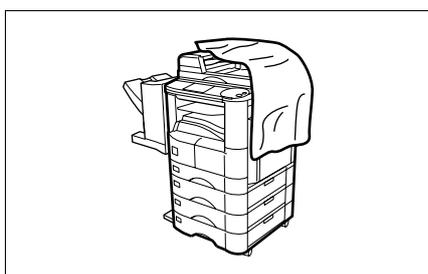


Do not block the ventilation openings.

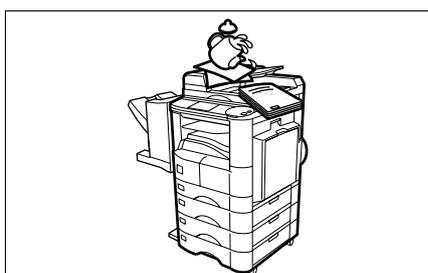

Do not place heavy objects or spill liquids on the machine.

Function Key


Any function can be started by first pressing **FUNCTION** and then enter the function number, or by pressing **▼** or **▲** scroll key repeatedly until the desired function appears on the display.

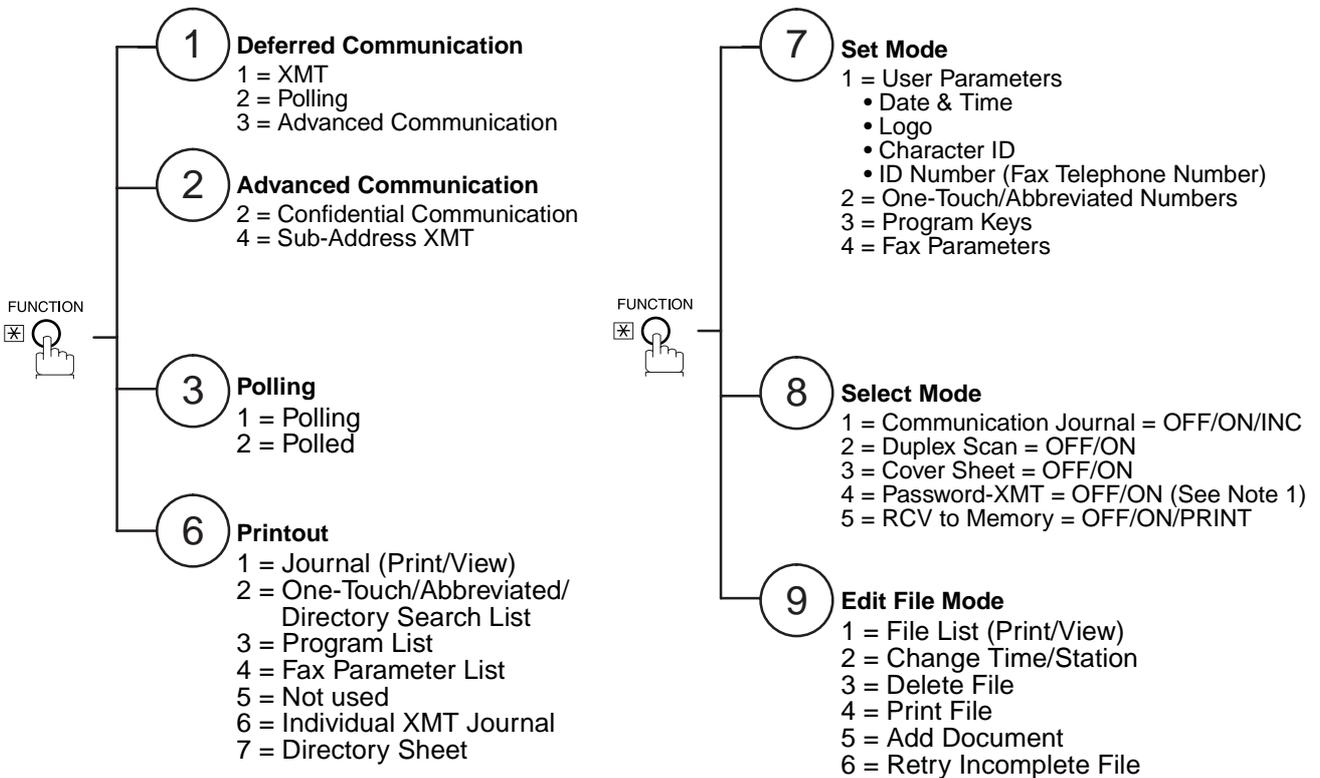

NOTE

1. If Fax Parameter is not preset to a Valid position, which enables you to use the function, the display will not show the function.

External View

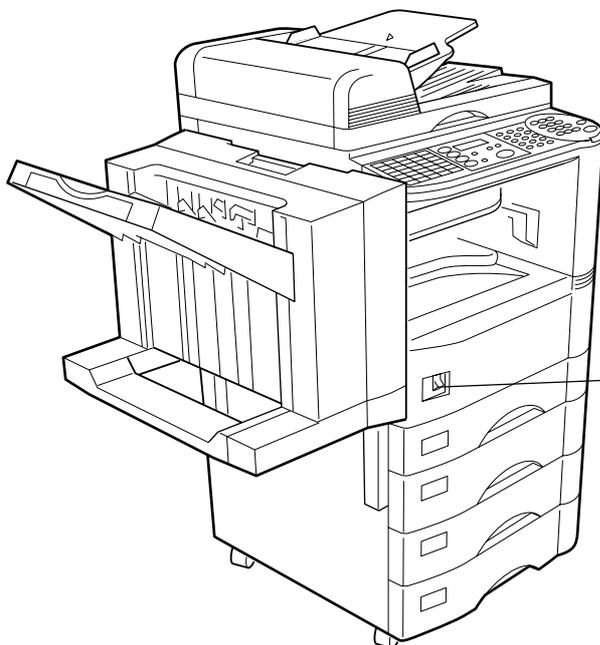


Power switch

- After connecting all cables and the Power Cord, turn the power switch ON.

Handset

- (Available as an option, see Operating Instructions (For Copier) page 72)

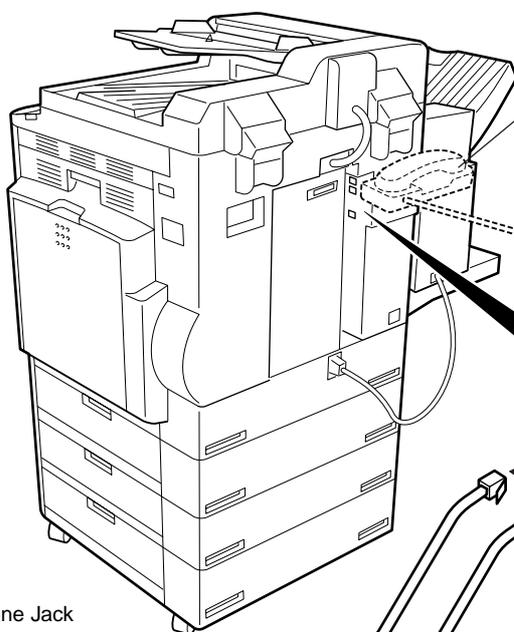

RJ-11C
Telephone Jack

Telephone Line Jack

- Plug one end of the telephone line cable into the "RJ-11C" telephone jack supplied by the telephone company and the other end into the LINE jack on the back of the machine.

External Telephone Jack

- You can connect an additional standard single line telephone to the machine. To connect the telephone, break off the protective tab on the TEL jack.

Optional Telephone Handset Jack

- Connect the telephone line cable from the Optional Handset into the HANDSET jack on the back of the machine.

Control Panel



- Used to store a job in memory (See operating Instructions For Copier, page 25)
Also used to enter "." (period) while entering LOGO, character ID and station name.



- Used to turn the verification stamp ON or OFF. (See page 37)
Also used to enter "-" (dash) while entering LOGO, character ID and station name.



- Used to select either memory or direct communication. (See page 39 to 45)
Also used to enter "_" (underscore) while entering LOGO, character ID and station name.




- Used to select the FAX mode.

ON LINE Indicator

Blinks : When sending or receiving faxes.

LCD Display

Indicates date and time, or the current operation.

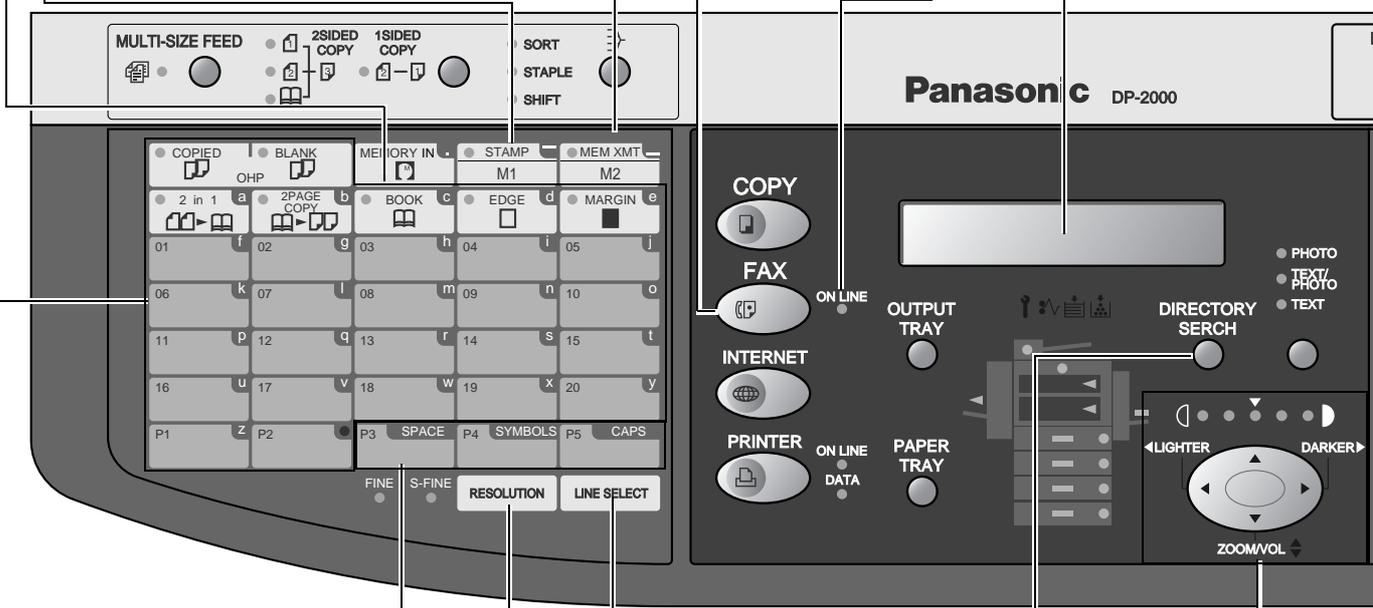

One-Touch Keys (01-20)

- Used for One-Touch Dialing. (See page 43 and 50)

Program Keys (P1-P5)

- Used to record long dialing procedures or Group Dialing Number keys. (See page 78 to 86)

Character key

- One-Touch Keys and Program Keys also serve as character and symbol input keys which are used to record your LOGO, character ID and station name. The character key template is printed on the panel under the directory sheet cover.

LINE SELECT

- Used to manually select the communications port for each transmission. Available when the Optional 2nd G3 Fax Communication Port Kit has been installed. (See Operating Instructions (For Copier))

RESOLUTION

- Used to set Standard, Fine, Super-Fine. (See page 36)

DIRECTORY SERCH

- Used to search for a station name. (See page 45 and 52)

P3 SPACE


- Used to insert a space while entering LOGO, character ID and station name.

P4 SYMBOLS

- Used to enter a symbol (, ' & () : + / % Å å Ä ä Ö ö Ü ü È è É é Æ æ Ñ) for LOGO, character ID and station name. Use ▼ or ▲ to select the symbols.

P5 CAPS


- Used to switch between upper and lower character set.

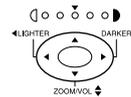

Used for the following:

- Adjust the CONTRAST.
- Adjust the monitor and ringer volume. (See page 15 to 16)
- Move the cursor while entering numbers and characters.
- Search the station name for Directory Search Dialing.
- Confirm the entered station for multi-station communication.
- Select functions.
- Confirm the current communication modes (e.g. Page number, ID, Dialed Telephone number, File number) when the unit is ON LINE.

Control Panel

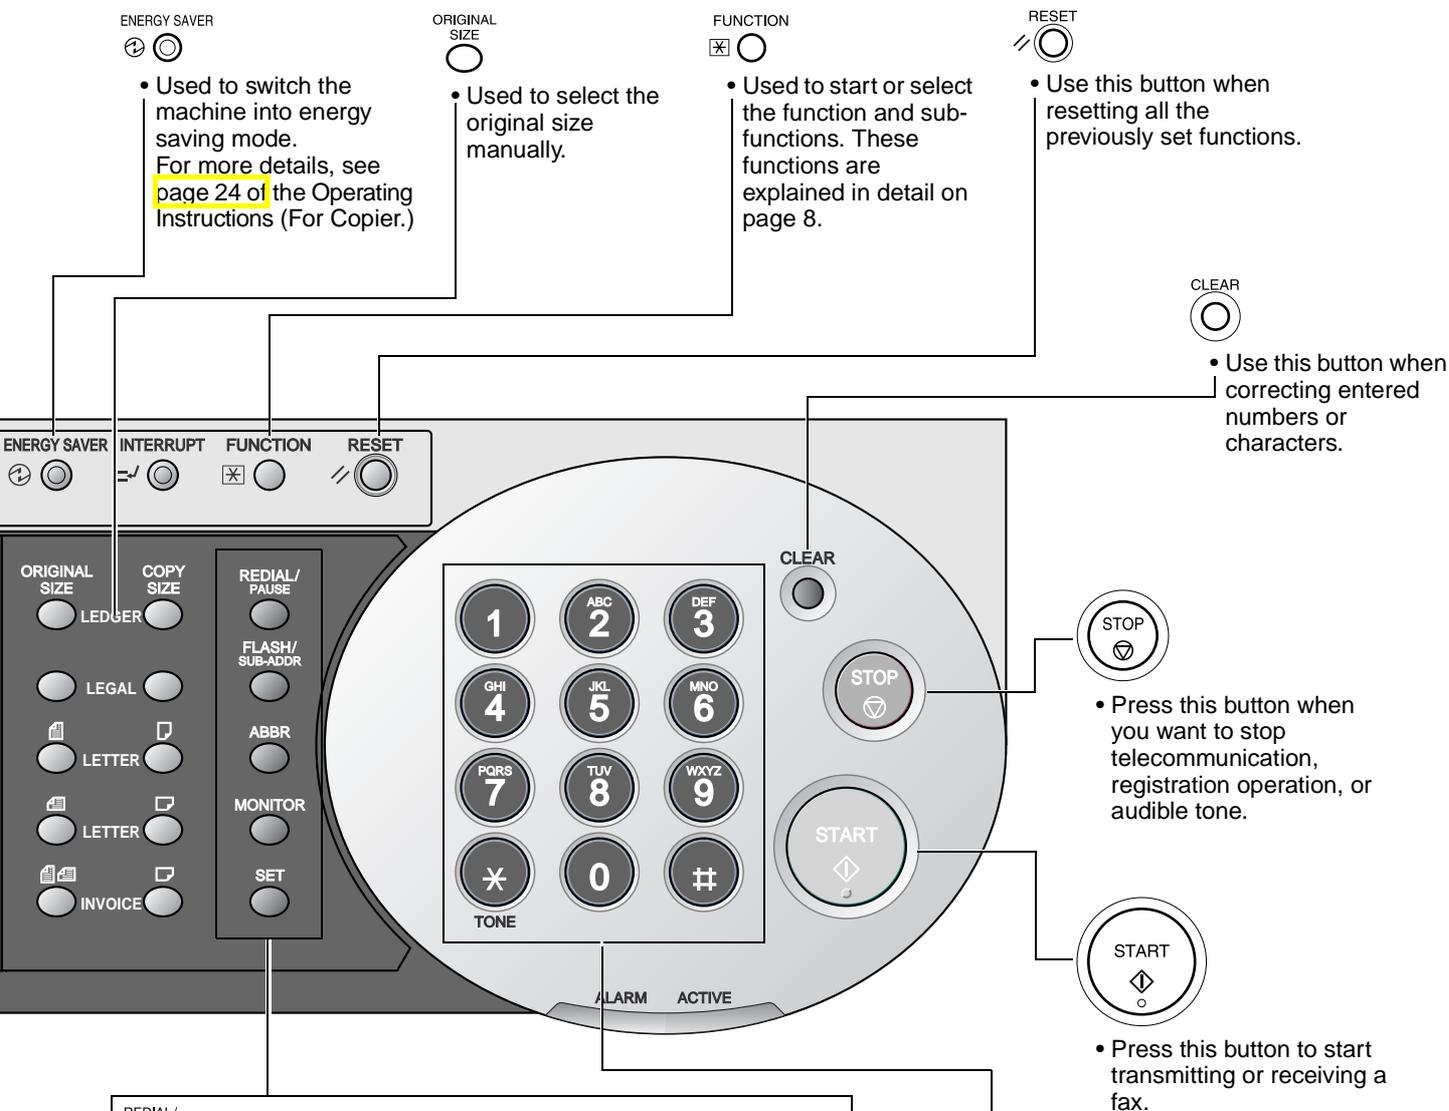

REDIAL/ PAUSE

- Used to enter a pause when recording or dialing a telephone number, or to redial the last dialed number.

FLASH/ SUB-ADDR

- Used to separate the Sub-Address from the telephone number when dialing, or to access some features of your PBX.

ABBR

- Used to start Abbreviated Dialing. (See page 44 and 51)

MONITOR

- Used to start On-Hook Dialing. (See page 59)

SET

- Used to set operations.

Keypad

- Used for manual number dialing, recording phone numbers, and numerical entries.

Tone key

- Used to temporarily change the dialing mode to Tone when Pulse mode is set.

This page is intentionally left blank.

Setting the Dialing Method (Tone or Pulse)

Your machine can operate with either of two dialing methods (Tone or Pulse), depending on the type of telephone line you are connected to. If you need to change the dialing method to Tone or Pulse, follow the procedure below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1   SET MODE (1-4)
ENTER NO. OR ∨ ^

2   FAX PARAMETER (1-99)
NO. =■

3     06 DIALING METHOD
2:TONE

- If your machine does not have the 2nd G3 Fax Communication Port Kit installed, proceed to Step 5.
- If your machine does have the 2nd G3 Fax Communication Port Kit installed, you can change the dialing method for each of the telephone lines in Step 4 and 6 below.

4 Set the dialing method for the First Telephone Line (Line-1).
 for "PULSE".
 or
 for "TONE".
06 DIALING METHOD
1:PULSE (L-1)
Note1
 or

06 DIALING METHOD
2:TONE (L-1)

5  06 DIALING METHOD
2:TONE (L-2)

6 Set the dialing method for the Second Telephone Line (Line-2).
 for "PULSE".
 or


06 DIALING METHOD
1:PULSE (L-2)

 for "TONE".
06 DIALING METHOD
2:TONE (L-2)

Continued on the next page...

Setting the Dialing Method (Tone or Pulse)

7

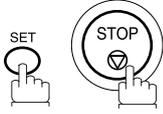

NOTE

1. This field (Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Option is installed.

Adjusting the Volume

You can adjust the monitor and ringer volume on your machine. The built-in speaker enables you to hear the dial tone, dialing signals, and busy tone. The ringer sounds when your machine receives a call.


Setting the Monitor Volume

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1



You will hear the dial tone through the speaker.

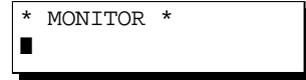


2

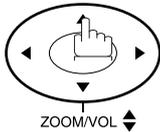

repeatedly to raise the volume.



ZOOM/VOL

or

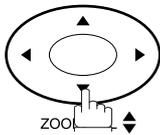

repeatedly to lower the volume.

ZOOM/VOL

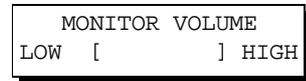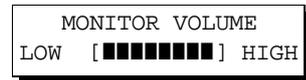

3



NOTE

- You can also adjust the volume of the key touch tone and the volume of the buzzer in the Fax Parameter No. 010 (KEY/BUZZER VOLUME). (See page 30)


Adjusting the Volume

Setting the Ringer Volume

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1 Standby

NOV-12-2000 15:00
00%

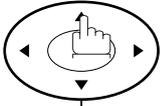2  repeatedly to raise the volume.
ZOOM/VOL 

RINGER VOLUME
(((()))

or

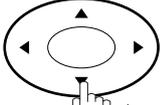 repeatedly to lower the volume.
ZOOM/VOL 

RINGER VOLUME


3 

NOTE

1. You can also adjust the volume of the key touch tone and the volume of the buzzer in the Fax Parameter No. 010 (KEY/BUZZER VOLUME). (See page 30)


User Parameters


Your facsimile machine has several basic settings (User Parameters) to help you keep records of the documents you send or receive. For example, the built-in clock keeps the current date and time, and your LOGO and ID Number help to identify you when you send or receive documents.

Setting the Date and Time

At standby the display will show the date and time. Once the standby display is set, it will automatically be updated.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

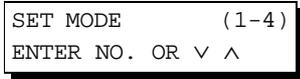
1   

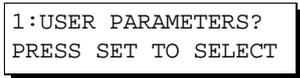2  

3  

4 Enter the new date and time.

Ex:

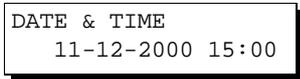①	①	Month	: November			
①	②	Date	: 12th			
②	①	①	①		Year	: 2000
①	⑤	①	①		Time	: 3:00 PM

If you make a mistake, use  or  to move the cursor over the incorrect number, then overwrite it with a correct one.

5  

NOTE

1. The current Date & Time must be set because it is required by the Telephone Consumer Act of 1991. (For details, see FCC NOTICE at the end of this User's Guide)

User Parameters


Setting Your LOGO

When you send a document, your LOGO appears on the top of the copy printed out at the other station.

The LOGO helps to identify you to someone who receives your document.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

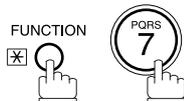

SET MODE (1-4)
ENTER NO. OR V ^

2



1:USER PARAMETERS?
PRESS SET TO SELECT

3



repeatedly until display shows;

LOGO
█

4

Enter your LOGO (max. 25 characters and digits) by using the Character keys (See page 10).


Ex: P A N A S O N I C

LOGO
PANASONIC █

If you make a mistake, use ◀ or ▶ to move the cursor beyond the incorrect character, press CLEAR then re-enter the new character.

If more than 19 characters are entered, the left side characters will scroll off the display.

5

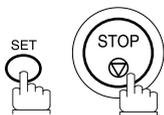

NOTE


1. Your Company Name or your name must be set as your LOGO because it is required by the Telephone Consumer Act of 1991. (For details, see FCC NOTICE at the end of these Operating Instructions)


User Parameters


Setting Your Character ID

If the remote machine has a Character ID capabilities, when you are sending or receiving, your Character ID will appear on the remote machine's display and the remote machine's Character ID will appear on your display.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

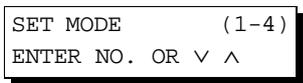
1   

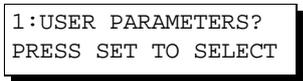2  

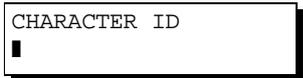3  repeatedly until display shows; 

4 Enter your Character ID (max. 16 characters and digits) by using the Character keys (See page 10).

Ex: 

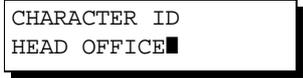

If you make a mistake, use  or  to move the cursor beyond the incorrect character, press  then re-enter the new character.

5  

NOTE

1. The special characters of Å, å, Ä, ä, Ö, ö, Ü, ü, È, è, É, é, Æ, æ and Ñ cannot be used for Character ID.

User Parameters

Setting Your ID Number (Fax Telephone Number)

If the remote machine does not have a Character ID but it has an ID Number, when sending or receiving, your ID Number will appear on the remote machine's display and their ID Number will appear on your display.

We suggest you use your facsimile telephone number as your ID number. (max. 20 digits)

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1




SET MODE (1-4)
ENTER NO. OR ∨ ^

2



1:USER PARAMETERS?
PRESS SET TO SELECT

3

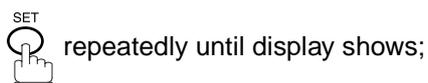

ID NO.
█

4


Enter your ID (max. 20 digits) by using the key pad and **SPACE**.

Ex: ② ① ① **SPACE** ⑤ ⑤ ⑤
SPACE ① ② ① ②

ID NO.
201 555 1212█

If you make a mistake, use  or  to move the cursor beyond the incorrect number, press **CLEAR** then re-enter the new number.

5

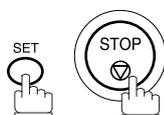

NOTE

- You may use  to enter a "+" character at the beginning of the ID number to indicate the following digit(s) for your country code.
Ex :+1 201 555 1212 +1 for U.S.A. country code.
 +81 3 111 2345 +81 for Japan country code.
- Your Fax Telephone Number must be set as your ID Number because it is required by the Telephone Consumer Act of 1991. (For details, see FCC NOTICE at the end of these Operating Instructions)

One-Touch/Abbreviated Dialing Numbers

9 Select the telephone line to be used for the communication.

```
LINE SELECTION=L-2  
1:L-1 2:L-2 3:AUTO
```

Ex: ② for "L-2" (Line 2, Second Telephone line)

10 

```
ONE-TOUCH< >  
PRESS ONE-TCH OR ∨ ^
```

To record another number, repeat step 4 to 10.



To return to standby, press .

NOTE

1. This field (Auto, Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Option is installed.

One-Touch/Abbreviated Dialing Numbers

To set an Abbreviated Dialing Number, follow the steps below

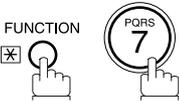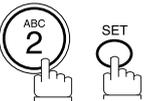- 1**  SET MODE (1-4)
ENTER NO. OR ∨ ^
- 2**  1: ONE-TOUCH
2: ABBR NO.
- 3**  ABBR. [■]
ENTER NO. OR ∨ ^
- 4** Ex: ① ② ② (001 to 160) [022]
ENTER TEL. NO.
- 5** Enter the telephone number (up to 36 digits including pauses and spaces). [022]
9-555 2345 ■

Ex: ⑨ [PAUSE] ⑤ ⑤ ⑤ [SPACE] ② ③ ④ ⑤
- 6**  [022] ENTER NAME
9-555 2345
- 7** Enter the station name using character keys (up to 15 characters). [022] ACCOUNTING ■
9-555 2345

Ex: [A] [C] [C] [O] [U] [N] [T] [I] [N] [G]

 - If your machine does not have the 2nd G3 Fax Communication Port Kit installed, proceed to Step 10.
- 8**  LINE SELECTION = AUTO
1: L-1 2: L-2 3: AUTO

 - If your machine has the 2nd G3 Fax Communication Port Kit installed, you can pre-select which telephone line should be used for this station by pressing “①”, “②” or “③”.
 - If “AUTO” (default) is selected, the machine will automatically select the available telephone line.
- 9** Select the telephone line to be used for the communication. LINE SELECTION=L-2
1: L-1 2: L-2 3: AUTO

Ex: ② for “L-2” (Line 2, Second Telephone line)

Note5

Continued on the next page...

One-Touch/Abbreviated Dialing Numbers

10 

ABBR. [■]
ENTER NO. OR ∨ ^

To record another number, repeat step 4 to 10.

To return to standby, press **STOP**.

NOTE

1. If you require a special access number to get an outside line, enter it first and then press **PAUSE**.
A hyphen "-" is displayed for pause.
2. Use **SPACE** or **MONITOR** to enter a space between the numbers to make it easier to read.
3. If you are using Pulse dialing and you wish to change to Tone dialing in the middle of dialing, press **TONE** (represented by a "/"). The dialing method will be changed from Pulse to Tone after dialing the digit "/".
Ex : 9 PAUSE TONE 5551234
4. You can search for an unused One-Touch key or ABBR. number by pressing **▼** or **▲** in step 3 or 4.
5. This field (Auto, Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Option is installed.

One-Touch/Abbreviated Dialing Numbers

Changing or Erasing One-Touch/Abbreviated Dialing Numbers

If you have to change or erase any of the One-Touch/Abbreviated dialing numbers, follow the steps below.

To change the settings of a One-Touch/ABBR. dialing number

1     1: ONE-TOUCH
2: ABBR. NO.

2 Select ① for One-Touch Dialing number
Select ② for ABBR. Dialing Number ONE-TOUCH< >
PRESS ONE-TCH OR √ ^

Ex: ①

3 Ex: 01 <01> SALES DEPT
9-555 1234

4  <01> SALES DEPT
ENTER TEL. NO.

then enter a new telephone number. (See Note 1)

Ex: ⑨ PAUSE ⑤ ⑤ ⑤ SPACE ③ ④ ⑤ ⑥ <01> SALES DEPT
9-555 3456

5  <01> SALES DEPT
9-555 3456

6  <01> ENTER NAME
9-555 3456

Ex: P A N A F A X <01> PANAFAX
9-555 3456

7  LINE SELECTION= AUTO
1:L-1 2:L-2 3:AUTO

Note3

- If your machine has the 2nd G3 Fax Communication Port Kit installed, you can pre-select which telephone line should be used for this station by pressing “①, ② or ③”.
- If “AUTO” (default) is selected, the machine will automatically select the available telephone line.

8 Select the telephone line to be used for the communication. LINE SELECTION=L-2
1:L-1 2:L-2 3:AUTO

Ex: ② for “L-2” (Line 2, Second Telephone line)

Continued on the next page...

One-Touch/Abbreviated Dialing Numbers

9



To record another number, repeat step 3 to 9.

To return to standby, press **STOP**.

ONE-TOUCH< >
PRESS ONE-TCH OR ∨ ^

NOTE

1. If you make a mistake, use ◀ or ▶ to move the cursor beyond the incorrect number, press **CLEAR** then re-enter the new number.
2. If the One-Touch/Abbreviated dialing number has been used for a communication reservation, the settings cannot be changed or erased until the communication has finished.
To change or erase the settings, cancel the communication first by Edit File Mode. (See page 87)
3. This field (Auto, Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Option is installed.

One-Touch/Abbreviated Dialing Numbers

To erase the settings of One-Touch/ABBR. Dialing number

1



```
1: ONE-TOUCH
2: ABBR NO.
```

2

Select ① for One-Touch Dialing number
Select ② for ABBR. Dialing Number

Ex: ①

```
ONE-TOUCH< >
PRESS ONE-TCH OR v ^
```

3

Enter the station you wish to erase.

Ex: f

```
<01> SALES DEPT
9-555 1234
```

4



```
<01> SALES DEPT
ENTER TEL. NO.
```

5



To return to standby, press .

```
ONE-TOUCH< >
PRESS ONE-TCH OR v ^
```

NOTE

1. If the One-Touch/Abbreviated dialing number has been used for a communication reservation, the settings cannot be changed or erased until the communication has finished.


To change or erase the settings, cancel the communication first by Edit File Mode. (See page 87)

One-Touch/Abbreviated Dialing Numbers

Printing Out a Directory Sheet

After programming a one-touch dialing number, you can print out the directory sheet which includes the first 12 characters of each station name. Cut along the dotted line and place it over the One-Touch key under the Directory Sheet Cover. To print out a directory sheet, follow the steps below.

1

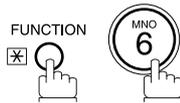

PRINT OUT (1-7)
ENTER NO. OR ∨ ^

2



* PRINTING *
DIRECTORY SHEET

Your machine prints out the directory sheet.

```

***** -DIRECTORY SHEET- ***** DATE NOV-12-2000 ***** TIME 15:00 *****
    
```

← dotted line


01	02	03	04	05
SALES DEPT	ENG. DEPT	ACCT. DEPT	EXPORT DEPT	
06	07	08	09	10
11	12	13	14	15
16	17	18	19	20
P1	P2	P3	P4	P5

* * * * *

-PANASONIC-

```

***** -HEAD OFFICE - ***** - 201 555 1212- *****
    
```

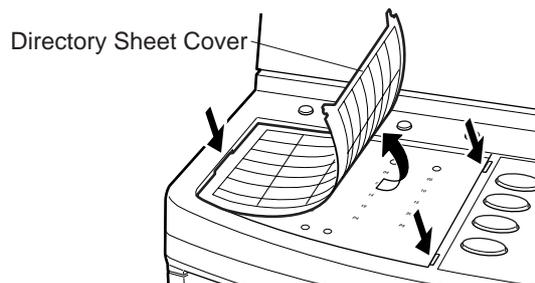


Customizing Your Machine

Your facsimile machine has a variety of adjustable Fax Parameters. These parameters, listed in the Parameter Table, are preset for you and do not need to be changed. If you do want to make a change, read the table carefully. Some parameters, such as the Resolution, Contrast, and Verification Stamp parameters, can be temporarily changed by simple key operation just before a transmission is made. When the transmission ends, however, these parameters return to their preset values (Home position). Other parameters can only be changed by the procedure described below.

Setting the Fax Parameters


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

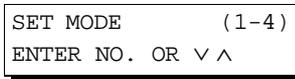
1   

2   


3 Enter Fax Parameter number from the Parameter Table.
(See page 30 to 33)


Ex: ① ① ④ for **STAMP**

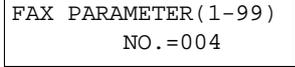

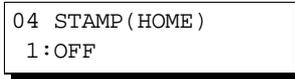4  

5 Ex: ② for **ON**

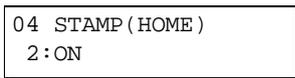

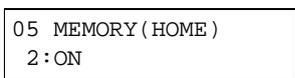6  

To set another parameter, press **CLEAR** to return to step 3 or press **STOP** to return to standby.

NOTE

1. To scroll the Fax Parameters in Step 2 or 4, press  or .
2. To print a Fax Parameter List, see page 149.

Customizing Your Machine

Fax Parameter Table

No.	Parameter	Setting Number	Setting	Comments
001	CONTRAST	1	Lightest	Setting the home position for the CONTRAST.
		2	Lighter	
		3	Normal	
		4	Darker	
		5	Darkest	
002	RESOLUTION	*1	Standard	Setting the home position for the RESOLUTION.
		2	Fine	
		3	S-Fine	
003	ORIGINAL	*1	TEXT	Setting the home position for the ORIGINAL.
		2	TEXT/PHOTO	
		3	PHOTO	
004	STAMP	*1	Off	Setting the home position of the STAMP. To select the stamp function when the document is stored in memory, see Fax Parameter No. 28.
		2	On	
005	MEMORY	1	Off	Setting the home position for the MEMORY.
		*2	On	
006	DIALING METHOD	1	Pulse	Selecting the dialing method. (Select Line-1 or Line-2 first, if you have the 2nd G3 Fax Communication Port Kit installed)
		*2	Tone	
007	HEADER PRINT	*1	Inside	Selecting the printing position of the header. Inside : Inside TX copy area. Outside : Outside TX copy area. No Print : Header does not printed.
		2	Outside	
		3	No Print	
008	HEADER FORMAT	*1	Logo, ID No.	Selecting the header format.
		2	From To	
009	RCV'D TIME PRINT	*1	Invalid	Selecting whether the machine prints the received date & time, remote ID, percentage of reduction and page number on the bottom of each received page.
		2	Valid	
010	KEY/BUZZER VOLUME	1	Off	Selecting the volume of the Key/Buzzer tone.
		*2	Soft	
		3	Medium	
		4	Loud	
012	COMM. JOURNAL	1	Off	Selecting the home position for the printing mode of the COMM. Journal Off/Always/INC. Off : Does not print Always : Always prints Inc. Only: When communication has failed.
		2	Always	
		*3	Inc. Only	

Customizing Your Machine

No.	Parameter	Setting Number	Setting	Comments
013	AUTO JOURNAL PRINT	1	Invalid	Selecting whether the machine prints the journal automatically after every 100 transactions.
		*2	Valid	
014	FILE ACCEPTANCE REPORT	*1	Invalid	Selecting whether the machine prints the file acceptance journal. If you set this parameter to valid, a report will print after the document is stored into memory.
		2	Valid	
017	RECEIVE MODE	1	Manual	Setting the reception mode to automatic or manual.
		*2	Auto	
022	SUBSTITUTE RCV	1	Invalid	Selecting whether the machine receives to memory when the recording paper runs out, toner runs out or the recording paper is jammed.
		*2	Valid	
024	PRINT REDUCTION	1	Fixed	Selecting the print reduction mode. Fixed: Reduce received document according to setting of Parameter No. 25. Auto: Reduce received document according to the length of received originals.
		*2	Auto	
025	REDUCTION RATIO	70	70%	Selecting the fixed print reduction ratio from 70% to 100%. This parameter functions only when the fixed print reduction is selected on Fax Parameter No. 24.
		----	----	
		100	100%	
026	POLLING PASSWORD		(----	Setting a 4-digit password for secured polling. (See page 75)
027	POLLED FILE SAVE	*1	Invalid	Selecting whether the machine retains the polled document(s) in memory even after the document(s) is polled once.
		2	Valid	
028	STAMP AT MEM. XMT	1	Invalid	Selecting whether the machine stamps the originals when storing into memory. (depending on the Stamp setting on the Control Panel)
		*2	Valid	
031	INCOMPLETE FILE SAVE	*1	Invalid	Selecting whether the machine retains the document in memory if it is not successfully transmitted.
		2	Valid	
033	XMT REDUCTION	1	Invalid	Selecting whether the machine performs reduction when the transmitting original is wider than the recording paper used at the receiving machine.
		*2	Valid	
036	RING PATTERN DETECT (DRD) (See Note 2)	*1	Invalid	All ring patterns. Select a ring pattern for automatic answering. (Select Line-1 or Line-2 first, if you have the 2nd G3 Fax Communication Port Kit installed) 1: A Standard ring pattern. 2: B Double ring pattern. 3: C Triple ring pattern (Short-Short-Long). 4: D All other triple ring patterns, except the type C described above.
		2	Valid	
037	RCV TO MEMORY		(----	Enter a 4-digit password for printing the received document(s) in memory by using F8-5 (RCV TO MEMORY). When F8-5 (RCV TO MEMORY) is set to ON, this parameter is not selectable on the LCD display. (See page 97)
038	ACCESS CODE		(----	Enter a 4-digit Access Code to secure the machine from unauthorized use. (See page 95)

Continued on the next page...

Customizing Your Machine

No.	Parameter	Setting Number	Setting	Comments
039	PIN CODE ACCESS	*1	None	Selecting the access method (Prefix or Suffix) to dial a number with PIN Code. (See page 105)
		2	Suffix	
		3	Prefix	
042	CONF. POLLED FILE SAVE	*1	Invalid	Selecting whether the machine saves the confidential polled file even after the file is polled once.
		2	Valid	
043	PASSWORD-XMT	*1	Off	Setting a 4-digit XMT-Password and selecting whether the machine performs and checks the XMT-Password of the receiving station when transmitting. (See page 119)
		2	On	
044	PASSWORD-RCV	*1	Off	Setting a 4-digit RCV-Password and selecting whether the machine performs and checks the RCV-Password of the transmitting station when receiving. (See page 120)
		2	On	
046	SELECT RCV	*1	Invalid	Selecting whether the machine performs selective reception. (See page 117)
		2	Valid	
052	DIAGNOSTIC PASSWORD		(----	Setting the password for Remote Diagnostic Mode. Please ask your Panasonic Authorized Dealer for details.
053	SUB-ADDRESS PASSWORD		(----	Setting a 20-digit password for secured sub-address communication.
056	COVER SHEET	*1	Off	Setting the home position for the Cover Sheet parameter in the Select Mode. (See page 102)
		2	On	
063	PC-FAX RCV MODE [See Note 3]	*1	Print	Selecting how the machine will execute the receiving Fax document(s). Print : Print the received document(s). Upload & Print : Print the received document(s) and upload it's file. Upload : Upload the received document file.
		2	Upload & Print	
		3	Upload	
077	DEPARTMENT CODE	*1	Invalid	Selecting whether the machine performs the Department Code operation. (See page 108)
		2	Valid	
078	ROTATION XMT	1	Invalid	Selecting whether the machine performs rotation transmission.
		*2	Valid	
082	QUICK MEMORY XMT	1	Invalid	Selecting whether the machine performs Quick Memory Transmission. (See page 41 to 45) Invalid: Stores all documents into memory first before dialing the telephone number. Valid: Starts dialing the telephone number immediately after storing the first page.
		*2	Valid	
085	FAX OUTPUT TRAY	*1	Inner 1	Selecting the Output Tray home position for received document(s). Inner 1 : Received document(s) exit to the Bottom Output Tray. Inner 2 : Received document(s) exit to the Upper Output Tray (Blue). Outer
		2	Inner 2	
		3	Outer	

Customizing Your Machine

No.	Parameter	Setting Number	Setting	Comments
088	LINE SELECTION [See Note 4]	*1	Auto	Setting the home position for the Telephone Line selection.
		2	Line-1	Auto: Selects the available telephone line for transmission automatically. Line-1: Selects this as the default telephone line, unless manually selecting an alternate phone line.
		3	Line-2	Line-2: Selects this as the default telephone line, unless manually selecting an alternate phone line.
089	LIST OUTPUT TRAY	*1	Inner 1	Selecting the Output Tray home position for List printout. Inner 1 : The List printout exits to the Bottom Output Tray. Inner 2 : The List printout exits to the Upper Output Tray (Blue).
		2	Inner 2	
		3	Outer	
095	DUPLEX PRINT	*1	Invalid	Selecting whether the machine performs duplex print.
		2	Valid	
097	SPECIAL TRAY No.1 - 3	*1	None	Select up to 3 Special Trays that will not be used for printing received faxes (4-Tray configuration). One Tray must always be available for receiving Faxes. (You can specify one Tray (1 ~ 4) for each selection No. 1, No. 2 and/or No. 3)
		2	Tray 1	
		3	Tray 2	
		4	Tray 3	
		5	Tray 4	
099	MEMORY SIZE (Flash Memory)	-	-	Displays the amount of base and optional memory installed. (Base Memory + Optional Memory)

NOTE


1. Setting number marked with an asterisk (*) indicates the factory standard setting.
2. This parameter supports an optional telephone service "Distinctive Ring Service" provided by your local telephone company. It allows up to 4 different telephone numbers to be assigned on a single telephone line with a distinctive ring for each telephone number. By selecting the appropriate ring pattern associated with the telephone number assigned for your fax machine. It can differentiate and answer the incoming call on the fax number. All other calls on the other telephone numbers will not be answered. This optional service from your local phone company is also called Custom Ringing, Distinctive Ringing, Ident-a-call, Ident-a-ring, Personalized Ringing, RingMaster, RingMate, Selective Ringing, Smart Ring or something similar. Check with your local telephone company on the availability of this service in your area.
3. This parameter is available only when the Parallel Port Interface Kit is installed.
4. This parameter is available only when the G3 Communication Port Option is installed.

This page is intentionally left blank.

Loading Originals


How To Load Originals

1. On the ADF / Inverting ADF

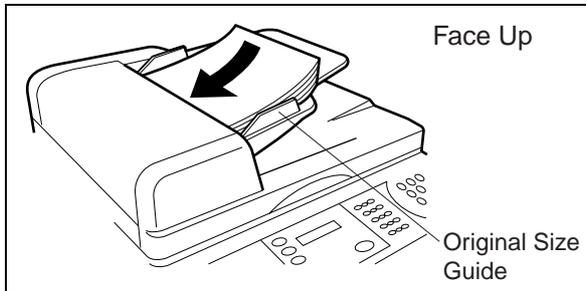

- Place the original(s) Face Up on the ADF until the leading edge placed into the machine stops.


2. On the Platen Glass

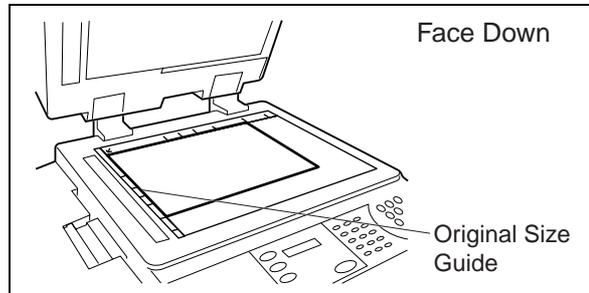

- Place a book or an original Face Down on the Platen Glass, aligning it with the arrow mark on the original size guides.

Sending Non-Standard Size Originals

When transmitting non-standard size document(s), the machine may perform Rotate Transmission automatically and not transmit the portion of the document that exceeds the standard size ("P" portion). (See Note 1)

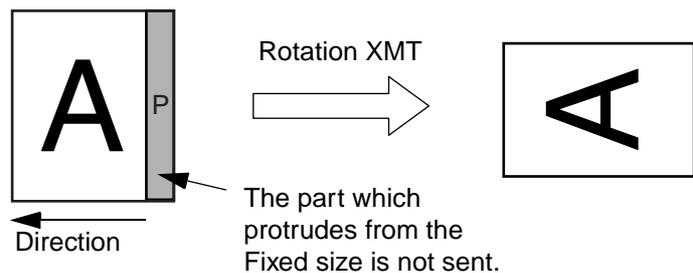

Flatbed Scanning


When a book or an original is placed on the Platen Glass, the message "ANOTHER ORIGINAL?" is shown on the LCD display when **START** is pressed and the scanning is completed.

- If you wish to store another page, press **YES** and place another original, then press **START**.
- If **NO** is pressed, the machine starts to dial the telephone number.

NOTE

1. When an oversized original is sent to another machine, sometimes, it is reduced in accordance with the other party's recording paper size.

EX:

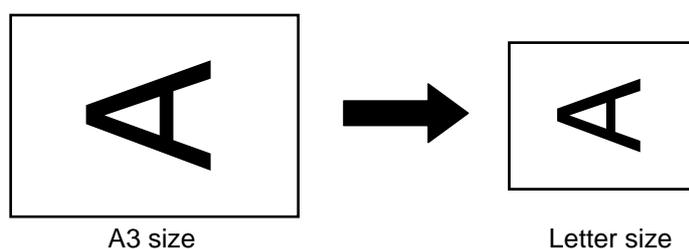

Basic Transmission Settings

You can temporarily change the transmission settings either before or after you place the original on the ADF. These settings are as follows:


- Contrast
- Resolution
- Original (Text/Photo)
- Stamp
- Communication Journal
- Duplex Scan
- Cover Sheet
- Password-XMT

After the document(s) have been sent, your machine will automatically return to the preset settings.

Contrast

Your machine is preset to **Normal** contrast. If you wish to send an original with lighter contrast, change the setting to **Lighter**. If you wish to send an original with darker contrast, change the setting to **Darker**.

Press **CONTRAST** to:

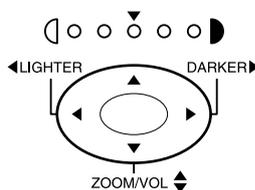

Resolution

Your machine is preset to Standard resolution, which is suitable for most originals. If you want to send it with more detail, change the setting to Fine or Super-Fine.

Press **RESOLUTION** to:

FINE S-FINE **RESOLUTION** for standard originals

FINE S-FINE **RESOLUTION** for detailed originals

FINE S-FINE **RESOLUTION** for finer detailed originals


NOTE

1. To change the preset Contrast position, change the setting of Fax Parameter No. 001. (See page 30)
2. To change the preset Resolution position, change the setting of Fax Parameter No. 002. (See page 30)
3. If you send a photographic original with gray tones, set the Resolution to Fine or S-Fine (406 x 391 dpi) and the Original setting to Text/Photo or Photo. The reproduction of the received document will be determined by the capability of the remote station.

Basic Transmission Settings


Original (Text/Photo)

The Original setting is useful when sending photographs or illustrations with gray tones. Your machine is preset to "TEXT". You can select either "TEXT/PHOTO" or "PHOTO" mode.

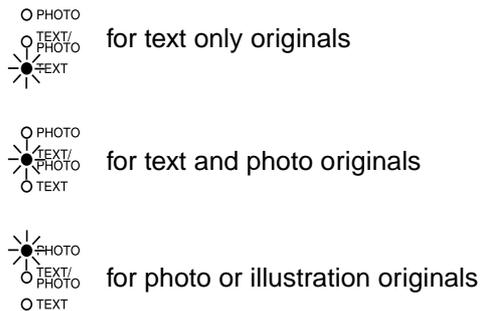

Verification Stamp

The Verification Stamp helps you to confirm successful transmissions by stamping the bottom of each successfully transmitted page with a small ⊗ mark.

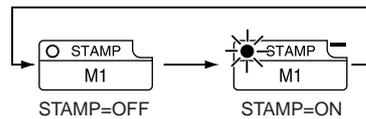

NOTE

1. When you select TEXT/PHOTO, or PHOTO, your machine will automatically select Fine Resolution.
2. When you store document(s) into memory, the Verification Stamp will stamp on the original if it is successfully stored into memory. In this case the Verification Stamp is not a confirmation that the document was successfully transmitted. If you wish to disable the use of the Verification Stamp when storing document(s) into memory, change the setting of Fax Parameter No. 028. (See page 31)
3. To change the preset Verification Stamp setting, change the Fax Parameter No. 004. (See page 30)

Basic Transmission Settings

Communication Journal (COMM. JOURNAL)

A Communication Journal lets you verify if the transmission was successful. You can select the condition to print the Communication Journal as follows.

- When you set COMM. JOURNAL = **OFF**: a Communication Journal will not be printed out.
- When you set COMM. JOURNAL = **ON**: a Communication Journal is printed out automatically after every communication.
- When you set COMM. JOURNAL = **INC.**: a Communication Journal is printed out automatically only if the communication has failed.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1	 	SELECT MODE (1-5) ENTER NO. OR ∨ ^
2	 	COMM. JOURNAL=INC 1:OFF 2:ON 3:INC
3	 for "OFF". or  for "ON" (Always print out). or  for "INCOMPLETE" only.	COMM. JOURNAL=OFF 1:OFF 2:ON 3:INC or COMM. JOURNAL=ON 1:OFF 2:ON 3:INC or COMM. JOURNAL=INC 1:OFF 2:ON 3:INC
4		

NOTE

1. To change the preset Comm. Journal condition, change the setting of Fax Parameter No. 012. (See page 30)

Sending Documents

You can choose either Memory or Direct Transmission.

Use Memory Transmission if:

- You want to send the document to multiple stations.
- You have to retrieve the document immediately.
- You want to take advantage of the Dual Operation design.
- You want to take advantage of Batch Transmission.

Use Direct Transmission if:

- The memory is full.
- You want to send the document immediately.

Use Voice Mode Transmit if:


- You want to send the document after talking with the other party.
- You want to send the document after listening to a voice prompting.

Memory Transmission

Your machine quickly stores the document into the machine's memory.

Then, starts to dial the telephone number.

If the transmission fails, your machine will re-transmit the remaining unsuccessful page(s) automatically.

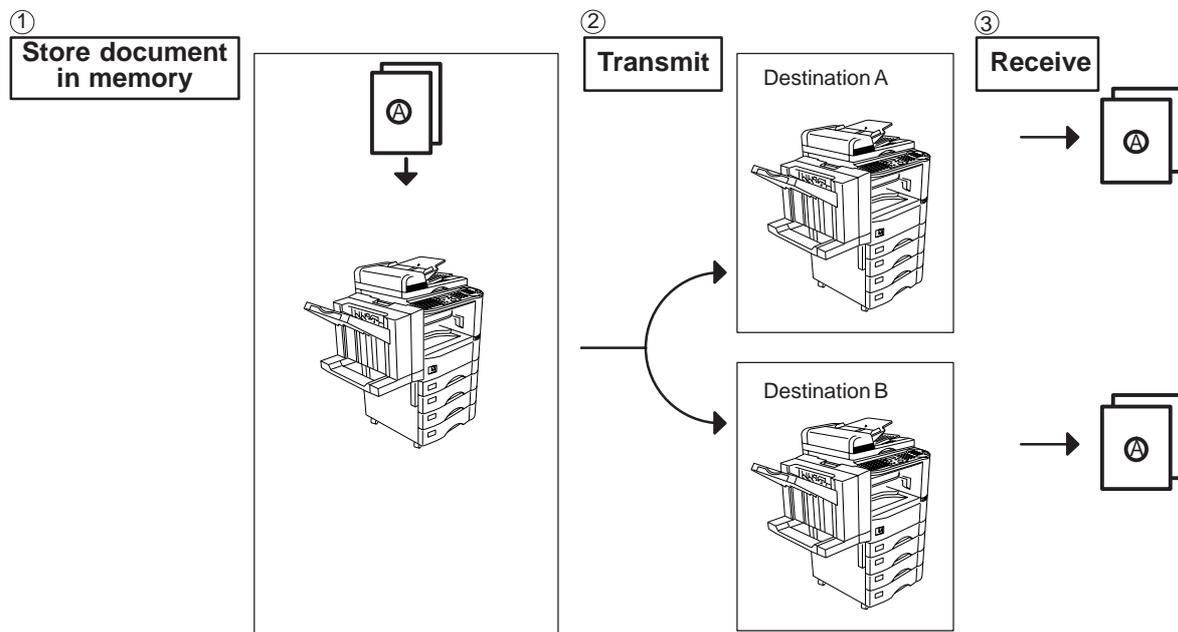

Continued on the next page...

Sending Documents

NOTE

1. While storing the File Number of the document being stored is shown at the upper right corner of the display while storing the document. It is also printed on the Communication Journal (COMM. JOURNAL), Transaction Journal and File List. The percentage of memory used is shown on the lower right corner of the display after each page is stored.

```
* STORE *      NO.003
      PAGES=002  10%
```

2. If memory overflow occurs while storing documents, the current and remaining documents on the ADF will be ejected. The machine will show "OUT OF MEMORY" on the display and prompt you whether to transmit the successfully stored documents or to cancel the transmission. Press ① to cancel or press ② to transmit.

```
* STORE * COMPLETED
TOTAL PAGES=005  30%
```

If Fax Parameter No. 082 (Quick Memory XMT) is set to "Invalid", the machine stores all the documents into memory first before transmitting.

```
OUT OF MEMORY
INFO. CODE=870
```

After storing each document, the machine checks the available memory to prevent memory overflow and stops storing additional document(s) if the stored data approaches a certain percentage* (around 80%).

```
15 PAGES COMPLETED
DELETE? 1:YES 2:NO
```

Then the machine dials and sends the memory stored documents first and continues the transmission of the remaining document(s) from the ADF during the same phone call.

If transmitting to multiple stations or if memory overflows while storing a document, the machine prompts you whether to transmit the successfully stored documents or to cancel the transmission. Press ① to cancel or press ② to transmit.

See the Specifications on page (See page 158.) for the image memory capacity.

If no action is taken within 10 seconds, the machine will start transmitting the stored documents.

* The percentage varies and its dependent on the type of documents you are storing, machine settings or whether an optional memory card is installed.

3. An Information Code will be displayed if the transmission has failed or no answer at the receiving side after the last automatic redial.

The document stored for this transmission will be erased from the memory automatically and the information code is printed for the transmission on the Communication Journal (COMM. JOURNAL).

If you need to retain the incomplete documents even after the last redial, change Fax Parameter No. 031 (INC. FILE SAVE) to "Valid" in advance. (See page 31) To retry the incomplete documents, refer to page 100.

```
INCOMPLETE
INFO. CODE=XXX
```

4. To stop the transmission, press .

The display shows:

```
COMMUNICATION STOP?
1:YES 2:NO
```

Press ① to stop the transmission. The document you stored will be erased automatically.

If you do not want to erase the documents, change the setting of Fax Parameter No. 031 (INC. FILE SAVE) to "Valid" in advance. (See page 31)

Then the following display will appear and you can select whether to save the file as an incomplete file for editing and retry, or delete the file manually.

```
SAVE AS INCOMP. FILE?
1:YES 2:NO
```

5. If you would like to print a Communication Journal (COMM. JOURNAL) after stopping a transmission, press ① when the display shows:

```
PRINT COMM. JOURNAL?
1:YES 2:NO
```

Sending Documents

Manual Number Dialing

To dial the telephone number manually, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

ENTER STATION(S)
THEN PRESS START 00%

1b

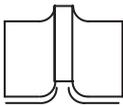

Place a book or an original face down on the Platen Glass.

2



Make sure that the MEMORY lamp is on.
If not, press **MEM XMT** to set "On".

3

Enter a telephone number from the keypad.

Ex: ⑤ ⑤ ⑤ ① ② ③ ④

- If your machine does not have the 2nd G3 Fax Communication Port Kit installed, the machine will automatically select the available telephone line for transmission (indicated by "AUTO" on the LCD display).
- If you wish, you can change which telephone line the machine should use by selecting Line-1 or Line-2 with the **LINE SELECT** key on the Control Panel.

Note4

TEL. NO. **(AUTO)**
5551234■

Continued on the next page...

Sending Documents

4



The document(s) begin to store into memory with a file number.

Then starts dialing the telephone number immediately after storing the first page. (See Note 3)

The remaining page(s) continue to store into memory.

```
* STORE *      NO.002  
      PAGES=001  05%
```

```
* DIALING *    NO.002  
5551234
```

NOTE

1. If you need a special access number to get an outside line, dial it first then press **[PAUSE]** to enter a pause (represented by a "-") before dialing the full number.
Ex: 9 PAUSE 5551234
2. If you are using Pulse dialing and you wish to change to Tone dialing in the middle of dialing, press **[TONE]** (represented by a "/").
The dialing mode will be changed from Pulse to Tone after dialing the digit "/".
Ex: 9 PAUSE TONE 5551234
3. This feature is called "**Quick Memory Transmission**". If you wish to store All the document(s) into memory first before transmitting, change the Fax Parameter No. 082 (QUICK MEMORY XMT) to "Invalid". (See page 32)
4. This field (Auto, Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Option is installed.

Sending Documents

One-Touch Dialing

One-Touch Dialing allows you to dial a full telephone number by pressing a single key. To set up the One-Touch keys, see page 21.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

```
ENTER STATION(S)  
THEN PRESS START 00%
```

1b

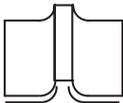

Place a book or an original face down on the Platen Glass.

2



Make sure that the MEMORY lamp is on.
If not, press **MEM XMT** to set "On".


3

Press a One-Touch key.

Ex: 

```
<01>(Station name)  
5551234
```

4

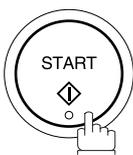

The document(s) begin to store into memory with a file number.

Then starts dialing the telephone number immediately after storing the first page. (See Note 1)

The remaining page(s) continue to store into memory.

```
* STORE *      NO.002  
PAGES=001  05%
```

```
* DIALING *    NO.002  
(Station name)
```

Continued on the next page...

NOTE

1. This feature is called "**Quick Memory Transmission**". If you wish to store All the document(s) into memory first before transmitting, change the Fax Parameter No. 082 (QUICK MEMORY XMT) to "Invalid". (See page 32)

Sending Documents

Abbreviated Dialing

Abbreviated dialing is a speedy way to dial a frequently dialed telephone number by preprogramming the telephone number into the built-in auto-dialer with a 3-digit abbreviated code. To program an abbreviated dialing number, see page 23.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

```
ENTER STATION(S)  
THEN PRESS START 00%
```

1b

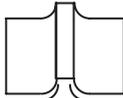

Place a book or an original face down on the Platen Glass.

2




Make sure that the MEMORY lamp is on.
If not, press **MEM XMT** to set "On".


3

Press **ABBR** then enter a 3-digit code.

```
[010](Station name)  
5553456
```

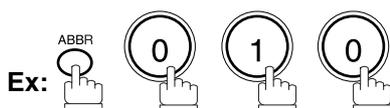

4

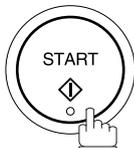

The document(s) begin to store into memory with a file number.
Then starts dialing the telephone number immediately after storing the first page. (See Note 1)
The remaining page(s) continue to store into memory.

```
* STORE *      NO.002  
      PAGES=001  05%
```

```
* DIALING *    NO.002  
(Station name)
```

NOTE

1. This feature is called "**Quick Memory Transmission**". If you wish to store All the document(s) into memory first before transmitting, change the Fax Parameter No. 082 (QUICK MEMORY XMT) to "Invalid". (See page 32)

Sending Documents

Directory Search Dialing

Directory Search dialing allows you to dial a full telephone number by searching the station name entered in One-Touch keys or Abbreviated dialing numbers.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

ENTER STATION(S)
THEN PRESS START 00%

1b

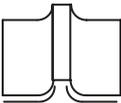

Place a book or an original face down on the Platen Glass.

2



Make sure that the MEMORY lamp is on.
If not, press **MEM XMT** to set "On".

3



ENTER LETTER(S)


4

Enter the full station name or part of a station name by using the Character keys. (See page 10)

ENTER LETTER(S)
PANA

Ex: **P A N A** for searching **PANASONIC**

5

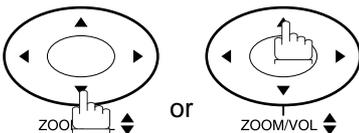


repeatedly until the display shows the station name you want to send to.

[010] PANASONIC
5553456

Continued on the next page...

Sending Documents

6

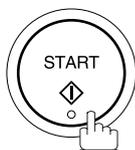

The document(s) begin to store into memory with a file number.

Then starts dialing the telephone number immediately after storing the first page. (See Note 1)

The remaining page(s) continue to store into memory.

```
* STORE *      NO.002
      PAGES=001  05%
```

```
* DIALING *    NO.002
PANASONIC
```

NOTE

1. This feature is called "**Quick Memory Transmission**". If you wish to store All the document(s) into memory first before transmitting, change the Fax Parameter No. 082 (QUICK MEMORY XMT) to "Invalid". (See page 32)

Sending Documents

Multi-Station Transmission (Broadcasting)

If you have to send the same document(s) to multiple stations, you can save time in feeding the document(s) by using memory transmission. That is, you can store the document(s) into memory and then send it to the station(s) automatically.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

ENTER STATION(S)
THEN PRESS START 00%

1b

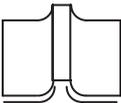

Place a book or an original face down on the Platen Glass.

2




Make sure that the MEMORY lamp is on.
If not, press MEM XMT to set "On".

3

Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press SET after each station is entered (Up to 70 stations)
- Directory Search Dialing, press SET after each station is entered
(For details, see page 41 to 45.)

Ex: 01 ^f

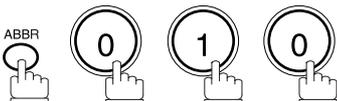

If you want to confirm the number of stations you have entered, press SET .

<01>(Station name)
5551234


[010](Station name)
5553456

2 STN(S) ARE SET
ADD MORE OR START

Continued on the next page...

Sending Documents

4

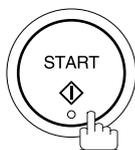

All document(s) are stored into memory with a file number. (See Note 2)
Then starts dialing the telephone numbers in sequence.

```
* STORE *      NO.001
      PAGES=001  01%
```

```
* STORE * COMPLETED
TOTAL PAGE=005  25%
```

```
* DIALING *    NO.001
(Station name)
```

NOTE

1. You can review the stations you entered in step 3 before storing your document into memory by pressing  or . Press **CLEAR** to clear an entered station or group shown on the display if needed.
2. The **“Quick Memory Transmission”** is disabled if multiple stations are set.

Sending Documents

Direct Transmission

If your machine's memory is full or you wish to send the document immediately, use Direct Transmission.

Manual Number Dialing (Direct Transmission)

To dial the telephone number manually, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

ENTER STATION(S)
THEN PRESS START 00%

1b

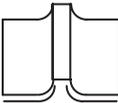

Place a book or an original face down on the Platen Glass.

2



Make sure that the lamp goes off.

ENTER STATION
THEN PRESS START 00%

3


Enter a telephone number from the keypad.

Ex: ⑤ ⑤ ⑤ ① ② ③ ④

TEL NO.

Note4

4

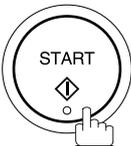

Your machine starts to dial the telephone number.

* DIALING *
5551234

NOTE

1. If you need a special access number to get an outside line, dial it first then press to enter a pause (represented by a "-") before dialing the full number.

Ex: 9 PAUSE 5551234

2. If you are using Pulse dialing and you wish to change to Tone dialing in the middle of dialing, press (represented by a "/").

The dialing mode will be changed from Pulse to Tone after dialing the digit "/".

Ex: 9 PAUSE TONE 5551234

3. To stop the transmission, press .

The display shows:

COMMUNICATION STOP?
1: YES 2: NO

Press ① to stop the transmission. The Communication Journal will not print out regardless of the printout mode setting of the Communication Journal.

4. This field (Auto, Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Option is installed.

Sending Documents

One-Touch Dialing (Direct Transmission)

One-Touch Dialing allows you to dial a full telephone number by pressing a single key. To set up the One-Touch keys, see page 21.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

ENTER STATION(S)
THEN PRESS START 00%

1b

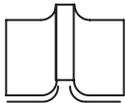

Place a book or an original face down on the Platen Glass.

2



Make sure that the lamp goes off.

ENTER STATION
THEN PRESS START 00%

3

Press a One-Touch key.

Ex: 

The display will show the One-Touch number and station name. The full number (e.g. 5551234) will then be dialed.

<01>(Station name)
5551234

* DIALING *
(Station name)

Sending Documents

Abbreviated Dialing (Direct Transmission)

Abbreviated dialing is a speedy way to dial a frequently dialed telephone number by preprogramming the telephone number into the built-in auto-dialer with a 3-digit abbreviated code. To program an abbreviated dialing number, see page 23.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

ENTER STATION(S)
THEN PRESS START 00%

1b

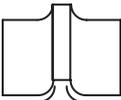

Place a book or an original face down on the Platen Glass.

2




Make sure that the lamp goes off.

ENTER STATION 00%

3

Press **ABBR** then enter a 3-digit code.

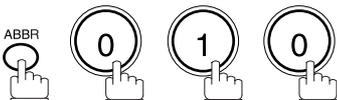

The display will show the ABBR number and station name. The full number (e.g. 5553456) will then be dialed.

[010](Station name)
5553456

* DIALING *
(Station name)

Sending Documents

Directory Search Dialing (Direct Transmission)

Directory Search dialing allows you to dial a full telephone number by searching the station name entered in One-Touch keys or Abbreviated dialing numbers.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

ENTER STATION(S)
THEN PRESS START 00%

1b

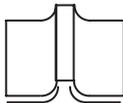

Place a book or an original face down on the Platen Glass.

2



Make sure that the lamp goes off.

ENTER STATION
THEN PRESS START 00%

3



ENTER LETTER(S)
■


4

Enter the full station name or part of a station name by using the Character keys. (See page 10)

ENTER LETTER(S)
PANA■

Ex: P A N A for searching **PANASONIC**


5

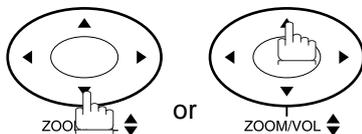

repeatedly until display shows the station name you want to send to.

[010] PANASONIC
5553456

6

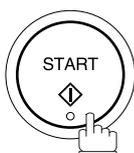

The full number (e.g. 5553456) will be dialed.

* DIALING *
PANASONIC


Sending Documents

Rotated Transmission


Letter or A4 Original(s) are placed in a Portrait (← ) direction, the document(s) will be rotated by 90° and then transmitted in a Landscape (← ) direction. The document(s) will be printed the same size as the transmitted originals at the Receiving Station.

Rotation XMT Fax Parameter set to:

- Invalid

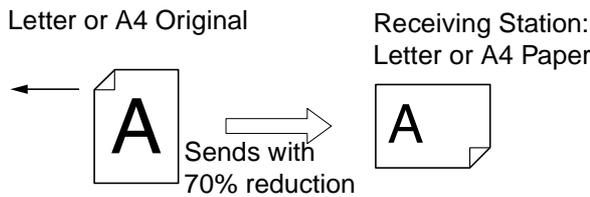

- Valid

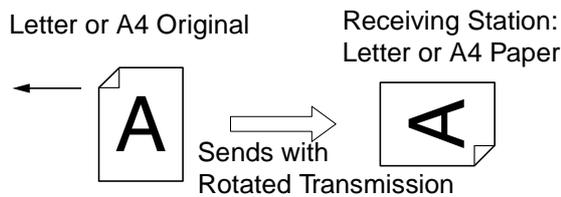


Double-Sided Transmission (Receiving)

This machine has duplex SCAN & PRINT capabilities.


Duplex Scan Select Mode set to:

- Duplex Scan = ON

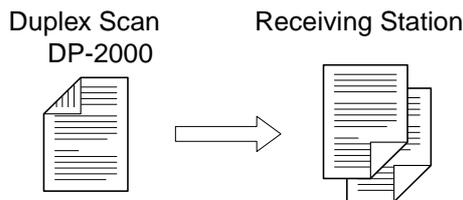

Duplex Print Fax Parameter set to:

- Duplex Print = Valid

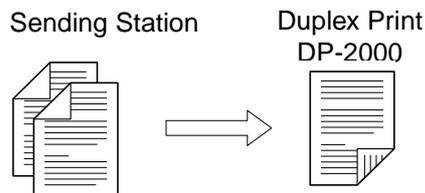

NOTE

1. Rotation XMT requires the use of Memory Transmission.
2. Verification Stamp is disabled during Duplex Scan.

Sending Documents

Setting Rotation Transmission

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

- 1**  

SET MODE (1-4)
ENTER NO. OR ∨ ^
- 2**  

FAX PARAMETER (1-99)
NO. = ■
- 3**    

078 ROTATION XMT
1:INVALID
- 4** 

078 ROTATION XMT
2:VALID
- 5** 

Sending Documents

Duplex Scan

Sending Document(s) Using Duplex Scan

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".




Place original(s) face up on the ADF.


or




Place a book or an original face down on the Platen Glass.

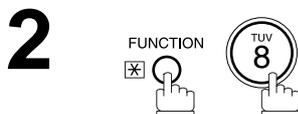

SELECT MODE (1-5)
ENTER NO. OR ∨ ^

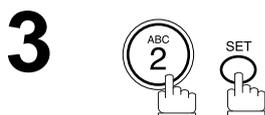

DUPLEX SCAN =OFF
1:OFF 2:ON

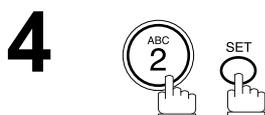


DUPLEX SCAN =ON
1:OFF 2:ON

- 5** Dial by any combination of the following methods:
- One-Touch Dialing
 - Abbreviated Dialing
 - Manual Number Dialing, press after each station is entered (Up to 70 stations)
 - Directory Search Dialing, press after each station is entered (For details, see pages 41 to 45.)

Continued on the next page...

Sending Documents

6

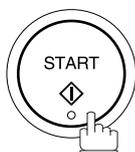

NOTE


1. The Duplex Scan function will reset back to OFF after the communication is completed.
2. Duplex Scan is only available with the inverting ADF option.

Sending Documents

Setting Duplex Print

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

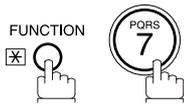

SET MODE (1-4)
ENTER NO. OR ∨ ^

2




FAX PARAMETER (1-99)
NO. =■

3



095 DUPLEX PRINT
1:INVALID

4

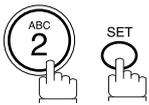

095 DUPLEX PRINT
2:VALID

5



Sending Documents

Voice Mode Transmission

If you wish to send the document after talking with other party, use Voice Mode Transmission. Your machine requires an optional fax handset or an external telephone.

Off-Hook Dialing

For Off-Hook Dialing, follow the steps below.


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a



Place original(s) face up on the ADF.
or

1b

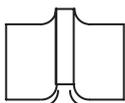

Place a book or an original face down on the Platen Glass.

2


Lift the fax handset or the external telephone and dial the telephone number from the keypad.

Ex: (5) (5) (5) (1) (2) (3) (4)

3

When you hear the voice of the other party, tell the other party to prepare to receive a document.

Then, when you hear a beep,

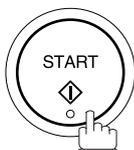

and hang up the handset.

ENTER STATION(S)
THEN PRESS START 00%

* PHONE OFF HOOK *

* DIALING *
5551234■

ON LINE * XMT *

NOTE

1. To stop the transmission, press **STOP**.

The display shows:

COMMUNICATION STOP?
1: YES 2: NO

Press **1** to stop the transmission. The Communication Journal will not print out regardless of the printout mode setting of the Communication Journal.

2. The second Telephone Line (L-2) is not available for Off-Hook Dialing.

Sending Documents

On-Hook Dialing

For On-Hook Dialing, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.
or

ENTER STATION(S)
THEN PRESS START 00%

1b

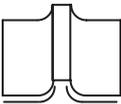

Place a book or an original face down on the Platen Glass.

2



You will hear dial tone through the monitor speaker.

* MONITOR *

3


Dial the telephone number from the keypad.

Ex: 5 5 5 1 2 3 4

* DIALING *
5551234

4

When you hear a beep,

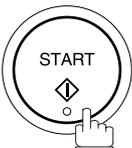

ON LINE * XMT *

NOTE

1. If you need a special access number to get an outside line, dial it first then press **PAUSE** to enter a pause (represented by a "-") before dialing the full number.
Ex: 9 PAUSE 5551234
2. If you are using Pulse dialing and you wish to change to Tone dialing in the middle of dialing, press **TONE** (represented by a "/").
The dialing mode will be changed from Pulse to Tone after dialing the digit "/".
Ex: 9 PAUSE TONE 5551234
3. The second Telephone Line (L-2) is not available for On-Hook Dialing.

Sending Documents

Transmission Reservation

You can do the following while sending a document from memory or receiving a document.

- Reserve the next transmission into memory for up to 70 different files.
- Reserve a priority transmission.

Memory Transmission Reservation (Multi-tasking)

If your machine is on-line busy transmitting from memory, receiving or printing received documents, you can reserve a transmission by the following procedure.

- 1** Your machine is on-line, the ON LINE lamp is blinking or printing received documents.

```
ON LINE * MEM.XMT *  
ID:(Identification)
```

```
ON LINE * RCV *  
ID:(Identification)
```

```
ON LINE  
PC MODE
```

```
* PRINTING *  
MEMORY RCV'D DOC
```



Place original(s) face up on the ADF.

or



Place a book or an original face down on the Platen Glass.



Make sure that the MEMORY lamp is on.

If not, press **MEM XMT** to set "On".

```
ENTER STATION(S)  
THEN PRESS START 00%
```

Sending Documents

4


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press after each station is entered
(Up to 70 stations)
- Directory Search Dialing, press after each station is entered
(For details, see pages 41 to 45.)

Ex:

```
<01>(Station name)
5551234
```

5

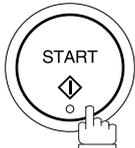

Your machine will store the document(s) into memory.

```
* STORE *      NO.005
      PAGES=001  01%
```

```
* STORE * COMPLETED
TOTAL PAGES=005  25%
```

NOTE

1. To cancel the memory transmission reservation, see page 91.
2. If the same station has been reserved with different files, the files will be executed in a single transmission (Batch Transmission). (See page 71)

Sending Documents

Direct Transmission Reservation (Priority Transmission Reservation)

If you are in a rush to send an urgent document, however there are many files in the memory, use Direct Transmission Reservation to send the urgent document. The urgent document will be sent immediately after the current communication is finished.

Note that you cannot send documents to multiple stations.

To reserve your machine for sending urgent documents

- 1** Your machine is on-line, the ON LINE lamp is blinking or printing received documents.

```
ON LINE * MEM.XMT *  
ID:(Identification)
```

```
ON LINE * RCV *  
ID:(Identification)
```

```
ON LINE * PC MODE *
```

```
* PRINTING *  
MEMORY RCV'D DOC
```




Place original(s) face up on the ADF.

```
ENTER STATION(S)  
THEN PRESS START 00%
```

or



Place a book or an original face down on the Platen Glass.

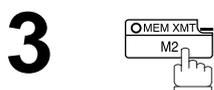

Make sure that the lamp goes off.

```
ENTER STATION  
THEN PRESS START 00%
```

Sending Documents

4

Dial by using any one of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing and press **START**
- Directory Search Dialing and press **START**
(For details, see pages 41 to 45.)

Ex:

You can reserve sending an urgent document to a single station only.

A message "DIRECT XMT RESERVED" will be shown on the display.

```
<01>(Station name)  
5551234
```

```
DIRECT XMT RESERVED  
<01>(Station name)
```

To cancel the direct transmission reservation

1

Make sure the document is on the ADF.

```
DIRECT XMT RESERVED  
<01>(Station name)
```

2



```
CANCEL XMT RESERVE?  
1:YES 2:NO
```

3



and then remove the document from ADF.

Sending Documents

Redialing

Automatic Redialing

If a busy line is detected, the machine will redial the number up to 5 times at 3 minutes interval. However, if a busy line is not detected, the machine will redial only one time. During that time, a message will appear as shown to the right.

WAIT TO DIAL NO.001
(Telephone number)

A file number is shown in the upper right hand corner of the display if it is a memory transmission file.

Manual Redialing

You can also redial the last dialed number manually by pressing **REDIAL** key.

To redial the last dialed number through memory

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



Set document(s) face down.
Make sure that the MEMORY lamp is on.

ENTER STATION(S)
THEN PRESS START 00%


2



REDIAL/
PAUSE

TEL. NO.
5551234

3

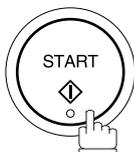

The document is stored into memory with a file number.
Then dials the last dialed number.

* STORE * NO.002
PAGES=001 01%

* DIALING * NO.002
5551234

NOTE

1. While the unit is displaying "WAIT TO DIAL", you can press **REDIAL** to start redialing immediately.

Sending Documents

To redial the last dialed number through the ADF

1



Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%


2



Make sure that the lamp goes off.

ENTER STATION
THEN PRESS START 00%

3

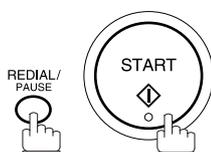

Your machine starts to dial the last dialed number.

TEL. NO.
5551234

* DIALING *
5551234

NOTE

1. While the unit is displaying "WAIT TO DIAL", you can press **REDIAL** to start redialing immediately.

Receiving Documents

Your machine is provided with both automatic and manual reception modes. The selection of either reception mode is made with Fax Parameter No. 017 (RECEIVE MODE).

Automatic Reception

Your machine will receive documents automatically if the Fax Parameter No. 017 (RECEIVE MODE) is set to "Auto". (See page 31)

Manual Reception

You may wish to receive documents manually if you use the telephone line in your office primarily as a personal telephone and occasionally for your facsimile machine.

To receive documents manually, change the Fax Parameter No. 017 (RECEIVE MODE) to "Manual" (See page 31) and the following message will be shown on the display.


NOV-12-2000 15:00
MANUAL RCV 00%

To receive documents manually

- 1 When the telephone rings, lift the handset. (See Note 1)
If you hear a beep, the sound tells you that someone wants to send a document.

* PHONE OFF HOOK *

- 2 Remove any documents from the ADF.

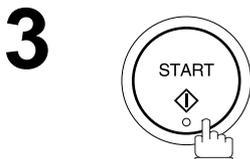

Your machine starts receiving the document.

ON LINE * RCV *

- 4 Hang up the telephone.

NOTE

1. Your machine requires an optional fax handset or an external telephone connected to the TEL jack on the left rear cover of the machine.
2. If you receive a document with Super Fine resolution (406 pels/inch x 391 lines/inch), it might be divided into multiple pages with no reduction.

Receiving Documents

Print Reduction

This machine can use Letter, Legal, Ledger, A3 or A4 size plain paper for recording. Sometimes, oversized documents sent to you by the other parties cannot be printed within a single page. When this occurs, the document will be divided into separate pages.

This machine is equipped with a Print Reduction function to solve this problem. You may select the most appropriate setting from the selections described below.

- **1. Automatic Reduction**

Each page of a received document is first stored in memory. Based on the document length, your machine will automatically calculate the suitable reduction ratio (70% to 100%) to print the entire document on a single page. If the received document is extremely long (over 39% longer than the recording paper), the document will be divided into separate pages and print without reduction.

- **2. Fixed Reduction**

You can pre-determine the reduction ratio from 70% to 100% in 1% steps. The document(s) you receive will be reduced to the fixed ratio regardless of size.

Selecting the Print Reduction Mode

Set Fax Parameters as shown below. (See page 30)

1. To set Automatic Reduction mode.

(1) No. 24 Print Reduction set to "Auto".

2. To set Fixed Reduction mode.

(1) No. 24 Print Reduction set to "Fixed".

(2) No. 25 Reduction Ratio set to any number between 70% through 100%. (See Note 1)

EX: A4 to A4 - 96%
A4 to Letter - 90%
Letter to Letter - 96%
Legal to Letter - 75%

NOTE


1. If the sending side is set to print the header on the outside of the copy area, more reduction ratio will be required.

Receiving Documents



Receiving Oversize Documents

If the received document is extremely long (over 39% longer than the recording paper), the document will be divided into separate pages. When printing on separate pages, the bottom 0.5 in (13 mm) of first page will be overlapped on top of the next page.

Transmitted Document

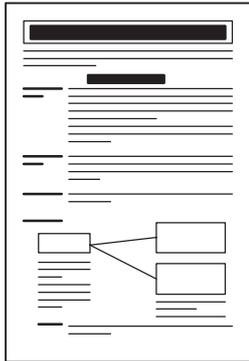

Received Document

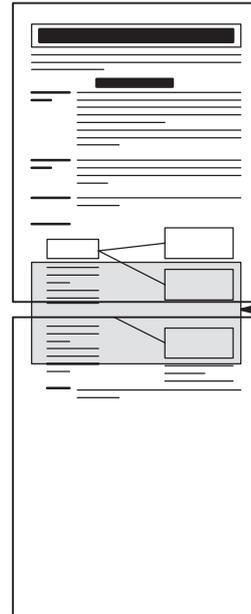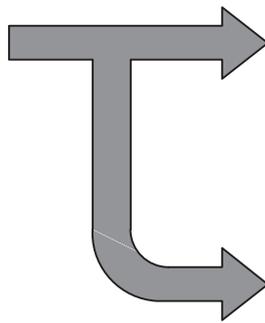

Overlap print.
0.5 in (13 mm)

The receiving document is divided into two sheets with overlap printing.

NOTE

1. If the reduction method is set to the Automatic Reduction mode, the document is printed out with no reduction when printing out separate pages. If the reduction method is set to Fixed Reduction mode, the document is printed by the ratio you set in Fax Parameter No. 025.

Receiving Documents

Substitute Memory Reception

If the recording paper runs out or jams or if the toner runs out during reception, the machine automatically starts receiving documents into its image data memory. Stored documents are printed automatically after replacing the recording paper or the toner cartridge. (See Note 1 and 2)

- 1** When the machine finishes the memory reception and there is no recording paper or toner, an Information Code appears on the display.

ADD PAPER

OUT OF TONER
REPLACE CARTRIDGE

- 2** Install the recording paper or replace the toner cartridge.
The machine will automatically start printing the document stored in the memory.

* PRINTING *
MEMORY RCV'D DOC

NOTE

1. If the memory overflows, the machine will stop receiving and release the communication line. The document(s) stored in memory up to that moment will be printed.
2. If you wish to turn off the substitute reception function, change the setting of Fax Parameter No. 022 to "Invalid".

This page is intentionally left blank.


Batch Transmission

To reduce transmission time and cost, this feature allows your machine to accumulate different documents for the same destination(s) to be transmitted in a single phone call.

Real-Time Batch Transmission

During memory transmission, your machine searches its memory for reserved files (up to 5 files) to transmit to the same destination, automatically batching and transmitting them in a single phone call.


The following is an example of Real-time Batch Transmission. (See Note 1)

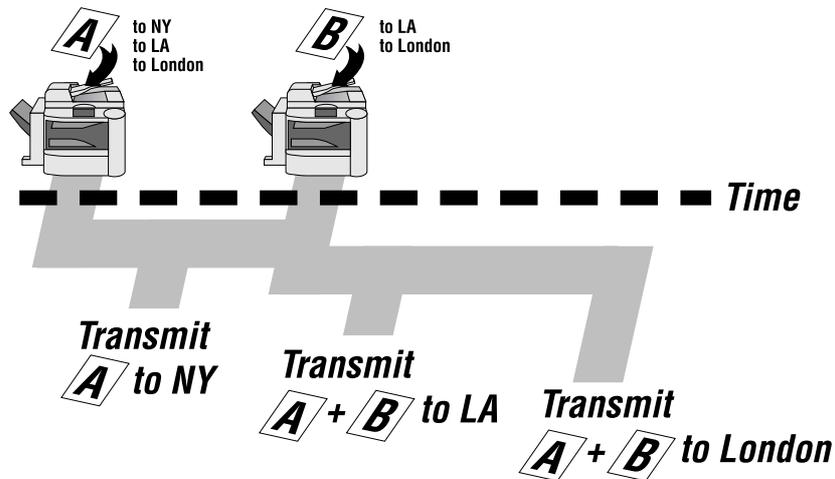

Delayed Batch Transmission

Assign a time for batch transmission to a Program Key in advance. All transmission(s) using the Program Key are batched and transmitted at the reserved time.

The following is an example of Delayed Batch Transmission.

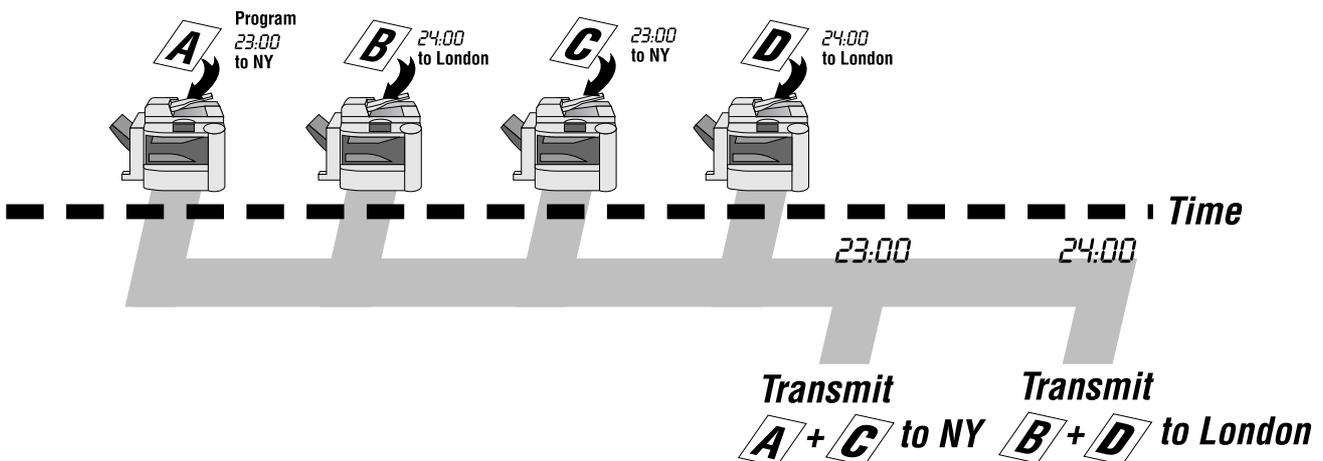

NOTE

1. The machine can not Batch to a file(s) that is/are Waiting to Redial or is currently being sent, but it will Batch to files that are pending to dial.

Timer Controlled Communications

You can send a document to one or multiple stations at any preset time within the next 24 hours. Up to 50 built-in timers can be set for deferred transmission and deferred polling.

Deferred Transmission

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%


or

1b

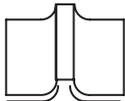

Place a book or an original face down on the Platen Glass.

2

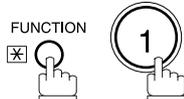

DEFERRED COMM. (1-3)
ENTER NO. OR ∨ ^

3



DEFERRED XMT
START TIME ■ :

4

Enter the start time from the keypad.
(Use a 4-digit, 24-hour clock)

Ex: ② ③ ③ ① (11:30 p.m.) and 

ENTER STATION(S)
THEN PRESS START

Timer Controlled Communications

5


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press **SET** after each station is entered
(Up to 70 stations)
- Directory Search Dialing, press **SET** after each station is entered
(For details, see pages 41 to 45.)

Ex:

```
<01>(Station name)
5551234
```

6

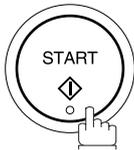

to store documents into the memory.


```
* STORE *      NO.002
  PAGES=001  05%
```

```
* STORE * COMPLETED
TOTAL PAGES=005  30%
```

Deferred Polling


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

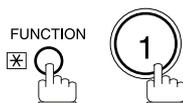

```
DEFERRED COMM. (1-3)
ENTER NO. OR ∨ ^
```

2

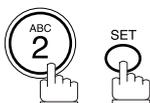

```
DEFERRED POLLING
START TIME    ■ :
```

Continued on the next page...

NOTE

1. If you enter a wrong number in Step 4, press **CLEAR** then re-enter the right number.
2. To change or cancel the Deferred Communication settings, see page 89 and 91.
3. When you reserve a deferred transmission without storing document into memory, the following message will be shown on the display after pressing **START** in the last step.

```
DEF DIRECT XMT RSV'D
<01>(Station name)
```

Timer Controlled Communications

3 Enter the start time from the keypad.
(Use a 4-digit, 24-hour clock)

Ex: 0 3 3 0 (3:30 a.m.) and

```
DEFERRED POLLING
PASSWORD=■■■■
```

4 Enter a 4-digit polling password.

Ex: 9 8 7 6 and

```
ENTER STATION(S)
THEN PRESS START
```


5 Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press after each station is entered
(Up to 70 stations)
- Directory Search Dialing, press after each station is entered
(For details, see pages 41 to 45.)

Ex:

```
<01>(Station name)
5551234
```

6

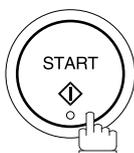

```
* STORE * NO.001
```

Polling means calling other station(s) to retrieve a document. The other station must know in advance that you will call and must have a document set on the ADF or stored in the memory. You may need to set a polling password, shared by the other station, to ensure security.

NOTE

1. If you enter a wrong number in Step 3, press , then re-enter the right number.
2. To change or cancel the Deferred Communication settings, see page 89 and 91.


Polling

Setting the Polling Password



If the polling password does not match with the polled station, your polling request will be refused automatically.

To set the polling password, follow the steps below.



Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

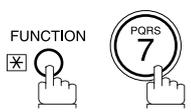- 


1  

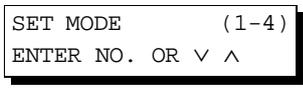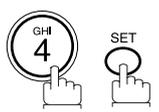
- 



2  

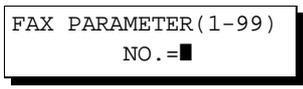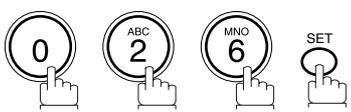
- 

3    

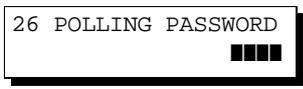
- 4 Enter a 4-digit polling password.

Ex: ① ② ③ ④

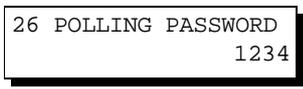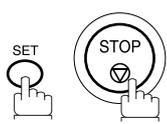
- 

5  

NOTE

1. Polling might not function with all fax machines. We suggest you attempt a trial polling before you actually poll important documents.
2. If a password is not set in the polled station, you may poll the other station even though your machine has a password.

Polling

Preparing to be Polled

In order to let other stations poll your machine, you must prepare your machine with a document stored in memory. Be sure to set the polling password before storing the document into memory. After being polled, the documents stored in the memory will be erased automatically. To retain the documents in memory so that they can be polled repeatedly change Fax Parameter No. 027 (POLLED FILE SAVE) to "Valid".

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

```
ENTER STATION(S)
THEN PRESS START 00%
```


or

1b

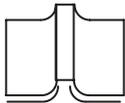

Place a book or an original face down on the Platen Glass.

2

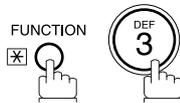

```
POLLING NO. = ■
1: POLLING 2: POLLED
```

3



```
POLLED
PASSWORD=1234
```


4

Enter a 4-digit polling password. (See Note 3)

Ex: ④ ③ ② ①

```
POLLED
PASSWORD=4321
```

5

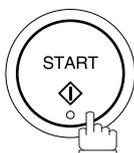

The document(s) will be stored into memory.

```
* STORE * NO.015
PAGES=001 01%
```

```
* STORE * COMPLETED
TOTAL PAGES=005 24%
```



NOTE

1. You can still send or receive documents even when set to be polled.
2. Only 1 polled file can be stored in memory. If you need to add document(s) into the same polled file, see page 93.
3. If you have set the polling password in Fax Parameter No. 026, the password will appear on the display. You can still change the password temporarily by overwriting it with a new one.

Polling

To Poll Documents from Another Station

The following procedure lets you poll a document from one or multiple stations. Be sure to set the polling password before polling. (See page 75)

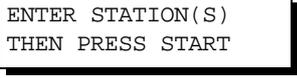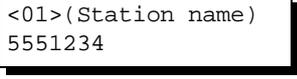- 1**  
- 2**  
- 3** Enter a 4-digit polling password. (See Note 2)
Ex:  
- 4**  
- 5** Dial by any combination of the following methods:
 - One-Touch Dialing
 - Abbreviated Dialing
 - Manual Number Dialing, press  after each station is entered (Up to 70 stations)
 - Directory Search Dialing, press  after each station is entered (For details, see pages 41 to 45.) 
- 6**  

NOTE

1. You can review the entered stations in step 5 by pressing  or  key, press  to erase the displayed station or group as needed.
2. If you have set the polling password in Fax Parameter No. 026, the password will appear on the display. You can still change the password temporarily by overwriting it with a new one.

Program Keys

Your fax machine has special Program Keys. These keys are useful if you frequently need to send or poll the same group of stations. You can use these keys to store a One-Touch group key, a sequence of stations to be polled, a deferred transmission or polling sequence or an additional One-Touch key.

Setting for Group Dialing

To set a program key for group dialing

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1     PROGRAM (1-4)
ENTER NO. OR ∨ ^

2   PROGRAM[P]
PRESS PROGRAM KEY

3 Ex: P1 Z PROGRAM[P1] NAME
ENTER NAME

4 Enter the station name (up to 15 characters) by using the Character keys. (See page 10)
Ex: PROG.A and SET ENTER STATION(S)
THEN PRESS START

5 Enter the station numbers by using One-Touch Key or ABBR and 3-digit code.
Ex: 01 and     <01>(Station name)
5551234
[010](Station name)
5553456
You may use the  or  keys to review the entered station(s) before going to next step. If you find an error, press CLEAR to erase the displayed station.

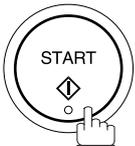6  PROGRAM[P]
PRESS PROGRAM KEY
You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing STOP.

Program Keys

Setting for Deferred Transmission

To set a program key for deferred transmission


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



PROGRAM (1-4)
ENTER NO. OR ∨ ^

2

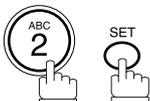

PROGRAM[P]
PRESS PROGRAM KEY

3

Ex: P1 Z

PROGRAM[P1] NAME
ENTER NAME


4

Enter the station name (up to 15 characters) by using the Character keys. (See page 10)

Ex: PROG.A and SET

PROGRAM[P1]
PRESS FUNCTION KEY

5

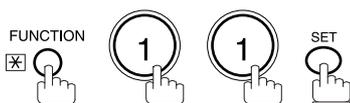

DEFERRED XMT
START TIME ■ :

6

Enter the starting time using 4 digits.

Ex: ② ③ ③ ① (11:30 p.m.) and SET

ENTER STATION(S)
THEN PRESS START

Continued on the next page...


Program Keys

7

Enter the stations by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Directory Search Dialing, press **SET** after each station is entered
(For details, see pages 41 to 45.)

Ex: 

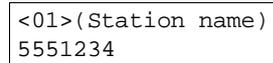


8



You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

STOP.

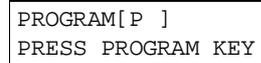

Program Keys

Setting for Deferred Polling

To set a program key for deferred polling


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



PROGRAM (1-4)
ENTER NO. OR ∨ ^

2

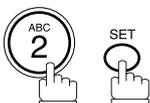

PROGRAM[P]
PRESS PROGRAM KEY

3

Ex: f

PROGRAM[P1] NAME
ENTER NAME

4

Enter the station name (up to 15 characters) by using the Character keys. (See page 10)

Ex: PROG.A and

PROGRAM[P1]
PRESS FUNCTION KEY

5



DEFERRED POLLING
START TIME ■:

6

Enter the starting time.

Ex: (10:00 p.m.) and

DEFERRED POLLING
PASSWORD=■■■■

7

Enter a 4-digit polling password.

Ex: and

The polling password appears if it has been previously set.

ENTER STATION(S)
THEN PRESS START

Continued on the next page...

Program Keys

8


Enter the station(s) by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Directory Search Dialing, press after each station is entered
(For details, see pages 41 to 45.)

Ex:

```
<01>(Station name)
5551234
```

9

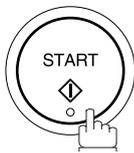

You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

.

```
PROGRAM[P ]
PRESS PROGRAM KEY
```

Program Keys

Setting for Normal Polling

To set a program key for normal polling


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



```
PROGRAM      (1-4)
ENTER NO. OR ∨ ^
```

2

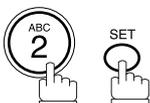

```
PROGRAM[P ]
PRESS PROGRAM KEY
```

3

Ex: P1 Z

```
PROGRAM[P1]   NAME
ENTER NAME
```

4

Enter the station name (up to 15 characters) by using the Character keys. (See page 10)

Ex: PROG.A and SET

```
PROGRAM[P1]
PRESS FUNCTION KEY
```

5



```
POLLING
PASSWORD=■■■■
```

6

Enter a 4-digit polling password.

Ex: 1 1 1 1 and SET

```
ENTER STATION(S)
THEN PRESS START
```

The polling password appears if it has been previously set.

Continued on the next page...

Program Keys

7


Enter the station(s) by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Directory Search Dialing, press **SET** after each station is entered
(For details, see pages 41 to 45.)

```
<01>(Station name)  
5551234
```

Ex: 

8

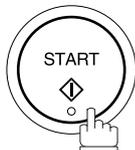

You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

STOP.

```
PROGRAM[P ]  
PRESS PROGRAM KEY
```

Program Keys

Setting for One-Touch Key

To set a program key for one-touch key

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



PROGRAM (1-4)
ENTER NO. OR ∨ ^

2



PROGRAM[P]
PRESS PROGRAM KEY

3

Ex: P1

PROGRAM[P1] NAME
ENTER NAME

4

Enter the station name (up to 15 characters) by using the Character keys. (See page 10)

Ex: PROG.A and SET

[P1] PROG.A
ENTER TEL. NO.

5

Enter a telephone number (up to 36 digits including pauses and spaces).

Ex: 9 PAUSE 5 5 5 SPACE 1 2 3 4

[P1] PROG. A
9-555 1234

6



You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

STOP.

PROGRAM[P]
PRESS PROGRAM KEY

Program Keys

Changing or Erasing the Program Key Settings

To change the settings in a Program Key, follow the procedure on setting a Program Key on pages 78 to 85.

- Start time or station(s) for deferred transmission
- Station(s) for normal polling
- Start time or station(s) for deferred polling
- Station(s) for group dialing
- Telephone number and station name for One-Touch key


To erase the settings in a program key

1



```
PROGRAM (1-4)  
ENTER NO. OR ∨ ^
```

2

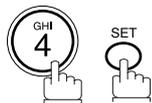

```
PROGRAM[P ]  
PRESS PROGRAM KEY
```

3

Press the Program key you want to erase.

Ex: Z

```
PROGRAM[P1]  
DELETE? 1:YES 2:NO.
```

4



```
* DELETING *  
PROGRAM[P1]
```

5

You can now erase other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

.

```
PROGRAM[P ]  
PRESS PROGRAM KEY
```

Edit File Mode

Your machine has a document image memory which enables you to reserve memory transmission, memory deferred transmission, memory polling and so on.

After reserving the communications in memory, you may need to change the settings of the communication(s) while it is still in memory. This section describes how to use the file editing features.

Printing a File List

The contents of the communication settings may have to be modified or deleted. To verify the contents, follow the steps below to print a file list.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1	 	EDIT FILE MODE (1-6) ENTER NO. OR ∨ ^
2		1:FILE LIST? PRESS SET TO SELECT
3		FILE LIST 1:PRINT 2:VIEW
4		* PRINTING * FILE LIST

Sample File List

```

***** -FILE LIST- ***** DATE NOV-12-2000 ***** TIME 15:00 *****
(1) (2) (3) (4) (5) (6)
FILE COMM. TYPE CREATED TIME START TIME PAGES DESTINATION(S)
No.
001 DEFERRED XMT NOV-12 13:20 20:30 [001]
002 MEM. DEF. XMT NOV-12 13:20 22:30 003 [011] [012] [013] [016] [017]
-PANASONIC -
***** -HEAD OFFICE - ***** 201 555 1212- *****

```

Explanation of Contents


- | | | |
|------------------------------|---|--|
| (1) File number | : | If the file is now being executed, a "*" is indicated on the left of the file number. |
| (2) Communication type | : | |
| (3) Stored date/time | : | Date/time that these files were stored. |
| (4) Executing time | : | If the file is a Timer Controlled Communication, the start time is printed in this column.
If the file is an incomplete file, "INCOMP" is printed in this column. |
| (5) Number of stored page(s) | : | |
| (6) Destination | : | ABBR. No./One-Touch No./Manual Dialing No. |

Edit File Mode

Viewing the Contents of a File List

To view the contents of a file list on the display without printing it, follow the steps below.

1

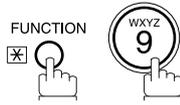

EDIT FILE MODE (1-6)
ENTER NO. OR V ^

2



1:FILE LIST?
PRESS SET TO SELECT

3




FILE LIST
1:PRINT 2:VIEW

4




USE THE V ^ KEYS TO
SCROLL EACH FILE

5

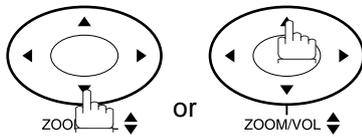

repeatedly until the display shows a file you want to edit.

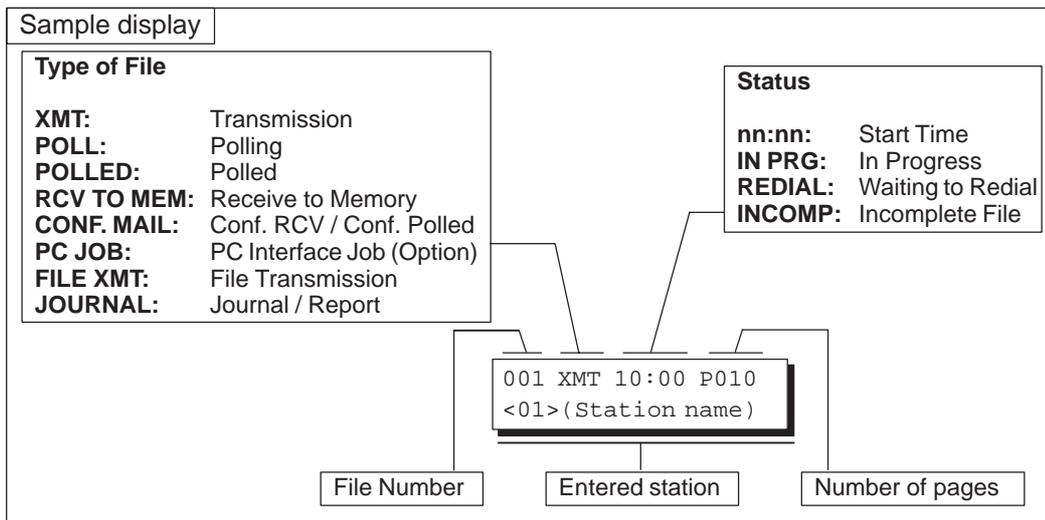

6




Edit File Mode

Changing the Start Time or the Station of a File


To change the start time and/or stations in a communication file, follow the steps below.

1

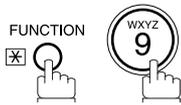

```
EDIT FILE MODE (1-6)
ENTER NO. OR v ^
```

2

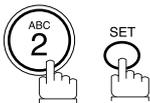

```
ENTER FILE NO. OR v ^
FILE NO. =■■■
```

3

Enter the file number or use ▼ or ▲ to select the file that you want to change.

```
ENTER FILE NO. OR v ^
FILE NO. =001
```

Ex: 0 0 1

4



```
DEFERRED XMT
START TIME 22:30
```

5

Enter a new start time.

Ex: 0 6 0 0 (6:00 a.m.)
(If you do not have to change the time, skip to step 6)

```
DEFERRED XMT
START TIME 06:00
```

6



```
TEL. NO.
5551234
```

Continued on the next page...


Edit File Mode

7 To delete the station(s), press ▼ or ▲ key until the station you want to delete appears. Then press **CLEAR**.

```
ENTER STATION(S)
THEN PRESS START
```

or

Enter the station(s) you want to add.

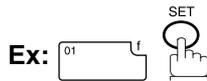

```
1 STN(S) ARE SET
ADD MORE OR START
```

8



NOTE

1. Your machine cannot change the start time and/or stations in the file while it is being sent or waiting to redial.
2. If the file is not a Deferred Communication File, the following message is shown on the display.

```
SET DEFERRED COMM. ?
1: YES 2: NO
```

Press ① to change the type of the file for deferred communication file.

3. If you edit the file that is saved as an incomplete file, after pressing **START** in step 8, your machine will prompt you whether to execute the file immediately.

The display shows:

```
RETRY INCOMP. FILE?
1: YES 2: NO
```

Press ① to execute the file immediately.


Edit File Mode

Deleting a File

To delete the file in memory, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

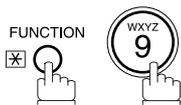

```
EDIT FILE MODE (1-6)
ENTER NO. OR v ^
```

2



```
ENTER FILE NO.OR v ^
FILE NO.=■■■
```

3

Enter the file number or use  or  to select the file that you want to change.

```
ENTER FILE NO.OR v ^
FILE NO.=001
```

Ex: 0 0 1 (See Note 2)

4



```
DELETE FILE NO.001?
1:YES 2:NO
```

5



Enter the next file number you want to delete or press  to return to standby.

```
* DELETING *
FILE NO.=001
```

```
ENTER FILE NO.OR v ^
FILE NO.=■■■
```

NOTE

- Your machine cannot delete the file while it is being sent.
- Enter    as the file number and press  to delete all files (except the file in progress). The following message is shown on the display.

```
DELETE ALL FILES?
1:YES 2:NO
```

Press  to delete all files.


Edit File Mode

Printing a File

To print the contents of the communication file, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

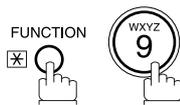

```
EDIT FILE MODE (1-6)
ENTER NO. OR v ^
```

2



```
ENTER FILE NO. OR v ^
FILE NO. =■■■
```

3

Enter the file number or use  or  to select the file that you want to change.

Ex: ① ① ①

```
ENTER FILE NO. OR v ^
FILE NO. =001
```

4



Your machine will print the file. The document(s) will remain in memory even after printing the file.

```
* PRINTING *
PAGE=001/003
```

NOTE

1. Your machine cannot print the file while it is being sent.

Edit File Mode

Adding Documents Into a File

To add documents into the file, follow the steps bellow.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%


or

1b

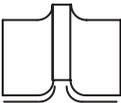


Place a book or an original face down on the Platen Glass.

2

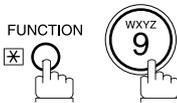

EDIT FILE MODE (1-6)
ENTER NO. OR ∨ ^

3

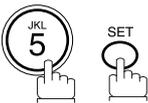

Enter the file number or use  or  to select the file that you want to add.

ENTER FILE NO. OR ∨ ^
FILE NO. =■■■

Ex: 0 0 1

ENTER FILE NO. OR ∨ ^
FILE NO. =001

4



Your machine will start storing the document(s) into a file.

* STORE * NO.001
PAGES=001 10%

NOTE

1. Your machine cannot add the document into the file while it is being sent or waiting to redial.

Edit File Mode

Retry an Incomplete File

If a memory communication has been unsuccessful due to a busy line or no answer, the document you stored is automatically erased from memory after the last redial.

If you need to retain the document even if the communication failed, change the setting of Fax Parameter No. 031 (INC. FILE SAVE) to Valid in advance. (See page 31)

To retry the incomplete file, print a File List first to verify the file number. (See page 87)
Then, follow the steps below.


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



```
EDIT FILE MODE (1-6)
ENTER NO. OR v ^
```

2

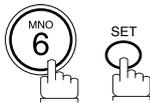

```
ENTER FILE NO. OR v ^
FILE NO. =■■■
```

3

Enter the file number or use  or  to select the file that you want to change.

Ex: ① ① ①

```
ENTER FILE NO. OR v ^
FILE NO. =001
```

4



Your machine will retry the file and start dialing immediately.

```
* STORE *      NO.001
```

```
* DIALING *    NO.001
(Station name)
```

NOTE

1. To confirm or change the entered telephone number for the file, see page 87 and 89.
2. If you set Fax Parameter No.031 to Valid, all incomplete files will remain in the memory. To avoid memory overflow, please check the memory content frequently. We recommend that optional flash memory card is installed when this function is used. See the Operating Instructions (For Copier).


Access Code

The Access Code prevents an unauthorized user from operating the machine. Once a 4-digit Access Code is registered, no one can operate the machine without entering the correct access code.

Automatic Receiving, however, is always available. After you complete any operation, such as mode setting or transmission, and the display returns to standby, you have to re-enter the access code in order to use the machine again. Registering the Access Code does not affect the use of the machine in any other way.

Setting the Access Code

1

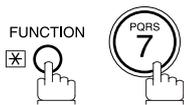


SET MODE (1-4)
ENTER NO. OR ∨ ^

2



FAX PARAMETER (1-99)
NO. = ■

3

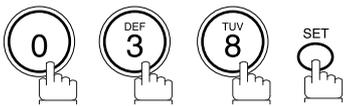

38 ACCESS CODE
■■■■

4

Enter a 4-digit Access Code.

Ex: ① ② ③ ④

38 ACCESS CODE
1234

5



38 ACCESS CODE
1:ALL 1234

6

Select Restriction Level.



for All operations

or




for Setting and Printing the Fax Parameters only.

38 ACCESS CODE
2:FAX PARA. 1234

Ex: ②

7

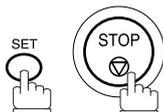

NOTE

- To erase the Access Code, enter the Access Code and press **SET** and follow the procedure above to step 3, then press **CLEAR** **SET** and **STOP**.

Access Code

Operating Your Machine with the Access Code (Restrict All Operations)

1 Enter the Access Code.

Ex: ① ② ③ ④

NOV-12-2000 15:00
ACCESS CODE=■

NOV-12-2000 15:00
ACCESS CODE=■■■■

2 

Now you can operate the machine normally.

NOV-12-2000 15:00
00%

Operating Your Machine with the Access Code (Restrict Access of Fax Parameters Only)

The DP-2000 can restrict the operation of setting and printing the Fax Parameters only.

Ex: When setting the Fax Parameter.

1  

SET MODE (1-4)
ENTER NO. OR ∨ ^

2  

INPUT ACCESS CODE
■■■■

3 Enter a 4-digit Access Code.

Ex: ① ② ③ ④

INPUT ACCESS CODE
1234

4 

Now you can operate the machine normally.

FAX PARAMETER(1-99)
NO. =■

Receive To Memory

This feature is used to secure all received documents by storing them into the memory. To print the document(s) from memory, the authorized operator must enter the correct password.

Setting the RCV To Memory Password


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1




SET MODE (1-4)
ENTER NO. OR ∨ ^

2

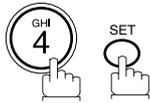

FAX PARAMETER (1-99)
NO. =■

3

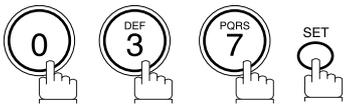

37 RCV TO MEMORY
■■■■


4

Enter a 4-digit RCV to Memory Password.

Ex: ① ② ③ ④

37 RCV TO MEMORY
1234

5

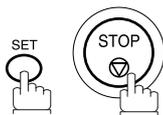

Receive To Memory

Setting RCV To Memory


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



```
SELECT MODE (1-5)  
ENTER NO. OR ∨ ^
```

2

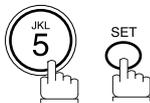

```
RCV TO MEMORY=OFF  
1:OFF 2:ON 3:PRINT
```

3



```
RCV TO MEMORY=ON  
1:OFF 2:ON 3:PRINT
```

4



```
NOV-12-2000 15:00  
< RCV TO MEMORY >
```

NOTE

1. When the memory overflows, the machine will stop receiving and release the line. The machine will not answer the next incoming call until there is space available in the memory.
2. We recommend that optional flash memory card is installed when this function is used. See the Operating Instructions (For Copier).

Receive To Memory

Printing Documents

After receiving a document with the Receive To Memory feature, the following message will appear on the display.

MESSAGE IN MEMORY
< RCV TO MEMORY >

To print the document(s), follow the steps below.


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



SELECT MODE (1-5)
ENTER NO. OR ∨ ^

2

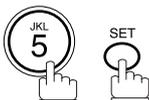

RCV TO MEMORY=ON
1:OFF 2:ON 3:PRINT

3



RCV TO MEMORY=PRINT
1:OFF 2:ON 3:PRINT

4



INPUT PASSWORD

5

Enter the password to print the documents.
(See Note 1)

INPUT PASSWORD
1234

Ex: ① ② ③ ④

6



* PRINTING *
MEMORY RCV'D DOC

Machine will start to print the documents.

NOTE

1. If the password has not been set, your machine will not prompt you to enter the password. The documents will be printed immediately after pressing  in step 4.
2. Once the RCV TO MEMORY feature is set to "On", the password cannot be changed (Fax Parameter No. 037 will not be shown on the LCD display). If you wish to change the password, set RCV TO MEMORY feature to "Off" first. Then change the password. (See page 98)

Distinctive Ring Detector (DRD)

Your machine has a special feature in conjunction with an optional service provided by many local telephone companies. It can distinguish up to 4 telephone numbers with a corresponding ring pattern identifying each number. "DRD" lets you provide multiple phone numbers, one for your fax, business or personal use with only one single phone line.


Please check with your local telephone company on the availability of this service in your area.

Your machine can be programmed to respond to only 1 of the 4 distinctive ring patterns. To select the corresponding ring pattern for your fax number, refer to the Fax Parameter Table on page 31.

The following table shows a typical example with 4 telephone numbers on a single phone line.

Telephone No.	Usage	Distinctive Ring Sound	Ring Pattern
555-1111	Business	Riiing.....Riiing.....	Type A, Standard Ring
555-2222	Fax	Ring..Ring.....Ring..Ring.....	Type B, Double Ring
555-3333	Personal	Ring..Ring..Riiing.....Ring..Ring..Riiing.....	Type C, Triple Ring (Short-Short-Long)
555-4444	Teenager	Ring..Riiing...Ring.....Ring..Riiing...Ring.....	Type D, Triple Ring (All other than type C)

The following illustration shows a typical set up, with your machine set to detect Type B (double ring) ring pattern.

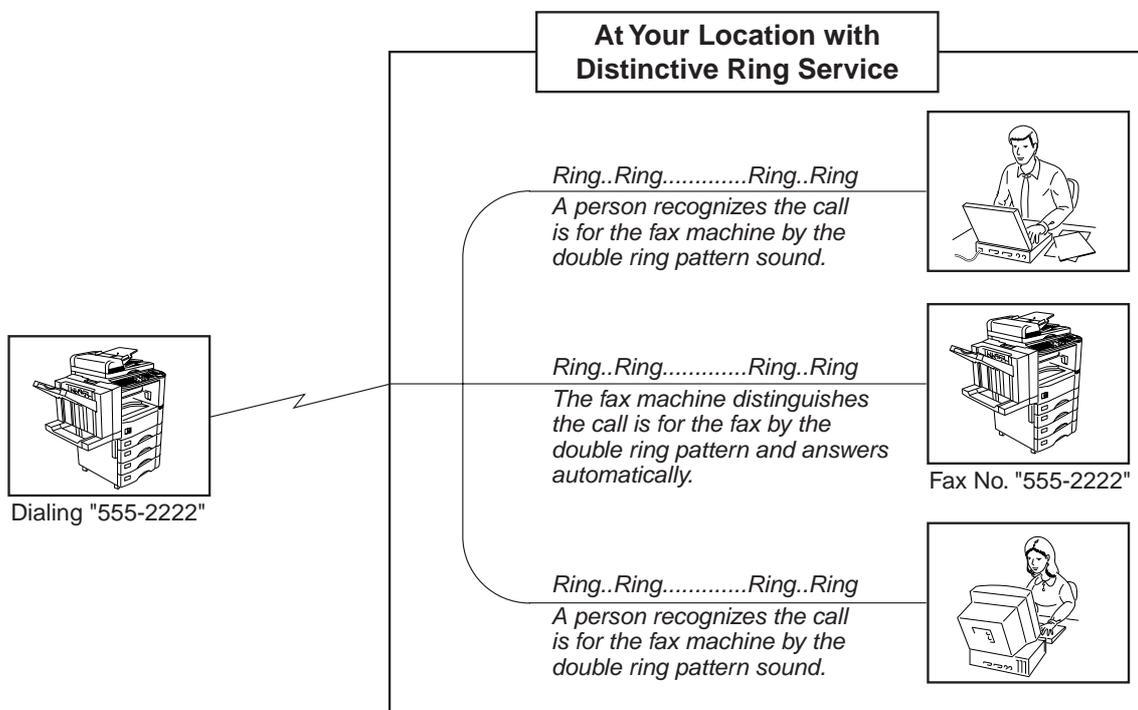

NOTE

1. "Riiing" means a long ringing sound and "Ring" means a short ringing sound.


Distinctive Ring Detector (DRD)

Setting the Ring Pattern (DRD)

If you have an optional "Distinctive Ring Service" provided by your Local Telephone Company, your machine can be programmed to respond to 1 of the 4 distinctive ring patterns associated with each of the telephone numbers assigned to your fax machine. To select the appropriate ring pattern for your fax number, follow the steps below.



FAX PARAMETER (1-99)
NO. = ■

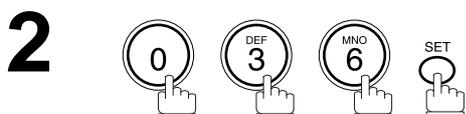

36 RING PATTERN(DRD)
1:INVALID (L-1) Note2



36 RING PATTERN(DRD)
1:A (SINGLE) (L-1)

- 4**
- Select the ring pattern for the First Telephone Line (Line-1).
 Press ① for Standard Ring Pattern (Type A).
 Press ② for Double Ring Pattern (Type B).
 Press ③ for Triple Ring Pattern (Type C, Short-Short-Long).
 Press ④ for the all other Triple Ring Pattern except the Type C above.

Ex: ② for Double Ring Pattern (Type B).

36 RING PATTERN(DRD)
2:B (DOUBLE) (L-1)




36 RING PATTERN(DRD)
1:A (SINGLE) (L-2)

- 6**
- Select the ring pattern for the Second Telephone Line (Line-2).

Ex: ③ for Triple Ring Pattern (Type C, Short-Short-Long).

36 RING PATTERN(DRD)
3:C (TRIPLE-1) (L-2)

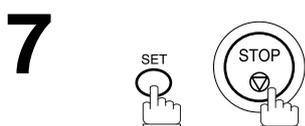


NOTE

1. This feature may not be available in some countries. It depends on the country's specifications or regulations. If it is not available, the LCD will not display this feature.
2. This field (Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Option is installed.

Fax Cover Sheet

General Description

A Fax Cover Sheet can be automatically attached to your transmit document(s) that shows the recipient's name, originator's name and the number of pages attached.

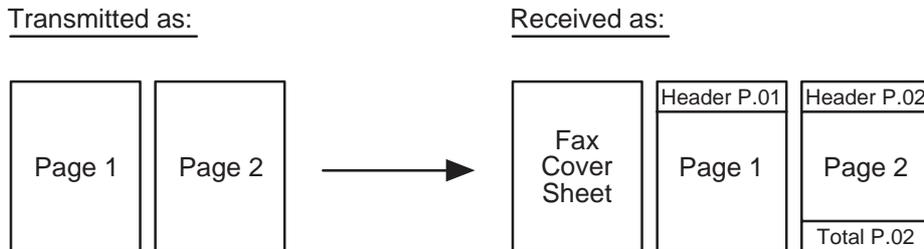

Using the Fax Cover Sheet

To attach a Fax Cover Sheet to a transmission, follow the procedure below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%


or

1b

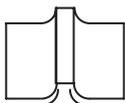

Place a book or an original face down on the Platen Glass.

2

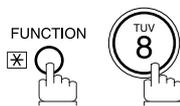

SELECT MODE (1-5)
ENTER NO. OR ∨ ^

3



COVER SHEET=OFF
1:OFF 2:ON

Fax Cover Sheet

4



or "OFF" (Cover Sheet is not attached)

```
COVER SHEET=OFF  
1:OFF 2:ON
```

or



for "ON" (Cover Sheet is attached)

or

```
COVER SHEET=ON  
1:OFF 2:ON
```

5



```
ENTER STATION(S)  
THEN PRESS START 00%
```

6


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press after each station is entered
(Up to 70 stations)
- Directory Search Dialing, press after each station is entered
(For details, see pages 41 to 45.)

Ex:

```
<01>(Station name)  
5551234
```

7

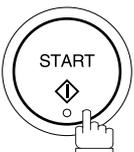

```
ENTER PIN CODE
```

NOTE

1. To change the preset Fax Cover Sheet Setting, change the setting of Fax Parameter No. 056, see page 32.
2. This function is available for memory or direct transmission modes.
3. The Fax Cover Sheet is not counted in the number of pages column of the journals.
4. When the Fax Cover Sheet setting is set to On, the Quick Memory XMT feature is disabled.

Fax Cover Sheet

Fax Cover Sheet Sample

***** FACSIMILE COVER SHEET *****

(1)
NOV-12-2000 15:00

(2)
Message To:

SALES DEPT.

(3)
Message From:

PANASONIC
201 555 1212

(4)
02
Page(s)
Following This Cover Page

Explanation of contents

- (1) Starting time of communication.
- (2) Recorded name in the One-Touch, ABBR. No. or dialed telephone number.
- (3) Your LOGO (up to 25 characters) and ID Number. (Up to 20 digits)
- (4) The number of pages to follow. This information is not shown when transmitting by Direct Transmission Mode.

PIN Code Access

If your PBX requires a PIN (Personal Identification Number) code to get an outside line, your machine can be set to prompt the user to enter a PIN code before any dialing.

Selecting the Access Method (Prefix or Suffix)

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

- 1**   SET MODE (1-4)
ENTER NO. OR ∨ ^
- 2**   FAX PARAMETER (1-99)
NO. =■
- 3**     39 PIN CODE ACCESS
1:NONE
- 4**  for suffix code.
or
 for prefix code. 39 PIN CODE ACCESS
2:SUFFIX
- 5**   39 PIN CODE ACCESS
3:PREFIX

PIN Code Access

Dialing with a PIN Code

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%

or

1b

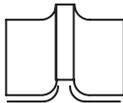

Place a book or an original face down on the Platen Glass.

2


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press after each station is entered
(Up to 70 stations)
- Directory Search Dialing, press after each station is entered
(For details, see pages 41 to 45.)

Ex: 

<01>(Station name)
5551234

3

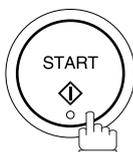

ENTER PIN CODE
■

4

Ex: (Up to 36 digits)

ENTER PIN CODE
9876■

PIN Code Access

5



Your machine stores the document and starts dialing the PIN code and telephone number as you specified.

```
* STORE *      NO.002
      PAGES=001  01%
```

```
* DIALING *
(Station name)
```

NOTE

1. The PIN code is shown as " ■ " on the display when dialing the number.
2. This feature is not available when dialing a number by using Off-Hook or On-Hook Direct Dialing mode.

Department Code

General Description

This operation requires the user to input a preset 4-digit Department Code before transmission. The Department Name of the selected Department Code is printed on the Header of each page sent, Cover Sheet, COMM. Journal and Individual Transmission Journal. When the Department Code is set, the Transaction Journal will be sorted by the Department Code number (01 - 50) when it is printed.

If you wish to prevent unauthorized persons from setting, changing or erasing the Department Code settings, you should set the Access Code to restrict these settings. (See page 95)

Setting the Department Code

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1   SET MODE (1-4)
ENTER NO. OR ∨ ^

2   FAX PARAMETER (1-99)
NO. = ■

3     77 DEPT. CODE
1:INVALID

4  77 DEPT. CODE
2:VALID

5  DEPT. CODE (01-50)
ENTER NO. OR ∨ ^

6 Enter Department Code number.
Ex: ① ② (01 to 50) INPUT DEPT. NAME
12 ■

Department Code

7 Enter your Department Name (max. 25 characters and digits) by using Character keys. (See page 10)

Ex: P A N A S O N I C SPACE
S A L E S (See Note 1)

INPUT DEPT. NAME
12 PANASONIC SALES ■

8 

INPUT DEPT. CODE
■■■■

9 Enter a 4-digit Department Code.

Ex: ① ② ③ ④

INPUT DEPT. CODE
1234

10 

To record another Department Code, repeat steps 6 to 10.
To return to standby, press **STOP**.

INPUT DEPT. NAME
13 ■

NOTE

1. Use **COPY** to copy the default LOGO which is set in the User Parameters. You can add the department name following the default LOGO.
2. When enabling the Dept. Code feature for the first time, it is important to Print the Journal by pressing **FUNCTION**, ⑥, ①, **SET** and ① in order to erase the previous journal contents.

Department Code

Changing or Erasing the Department Code

If you have to change or erase any of the Department Codes, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



SET MODE (1-4)
ENTER NO. OR ∨ ^

2



INPUT ACCESS CODE
■■■■

3

If you set the Access Code to restrict the Fax Parameters settings, the unit prompts you to Input the Access Code. Input the Access Code and press **SET**.

FAX PARAMETER (1-99)
NO. = ■

4



77 DEPT. CODE
2:VALID

5



DEPT. CODE (01-50)
ENTER NO. OR ∨ ^

6

Enter the Department Code number you wish to change or erase.

INPUT DEPT. NAME
12 PANASONIC SALES

Ex: ① ② (01 to 50)

Department Code

7



then enter a new LOGO. (See Note 1 and 2)

Ex: P A N A F A X SPACE

S A L E S

or just go to step 10 to erase the Department Code.

INPUT DEPT. NAME
12 ■

INPUT DEPT. NAME
12 PANAFAX SALES■

8



INPUT DEPT. CODE
1234

9



Then enter a new Department Code.

Ex: 5 6 7 8

INPUT DEPT. CODE
■■■■

INPUT DEPT. CODE
5678

10



To change or erase another Department Code, repeat steps 6 to 10. To return to standby, press **STOP**.

INPUT DEPT. NAME
13 ■

NOTE

1. If you make a mistake, use **◀** or **▶** to move the cursor beyond the incorrect character, press **CLEAR** then re-enter the correct Department Name.
2. Use **COPY** to copy the default LOGO which is set in the User Parameters. You can add the department name following the default LOGO.

Department Code

Sending a Document with Department Code

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%

or

1b

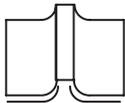

Place a book or an original face down on the Platen Glass.

2


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press after each station is entered
(Up to 70 stations)
- Directory Search Dialing, press after each station is entered
(For details, see pages 41 to 45.)

Ex:

<01>(Station name)
5551234

3

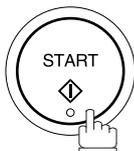

INPUT DEPT. CODE


4

Enter a 4-digit Department Code.

Ex:

INPUT DEPT. CODE

5

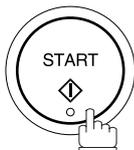

The document is sent with the header of the selected Department Name. The selected Department Name is printed on the COMM. Journal, Individual Transmission Journal and Cover Sheet.

Department Code

Sending a Document with Department Code (Voice Mode Transmission)

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%

or

1b

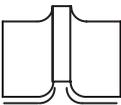

Place a book or an original face down on the Platen Glass.

2

Lift the optional handset or the external telephone or press **MONITOR**.

INPUT DEPT. CODE

Ex: Press **MONITOR**

3

Enter a 4-digit Department Code.

INPUT DEPT. CODE
1234

Ex: ① ② ③ ④

4



* MONITOR *

5

Dial the telephone number from the keypad.

* DIALING *
5551234

Ex: ⑤ ⑤ ⑤ ① ② ③ ④

6

When you hear a beep,



ON LINE * XMT *


The document is sent with the header of the selected Department Name. The selected Department Name is printed on the COMM. Journal, Individual Transmission Journal and Cover Sheet.

Department Code

Printing a Department Code List

The Department Code List will be printed following the Fax Parameter List.

1

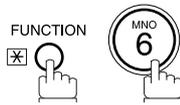

PRINT OUT (1-7)
ENTER NO. OR V ^

2



* PRINTING *
FAX PARAMETER LIST

Sample Department Code List (Prints following the Fax Parameter List)

***** -FAX PARAMETER LIST- ***** DATE NOV-12-2000 ***** TIME 15:00 *** P.02

DEPARTMENT CODE LIST

(1) NUMBER	(2) DEPARTMENT NAME	(3) DEPARTMENT CODE
01	Panafax Sales	0001
02	Panafax Service	0002
03	Panafax Accounting	0003
)))
50	Panafax Engineering	0050

***** -PANASONIC -
***** -HEAD OFFICE - ***** 201 555 1212 - *****

Explanation of contents

- (1) Department Code Number : 01-50
- (2) Department Name : Up to 25 characters
- (3) Department Code : 4 digits

Department Code

Printing a Department Code Journal


When the Department Code is set, the Transaction Journal will be sorted by the Department Code number when it is printed. All contents of the Journal will be erased automatically after being printed.

1



PRINT OUT (1-7)
ENTER NO. OR ∨ ^

2

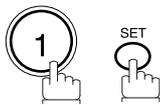

JOURNAL
1:PRINT 2:VIEW

3



* PRINTING *
JOURNAL

Sample Department Code Journal / Originated Calls

```
***** -JOURNAL- ***** DATE NOV-12-2000 ***** TIME 15:00 *** P.01

ORIGINATED CALLS
NOV-10 TO NOV-12 (1)
(2) (3)
TOTAL PAGES = 000038 TOTAL TIME = 00:23:56

(4) (5)
01: Panafax Sales
-----
NO. COMM. PAGES FILE DURATION X/R IDENTIFICATION DATE TIME DIAGNOSTIC
01 OK 005 00:05:13 XMT 5551234 NOV-10 15:10 C0044903C0000
21 OK 021/021 019 00:10:15 FWD FAX FORWARD NOV-10 18:10 C0044903C0000
(6) (7)
TOTAL PAGES = 000026 TOTAL TIME = 00:15:28

02: Panafax Service
-----
NO. COMM. PAGES FILE DURATION X/R IDENTIFICATION DATE TIME DIAGNOSTIC
19 OK 001/001 017 00:00:13 XMT 5551234 NOV-11 10:10 C0044903C0000
30 OK 011/011 045 00:08:15 XMT SERVICE DEPT. NOV-12 13:10 C0044903C0000

TOTAL PAGES = 000012 TOTAL TIME = 00:08:28

-PANASONIC -
***** -HEAD OFFICE - ***** 201 555 1212 - *****
```

Continued on the next page...

Department Code

Sample Department Code Journal / Received Calls

```
***** -JOURNAL- ***** DATE NOV-12-2000 ***** TIME 15:00 *** P.02

RECEIVED CALLS
NOV-10 TO NOV-12 (1)
(2) (3)
TOTAL PAGES = 000011 TOTAL TIME = 00:13:41
```

NO.	COMM.	PAGES	FILE	DURATION	X/R	IDENTIFICATION	DATE	TIME	DIAGNOSTIC
55	OK	005		00:05:13	RCV	4445678	NOV-10	12:10	C0044903C0000
56	OK	005/005	020	00:08:15	PLD	111 222 333	NOV-10	19:15	C0044903C0000
70	OK	001	017	00:00:13	RCV	44567345	NOV-11	10:10	C0044903C0000

```
***** -PANASONIC -
***** -HEAD OFFICE - ***** 201 555 1212 - *****
```

Explanation of contents

- (1) Period date of this journal
- (2) Number of total pages transmitted/received for this machine.
- (3) Total transmitted/received time for this machine.
- (4) Department Code Number : 01-50
- (5) Department Name
- (6) Number of total pages transmitted/received for this department.
- (7) Total transmitted/received time for this department.

Selective Reception



Your machine has a special feature, Selective Reception, which can prevent the receiving of unnecessary documents (i.e. junk fax, direct mail, etc.).


Before receiving the document, the last 4 digits of the ID Number received from the sending machine will be compared with the last 4 digits of the telephone number programmed in each One-Touch or Abbreviated station. When a match is found, your machine will start receiving the document. If a match is not found, your machine will cancel the reception and an Information Code 406 will be recorded on the Journal.


Setting the Selective Reception.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

- 1**

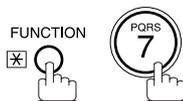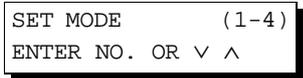


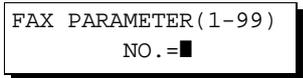- 2**

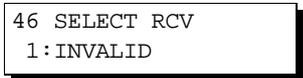

- 3**

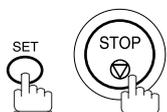

- 4**



- 5**



NOTE

1. When the Selective Reception is set, your machine can receive only from those stations which are programmed in the built-in auto-dialer.
2. If your ID number has not been set, your machine might not be able to receive from some models. To set your ID number, see page 20.

Password Communications

General Description

Password Communications, including Password Transmission and Password Reception will prevent your machine from sending a fax to a wrong station or receiving a fax from an unauthorized stations. You can set Password Transmission and Password Reception independently, or both together.

To use Password Transmission, you must set a 4-digit transmission password in advance. The password must be shared with other compatible Panafax machine(s). If the transmission password in your machine does not match the transmission password in the other compatible Panafax machine(s), the transmission will fail. You can select password transmission by setting Function 8-4 (PASSWORD-XMT) to “**ON**” when you send a document.

To use Password Reception, you must set a 4-digit receiving password in advance. The password must be shared with the other compatible Panafax machine(s). If the password in your machine does not match the receiving password in the other compatible Panafax machine(s), the reception will fail. Once you set password reception and set the parameter to “**ON**”, it stays until you change the setting to “**OFF**”.

Compatibility with Other Machines

You can only use password transmission and reception with another Panafax compatible machine(s) listed below.

Model	Special Settings
DF-1100 DP-2000 DP-2500 FP-D250F FP-D350F UF-160 UF-160M UF-170 UF-260 UF-270 UF-270M UF-280M UF-300 UF-312 UF-322 UF-550 UF-560 UF-585 UF-595 UF-650 UF-733 UF-744 UF-745 UF-750 UF-750D UF-755 UF-755e UF-766 UF-770 UF-788 UF-880 UF-885 UF-895 UF-M500	Required. Please refer to the individual User's Guide of each model.

Password Communications

Setting Password Transmission

To set transmission password and parameter,


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1




```
SET MODE      (1-4)
ENTER NO. OR ∨ ^
```

2

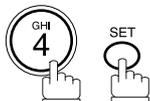

```
FAX PARAMETER (1-99)
NO. =■
```

3

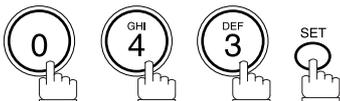

```
43 PASSWORD-XMT
```

4

Enter a 4-digit Transmission Password.

Ex: ① ② ③ ④ and press

```
43 PASSWORD-XMT
1:OFF      1234
```

5

 for "OFF" (password is not checked)
or


 for "ON" (password is checked)

```
43 PASSWORD-XMT
1:OFF      1234
```

or

```
43 PASSWORD-XMT
2:ON      1234
```

6

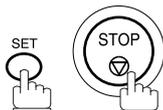

NOTE

1. You can change the setting temporarily by using FUNCTION 8-4 (PASSWORD-XMT) for each transmission. See page 121 for details.
2. To change the password, press in step 4. Then re-enter a new one.

Password Communications

Setting Password Reception

To set receiving password and parameter,

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



```
SET MODE      (1-4)
ENTER NO. OR ∨ ^
```

2



```
FAX PARAMETER (1-99)
NO. = ■
```

3



```
44 PASSWORD-RCV
■■■■
```

4

Enter a 4-digit Receiving Password.

Ex: ① ② ③ ④ and press

```
44 PASSWORD-RCV
1:OFF      1234
```

5

 for "OFF" (password is not checked)
or


 for "ON" (password is checked)

```
44 PASSWORD-RCV
1:OFF      1234
```

or

```
44 PASSWORD-RCV
2:ON      1234
```

6

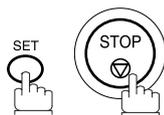

NOTE

- Once you set the parameter, you cannot select the parameter, "OFF" or "ON", for each reception. It is always "OFF" or "ON" until you change the setting.
- To change the password, press in step 4. Then re-enter a new one.

Password Communications

Using Password Transmission

To use Password Transmission, you can select PASSWORD-XMT "OFF" or "ON" for each Transmission by following the procedure below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1a



Place original(s) face up on the ADF.

or

1b

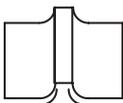

Place a book or an original face down on the Platen Glass.

ENTER STATION(S)
THEN PRESS START 00%

2



SELECT MODE (1-5)
ENTER NO. OR ∨ ^

3



PASSWD-XMT=OFF
1:OFF 2:ON

4



for "OFF" (password is not checked)

or



for "ON" (password is checked)

PASSWD-XMT=OFF
1:OFF 2:ON

or

PASSWD-XMT=ON
1:OFF 2:ON

5



ENTER STATION(S)
THEN PRESS START

Continued on the next page...

Password Communications

6


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press after each station is entered
(Up to 70 stations)
- Directory Search Dialing, press after each station is entered
(For details, see pages 41 to 45.)

Ex:

```
<01>(Station name)  
5551234
```

7

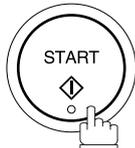

If your machine's Transmission Password coincides with the other station's Transmission Password, your machine starts sending the document.

When transmission is completed, PASSWORD-XMT returns to standard setting (“OFF” or “ON”).

Using Password Reception

There is no additional operation required once you set the parameter by following the procedure on page 120. The parameter, “OFF” or “ON”, cannot be selected for each reception. It is always “OFF” or “ON” until you change the setting.

Confidential Mailbox

Your machine is equipped with two Confidential Communication features which ensure that the Confidential information you send is received only by the person with the correct confidential code.

Confidential Mailbox

The confidential mailbox feature can be used as a mailbox to communicate with other compatible models using a 4-digit confidential code. The Confidential Mailbox feature receives document(s) with a confidential code into memory. These documents can only be printed by the person who has the correct confidential code.

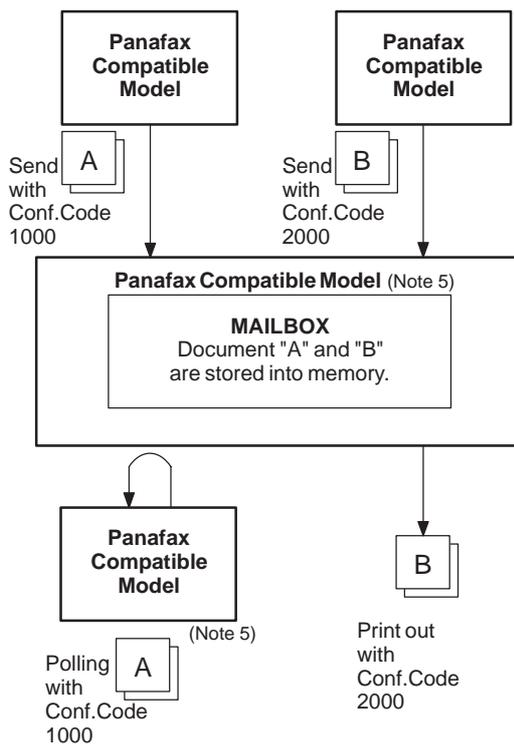


Figure 1 : Confidential Mailbox

Compatibility with Other Machines

Table 1 shows a list of compatible Panafax models which have the Confidential Mailbox feature. It also shows whether or not special settings are required.

Table 1 : Confidential Mailbox Requirement

Compatible Model							Special Settings
DF-1100	DP-2000	DP-2500	UF-280M	UF-312	UF-322	UF-332	Not Required.
UF-333	UF-342	UF-344	UF-550	UF-560	UF585	UF595	
UF-733	UF-744	UF-745	UF-755	UF-755e	UF-766	UF-770	
UF-788	UF-880	UF-885	UF-895				

NOTE

1. If your machine receives two confidential faxes with same confidential code, both documents are stored together in the same confidential mailbox.
2. Up to 20 Mailbox files can be stored in memory. So, you can receive the confidential fax using 20 different confidential codes.
3. If the memory overflows, the machine will stop receiving and release the line.
4. We recommend that optional flash memory card be installed when this function is used. See page 158 on Image Memory Capacity.
5. If confidential faxes were received in the mailbox of UF-733, you cannot poll those documents. The UF-733 is designed to print the received confidential document locally only.

Confidential Mailbox

Sending a Confidential Document to a Remote Station's Mailbox

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%


or

1b

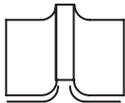


Place a book or an original face down on the Platen Glass.

2

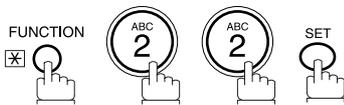

CONF. COMM. (1-5)
ENTER NO. OR ∨ ^

3

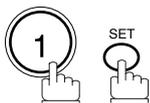

CONFIDENTIAL XMT
CONF. CODE=■■■■

4

Enter a 4-digit Confidential Code.

Ex: ② ② ③ ③

CONFIDENTIAL XMT
CONF. CODE=2233

5



ENTER STATION
THEN PRESS START

6

Dial by any one of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing
- Directory Search Dialing

Ex: 

<01>(Station name)
5551234

Confidential Mailbox

7



If necessary, inform the receiving person and tell them the Confidential Code.

Confidential Mailbox

Polling a Confidential Document from a Remote Station's Mailbox

After you have been informed that someone has transmitted a confidential document to a remote station's mailbox, you can poll the confidential document from the remote station by following the procedure below.


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



CONF. COMM. (1-5)
ENTER NO. OR ∨ ^

2

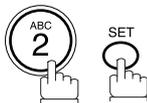

CONFIDENTIAL POLL
CONF. CODE=■■■■

3

Enter a 4-digit Confidential Code.

Ex: ② ② ③ ③

CONFIDENTIAL POLL
CONF. CODE=2233

4



ENTER STATION
THEN PRESS START

5


Dial by any one of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing
- Directory Search Dialing

Ex: 01

<01>(Station name)
5551234

6

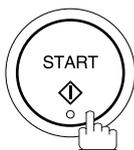

Confidential Mailbox

Receiving a Confidential Document to Your Machine's Mailbox

No special setting is required, your machine comes with this feature ready to use. Your machine receives a confidential fax the same way it receives a normal fax message. When receiving the confidential fax, the display shows the following message (CONF. RCV REPORT) and prints out the Confidential Receive Report.

MESSAGE IN MAIL BOX

Sample CONF. RCV Report

```
*****-CONF. RCV REPORT- *****DATE NOV-12-2000 *****TIME 15:00 *****
                ** NOTICE OF CONFIDENTIAL DOCUMENT HELD **
(1)      (2)      (3)      (4)
FILE NO. RECEIVED FROM      PAGES      TIME RECEIVED
      040      PANAFAX      001      NOV-12 15:00
                                -PANASONIC      -
*****-HEAD OFFICE      -**** -      201 555 1212- *****
```

Explanation of contents

- (1) File number : 001 to 999
- (2) Received remote station's ID : Character ID or Numeric ID
- (3) Number of pages received :
- (4) Received date and time :

NOTE

1. If your machine receives two confidential faxes with same confidential code, both documents are stored together in the same confidential mailbox.
2. Up to 20 Mailbox files can be stored in memory. So, you can receive the confidential fax using 20 different confidential codes.
3. If the memory overflows, the machine will stop receiving and release the line.
4. You can verify whether the unit has received a confidential fax by printing the File List. (See page 92)

Confidential Mailbox

Storing a Confidential Document in Your Machine's Mailbox

Use the following procedure to store a document in a confidential mailbox in your machine. Once the confidential document is stored in your machine, it can be polled by another machine.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%


or

1b

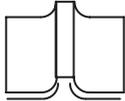


Place a book or an original face down on the Platen Glass.

2

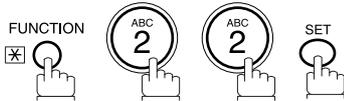

CONF. COMM. (1-5)
ENTER NO. OR ∨ ^

3

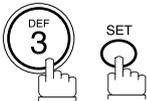

CONFIDENTIAL POLLED
CONF. CODE=■■■■

4

Enter a 4-digit Confidential Code.

Ex: ② ② ③ ③

CONFIDENTIAL POLLED
CONF. CODE=2233

5



The document(s) will be stored into memory.
If necessary, inform the receiving party of the confidential document and tell them the confidential code needed to poll the document.

* STORE * NO.002
PAGES=001 01%

NOTE

- The confidential file will be erased automatically after being polled.
If you wish to retain the confidential file even after being polled, change the setting of Fax Parameter No. 042 (CONF. POLLED FILE SAVE) to "Valid".


Confidential Mailbox

Printing a Confidential Document from Your Machine's Mailbox

After you have been notified that someone has transmitted a confidential document to your machine's mailbox, use the following procedure to print the confidential document.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

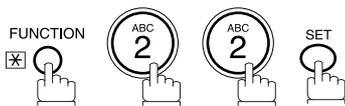

```
CONF. COMM. (1-5)
ENTER NO. OR v ^
```

2



```
PRINT CONF. FILE
CONF. CODE=■■■■
```

3

Enter the Confidential Code of the document you want to print.

```
PRINT CONF. FILE
CONF. CODE=2233
```

Ex: ② ② ③ ③

4



The machine will print the confidential documents.

```
* PRINTING *
PAGE=001/001
```

NOTE

1. The confidential file will be erased automatically after being printed even if the setting of Fax Parameter No. 042 (CONF. POLLED FILE SAVE) is changed to "Valid".

Confidential Mailbox

Deleting a Confidential Document Stored in Your Machine's Mailbox

If your memory becomes full, or you just want to clean out your confidential documents, you may delete one or more confidential faxes stored in your machine by using the following procedure.

There are two types of confidential file deletions, one is to delete the file individually by its Confidential Code, and the other is to delete All confidential files in memory.

To delete a file using confidential code


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



CONF. COMM. (1-5)
ENTER NO. OR ∨ ^

2

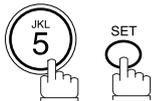

DELETE CONF. FILE
CONF. CODE=■■■■

3

Enter a 4-digit Confidential Code.

Ex: ② ② ③ ③

DELETE CONF. FILE
CONF. CODE=2233

4




* DELETING *
CONF. CODE=2233

Confidential Mailbox

To delete all confidential files in memory


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

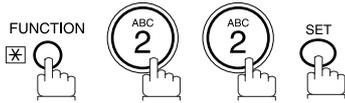

```
CONF. COMM. (1-5)
ENTER NO. OR ∨ ^
```

2

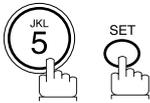

```
DELETE CONF. FILE
CONF. CODE=■■■■
```

3



```
DELETE ALL CONF.
FILES? 1:YES 2:NO
```

4




```
* DELETING *
ALL CONF. FILES
```

Sub-Addressing

General Description

The Sub-Addressing function allows you further routing, forwarding or relaying of document(s) to the desired recipient(s) when used in combination with the Networking version of LaserFAX software. This function conforms to the ITU-T recommendation for T. Routing-Facsimile Routing utilizing the Sub-Address.

Example of a Network

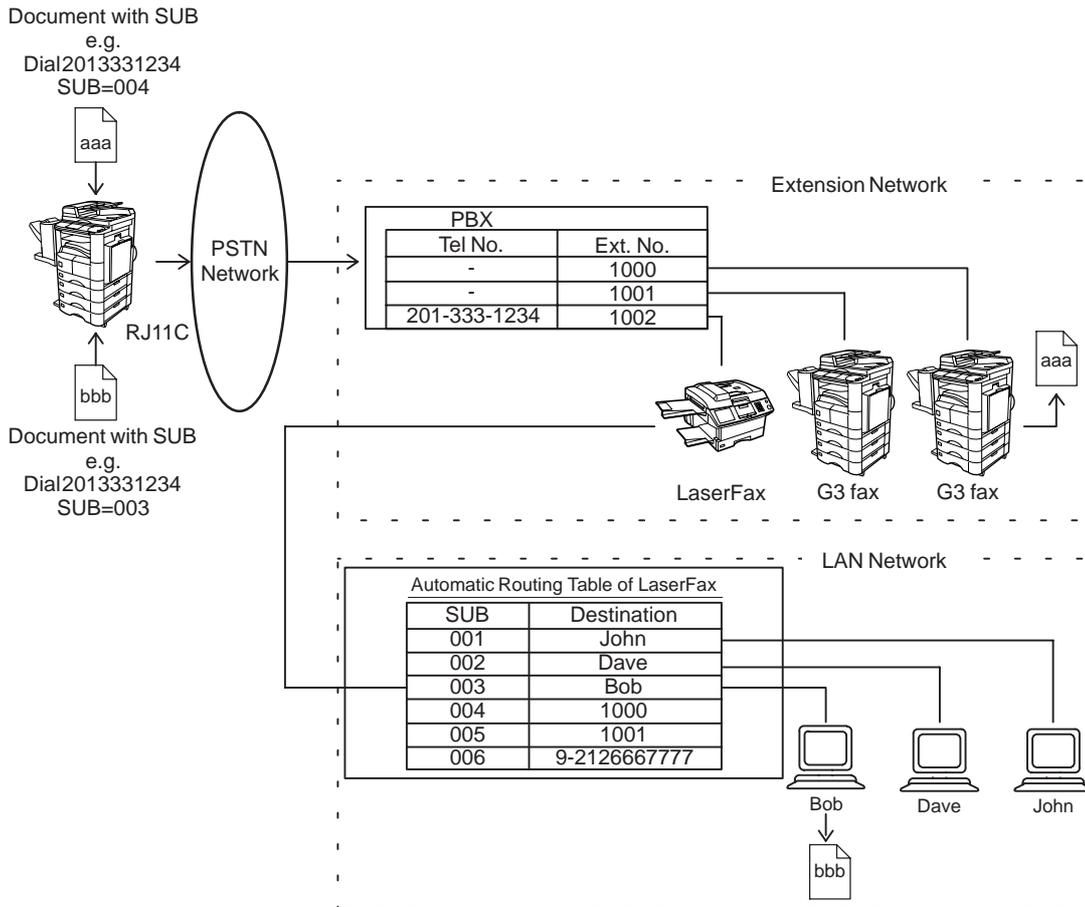

Compatibility with Other Machines

- Sub-Addressing Transmission: DF-1100/DP-150/2000/2500/DX-1000/2000/FP-D250F/D350F/UF-332/333/342/344/550/560/585/595/770/788/880/885/895 (see Note 2)
- Sub-Addressing Reception: DX-1000/2000 and DF-1100/UF-342/344/550/560/585/595/770/788/880 with PC Interface using the Networking version of LaserFAX software.

Sub-Addressing Transmission Methods

You can send a document with Sub-Address information to the desired recipient by the following methods.

- By registering the Sub-Address information into the Phone Book Numbers.
- By specifying the Sub-Address information in the Manual Number Dialing Mode.

Setting of Routing, Forwarding or Relaying

You can customize the Automatic Routing to any combination of LAN (Local Area Network), PSTN (Public Switched Telephone Network) or PBX Extension with LaserFAX Routing Table (please refer to the LaserFAX User Manual).

NOTE

1. LaserFAX is trademarks of Wordcraft International Ltd.
2. UF-788 with PC Interface Option or the Option ROM installed.

Sub-Addressing

To set the Sub-Address into a One-Touch/ABBR. Dialing Numbers


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



```
1: ONE-TOUCH
2: ABBR. NO.
```

2

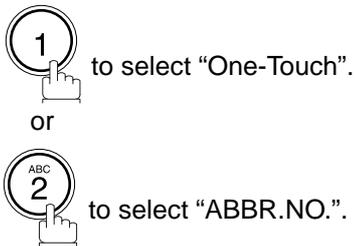

Ex: ①

```
ONE-TOUCH< >
PRESS ONE-TCH OR v ^
```

3

Ex: 01

```
<01>
ENTER TEL. NO.
```

4

Enter the telephone number, press **FLASH** then enter the Sub-Address. (Up to 20 digits)
(Up to 36 digits including telephone number, pauses, spaces, FLASH and Sub-Address)

Ex: Telephone number = 5551234, Sub-Address =2762

Enter as: ⑤ ⑤ ⑤ ① ② ③ ④

FLASH ② ⑦ ⑥ ②

```
<01>
5551234s2762
```


5



Enter the station name. (See page 21)

```
<01> SALES DEPT
5551234s2762
```

6

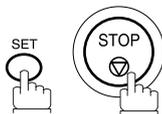

NOTE

1. **FLASH** separates the Sub-Address from the Telephone number and is indicated by an "s" in the display.

Sub-Addressing

To send a Document with Sub-Address

Using One-Touch/ABBR. Number Dialing

The operation is the same as for normal dialing

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".



Place original(s) face up on the ADF.

```
ENTER STATION(S)  
THEN PRESS START 00%
```


or



Place a book or an original face down on the Platen Glass.



```
<01> (Station name)  
5551234s2762
```

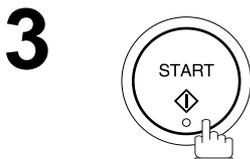

The document is stored into memory and your machine starts to dial the number of the station and sends the document(s) with Sub-Addressing information.

```
* STORE *      NO. 001  
      PAGES=001  01%
```

Sub-Addressing

Using Manual Number Dialing

Use **FLASH** to separate the Telephone number and the Sub-Address.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1a




Place original(s) face up on the ADF.

ENTER STATION(S)
THEN PRESS START 00%

or

1b

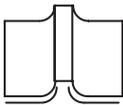

Place a book or an original face down on the Platen Glass.

2

Enter the telephone number, press **FLASH** then enter the Sub-Address (up to 20 digits).
(Up to 36 digits including telephone number, pauses, spaces, FLASH and Sub-Address)


TEL. NO.
5551234s2762■

Ex: Telephone number = 5551234, Sub-Address=2762

Enter as: (5) (5) (5) (1) (2) (3) (4)

FLASH (2) (7) (6) (2)

3

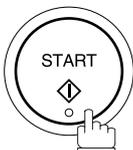

The document is stored into memory and your machine starts to dial the number of the station and sends the document(s) with Sub-Addressing information.

* STORE * NO. 001
PAGES=001 01%

NOTE

1. **FLASH** separates the Sub-Address from the Telephone number and is indicated by an "s" in the display.
2. Manual Off-Hook or On-Hook Dialing cannot be used with the Sub-Addressing Transmission.
3. The Sub-Address is not transmitted during Manual Redial Mode.

This page is intentionally left blank.

Journals and Lists


To help you maintain records of the documents you sent and received, as well as lists of the numbers you record, your facsimile machine is equipped to print the following journals and lists: Transaction Journal, Individual Transmission Journal, Communication Journal, One-Touch/Abbreviated/Directory Search No. List, Program List, Fax Parameter List, Directory Sheet and File List.

Transaction Journal

The "Journal" is a record of the last 100 transactions (a transaction is recorded each time you send or receive a document). It is printed automatically after every 100 transactions (See Note 1) or you can print or view it manually by using the following procedure:


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

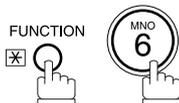

```
PRINT OUT      (1-7)
ENTER NO. OR  v ^
```

2

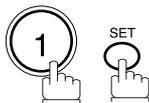

```
JOURNAL
1:PRINT 2:VIEW
```

3a



to print a Journal

```
* PRINTING *
JOURNAL
```

3b



to view a Journal

```
JOURNAL VIEW
1:XMT ONLY 2:ALL
```

4

Select the view mode.

- ① to view transmission transactions only
- ② to view all transactions

```
USE THE v ^ KEYS TO
SCROLL EACH RECORD
```


Ex: ②

You can view the transactions in the journal by pressing

 or . Press STOP to return to standby.

Continued on the next page...

Journals and Lists

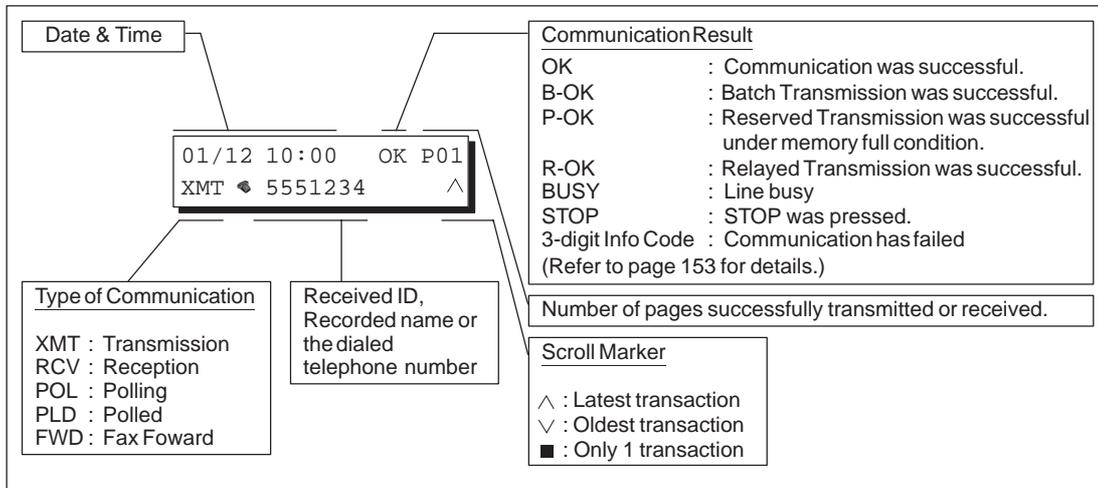

NOTE

1. If you wish to disable the automatic printing of the Transaction Journal, change the setting of Fax Parameter No. 013 to "Invalid". (See page 31)


Journals and Lists

Individual Transmission Journal (IND. XMT JOURNAL)

An Individual Transmission Journal contains the information on the latest transmission.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

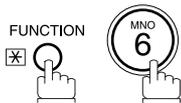

```
PRINT OUT      (1-7)
ENTER NO. OR  V ^
```

2



```
6:IND. XMT JOURNAL?
PRESS SET TO PRINT
```

3



```
* PRINTING *
IND. XMT JOURNAL
```

Continued on the next page...

Journals and Lists

Sample Individual Transmission Journal (IND. XMT JOURNAL)

```
***** -IND. XMT JOURNAL- ***** (1) (2)
***** DATE NOV-12-2000 ***** TIME 15:00 *****

(10)(11) DATE/TIME = NOV-12-2000 09:00

(3) JOURNAL No. = 21

(4) COMM. RESULT = OK

(5) PAGE(S) = 001

(7) DURATION = 00:00:16

(6) FILE No. = 010

(16) MODE = MEMORY TRANSMISSION

(17) DESTINATION = [001] / 555 1234 /ABCDEFG

(18) RECEIVED ID =

(19) RESOLUTION = STD

(20) LINE NUMBER = 2

(13) -PANASONIC -

*****-HEAD OFFICE -*****- 201 555 1212- *****
(15) (14)
```

Continued on the next page...

Journals and Lists

Explanation of contents

- (1) Printout date
- (2) Printout time
- (3) Journal number
- (4) Communication result
 - : "OK" indicates that the communication was successful.
 - "BUSY" indicates that the communication has failed because of busy line.
 - "STOP" indicates that **STOP** was pressed during communication.
 - : "B-OK" indicates that the Batch Transmission was successful.
 - : (All batched files are listed below the batched transaction.)
 - "M-OK" indicates that the substitute reception message in memory was not printed.
 - "P-OK" indicates that memory overflow or document misfeeding occurred while storing the documents into memory for transmission but successfully stored document(s) was sent.
 - "R-OK" indicates that the Relayed XMT or Confidential Communication was successful.
 - "3-digit Info Code" (See page 153) indicates that the communication has failed.
- (5) Number of pages transmitted or received
 - : The 3-digit number is the number of pages successfully transmitted or received. When the documents are stored into memory, two 3-digit numbers will appear. The first 3-digit number represents the number of pages successfully transmitted. The second 3-digit number represents the total number of pages that were attempted to be transmitted.
 - Asterisk "*" indicates that the quality of some received copies was poor.
- (6) File number
 - : 001 to 999 (If the communication is stored into memory, a file number is assigned for each communication.)
- (7) Duration of communication
- (8) Type of communication
 - : "XMT" means Transmission
 - "RCV" means Reception
 - "POL" means Polling
 - "PLD" means Polled
 - "FWD" means Fax Forward
- (9) Remote station identification
 - : Name : Recorded name in One-Touch or ABBR. Numbers or remote station's Character ID.
 - ◆ number : Dialed telephone number (PIN code will not be shown)
 - Number : Remote station's ID number.
 - "◆" means communicated from optional 2nd G3 Fax Communication Port Kit. (Line-2)
- (10) Communication date
- (11) Communication Start time
- (12) Diagnostic
 - : For service personnel only
- (13) Own LOGO
 - : Up to 25 characters
- (14) Own ID number
 - : Up to 20 digits
- (15) Own Character ID
 - : Up to 16 characters
- (16) Type of communication
 - : Transmission or memory transmission
- (17) Destination
 - : If a One-Touch or ABBR was used for the transmission:
One-Touch or ABBR. No./Telephone Number/Recorded Name
If not : Telephone number
- (18) Received remote station's ID
 - : Character ID or ID number
- (19) Resolution:
 - : "STD" means standard resolution
 - "FINE" means fine resolution
 - "S-FINE" means super fine resolution
- (20) Line Number

Journals and Lists

Communication Journal (COMM. JOURNAL)

The Communication Journal (COMM. JOURNAL) lets you verify whether the transmission or polling was successful. You may select the printout condition (Off/Always/Inc. only) in Function 8-1 or Fax Parameter No. 12.

Sample COMM. JOURNAL

```
***** - COMM. JOURNAL - ***** DATE NOV-12-2000 **** TIME 15:00 *****

(1)                                (2)                                (3)
MODE = MEMORY TRANSMISSION        START=NOV-12 14:50                END=NOV-12 15:00

FILE NO.= 050 (4)

(5)    (6)    (7)    (8)    (9)    (10)
STN NO. COMM.  ABBR NO.  STATION NAME/TEL NO.  PAGES  DURATION

001    OK    <01>    SERVICE DEPT.    001/001  00:01:30
002    OK    <02>    SALES DEPT.    001/001  00:01:25
◆ 003  407  <03>    ACCOUNTING DEPT.  000/001  00:01:45
◆ 004  BUSY  ⚡    021 111 1234    000/001  00:00:00

- PANASONIC -

***** - HEAD OFFICE - ***** - 201 555 1212 - *****

THE SLEREXE COMPANY LIMITED
SAPORS LANE - BOOLE - DORSET - BH 25 8 ER
TELEPHONE BOOLE (945 13) 51617 - TELEX 123456

Our Ref. 350/PJC/EAC                                18th January, 1972.

Dr. P.N. Cundall,
Mining Surveys Ltd

variations of print density can
cause the photocell to generate an analogous electrical video signal.
This signal is used to modulate a carrier, which is transmitted to a
remote destination over a radio or cable communications link.

At the remote terminal, demodulation reconstructs the video
signal, which is used to modulate the density of print produced by a
printing device. This device is scanning in a raster scan synchronised
with that at the transmitting terminal. As a result, a facsimile
copy of the subject document is produced.

Probably you have uses for this facility in your organisation.

Yours sincerely,

Phil.

P.J. CROSS
Group Leader - Facsimile Research
```

Continued on the next page...

Journals and Lists

Explanation of contents

- (1) Indication of communication mode
- (2) Start time of communication
- (3) End time of communication
- (4) File number : 001 to 999 (When the communication is stored into memory, a file number is assigned for each communication.)
- (5) Station number : Sequential number of the Stations.
"◆" means communicated from optional 2nd G3 Fax Communication Port Kit. (Line-2)
- (6) Communication result : "OK" indicates that the communication was successful.
"BUSY" indicates that the communication has failed because of busy line.
"STOP" indicates that **STOP** was pressed during communication.
"B-OK" indicates that the Batch Transmission was successful.
"M-OK" indicates that the substitute reception message in memory was not printed.
"P-OK" indicates that memory overflow or document misfeeding occurred while storing the documents into memory for transmission but successfully stored document(s) was sent.
"R-OK" indicates that the Relayed XMT or Confidential Communication was successful.
"3-digit Info Code" (See page 153) indicates that the communication has failed. In this case, the machine will print the attached report with first page of your document as shown on the previous page.
- (7) Abbreviated number or ☎ mark : ☎ mark indicates dialed by direct number dial.
- (8) Recorded name in One-Touch, ABBR. or direct dialing number
- (9) Number of pages transmitted or received : The 3-digit number is the number of pages successfully transmitted or received. When the documents are stored into memory, two 3-digit numbers will appear. The first 3-digit number represents the number of pages successfully transmitted. The second 3-digit number represents the total number of pages that were attempted to be transmitted.
- (10) Duration of Communication


Journals and Lists

One-Touch/Abbreviated and Directory Search List

To print a One-Touch/Abbreviated Number and Directory Search List of the telephone numbers you have stored.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

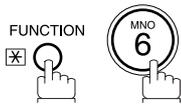

PRINT OUT (1-7)
ENTER NO. OR ∨ ^

2



2: ONE-TCH/ABBR LIST?
PRESS SET TO PRINT

3



1: ONE-TOUCH/
ABBR. NO.

4



for One-Touch/ABBR. Number List

* PRINTING *
ONE-TOUCH/ABBR. LIST



for Directory Search List

* PRINTING *
DIR. SEARCH LIST

Continued on the next page...

Journals and Lists

Sample One-Touch List

```
***** -ONE-TOUCH LIST- ***** DATE NOV-12-2000 ***** TIME 15:00 *****

(1)          (2)          (3)          (5)
ONE-TOUCH    STATION NAME    TELEPHONE NO.    LINE

<01>         SERVICE DEPT.    121 555 1234     AUTO
<02>         SALES DEPT.      222 666 2345     L-1
<03>         ACCOUNTING DEPT  313 333 3456     L-2

NO. OF STATIONS = 03 (4)

                                     -PANASONIC          -

***** -HEAD OFFICE - ***** 201 555 1212- *****
```

Sample ABBR. Number List

```
***** -ABBR. NO. LIST- ***** DATE NOV-12-2000 ***** TIME 15:00 *****

(1)          (2)          (3)          (5)
ABBR NO.     STATION NAME    TELEPHONE NO.    LINE

[001]        ENG. DEPT.      888 555 1234     AUTO
[002]        PURCHASE DEPT.  999 666 2345     L-1
[003]        REGULATION DEPT  777 333 3456     L-2

NO. OF STATIONS = 003 (4)

                                     -PANASONIC          -

***** -HEAD OFFICE - ***** 201 555 1212- *****
```

Journals and Lists

Sample Directory Search List

```

***** -DIR. SEARCH LIST- ***** DATE NOV-12-2000 ***** TIME 15:00 *****

(11) (2)          (1)          (3)          (5)
      STATION NAME      ABBR NO.      TELEPHONE NO.      LINE
[A]  ACCOUNTING DEPT  <03>         313 333 3456       L-2
[E]  ENG. DEPT.       [001]        888 555 1234       L-1
[P]  PURCHASE DEPT   [002]        555 666 2345       L-2
[R]  REGULATION DEPT [003]        777 333 3456       AUTO
[S]  SALES DEPT.     <01>         121 555 1234       L-1
      SERVICE DEPT    <02>         222 666 2345       AUTO

      NO. OF STATIONS = 006      (4)

                                      -PANASONIC      -

***** -HEAD OFFICE - ***** 201 555 1212 - *****

```

Explanation of contents

- (1) One-Touch number or Abbreviated number : <nn>= One-Touch number, [nnn] = Abbreviated number
- (2) Station name recorded in the machine : Up to 15 characters
- (3) Telephone number recorded in the machine : Up to 36 digits
- (4) Number of recorded One-Touch and ABBR. numbers
- (5) Telephone Line Used : AUTO, L-1, L-2 (Indicates the Telephone Line (L-1=Line1, L-2=Line-2) that was used for the communication.)


Journals and Lists

Program List

To print a Program List of the Dialing Patterns that you have previously entered into the Program Keys.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

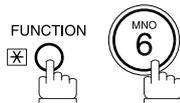

```
PRINT OUT      (1-7)
ENTER NO. OR  V ^
```

2



```
3:PROGRAM LIST?
PRESS SET TO PRINT
```

3



```
* PRINTING *
PROGRAM LIST
```

Sample Program List

```
***** -PROGRAM LIST- ***** DATE NOV-12-2000 ***** TIME 15:00 *****
```

(1) PROGRAM	(2) PROGRAM NAME	(3) TYPE	(4) TIMER	(5) ABBR. NOS.
[P1]	TIMER XMT	XMT	12:00	[001]
[P2]	TIMER POLL	POLL	19:00	[002]
[P3]	PROG. A	POLL	-----	[001] [002]
[P8]	PROG. B	ABBR/GRP	-----	[001] [002] [003]

```

-PANASONIC
***** -HEAD OFFICE - ***** 201 555 1212- *****
```

Explanation of contents

- (1) Program key
- (2) Program name : Up to 15 characters
- (3) Type of communication : "XMT" indicates transmission.
"POLL" indicates polling.
"ABBR/GRP" indicates that the Program key is programmed as a group key.
"ONE-TOUCH" indicates that the Program key is programmed as a One-Touch key.
- (4) Timer : Indicates the starting time.
"----" indicates that the Program key contains "non-deferred" program.
- (5) Numbers recorded in the program : One-Touch/ABBR. numbers


Journals and Lists

FAX Parameter List

To print a FAX Parameter List:

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

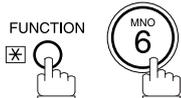

```
PRINT OUT      (1-7)
ENTER NO. OR ∨ ^
```

2



```
4:FAX PARAM. LIST ?
PRESS SET TO PRINT
```

3



```
* PRINTING *
FAX PARAMETER LIST
```

Sample FAX Parameter List

```
***** -FAX PARAMETER LIST- ***** DATE NOV-12-2000 ***** TIME 15:00 *****
```

(1) PARAMETER NUMBER	(2) DESCRIPTION	(3) SELECTION	(4) CURRENT SETTING	(5) STANDARD SETTING
(7)001	CONTRAST (HOME)	(1:Lightest ----- 5:Darkest)	3	3
* 002	RESOLUTION (HOME)	(1:Standard 2:Fine 3:S-Fine)	2	1
003	ORIGINAL (HOME)	(1:Text 2:T/P 3:Photo)	1	1
099	MEMORY SIZE (FLASH)		(2MB + 4MB)	(6)

-PANASONIC -

```
***** -HEAD OFFICE - ***** - 201 555 1212- *****
```

Explanation of contents

- (1) Parameter number : (5) Standard setting : Factory preset standard setting
- (2) Description : "(HOME)" means home position setting. (6) Memory size : (Base memory + option memory)
- (3) Selection (7) Changed setting : "*" indicates that the Factory preset setting was changed.
- (4) Current setting : "----" indicates code or password is not set. When the code or password is set, it is shown in parenthesis.

This page is intentionally left blank.

Troubleshooting

If You Have Any of These Problems

Mode	Symptom	Cause / Action	Page
During Transmission	Document doesn't feed/multiple feeds	<ol style="list-style-type: none"> 1. Check that your document is free of staples and paper clips, and that it is not greasy or torn. 2. Check that your document is the right type to send through an ADF by consulting the list on "Originals You Cannot Send". If your document has the characteristics listed, use the Platen instead. 3. Check that the document is loaded properly. 	35
	Does not stamp	Check Fax Parameter No. 004 and No. 028 settings.	30, 31
	Stamp too light	Replace stamp or refill ink.	155
Transmission Copy Quality	Vertical lines on the transmitted document	Check own copy quality. If copy is OK, your machine has no problem, report to the receiving party that they have a problem. If copy is NG, clean the Scanning Area.	--
	Transmitted document is blank		
During Reception	 : Add Paper	Replenish the recording paper.	--
	Recording paper misfeed	Remove the misfed paper. (See Operating Instructions (for Copier) P.58)	--
	Recording paper doesn't advance into machine	Make sure that there is paper in the Paper Tray(s). Follow the instructions for loading paper.	--
	Recording paper doesn't eject after printing	Check to see if the recording paper has misfed inside of the machine.	--
	Document auto reduction doesn't work	Check Print Reduction settings.	67
	 : Add Toner	Replace the Toner Cartridge.	--
	 : No Waste Toner Box	Install the Waste Toner Box.	--

Continued on the next page...

Troubleshooting

Mode	Symptom	Cause / Action	Page
Communication	No dial tone	<ol style="list-style-type: none"> 1. Check the connection of the telephone line. 2. Check the telephone line. 	156
	No auto answer	<ol style="list-style-type: none"> 1. Check the connection of the telephone line. 2. Check the Reception mode setting. 3. If the Fax Parameter No. 013 (AUTO JOURNAL PRINT) is set to "Valid" (default setting) and the machine is printing the received document(s) from memory, which also happens to be the 100th transaction, the machine will not auto answer until the Transaction Journal completes printing. 	156 66
	Cannot transmit or receive	An information code will be shown on the display. Refer to the information code table to find out the trouble.	153
No Unit Operation	No unit operation	To reset the machine, turn-off the Power Switch for a few seconds then turn it on again.	9

Troubleshooting

Information Codes

When something unusual occurs, the display may show one of the Information Codes listed below. These will help you to identify and correct the problem.

Info. Code	Meaning	Action	Page
400	During initial handshake, receiving station did not respond or communication error occurred.	1. Check with the other party. 2. Reload the document(s) and send again.	--
401	Remote station required a Receiving Password to receive the original. Remote station does not have Confidential Mailbox.	Check the remote station.	--
402	During initial handshake, communication error occurred.	Reload the document(s) and send again.	--
403	No polling capability at the remote side.	Ask remote side to set "POLLED=ON".	--
404/405	During initial handshake, communication error occurred.	Reload the document(s) and send again.	--
406	Transmission Password does not match. Receiving Password does not match. Received from an unauthorized station in Selective Reception mode.	Check the password or the telephone number in One-Touch or Abbreviated No. Station.	117 119 120
407	No confirmation from the receiving station for the previous page sent.	Wait a few minutes and send again.	--
408/409	Remote side confirmation of previous page is illegible.	Wait a few minutes and send again.	--
410	Communication aborted on the transmitting side.	Check with the other party.	--
411	Polling password does not match.	Check the polling password.	75
412	No data from the transmitting side.	Check with the other party.	--
414	Polling password does not match.	Check the polling password.	75
415	Polling transmission error.	Check the polling password.	75
416/417 418/419	Received data has too many errors.	Check with the other party.	--
420/421	Machine goes to receiving mode, but receives no command from the transmitting side.	1. Remote side misdialed. 2. Check with the other party.	--
422/427	Interface is incompatible.	Check with the other party.	--
430/434	Communication error occurred while receiving.	Check with the other party.	--
436/490	Received data has too many errors.	Check with the other party.	--
456	<ul style="list-style-type: none"> • Unit received a confidential document or was requested to be polled of a confidential document under any of following conditions. <ol style="list-style-type: none"> 1) Not enough space in memory to receive the confidential document. 2) Confidential Mailbox is full. 3) While printing received document(s). • Unit was requested to relay a document. 	1. Print a File List and check the contents. 2. Wait until unit finishes printing.	87
492/493 494	Communication error occurred while receiving.	Check with the other party.	--
495	Telephone line disconnected.	Check with the other party.	--

Continued on the next page...

Troubleshooting

Info. Code	Meaning	Action	Page
501/502	Communication error occurred using the internal V.34 Modem.	Check with the other party.	--
540/541 542 543/544	Communication error occurred while transmitting.	1. Reload the document(s) and send again. 2. Check with the other party.	--
550	Telephone line disconnected.	Check with the other party.	--
552/553 554/555	Communication error occurred while receiving.	Check with the other party.	--
580	Sub-Address transmission to a unit that has no Sub-Address function.	Check the remote station.	132
581	Sub-Address Password transmission to a unit that has no Password Sub-Address function.	Check the remote station.	132
630	Redial was not successful due to a busy line.	Reload the document(s) and send again.	--
631	During dialing, STOP was pressed.	Reload the document(s) and send again.	--
634	Redial was not successful due to no response from the called station or wrong number dialed. Note: If busy tone was not detected, the machine will only redial once.	Check the telephone number and send again.	--
638	Power failure occurred during the communication.	Check the power cord and plug.	--
870	Memory overflow occurred while storing document(s) into memory for transmission.	1. Transmit document(s) without storing into memory. 2. Install Optional Memory Card.	49 --

NOTE


- After identifying the problem and verifying the recommended action, if the Information Codes keep reoccurring or for help on Information Codes that appear on your machine but are not listed above, please contact your local Authorized Panasonic Dealer.
(For mechanical failures, see the Troubleshooting section in the Operating Instructions (For Copier) **P.66**)

Troubleshooting


Verification Stamp

The Verification Stamp contains ink. When the stamp mark appears faded or hard to see, the stamp should be replaced or refill the ink.


To remove the stamp

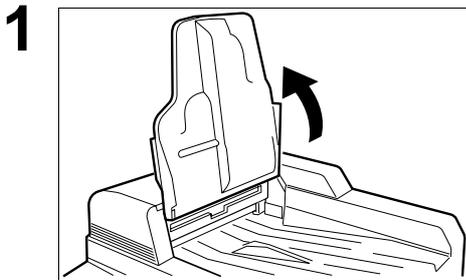

Open the ADF Input Tray.

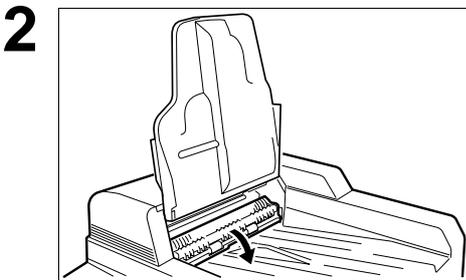


Open the ADF Exit Cover.

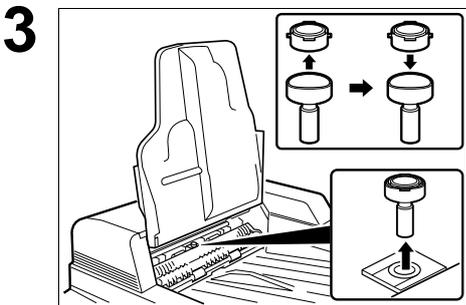

(1) Remove by pulling the Stamp Assembly upward.

(2) Remove the Stamp. Replace the stamp with a new one or refill the stamp with a few drops of the specified ink into the back of the stamp.

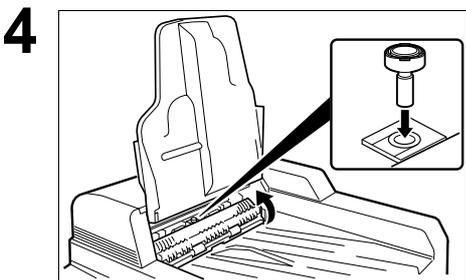

Reinstall the Stamp Assembly.

NOTE


1. Please contact your local Authorized Panasonic Dealer to purchase a new stamp. See [page 72](#) of the Operating Instructions (For Copier) for order number.
2. Stamp ink refills can be purchased from a stationary store. Use blue Shachihata® X™ Stamp ink (No. 22113) or its equivalent.

Troubleshooting

Checking the Telephone Line


If you do not hear a dial tone when the **MONITOR** key is pressed or the incoming call does not ring on your machine (No automatic receive).

1

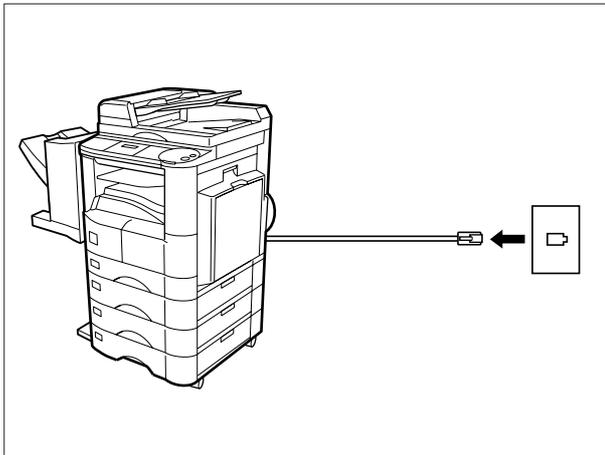


Unplug the Telephone Line Cable from the telephone jack that was supplied by the telephone company.

2

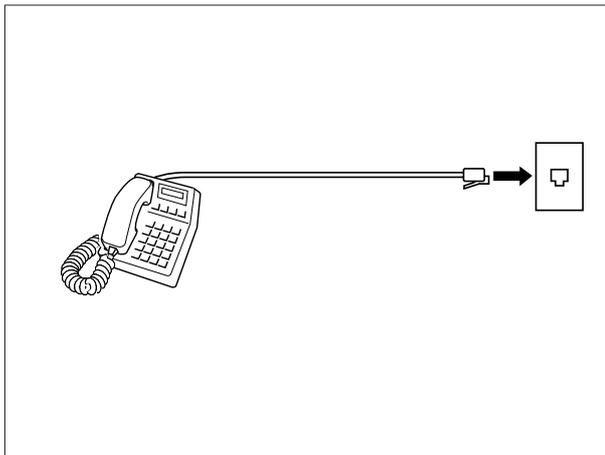

Plug a different regular telephone into the same telephone jack.

3

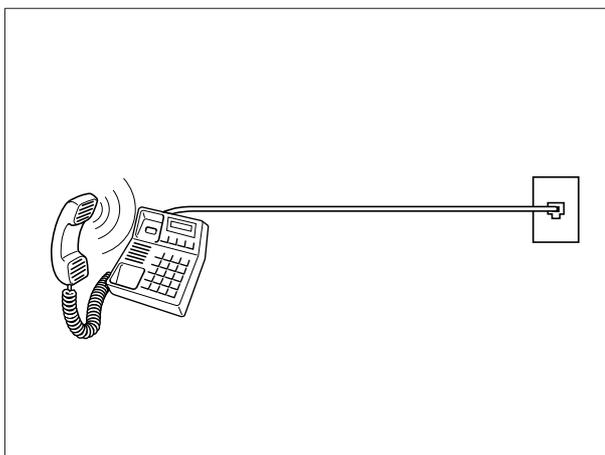


Check for dial tone through the handset. If there is still no dial tone, report it to your local telephone company.

or

Call from another telephone to this number. If the telephone does not ring, report it to your local telephone company.

Specifications

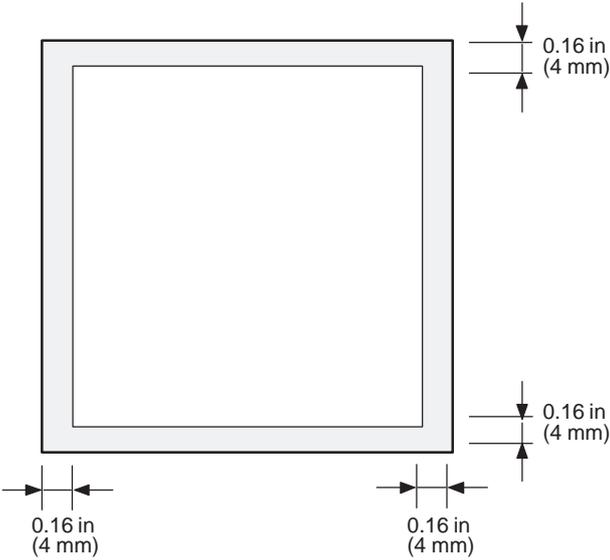Print Margin	 <p>The diagram shows a square print area with a 0.16 in (4 mm) margin on all four sides. The margin is indicated by arrows and dimension lines pointing to the inner and outer boundaries of the print area.</p>						
One-Touch / Abbreviated Dialling Memory Capacity	<p>200 stations (including 20 One-touch and 5 Program keys) Each station can register up to 36 digits for each telephone number (including pauses and spaces) and up to 15 characters for each station name</p>						
Image Memory Capacity	<table border="1" data-bbox="593 1312 1273 1482"> <tr> <td>Base Memory</td> <td>120 pages</td> </tr> <tr> <td>with 4 MB Flash Memory Card</td> <td>440 pages</td> </tr> <tr> <td>with 8 MB Flash Memory Card</td> <td>760 pages</td> </tr> </table> <p>(Based on ITU-T Image No. 1 chart, using Standard Resolution)</p>	Base Memory	120 pages	with 4 MB Flash Memory Card	440 pages	with 8 MB Flash Memory Card	760 pages
Base Memory	120 pages						
with 4 MB Flash Memory Card	440 pages						
with 8 MB Flash Memory Card	760 pages						
Power Consumption	<p>Normal Operation Mode: Approx. 165 Wh Energy-Saver Mode : Approx. 74 Wh Sleep Mode : Approx. 2.9 Wh Maximum : Approx. 1.6 kW</p>						
FCC Registration Number	<p>BTLJPN-35062-FA-E</p>						
Ringer Equivalence	<p>2.1B</p>						

Options and Supplies

The DP-2000 is a digital photocopier which can produce images with great clarity. Furthermore, its copying functionality can also be greatly enhanced by the addition of specially selected options and supplies. For a list of available options and supplies, see the Operating Instructions (For Copier) pages 61 and 62.

FCC Notice for User in USA

WARNING

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Operating Guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Any unauthorized changes or modifications to this equipment would void the users authority to operate this device.

Ask your telephone company or installer to install the jack suitable for your device if such is not available.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, the Telephone Company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with FCC.

Your telephone company may make changes in it's facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this telephone equipment, please contact the manufacturer's authorized service agency for information on obtaining service or repairs. The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

WARNING

For protection against the risk of electric shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service provided by the telephone company nor connected to party lines.

NOTE

- This equipment complies with Part 68 of the FCC Rules. On the rear panel of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment.
You must, upon request, provide this information to your telephone company.*

FCC Notice for User in USA

The telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via telephone facsimile machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of transmission the following information:

- 1) Date and Time of transmission; and,
- 2) Identification of either business, business entity or individual sending the message: and,
- 3) Telephone number of either the sending machine, business, business entity or individual.

In order to program this information into your facsimile machine, you should refer to page numbers 17 to 20 in this Operating Instructions to complete the steps.

Example of Header Format (LOGO, ID Number setting)

NOV-15-2000 09:00	PANASONIC	201 348 7000	P.01/05
↑	↑	↑	
1) Date and Time	2) LOGO	3) ID Number	



The DP-2000 copier complies with Tier 2 of the Environmental Protection Agency's Energy Star Program. This voluntary program specifies specific energy consumption and usage standards for copiers. These copiers will automatically "power down" after a specified period of non-use. The use of these Energy Star compliant copiers will reduce energy consumption and ultimately benefit the environment.

The default functions can be adjusted depending on your office requirements. Please see your authorized Panasonic copier dealer for more details.

Notice to User in Canada

NOTICE

The Industry Canada Label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE

The ringer equivalence number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the ringer equivalence numbers of all the devices does not exceed 5.

Notice to User in Canada

Avis

L'étiquette de Industrie Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le Ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur. Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement.

L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations. Les réparations de matériel homologué doivent être effectuées par un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement. Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

Avertissement

L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

Avis

L'indice d'équivalence de la sonnerie (IES) assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface. La terminaison d'une interface téléphonique peut consister en une combinaison de quelques dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.

Glossary

ADF (Automatic Document Feeder)	The mechanism that delivers a stack of original pages to the scanner one page at a time.
Automatic Reception	The mode that allows you to receive fax documents without user intervention.
Auto Print Reduction	The method of automatically reducing a received document so that it can be printed onto a standard size piece of plain paper. For example, your machine will reduce an incoming legal size page to 75% of its original size so it could fit on a letter size page.
Batch Transmission	The ability to accumulate different document files for the same destination(s) to be transmitted in a single phone call.
BPS (Bits Per Second)	The amount of data that is transmitted over the phone line. Your machine can start at the Max. Modem speed and automatically steps down to suitable speed depending on the phone line condition and the receiving machines capabilities. (Max. Modem Speed is 33600 BPS)
C.C.I.T.T.	Consultative Committee on International Telegraph and Telephone. This organization has presently developed four groups of industry standards that insure facsimile compatibility.
Character ID	A programmed proprietary code name that allows up to 16 alphanumeric characters identifying your facsimile machine.
Coding Scheme	The data compression method used by facsimile machines. Your machine utilizes Modified Huffman (MH), Modified Read (MR), Modified Modified Read (MMR) and Joint Bi-level Experts Group (JBIG) coding schemes.
Comm. Journal	Refers to either the Communication Journal, Relay Transmission Report, or the Confidential XMT Report.
Confidential RCV Report	The report that gives you information about a confidential document(s) that is held in your machine's memory.
Contrast	Signifies the scanning sensitivity in terms of lightness and darkness of your original transmitting pages.
Cover Sheet	A Fax Cover Sheet can be attached to your transmit document(s) that shows the recipient's name, originator's name and number of pages attached.
DDD (Direct Distance Dialing)	A telephone service that allows unassisted dialing, no operator assistance is required.
Deferred Polling	The ability to retrieve documents from other stations at a later time.
Deferred Transmission	The ability to send documents to other stations at a later time.
Department Code	This operation require the user to input a preset 4-digit Department Code before transmission. The Department Name of selected Department Code is printed on the Header of each page sent, Cover Sheet, Comm. Journal and Individual Transmission Journal.
Direct Dialing	The method of dialing where you enter the entire telephone number through the keypad.

Glossary

DTMF (Dual Tone Multi-Frequency)	Dialing method that sends a different set of frequencies for each digit of the telephone keypad. Commonly refers to touch tone dialing.
Duplex Scan	The ability to scan both sides of 2-sided original(s) for transmission.
ECM (Error Correction Mode)	The ability to correct transmission errors as detected during the transmitting phone call.
End Receiving Station	In a relay network, the final station designated to receive the document(s).
FAX Parameter List	The list that contains the home Fax Parameter settings that you have programmed into your machine.
F.C.C.	Federal Communications Commission. The U.S. Government organization that regulates communications originating or terminating in the United States.
File	A task that has been stored into the memory of your unit. Examples are deferred transactions.
Fixed Print Reduction	The method that allows you to determine one reduction rate, such as 75%, for all incoming documents.
Function	The control panel key that will be utilized to begin an operation or configuration of a feature.
G3 Mode (Group 3)	Refers to the standards and transmission capabilities of the current generation of facsimile machines.
Group Dialing	The ability to program many telephone numbers into a single station so that many locations can be dialed in sequence utilizing a single keystroke.
Handshaking	The exchange of a group of control signals that communicate between the transmitter and receiver. These signals determine the condition at which communication can occur.
Header	A row of information that is transmitted by the sending machine and printed on the top of each page by the receiving unit. This identifies the transmitting unit and information about the transmission, such as time and date.
ITU-T	International Telecommunication Union - Telecommunication, formerly known as C.C.I.T.T.
ITU-T Image No. 1	An industry standard original that allows comparisons of the transmission speeds and capabilities of facsimile machines.
ID	A programmable address of up to 20 digits identifying your machine.
Image Memory Capacity	This signifies the amount of memory available in your machine for storing pages of documents. All page units of measure are based on the ITU-T Image No.1.
Individual Transmission Journal	A report that is printed by the transmitting unit stating information regarding the last document transaction.
Industry Canada (D.O.C)	Department of Communications. The Canadian Government organization that regulates communications originating or terminating in Canada.
Information Code	A code that is internally generated by your Fax machine stating a specific operational error or machine failure.

Glossary

Initial Sending Station	In a relay network, the station that is originating the original transmission.
Journal	A report that is printed by your unit listing the last 100 transactions.
Keypad	A group of numeric keys located on your control panel.
LCD	Liquid Crystal Display. The display area of your machine.
Manual Reception	A mode that requires operator intervention to receive an incoming document.
Memory Transmission	The documents are scanned into memory before actual connection to the phone line for transmission.
Modem	A device that converts signals from your fax machine into signals that can be transmitted over telephone lines.
Multi-Station Transmission	The ability to broadcast the same set of documents to a programmed number of locations.
Off-Hook Dialing	The direct dialing of a telephone number with the optional handset out of the cradle or "off the hook."
On-Hook Dialing	The direct dialing of a telephone number with the optional handset in the cradle or "on the hook."
One-Touch Dialling	The ability to dial an entire telephone number by pressing one key.
Overlap Printing	Documents too long to be reduced are automatically printed on two pages with approximately 13 mm overlap.
Panasonic Super Smoothing	An electronic image enhancement (Panasonic Super Smoothing) that will create a particular pattern for the improvement of copy quality.
Photo	A scanning technique to distinguish levels of gray from black and white. Your machine can detect up to 256 levels of gray in photo mode.
Polling	The ability to retrieve document(s) from another facsimile machine.
Polling Password	A 4-digit programmed code that enables the security of document(s) being polled.
Print Reduction Modes	The methods used to determine how an incoming document will be reduced to print onto the paper loaded in your machine.
Program Keys	Keys that are defined for storing a sequence of stations to be dialed or polled.
Protocol	A protocol is the special set of rules for communicating that the end points in a telecommunication connection use when they send signals back and forth. Both end points must recognize and observe the protocol.
PSTN	Public Switched Telephone Network. Network of interconnected switching equipment and transmission facilities.
Receiving Password	A 4-digit password that is checked before a document is received.
Relay Transmission Report	A report that contains information regarding the last document transmission to a relay station.

Glossary

Rotation XMT	The document is set as (← ) , the image is rotated by 90° and then transmitted as (← ) .
Selective Reception	A function that can be set so that your unit will receive from only those machines programmed into your dialer.
Station Name	Alphanumeric ID which can be programmed for each One-Touch and Abbreviated dialing number.
Stored Originals	Documents that have been scanned and now are stored in your machine's memory.
Sub-Address	ITU-T recommendation for further routing, forwarding or relaying of incoming faxes.
Sub-Address Password	ITU-T recommendation for additional security that corresponds to the Sub-Address.
Substitute Memory Reception	Your machine's ability to store an incoming document into its memory, when it runs out of recording paper or toner.
Transmission Reservation	The ability to preset a telephone number so that you may reserve a transmission while your unit is performing another function.
Transmission Password	A 4-digit password that is checked when a document is transmitted.
User Parameter	Programmed parameters that provide information to other stations. Examples are logo, character ID, date and time.
Verification Stamp	A user selectable transmission verification stamp that stamps an "X" mark on the scanned documents that are successfully transmitted or stored in memory.
View Mode - File List	Allows you to view the brief contents of the memory files through the LCD display without having to print the Memory File List.
View Mode - Journal	Allows you to view the brief contents of the journal through the LCD display without having to print the journal.

ITU-T Image No. 1

All specifications are based on the ITU-T Image No. 1 (The sample shown below is not to scale).



THE SLEREXE COMPANY LIMITED

SAPORS LANE . BOOLE . DORSET . BH25 8 ER

TELEPHONE BOOLE (945 13) 51617 - TELEX 123456

Our Ref. 350/PJC/EAC

18th January, 1972.

Dr. P.N. Cundall,
Mining Surveys Ltd.,
Holroyd Road,
Reading,
Berks.

Dear Pete,

Permit me to introduce you to the facility of facsimile transmission.

In facsimile a photocell is caused to perform a raster scan over the subject copy. The variations of print density on the document cause the photocell to generate an analogous electrical video signal. This signal is used to modulate a carrier, which is transmitted to a remote destination over a radio or cable communications link.

At the remote terminal, demodulation reconstructs the video signal, which is used to modulate the density of print produced by a printing device. This device is scanning in a raster scan synchronised with that at the transmitting terminal. As a result, a facsimile copy of the subject document is produced.

Probably you have uses for this facility in your organisation.

Yours sincerely,

Phil.

P.J. CROSS
Group Leader - Facsimile Research

INDEX

- A**
- Abbreviated Dialing (Direct Transmission) 51
 - Access Code 31
 - Adjusting the Volume 16
 - Auto Journal Print..... 31
 - Automatic Reception 66
 - Automatic Redialing 64
 - Automatic Reduction 67
- B**
- Basic Transmission Settings 36
 - Batch Transmission..... 71
- C**
- Changing or Erasing the Program Key Settings . 86
 - Changing the Start Time or the Station of a File . 89
 - Character ID..... 19
 - Checking the Telephone Line 156
 - Comm. Journal..... 30
 - Communication Journal (Comm. Journal)... 38, 143
 - Compatibility with Other Machines..... 118
 - Conf. Polled File Save..... 32
 - Confidential Mailbox..... 124
 - Contrast..... 30, 36
 - Control Panel 10
 - Cover Sheet 32, 104
 - Customizing Your Machine 29
- D**
- Deferred Polling 73
 - Deferred Transmission..... 72
 - Delayed Batch Transmission 71
 - Deleting a Confidential Document Stored in Your Machine's Mailbox 130
 - Deleting a File 91
 - Department Code..... 32
 - Diagnostic Password..... 32
 - Dialing Method 30
 - Dialing Method (Tone or Pulse) 13
 - Direct Transmission 49
 - Direct Transmission Reservation 62
 - Distinctive Ring Detector (DRD)..... 100
 - Double-Sided Transmission (Receiving)..... 53
 - Duplex Print..... 33
 - Duplex Scan..... 55
- E**
- Edit File Mode 87
- F**
- Fax Cover Sheet 102, 104
 - Fax Output Tray 32
 - Fax Parameter List..... 149
 - Fax Parameter Table..... 30
 - FCC Notice for User in USA..... 161
 - File Acceptance Report..... 31
 - File List..... 87
 - Fixed Reduction 67
 - Flatbed Scanning 35
 - Function Key 8
- G**
- General Description..... 108, 118, 132
- H**
- Header Format 30
 - Header Print 30
 - How To Load Originals..... 35
- I**
- ID Number 20
 - If You Have Any of These Problems 151
 - Image Memory Capacity 165
 - Incomplete File Save..... 31
 - Individual Transmission Journal (Ind. XMT Journal)..... 139
 - Information Codes 153
 - ITU-T Image No. 1..... 168
- J**
- Journals and Lists 137
- K**
- Key/Buzzer Volume..... 30
- L**
- Line Selection..... 33
 - List Output Tray..... 33
 - Loading Originals 35
 - LOGO 18
- M**
- Manual Number Dialing..... 41
 - Manual Number Dialing (Direct Transmission).... 49
 - Manual Reception 66
 - Manual Redialing..... 64
 - Memory 30
 - Memory Size (Flash Memory) 33
 - Memory Transmission..... 39
 - Memory Transmission Reservation (Multi-tasking)..... 60
- O**
- Off-Hook Dialing..... 58
 - One-Touch/Abbreviated Dialing Numbers..... 21

INDEX

On-Hook Dialing.....	59
Original.....	30
Original (Text/Photo).....	37
P	
Password Communications.....	118
Password Reception.....	120, 122
Password Transmission.....	119
Password-RCV.....	32
Password-XMT.....	32
PC-FAX RCV Mode.....	32
Pin Code Access.....	32
Poll Documents from Another Station.....	77
Polled File Save.....	31
Polling.....	75
Polling a Confidential Document from a Remote Station's Mailbox.....	126
Polling Password.....	31
Power Consumption.....	158
Preparing to be Polled.....	76
Print Margin.....	158
Print Reduction.....	31, 67
Printing a Confidential Document from Your Machine's Mailbox.....	129
Printing a Department Code Journal.....	115
Printing a Department Code List.....	114
Printing a File.....	92
Printing Documents.....	99
Priority Transmission Reservation.....	62
Program Keys.....	78
Q	
Quick Memory XMT.....	32
R	
RCV to Memory.....	31
RCV'D Time Print.....	30
Real-Time Batch Transmission.....	71
Receive Mode.....	31
Receiving a Confidential Document to Your Machine's Mailbox.....	127
Receiving Documents.....	66
Receiving Oversize Documents.....	68
Redialing.....	64
Reduction Ratio.....	31
Resolution.....	30, 36
Ring Pattern Detect (DRD).....	31
Rotated Transmission.....	53
Rotation XMT.....	32
S	
Select RCV.....	32
Selecting the Print Reduction Mode.....	67
Selective Reception.....	117
Sending a Confidential Document to a Remote Station's Mailbox.....	124
Sending a Document with Department Code....	112
Sending Document with Department Code (Voice Mode Transmission).....	113
Sending Document(s) Using Duplex Scan.....	55
Sending Documents.....	39
Setting Duplex Print.....	57
Setting for Group Dialing.....	78
Setting Password Transmission.....	119
Setting RCV To Memory.....	98
Setting Rotation Transmission.....	54
Setting the Date and Time.....	17
Setting the Department Code.....	108
Setting the Fax Parameters.....	29
Setting the Monitor Volume.....	15
Setting Your Character ID.....	19
Setting Your LOGO.....	18
Special Tray.....	33
Stamp.....	30
Stamp at mem. xmt.....	31
Storing a Confidential Document in Your Machine's Mailbox.....	128
SUB-Address Password.....	32
Sub-Addressing.....	132
Substitute Memory Reception.....	69
Substitute RCV.....	31
T	
Timer Controlled Communications.....	72
To erase the settings of One-Touch/ABBR. Dialing number.....	27
To Poll Documents from Another Station.....	77
Transaction Journal.....	137
Transmission Reservation.....	59
Troubleshooting.....	151, 155
U	
Using Password Reception.....	122
Using Password Transmission.....	121
Using the Fax Cover Sheet.....	102
V	
Verification Stamp.....	37, 155
Voice Mode Transmission.....	58
X	
XMT Reduction.....	31

Facsimile Telephone Number Directory

Name

Telephone Number

U.S.A. Only

WARRANTY

“PANASONIC DOCUMENT IMAGING COMPANY MAKES NO WARRANTIES, GUARANTEES OR REPRESENTATIONS, EXPRESSED OR IMPLIED, TO CUSTOMER WITH RESPECT TO THIS PANASONIC COPIER, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

PANASONIC DOCUMENT IMAGING COMPANY ASSUMES NO RISK AND SHALL NOT BE SUBJECT TO LIABILITY FOR ANY DAMAGE, INCLUDING, BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSS OF PROFITS SUSTAINED BY THE CUSTOMER IN CONNECTION WITH THE USE OR APPLICATION OF THIS PANASONIC COPIER. SEE YOUR DEALER FOR DETAILS OF DEALER'S WARRANTY.”

For Service, Call: _____

Panasonic Document Imaging Company
A Division of Matsushita Electric Corporation of America
Two Panasonic Way
Secaucus, New Jersey 07094

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga,
Ontario L4W 2T3

T1000-0
DZSD001197-0
October 2000
Printed in Japan

English