


Panasonic®


Numeric Pager

EP-2P Series

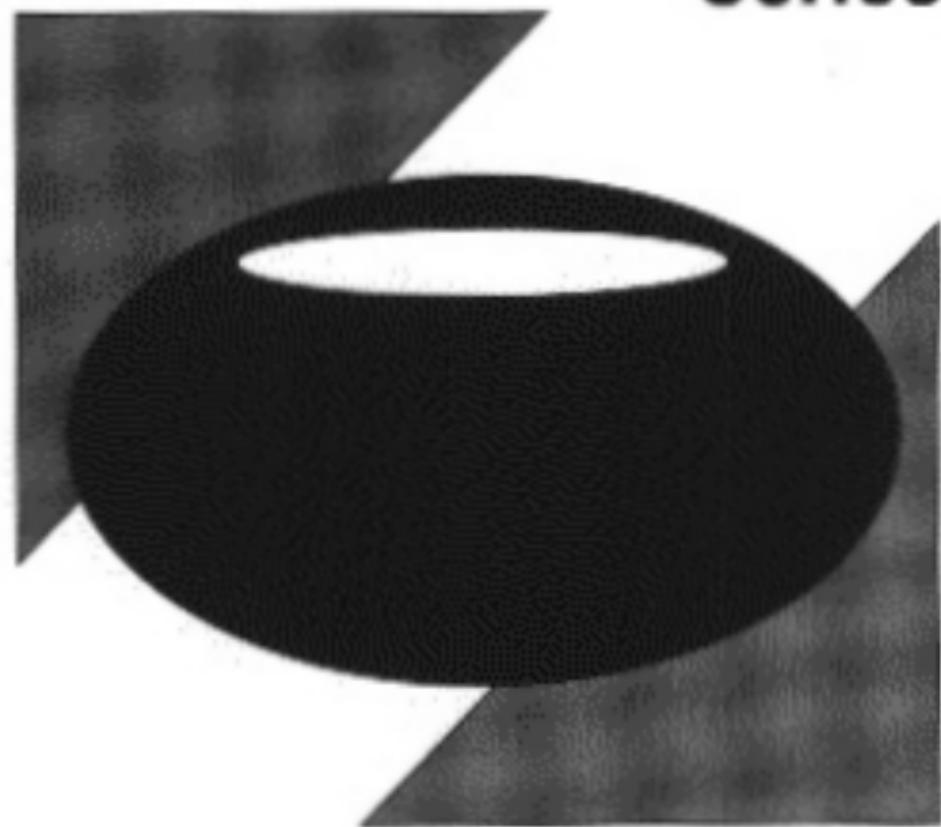

Operating Instructions

Before operating this pager, please read these instructions completely.

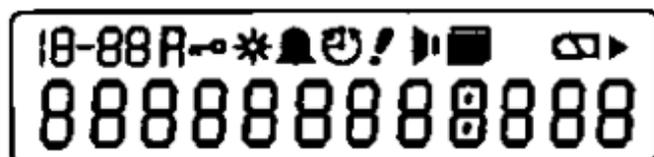

18-88R

Time message was received

Alarm Time

Automatic Off/On Time



Message is locked (saved)



Message(s) can be deleted



Alarm is set



Automatic Off/On is set



Long Period Alert is set



Alert is set to audible



Message is a duplicate



Battery needs replacing




Message continues on next page

000000000000


Message area

Current time and date are shown
on Standby display

OPTIONAL ACCESSORY

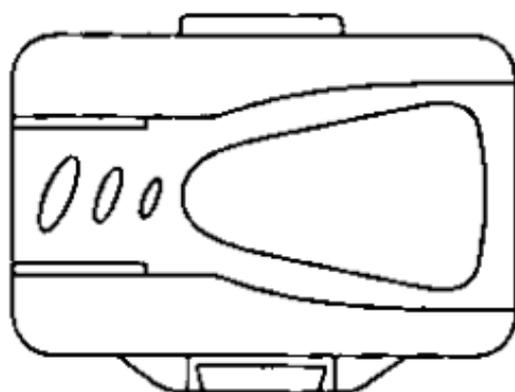


Front View Hard Case

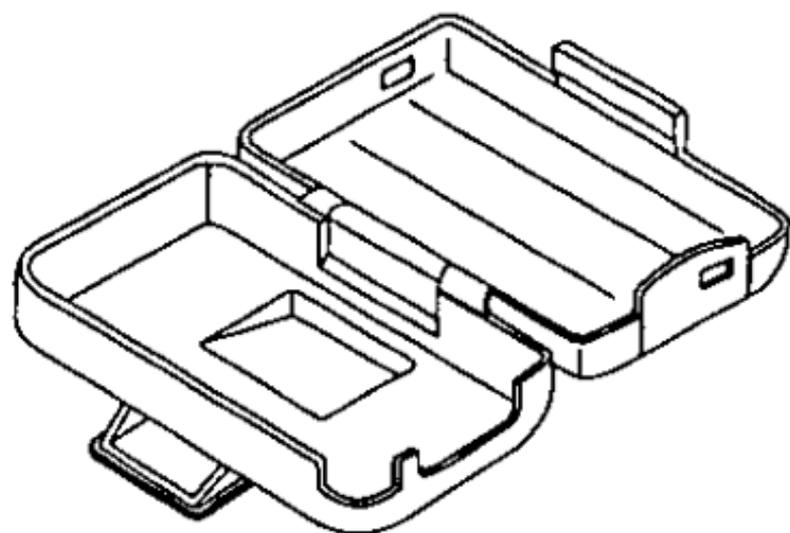

Hard Case Opened

**(Hard Case available at your
local dealer.)**

PAGER OVERVIEW

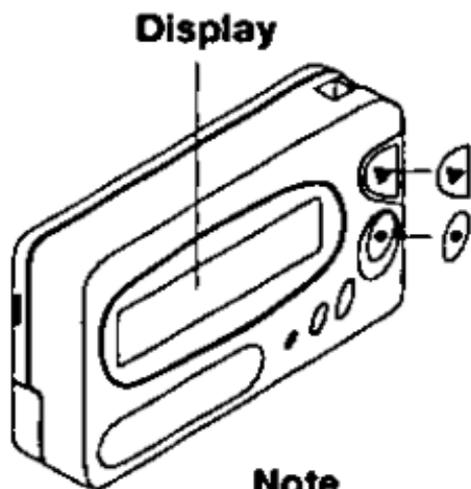

Note

A carry holster is provided

Battery Cover



Alert Speaker

CONTENTS

Congratulations on your purchase of the Panasonic Numeric Display EP-2P Pager! Please read this booklet carefully before using your pager.

**Pager Overview
and Accessories Front cover fold-out**

**Precautions and
Reference Card Back cover fold-out**

Basic Operation

Low Battery Alert	2
Replacing Battery	3
Turning On Pager	4
Turning Off Pager	5
Receiving Messages	6
Reviewing Messages	7
Locking Messages	8
Unlocking Messages	9


Advanced Operation

Setting Alert Type	10
Setting Beep Pattern	11
Setting Long Period Alert (LPA)	12
Setting Alarm	13
Setting Automatic Off/On	15
Deleting One Message	18
Deleting All Messages	19
Setting Time/Date	20

BASIC OPERATION

LOW BATTERY ALERT

When the battery needs to be replaced, an alert tone sounds for eight seconds, or until you press either button

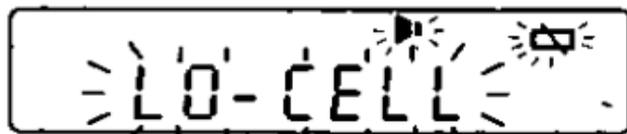


- **LO-CELL** and all active icons will flash on the display

The display will continue to show  until the battery is replaced

NOTE:

- One AAA battery is required
- Turn off pager before replacing battery
- Pager memory is maintained during replacement for a short period, but removing the battery for extended periods may cause memory to return to initial settings
- If you will not be using your pager for at least a month, remove the battery


REPLACING BATTERY

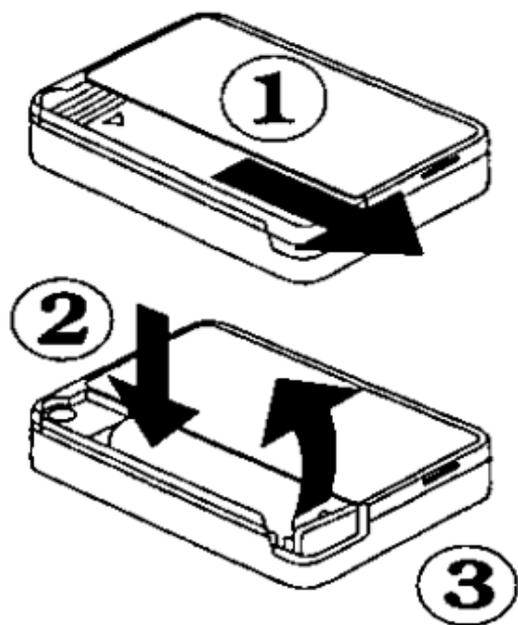

- 1 Slide battery cover in direction of arrow
- 2 Push the negative (-) side of the battery down
- 3 The positive (+) side of the battery will come up for easy removal

TURNING ON PAGER


- 1 Press and hold 
 - The pager vibrates or beeps, and all icons appear on the display

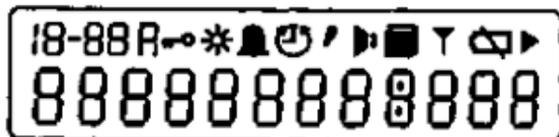

- 2 Press  or  to stop the alert
or


The alert will stop automatically after five seconds

- 3 Date and time are indicated on the standby display

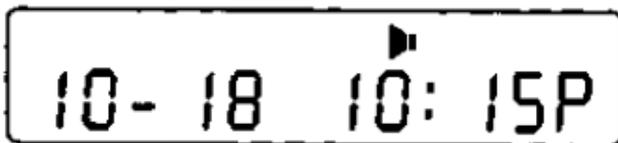

TURNING OFF PAGER


- 1 From standby, press and hold  until **OFF** is displayed

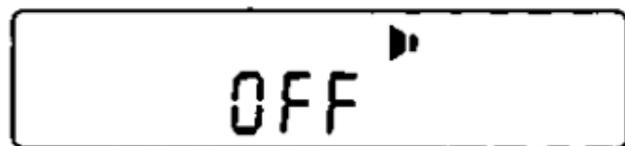

- 2 Press  to turn off the pager

RECEIVING MESSAGES

- 1 Leave the pager on to receive messages
- 2 When receiving, the pager vibrates or beeps Press  or  to stop the alert

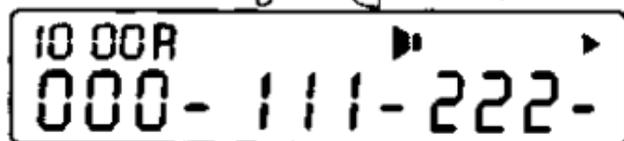


- Display lights to reveal message
The time the message was received is displayed
 - **A** means a m , **P** means p m
 -  indicates message continues on next screen
 - A received message remains on the display until you press either button
- 3 Press  to view next screen (or press  to return to standby)
 - If the message is not continued on a second screen, pressing either button returns the pager to standby
 - 4 When you have viewed the second screen, press  or  to return to standby
 - If neither button is pressed, display will return to standby after 16 seconds


REVIEWING MESSAGES

- 1 (Press  and hold from standby to light display)


- 1 From standby, press 

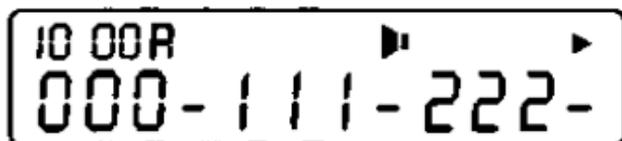

- The most recent message is displayed. The time and date the message was received alternate on the display.
- 2 Press  to view next message
- 3 After reviewing all messages, the display indicates the percentage of memory used for messages

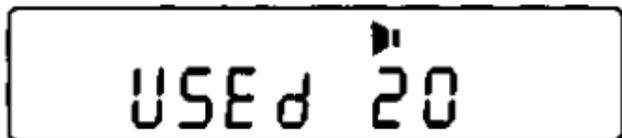

- 4 If pager has no messages

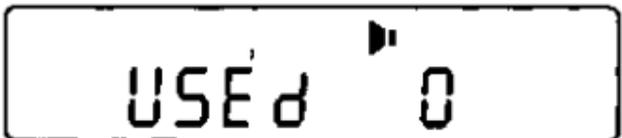

- 5 Press  or  to return to standby or
Display will return to standby after 16 seconds

LOCKING MESSAGES

Your pager can hold up to 23 messages in temporary memory. If memory is full, the oldest message is deleted when a new message is received. To avoid losing a message, you can lock up to eight messages.

1. With the message displayed, press .




-  and message will flash.
2. Press  to lock the message.
 -  will be displayed when locked, and message will stop flashing.
 3. If **FULL** is displayed, eight messages are already locked.
 - In this case, unlock an old message before locking a new one.

Note:

Locked messages will remain locked for 31 days.


UNLOCKING MESSAGES

- 1 With locked message displayed, press 

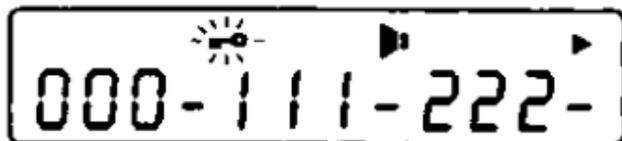

-  will flash

- 2 Press  to unlock message

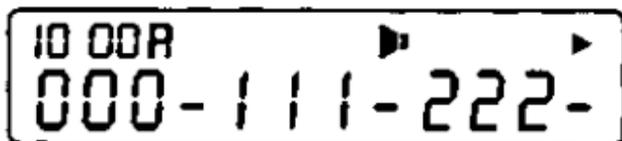

-  will disappear


Note

Locked messages will automatically
be unlocked after 31 days

ADVANCED OPERATION

SETTING ALERT TYPE

- 1 From standby, press  until **SET ALERT** or **SET VIBRATE** is displayed
 - If the pager is set to beep when a message is received, **SET VIBRATE** is shown on the display
 - If the pager is set to vibrate when a message is received, **SET ALERT** is shown on the display
- 2 Press  to change current alert and save to new setting
- 3 Display will return to standby

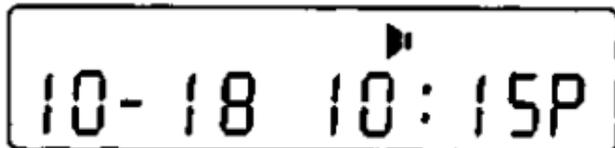


-  is displayed on standby if pager is set for beep

SETTING BEEP PATTERN

(This feature is displayed only when alert is set to beep See page 10 to set alert)

- 1 From standby, press  until **SET BEEP** is displayed

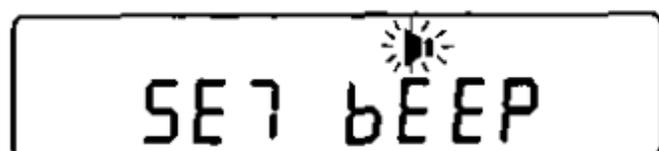

- 2 Press  to display beep setting and to hear a sample beep tone




- 3 Press  to review available settings and tones
 - There are four tone patterns to select from
- 4 When the desired setting sounds, press  to save and return to standby

SETTING LONG PERIOD ALERT (LPA)

When this feature is set and a page is received, an initial two-second alert will sound, followed by a shorter alert every minute for up to 12 hours, or until  or  is pressed

- 1 From standby, press  until **LPA On** or **LPA OFF** is displayed
- 2 Press  to change current setting and to save new setting

Display will return to standby

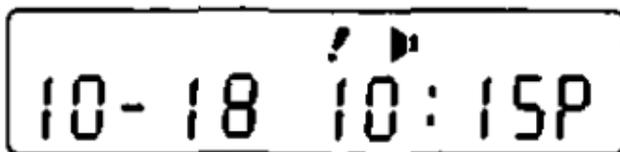

-  will be displayed if LPA is on

Note

A received message remains on the display until you press either button to stop the alert

SETTING ALARM

- 1 From standby, press  until **AL On** is displayed



- The alarm icon will flash

- 2 Press 



- Hour digits and **A** or **P** will flash
- Press  to set the hour

- 3 Press  and the minutes will flash

- Press  to set the minutes

- 4 Press  and new alarm time will flash

- 5 If setting is correct, press  to save and return to standby

or

Press  to return to the hour setting

or

Display will return to original standby setting after 16 seconds

Note


Press and hold  to change figures quickly

Turning Alarm Off

- 1 Press  until **AL OFF** is displayed
- 2 Press 



-  and **OFF** will flash
 - To cancel and return to previous display, press 
- 3 Press  to turn alarm off and return to standby

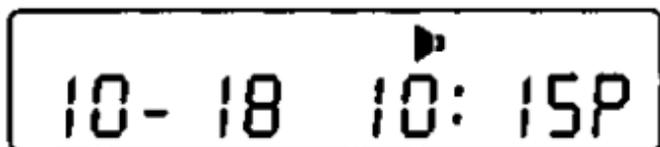

-  and setting time disappear from display


or

Display will return to standby after 16 seconds with the alarm still on


SETTING AUTOMATIC OFF/ON

(Automatic ON will function only when pager is turned off using automatic OFF feature)

- 1 From standby, press  until **AUTO On** is displayed
- 2 Press  to set **OFF** time

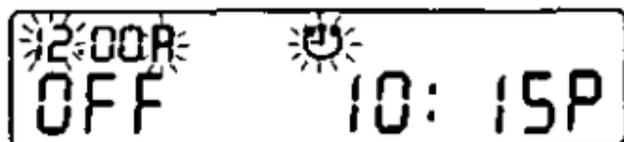


- Hour digit(s) and **A** or **P** flash
 - Press  to set the hour
- 3 Press  and minutes flash
 - Press  to set minutes
 - 4 Press  to set automatic **ON** time

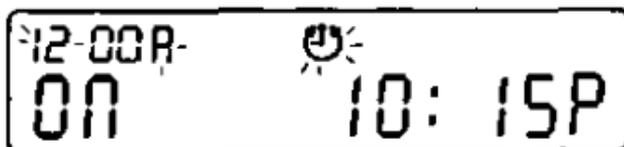


- Hour digit(s) and **A** or **P** flash
 - Press  to set the hour
- 5 Press  and minutes flash
 - Press  to set minutes


- 6 Press  to confirm your setting
- If correct time is displayed, press  to save

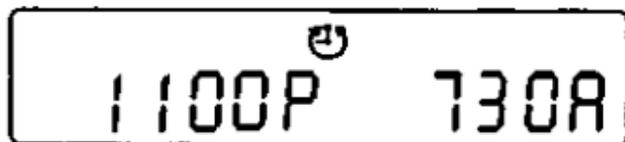

- **OFF** time will be displayed to the left and **ON** time will be to the right
- 7 Press  or  to return to standby, or display will return to standby after three seconds
- **OFF** time will appear at upper left
 - If the alarm is also set, **OFF** time will be displayed preferentially
- 8 When **OFF** time arrives, pager turns off, and **ON** time is displayed

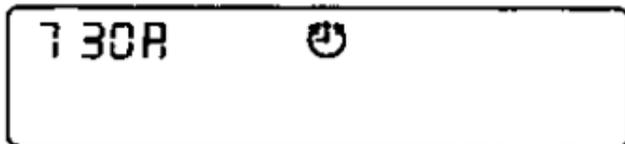

- 9 When **ON** time arrives, pager turns on

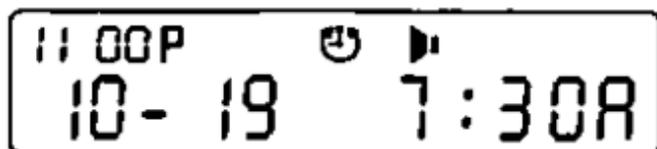

- **OFF** time is displayed at upper left

Note

If the alarm is set during the pager's **OFF** time, the alarm will not go off

Turning Off Automatic Off/On

- 1 From standby, press  until **AUTO OFF** is displayed
- 2 Press 




-  and **OFF** flash
- 3 Press  to turn feature off and return to standby

or

Display will return to standby after 16 seconds

DELETING ONE MESSAGE

- 1 With message displayed, press  twice

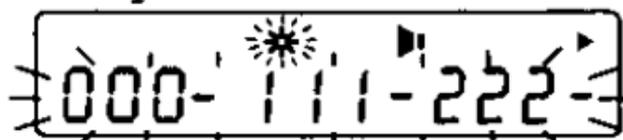

-  and message flash
- 2 Press  to delete message, the next message will be displayed
- or**
- Press  to cancel and return to step 1
- or**
- Display will return to standby after 16 seconds


Note

Locked messages also can be deleted

DELETING ALL MESSAGES

(This feature will be skipped if no messages are stored)

- 1 From standby, press  until **dELETE ALL** is displayed
- 2 Press 

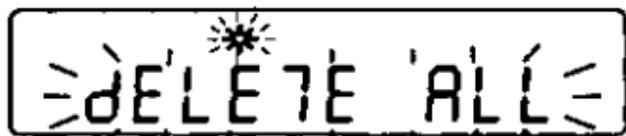


-  and **dELETE ALL** flash
- 3 Press  to delete all messages and return to standby
- or
- Press  to cancel and return to step 1
- or
- Display will return to standby after 16 seconds

Note

All messages except locked ones will be deleted when using this feature

SETTING TIME/DATE

- 1 From standby, press  until **SET TIME** is displayed

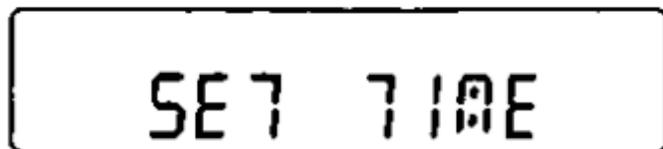

- 2 Press , the month flashes
- Press  to set the month
- 3 Press , the date flashes
- Press  to set the date
- 4 Press , the hour flashes
- Press  to set the hour
- 5 Press , the minutes flash
- Press  to set the minutes
- 6 Press , your setting will flash
- 7 Press , to save and return to standby

or

Display will return to standby in 60 seconds

PRECAUTIONS:

- Avoid extreme temperatures. Operating temperature is from 14°F to 131°F (-10°C to 55°C).
- In extremely cold conditions (i.e., below 32°F or 0°C), it may be difficult to see the display characters.
- Do not expose your pager to excessive sunlight, liquids, high humidity, or dusty conditions.
- Do not drop or strike your pager.
- Use a soft cloth moistened with mild soap to clean your pager. Do not use petroleum-based cleaners or similar-type chemicals such as benzine or thinner.
- Remove the battery when your pager will not be used for more than one (1) month.

FCC WARNING: To assure continued FCC emission limit compliance, the user shall not make any unauthorized changes or modifications to this equipment. Failure to follow these instructions voids the user's authority to operate this device.

This device complies with Part 15 of FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

**PANASONIC TELECOMMUNICATION SYSTEMS
COMPANY**
**Division of Panasonic Communications & Systems
Company**

Two Panasonic Way, Panazip 7D-1
Secaucus, NJ 07094
Tel (201) 348-7000

Printed in U S A

221X08401

EP-2P SERIES PAGER

Quick Reference

When **LO-CELL** is displayed and alert tone sounds, turn off pager and replace battery ("AAA").

TURNING PAGER ON/OFF:

ON: Press and hold θ .

OFF: From standby, press θ until **OFF** appears. Press θ .

RECEIVING MESSAGES:

Pager must be on. Incoming message is displayed and alert occurs. Press θ to view additional text (if any).

REVIEWING MESSAGES:

From standby, press θ . Last message received is displayed first. Press θ to view next message.

To exit from final screen (**USE d**), press either button.

LOCKING/UNLOCKING MESSAGES:

LOCK: Display message and press θ .

Press θ . **UNLOCK:** Display locked message and press θ . Press θ to unlock message. Press θ to view next message.

EP-2P SERIES PAGER

Quick Reference

ADVANCED OPERATION:

From standby, press **4** to access advanced features.

Advanced features will appear in the following order:

- **Alert Type** (sound, vibrate)
- **Beep Pattern**
- **Long Period Alert** (on, off)
- **Alarm** (on, off)
- **Automatic Off/On** (on, off)
- **Deleting All Messages**
- **Time/Date**

Refer to the Operating Instructions for more information.

Panasonic®