

Panasonic

Telephone Answering System
with Facsimile

KX-F170

Model No. **KX-F170C**

Operating Instructions




The picture shows the U.S.A. model.

Please read these Operating Instructions before using the product.

Thank you for purchasing the Panasonic Telephone Answering System with Facsimile. Before using the unit, please read these Operating Instructions completely. You can then install and operate the unit properly. This unit combines multiple functions of Facsimile, Answering Device and Telephone; You can send and receive voice-messages and documents on a single line.

Getting help from your unit

The unit is equipped with the HELP function. Use this function if the instructions are lost while using the unit. It will provide the user with instructions.

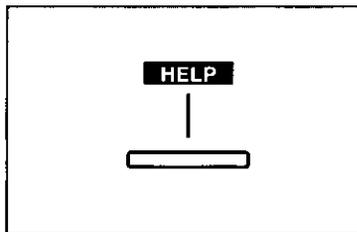

If the **HELP** button is pressed

- while programming, the unit will print the relevant programming instructions.
- in idle status, the unit will print information on how to send documents, how to set up, how to store phone numbers, etc.

For the United States

Caution

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such a message clearly contains in a margin on the top or bottom of at least the first sent page the following information:

- 1) Date and time of transmission; and,
- 2) Identification of either business, business entity or individual sending the message; and,
- 3) Telephone number of either the sending machine, business, business entity or individual.

In order to program this information into your facsimile machine, you must complete the steps on pages 1-20 to 1-24 in these Operating Instructions.

Important Phone Numbers

Authorized Service Center: 1-800-545-2672
Accessory Purchases: 1-800-332-5368
Technical Support: 1-800-HELP-FAX

Warning:

To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.

Any details given in these instructions are subject to change without notice.

Features

Multi-function system using one telephone line

General

- Desktop type
- LCD readout
- Super thermal
- Paper Curl Reduction Technology
- Automatic voice/facsimile switching
- Silent ring fax recognition system
- Copier function
- Help function

Facsimile

- 15-second transmission speed*
- Sends/receives 216 mm (8½")×600 mm (23½") pages at ITU-TS G3
- Automatic document feeder (up to 10 pages)
- One-touch sending buttons
- 16-level halftones
- Resolution: standard/fine/super fine/halftone
- Delayed transmission
- Network passcode communication
- Junk mail prohibitor
- Paper save function
- Extension copy
- Overseas transmission mode

*Transmission times apply to text data using ITU-TS No. 1 test chart, between same machine models at maximum modem speed. Transmission times vary in actual usage.

Answering Device

- Recordable greeting message chip
- Auto-Logic operation for one-touch message playback
The unit automatically plays back all recorded messages or the new messages at the touch of the ALL MESSAGES or the NEW MESSAGES button and stops at the end of the last message, then resets to answer and record the next call.
- Remote control from touch tone telephone
- Message memo recording
- New message playback

Integrated Telephone System

- Electric telephone directory
- 12-station one-touch dialer
- 20-station speed dialer
- Hands-free speakerphone with mute

Four types of receiving modes

This unit provides the following types of receiving modes.

Depending on your situation, select the desired mode.

ANS/FAX (Answering device/Facsimile) mode:

When you are out of the office, and you wish to use the unit as a telephone answering device and a facsimile machine, select this mode.

The unit will automatically record a voice message and/or receive a document during your absence when a call comes in.

You should record your greeting message in the unit before using this mode.

TEL/FAX (Telephone/Facsimile) mode:

When you are in the office, and you wish to use the unit as a standard telephone and a facsimile machine, select this mode.

The unit will automatically receive a document when a fax call comes in.

You can use the unit as a standard telephone when you answer a call during ringing.

You cannot use the answering device feature provided.

FAX (Facsimile) mode:

When you wish to use the unit as a facsimile machine only, select this mode.

When a fax call comes in, the unit will automatically receive a document.

When a voice call comes in, the unit will emit a fax tone to the calling party, and you cannot talk to the other party.

Also you cannot use the answering device feature provided.

TEL (Telephone) mode:

When you wish to use the unit as a standard telephone, select this mode.


If you receive a fax call, you are able to receive a document manually. Automatic fax reception is not available.

Also you cannot use the answering device feature provided.


But the unit will be able to change to the ANS/FAX mode from the TEL mode automatically when the unit rings fifteen times.

Precaution


Keep the unit away from heating appliances such as radiators or air conditioning units.

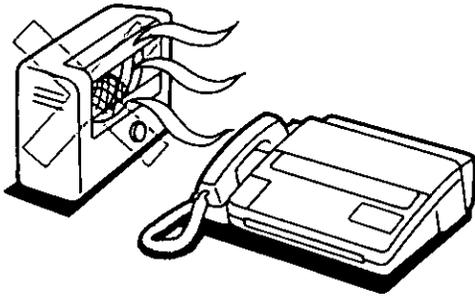


Keep the unit away from electrical noise generating devices such as fluorescent lamps and motors.

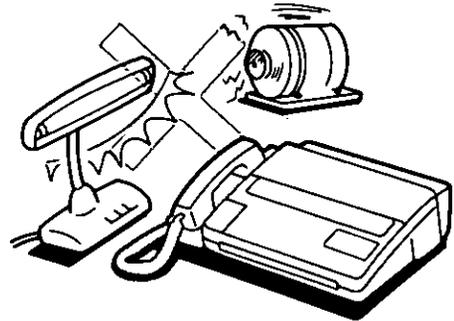


The unit and the cassette tape should not be exposed to direct sunlight.

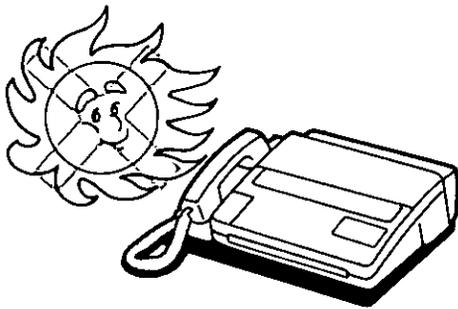

The unit and the cassette tape should be kept free from dust, moisture, high temperature and vibration.

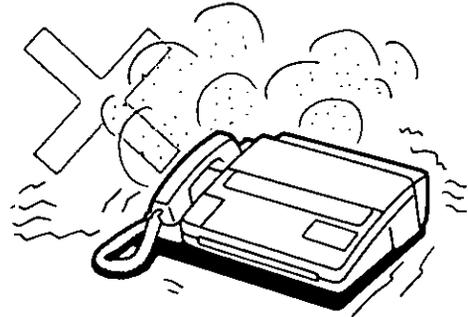

Do not use benzine, thinner, or the like, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.

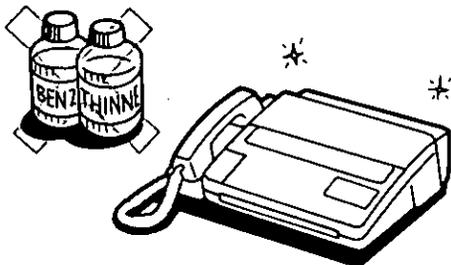

Do not place any covering over the unit while it is turned on.

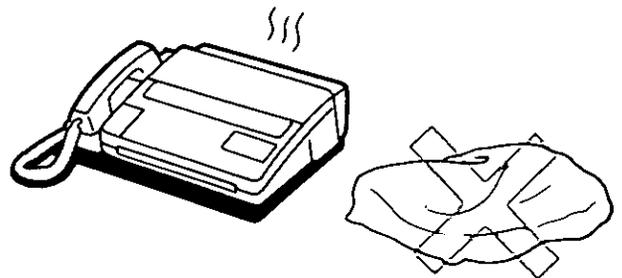


Table of Contents

Chapter 1 Installation and Initial Preparation

Location of Controls	1-2
Front view	1-2
Rear view	1-3
Side view	1-3
Buttons and Indicators	1-4
Installing Your Unit	1-7
Accessories	1-7
Installation connections	1-8
Installing the microcassette tape	1-9
Installing the recording paper	1-10
Setting selectors	1-12
Turning the POWER switch on	1-13
Recording Your Greeting Message	1-14
Suggested message	1-14
Recording a greeting message	1-15
Checking your greeting message	1-15
Selecting the Receiving Mode	1-16
Setting Up Your Facsimile Unit	1-18
System setup features	1-18
Setting date and time	1-20
Setting your logo	1-22
Programming your facsimile telephone number	1-24
Your fax document identifiers	1-25
Individual transmission report setting	1-26
Selecting the number of rings to answer in the ANS/FAX mode	1-28
Selecting the number of rings to answer in the FAX mode	1-30
Selecting the caller's recording time	1-31
Setting the remote code (REMOTE ANS ID) for remote operation	1-32
HELP Function—If you have lost your procedures—	1-33
Using the HELP button	1-33

Chapter 2 Basic Instructions

Facsimile and Copier

Before Transmitting Documents	2-2
Acceptable documents	2-2
Documents you cannot send	2-2
Resolution and contrast	2-3
Loading documents	2-3
Transmitting Documents	2-4
Manual transmission	2-4
Adding extra pages	2-5
Receiving Documents and/or Voice Calls	2-6
Manual reception	2-6

Automatic reception	2-7
Receiving in the ANS/FAX mode	2-7
Receiving in the TEL/FAX mode	2-8
Receiving in the FAX mode	2-8
Making a Copy	2-9
<i>Answering Device</i>	
Operating as an Answering Device	2-10
Setup of voice message and document reception	2-11
Listening to newly recorded messages	2-11
Listening to all the recorded messages	2-12
Recording after the messages you want to save	2-12
Monitoring incoming calls	2-13
Recording a memo message	2-13
Recording a telephone conversation (2-way recording)	2-14
<i>Telephone</i>	
Making and Answering Voice Calls	2-15
Making voice calls	2-15
Redialing the last dialed number	2-16
Answering voice calls	2-16

Chapter 3 Intermediate Instructions

Storing Phone Numbers for Automatic Dialing	3-2
Listing the directory card	3-2
Storing phone numbers for one touch dialing	3-3
Storing phone numbers for speed dialing	3-4
Storing secret phone numbers	3-5
Erasing a stored phone number	3-6
<i>Facsimile</i>	
Transmitting Documents Using Automatic Dialer	3-7
<i>Telephone</i>	
Making Voice Calls Using Automatic Dialer	3-8

Chapter 4 Advanced Instructions

<i>Facsimile and Copier</i>	
Delayed Transmission	4-2
Network Communication	
Using a passcode	4-5
Programming the main passcode	4-6
Turning the TX passcode check on	4-7
Turning the RX passcode check on	4-8
Junk Mail Prohibitor	4-9
Turning on the junk mail prohibitor	4-9
Transmitting documents to your unit with a special code	4-11

Remote Fax Receiving Using an Extension Phone	4-12
Using an extension phone	4-12
Programming a remote fax activation code	4-13
Receiving with Distinctive Ring Service	4-14
Programming the unit with distinctive ringing pattern	4-15
Using Overseas Transmission Mode	4-16
Setting the Logo Print Position	4-17
Setting the Paper Save Function	4-18
Extension Copy	4-20
<i>Answering Device</i>	
Operating the Answering Device from a Remote Phone	4-22
Summary of remote control functions	4-22
Playing back newly recorded messages (Memory playback)	4-23
Playing back all messages	4-23
Back space and skip forward	4-24
Recording a marker message	4-24
Resetting the tape for future messages	4-25
Answer back	4-26
Skipping the greeting message for incoming message recording mode	4-26
Re-recording a greeting message	4-27
Setting the Message Alert	4-28
<i>Telephone</i>	
Voice Contact	4-29
Initiating voice contact	4-29
Receiving a request for voice contact	4-29
TONE, FLASH and PAUSE Button Usage	4-30
TONE button (Temporary tone dialing)	4-30
FLASH button	4-30
PAUSE button	4-31
Combination dialing	4-31
<i>Other Features</i>	
Setting Day/Night Mode	4-32
Setting the Silent Fax Recognition Ring	4-34
Resetting the Setup Features	4-35

Chapter 5 Printing Reports and Lists

Activity Report (JOURNAL Report)	5-2
Setting the JOURNAL AUTO PRINT	5-3
Printing a JOURNAL report manually	5-4
List of Stored Phone Numbers (TELEPHONE NUMBER LIST)	5-5
Printing a TELEPHONE NUMBER LIST	5-6
Basic Feature List	5-7
Advanced Feature List	5-8

Chapter 6 General Information

Troubleshooting	6-2
Error code	6-2
General corrective measures	6-3
Clearing a document jam	6-6
Clearing a recording paper jam	6-7
Maintenance	6-8
Cleaning the microcassette compartment	6-8
Cleaning the document feeder unit	6-9
Cleaning the thermal head	6-9
Printing a test pattern	6-10
Display Indications	6-11
Accessory Order Information	6-12
Specifications	6-13
For Users in the United States	6-14
For Users in Canada	6-16
Index	6-18

Chapter 1

Installation and Initial Preparation


Table of contents

Location of Controls	1-2
Front view	1-2
Rear view	1-3
Side view	1-3
Buttons and Indicators	1-4
Installing Your Unit	1-7
Accessories	1-7
Installation connections	1-8
Installing the microcassette tape	1-9
Installing the recording paper	1-10
Setting selectors	1-12
Turning the POWER switch on	1-13
Recording Your Greeting Message	1-14
Suggested message	1-14
Recording a greeting message	1-15
Checking your greeting message	1-15
Selecting the Receiving Mode	1-16
Setting Up Your Facsimile Unit	1-18
System setup features	1-18
Setting date and time	1-20
Setting your logo	1-22
Programming your facsimile telephone number	1-24
Your fax document identifiers	1-25
Individual transmission report setting	1-26
Selecting the number of rings to answer in the ANS/FAX mode	1-28
Selecting the number of rings to answer in the FAX mode	1-30
Selecting the caller's recording time	1-31
Setting the remote code (REMOTE ANS ID) for remote operation	1-32
HELP Function	
—If you have lost your procedures—	1-33
Using the HELP button	1-33


When the display shows "E-XX", see page 6-2 for corrective measures.

Location of Controls


Front view

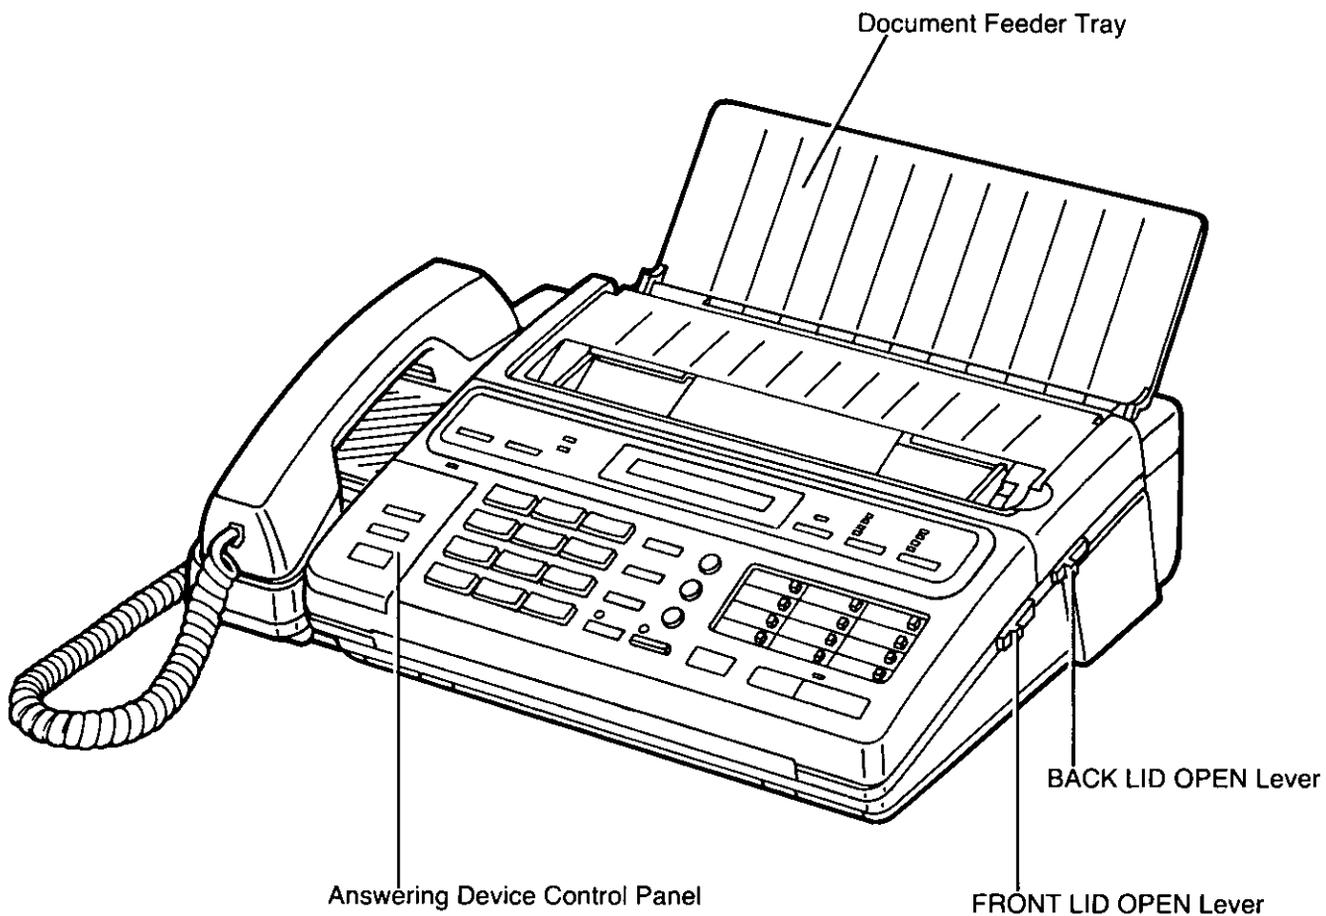



Rear view

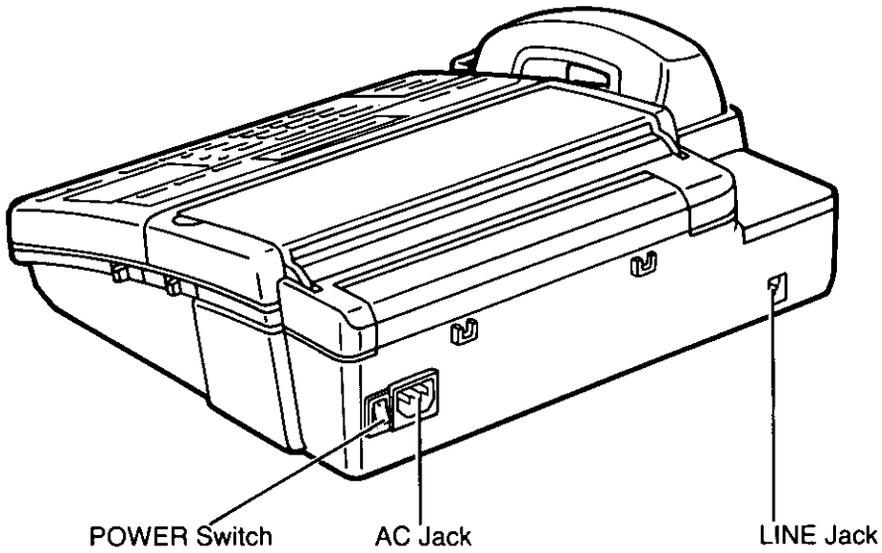

Side view

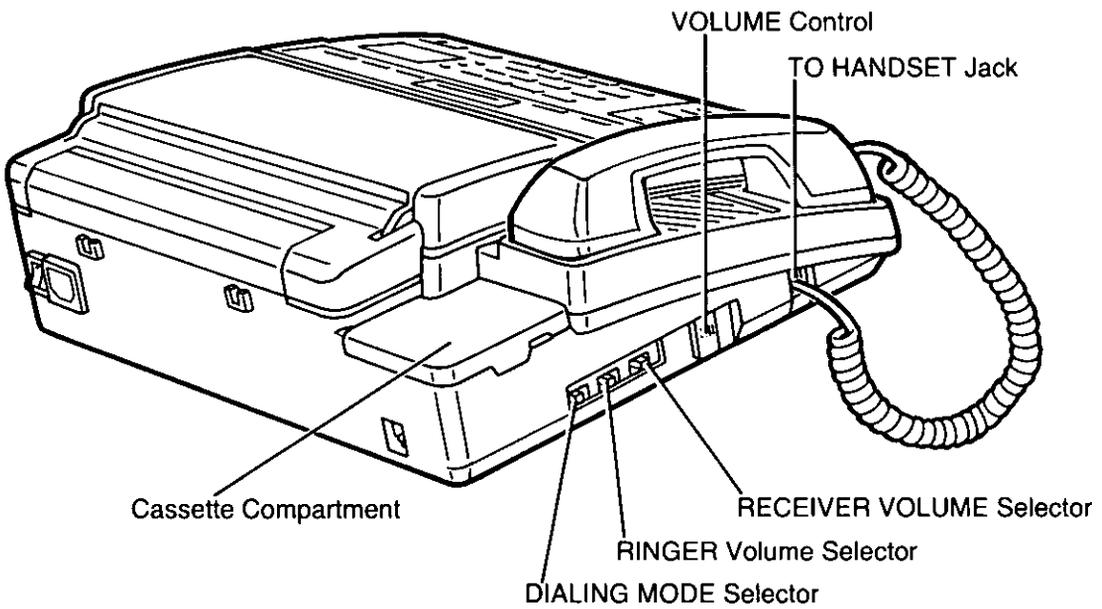

Buttons and Indicators

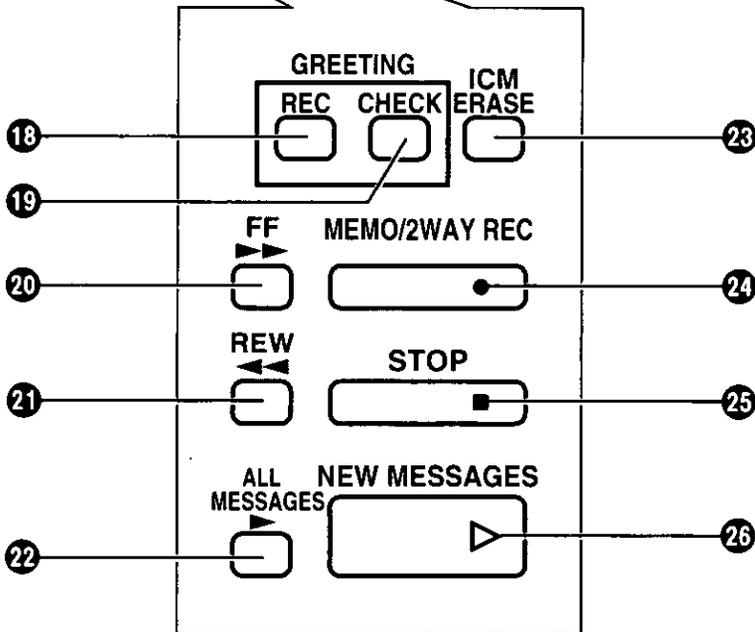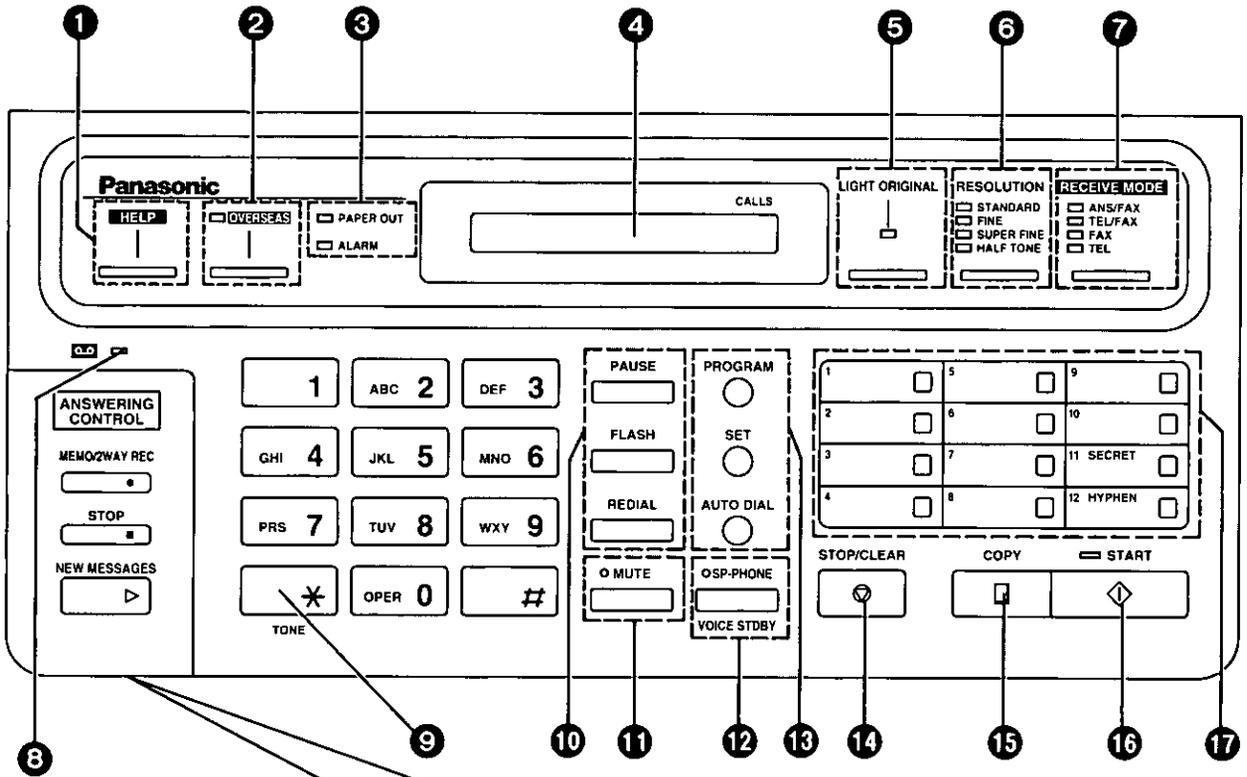

- 1 HELP Button:**
Page 1-33

Used to print an easy guide of programming procedures.
- 2 OVERSEAS Button and Indicator:**
Page 4-16

Used for overseas facsimile transmission. The indicator lights when this feature is on.
- 3 PAPER OUT Indicator:**
Page 1-11

The indicator lights when the recording paper roll is empty.
- ALARM Indicator:**
Page 1-13

The indicator lights when any trouble occurs.
- 4 LCD (Liquid Crystal Display)**
- 5 LIGHT ORIGINAL Button and Indicator:**
Page 2-3

Used to transmit or copy originals with faint writing. The indicator lights when this feature is on.
- 6 RESOLUTION Button and Indicators:**
Page 2-3

Used to adjust scanning line density. The indicators light to show which setting you are using.
- 7 RECEIVE MODE Button and Indicators:**
Pages 1-16 and 2-7

Used to select the desired receiving mode. The indicators light to show the mode in which the unit is set.
- 8  Indicator:**
Page 2-10

The indicator flashes when any new incoming messages have been recorded.
- 9 TONE Button:**
Page 4-30

Used to change the dialing mode from pulse to tone during a dialing operation.
- 10 PAUSE Button:**
Page 4-31

Used to insert a pause into a phone number during programming.
- FLASH Button:**
Page 4-30

Used to access some features of your host PBX.
- REDIAL Button:**
Page 2-16

Used to redial the last dialed number.
- 11 MUTE Button and Indicator:**

Used when you do not want your voice to be heard by the other party. The voice of the calling party will still be heard. The indicator lights when this feature is on.
- 12 SP-PHONE (VOICE STDBY) Button and Indicator:**
Pages 2-4, 2-15 and 4-29

Used for on-hook dialing and voice contact features. The indicator lights when these functions are on.
- 13 PROGRAM Button:**
Page 1-20

Used to start or end programming functions.
- SET Button:**
Page 1-20

Used to store parameters during programming.
- AUTO DIAL Button:**
Pages 3-4 to 3-8

Used for speed dialing.


- | | |
|---|--|
| 14 STOP/CLEAR Button:
Pages 1-21, 2-5 and 2-6 | Used to cancel transmission or copying operation. Also used during programming to clear the previously entered parameters. |
| 15 COPY Button:
Page 2-9 | Used to start copy functions. |
| 16 START Button and Indicator:
Pages 2-4 and 2-6 | Used to start transmission or print lists and reports. The indicator lights when these functions are on. |
| 17 Direct Call Station Keys:
Pages 3-2, 3-3 and 3-7 | Used for one touch dialing. |
| 18 REC Button:
Page 1-15 | Used to start and stop recording of a greeting message. |
| 19 CHECK Button:
Page 1-15 | Used to replay your greeting message. |
| 20 FF (Fast Forward) Button:
Page 2-10 | Used to run the tape quickly forward to a desired point. |
| 21 REW (Rewind) Button:
Pages 2-10 and 2-11 | Used to run the tape quickly backward to a desired point. |
| 22 ALL MESSAGES Button:
Page 2-12 | Used to play back all the recorded messages. |
| 23 ICM ERASE Button:
Page 2-10 | Used to erase recorded incoming messages at high speed. |
| 24 MEMO/2WAY REC Button:
Pages 2-13 and 2-14 | Used to start and stop recording of a memo message or a telephone conversation. |
| 25 STOP Button:
Page 2-10 | Used to stop operations of answering device. |
| 26 NEW MESSAGES Button:
Page 2-11 | Used to play back only new messages. |

Installing Your Unit


Accessories

1. Carefully remove the unit from the packing carton.
2. Examine the unit for signs of shipping damage.
3. Check that all of the enclosures are included. If you are missing any item, consult your place of purchase.


Telephone Line Cord 1

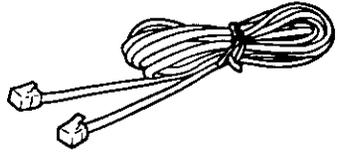

AC Power Cord 1

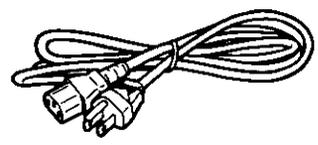


Microcassette Tape 1

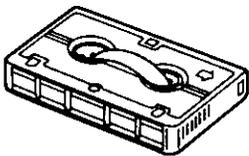


Recording Paper 1
(Super Thermal Paper)




Handset 1

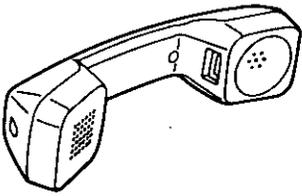


Handset Cord 1

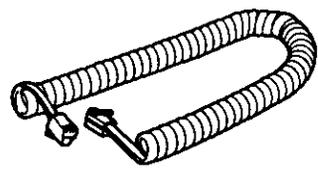

Paper Roll Holders (Green) 2
(For the recording paper with 1/2 inch core)

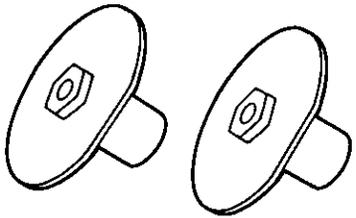

Installation connections

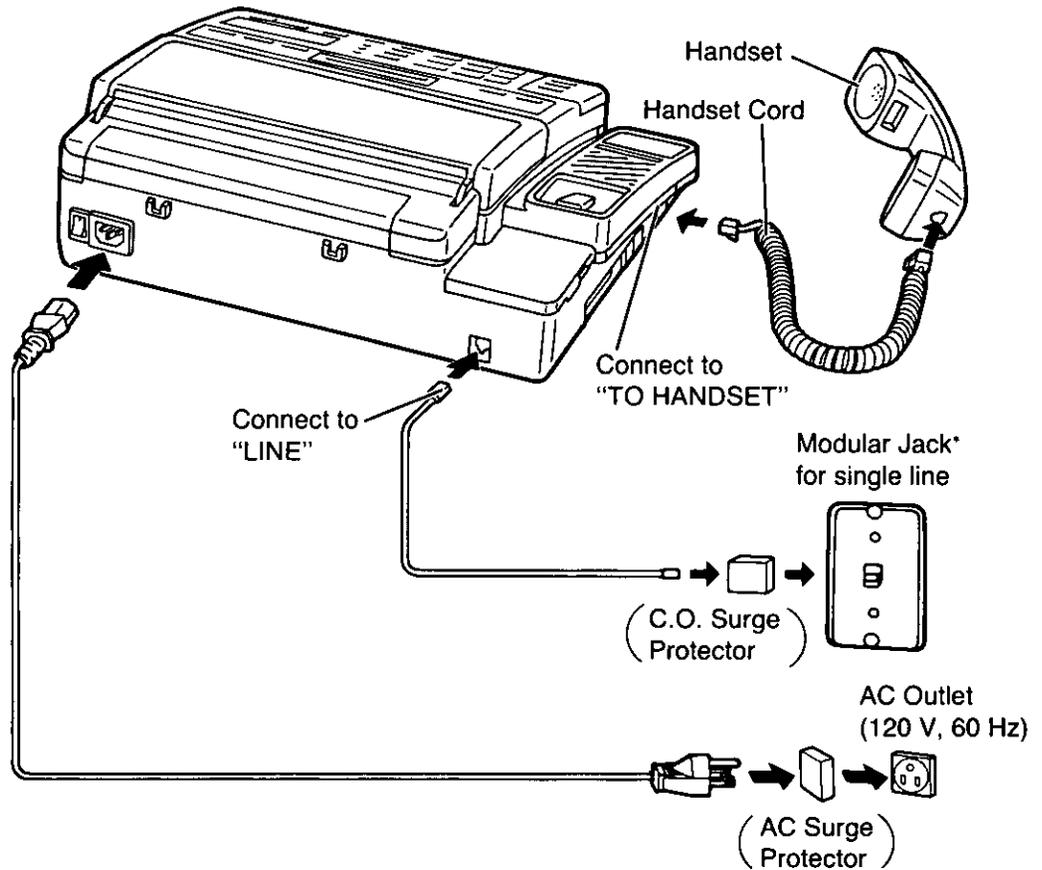

NOTES:


- The unit will not function during a power failure or when the power is turned off.
- Connection to integrated answering machines is not recommended.
- This unit is equipped with a 3-wire grounded type plug for safety. If you are unable to insert the plug into your outlet, contact your electrician to replace your outlet.
- We recommend the use of an exclusive AC outlet to avoid interference from other equipment.
- Place the equipment close to the socket outlet so the socket is easily accessible.
- If your unit is connected to the same line as other extensions, do not use other extensions during fax transmission and reception. Image quality will be affected.
- In areas of frequent electrical storms and/or power failure, we recommend using additional equipment protection (surge protectors). For further details, consult with your service centers.

*USA...RJ11C
CANADA...CA11A

Installing the microcassette tape


The microcassette tape is used to record incoming messages.
To install a microcassette tape:

1

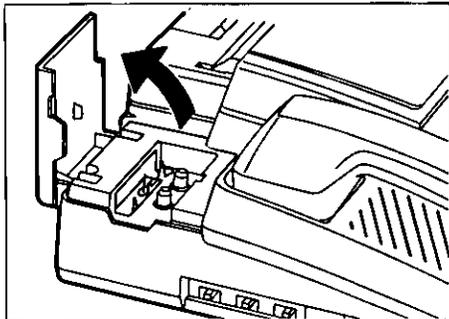


Pull up the cassette compartment cover.


2

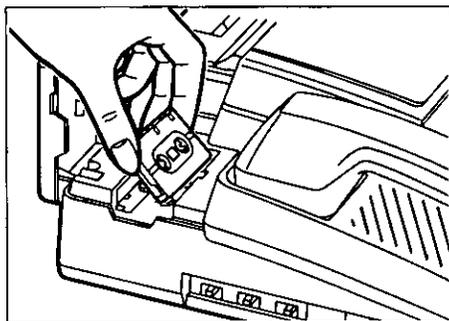

Insert the microcassette tape into the compartment with the full reel to the left. Make sure that there is no slack in the tape. Remove any slack by using a pencil and rotating the tape reel.

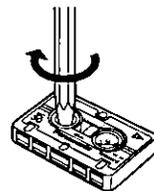


3

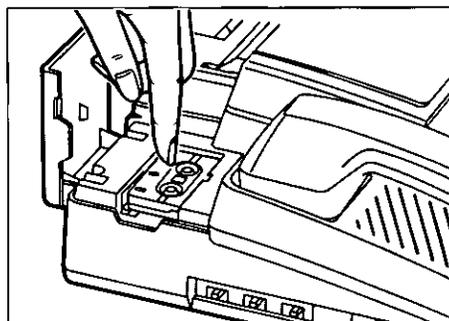

Push the microcassette tape down. Then close the cassette compartment cover.

To take off the microcassette tape:

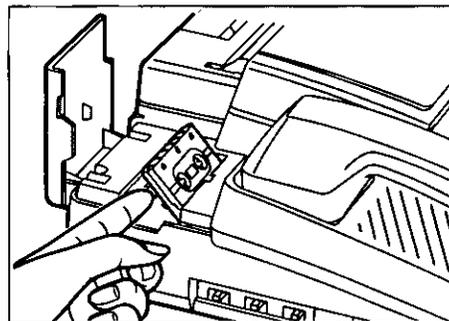

Lift the microcassette tape as shown, then take it off.


NOTES:

- For optimum sound quality and performance, use the opposite side (side B) after six months and replace the tape with a new one every year, assuming that the unit answers about ten calls a day.
- Never place a cassette tape near a magnetic source such as a magnet or a TV set. It may erase or interfere with any messages on the tape.
- Should the cassette tape break or become worn, replace it with a new one. We recommend using the Panasonic cassette tape **MC-30** or **MC-60**.

Installing the recording paper


To install a new roll of recording paper:

1

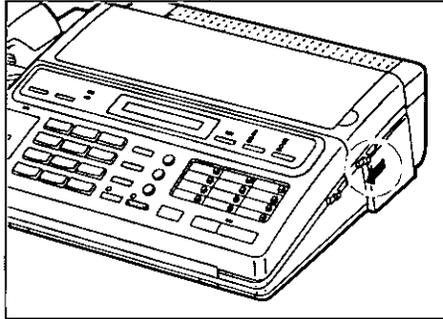


Slide the BACK LID OPEN lever forward to open the paper compartment cover.

2

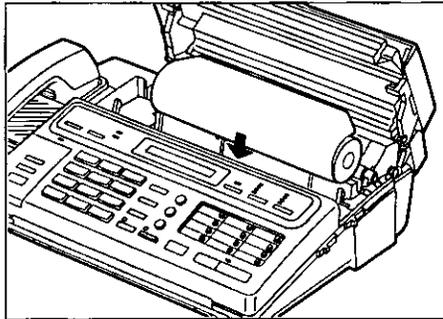


Place a recording paper roll into the paper compartment.

Make sure that the shiny side of the paper is facing up and that there is no slack in the paper roll.

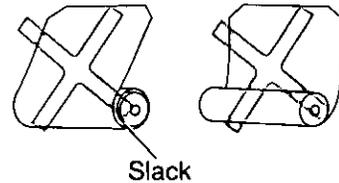


3

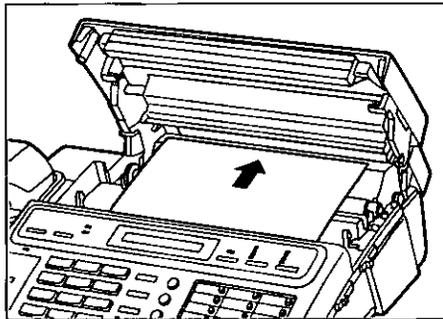

Insert the leading edge of recording paper into the recording paper exit.

4

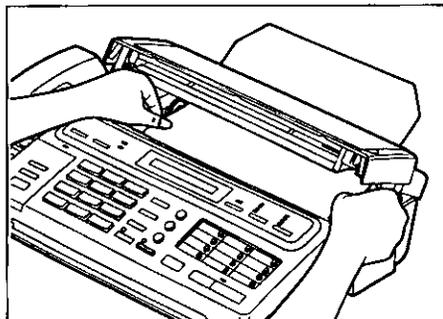


Then pull the paper a few centimeters (one or two inches) out of the unit.

5



Close the paper compartment cover carefully by pressing down on both ends gently.


6

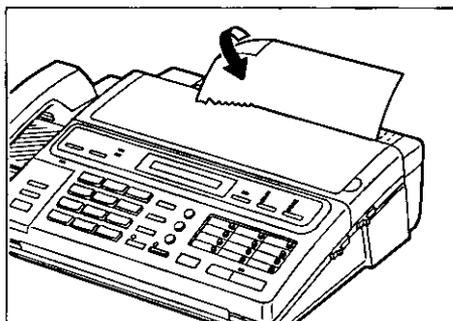


Cut the recording paper.

NOTES:

- Use only the included roll or high quality recording paper recommended by Panasonic or else the print quality may be affected or excessive thermal head wear may occur.
- To install a recording paper roll with 1/2 inch core, you should use the included paper roll holders for paper curl reduction system as shown below.

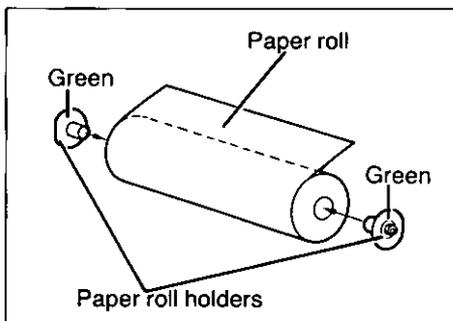

Fix the paper roll holders on both sides of the recording paper roll.

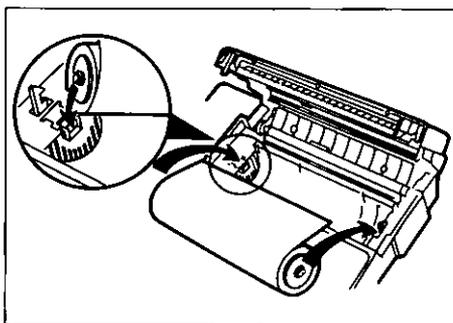


Insert the left projection of the paper roll holder into the left groove on the unit, then the right projection into the right groove, while pushing the paper roll to the left.

Follow the procedures from steps 3 to 6 to finish installing a recording paper roll with 1/2 inch core.

- If the recording paper is heavily curled, the paper curl reduction system may not function properly.
- Replace the paper roll with a new one;
 - when the red lines appear on both sides of the recording paper.
 - when the PAPER OUT indicator lights.
 - when the display shows "E-06".

Setting selectors

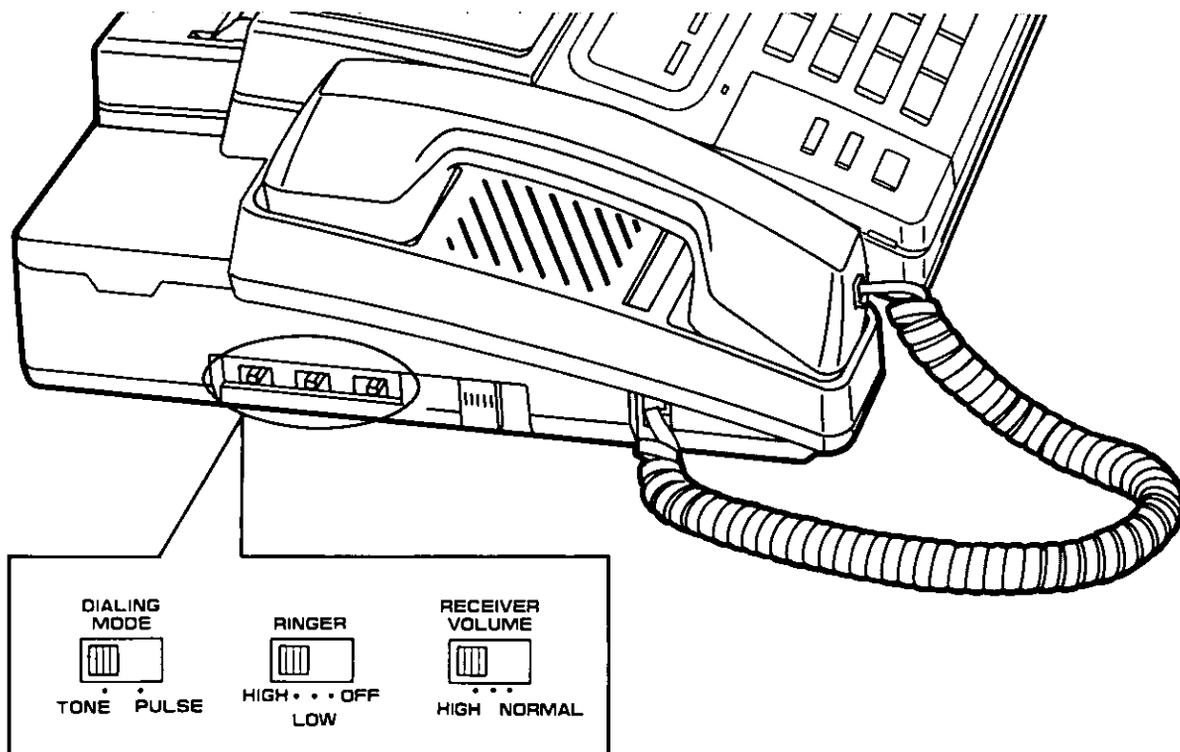

DIALING MODE Selector:

If your line has,

1. Touch tone service, set the selector to **TONE**.
2. Rotary pulse dial service, set the selector to **PULSE**.

RINGER Volume Selector:

HIGH: The ringing sound will be loud.

LOW: The ringing sound will be soft.

OFF: The unit will not ring.

RECEIVER VOLUME Selector:

Adjust the volume level of the handset receiver using the **RECEIVER VOLUME** selector.

The **RECEIVER VOLUME** selector can be moved to 3 positions. The center between **HIGH** and **NORMAL** is the middle level of volume.


When the other party's voice is hard to hear, slide the switch to the center or **HIGH**.

Turning the POWER switch on

Before turning the POWER switch on, confirm the following:

- All connections are completed.
- The cassette tape and the recording paper are installed properly.
- The handset is on the cradle.

1. Turn the **POWER** switch to the "I" (ON) position.

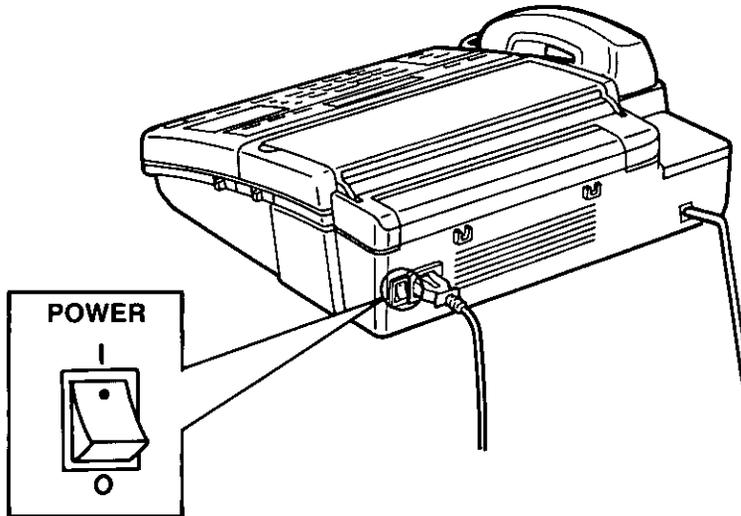

2. When you turn on the unit for the first time, the error code "E-30" will be displayed. This shows that the greeting message is not recorded. To record your greeting message, see pages 1-14 and 1-15. If the greeting message is not recorded, you cannot use the unit properly as both an answering device and a facsimile.

NOTES:


- If the ALARM indicator lights when you turn the POWER switch on, confirm that the covers are closed firmly.
- If the PAPER OUT indicator lights, install the recording paper properly (see pages 1-10 and 1-11).

Recording Your Greeting Message

Record a greeting message before using your machine as an answering machine and facsimile.

The greeting message tells the caller that you are unable to answer, and allows him or her to leave a voice-message or to send a fax message.

You can store a greeting message up to 16 seconds.

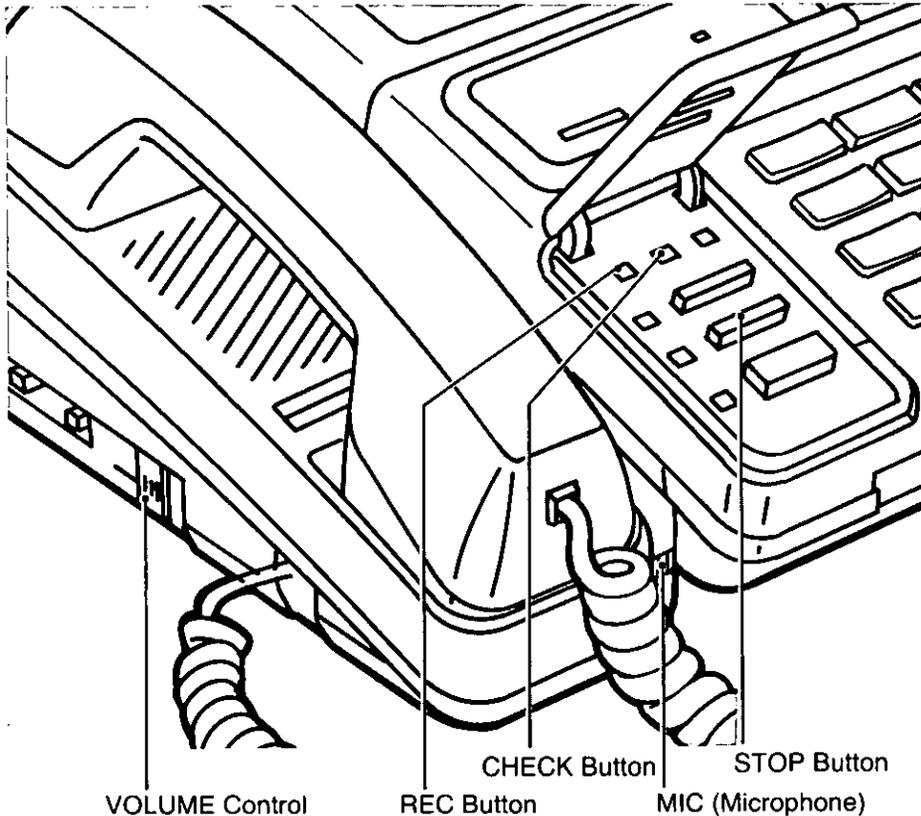

Suggested message

Record your greeting message referring to the examples below.

—When the incoming message recording time is unlimited:

"This is (your name, business and/or telephone number). We are unable to answer right now. To send a fax, start transmission. To leave a message, speak after the long beep. Thank you."

—When the incoming message recording time is limited to 1 minute:


*"This is (your name, business and/or telephone number). We are unable to answer right now. To send a fax, start transmission. To leave a message, speak for **up to 1 minute** after the long beep. Thank you."*

You can choose from two lengths of recording times for incoming messages. When the unit is in the "VOX" position, the recording time is unlimited, and when in the "1MIN" position, the recording time is limited to 1 minute. The two examples above correspond to these two conditions. The unit is preset to the "VOX" position. To change the recording time, see page 1-31.

Recording a greeting message

Recording time is limited to 16 seconds. Record your greeting message within 12 seconds for optimum performance.


1

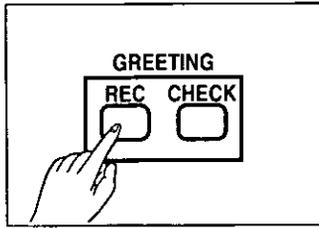

Press the **REC** button.


A beep is heard.

2

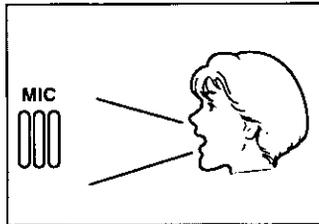

After the beep, speak immediately, clearly and loudly toward the microphone from a distance of approximately 20 cm (8 inches).

3

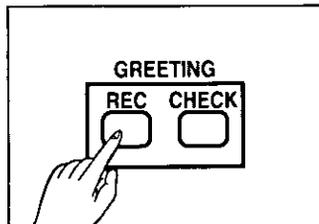

When finished, press the **REC** button again or the **STOP** button.

4


The unit plays back your greeting message so that you can confirm it.

Adjust the **VOLUME** control to a suitable level.

NOTE:

If you make a mistake while recording, repeat from step 1.

Checking your greeting message

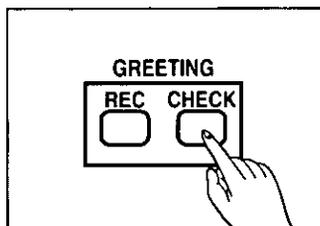

Press the **CHECK** button.

The unit replays your greeting message. If you want to change your message, perform the operation on this page again. The previous message will be automatically erased and a new message will be recorded.

Selecting the Receiving Mode


Depending on your situation, select the desired receiving mode referring to the explanations below.

ANS/FAX mode —When you wish to use the unit as a telephone answering device and a facsimile machine.

TEL/FAX mode —When you wish to use the unit as a standard telephone and a facsimile machine.

FAX mode —When you wish to use the unit as a facsimile machine only.

TEL mode —When you wish to use the unit as a standard telephone.

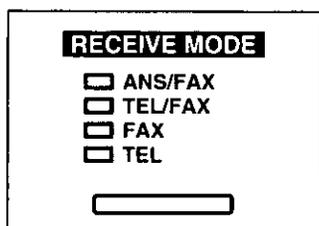

Press the **RECEIVE MODE** button to select the desired receiving mode.

When a fax or voice call comes in, the unit will function as follows.

ANS/FAX mode

- When a voice call comes in, the unit will ring and play your greeting message recorded to the calling party, and the unit will be ready to record a voice of the other party.
- If the calling party does not wish to record any voice message, advise them to press their asterisk (*) key using tone dialing while playing the greeting message or incoming message recording mode. The answering device feature will be interrupted and the unit will activate fax function. The calling party will be able to send a document.
- If the calling party wishes to send document after hearing your greeting message, advise them to leave their handset with mute for 5 seconds more. The unit will activate fax function, and the calling party will be able to send a document.
- When a fax call comes in, the unit will ring and activate the fax function without playing your greeting message.

NOTES:

- You should record your greeting message first into your unit before using this mode. See page 1-14.
- You can program the recording time for a voice of the other party. See page 1-31.
- When a call comes in, the unit will ring depending on the setting of the ANS/FAX ring count. You can also set the ringer to off. To change the setting, see page 1-28.
- If you answer the call during playing the greeting message or recording an incoming voice message, you will be able to talk to the other party.
- When you answer a call and the pip tones sound or nothing is heard, the call may be a fax call. Press the START button to receive a document.

TEL/FAX mode

- When a call comes in, the unit will seize the call immediately and distinguish between a voice and a fax call.
- When a voice call is received, the unit will ring 3 to 8 times depending on the setting of the silent fax recognition ring (see page 4-34). You will pick up the handset or press the SP-PHONE button to talk to the other party. While ringing, the unit will emit different ring back tone to the calling party.
If anyone does not answer the call, the unit will automatically activate the fax function. The calling party will be able to send a document.
- When a fax call is received, the unit will automatically activate the fax function without ringing.

NOTE:

- Telephone fee will be charged to the calling party once the different ring back tone is heard, because the line is already connected from that time.
- When you answer a call and pip tone is heard or nothing is heard, the call may be a fax call. Press the START button to receive a document.
- When a call comes in, an extension phone, if connected on the same line, will ring 1 to 4 times depending on the setting of the FAX RING COUNT (see page 1-30) before the unit rings or initiates fax reception.
- The unit can distinguish between a voice and fax call by detecting the calling tone (CNG), sent by the transmitting fax machines.
Some fax messages that are transmitted manually may be received after the unit rings, because some fax machines do not send calling tone in manual mode.

FAX mode

- When a fax call comes in, the unit will ring and activate the fax function.
- When a voice call comes in, the unit will ring and emit a fax tone to the calling party. The calling party will be able to send a document. You cannot talk to the other party.

NOTE:

- When a call comes in, the unit will ring depending on the setting of the FAX ring count. To change the setting, see page 1-30.
- When you answer a call and pip tone sounds or nothing is heard, the call may be a fax call. Press the START button to receive a document.
- Inform your callers that your unit is used for a facsimile machine only.

TEL mode

- When a call comes in, you will have to answer every call.
- When you answer a call and pip tone is heard or nothing is heard, the call may be a fax call. Press the START button to receive a document.

NOTE:

- If anyone does not answer the call by 15 rings, the receiving mode of the unit will be changed to the ANS/FAX mode automatically.

Setting Up Your Facsimile Unit

System setup features

The unit has 9 Basic Features, as listed below, and 18 Advanced Features, as listed on page 1-19.

Basic Features are the settings that need to be programmed upon finishing the installation. Most probable choices have been preselected for you, but some features, such as SET DATE, YOUR LOGO and YOUR TELEPHONE NUMBER, must be programmed by the user.

Advanced Features should be temporarily programmed as the need arises.

BASIC FEATURE LIST

The bold-face indicates factory default settings.

Code	Functions	Descriptions	Selections	Pages
#01	SET DATE	Sets the current date and time	(not stored)	1-20 1-21
#02	YOUR LOGO	Sets your company name or personal name	up to 30 digits	1-22 1-23
#03	YOUR TELEPHONE NUMBER	Sets your facsimile telephone number	up to 20 digits	1-24
#04	PRINT TRANSMISSION REPORT	Individual transmission report setting	ON/ERROR/OFF	1-26 1-27
#05	ANS/FAX RING COUNT	Selects the number of rings to answer in the ANS/FAX mode, or sets RINGER to off	TOLL SAVER or 1 to 4 rings or RINGER OFF	1-28 1-29
#06	FAX RING COUNT	Selects the number of rings to answer in the FAX mode	1 to 4 rings	1-30
#07	RECORDING TIME FOR ANS	Selects the recording time for incoming message	VOX (unlimited) or 1MIN (1 minute)	1-31
#08	REMOTE ANS ID	Sets the remote control code for remote operation	3 digits (111)	1-32
#99	PRINT ADVANCED FEATURE LIST	Prints the advanced feature list		5-8

ADVANCED FEATURE LIST


The bold-face indicates factory default settings.

Code	Functions	Descriptions	Selections	Pages
#10	LOGO POSITION	Sets the LOGO print position on the transmitted document	OUT/IN/OFF	4-17
#11	JOURNAL AUTO PRINT	Prints out the journal report automatically or manually	AUTO/MANUAL	5-3
#12	MAIN PASSCODE	Sets the passcode for network communication	4 digits (0000)	4-6
#13	TX PASSCODE CHECK	Turns the transmission passcode check mode on	ON/OFF	4-7
#14	RX PASSCODE CHECK	Turns the reception passcode check mode on	ON/OFF	4-8
#16	DELAYED TRANSMISSION	Sets the delayed transmission feature	ON/OFF	4-2 4-3
#18	DAY/NIGHT MODE	Turns on the Day/Night Mode	ON/OFF	4-32 4-33
#19	SILENT FAX RECOGNITION RING	Sets the silent fax recognition ring	3 to 8 rings	4-34
#20	REMOTE FAX ACTIVATION CODE	Sets the remote fax activation code	2 to 4 digits (**)	4-13
#21	PAPER SAVE FUNCTION	Turns on the paper save function	ON/OFF	4-18 4-19
#22	MESSAGE ALERT	Turns on the message alert	ON/OFF	4-28
#23	RING PATTERN DETECTION	Sets the distinctive ring pattern that will be detected	A/B/C/D/OFF	4-15
#24	EXTENSION COPY	Copies a document twice in length		4-20 4-21
#26	PRINT JOURNAL	Prints a JOURNAL report		5-4
#27	PRINT TEL LIST	Prints a telephone number list		5-5 5-6
#28	PRINTER TEST	Prints a print test pattern		6-10
#38	JUNK MAIL PROHIBITOR	Turns on the junk mail prohibitor function. Also sets a special code.	ON/OFF JUNK MAIL PROHIBITOR ID=2 digits (22)	4-9 4-10
#50	SET DEFAULT (#10 TO #38)	Resets the setup features		4-35

Setting date and time


The internal clock of the unit will print the date and time on the top line of all fax messages you transmit.

When the unit is in idle status, the display shows the current time and the number of recorded incoming messages. "Month/day/year" are not displayed. These settings appear on the top line of all the documents you transmit and the fax communication reports such as JOURNAL report and transmission report.

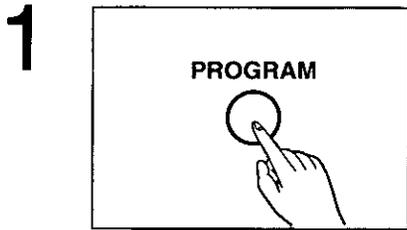


Press the **PROGRAM** button.

The display shows "P- ".

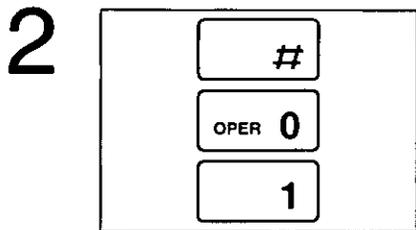

Press #, then press **01** for SET DATE setting.


The display shows "P-F01 01-01 1994".

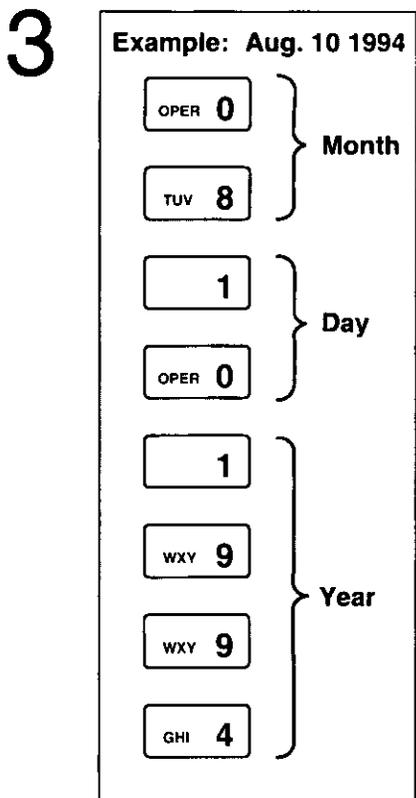

Enter current month/day/year by using the dial keypad.

Example: Aug. 10 1994.


Press 08, 10, then press 1994.

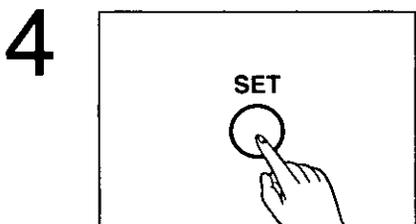

Press the **SET** button.

The display will show the previously assigned time.

5

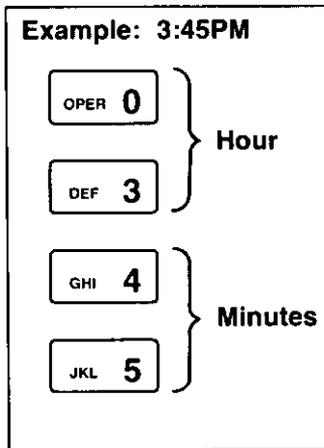


Enter the current time by using the dial keypad.

Example: 3:45 PM

Press 03, then press 45.

PM or AM is alternately selected by pressing *.


6

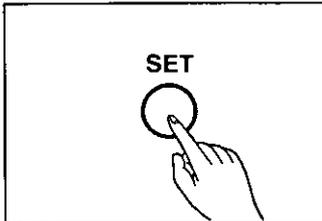

Press the **SET** button to store the program into memory.

The display shows "P- ".

7

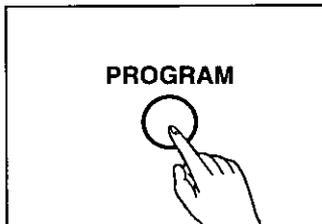

Press the **PROGRAM** button to end the operation.

The display shows the stored time.

NOTE:

To correct an error while programming, press the STOP/CLEAR button then make the correction.

Setting your logo


The logo is used to identify fax documents sent by your unit. It may consist of alphanumeric letters and symbols.

Usually the logo is a company, division or personal name in an abbreviated form. Your programmed logo will be printed on the top of each page transmitted from your unit.

Your printed logo can be up to 30 digits long.

To enter each character, select the correct code (2 digits) referring to the character code table (see page 1-23), then program as follows.


1

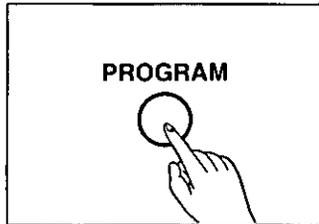

Press the **PROGRAM** button.

The display shows "P- ".

2

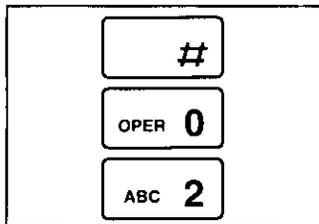


Press #, then press **02**.

The display shows "P-F02 XX XX XX".

To obtain the character codes, press the **HELP** button.

3

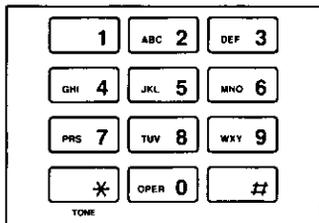


Enter your logo by using the dial keypad.

The logo can be up to 30 characters long.

If you wish to check your programming, press the **HELP** button.


4

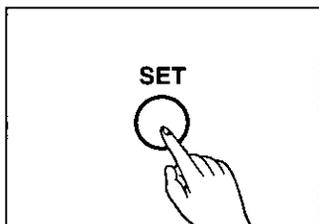

When finished, press the **SET** button to store the program into memory.

The display shows "P- ".

5

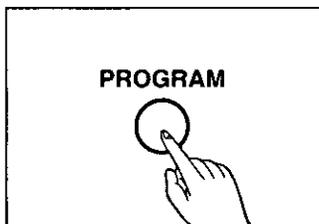

Press the **PROGRAM** button to end the operation.

The display shows the current time.

Character Code Table

Input	Code	Input	Code	Input	Code	Input	Code	Input	Code
(*1)	00)	10	0	20	A	30	K	40
(Space)	01	*	11	1	21	B	31	L	41
!	02	+	12	2	22	C	32	M	42
"	03	,	13	3	23	D	33	N	43
#	04	-	14	4	24	E	34	O	44
\$	05	.	15	5	25	F	35	P	45
%	06	/	16	6	26	G	36	Q	46
&	07	:	17	7	27	H	37	R	47
'	08	;	18	8	28	I	38	S	48
(09	<	19	9	29	J	39	T	49
Input	Code	Input	Code	Input	Code	Input	Code	Input	Code
U	50	a	60	k	70	u	80	-	90
V	51	b	61	l	71	v	81	•	91
W	52	c	62	m	72	w	82	{	92
X	53	d	63	n	73	x	83		93
Y	54	e	64	o	74	y	84	}	94
Z	55	f	65	p	75	z	85	→	95
=	56	g	66	q	76	[86	(*2)	96
>	57	h	67	r	77	¥	87		
?	58	i	68	s	78]	88		
@	59	j	69	t	79	^	89		

*1: Enter "00" to erase all of the characters that have been programmed (all clear).

*2: Enter "96" to delete the last character (back space).

■ Check your logo and codes referring to the character code table before programming.

Example: If the logo is ABC Company, fill out the form as follows.


	5					10					15				
Input	A	B	C		C	o	m	p	a	n	y				
Code	30	31	32	01	32	74	72	75	60	73	84				

Write your own logo and its code in the form below.

	5					10					15				
Input															
Code															
Input															
Code															
	20					25					30				


Programming your facsimile telephone number

Your facsimile telephone number can be programmed into your unit.
 When you transmit a document, your programmed number will be printed on the top of each page transmitted from your unit.
 The unit can hold your phone number up to 20 digits long.

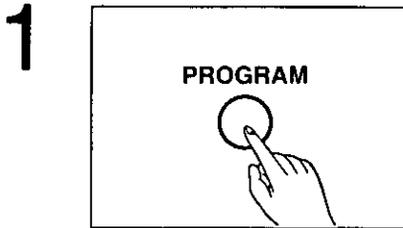


Press the **PROGRAM** button.

The display shows "P- ".

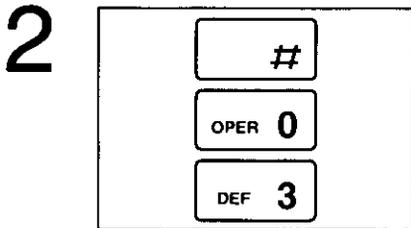


Press #, then press **03**.

The display shows "P-F03 ".

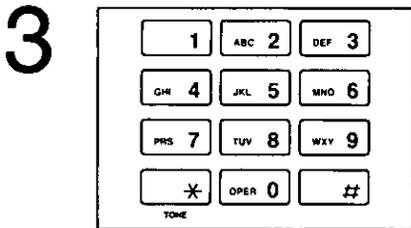


Enter your telephone number by using the dial keypad up to 20 digits long.

Example: If the phone number is +123 4567, press *, 123, #, then press 4567.
 The display shows; "P-F03 123 4567"

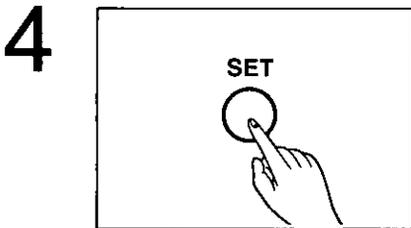

When finished, press the **SET** button to store the program into memory.

The display shows "P- ".

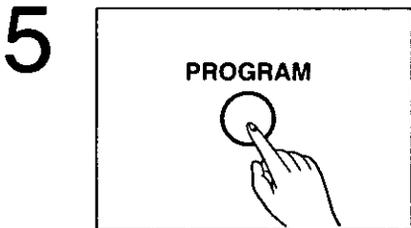

Press the **PROGRAM** button to end the operation.

The display shows the current time.

NOTES:

- When you press * in step 3, the display shows "4", but "4" will be replaced by "+" on the print-out.
- The # button provides a space.

Your fax document identifiers


Your programmed logo and telephone number will be printed on the top of each page transmitted from your unit, along with the date, time and page number. This gives the receiving party your name and fax telephone number if they wish to return a fax.

Sample pages sent by your unit

YOUR LOGO	YOUR TELEPHONE NUMBER	DATE & TIME	Number of page
FROM : ABC Company	PHONE NO. : +123 4567	Jan. 01 1994 03:05AM	P01
FAX CORRESPONDENCE			
TO: _____		DATE: _____	
FROM: _____		OUR TEL. NO.: _____	

To change the individual transmission report setting, proceed as follows.


1

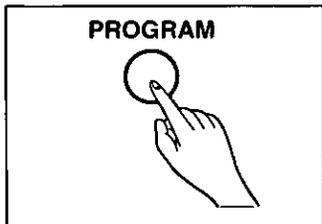

Press the **PROGRAM** button.

The display shows "P- ".


2

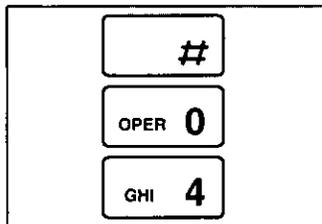

Press #, then press **04**.

The display shows "P-F04 2".

3

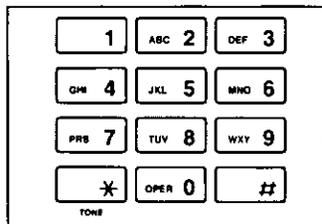


Press the number of the mode you desire.

Setting selections are:

- 1: ON
- 2: ERROR
- 3: OFF


4

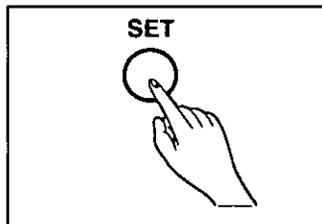

Press the **SET** button to store your selection into memory.

The display shows "P- ".

5

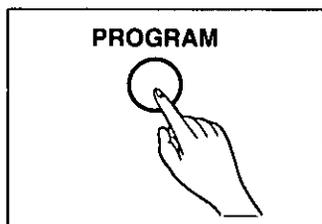

Press the **PROGRAM** button to end the operation.

The display shows the current time.

Selecting the number of rings to answer in the ANS/FAX mode

When in the ANS/FAX mode, the unit will automatically answer on the first ring when receiving a call.


If you wish to change the number of rings to answer a call, you can choose among the following:

- 0: Toll Saver (see page 1-29)
- 1: The unit answers on the first ring (default).
- 2: The unit answers on the second ring.
- 3: The unit answers on the third ring.
- 4: The unit answers on the fourth ring.
- *: The unit will not ring (RINGER OFF).

HELPFUL HINTS:

- If you wish to have the opportunity to pick up the handset before the call is answered by the unit, set the number of rings to "3" or "4".
- If you find there is difficulty in fax receiving from machines that have an automatic transmission feature, set the number of rings to "1".
- To confirm from the remote phone whether a new incoming message has been recorded or not (see pages 4-22 to 4-27), select the Toll Saver position. This will save you the toll charge for the call.


1

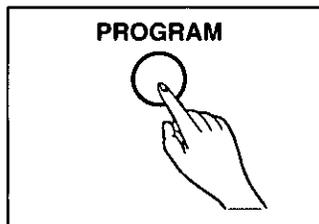

Press the **PROGRAM** button.

The display shows "P- ".


2

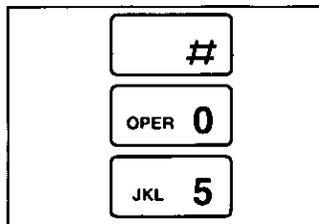

Press #, then press **05**.

The display shows "P-F05 1".

3

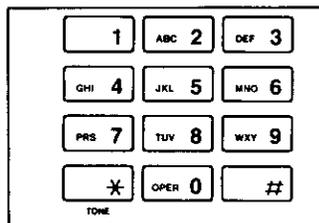


Press the number of the selection you desire.

Setting selections are:

- 0: Toll Saver
- 1: one ring
- 2: two rings
- 3: three rings
- 4: four rings
- *: Ringer Off


4

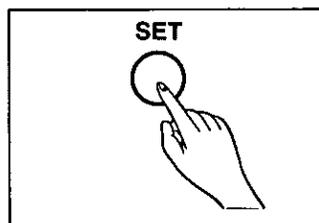

Press the **SET** button to store your selection into memory.

The display shows "P- ".

5

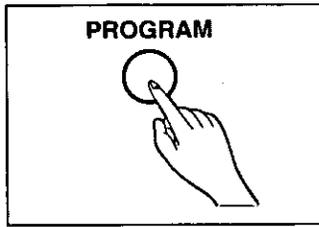

Press the **PROGRAM** button to end the operation.

The display shows the current time.

Toll Saver:

When you call the unit from a remote location, the number of rings tells you if there are any new voice-messages.

If the unit answers on the first ring, there is at least one new message recorded.

If the unit answers on the third ring, there are no new messages recorded.

Hang up immediately when you hear the second ring. The second ring indicates that there are no new messages. This will save you the toll charge for the call.

NOTE:

If you set the RINGER OFF through the ANS/FAX RING COUNT function, the extension phone connected to the unit will ring once when receiving a call.


Selecting the number of rings to answer in the FAX mode

When in the FAX mode, the unit will automatically answer on the first ring when receiving a call. If you wish to change the number of rings to answer a call, you can choose the number among "1" (one ring) through "4" (four rings).

HELPFUL HINTS:

- If you wish to have the opportunity to pick up the handset before the call is answered by the unit, set the number of rings to "3" or "4".
- If you find there is difficulty in fax receiving from machines that have an automatic transmission feature, set the number of rings to "1".


1

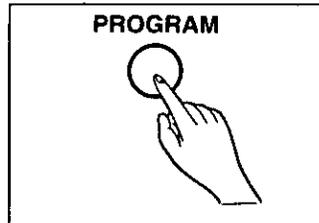

Press the **PROGRAM** button.

The display shows "P- ".


2

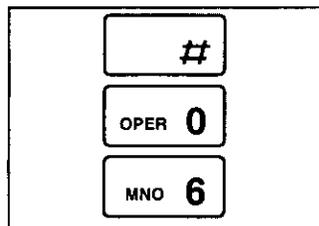

Press #, then press **06**.

The display shows "P-F06 1".

3

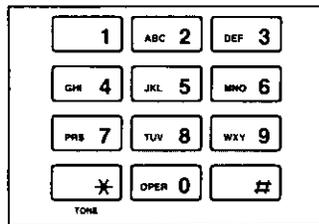


Press the number of the selection you desire.

Setting selections are:


- 1: one ring
- 2: two rings
- 3: three rings
- 4: four rings

4

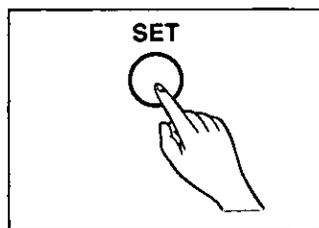

Press the **SET** button to store your selection into memory.

5

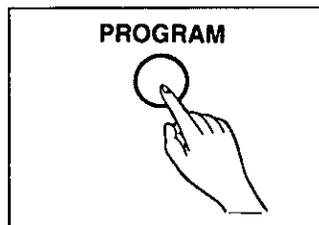

Press the **PROGRAM** button to end the operation.

The display shows the current time.


Selecting the caller's recording time

You can choose from two lengths of recording times for incoming messages.

- VOX:** The unit records an incoming message as long as a caller speaks (default).
- 1 MIN:** The unit records an incoming message up to 1 minute per message.


To change the recording time, proceed as follows:

- 1**

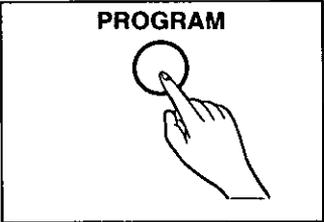


Press the **PROGRAM** button.

The display shows "P- ".
- 2**

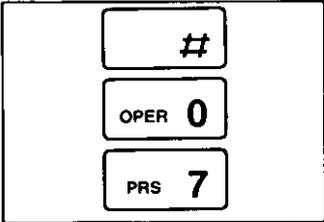


Press #, then press **07**.

The display shows "P-F07 1".
- 3**

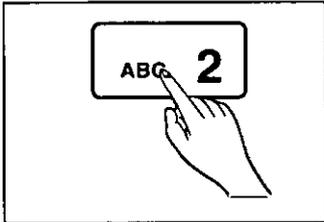


Press **2** by using the dial keypad.

Setting selections are:
 1: VOX (unlimited)
 2: 1 MIN (1 minute)
- 4**

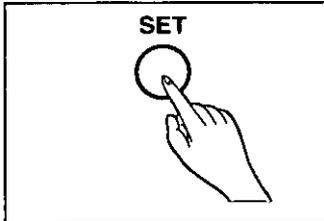

Press the **SET** button to store your selection into memory.
- 5**

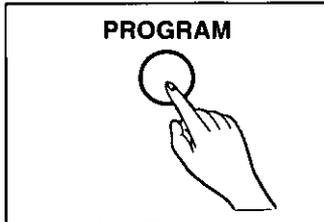


Press the **PROGRAM** button to end the operation.

The display shows the current time.


Setting the remote code (REMOTE ANS ID) for remote operation

The REMOTE ANS ID is used to access your answering device from a remote location with a touch tone phone (see pages 4-22 to 4-27). Using this code, you can retrieve incoming messages recorded on the microcassette tape from a remote location. The REMOTE ANS ID is preset to 111. If you wish to change the number, you can choose any number from 111 to 999 except numbers including "0". Make sure that the first 2 digits of the REMOTE ANS ID number is different from the JUNK MAIL PROHIBITOR ID number (see pages 4-9 and 4-10).

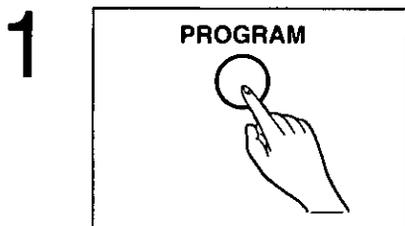


Press the **PROGRAM** button.

The display shows "P- ".

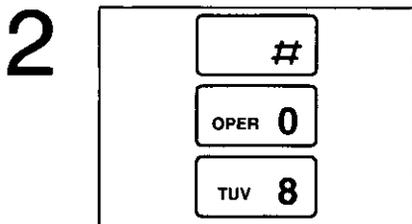


Press #, then press **08**.

The display shows "P-F08 111".

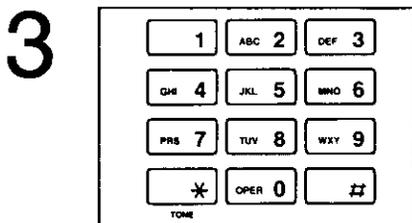


Enter the desired REMOTE ANS ID using the dial keypad.

To correct an error while programming, press the STOP/CLEAR button then correct input.

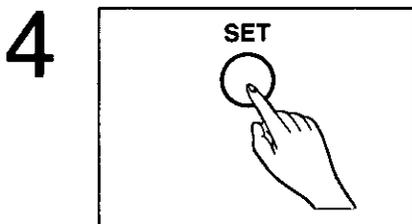

Press the **SET** button to store your selection into memory.

The display shows "P- ".

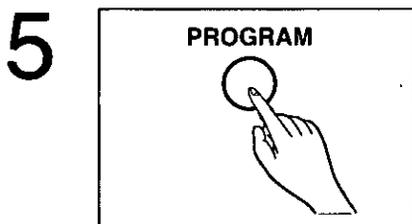

Press the **PROGRAM** button to end the operation.

The display shows the current time.

NOTE:

We recommend that you do not use seven (7) as a code number, since this number is used as the greeting message re-recording command for remote operations.

HELP Function —If you have lost your procedures—

The HELP button is used to print information about how to send documents, how to set up your unit and how to store phone numbers.

Using the HELP button

- Press the HELP button when the unit is in the idle status.
The following is printed out.

```
<<HOW TO SEND A FAX>>
  FOLLOW INITIAL SET UP PROCEDURES BELOW.
  1. INSERT DOCUMENT FACE DOWN.
  2. PRESS "SP-PHONE". (LIGHTS)
  3. DIAL FAX NUMBER OF PARTY YOU WISH TO SEND TO.
  4. WAIT FOR FAX TONE THEN PRESS "START". (SP-PHONE LIGHT GOES OFF)

<<HOW TO SET UP YOUR FAX>>
  1. PRESS "PROGRAM".
  2. PRESS "#" THEN THE NUMBER OF THE FEATURE YOU WISH TO SET USING
    THE DIAL KEY-PAD. (SEE LIST OF FEATURES BELOW)
  3. ENTER CHOICE OR DATA.
  4. IF YOU ENTERED #99 PRESS "START", OTHERWISE PRESS "SET" TO STORE
    YOUR SELECTION.
  5. PRESS "PROGRAM" TO END SET UP.

<BASIC FEATURE LIST>
#01 SET DATE = Jan. 01 1994 12:00AM
#02 YOUR LOGO (I.E. COMPANY OR
      INDIVIDUAL NAME) =
#03 YOUR TELEPHONE NUMBER =
#04 PRINT TRANSMISSION REPORT = ERROR [1=ON 2=ERROR 3=OFF]
#05 ANS/FAX BING [1...4 0=TOLL SAVER *=RINGER OFF]
#06 FAX [1...4]
      [1...4] 2=1MIN]

PRINT A LIST OF YOUR PROGRAMMED TELEPHONE
  1. PRESS "PROGRAM".
  2. PRESS "R" THEN "2" "7".
  3. PRESS "START".

<<HOW TO USE ONE TOUCH & AUTO DIALING>>
  (TO SEND A FAX)
  1. INSERT DOCUMENT FACE DOWN.
  2. PRESS ANY STATION OR PRESS "AUTO DIAL" AND 2-DIGIT NUMBER(00 TO 19).
  (TO MAKE A PHONE CALL)
  1. LIFT HANDSET OR PRESS "SP-PHONE".
  2. PRESS ANY STATION OR PRESS "AUTO DIAL" AND 2-DIGIT NUMBER(00 TO 19).

<<HOW TO RECORD A GREETING MESSAGE>>
  1. OPEN "ANSWERING CONTROL" PANEL.
  2. PRESS "REC".
  3. SPEAK INTO THE MICROPHONE. (UP TO 16 SEC)
  4. WHEN FINISHED, PRESS "STOP" OR "REC" AGAIN.

<<PRIOR TO LEAVING>>
  CONFIRM THAT THE ANS/FAX INDICATOR IS LIT.

<<HOW TO PLAYBACK ONLY NEW MESSAGES>>
  PRESS "NEW MESSAGES".

<<HOW TO PLAYBACK ALL THE RECORDED MESSAGES>>
  PRESS "ALL MESSAGES".

<<SETTING THE OVERSEAS TRANSMISSION MODE>>
  1. PRESS "OVERSEAS".
  2. TRANSMISSION SPEED IS SET TO 4800 BPS.
```

- Press the **HELP** button while programming each feature (#01 through #08, #10 and #11).

Example: When you wish to program the SET DATE (#01),

1. Press the **PROGRAM** button.
The display shows "P- "
2. Press #, then press **01** for SET DATE setting.
The display shows "P-F01 01-01 1994".
3. When you wish to know how to continue programming, press the **HELP** button.
The following is printed out.

```
<<HOW TO SET THE CLOCK>>  
1. ENTER THE MONTH, DAY AND YEAR USING THE DIAL KEY-PAD.  
2. PRESS "SET" TO STORE.  
3. ENTER THE HOUR AND MINUTE USING THE DIAL KEY-PAD.  
   PRESSING "*" ALTERNATELY CHANGES AM/PM.  
4. PRESS "SET" TO STORE.
```

4. Resume programming.

Chapter 2

Basic Instructions

Table of contents

Facsimile and Copier

Before Transmitting Documents	2-2
Acceptable documents	2-2
Documents you cannot send	2-2
Resolution and contrast	2-3
Loading documents	2-3
Transmitting Documents	2-4
Manual transmission	2-4
Adding extra pages	2-5
Receiving Documents and/or Voice Calls	2-6
Manual reception	2-6
Automatic reception	2-7
Receiving in the ANS/FAX mode	2-7
Receiving in the TEL/FAX mode	2-8
Receiving in the FAX mode	2-8
Making a Copy	2-9

Answering Device

Operating as an Answering Device	2-10
Setup of voice message and document reception	2-11
Listening to newly recorded messages	2-11
Listening to all the recorded messages	2-12
Recording after the messages you want to save	2-12
Monitoring incoming calls	2-13
Recording a memo message	2-13
Recording a telephone conversation (2-way recording)	2-14

Telephone

Making and Answering Voice Calls	2-15
Making voice calls	2-15
Redialing the last dialed number	2-16
Answering voice calls	2-16

When the display shows "E-XX", see page 6-2 for corrective measures.


Before Transmitting Documents

Acceptable documents


The unit can transmit documents that meet the following conditions.

- Documents width should be from 128 mm (5") to 216 mm (8½").
- Maximum document length should not exceed 600 mm (23⅝").
- Effective scanning width can be up to 208 mm (8⅜").
- Number of pages that can be set in the document feeder tray can be up to 10 sheets.
- Document weight:
 - Single sheet: 45 g/m² to 90 g/m² (12 pound to 24 pound)
 - Multiple sheets: 60 g/m² to 75 g/m² (16 pound to 20 pound)


Minimum document size

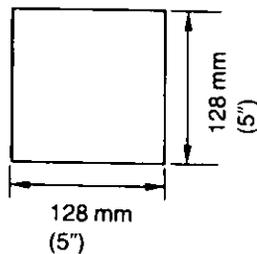

Maximum document size

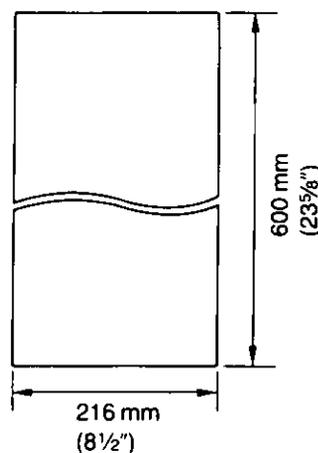

Effective scanning width

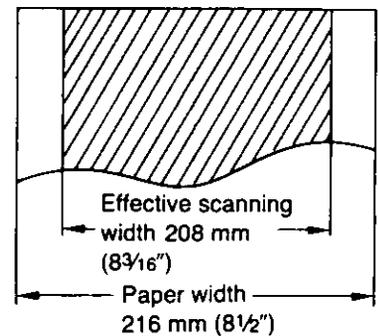

NOTES:

- A document whose length exceeds 600 mm (23⅝") cannot be transmitted. When you feed such documents, the unit will stop transmitting and a long beep will be heard. If this happens, press the STOP/CLEAR button and remove the document.
- If a document is electrostatically charged, the automatic document feeder may not function properly.

Documents you cannot send


Do not use the following types of documents or they may jam. Make a copy of such documents and feed the copy into the unit.

- Paper with a chemically treated surface such as carbon paper or carbonless duplicating paper
- Heavily curled, creased or torn paper
- Paper with a coated surface
- Small-sized paper such as a slip or voucher
- Thin paper less than 45 g/m² (12 pound)
- Thick paper over 90 g/m² (24 pound)
- Paper with faint contrast between the print and the background
- Paper with printing on the reverse side that can be seen through from the front (e.g. newspaper)

Resolution and contrast

You can set the following functions depending on the quality of an original. Set the functions before transmission or copying. If you set them during transmission, they will be effective from the next sheet transmitted.

RESOLUTION:

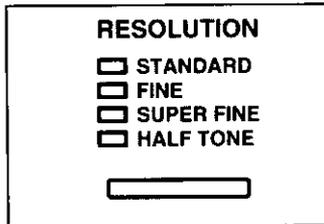

STANDARD is suitable for printed or typewritten originals with normal-sized characters.


FINE is suitable for originals with small printing.

SUPER FINE doubles the resolution of FINE.

(SUPER FINE only works between other KX-F170s or other Panasonic compatible machines.)

HALF TONE is useful when sending originals containing photographs, shaded drawings, etc.

LIGHT ORIGINAL:

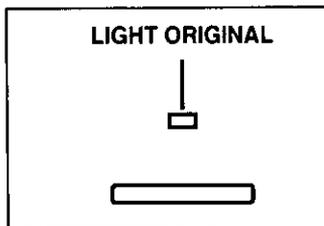


LIGHT ORIGINAL is useful when transmitting or copying originals with faint writing.

This feature does not work in the HALF TONE resolution.

Loading documents


Remove clips, staples or other similar objects from a document before feeding it into the unit. Check that all ink, paste or connection fluid on the document is completely dry before feeding it into the unit.

1

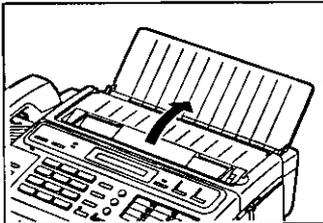

Open the document feeder tray.


2

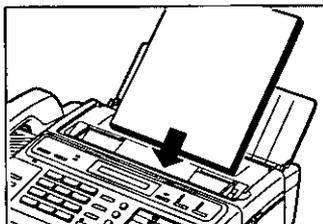

Insert the documents **FACE DOWN** into the document feeder tray.

The unit can accept up to 10 sheets of paper at a time.

3

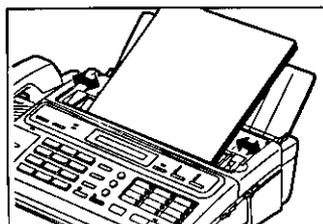


Adjust the document guides to the width of the document.

4

Set the resolution or contrast setting if needed.


Transmitting Documents

Manual transmission

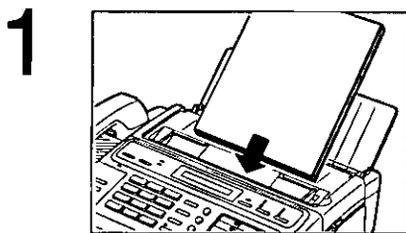


Insert the documents **FACE DOWN**.

The unit can accept up to 10 sheets of paper at a time.

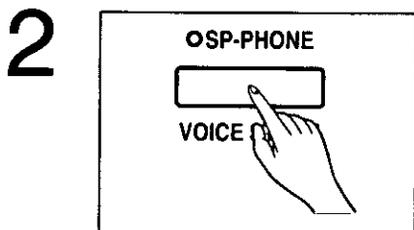


Press the **SP-PHONE** button or lift the handset.

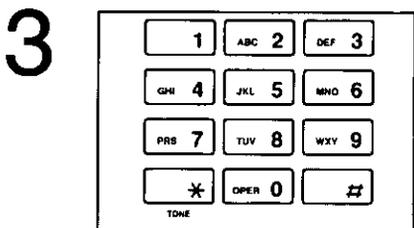


Dial the phone number of the party to which you wish to send.

If the other party answers, ask them to press their start or transmit button to start the fax reception.

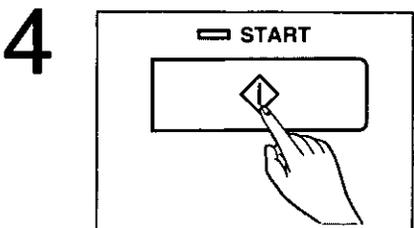

Press the **START** button when a fax tone is heard.

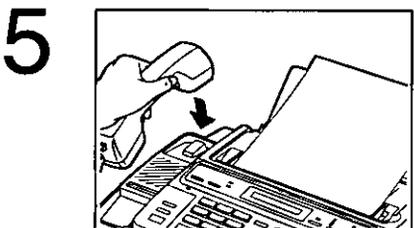

Place the handset on the cradle if using it.

The unit will feed and transmit the documents.
The display will show the number of each page (01 through 99) during a fax transmission.

NOTES:

- If you do not replace the handset after pressing the **START** button, the unit will automatically call the other party upon finishing the transmission. For further details, see "Voice Contact" on page 4-29.
- If the line is busy, press the **SP-PHONE** button or hang up the handset if using it.
- To interrupt transmission, press the **STOP/CLEAR** button until a beep sounds. Press the **STOP/CLEAR** button again to eject the document.

You can also access the other party's facsimile without using the handset or the SP-PHONE button.


This feature enables you to transmit a document with less procedures.

1



Insert the documents **FACE DOWN**.


2

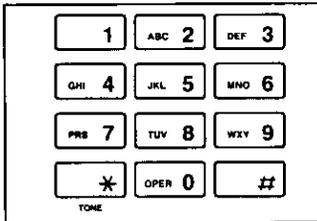

Enter the phone number of the party to which you wish to send.

Confirm whether the phone number is correctly dialed. If you misdialed, press the **STOP/CLEAR** button then enter the correct number.

3

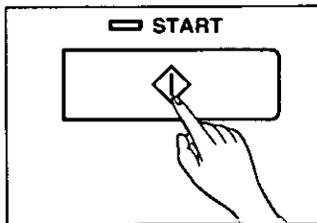

Press the **START** button.

The unit will dial and transmit the documents.

Automatic redialing feature:

If there is no answer or the line is busy, the unit will automatically redial the number up to 5 times. To cancel automatic redialing, press the **STOP/CLEAR** button.

NOTE:

To interrupt transmission, press the **STOP/CLEAR** button until a beep sounds. Press the **STOP/CLEAR** button again to eject the document.


Adding extra pages

If you want to send 11 or more sheets at a time, insert the first ten pages of the document and add the extra pages, up to 10 sheets at a time, before the last page is fed into the unit.


Receiving Documents and/or Voice Calls

Manual reception

When in the TEL mode or during a telephone conversation, you can receive fax documents as follows.

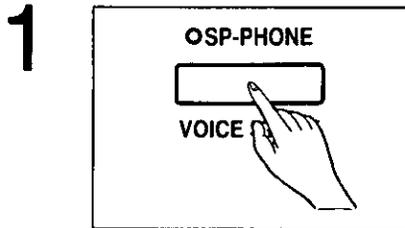

When the phone rings, lift the handset or press the **SP-PHONE** button to answer the call.

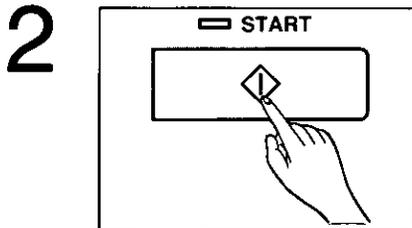


When a voice is heard and document reception is required, press the **START** button.



Place the handset on the cradle if using it.

The unit will start receiving a document.
The display will show the number of each page (01 through 99).

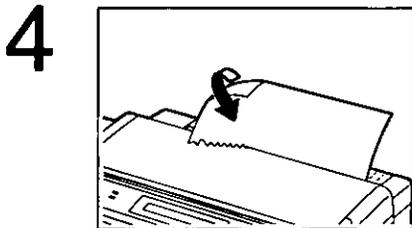

When reception ends, cut the recording paper.

NOTES:

- If you do not replace the handset after pressing START button, the unit will automatically call the other party. For further details, see "Voice Contact" on page 4-29.
- To interrupt reception, press the STOP/CLEAR button. The unit will stop receiving.
- Replace the paper roll with a new one;
 - when the red lines appear on both sides of the recording paper.
 - when the PAPER OUT indicator lights.
 - when the display shows "E-06".


Automatic reception

Set the RECEIVE MODE to any of the following modes:


- ANS/FAX mode
- TEL/FAX mode
- FAX mode

When receiving a fax call, the unit will automatically switch to the fax mode, then initiate reception.

Receiving in the ANS/FAX mode

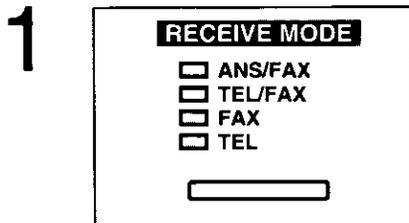


Make sure that the unit is in the ANS/FAX mode.

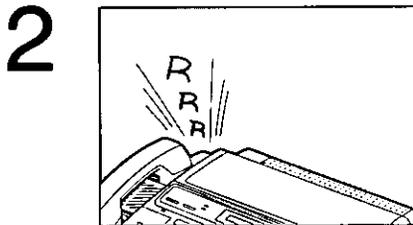

A call comes in.

The unit answers the call after 1 to 4 rings or no rings, depending on the number of rings after which the unit is set to answer (see page 1-28).

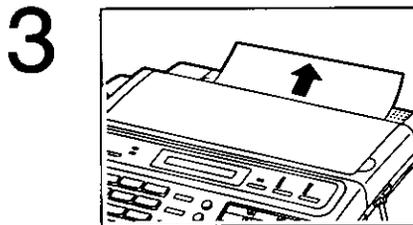

—When receiving a fax tone, the unit automatically activates the fax function to receive documents.

—When receiving a voice-call, the unit plays your greeting message.

HELPFUL HINTS:

- If the other party wishes to leave you a message and transmit a document on the same call, let them know the following procedure in advance.

When the other party's line has touch tone service:

1. After leaving a message, the other party presses their * button.
Your unit will switch to the FAX mode.
2. When a fax tone is heard, they start transmission by pressing their start or transmit button.

When the other party's line has rotary pulse service:


1. They start transmission by pressing their start or transmit button.
Your unit starts reception.
2. They make a call reservation (e.g. ... lift the handset) during transmission of their document.
Your unit plays your greeting message.
3. They leave a message after the long beep following your greeting message.

- Begin by transmitting the FAX CORRESPONDENCE leaflet found on page 6-21 to several of your associates. In this way you can confirm that your unit is functioning correctly and inform them of the procedure for transmitting documents and/or recording voice-message on your unit.


NOTE:

If you set the RINGER OFF through the ANS/FAX RING COUNT function, the extension phone connected to the unit will ring once when receiving a call. See page 1-28 for the RINGER OFF setting.

Receiving in the TEL/FAX mode

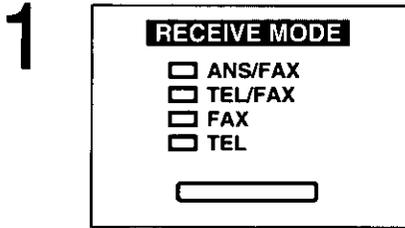


Make sure that the unit is in the TEL/FAX mode.

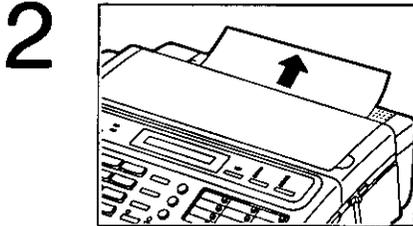

A call comes in.

—When receiving a fax tone, the unit automatically activates the fax function to receive documents.

OR

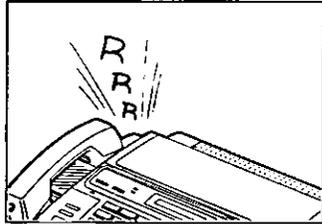


OR

—When receiving a telephone call, the unit rings 3 to 8 times, depending on the setting of the silent fax recognition ring (see page 4-34).
If a fax reception is required or nothing is heard, press the START button and hang up to receive a fax.
If someone does not pick up the phone, the unit automatically activates the fax function to receive documents.


NOTES:

- A telephone fee is charged to callers from the first ring.
- When a call comes in, an extension phone, if connected on the same line, will ring 1 to 4 times depending on the setting of the FAX RING COUNT (see page 1-30) before the unit rings or initiates fax reception.

Receiving in the FAX mode

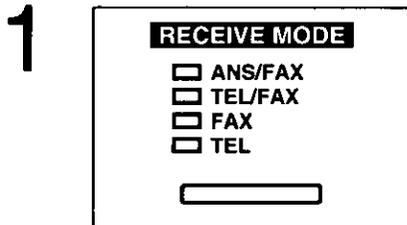


Make sure that the unit is in the FAX mode.

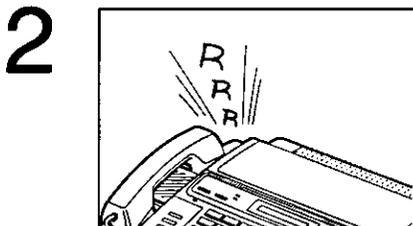

A call comes in.

The unit answers the call after 1 to 4 rings, depending on the number of rings after which the unit is set to answer (see page 1-30).

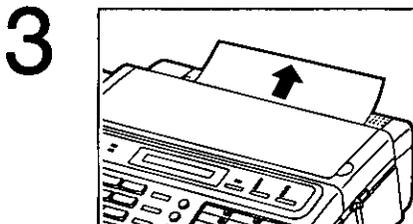

The unit produces a fax tone, then starts receiving a document when the other party presses their start or transmit button.

Making a Copy

The unit can make a copy. Any transmissible documents can be copied.

Before sending a document, you can see how it will look to the receiving party in advance.

When copying, the unit automatically selects the FINE resolution, but you may use SUPER FINE or HALF TONE resolution.


1



Insert the documents **FACE DOWN**.

The unit can accept up to 10 sheets of paper at a time.

2

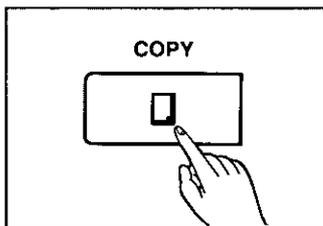

Press the **COPY** button.


The unit starts making a copy.

NOTES:

- To stop making a copy on the way, press the **STOP/CLEAR** button. The unit stops copy operation. Press the **STOP/CLEAR** button again to eject the document.
- When the Paper Save function is set to **ON** and the **STANDARD** resolution is selected, the unit will make a copy half the size of the original (see page 4-20).

Operating as an Answering Device

The unit also works as an automatic telephone answering and recording system.

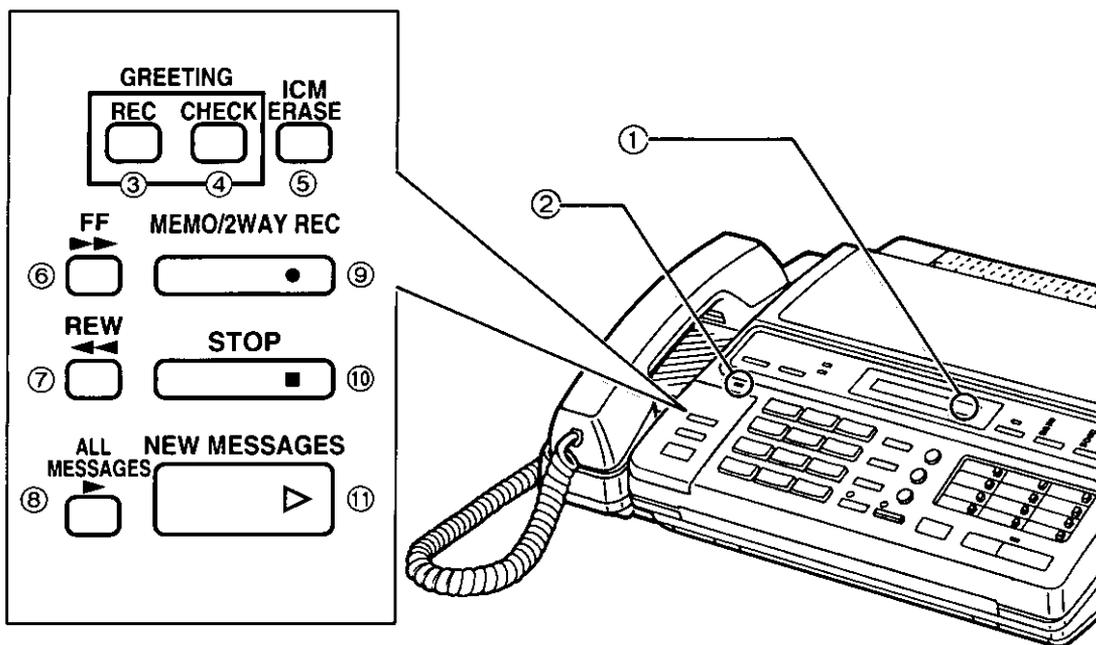

- ① Call counter:**
 The number of recorded incoming voice-messages is shown on the display.


If the power supply has been interrupted, the call counter shows “--” when the power is restored.
- ②  indicator:**
 When any new incoming messages are recorded, the indicator flashes.
- ③ Recording your greeting message:**
 See page 1-15.
- ④ Checking your greeting message:**
 See page 1-15.
- ⑤ Erasing recorded voice-messages:**
 After reviewing messages to you, press the **ICM ERASE** button. The messages are erased while the tape is rewinding.

The tape can be erased at high speed even if the record-prevention (knock-out) tabs have been removed.
- ⑥ Advancing the tape quickly:**
 Press the **FF** (fast forward) button.
- ⑦ Rewinding (Resetting) the tape quickly:**
 Press the **REW** (rewind) button.
- ⑧ Playing back all recorded messages:**
 Press the **ALL MESSAGES** button.
 See page 2-12.
- ⑨ Recording a memo message:**
 See page 2-13.

Recording a telephone conversation:
 See page 2-14.
- ⑩ Stopping operations of the answering device:**
 Press the **STOP** button.
- ⑪ Playing back newly recorded voice-messages:**
 Press the **NEW MESSAGES** button.
 See page 2-11.


Setup of voice message and document reception

1

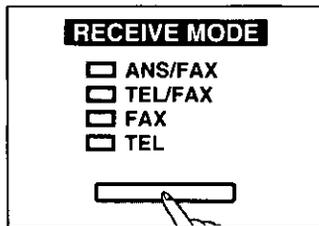

Press the **RECEIVE MODE** button until the ANS/FAX indicator lights.

2

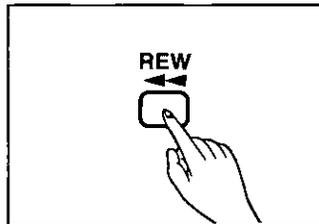

Press the **REW** button to record messages from the beginning of the tape.

When a call is received, the unit answers the call and begins playback of your greeting message. The unit automatically distinguishes between voice and fax calls, and then functions as an answering device and/or a facsimile.


NOTE:

The recording time for incoming messages can be set to VOX (unlimited) or 1 MIN (1 minute). It is preset to VOX. To change the recording time, see page 1-31.

Listening to newly recorded messages

When new incoming messages have been recorded, the call counter shows the number of recorded messages (01 to 99) and the  indicator flashes.

To play back only new messages:

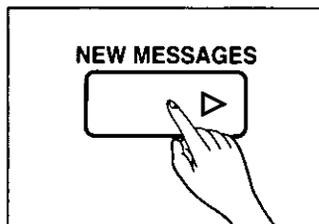

Press the **NEW MESSAGES** button.


The unit plays back new messages. At the end of the last message, 3 beeps sound and the tape stops automatically.

NOTES:

- The unit is equipped with the message alert feature. When this feature is set to on, the unit lets you know with a slow beep whether a caller's message has been recorded in the unit or not. To set this feature, see page 4-28.
- To interrupt the playback halfway, press the STOP button. To restart the playback, press the NEW MESSAGES button within one minute after pressing the STOP button. Or the rest of the messages recorded will not be saved.

Listening to all the recorded messages

All the recorded messages will be played back from the beginning of the tape.

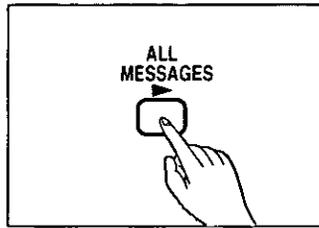

Press the **ALL MESSAGES** button.

The unit plays back all the recorded messages. At the end of the last message, 3 beeps sound and the tape stops automatically.

NOTE:


To interrupt the playback halfway, press the STOP button.

To restart the playback, press the ALL MESSAGES button within one minute after pressing the STOP button. Or the unit will record over any existing messages.

Recording after the messages you want to save

New incoming messages will be automatically stored after the last message. If you want to store incoming messages after your saved messages, proceed as follows.


1

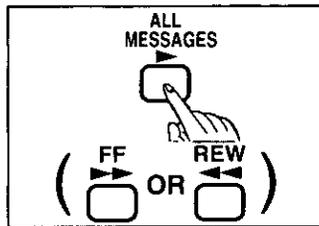

Play back the messages.


You may use the ALL MESSAGES, FF or REW button.

2

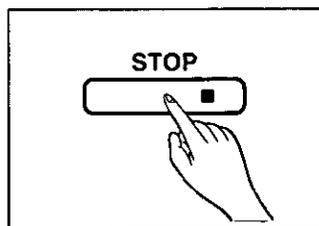

Press the **STOP** button at the end of the messages you want to save.

3

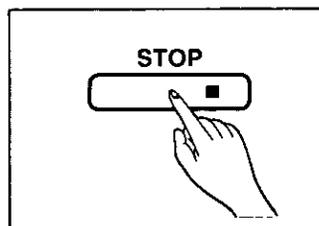

Press the **STOP** button again.
or
Leave the unit for one minute.

Future calls will be recorded after the message(s) you have saved.

Monitoring incoming calls

While an incoming message is being recorded, you can monitor the caller's voice through the built-in speaker and answer it if you want.


Adjust the sound level using the VOLUME control.

To answer the call while monitoring, lift the handset or press the SP-PHONE button. The unit stops recording automatically.

Recording a memo message

If you are going out and want to leave a private message for someone, you can record a voice memo in the unit. This can then be played back either directly or remotely, exactly like any other incoming message.


1

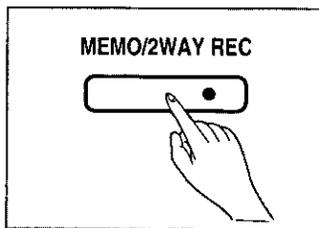

Press the **MEMO/2WAY REC** button.


A beep is heard.

2

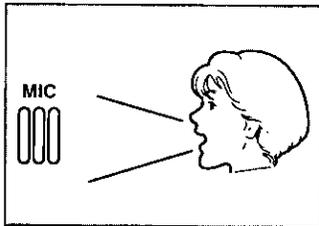

Speak toward the microphone from approximately 20 cm (8 inches) away.

3

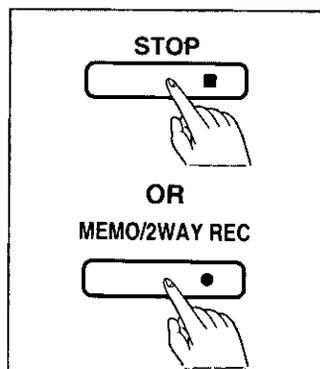


To stop recording, press the **STOP** button or the **MEMO/2WAY REC** button again.

The call counter on the display increases by one and the  indicator flashes.

Recording a telephone conversation (2-way recording)

While speaking with someone on the telephone, you can record your conversation.

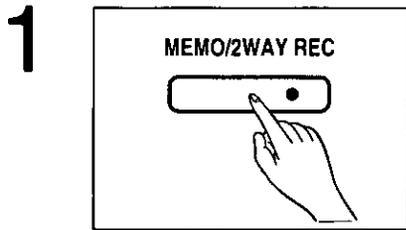


During your conversation, press the **MEMO/2WAY REC** button.

A beep is heard.



Continue your conversation.

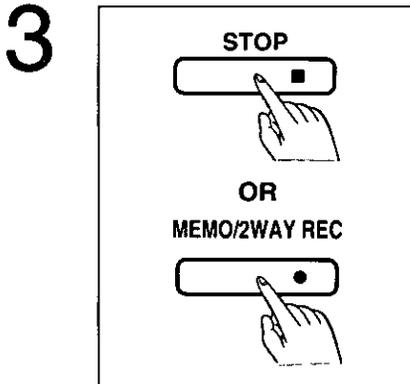

To stop recording, press the **STOP** button or the **MEMO/2WAY REC** button again.

The call counter on the display increases by one and the  indicator flashes.

NOTE:

There may be imposed regulations in your area (state) concerning the manner in which 2-way telephone conversations may be recorded. So you should inform the other party that the conversation is being recorded.

Consult your local telephone company for further information.

Making and Answering Voice Calls


Making voice calls

Using the handset

1. Lift the handset.
2. Dial the phone number.

Using the speaker phone


1

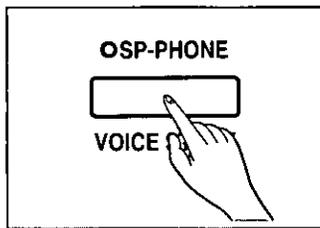

Press the **SP-PHONE** button.

The SP-PHONE indicator lights.


2

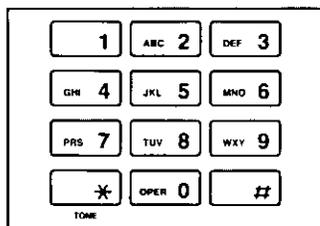

Dial the phone number.

The dialed number is displayed.


3

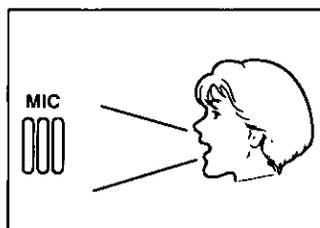

When the other party answers, speak with them through the Microphone (MIC).

To switch to the handset call, lift the handset.

4

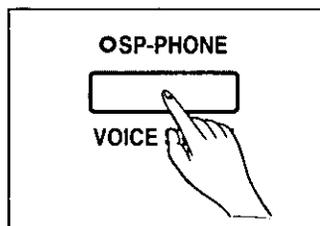

When finished, press the **SP-PHONE** button.


Replace the handset on the cradle if using it.

HELPFUL HINTS FOR THE SPEAKER-PHONE OPERATION:

- Use the speakerphone in a quiet room for best performance.
- If the other party has difficulty hearing you, decrease the volume using the VOLUME control (see page 1-3).
- If you and the other party speak at the same time, parts of your conversation will be lost. To avoid this, speak alternately.

Redialing the last dialed number

If the line is busy or you wish to redial the last dialed number, you can redial by pressing the REDIAL button.

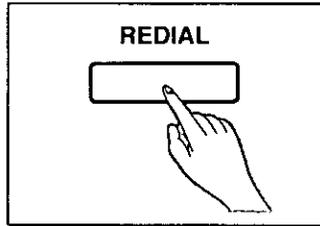

Press the **REDIAL** button.

- **When using the handset**, the unit redials the last dialed number once.
- **When using the speaker phone**, the unit redials the last dialed number. If the line is busy, the unit will automatically redial the number up to 14 times (9 times for KX-F170C/Canadian version). The SP-PHONE indicator will flash while waiting for the redialing.
To cancel automatic redialing, press the STOP/CLEAR button.

Answering voice calls

When the phone rings, lift the handset or press the SP-PHONE button to answer the call.

When you have finished, replace the handset or press the SP-PHONE button.

NOTE:

For helpful hints for speakerphone operation, see page 2-15.

Chapter 3

Intermediate Instructions


Table of contents

Storing Phone Numbers for Automatic Dialing	3-2
Listing the directory card	3-2
Storing phone numbers for one touch dialing	3-3
Storing phone numbers for speed dialing	3-4
Storing secret phone numbers	3-5
Erasing a stored phone number	3-6
<i>Facsimile</i>	
Transmitting Documents Using Automatic Dialer	3-7
<i>Telephone</i>	
Making Voice Calls Using Automatic Dialer	3-8

When the display shows "E-XX", see page 6-2 for corrective measures.


Storing Phone Numbers for Automatic Dialing

The unit's memory allows you to use both one touch dialing (up to 12 phone numbers) and speed dialing (up to 20 phone numbers) for rapid access to your most frequently dialed numbers. First make sure the DIALING MODE selector is set to TONE or PULSE (rotary) mode, since the number will be stored in the mode that is set at the time of programming.

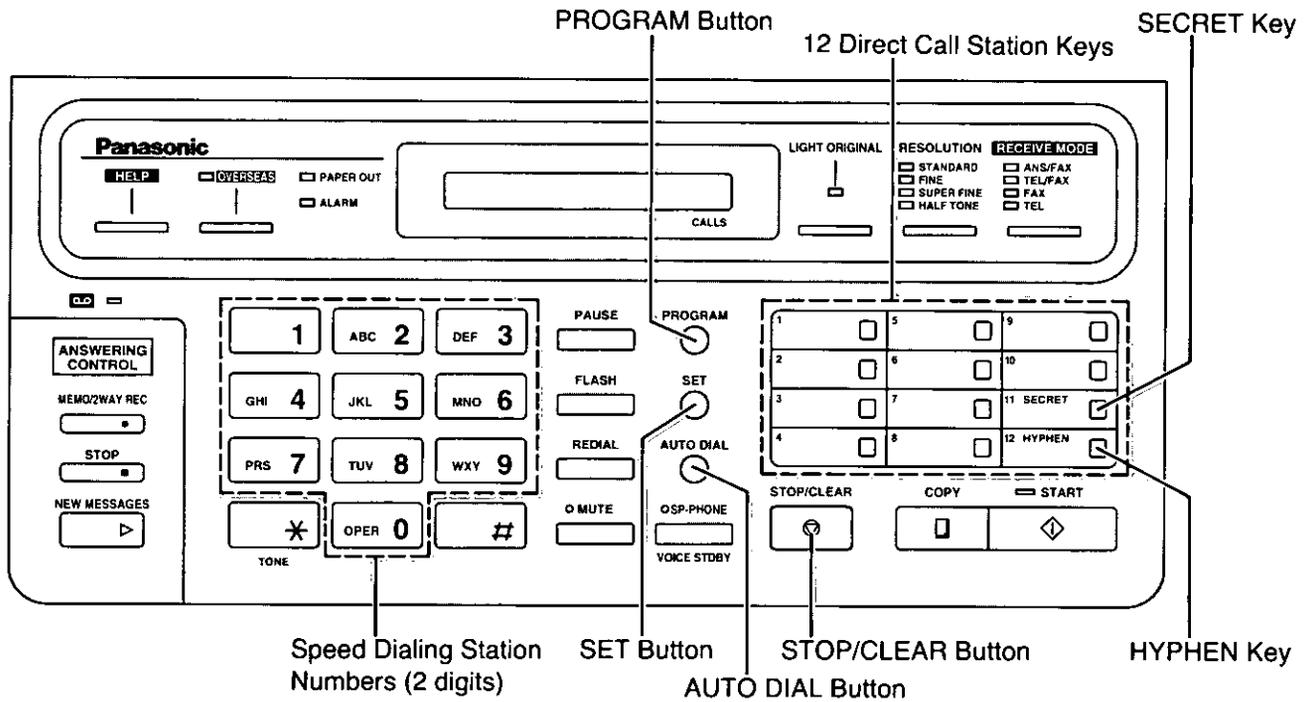

Listing the directory card


1. Remove the cover using an instrument with a pointed end, like a pen, as shown below.
2. Remove the directory card.
3. Write in the names associated with the direct call station keys.
4. Re-install the directory card.

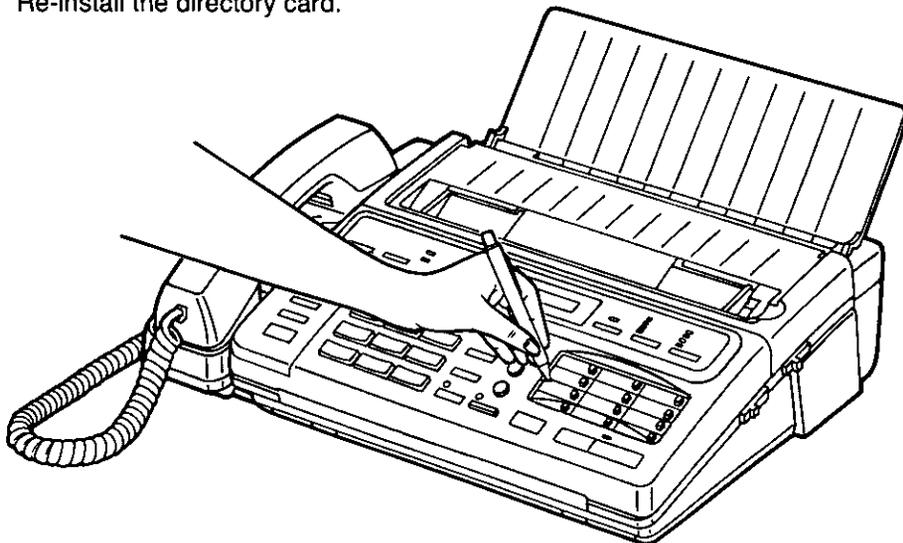

Storing phone numbers for one touch dialing

This unit is equipped with 12 direct call station keys including SECRET and HYPHEN keys, each of which can store a telephone number. Each phone number can be programmed up to 30 digits long.


1

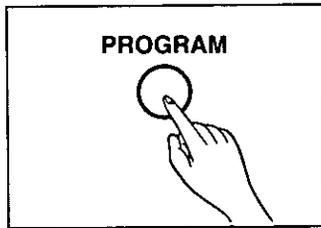

Press the **PROGRAM** button.

The display shows "P- ".


2

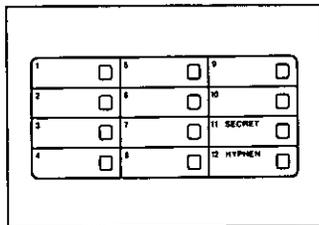

Press one of the direct call station keys where you want to store the phone number.

Example: If you select the station key 1, the display shows "P-d01 ".


3

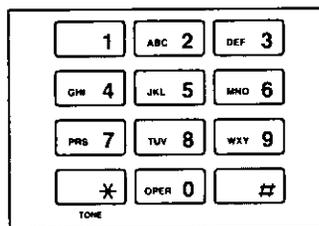

Enter the phone number by using the dial keypad.

If you want to insert a hyphen in the number, press the HYPHEN key during programming. HYPHEN is counted as 2 digits.

4

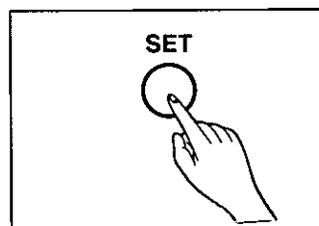


Press the **SET** button to store the program into memory.

The display shows "P- ".

To store in succession, repeat steps 2 to 4.

5

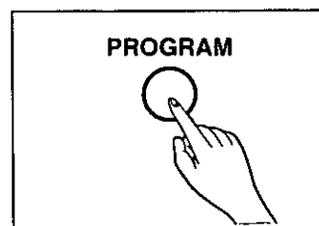

After programming all numbers, press the **PROGRAM** button to end the operation.

The display shows the current time.


NOTES:

- To correct an error while programming, press the STOP/CLEAR button then correct input.
- To cancel the programming halfway, press the PROGRAM button.
- To print out a list of the stored phone numbers, press the PROGRAM button, press #, then press 27, then press the START button. For further details, see pages 5-5 and 5-6.

Storing phone numbers for speed dialing

The unit is equipped with 20 stations (00 through 19), each of which can store a phone number. Each phone number can be programmed up to 30 digits long.


1

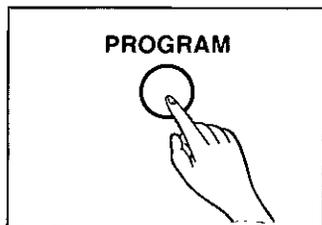

Press the **PROGRAM** button.

The display shows "P-".

2

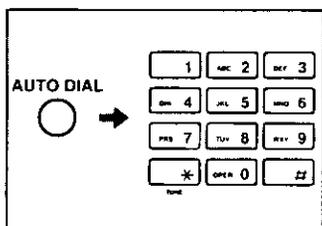


Press the **AUTO DIAL** button.

Enter the 2-digit number (00 through 19) by using the dial keypad.

Example: If the station number is 00, the display shows "P-A00".

3

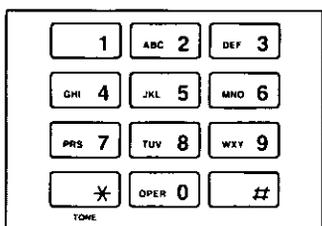


Enter the phone number by using the dial keypad.

To insert a hyphen in the number, press the HYPHEN key during programming.

HYPHEN is counted as 2 digits.

4

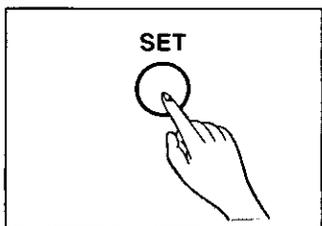


Press the **SET** button to store the program into memory.

The display shows "P- ".

To store in succession, repeat steps 2 to 4.

5

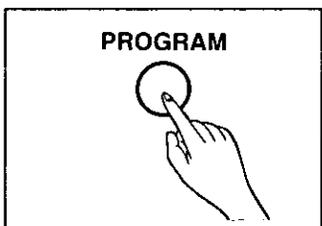

After programming all the numbers, press the **PROGRAM** button to end the operation.

The display shows the current time.


NOTES:

- To correct an error while programming, press the STOP/CLEAR button then correct input.
- To cancel the programming halfway, press the PROGRAM button.
- To print out a list of the stored phone numbers, press the PROGRAM button, press #, then press 27, then press the START button. For further details, see pages 5-5 and 5-6.

Storing secret phone numbers

This function is useful for keeping a whole phone number or a portion of a phone number secret. When you print out a list of the stored numbers, secret numbers will not be printed.


1

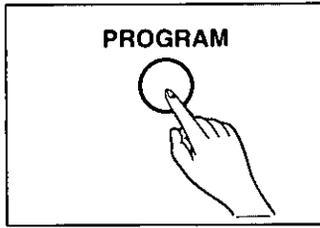

Press the **PROGRAM** button.

The display shows "P-".

2

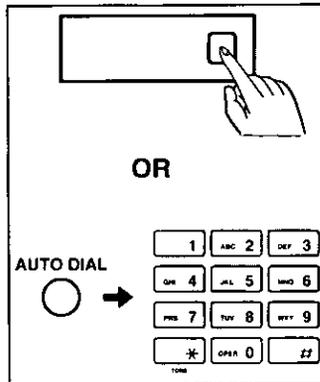


Press one of the direct call station keys.

OR

Press the **AUTO DIAL** button.
Then enter the 2-digit number (00 through 19).

3

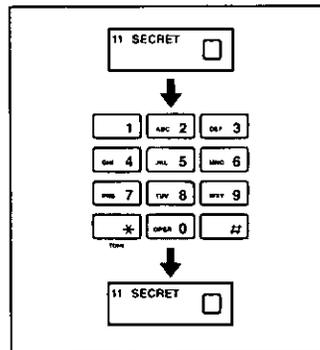


Press the **SECRET** key.

Then enter the phone number.

Then press the **SECRET** key again.


Pressing the **SECRET** key once counts as 2 digits.

4

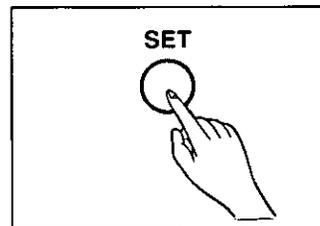

Press the **SET** button to store the program into memory.

5

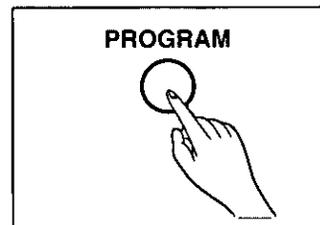

Press the **PROGRAM** button to end the operation.


The display shows the current time.

NOTES:

- To correct an error while programming, press the STOP/CLEAR button then correct input.
- To cancel the programming halfway, press the PROGRAM button.


Erasing a stored phone number

If you wish to erase a stored phone number, proceed as follows.

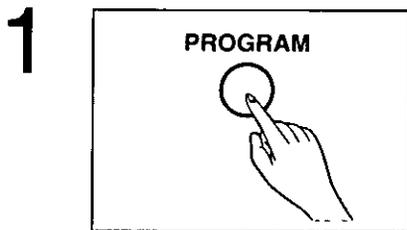

Press the **PROGRAM** button.

The display shows "P- ".

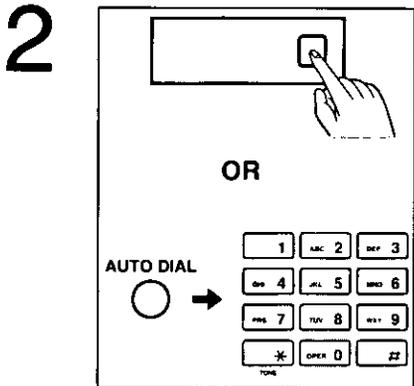


Press one of the direct call station keys.

OR


Press the **AUTO DIAL** button.

Then enter the 2-digit number (00 through 19).

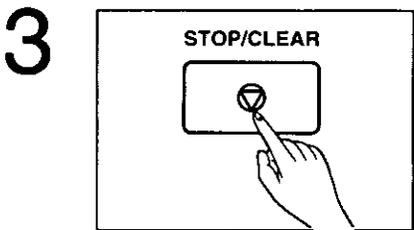


Press the **STOP/CLEAR** button.

Now the stored phone number has been erased.

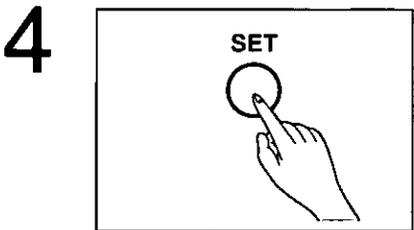

Press the **SET** button to store the program into memory.

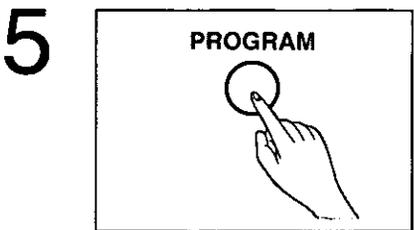

Press the **PROGRAM** button to end the operation.

The display shows the current time.


NOTE:

To cancel the programming halfway, press the PROGRAM button.

Transmitting Documents Using Automatic Dialer

You can transmit documents automatically using one touch dialing and speed dialing. Before using these features, make sure that the desired telephone numbers have been stored into memory. For storing phone numbers, see pages 3-3 to 3-5.


1

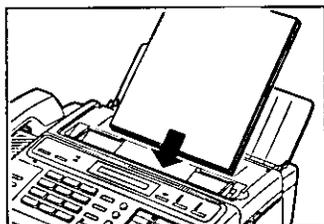

Insert the documents FACE DOWN.

The unit can accept up to 10 sheets of paper at a time.

2

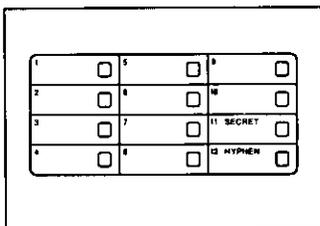


Using one touch dialing:

Press the desired direct call station key.

The unit dials and transmits the documents automatically.

OR

OR

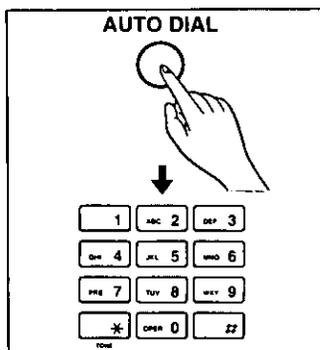

Using speed dialing:

Press the **AUTO DIAL** button.

Then enter the desired 2-digit number (00 through 19) by using the dial keypad.

The unit dials and transmits the documents automatically.

Automatic redialing feature:

If there is no answer or the line is busy, the unit will automatically redial the number up to 5 times. To cancel automatic redialing, press the STOP/CLEAR button.


NOTE:

To interrupt transmission, press the STOP/CLEAR button until a beep sounds. Press the STOP/CLEAR button again to eject the document.

Making Voice Calls Using Automatic Dialer


The unit's memory allows you to use both one touch dialing (up to 12 phone numbers) and speed dialing (up to 20 phone numbers) for rapid access to your most frequently called numbers. Before using these features, make sure that the desired telephone numbers have been stored in memory (see pages 3-3 to 3-5).

1

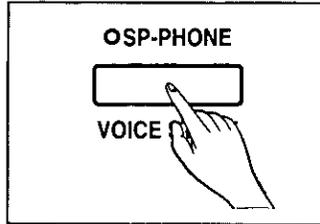

Press the **SP-PHONE** button or lift the handset.

2

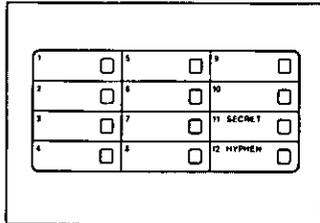


Using one touch dialing:

Press the desired direct call station key.

OR

OR

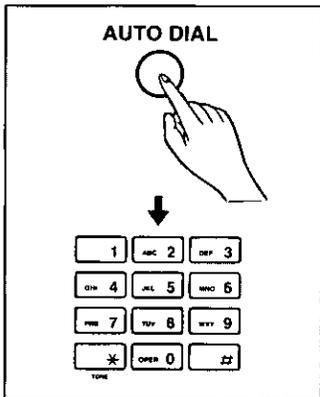

Using speed dialing:

Press the **AUTO DIAL** button.

Then press the desired station number (00 through 19) by using the dial keypad.

Chapter 4


Advanced Instructions

Table of contents

<i>Facsimile and Copier</i>		Back space and skip forward	4-24
Delayed Transmission	4-2	Recording a marker message	4-24
Network Communication	4-4	Resetting the tape for future messages	4-25
Using a passcode	4-5	Answer back	4-26
Programming the main passcode	4-6	Skipping the greeting message for incoming message recording mode	4-26
Turning the TX passcode check on	4-7	Re-recording a greeting message	4-27
Turning the RX passcode check on	4-8	Setting the Message Alert	4-28
Junk Mail Prohibitor	4-9	<i>Telephone</i>	
Turning on the junk mail prohibitor	4-9	Voice Contact	4-29
Transmitting documents to your unit with a special code	4-11	Initiating voice contact	4-29
Remote Fax Receiving Using an Extension Phone	4-12	Receiving a request for voice contact	4-29
Using an extension phone	4-12	TONE, FLASH and PAUSE Button Usage	4-30
Programming a remote fax activation code	4-13	TONE button (Temporary tone dialing)	4-30
Receiving with Distinctive Ring Service	4-14	FLASH button	4-30
Programming the unit with distinctive ringing pattern	4-15	PAUSE button	4-31
Using Overseas Transmission Mode	4-16	Combination dialing	4-31
Setting the Logo Print Position	4-17	<i>Other Features</i>	
Setting the Paper Save Function	4-18	Setting Day/Night Mode	4-32
Extension Copy	4-20	Setting Silent Fax Recognition Ring	4-34
<i>Answering Device</i>		Resetting the Setup Features	4-35
Operating an Answering Device from a Remote Phone	4-22	When the display shows "E-XX", see page 6-2 for corrective measures.	
Summary of remote control functions	4-22		
Playing back newly recorded messages (Memory playback)	4-23		
Playing back all messages	4-23		


Delayed Transmission

Using a built-in clock, this unit can send documents automatically at a specific time. This allows you to take advantage of low-cost calling hours given by some telephone companies. The delayed transmission can be reserved to take place within 24 hours in advance.

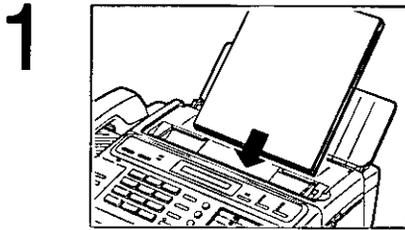


Insert the documents **FACE DOWN**.

The unit can accept up to 10 sheets of paper at a time.

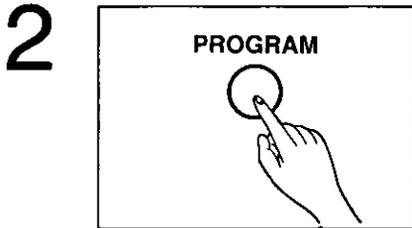


Press the **PROGRAM** button.

The display shows "P- ".

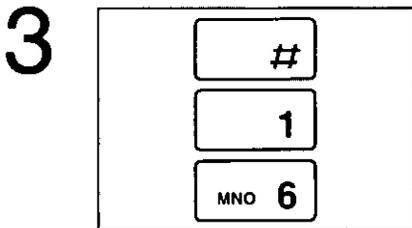

Press #, then press **16**.


The display shows "P-F16 2".

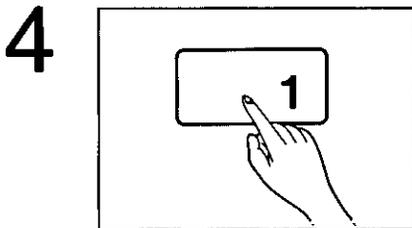

Press **1** to activate this feature.


Setting selections are:

- 1: ON (activate this feature)
- 2: OFF (deactivate this feature)

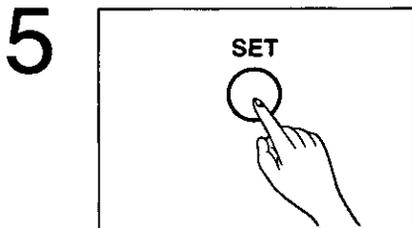

Press the **SET** button to store your selection into memory.

The display shows "AM P-F16 12-00".

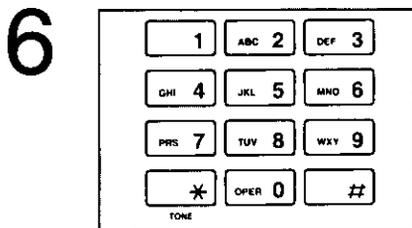


Enter the time at which you want the unit to start transmission.

Example: If the starting time is 11:00PM, press 1100, then press *.

AM or PM is alternately selected by pressing *.

The display shows "PM P-F16 11-00".


7

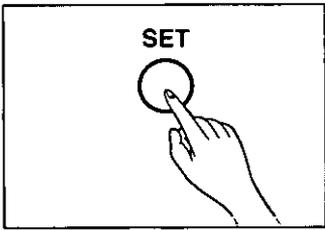

Press the **SET** button to store the program into memory.

The display shows "P-F16".


8

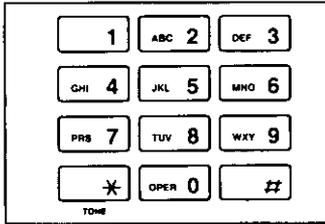

Enter the phone number of the party you wish to transmit using the direct call station key, the speed dial station or a full number.

Example: Speed dial station 00 is dialed.
The display shows "P-F16 A00".


9

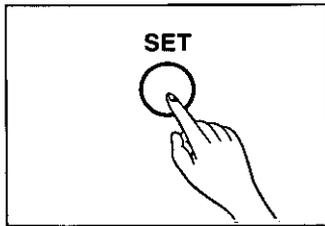

Press the **SET** button to store the program into memory.

The display shows "P-".

10

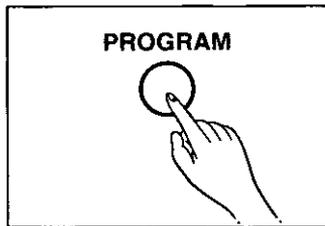

Press the **PROGRAM** button to end the operation.

The display shows "PM 3-50 d11-00P 00".
Now the delayed transmission has been set.
After transmission, the delayed transmission feature will be automatically turned off.

NOTES:

- You can receive, transmit and copy documents while the delayed transmission is set. To copy or transmit documents after setting delayed transmission, remove documents from the tray and replace them when you have finished.
- If there is no answer or the line is busy during the delayed operation, the unit will automatically redial the number up to 5 times.

Network Communication

The main passcode network communication feature eliminates fax transmission to unauthorized parties, and helps to prevent reception from an unauthorized station.

This feature is effective to prevent "Junk mail" faxes since only those units with the same passcode can transmit to your unit.

When the network communication feature is used, the identical main passcode of 4 digits must be programmed on both sides of the line. The unit checks the passcode before transmitting or receiving a document.

The unit provides two types of passcode check modes. They are TX (transmission) passcode check mode and RX (reception) passcode check mode.

■ **TX Passcode Check:**

Use this feature to restrict document transmission. If the passcode sent from the other Panasonic compatible machines does not match with the one programmed in your unit, transmission does not take place (see page 4-7 for TX passcode check setting).

■ **RX Passcode Check:**

Use this feature to restrict document reception. If the passcode sent from the other Panasonic compatible machines does not match with the one programmed in your unit, reception does not take place (see page 4-8 for RX passcode check setting).

NOTE:

These features are effective only between Panasonic compatible machines that have the same passcode.

Using a passcode

Before communication begins, check that your passcode and the other station's passcode are identical.

■ **When you want to transmit a document to a designated station only:**

Set TX PASSCODE CHECK to ON.

Function	Your unit	Other Panasonic compatible machine
TX PASSCODE CHECK	ON	ON/OFF
RX PASSCODE CHECK	OFF	ON/OFF

Your unit transmits a document only when the correct passcode has been received.

■ **When you want to receive a document from a designated station only:**

Set RX PASSCODE CHECK to ON.

Function	Your unit	Other Panasonic compatible machine
TX PASSCODE CHECK	OFF	ON/OFF
RX PASSCODE CHECK	ON	ON/OFF

Your unit receives a document only when the correct passcode has been received.

■ **When you want to have facsimile communications within a designated group of people:**

All the people in the group must set both TX PASSCODE CHECK and RX PASSCODE CHECK to ON.

Function	Your unit	Other Panasonic compatible machine
TX PASSCODE CHECK	ON	ON
RX PASSCODE CHECK	ON	ON


Only units that share identical passcodes can transmit and receive documents with each other.

Programming the main passcode

To activate this feature, the identical main passcode must be preprogrammed both on your unit and the other Panasonic compatible machine(s).

The main passcode may be any 4-digit number except 0000.


1

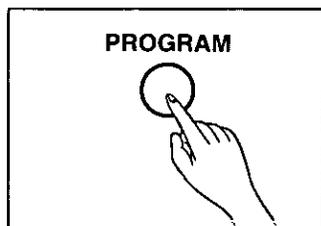

Press the **PROGRAM** button.

The display shows "P- ".


2

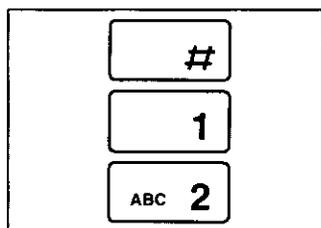

Press #, then press **12**.


The display shows "P-F12 0000".

3

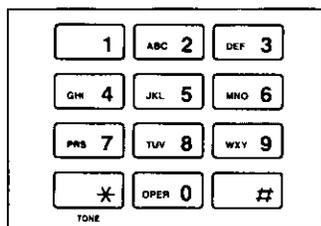

Enter the desired 4-digit passcode (choose from 0001–9999).


4

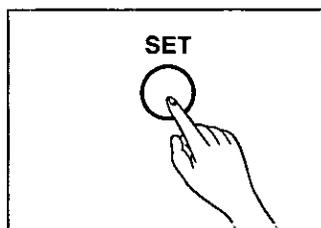

Press the **SET** button to store the program into memory.

The display shows "P- ".


5

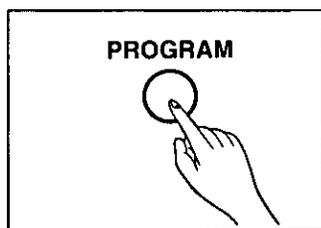

Press the **PROGRAM** button to end the operation.

Turning the TX passcode check on


1

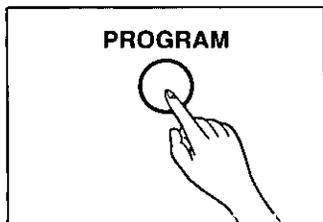

Press the **PROGRAM** button.

The display shows "P- ".


2

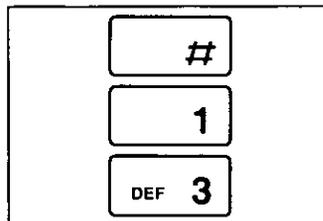

Press #, then press 13.

The display shows "P-F13 2".

3

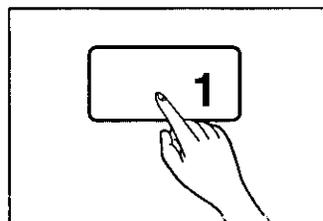


Press 1 to activate this feature.

Setting selections are:

1: ON (activate this feature)

2: OFF (deactivate this feature)


4

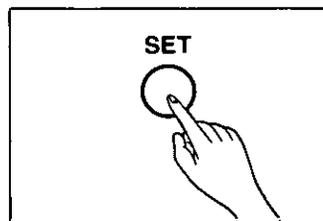

Press the **SET** button to store your selection into memory.

The display shows "P- ".

5

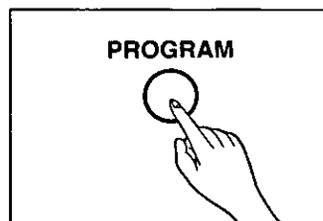


Press the **PROGRAM** button to end the operation.

NOTE:

If the network passcode is set to "0000", this feature does not work properly.

Turning the RX passcode check on


1

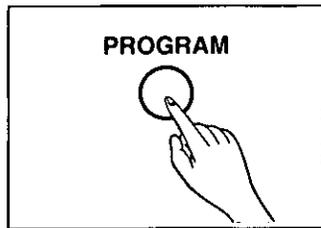

Press the **PROGRAM** button.

The display shows "P- ".


2

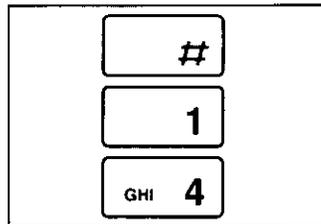

Press #, then press 14.

The display shows "P-F14 2".

3

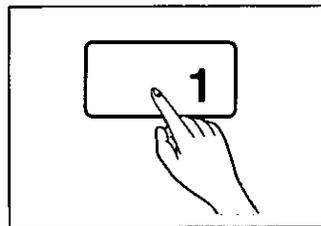


Press 1 to activate this feature.

Setting selections are:

1: ON (activate this feature)

2: OFF (deactivate this feature)


4

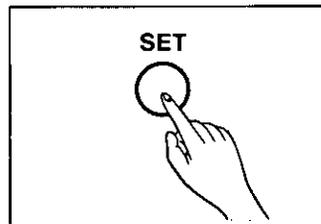

Press the **SET** button to store your selection into memory.

The display shows "P- ".

5

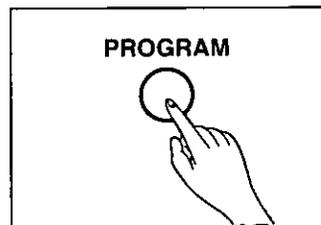

Press the **PROGRAM** button to end the operation.

NOTE:

If the network passcode is set to "0000", this feature does not work properly.

Junk Mail Prohibitor

The feature allows the unit to receive fax document only from the stations whose phone numbers are registered into memory for one touch dialing and speed dialing, or the stations with a special code (JUNK MAIL PROHIBITOR ID).


The feature is effective to prevent receptions from unauthorized stations.

NOTE:

- To activate the feature, set the unit in the ANS/FAX, TEL/FAX or FAX mode and let the unit receive fax documents automatically.
- When manual reception is used, all the fax documents transmitted will be received.
- The unit will not be able to receive fax documents automatically from the machines registered for one touch dialing and speed dialing if the transmitting machines are not programmed with their telephone numbers.
- When the ring pattern detection feature (see pages 4-14 and 4-15) is used, the transmission using the JUNK MAIL PROHIBITOR ID will not be available.

Turning on the junk mail prohibitor


1

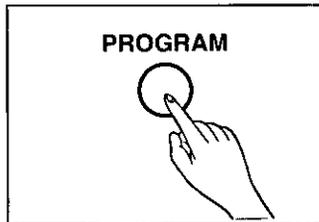

Press the **PROGRAM** button.

The display shows "P- ".


2

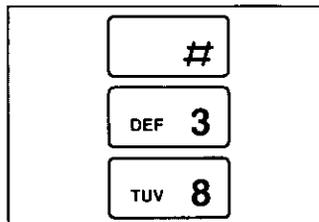

Press #, then press **38**.

The display shows "P-F38 2".

3

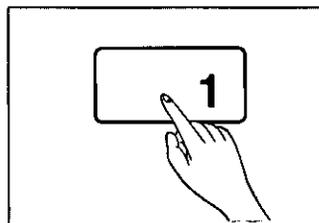


Press **1** to activate the feature.

Setting selections are:

- 1: ON (activate this function)
- 2: OFF (deactivate this function)


4

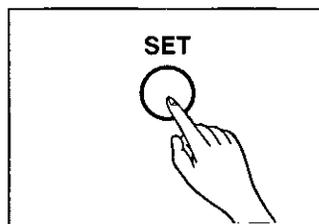

Press the **SET** button.

The display shows "P-F38 22".


5

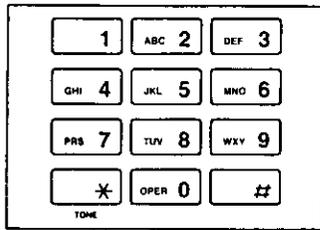

Enter the desired 2-digit JUNK MAIL PROHIBITOR ID (choose from 11–99).

0, # and * cannot be used.


6

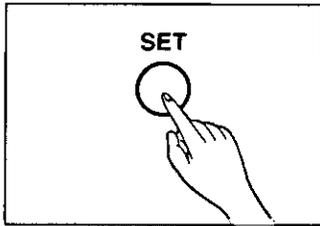

Press the **SET** button to store the program into memory.

The display shows “P- ”.

7

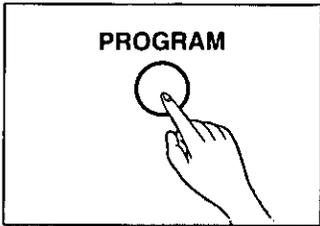

Press the **PROGRAM** button to end the operation.

The display shows the current time.

NOTE:

The JUNK MAIL PROHIBITOR ID must be different from the first two digits of the REMOTE ANS ID (see page 1-32). For example, if the REMOTE ANS ID is set to “321”, do not use “32” as a JUNK MAIL PROHIBITOR ID.


Transmitting documents to your unit with a special code

Transmission with JUNK MAIL PROHIBITOR ID is activated when the unit is in the ANS/FAX or TEL/FAX mode.

Issue the JUNK MAIL PROHIBITOR ID to callers with priority status.

Instructions for caller:

1

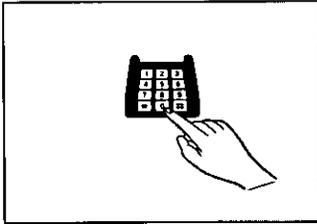

Your caller may call your unit.

2




If the unit is in the ANS/FAX mode:

They may enter the JUNK MAIL PROHIBITOR ID while the greeting message is being played or after they record their incoming messages.

If the unit is in the TEL/FAX mode:

They may enter the JUNK MAIL PROHIBITOR ID while the different ring back tone is heard.

3

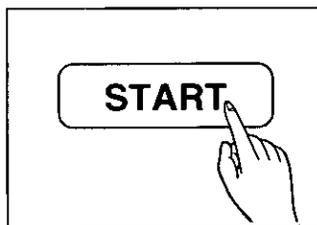

They may press their start or transmit button to initiate the fax transmission.

Remote Fax Receiving Using an Extension Phone

If you connect an extension to the same line to which your facsimile unit is connected, it is possible to receive a fax document into your facsimile unit by using the extension telephone near you.


This saves you the trouble of going to the facsimile unit and pressing the START button.

NOTES:

- This feature is only effective when you receive a call.
- To activate this feature, use a touch tone telephone as an extension phone.

Using an extension phone

1

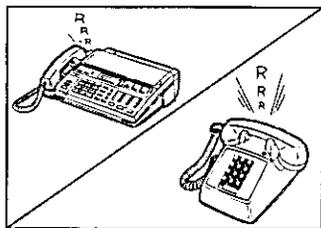


A call comes in.

2




Lift the handset of the extension phone.

3

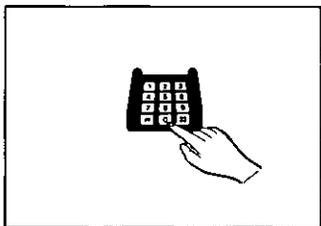

If a fax tone is heard, or the other party wishes to send you a fax, press * and * on the extension phone. Then replace the handset on the cradle.

4

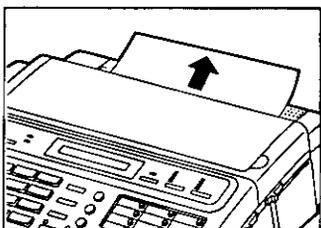

The unit will switch to the FAX mode, then receive a document.


NOTE:

Two *s can be changed to another 2 to 4-digit number. See page 4-13.

Programming a remote fax activation code

Your code can be from 2 to 4 digits long. The numbers 0 through 9 and characters # and * may be used. (e.g. **, 123, 123#)


1

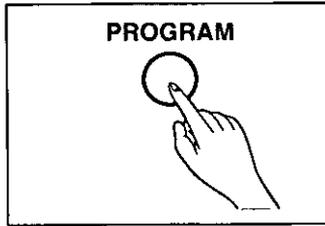

Press the **PROGRAM** button.

The display shows "P- ".


2

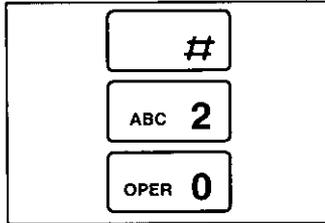

Press #, then press **20**.


The display shows "P-F20 4 4".

3

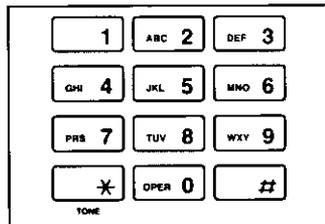

Enter the new code number using the dial keypad.


4

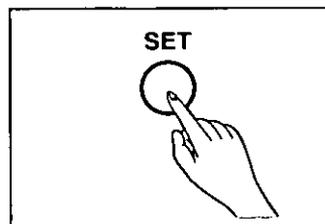

Press the **SET** button to store your program into memory.

The display shows "P- ".

5

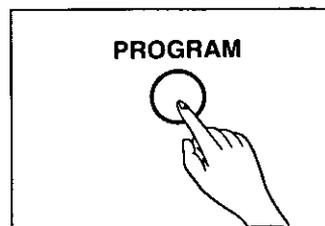

Press the **PROGRAM** button to end the operation.

NOTE:

"4" on the display indicates *. "E" on the display indicates "#".

Receiving with Distinctive Ring Service

The unit has been equipped with a Ring Pattern Detection feature, which allows you to have more effective use of the distinctive ring service provided by the telephone company.

The distinctive ring service gives you up to 3 phone numbers on your single telephone line, each with a different ringing pattern. You may use one of the phone numbers as a facsimile telephone number. With the ring pattern detection feature, the unit will detect its own distinctive ringing pattern and automatically activate the fax function to receive documents. If other calls come in, the unit will answer in the pre-selected receiving mode by the RECEIVE MODE button.

■ The table below shows how the unit will answer when receiving calls.

Receiving call	Receiving mode of the unit			
	ANS/FAX	TEL/FAX	FAX	TEL
A call with distinctive ring pattern	The unit will activate the fax function.	The unit will activate the fax function.	The unit will activate the fax function.	The unit will ring until you pick up. If you do not answer the call by 15 rings, the unit will automatically switch to the ANS/FAX mode.
Other call	The unit will activate as an answering device and/or facsimile.	The unit will ring until you pick up.		

NOTE:

- In ANS/FAX and FAX modes, the FAX RING COUNT setting (see page 1-30) determines the number of distinctive rings before transmissions are received.
- In TEL/FAX mode, a call with distinctive ring pattern will be received without ringing. But other extension phones, if connected on the same line, will ring 1 to 4 times depending on the setting of the FAX RING COUNT before the unit initiates fax reception.

Programming the unit with distinctive ringing pattern

To activate the feature, you need to program the ringing pattern of the phone number to be used as a facsimile number.

Ringing pattern that can be programmed.

A: Standard ring


B: Double ring

C: Triple ring (Short-long-short)

D: Other triple ring

OFF: Turning off the ring pattern detection feature


1

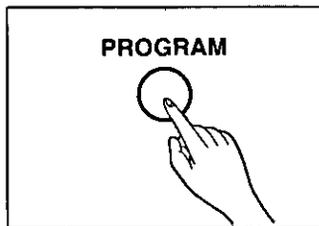

Press the **PROGRAM** button.

The display shows "P- ".


2

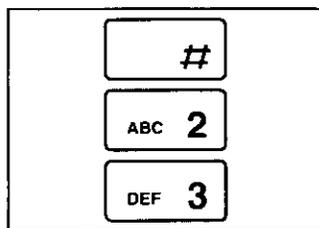

Press #, then press **23**.

The display shows "P-F23 5".

3

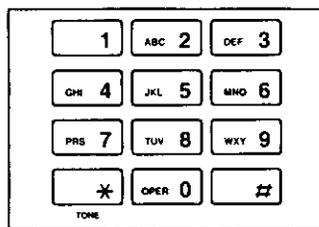

Enter the number you wish to set.

Setting selections are:

1: A (standard ring)


2: B (double ring)

3: C (triple ring)

4: D (other triple ring)

5: OFF


4

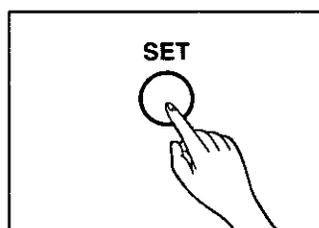

Press the **SET** button to store your selection into memory.

The display shows "P- ".

5

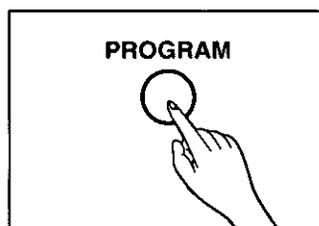


Press the **PROGRAM** button to end the operation.

The display shows the current time.

Using Overseas Transmission Mode

When transmitting documents overseas, there will be some problems that may occur in international communication, such as bad line connections. If this occurs, use the overseas transmission mode.

You can set this mode by pressing the OVERSEAS button.

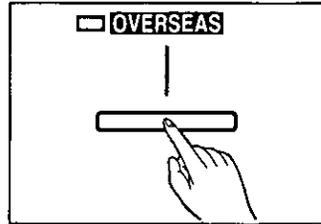

Press the **OVERSEAS** button before transmission.

The OVERSEAS indicator will light.
Then make the transmission.

NOTE:

- After the transmission, this mode is not canceled automatically.
- When the overseas transmission mode is set, the time required to make the transmission will be longer than normal.

Setting the Logo Print Position

Your logo, telephone number, date, time and page number will be printed on the transmitted document from your unit in the following condition.


OUT: Outside of the transmitted document's paper size.

IN: Inside of the transmitted document's paper size.

OFF: Not printed.

To change the logo position:


1

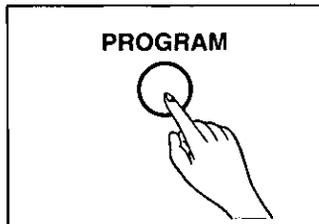

Press the **PROGRAM** button.

The display shows "P- ".


2

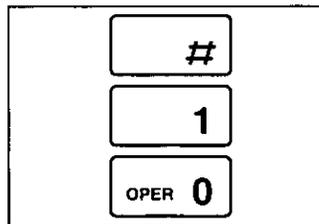

Press #, then press **10**.

The display shows "P-F10 1".

3

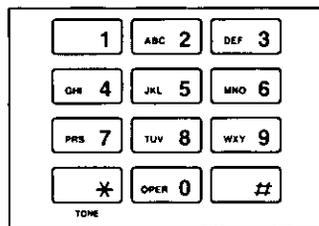

Press the number of the selection you desire.


Setting selections are:

1: OUT

2: IN

3: OFF


4

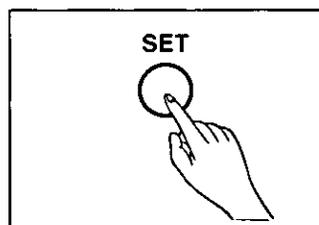

Press the **SET** button to store your selection.

The display shows "P- ".

5

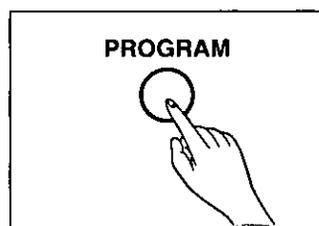

Press the **PROGRAM** button to end the operation.


Setting the Paper Save Function

When this mode is set to on, the unit will reduce the data sent by the other party to a half in length when printing out. This mode also works in making a copy.


NOTE:

This feature does not work when the other party send documents in fine resolution or other nonstandard resolution, or when you make a copy using the FINE, SUPER FINE or HALF TONE resolution.

Original document

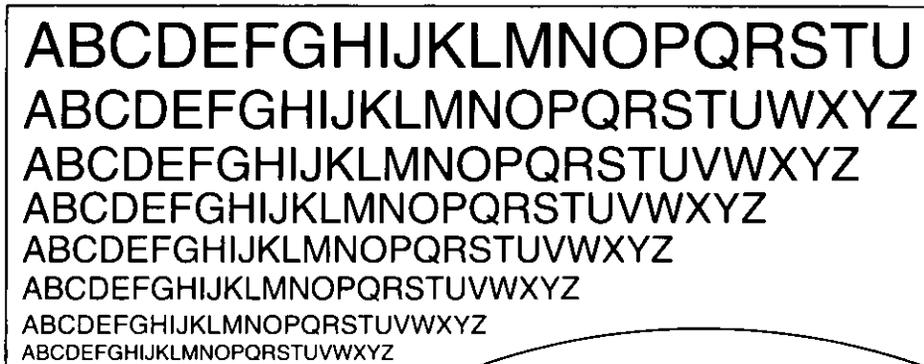


Received document

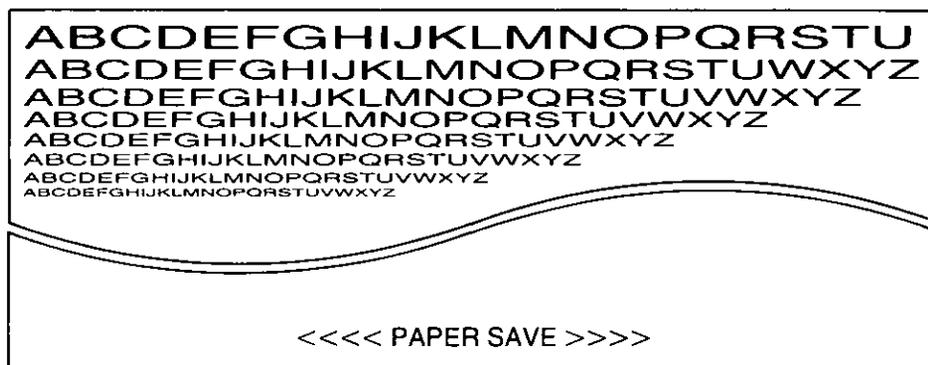

To set the Paper Save function:


1

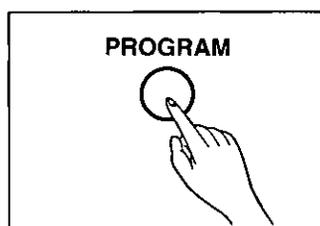

Press the **PROGRAM** button.

The display shows "P- ".


2

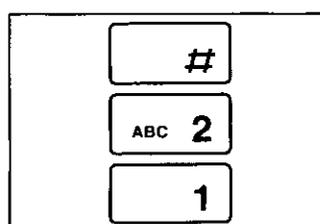

Press #, then press **21**.

The display shows "P-F21 2".

3

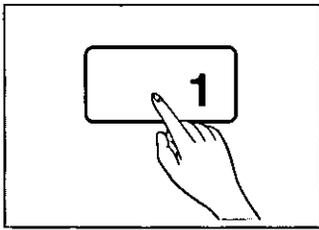


Press **1** to activate this function.

Setting selections are:

1: ON (activate this function)

2: OFF (deactivate this function)


4

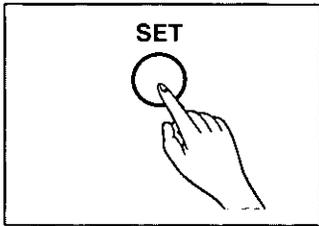

Press the **SET** button to store your selection into memory.

The display shows "P- ".

5

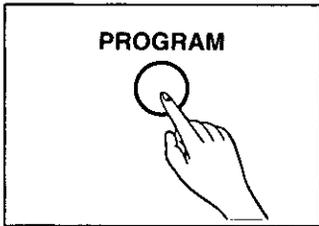


Press the **PROGRAM** button to end the operation.

Extension Copy

When this feature is set to on, the unit will copy a document twice in length. When it is hard to read a document sent by the other party with the Paper Save function on (see page 4-18) or for other reasons, we recommend that you use this feature.

Original document

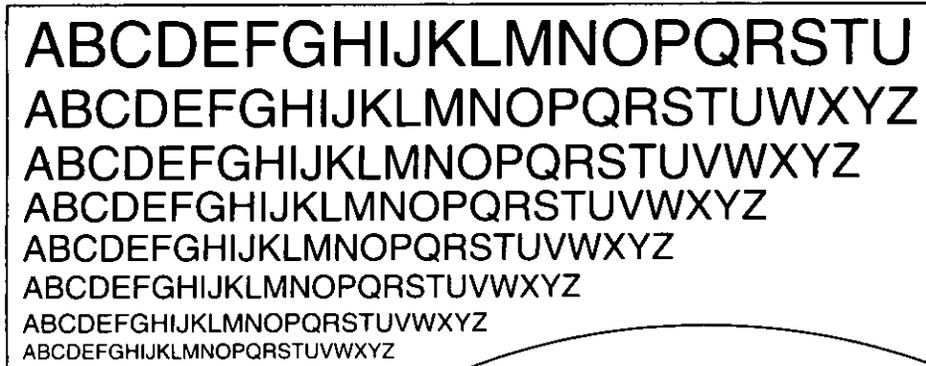


Extended copy




To make an extension copy:

1

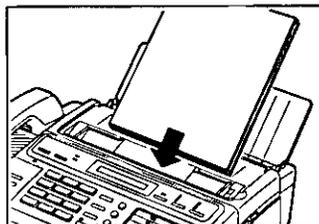

Insert the documents **FACE DOWN**.


2

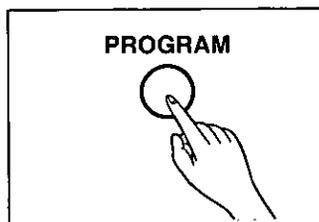

Press the **PROGRAM** button.

The display shows "P-".


3

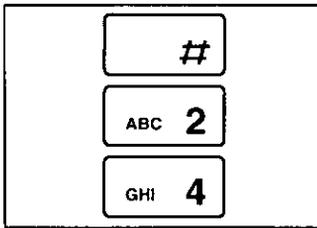

Press #, then press 24.

The display shows "P-F24".


4

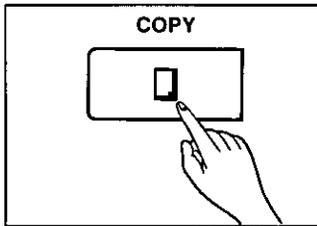

Press the **COPY** button.

The unit starts making a copy.

5

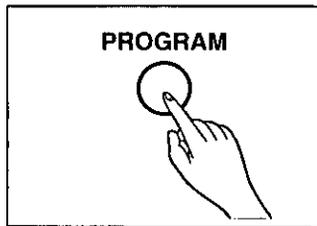

Press the **PROGRAM** button to end the operation.

NOTES:

- This feature works even if the Paper Save function is on.
- To cancel an extension copy before pressing the COPY button, press the PROGRAM button or the STOP button twice. To stop copying, press the STOP button.
- When copying documents printed on thermal recording paper, feed them into the unit one by one or they may jam.

Operating an Answering Device from a Remote Phone

While you are out, you can listen to any recorded incoming messages or re-record your greeting message using a touch tone telephone.

The following features are available on this unit:


- Playing back newly recorded messages
- Playing back all the recorded messages
- Back space and skip forward
- Recording a marker message
- Resetting the tape for future messages
- Answer back
- Re-recording the greeting message
- Skipping the greeting message for incoming message recording mode

Before using these features, you must program your unique remote code (REMOTE ANS ID) that lets you access the answering device of your unit.

The REMOTE ANS ID is preset to "111" as a default.

If you wish to change the code, see page 1-32.

Summary of remote control functions

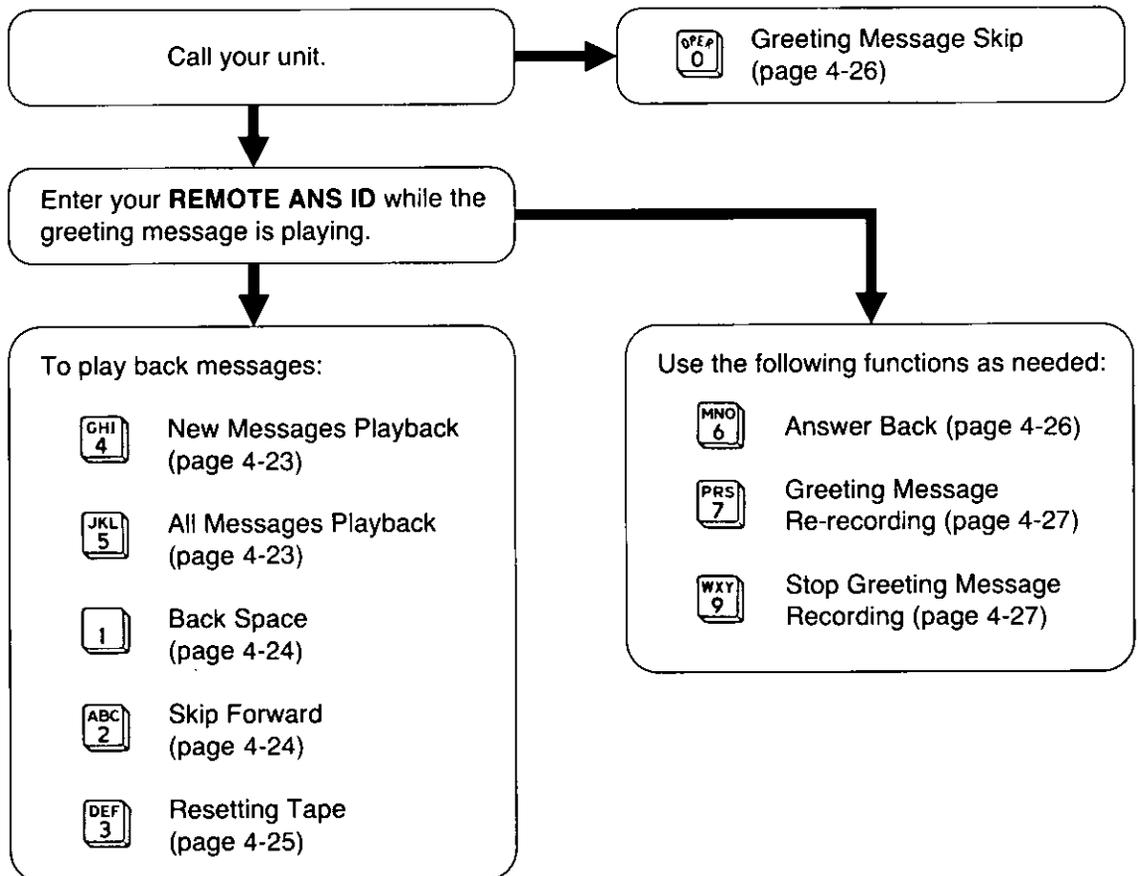


NOTE:

For your convenience, a quick reference card for remote operation is attached in these operating instructions (see pages 6-23 and 6-24).

Playing back newly recorded messages (Memory playback)


It is possible to skip over the recorded messages you have already heard and to play back only new messages.

1

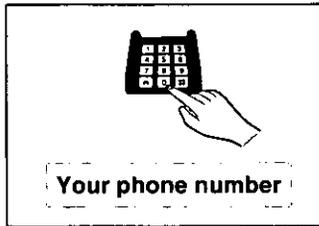

Call your unit.


2

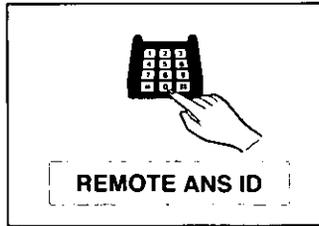

Dial your REMOTE ANS ID while the greeting message is playing.

A long beep and a short beep(s) will sound. Short beep(s) indicate(s) the number of recorded message(s) up to 8 times. Even if 9 or more calls are recorded, a short beep sounds 8 times.

3

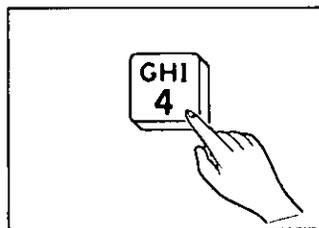

Press 4 immediately after hearing the beeps that indicate the number of recorded messages.

The unit plays back the new messages.


NOTE:

Even during the playback of previously heard messages, you can skip them by pressing 4.

Playing back all messages


You can listen to all the recorded messages from the beginning of the tape.

1

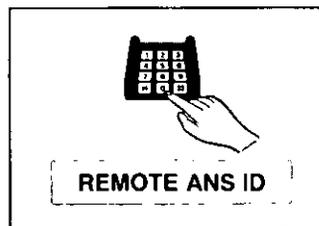

Call your unit then dial your REMOTE ANS ID while the greeting message is playing.

2

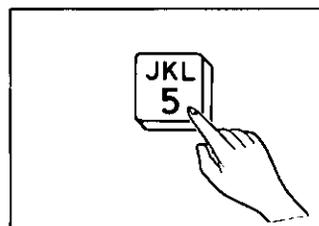

Press 5 within 4 seconds after the short beeps.

The unit will rewind the tape and start to play back all messages.


At the end of the last message, 3 beeps will sound. After hanging up, all the recorded messages are saved and the unit is ready to record further messages.

NOTE:


Even if you do not press 5 in step 2, playback of all messages starts automatically.

Back space and skip forward

While listening to the recorded messages, you can rewind or advance the tape.

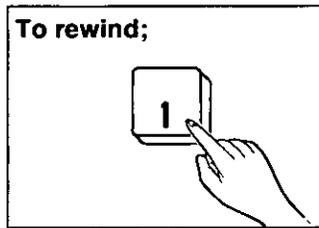

To rewind, press 1.

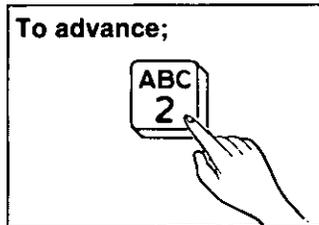

To advance, press 2.


NOTE:

The maximum length of a message that can be rewound or advanced by one press is approximately 15 seconds. You may have to press 1 or 2 several times to rewind or advance the tape to the desired position.


Recording a marker message

After playing back the recorded messages, you can leave an additional message during the same call.

When playback is finished, wait for 3 beeps indicating the end of the last message. Wait about 10 seconds for another 2 beeps indicating that the tape is ready for recording.

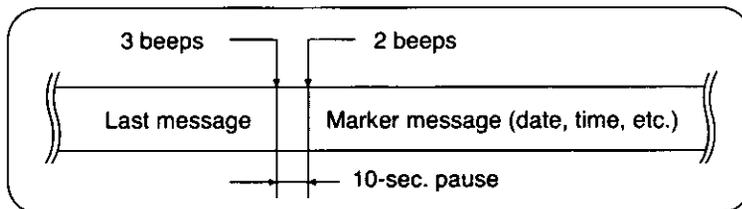

Leave your message after the last 2 beeps.

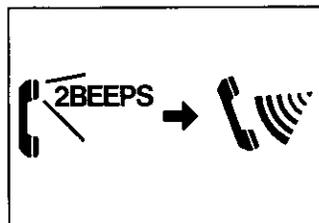


Hang up when finished. The marker message is recorded after the last message on the tape.

Resetting the tape for future messages

After listening to the recorded messages, you can reset the tape to record future messages from the beginning of the tape.

After all the messages have been played back or even while they are being played;

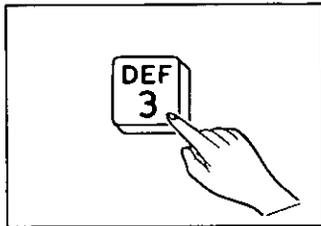


Press **3**, then hang up.

The unit rewinds the tape to the beginning. Future messages will be recorded and the previously recorded messages are erased.

If you have used New Messages Playback;


1

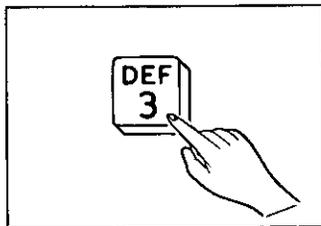

Press **3**.

The unit rewinds the tape to the beginning of the newly recorded messages, then beeps.


2

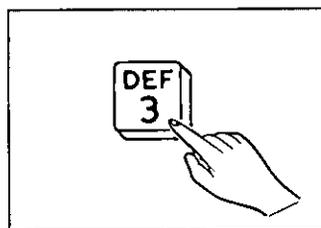

Press **3** again after hearing the beep.

The unit rewinds the tape to the beginning of the previously recorded messages.

If you have reset the tape by mistake;

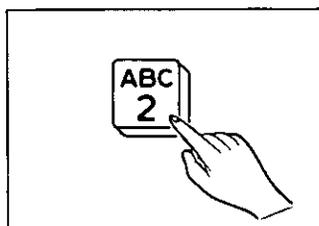

Press **2** after the tape has been reset.


One beep sounds.

The unit advances the tape to the end of the recorded messages.

Answer back


You can monitor the sound in the room where the unit is installed for about 30 seconds. This feature also allows you to speak with anyone in the room where the unit is installed.

1

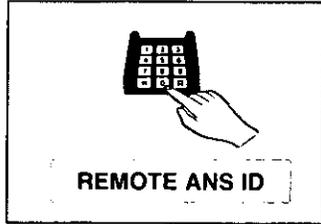

Call your unit, then dial your REMOTE ANS ID while the greeting message is playing.

2

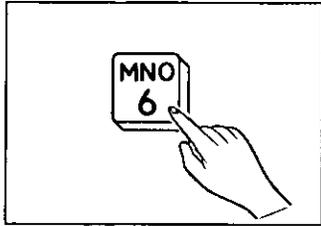

Press **6** after hearing the beeps that indicate the number of recorded messages.

The speaker-phone of the unit in the room is turned on for 30 seconds.


NOTES:

- To continue monitoring, press 6 again within 10 seconds after hearing one beep.
- To the other party in the room, inform them to lift the handset or press the SP-PHONE button.
- If the VOLUME control of the unit has been lowered, the party may not be able to hear your voice from the built-in speaker.

Skipping the greeting message for incoming message recording mode


Callers can leave a message on your unit without listening to your greeting message.

1

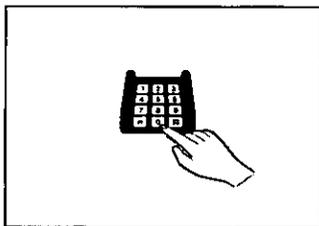

Call your unit.

2

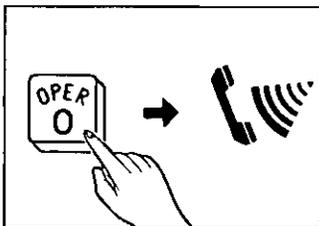


Press **0** while the greeting message is playing.

After hearing a long beep, speak clearly and loudly to leave a message.

Re-recording a greeting message


You can change the content of your greeting message from a remote telephone.

1

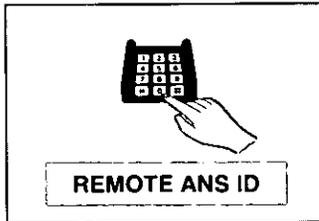


Call your unit, then dial your REMOTE ANS ID while the greeting message is playing.

2

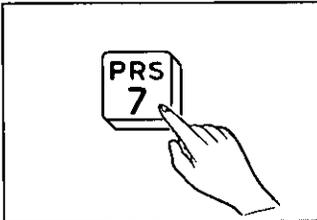


Press 7 to start re-recording after hearing the beeps that indicate the number of recorded messages.

3

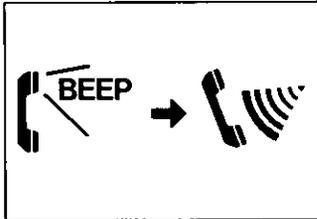

After hearing a long beep, speak clearly and loudly for up to 16 seconds.

4

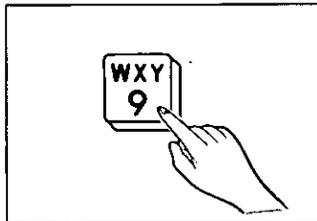

When finished, press 9.

The new greeting message is played to confirm the change.

NOTE:


If you pause for over 2 seconds while recording, the unit beeps and stops the greeting message recording. In this case, repeat from Step 2 within 10 seconds.

Setting the Message Alert

When this feature is on, the unit will let you know with an alert if a caller's message has been recorded or not.


When a new message is recorded in the ANS/FAX mode, a slow beep will sound and the indicator will blink. When you hear the beep sound, play back the message(s), the beep sound will stop and the indicator will stop blinking.

To set the message alert:

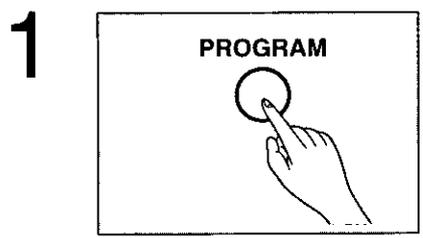


Press the **PROGRAM** button.

The display shows "P- ".

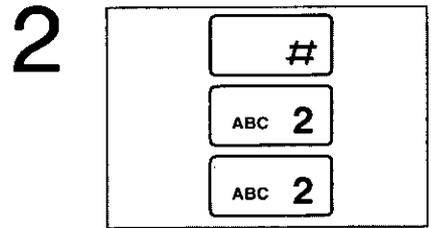


Press #, then press **22**.

The display shows "P-F22 2".

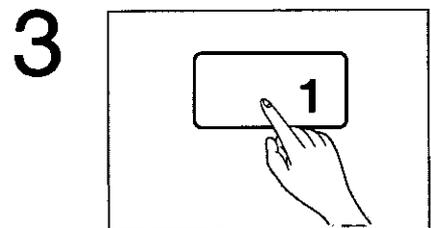


Press **1** to activate this feature.

Setting selections are:
1: ON (activate this feature)
2: OFF (deactivate this feature)

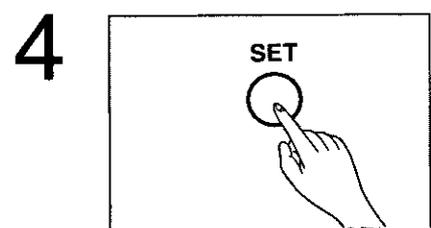

Press the **SET** button to store your selection into memory.

The display shows "P- ".

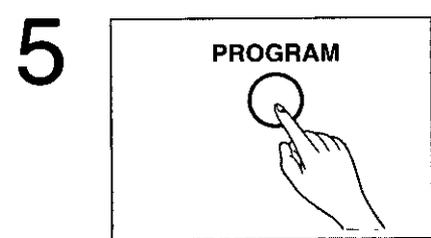


Press the **PROGRAM** button to end the operation.

Voice Contact

Initiating voice contact

While transmitting or receiving a document, you may wish to speak to the other party. If the other party's unit is equipped with a voice contact feature, you can initiate voice contact and notify the other party that you wish to speak after the transmission/reception is completed. The other party's fax will emit a distinctive ring that indicates that a voice conversation is required. This saves the extra expense and time of making a subsequent telephone call to discuss information sent over the fax.

1

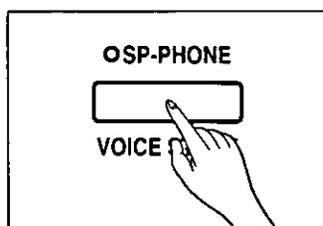

Press the **SP-PHONE** button or lift the handset while transmitting or receiving the documents.

2



When the other party answers, start speaking using the handset.

—If you initiate voice contact while transmitting documents, you can speak after all the documents have been transmitted.

—If you initiate voice contact while receiving documents, you can speak after receiving the current page of the documents.

Receiving a request for voice contact

If the other party initiates voice contact during transmission or reception, your unit will emit a distinctive ring after the fax is completed.



When the unit rings, lift the handset or press the **SP-PHONE** button, then start speaking.

NOTE:

If you do not answer within 10 seconds after hearing several rings indicating the request for voice contact, one of the following occurs:


- When the unit is in the ANS/FAX mode, it plays back your greeting message and records the voice-message on the tape.
- When the unit is in the TEL/FAX mode, the line is disconnected.
- When the unit is in the FAX mode, the line is disconnected.
- When the unit is in the TEL mode, the line is disconnected.

TONE, FLASH and PAUSE Button Usage

TONE button (Temporary tone dialing)

This function is only used when your line has a rotary pulse dial service. Pressing the TONE (*) button allows you to change from pulse to tone mode during a dialing operation and enter special tones and codes to operate the answering device, electronic banking services, call processing services and other special services.

Using the TONE button:

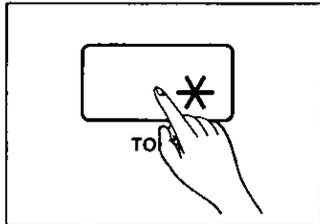

Press the **TONE** (*) button.

When you hang up, the unit automatically returns to pulse mode.

NOTES:


- Store "TONE" in memory as explained on pages 3-2 to 3-5.
- Pressing the TONE button counts as 1 digit while programming.

FLASH button

The FLASH button is used to access some of the features of your host PABX (private automatic branch exchange).

For further details, please contact your local telephone company for information about the availability of these services in your area.

Using the FLASH button:

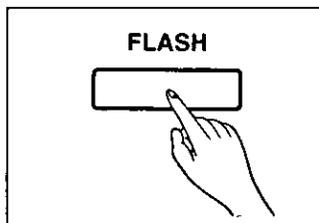

Press the **FLASH** button briefly when required.

NOTES:


- Store "FLASH" in memory as explained on pages 3-2 to 3-5.
- Pressing the FLASH button counts as 1 digit while programming.

PAUSE button

The PAUSE button is used in a dial sequence to access an outside line. Pressing the PAUSE button creates a dialing delay.

Using the PAUSE button:

Example: Line access number 9

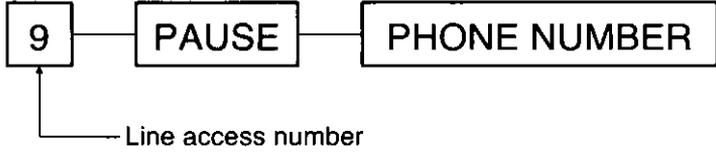

NOTES:

- Store "PAUSE" in memory as explained on pages 3-2 to 3-5.
- Pressing the PAUSE button counts as 1 digit while programming.

Combination dialing


The following combination of dialing methods can be used.

- Manual dialing and automatic dialing
- Pulse and Tone dialing
- Plural memory stations

Setting Day/Night Mode


You may wish to use the unit as a telephone and facsimile during the business hours and switch to the answering device during off hours.

With this feature on, the unit automatically switches from TEL/FAX mode (Day mode) to ANS/FAX mode (Night mode) at a preprogrammed time without the operator's assistance.

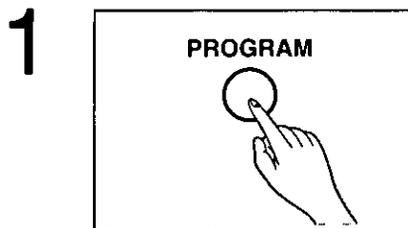


Press the **PROGRAM** button.

The display shows "P- ".

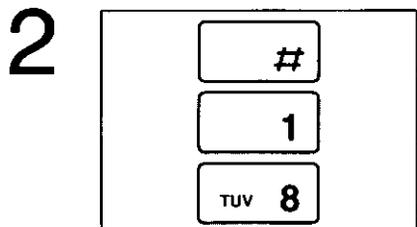

Press #, then press **18**.

The display shows "P-F18 2".

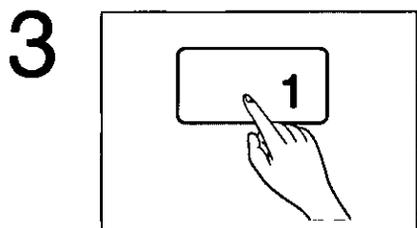


Press **1** to turn on the Day/Night Mode.

Setting selections are:


1: ON (activate this feature)

2: OFF (deactivate this feature)

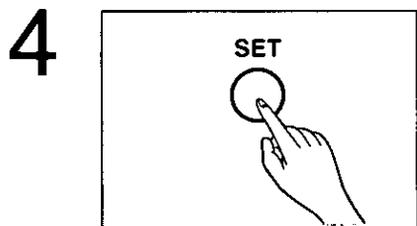

Press the **SET** button.

The display shows "AM P-F18 12-00".

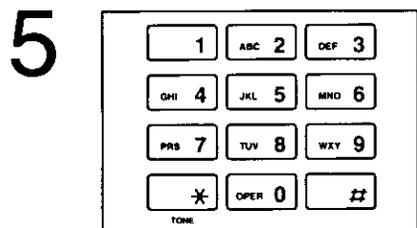


Enter the time at which the TEL/FAX mode (Day mode) starts.

Example: The TEL/FAX mode start time is 8:00AM.

Press 08 and 00.

AM or PM is alternately selected by pressing *.


The display shows "AM P-F18 08-00".

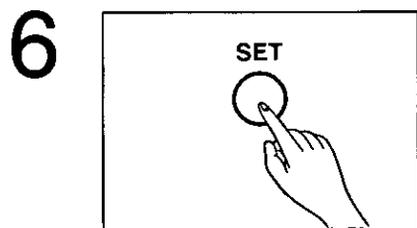

Press the **SET** button.

The display shows "AM P-F18 12-00".


7

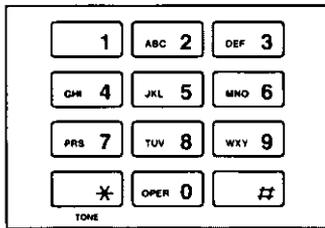

Enter the time at which the ANS/FAX mode (Night mode) starts.

Example: The ANS/FAX mode start time is 5:00PM.
Press 05 and 00.
AM or PM is alternately selected by pressing *.


8

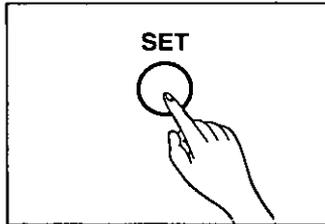

Press the **SET** button.

The display shows "P- ".

9

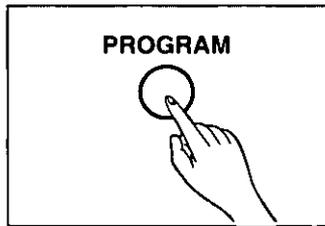

Press the **PROGRAM** button to end the operation.

NOTE:

You can select the desired receiving mode manually while the feature is on. The unit keeps the receiving mode that you select until either Day or Night mode starts.

Setting the Silent Fax Recognition Ring


When a voice call is received in the TEL/FAX mode, the unit will ring three times before it switches automatically to the fax. When an automatic fax transmission is received in the TEL/FAX mode, the unit will receive the fax without ringing (we call this "Silent Fax Recognition Ring"). Change the number of rings choosing the number among "3" (three rings) through "8" (eight rings).

The three rings is preset as default.

NOTES:


- This feature is effective only in the TEL/FAX mode.
- Telephone fees are charged to the calling party from the first ring.

To change the ring count:

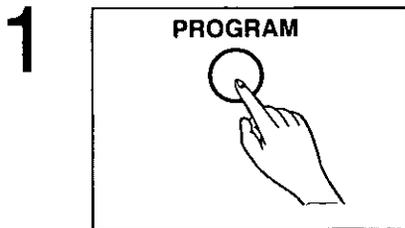


Press the **PROGRAM** button.

The display shows "P- ".

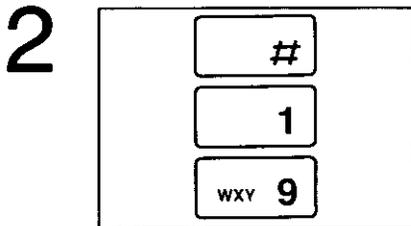


Press #, then press **19**.

The display shows "P-F19 3".

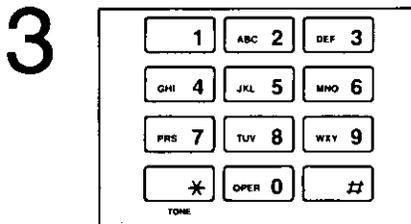


Enter the desired number (choose from 3 to 8).

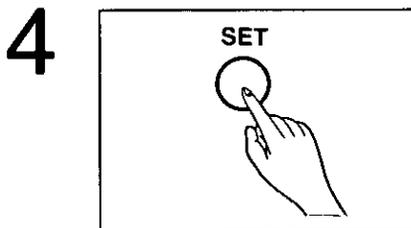

Press the **SET** button to store your selection into memory.

The display shows "P- ".

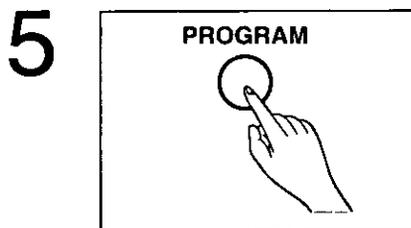

Press the **PROGRAM** button to end the operation.

Chapter 5

Printing Reports and Lists

Table of contents

Activity Report (JOURNAL Report)	5-2
Setting the JOURNAL AUTO PRINT	5-3
Printing a JOURNAL report manually	5-4
List of Stored Phone Numbers (TELEPHONE NUMBER LIST)	5-5
Printing a TELEPHONE NUMBER LIST	5-6
Basic Feature List	5-7
Advanced Feature List	5-8

When the display shows "E-XX", see page 6-2 for corrective measures.

Activity Report (JOURNAL Report)

You can obtain a record of the last 20 transactions (transmissions and receptions) automatically or manually.

When the JOURNAL AUTO PRINT is set to **AUTO**, the report prints automatically after every 20 transactions. After each 20 transactions, the report clears and the list begins again. It may also be printed on request.

When you set this feature to **MANUAL**, the JOURNAL report data is stored until the memory becomes full. Once the memory is full, the oldest entry in the memory is deleted when a new transaction takes place.

This feature has been preset to **AUTO** as the default.


These reports are useful for keeping records of telephone usage or verifying telephone long distance charges.

Printing Reports and Lists

Print time: Hour/Minute AM/PM
 Print date: Month/Day/Year

Jan. 02 1994 10:56AM

```
***** JOURNAL *****
*
*
*
* NO.  OTHER FACSIMILE  START TIME  USAGE TIME  MODE  PAGES  RESULT  CODE
*-----*
* 01  1234567           Jan. 1 11:28AM  01'20    TX    02    OK
* 02  9998765           Jan. 1 11:52AM  00'44    TX    01    OK
* 03  <<<  G3  >>>      Jan. 1 11:54AM  00'46    RX    01    OK
* 04  5556677           Jan. 1 12:19PM  01'25    TX    03    OK
* 05  +987 1234         Jan. 1 12:35PM  01'31    RX    03    OK
* 06  <501>              Jan. 1 12:37PM  01'55    TX    05    OK
* 07  7776543           Jan. 1  1:27PM  00'52    TX    01    OK
* 08  4445566           Jan. 1  2:46PM  00'57    TX    02    OK
* 09  4445566           Jan. 1  3:17PM  00'30    TX    01    PRESSED THE STOP KEY (A2)
* 10  4445566           Jan. 1  3:18PM  00'41    TX    01    OK
* 11  <<<                Jan. 1  3:18PM  00'41    RX    02    OK
* 12  <<<                Jan. 1  3:18PM  00'41    TX    01    OK
* 13  5556677           Jan. 2  8:26AM  01'55    RX    01    OK
* 14  5556677           Jan. 2  8:56AM  01'18    RX    01    OK
* 15  <<<  G3  >>>      Jan. 2  9:25AM  00'47    TX    01    OK
* 16  5556677           Jan. 2  9:40AM  00'59    TX    02    OK
* 17  9996675           Jan. 2 10:55AM  00'43    TX    01    OK
*
*****
```

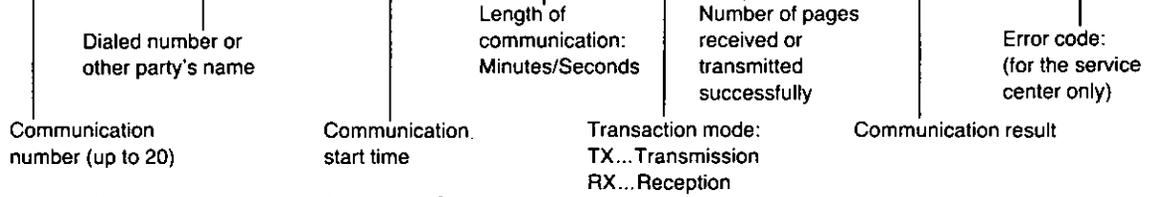


Explanation of communication result

- OK: Successful communication
- PRESSED THE STOP KEY: The fax communication was interrupted since the STOP/CLEAR button was pressed.
- DOCUMENT JAMMED: A document jammed.
- NO DOCUMENT: The document was not fed into the unit properly.
- PRINTER OVERHEATED: Printing head was overheated.
- PAPER OUT: The unit is out of recording paper.
- THE COVER WAS OPENED: The front lid or back lid was opened.
- COMMUNICATION ERROR: Transmission or reception error.
- PASSCODE FAILED: Passcode communication failed.
- JUNK MAIL PROH. REJECT: The unit rejects fax reception when the junk mail prohibitor is on.
- NO RESPONSE: Receiving unit is busy or out of recording paper.

Setting the JOURNAL AUTO PRINT


1

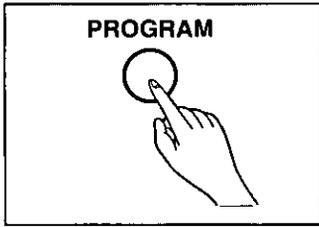

Press the **PROGRAM** button.

The display shows "P- ".


2

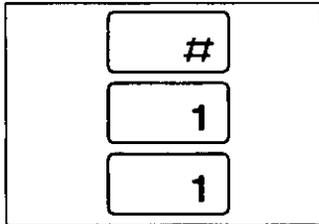

Press #, then press 11.

The display shows "P-F11 1".

3

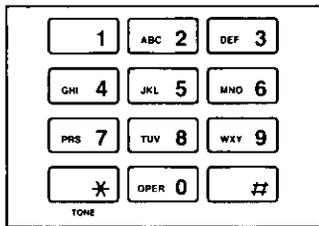


Press the number of the selection you desire.

Setting selections are:

1: AUTO (Prints a report every 20 transactions automatically.)

2: MANUAL


4

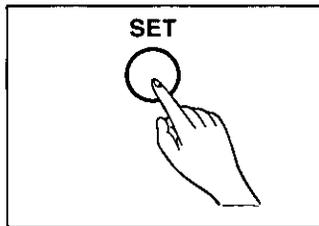

Press the **SET** button to store your selection into memory.

The display shows "P- ".

5

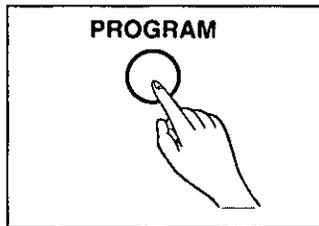


Press the **PROGRAM** button to end the operation.

Printing a JOURNAL report manually

You can print a report of the current JOURNAL upon request. This will not clear the report which will continue until 20 transactions are completed.


1

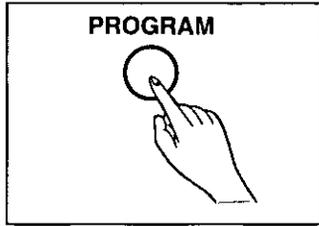

Press the **PROGRAM** button.

The display shows "P- ".


2

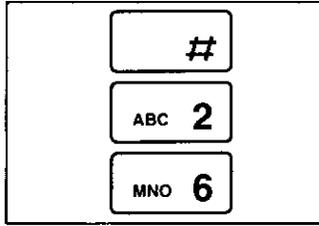

Press #, then press **26**.

The display shows "P-F26".

3

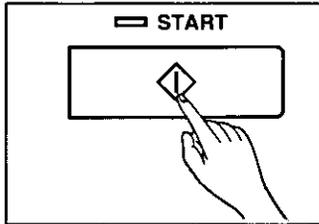

Press the **START** button to obtain a report.

The unit will start printing.

If there have been no transactions, no JOURNAL is printed.

When finished, the display shows the current time.

List of Stored Phone Numbers (TELEPHONE NUMBER LIST)

You can print a list of the numbers programmed for one touch dialing and speed dialing. Use this feature to confirm that you have correctly stored phone numbers.

Sample of TELEPHONE NUMBER LIST

```

***** TELEPHONE NUMBER LIST *****
*
*                               << STATION KEY LIST >>                               *
*-----*
*      PHONE NUMBER                PHONE NUMBER                                *
*      01 T092-123-4567            07 R999-1234                             *
*      02 T83R555-1234            08 RI                                     *
*      03 T012-999-8877            09                                       *
*      04 T83P4567                 10                                       *
*      05 T987-6543                11                                       *
*      06                           12                                       *
*
*                               << AUTO KEY LIST >>                               *
*-----*
*      PHONE NUMBER                PHONE NUMBER                                *
*      00 T111-2233                10 T222-3344                             *
*      01 R765-4321                11 T9P092-555-6677                       *
*      02 T345F6789                12                                       *
*      03 R092( _____ )        13                                       *
*      04                            14                                       *
*      05                            15                                       *
*      06                            16                                       *
*      07                            17                                       *
*      08                            18                                       *
*      09                            19                                       *
*
*****
  
```

↙ Secret phone number


Printing Reports and Lists

Codes in each phone number:

- T: Shows that you have entered the telephone number in the TONE dialing mode.
- R: Shows that you have entered the telephone number in the PULSE (rotary) dialing mode.
- P: Shows that you have entered PAUSE.
- F: Shows that you have entered FLASH.

Printing a TELEPHONE NUMBER LIST


1

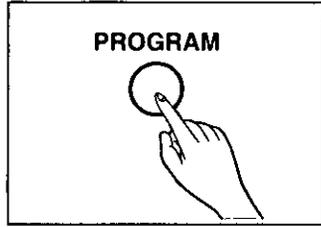

Press the **PROGRAM** button.

The display shows "P- ".


2

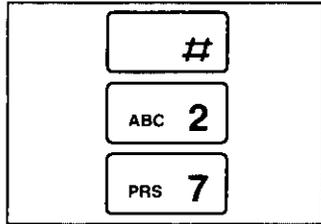

Press #, then press **27**.

The display shows "P-F27".

3

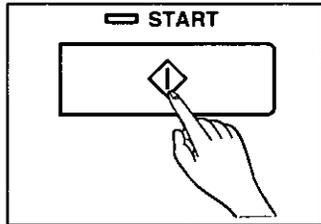

Press the **START** button.

The unit will start printing.

When finished, the display shows the current time.


Advanced Feature List

Sample of Advanced Feature List

Code	Functions	Settings [selections]
***** < ADVANCED FEATURE LIST > *****		
#10	LOGO POSITION	= OUT [1=OUT 2=IN 3=OFF]
#11	JOURNAL AUTO PRINT	= AUTO [1=AUTO 2=MANUAL]
#12	MAIN PASSCODE	= 0000
#13	TX PASSCODE CHECK	= OFF [1=ON 2=OFF]
#14	RX PASSCODE CHECK	= OFF [1=ON 2=OFF]
#16	DELAYED TRANSMISSION	= OFF [1=ON 2=OFF]
	START TIME	= 12:00AM
	DESTINATION	=
#18	DAY/NIGHT MODE	= OFF [1=ON 2=OFF]
	DAY MODE TIME	= 12:00AM
	NIGHT MODE TIME	= 12:00AM
#19	SILENT FAX RECOGNITION RING	= 3 [3...8]
#20	REMOTE FAX ACTIVATION CODE	= **
#21	PAPER SAVE FUNCTION	= OFF [1=ON 2=OFF]
#22	MESSAGE ALERT	= OFF [1=ON 2=OFF]
#23	RING PATTERN DETECTION	= OFF [1=A 2=B 3=C 4=D 5=OFF]
#24	EXTENSION COPY	
#26	PRINT JOURNAL	
#27	PRINT TEL LIST	
#28	PRINTER TEST	
#38	JUNK MAIL PROHIBITOR	= OFF [1=ON 2=OFF]
	JUNK MAIL PROHIBITOR ID	= 22
#50	SET DEFAULT (#10 TO #38)	
#9000*	(SERVICE DATA SET UP)	← This code is only for a service center.

To obtain an Advanced Feature List:


1

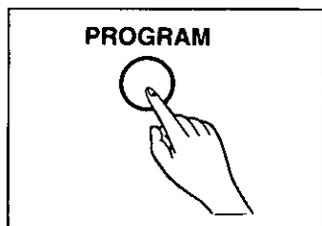

Press the **PROGRAM** button.


The display shows "P- ".

2

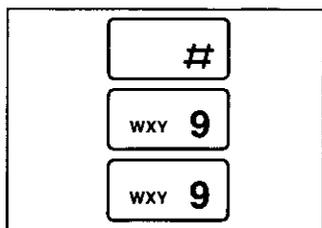

Press #, then press **99**.

3

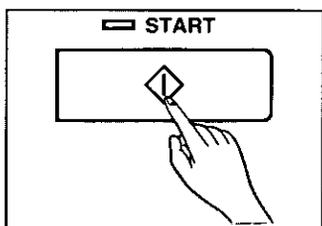

Press the **START** button.

The unit will start printing.

When finished, the display shows the current time.

Chapter 6

General Information

Table of contents


Troubleshooting	6-2
Error code	6-2
General corrective measures	6-3
Clearing a document jam	6-6
Clearing a recording paper jam	6-7
Maintenance	6-8
Cleaning the microcassette compartment	6-8
Cleaning the document feeder unit	6-9
Cleaning the thermal head	6-9
Printing a test pattern	6-10
Display Indications	6-11
Accessory Order Information	6-12
Specifications	6-13
For Users in the United States	6-14
For Users in Canada	6-16
Index	6-18

When the display shows "E-XX", see page 6-2 for corrective measures.

Troubleshooting

Error code

The error code appears on the display when any trouble occurs.

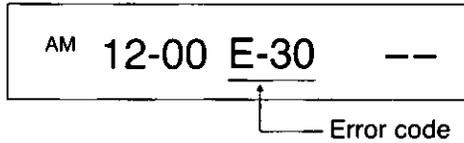

Error Code Table

If the unit detects a problem, one of the following error codes will appear on the display.

CODE	CAUSE	REMEDY
02	Interrupted communication.	Retry or check parameters.
03	Document jammed or not fed into the unit properly.	Check document path. If a document is jammed, open the cover, then remove the document (see page 6-6).
04	Transmission or reception error.	Retry the operation.
05	Printing head overheating.	Allow the unit to cool.
06	The unit is out of recording paper.	Check recording paper (see pages 1-10 and 1-11).
07	The cover is open.	Check cover latch.
09	Passcode communication failed.	Confirm that your passcode corresponds to that of the other unit (see page 4-6).
20	Memory check error.	Memory (phone numbers, parameters, etc.) has been erased. Reprogram (see pages 1-18 to 1-19 and pages 3-2 to 3-5).
21	Power failed. Call counter shows "--".	Check your messages (see pages 2-11 and 2-12).
30	The greeting message is not recorded.	Record your greeting message (see pages 1-14 and 1-15).
32	The microcassette tape is broken or not installed.	Install a new tape (see page 1-9).

General corrective measures

GENERAL

PROBLEM	CAUSE & REMEDY
I cannot transmit or receive a document or cannot talk.	The line cords are connected incorrectly or not connected. —Confirm the connections (see page 1-8).
The unit does not operate properly.	—Turn the POWER switch off, then turn it on again (see page 1-13).
The ALARM indicator lights.	The covers of the unit are open. —Close them firmly.
The unit does not ring.	The RINGER volume selector is set to the OFF position. —Set the RINGER volume selector to the HIGH or LOW position (see page 1-12).

TRANSMISSION

PROBLEM	CAUSE & REMEDY
The ALARM indicator flashes after transmission.	A transmission error has occurred. —Try again (see page 2-4).
The ALARM indicator lights during transmission.	A document more than 600 mm (23 $\frac{5}{8}$ ") is being transmitted. —Divide the document so that the length can be shorter than 600 mm (23 $\frac{5}{8}$ ") (see page 2-2). A document causes a jam. —Remove it, then try again (see page 6-6). The unit has been connected to a line that has special telephone services, such as call waiting. —Connect the unit to a line that does not have such services.
The other party complains that letters on the document are distorted.	If your line has special telephone services such as call waiting, the service may have been activated during the fax reception. —Connect the unit to a line that does not have such services. Another telephone connected to the same line as your unit is connected is hung off. —Hang up and try again.
The other party complains that a dirty pattern or black lines appear on the received documents.	The glass and rollers inside the document feeder unit are dirty. —Clean them (see page 6-9).
The unit does not feed the document properly.	The paper rollers inside the document feeder unit are dirty. —Clean them (see page 6-9).

TRANSMISSION (continued)

Problems when transmitting international facsimile.

—Use the overseas transmission mode (see page 4-16).

RECEIVING

PROBLEM	CAUSE & REMEDY
Unable to receive documents.	The recording paper is not installed. —Install the recording paper (see pages 1-10 and 1-11).
Unable to receive documents automatically.	The receive mode of the unit is set to the TEL mode. —Operate the manual reception (see page 2-6) or set the receive mode to ANS/FAX, TEL/FAX or FAX mode (see pages 2-7 and 2-8). Your greeting message may be too long. —Shorten your greeting message (see pages 1-14 and 1-15) or ask the other party to press “*” (ASTERISK) then start to transmit a document. —Set the number of rings to answer to “1”. (see pages 1-28 to 1-30).
Recording image is faint and I cannot read it well.	The sender transmitted a faint document. —Request the sender to transmit a clearer copy of the document.
The START Indicator flashes for about 40 seconds after the unit receives a call automatically, but nothing is recorded.	—The caller hangs up during or immediately after your greeting message plays. This may occur if the disconnected signal is not transmitted from the telephone company's central office.
Problems when receiving international facsimiles.	Your greeting message may be too long. —Shorten your greeting message to 10 seconds or less (see pages 1-14 and 1-15). The RX SPEED may need to be set to 4800 bps. —Call your service center (see pages 6-17 and 6-25).
Received or copied image is distorted.	The thermal head is dirty. —Clean it with a cloth moistened with denatured alcohol (see page 6-9).


ANSWERING DEVICE & TELEPHONE

PROBLEM	CAUSE & REMEDY
The Call Counter in the display shows “---”.	There has been a power failure. —Confirm whether voice-messages are recorded on the tape or not (see pages 2-11 and 2-12). The microcassette tape was not rewound when the unit was turned on. —Rewind the tape (see page 2-10).
The unit has been set to the ANS/FAX mode, but no voice-messages have been recorded.	The tape is not installed properly or it is broken (cut, worn out or twisted). —Install the tape properly or replace it with a new one (see page 1-9).
When the tape is played, the sound level is low or nothing can be heard.	The speaker volume is low. —Raise the sound level using the VOLUME control. The head in the cassette deck compartment is dirty. —Clean it (see page 6-8).
I have played back all the recorded messages, and I want to record the next call after the last message.	—Leave the unit as it is after hearing the messages.
I cannot retrieve recorded messages from a remote phone.	—Make sure that you use your REMOTE ANS ID number correctly. When you use your REMOTE ANS ID number, press the buttons firmly.
Some voice-messages have not been fully recorded.	The calling party control (CPC) should be set to “B”. —Call your service center (see pages 6-17 and 6-25).
When a caller hangs up after leaving a message, the tape does not stop.	VOX TIME should be set to 4 seconds. —Call your service center (see pages 6-17 and 6-25).

Clearing a document jam


If an original document becomes jammed in the document feeder unit, the ALARM indicator lights and a long beep is heard. Remove the jammed document by following steps below.

1

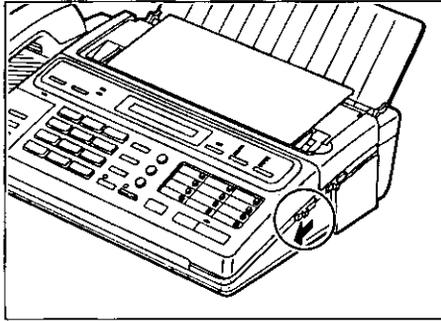


Slide the FRONT LID OPEN lever forward to open the document feeder unit.

2

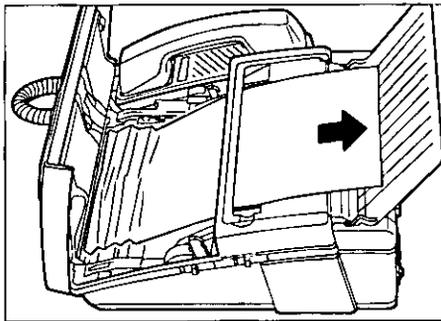

Remove the jammed document carefully.

3

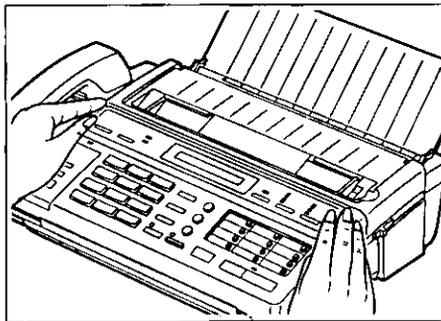


Then close the document feeder unit carefully by pushing down on both ends gently.

Clearing a recording paper jam


When the unit does not eject a recording paper during receiving, the recording paper has jammed. Remove the jammed paper by following the steps below.

1

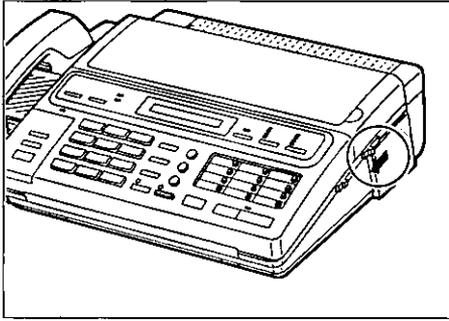


Slide the BACK LID OPEN lever forward to open the recording paper unit.

2

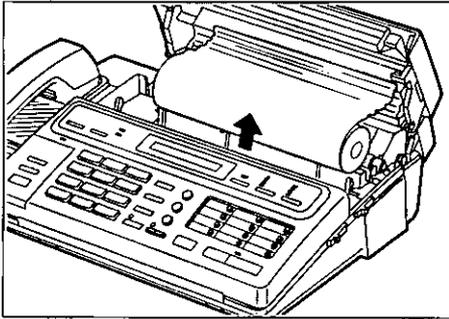

Remove the jammed paper.

3

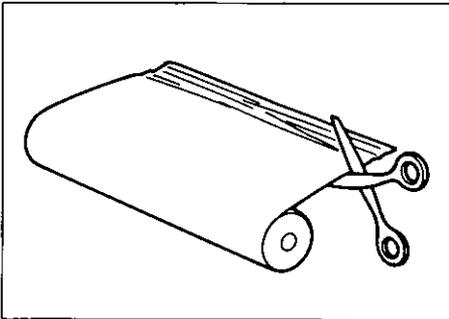


Cut off the wrinkled portion.

4



Replace the recording paper roll. Then insert its leading edge into the recording paper exit and pull the paper a few centimeters (one or two inches) out of the unit. Make sure that the shiny side of the paper is facing up and that there is no slack in the paper roll.

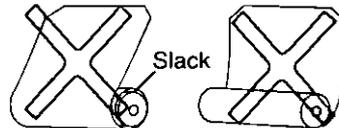


5



Close the recording paper unit carefully by pushing down on both ends gently.

Maintenance


Be sure that the AC plug is disconnected from the outlet before performing any maintenance.

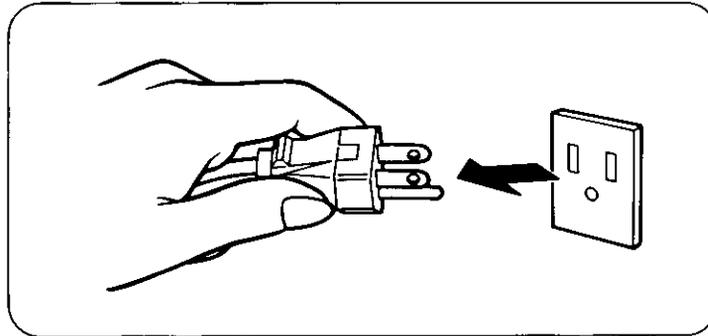

Cleaning the microcassette compartment

Dirt and residue from the tape may adhere to the head and capstan, causing distortion. Clean these parts periodically in the manner described below for the best sound quality.

1. Open the cassette compartment cover.
2. Remove the microcassette tape.
3. Clean the head surfaces, pinch roller and capstan with a cotton swab.
If these surfaces are extremely dirty, wipe them with a cotton swab dampened with denatured alcohol, then wipe them with a dry soft cloth.

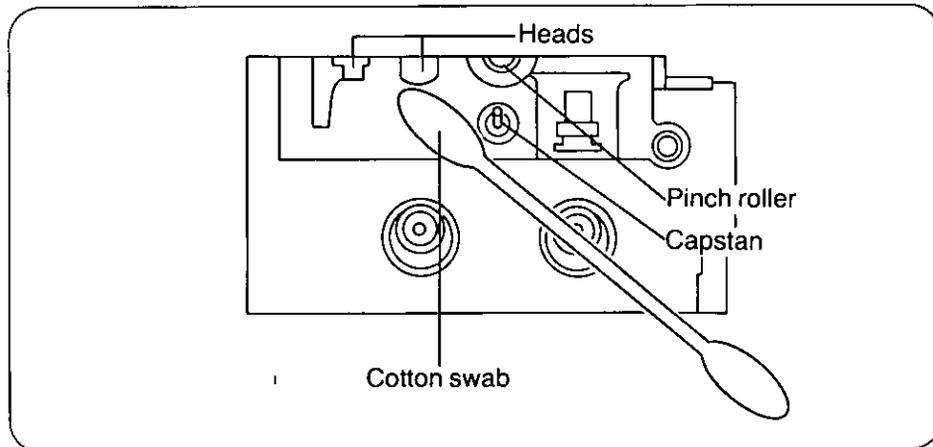

NOTES:

- Do not bring magnetic or metal objects, such as a screwdriver, near the head assembly, as such objects could magnetize the heads.
- Do not oil any part of the unit.


Cleaning the document feeder unit

Clean the inside of the document feeder unit by following the steps below;

—when the unit does not feed the document properly.

—when a dirty pattern or black bands appear on a copied or transmitted document.

1. Turn the **POWER** switch to the “o” (OFF) position and open the document feeder unit.
2. Clean the rubber and the paper rollers rotating them with a cloth moistened with isopropyl rubbing alcohol, then dry thoroughly to prevent paper jams.
3. Clean the glass and the white plate with a dry soft cloth.

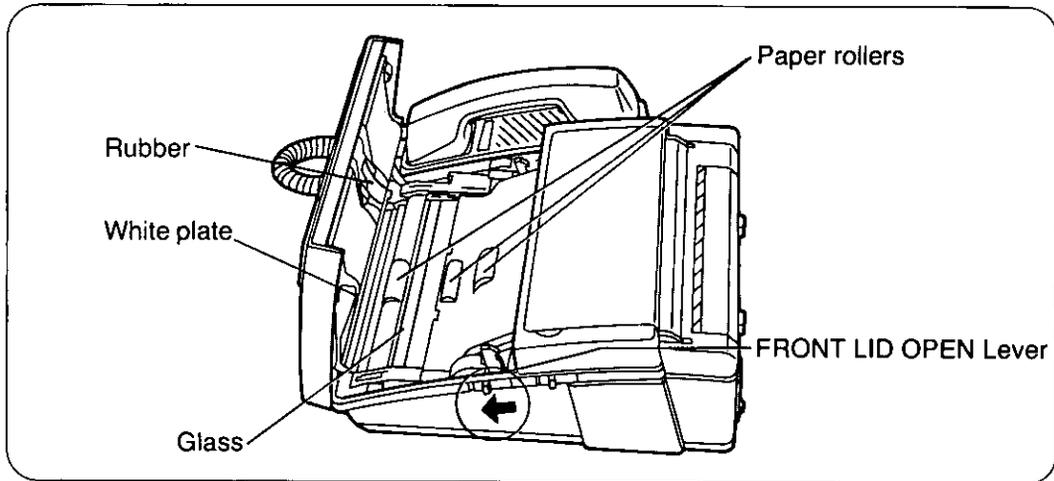


4. Close the document feeder unit and turn the **POWER** switch to the “I” (ON) position.

Cleaning the thermal head

If a dirty pattern or black bands appear on a copied or received document, clean the thermal head inside the recording paper unit by following the steps below.

1. Turn the **POWER** switch to the “o” (OFF) position and open the recording paper unit.
2. Remove the recording paper from the unit.
3. Clean the thermal head with a cloth moistened with isopropyl rubbing alcohol, then dry thoroughly.

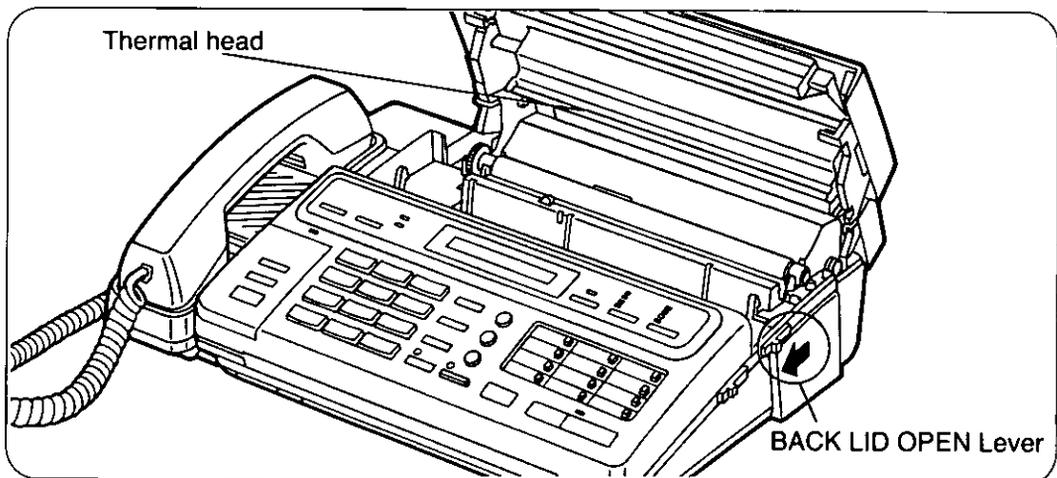

4. Close the recording paper unit and turn the **POWER** switch to the “I” (ON) position.

NOTES:


- To prevent malfunction due to static electricity, do not use a dry cloth and do not touch the thermal head with your finger directly.
- When finished, confirm the print quality by printing the test pattern (see page 6-10).

Printing a test pattern

You can check the print quality of your unit by printing the test pattern. If the test pattern has any blurred points or lines or a dirty pattern, please clean the thermal head following the instructions on page 6-9.

To obtain the test pattern, follow the steps below.


1

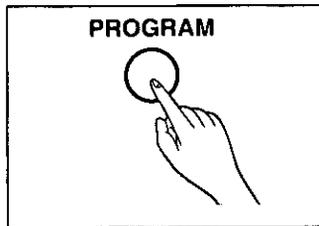

Press the **PROGRAM** button.

The display shows "P- ".


2

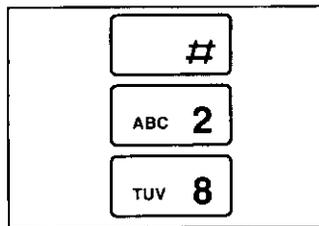

Press #, then press **28**.

The display shows "P-F28".


3

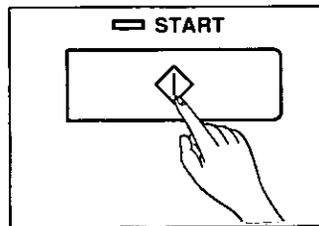

Press the **START** button.


The unit prints the pattern as shown below.

4

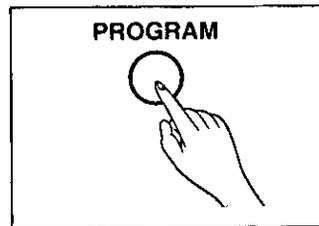

Press the **PROGRAM** button to end the operation.

Sample of test pattern:

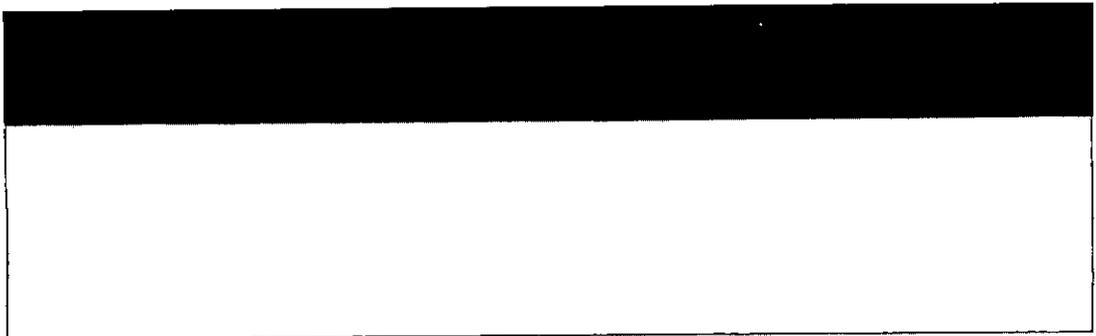



Display Indications

The shaded part is described in the table below.

Display	Meaning	Reference Page
AM 9-50 03	Idle status—The current time and number of incoming messages received are displayed. e.g. The current time is 9:50 AM. Three messages have been received.	
AM 9-50 04-30P 03	Idle status—Delayed transmission starting time is displayed. e.g. The delayed transmission will start at 4:30 PM.	4-2 4-3
AM 9-50 E-30 03	An error code is displayed. e.g. The error code is E-30.	6-2
P-05	The number of the page currently being transmitted/received is displayed.	2-4 to 2-8
AM 9-50 0-00 03	Indicates that the tape is currently being rewound.	2-10 to 2-11
AM 9-50 0-00 03	Indicates that the tape is advancing/playing.	2-10 to 2-14
AM 9-50 0-00 03	Displayed for 7 seconds after Auto-Logic operation, and for 1 minute after pressing the STOP button during message playback.	2-10 to 2-14
AM 9-50 0-00 03	Flashes to indicate that the answering device has entered pause mode as a result of pressing the START button to receive a fax during answering device operation.	
AM 9-50 11 03	Indicates elapsed time. e.g. 11 seconds have elapsed since you began to record a greeting message.	1-15
P-.	Indicates that the unit is in program mode awaiting further entry.	1-20
P-001 -	Indicates that the unit is ready to accept the phone number for an AUTO DIAL station. e.g. The unit is ready to accept the number for AUTO DIAL station 01.	3-4
P-007 -	Indicates that the unit is ready to accept the phone number for a direct call station. e.g. The unit is ready to accept the number for direct call station 7.	3-3
P-F.	Indicates that the unit is in program mode and is awaiting entry of a feature number.	1-20
P-F04 3	Indicates the setting of a feature. e.g. The setting for feature number 04 is 3.	1-27

Accessory Order Information

  Replacement parts and accessories are available through your local authorized parts distributor.

Pats No.	Picture	Description	Comment
MC-30 MC-60		Microcassette Tape	For replacement
KX-A101* KX-A106*		Thermal Recording Paper 216 mm×30 m roll (8½"×98' roll) KX-A101=½" core KX-A106=1" core	For supplement
KX-A124*		Super Thermal Recording Paper 216 mm×24 m roll (8½"×80' roll)	For supplement

*These parts numbers are supplied in the United States only. For users in Canada, consult with your place of purchase or the nearest servicenter.

Specifications

Type:	Desktop
Applicable Lines:	Public Switched Telephone Network
Document Size:	Max. 216 mm (8½") in width, Max. 600 mm (23⅝") in length
Effective Scanning Width:	Max. 208 mm (8⅜")
Printing Paper Size:	Thermal Paper: 216 mm (letter)×30 m roll (8½"×98' roll) Super Thermal Paper: 216 mm (letter)×24 m roll (8½"×80' roll)
Effective Printing Width:	208 mm (8⅜")
Transmission Time*:	Approx. 30 sec/page (G3 Normal mode) Approx. 15 sec/page (Original mode)
Scanning Density:	Horizontal 8 pels/mm (203 pels/inch) Vertical 3.85 lines/mm (98 lines/inch) Standard 7.7 lines/mm (196 lines/inch) Fine/Halftone 15.4 lines/mm (392 lines/inch) Superfine
Scanner Type:	CCD image sensor
Printer Type:	Thermal printing
Data Compression System:	Modified Huffman (MH), Modified Read (MR)
Modem Speed:	9600/7200/4800/2400 bps; Automatic Fallback
Automatic Document Feeder:	Max. 10 sheets
Temperature Range:	5°–35°C (41°–95°F)
Humidity Range:	45%–85%
Dimensions (H×W×D):	107×379×297 mm (4¼"×14⅛"×11¾")
Weight:	5.3 kg (11.68 lbs)
Power Consumption:	Approx. 50 W
Power Supply:	AC 120 V, 60 Hz

*Transmission Time: Transmission times apply to text data using ITU-TS No. 1 test chart, between same machine models at maximum modem speed. Transmission times vary in actual usage.

For Users in the United States

If required by the telephone company, inform them of the following.

- FCC Registration No.: (found on the rear side of the unit)
- Ringer Equivalence: (found on the rear side of the unit)

The particular telephone line to which the equipment is connected.

This unit must not be connected to a coin operated line. If you are on a party line, check with your local telephone company.

Ringer Equivalence Number (REN):

This REN is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

In the event that terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service providing that they:

- a) Promptly notify the customer.
- b) Give the customer an opportunity to correct the problem with their equipment.
- c) Inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.

The Telephone Company may make changes in its communications facilities, equipment operations, or procedures where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68. If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

CAUTION:

To assure continued compliance with FCC rules, do not make any unauthorized modifications.

When programming emergency numbers and/or making test calls to emergency numbers:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours; such as early morning or late evenings.

This telephone provides magnetic coupling to hearing aids.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PANASONIC ANSWERING SYSTEM WITH FACSIMILE Limited Warranty

Panasonic Company, Panasonic Company (West) of America or Panasonic Sales Company (collectively referred to as "PANASONIC"), will repair this product with new or rebuilt parts, free of charge, in the U.S.A. or Puerto Rico for one (1) year from the date of original purchase in the event of a defect in materials or workmanship.

Batteries (when applicable)—New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days from the date of original purchase. Non-rechargeable batteries are not warranted.

Carry-in or mail-in service in the U.S.A. can be obtained during the warranty period from a Matsushita Services Company (MSC) Factory Servicenter listed in the Servicenter Directory. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the telephone numbers listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty performance is rendered.

This warranty only covers failures due to defects in materials or workmanship which occur during normal use. It does not cover damage which occurs in shipment or failures which are caused by products not supplied by PANASONIC or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, modification, or service by anyone other than an MSC Factory Servicenter or an authorized MSC Servicenter or damage that is attributable to Acts of God, including, but not limited to, line surges.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

PANASONIC SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF GOODWILL, PROFITS OR REVENUE, LOSS OF USE OF THIS PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF SUBSTITUTE EQUIPMENT, DOWNTIME COSTS, OR CLAIMS OF ANY PARTY DEALING WITH BUYER FOR SUCH DAMAGES, RESULTING FROM THE USE OF THIS PRODUCT OR ARISING FROM BREACH OF WARRANTY OR CONTRACT, NEGLIGENCE, OR ANY OTHER LEGAL THEORY.

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If a problem with this ANSWERING SYSTEM WITH FACSIMILE develops during the warranty period, you may contact your dealer or the MSC Factory Servicenter or authorized Panasonic Service Dealer. If the problem is not handled to your satisfaction, write to the Panasonic Company Consumer Affairs Division at the address indicated on the Servicenter Directory.

For Users in Canada

SAFETY PRECAUTIONS

This unit may only be connected to electrical outlets that supply 120 V AC.

NOTICE:

The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION:

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician.

The Load Number: (found on the rear side of the unit)

(LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all the devices does not exceed 100.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Department of Communications.

If there is any trouble, disconnect the facsimile from the telephone line, and connect a known working phone. If the known working phone operates properly, have the defective unit repaired by one of the specified Panasonic Factory Servicentres (refer to your dealer). If the known working telephone does not operate properly, consult your telephone company.

Matsushita Electric of Canada Limited
5770 Ambler Drive, Mississauga, Ontario L4W 2T3

Panasonic one year warranty

Matsushita Electric of Canada Limited (also known as MELCA) warrants this product to be free from defects in material and workmanship and agrees to repair or at its option, replace the product for a period of 1 year from the date of original purchase.

This warranty does not apply outside of the boundaries of Canada or to any product which has been improperly installed, subjected to misuse or abuse, shipping damage, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Rechargeable batteries are warranted for 90 days from date of original purchase. Non-rechargeable batteries are not warranted.

Warranty service

"IN WARRANTY" service can be obtained by delivering your product to the MELCA Factory Servicentre nearest to you (as listed below). A purchase receipt or other proof of date of original purchase will be required before warranty service is performed.

Matsushita Electric of Canada Ltd.
Amherst factory servicentre
134 South Albion Street
Amherst, Nova Scotia
B4H 2X3 (902) 667-4977

Matsushita Electric of Canada Ltd.
Toronto factory servicentre
5770 Ambler Drive
Mississauga, Ontario
L4W 2T3 (416) 624-8447

Matsushita Electric of Canada Ltd.
Montreal factory servicentre
3075, rue Louis A. Amos
Lachine, Quebec
H8T 1C4 (514) 633-8684

Matsushita Electric of Canada Ltd.
Vancouver factory servicentre
13131 Bathgate Place
Richmond, British Columbia
V6V 1Z3 (604) 278-4211

Matsushita Electric of Canada Ltd.
Calgary factory servicentre
6835-8th Street N.E.
Calgary, Alberta
T2E 7H7 (403) 295-3955

Matsushita Electric of Canada Ltd.
Winnipeg factory servicentre
1555 Dublin Avenue
Winnipeg, Manitoba
R3E 3M8 (204) 783-7419

Statutory warranties

The provisions of this additional written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation.

If you ship the product to a servicentre

Carefully pack and send prepaid, adequately insured and preferably in the original carton. Include details of complaint and proof of date of original purchase.

General Information

Index

A		Document Feeder Tray	1-2
AC Jack	1-3	E	
AC Outlet	1-8	Error Code	6-2
AC Power Cord	1-7	EXTENSION COPY	1-19, 4-20
Accessories	1-7	F	
Activity Report	5-2	FAX mode	1-16
Advanced Feature List	1-19, 5-8	Receiving a document in	2-8
ALARM Indicator	1-5, 1-13	FAX RING COUNT	1-18
ALL MESSAGES Button	1-6, 2-10, 2-12	Selecting	1-30
Answer back	4-26	FF (Fast Forward) Button	1-6, 2-10
Answering device control panel	1-2	FLASH Button	1-5, 4-30
ANS/FAX mode	1-16	FRONT LID OPEN Lever	1-2, 6-9
Receiving a document in	2-7	G	
ANS/FAX RING COUNT	1-18	Greeting Message	1-14
Selecting	1-28	Checking	1-15
AUTO DIAL Button	1-5, 3-2, 3-4	Recording	1-15
Automatic dialer	3-7	Re-recording	4-27
Making Voice Calls Using	3-8	Skipping for incoming message	
Transmitting Documents Using	3-7	recording mode	4-26
Automatic redialing feature	2-5, 3-7	H	
B		Handset	1-7, 1-8
BACK LID OPEN Lever	1-2, 1-10, 6-7, 6-9	Handset cord	1-7, 1-8
Back space	4-24	HELP Button	1-5
Basic Feature List	1-18, 5-7	Using	1-33
C		HELP Function	1-33, 1-34
Call counter	2-10	HYPHEN Key	3-2, 3-3, 3-4
Cassette Compartment	1-3	I	
Character Code Table	1-23	ICM ERASE Button	1-6, 2-10
CHECK Button	1-6, 1-14, 1-15, 2-10	Incoming message	2-11
Cleaning		Playing back all messages	2-12, 4-23
Document feeder unit	6-9	Playing back newly recorded	
Microcassette compartment	6-8	messages	2-11, 4-23
Thermal head	6-9	Recording where you want to save	2-12
Combination dialing	4-31	J	
Copy		JOURNAL AUTO PRINT	1-19
Making	2-9	Setting	5-3
COPY Button	1-6	JOURNAL Report	5-2
D		Printing	5-4
DAY/NIGHT MODE	1-19	JUNK MAIL PROHIBITOR	1-19
Setting	4-32	Turning on	4-9
Delayed Transmission	4-2, 4-3	JUNK MAIL PROHIBITOR ID	4-9
DELAYED TRANSMISSION	1-19	L	
DIALING MODE Selector	1-3, 1-12	LCD	1-5
Setting	1-12	LIGHT ORIGINAL	2-3
Direct Call Station Keys	1-6, 3-2	Button and Indicator	1-5
Display Indications	6-11	LINE Jack	1-3
Document	2-2	Connect to	1-8
Acceptable	2-2	List of Stored Phone Numbers	5-5
Clearing jam of	6-6	Sample of	5-5
Loading	2-3		
Receiving	2-6, 2-7, 2-8		
Transmitting	2-4, 3-7		
You cannot send	2-2		

Listing directory card	3-2	Reception	
LOGO POSITION	1-19	Automatic	2-7
Setting	4-17	Interrupting	2-6
M		Manual	2-6
MAIN PASSCODE	1-19	Recording paper	1-7
Programming	4-6	Clearing jam of	6-7
Maintenance	6-8	Installing	1-10, 1-11
Memo message	2-13	RECORDING TIME FOR ANS	1-18
Recording	2-13	Changing	1-31
Memory playback	4-23	REDIAL Button	1-5
MEMO/2WAY REC Button	1-6, 2-10, 2-13, 2-14	Redialing	2-16
MESSAGE ALERT	1-19	REMOTE ANS ID	1-18, 4-22
Setting	4-28	Setting the code for	1-32
MIC (Microphone)	1-14	Remote control functions	4-22
Microcassette compartment	1-3	Answer back	4-26
Cleaning	6-8	Back space and skip forward	4-24
Microcassette tape	1-7	Playing back all messages	4-23
Installing	1-9	Playing back newly recorded messages	4-23
Taking off	1-9	Recording a marker message	4-24
MUTE Button and Indicator	1-5	Re-recording a greeting message	4-27
N		Resetting tape for future messages	4-25
Network Communication	4-4	Skipping the greeting message	4-26
NEW MESSAGES Button	1-6, 2-10, 2-11	REMOTE FAX ACTIVATION CODE	1-19
O		Programming	4-13
One touch dialing	3-3	Resetting system parameters	4-35
Storing phone numbers for	3-3	Resetting tape	4-25
OVERSEAS Button and Indicator	1-5, 4-16	RESOLUTION	2-3
P		Setting	2-3
PAPER OUT Indicator	1-5, 1-13	RESOLUTION Button	1-5
PAPER SAVE FUNCTION	1-19	REW (Rewind) Button	1-6, 2-10, 2-11
Setting	4-18	RING PATTERN DETECTION	1-19, 4-14, 4-15
Paper roll holders	1-7, 1-11	RINGER Volume Selector	1-3
Paper rollers	6-9	Setting	1-12
PAUSE Button	1-5, 4-31	Rotary pulse dial service (PULSE)	1-12
Pinch roller	6-8	RX PASSCODE CHECK	1-19, 4-4, 4-5
POWER Switch	1-3	Turning on	4-8
Turning on	1-13	S	
PRINT ADVANCED FEATURE LIST	1-18	SECRET Key	3-2, 3-5
PRINT TRANSMISSION REPORT	1-18	Secret Phone Numbers	3-5
PRINT JOURNAL	1-19	Storing	3-5
PRINT TEL LIST	1-19	SET Button	1-5, 1-20, 3-2
PRINTER TEST	1-19	SET DATE	1-18
PROGRAM Button	1-5, 1-20, 3-2	SET DEFAULT	1-19
R		Setting data and time	1-20, 1-21
REC Button	1-6, 1-14, 1-15, 2-10	SILENT FAX RECOGNITION RING	1-19
RECEIVE MODE	1-16, 2-7	Setting	4-34
ANS/FAX mode	1-16, 2-7	Skip forward	4-24
FAX mode	1-16, 1-17, 2-8	Skipping the greeting message for incoming message recording mode	4-26
TEL mode	1-16, 1-17	SP-PHONE (VOICE STDBY) Button	
TEL/FAX mode	1-16, 1-17, 2-8	and Indicator	1-5, 2-15
RECEIVE MODE Button	1-5, 1-16	Specifications	6-13
RECEIVER VOLUME Selector	1-3	Speed dialing	
Setting	1-12	Station numbers for	3-2
		Storing phone numbers for	3-4
		START Button and Indicator	1-6, 2-4

STOP Button	1-6, 1-14, 2-10
STOP/CLEAR Button	1-6, 2-5, 3-2
T	
TEL mode	1-16, 1-17
TEL/FAX mode	1-16, 1-17
Receiving a document in	2-8
Telephone conversation	2-14
Recording	2-14
Telephone line cord	1-7
TELEPHONE NUMBER LIST	5-5
Printing	5-6
Temporary Tone dialing	4-30
Test pattern	6-10
Thermal head	6-9
Cleaning	6-9
TO HANDSET	1-8
Connect to	1-8
Toll Saver	1-28, 1-29
TONE Button	1-5, 4-30
Touch tone service (TONE)	1-12
Transmission	
Interrupting	2-5
Manual	2-4
Using Automatic Dialer	3-7
Troubleshooting	6-2
TX PASSCODE CHECK	1-19, 4-4, 4-5
Turning on	4-7
V	
Voice Contact	4-29
Initiating	4-29
Receiving a request for	4-29
VOLUME Control	1-3, 1-14
VOX	1-14, 1-31
X	
XMT (Transmission) REPORT	1-26
Y	
YOUR LOGO	1-18
Setting	1-22, 1-23
YOUR TELEPHONE NUMBER	1-18
Programming	1-24
# Button	1-20, 1-24
* Button	4-30
 Indicator	1-5, 2-10, 2-11

FAX CORRESPONDENCE

TO: _____ DATE: _____

FROM: _____ OUR TEL. NO.: _____

We would like to take this opportunity to introduce you to our Panasonic telephone answering device with facsimile. Our unit will work as a facsimile, an answering device and a standard telephone, so you can send both documents and voice-messages on the same call.

Transmitting a voice-message and a document

1. Dial our phone number. Our unit will play the greeting message.
2. Leave your message after the long beep.
3. Press "*" (asterisk) button or enter the JUNK MAIL PROHIBITOR ID if it is written on this paper after recording your incoming message.
Our unit will switch to the facsimile mode and a fax tone sounds.
4. Start transmission to send a fax after hearing the fax tone.

Transmitting a document only

1. Dial our phone number. Our unit will play the greeting message.
2. Press your "*" button or enter the JUNK MAIL PROHIBITOR ID if it is written on this paper, while the greeting message is being played.
3. Start transmission to send a fax after hearing the fax tone.

Our JUNK MAIL PROHIBITOR ID is _____.

If you call from a rotary (pulse) phone:

Transmitting a document only

1. Dial our phone number.
Our unit will play the greeting message.
2. Start transmission to send a fax while the greeting message is being played.

Transmitting a document and a voice-message

1. Dial our phone number.
Our unit will play the greeting message.
2. Start transmission to send a fax.
3. Make a call reservation (e.g. ...lift the handset) during transmission of your document.
4. Leave your message after the long beep following the greeting message.

NOTE:

If our unit requests the JUNK MAIL PROHIBITOR ID, transmission cannot be done from a rotary phone.


If our unit is in a fax mode, the greeting message is not played and a fax tone sounds. You cannot talk to us, and fax reception only is available.

SPEED DIALER LIST

CODE	NAME	CODE	NAME
00		10	
01		11	
02		12	
03		13	
04		14	
05		15	
06		16	
07		17	
08		18	
09		19	

Transmitting a document using speed dialing:

Insert the documents FACE DOWN, then press the AUTO DIAL button and the code number (00 through 19).

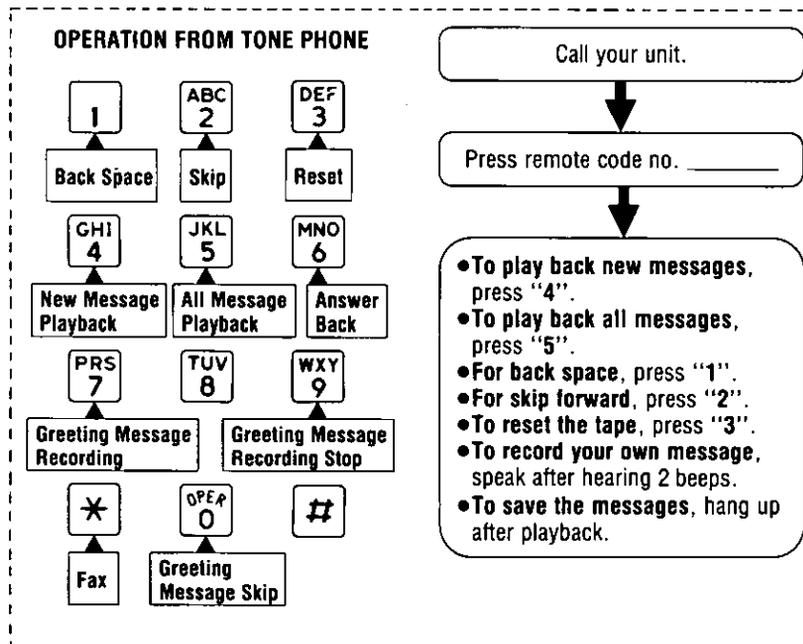


SPEED DIALER LIST

CODE	NAME	CODE	NAME
00		10	
01		11	
02		12	
03		13	
04		14	
05		15	
06		16	
07		17	
08		18	
09		19	

Transmitting a document using speed dialing:

Insert the documents FACE DOWN, then press the AUTO DIAL button and the code number (00 through 19).

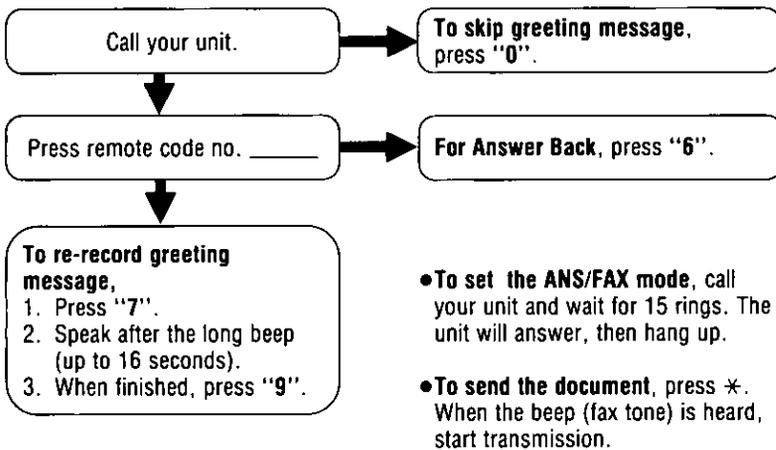

●When you press any button, press firmly.

Servicenter Directory (For the United States Only)

**PRODUCT INFORMATION • OPERATION ASSISTANCE • LITERATURE
REQUESTS • DEALER LOCATIONS**

DIAL TOLL FREE: 1-800-HELP-FAX

Customer Service Center 2F-3, One Panasonic Way, Secaucus, NJ 07094 (Headquarters)
201-348-9090 (9:00am-8:00pm Monday-Friday, EST)

SERVICE INQUIRIES

Regional Customer Care Department

NORTHEAST

2221 Cabot Boulevard West
Suite A
Langhorne, PA 19047
215-741-0676

Covers:

CT, DE, ME, MD, MA,
NH, NJ, NY, PA, RI, VT,
VA, DC, WV, Eastern OH

MIDWEST

1703 North Randall Road
Elgin, IL 60123
708-468-5530

Covers:

IL, IN, IA, KS, KY, MI,
MN, MO, NE, ND, SD,
WI, Western OH

WESTERN

6550 Katella Avenue
Cypress, CA 90630
714-373-7440

Covers:

AK, AZ, CA, CO, ID,
MT, NV, NM, OR, UT,
WA, WY, HI

SOUTHERN

1854 Shackelford Court
Suite 4105
Norcross, GA 30093
404-717-6860

Covers:

AL, AR, FL, GA, LA,
MS, NC, OK, SC, TN, TX

PRODUCT SERVICE

Factory Servicenters

CALIFORNIA

6550 Katella Avenue
Cypress, CA 90630
714-373-7425

800 Dubuque Avenue
So. San Francisco,
CA 94080

415-871-6373

20201 Sherman Way
Suite 102

Canoga Park, CA 91306
818-709-1775

3878 Ruffin Road

Suite A

San Diego, CA 92123

619-560-9200

COLORADO

1640 South Abilene Suite D
Aurora, CO 80012
303-752-2024

FLORIDA

3700 North 29th Avenue
Suite 102

Hollywood, FL 33020

305-925-2880

4710 Eisenhower
Boulevard Suite A1
Tampa, FL 33634
813-884-4746

GEORGIA

4245 International Boulevard
Suite C

Norcross, GA 30093

404-717-6880

HAWAII

99-859 Iwaiwa Street
Aiea, Hawaii 96701

808-488-1996

ILLINOIS

*1703 North Randall Road
Elgin, IL 60123

708-468-5466

*9401 W. Grand Avenue
Franklin Park, IL 60131

708-452-2580

9060 Golf Road

Niles, IL 60714

708-299-1700

MARYLAND

Sulphur Springs
Business Center

1638 Sulphur Springs Road

Baltimore, MD 21227

410-242-2607

MASSACHUSETTS

60 Glacier Drive Suite G

Westwood, MA 02090

617-329-4280

MICHIGAN

37048 Van Dyke Avenue
Sterling Heights, MI 48312

313-939-2060

MINNESOTA

7850-12th Avenue South

Airport Business Center

Bloomington, MN 55425

612-854-8624

MISSOURI

11982 Dorsett Road

Maryland Heights, MO 63043

314-739-5301

OHIO

1196 W. Kemper Road

Cincinnati, OH 45240

513-851-4180

PENNSYLVANIA

2221 Cabot Boulevard West
Suite B

Langhorne, PA 19047

215-741-0661

Campbell's Run

Business Center

500 Business Center Drive

Pittsburgh, PA 15205

412-788-2174

*pick-up/drop-off only

TENNESSEE

919-8th Avenue South
Nashville, TN 37203

615-244-4434

TEXAS

7420 Harwin Drive

Houston, TX 77036

713-781-1528

13615 Welch Road Suite 101

Farmers Branch, TX 75244

214-385-1975

WASHINGTON

20425-84th Avenue South

Kent, WA 98032

206-872-7922

Service in Puerto Rico

**Matsushita Electric
of Puerto Rico, Inc.
Panasonic Sales Company/
Factory Servicenter**

San Gabriel Industrial Park
65th Infantry Avenue KM 9.5
Carolina, Puerto Rico 00630
809-750-5135

AUTHORIZED SERVICENTERS • PARTS DISTRIBUTOR LOCATIONS

To locate an independent authorized servicenter or parts distributor in your area, within the USA dial toll free
1-800-545-2672, 24 hours a day, 7 days a week.

ACCESSORY PURCHASES

1-800-332-5368 (Consumer Orders Only)

Matsushita Services Company Box 01, 545 Tollgate Road Suite C, Elgin, IL 60123

(8:00am-7:30pm Monday-Thursday; 8:00am-5:00pm Friday; 9:00am-12:30pm Saturday; CST)

(Visa, Mastercard, Discover card, Check or Money Order)

This serial number of the unit may be found on the label on the rear of the unit. For your convenience, note this number below, and retain this book, along with your proof of purchase, to serve as a permanent record of your purchase in the event of theft or for future reference.

MODEL NO.: _____ NAME OF DEALER: _____

SERIAL NO.: _____ DATE OF PURCHASE: _____

ADDRESS OF DEALER: _____

Panasonic Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way, Secaucus, New Jersey 07094

Panasonic Company (West) of America,
Division of Matsushita Electric Corporation of America
6550 Katella Avenue, Cypress, California 90630

Panasonic Sales Company ("PSC"),
Division of Matsushita Electric of Puerto Rico, Inc.
San Gabriel Industrial Park, 65th Infantry Avenue, KM 9.5, Carolina, Puerto Rico 00630

Matsushita Electric of Canada Limited
5770 Ambler Drive, Mississauga, Ontario, L4W 2T3
