

Panasonic

Camera Kit

Operating Instructions

Model No. KXC-PG100

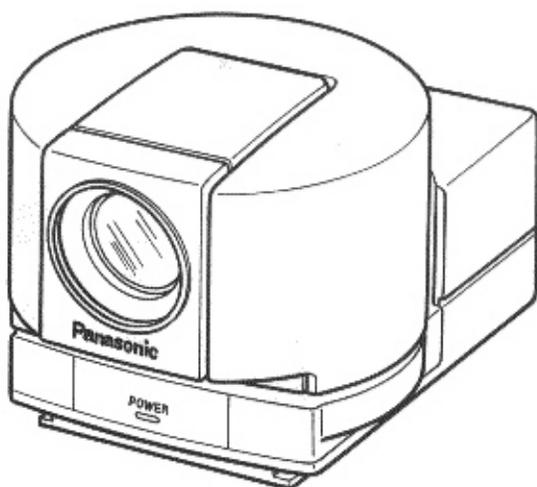


Table of Contents

Accessories	2
Precautions	3
Connection	4
Location of the Controls	5
Troubleshooting	8
Specifications	9
Limited Warranty	10
Service Directory	11

Please read these Operating Instructions before using the unit and save them for future reference.

Thank you for purchasing the Panasonic "Camera Kit".

Federal Communications Commission Requirements

 
NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Warning:


To assure continued FCC emission limit compliance, the user must use only the provided AC Adapter. All other user provided interface cables must be shielded. Also, any unauthorized changes or modifications to this equipment will void the user's authority to operate this device.

Accessories

Please check the supplied accessories.



AC Adaptor

 


Remote Control Unit



Batteries AAA(R03) × 2



RCA Video Cable

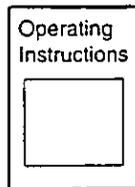

Operating Instructions




Velcro fasteners × 2


Precautions

The following precautions are recommended to extend the life of the unit.

Do not give shock hazard.

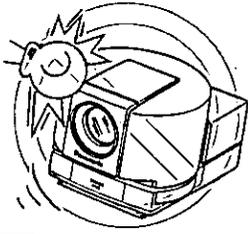


Do not allow liquids such as coffee or water to spill into the unit. Do not insert sharp objects into the unit.

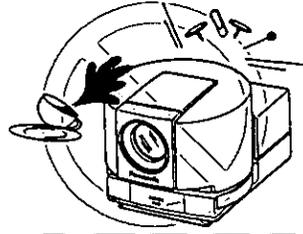


Do not use the unit under the following conditions.


Do not place the unit on an uneven (not level place) or unstable surface.

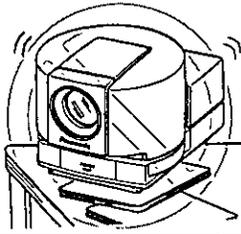


Do not place the unit on a carpet.

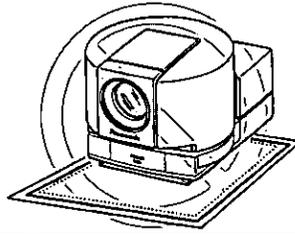

Do not place the unit near a heating appliance or an air conditioning vent. Do not place the unit in a room with extremely high or low humidity.

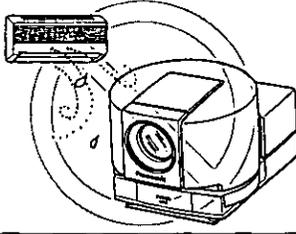


Do not place the unit in an area where there is a lot of smoke, dust, chemical fumes, or vibration.

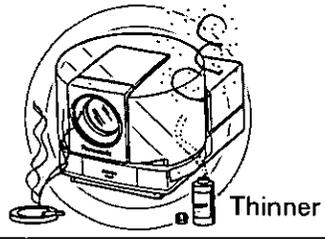

Do not wipe the unit with volatile liquid.



Connection

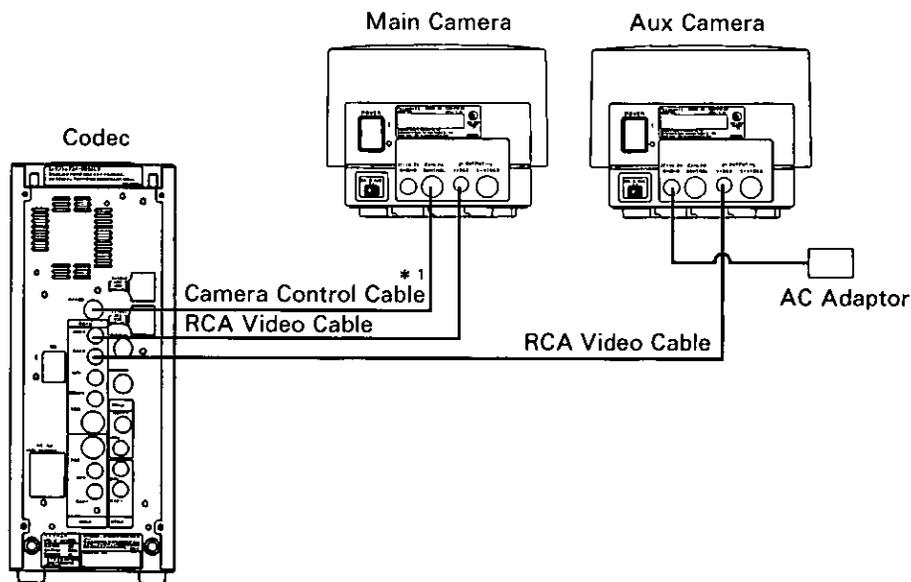

*1 Camera Control Cable

- The camera control cable which is supplied with Codec cannot be used. Consult your dealer for more information.


Notes : ● When connecting the unit to Codec, use the Codec remote controller.

Certain functions on the unit remote controller cannot be used with Codec.


- The split display mode of codec video setting cannot be used with two camera units.

Location of the Controls

Front View

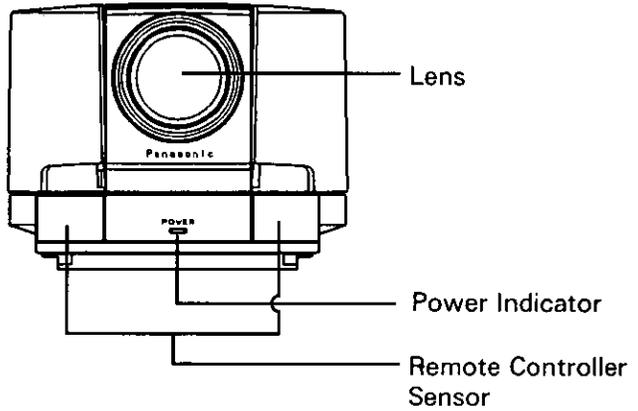


Rear View

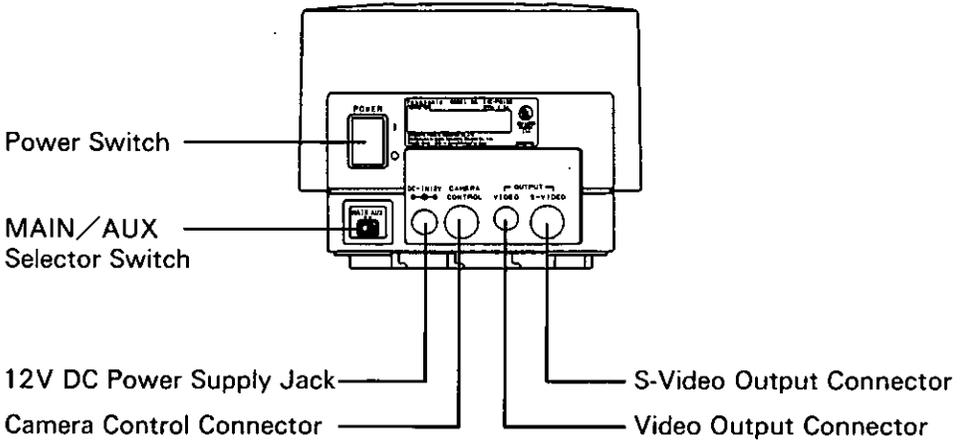


Location of the Controls

Remote Control Unit

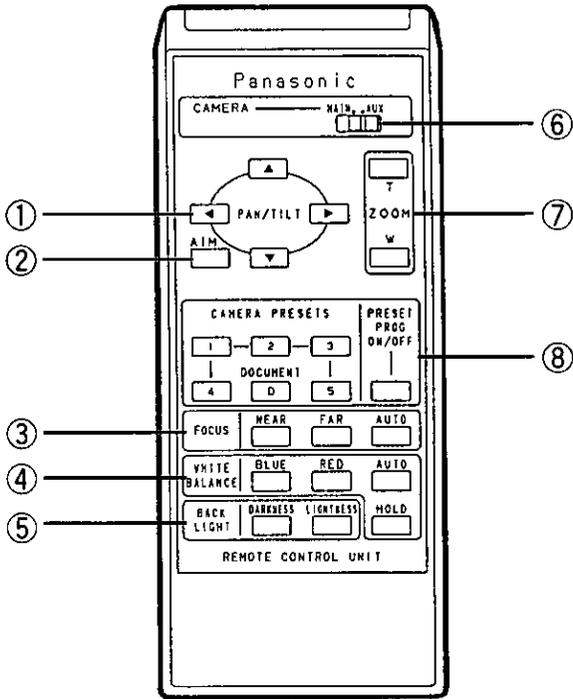


Replacing the batteries

1 Open the lid.

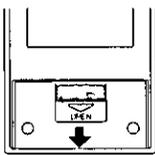


2 Replace the batteries.

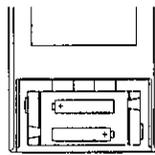

Insert two AAA (R03) batteries as indicated on the remote control unit.

3 Close the lid.

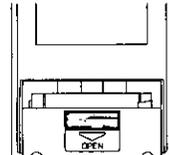

The lid will "click" when it is secured.

Notes: ● If you do not install the batteries or if the battery power is low, misoperation may occur.

- Do not use rechargeable (Ni-Cd) batteries as some of their dimensions, shapes, and performances differ from normal batteries.
- Do not mix different brands of batteries.
- Do not charge, short-circuit, disassemble, heat, or dispose of batteries in fire.
- Remove all the batteries when replacing.

Location of the Controls

- ① Camera control (Pan/Tilt function)
 - Selection of the PAN/TILT of the camera
- ② Camera direction
 - Camera positions to remote control location
- ③ Focus adjustment (Manual/auto)
 - Adjust focus using the **NEAR**, **FAR** keys.
 - To return to auto focus, press the **AUTO** key.
- ④ White balance adjustment (Manual/auto)
 - Adjust white balance using the **BLUE**, **RED** keys.
 - To hold the current white balance, press the **HOLD** key in auto white balance mode.
 - To return to auto white balance, press the **AUTO** key.
- ⑤ Back light adjustment (Manual)
 - The **DARKNESS**, **LIGHTNESS** keys are used to correct the back light or to change the brightness of the screen.
- ⑥ Camera select
 - Selects control of main or auxiliary camera.
- ⑦ Camera control (Zoom function)

T: Telescope W: Wide

- ⑧ Camera position
 - The camera moves to the prescribed position.

1 2 3 4 5 **DOCUMENT** D

Camera presets (Camera position memory)

How to preset

- ① Adjust the camera position by using the **PAN/TILT** key and the **ZOOM** key.
- ② Press the **PRESET PROG ON/OFF** key.
 - ※ Power LED of camera begins to blink.
- ③ Press the position key that you want to select (**1**–**5**).
 - ※ The **D** key is for document.

Troubleshooting

Problem	Causes	Measures
The power supply does not turn on.	The camera control cable has come loose.	Connect the camera control cable properly.
	The DC jack is unplugged. (When you use as AUX camera.)	Plug in the DC jack properly. (When you use as AUX camera.)
The wireless remote controller does not work.	There are no batteries in the wireless remote controller, or the batteries have run out.	Insert batteries properly or replace them.
	The infrared beam from the remote controller is not striking the photo-receptor of the camera properly.	Aim the wireless remote controller directly at the photo-receptor of the camera.
	The MAIN/AUX selector switch on the wireless remote controller is set to "AUX".	Set the selector switch to the "MAIN" side.
There is no picture on the monitor.	The cable is not firmly attached to the Video Output connector.	Connect the Video Output properly.
The video cannot record.	The S-Video/Video cables are not connected properly.	Connect the S-Video/Video cables properly.

Specifications

Item	Specifications
CCD Type	1/4" COLOR CCD Effective Pixels : 768×494 (H×V)
Focus	Auto/Manual
Video output	Composite (Typ: 1.0Vpp 75Ω, Based on NTSC)
	S-Video (Y/C)
Control method	Wireless Remote Control and RS-232C Port
Panning angle	±100°
Tilting angle	+15° to -87°
Horizontal resolution	440 TV lines
Zoom range	10X
	Focus Length : Telescope 100cm or more : Wide 5cm or more
Max. horizontal field of view	51°
Preset position	6 point (including document position)
Min. illumination	15 lux
Control interface	RS-232C
Dimension	141(W)×114(H)×178(D)mm
	5 ⁹ / ₁₆ " ×4 ¹ / ₂ " ×7"
Weight	1.5kg (3.3lbs)
DC Operating Voltage	DC 12V (1.0A Max)
Power consumption	12W
AC Adaptor Operating Voltage	120V, 60Hz
Operating conditions	5°C~35°C temperature · 30%~80% humidity

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company
Division of Matsushita Electric of
Puerto Rico, Inc.
Ave. 65 de Infanteria, Km. 9.5, San Gabriel
Industrial Park, Carolina, Puerto Rico 00985

PANASONIC

Video Teleconferencing System (VTS) Products

Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico for one (1) year from the date of original purchase in the event of a defect in materials or workmanship.

This Limited Warranty Excludes both Labor and Parts for: batteries, antennas, and cosmetic parts (cabinet).

Carry-in or mail-in service in the USA or Puerto Rico can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Servicenter Directory. Or call, toll free, 1-800-211-7262 to locate a PASC authorized Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use. The warranty does not cover damages which occur in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, faulty installation, misapplication, set-up adjustments, improper operation or maintenance, alteration, modification, introduction of sand, humidity or liquids, power line surge, improper voltage supply, lightning damage, signal reception problems, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the company address indicated above.

Service Directory

Panasonic

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer inquiries please contact:

800-211-PANA(7262), Monday-Friday 9am-9pm Saturday-Sunday 9am-7pm, EST.

Web Site: <http://WWW.Panasonic.com>

You can purchase parts, accessories or locate your nearest servicer by visiting our Web Site.

Product Repairs

*Panasonic Services Company
Factory Servicer*

8655 Roswell Road, Suite 200
Atlanta, GA 30350

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/Factory Servicer:

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Phone (787) 750-4300 Fax (787) 768-2910

This Operating Instructions is printed on recycled paper.

**Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way, Secaucus, New Jersey 07094**

Printed in Japan

**K0997S0
PBQX50218ZA**