


Panasonic®

Color Video Projection System

Operating Instructions

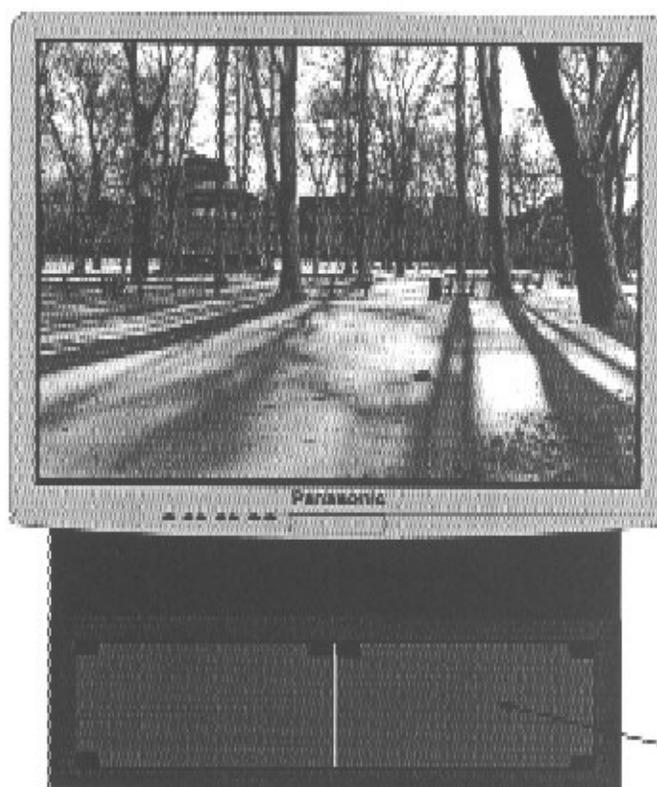


The Cabinet Glass Doors
Installation Instructions
are located in this Manual



PT-61XF60

Read these instructions completely before operating.
Contents subject to change without notice or obligation.

Safety Instructions

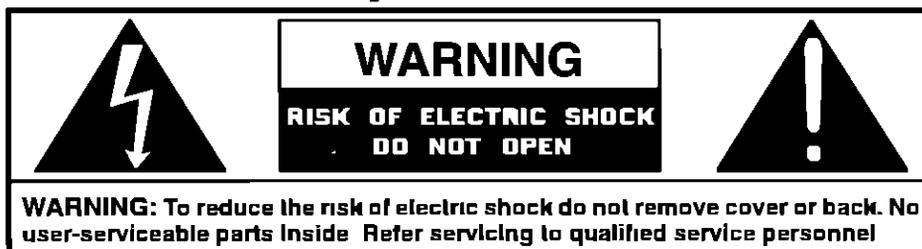

The lightning flash with arrow-head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons




The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance

Note to CATV System Installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical

Safety Instructions for Television Receivers

- 1 Read and apply the operating instructions provided with your television receiver
- 2 Read all of the instructions given here and retain them for later use
- 3 Unplug this television receiver from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 4 Do not use attachments not recommended by the television receiver manufacturer as they may cause hazards.
- 5 Do not use this television receiver near water. For example, avoid placing it near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
- 6 Do not place this television receiver on an unstable cart, stand or table. The television receiver may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the television receiver. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.
- 6A An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 7 Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to insure reliable operation of the television receiver and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the television receiver on a bed, sofa, rug or other similar surface. This television receiver should never be placed near or over a radiator or heat register. This television receiver should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
- 8 Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home consult your television dealer or local power company. For television receivers designed to operate from battery power, refer to the operating instructions.
- 9 This television receiver is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 10 Do not allow anything to rest on the power cord. Do not locate this television receiver where the cord will be abused by persons walking on it.
- 11 Follow all warnings and instructions marked on the television receiver.
- 12 Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- 13 Never push objects of any kind into this television receiver through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television receiver.

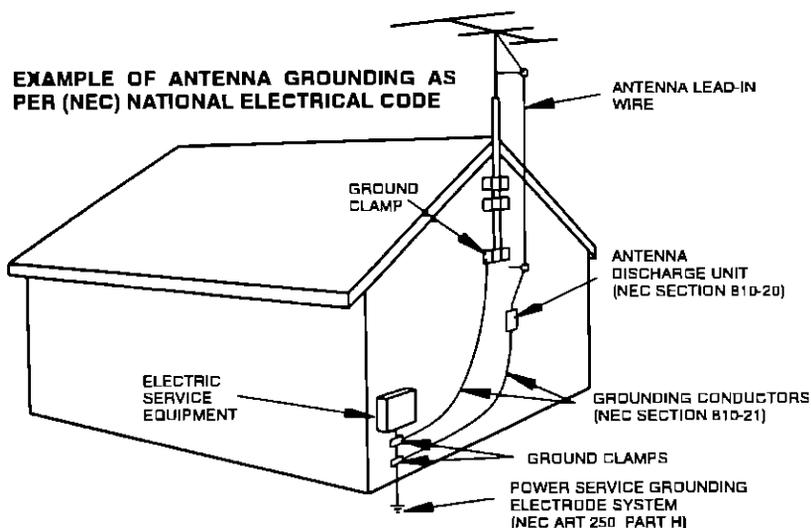

- 14 If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. In the U.S. Section 810 of the National Electrical Code and in Canada Part 1 of the Canadian Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure.
- 15 For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.
- 16 An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 17 Unplug this television receiver from the wall outlet, and refer servicing to qualified service personnel under the following conditions:
 - a When the power cord or plug is damaged or frayed
 - b If liquid has been spilled into the television receiver
 - c If the television receiver has been exposed to rain or water
 - d If the television receiver does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the television receiver to normal operation.
 - e If the television receiver has been dropped or the cabinet has been damaged
 - f When the television receiver exhibits a distinct change in performance – this indicates a need for service.
- 18 Do not attempt to service this television receiver yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 19 When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 20 Upon completion of any service or repairs to this television receiver, ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.
- 21 **WARNING. To prevent fire or shock hazard, do not expose this appliance to rain or moisture.**
- 22 **CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**

NOTE: This equipment is designed to operate in the U.S.A., Canada and other countries where the broadcasting system and AC house current is exactly the same as in the U.S.A. and Canada.

Important Information Regarding Use of Video Games, Computers, Teletext or Other Fixed Image Displays.

The extended use of fixed image program material can cause a permanent "shadow image" on the picture tube. This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible picture tube deterioration can be limited by observing the following steps:

- A Reduce the brightness/contrast setting to a minimum viewing level.
- B Do not display the fixed image for extended periods of time.
- C Turn the power off when not in actual use.

NOTE: The marking or retained image on the picture tube resulting from fixed image use is not an operating defect and as such is not covered by Warranty. This product is not designed to display fixed image patterns for extended periods of time.

Specifications

- Power Source:** 120V, 60Hz, AC
- Channel Capability:** 181 channels (See chart)
VHF 2-13, UHF 14-69, Cable 125 channels
- Video Input Jacks (4):** 1V p-p, 75 ohm, phono jack type
- Audio Input Jacks (4):** 500mV rms, 47K ohm
- To Audio AMP Jacks:** 0-2.0V rms 47K ohm
- S-VHS Input Jack (2):** S-Video (Y-C) Connector
- Stereo Sound**
- Dolby Pro Logic Surround**
- External Speakers**
- Closed Caption Display**
- Picture In Picture:** 2 Tuner
- StarSight** Interactive Program Guide

Channel Capability Chart

BAND	USA/CAN
VHF	12
UHF	56
CABLE (Mid-Band)	15
CABLE (Super Band)	14
CABLE (Hyper Band)	28
CABLE (Ultra Band)	56
TOTAL CHANNELS	181

Specifications are subject to change without notice or obligation.

Receiver Location

This unit can be used as an entertainment center. Consult your dealer for available options. Locate for comfortable viewing. Avoid placing where sunlight or other bright light (including reflections) will fall on the screen. Use of some types of fluorescent lighting can reduce remote control transmitter range. Adequate ventilation is essential to prevent internal component failure. Keep away from areas of excessive heat or moisture.

To insure optimum color purity do not position magnetic equipment (motors, fans, external speakers, etc.) nearby.

Optional External Equipment Connections

The Video/Audio connections between components should be made with shielded video and audio cables. For best performance, video cables should utilize 75 ohm coaxial shielded wire. Cables are available from your dealer or electronic supply house.


Before you purchase any cables, be sure you know what type of input and output connectors your various components require. Also determine the length of cable you'll need.

Condensation

When the set is moved into a warm room from a cold area, the picture may become out of focus because of condensation on the lens surface due to the temperature change. Picture will become clear when the set reaches the same temperature of the surrounding area.

AC Power Supply Cord

CAUTION: To prevent electric shock, match wide blade of plug to wide slot of AC outlet and fully insert. DO NOT USE this (polarized) plug with a receptacle or other outlet unless the blade can be fully inserted to prevent blade exposure.


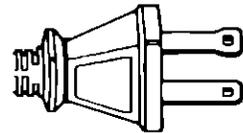


Polarized Plug

Remote Control Battery Installation

Batteries Use two "AA" batteries.

- 1 Turn the Transmitter face down. To remove top cover, press down on marking and slide cover off in the direction indicated.
- 2 Install the batteries as shown in the battery compartment. (Polarity (+) or (-) must be correct.)
- 3 Replace the cover and slide in reverse until the lock snaps.

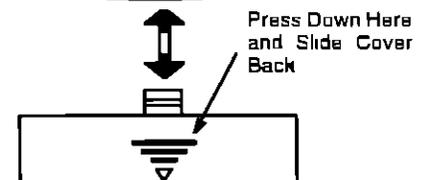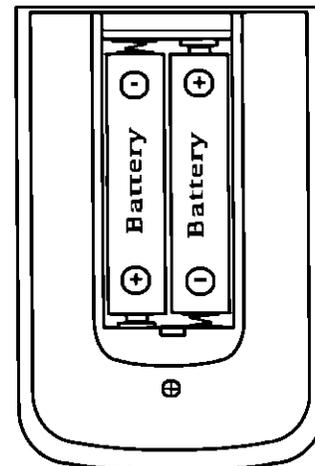

Helpful Hints:

For frequent Remote Control users, replace old batteries with Alkaline batteries for longer life.

Note: In order to maximize the life of the batteries, the lighted buttons on the Remote Control can be turned OFF and ON by pressing R-TUNE and RECALL at the same time.

CAUTION: Incorrect installation can cause battery leakage and corrosion that will damage the Remote Control Transmitter.

Observe the Following Precautions:

- 1 Batteries should be replaced as a pair. Always use new batteries when replacing the old set.
- 2 Do not combine a used battery with a new one.
- 3 Do not mix battery types (Example "Zinc Carbon" with "Alkaline").
- 4 Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
- 5 Battery replacement is necessary when Remote Control reacts sporadically or stops operating the Receiver.


Helpful Hints:

Whenever you remove the batteries to replace them, you may need to reset the Remote Control Infrared Codes. We recommend that you initially record the codes on page 51, prior to setting up the remote.


Installation (cont.)

Antenna/Cable Connections


Antenna Connection – For proper reception of VHF/UHF channels, an external antenna is required. For best reception an outdoor antenna is recommended. Antenna Mode must be set to TV (Refer to Antenna Mode section.)

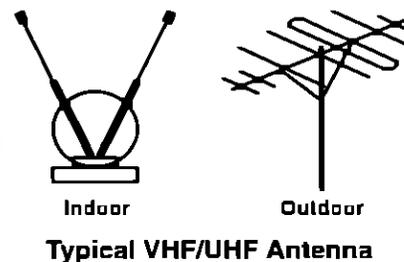

Incoming Cable From Home Antenna (75 Ohm)

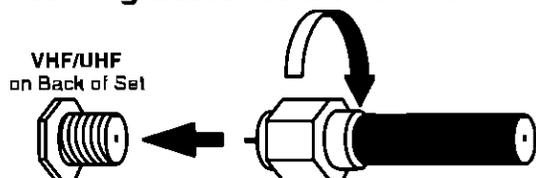


Incoming Cable From Home Antenna (300 Ohm)

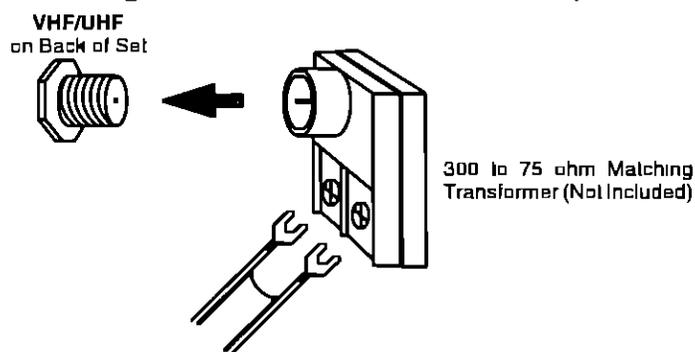

Cable Connection – For reception of cable channels, connect the cable supplied by your local cable company. Antenna Mode must be set to CABLE (Refer to Antenna Mode section.)

Incoming 75 Ohm Cable (From Cable Company)

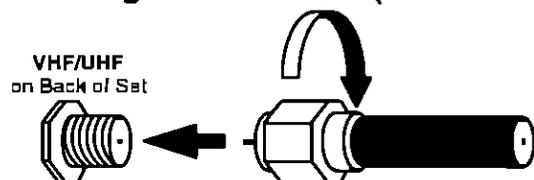

NOTE: Certain cable systems offset some channels to reduce interference or have Premium (scrambled) channels. A cable converter box is required for proper reception. Check with your local Cable company for compatibility requirements.

Other Video Equipment

VCRs, Video Disc Players, Computers, TV games, and Teletext equipment can also be connected to the antenna input connection.

Installing Your StarSight TV Set

- 1 Determine if a Cable Box or VCR is going to be connected to the TV
- 2 Connect the TV according to the following illustrations
- 3 Turn the equipment on (TV, Cable Box, VCR) and set up the TV mode and antenna input using the *SET-UP FEATURES* and *INPUT SELECT* sections of this manual
 - Antenna users, please select "TV" in the SET UP menu
 - Cable users, please select "CABLE" in the SET UP menu
 - If a Cable Box is used, select "ANT 2" in the INPUT SELECT menu and tune the TV to the appropriate channel for the Cable Box (usually channel 3 or 4)
 - If no Cable Box is used, select "ANT 1" in the INPUT SELECT menu
- 4 Follow the instructions in the *StarSight Installation and Activation Guide* located in the back of this manual to complete StarSight activation


StarSight Antenna and External Video Connection

The following shows the standard StarSight connections which can be used for most situations

Note: This Receiver has the "PICTURE IN PICTURE" feature that uses two (2) tuners. This allows you to watch two (2) live broadcasts at the same time without an external video source. No special connections are required for PIP.

StarSight Antenna Connection (No Cable Box or VCR)


Use this configuration when connecting the TV directly to the antenna or Cable TV system (without a Cable Box). Be sure to select the correct mode (see the *Set-Up Features* section in this Manual for details).

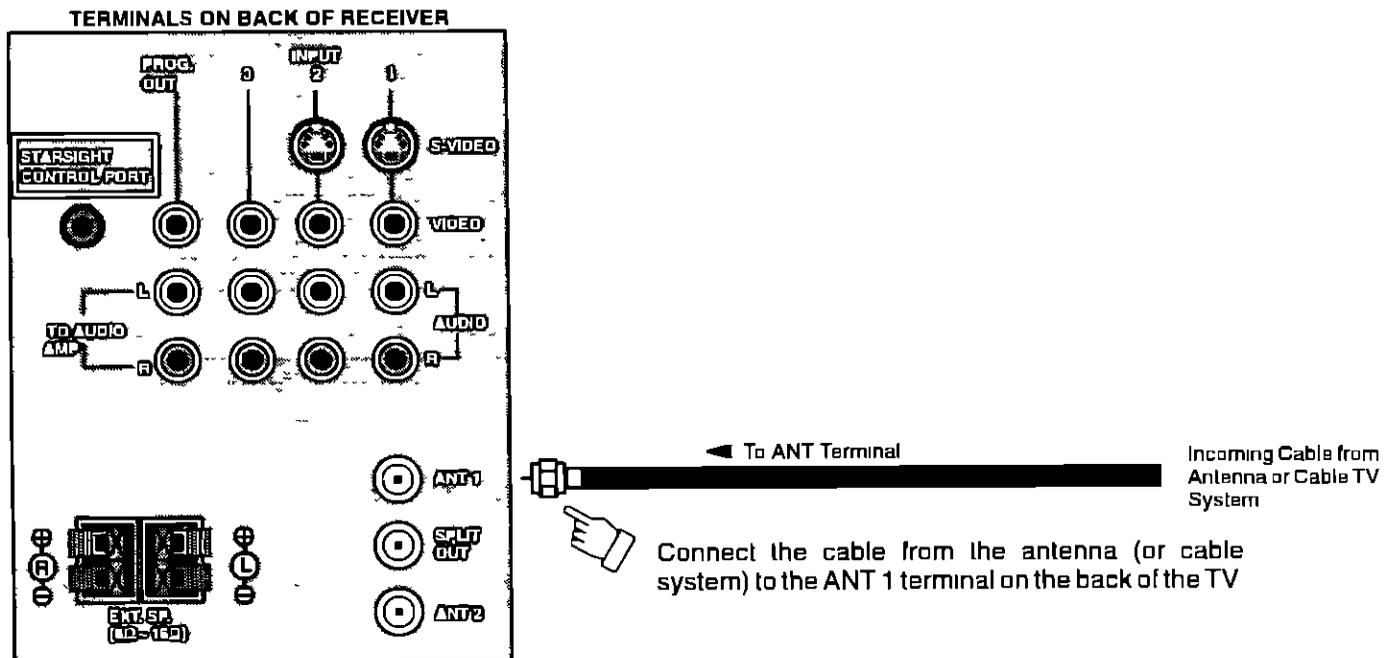

StarSight Antenna Connection (VCR, no Cable Box)




Use this configuration when connecting a VCR to the TV, when the TV is connected directly to the antenna or Cable TV system (without a Cable Box). Be sure to select the correct mode (see the *Set-Up Features* section in this Manual for details).

Not used in this configuration

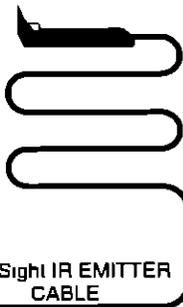

StarSight IR EMITTER CABLE


- 1** Connect the cable from the antenna (or cable system) to the ANT 1 terminal on the back of the TV
- 2** Connect the cable from the SPLIT OUT terminal on the back of the TV to the antenna input of the VCR
- 3** Connect the audio cables from the Audio Out terminals on the back of the VCR to the Audio In (L or R) terminals on the back of the TV
- 4** Connect the video cable from the Video Out terminal on the back of the VCR to the Video In terminal on the back of the TV. If connecting S-Video, connect the S-Video cable instead of the standard video cable
- 5** Connect the StarSight IR Emitter cable to the StarSight Control Port on the back of the TV
- 6** Place the StarSight IR Emitter in front of the VCR's IR sensor with the IR Emitter's face towards the VCR. The IR Emitter can be placed as shown or in any position as long as the face is towards the VCR's IR sensor

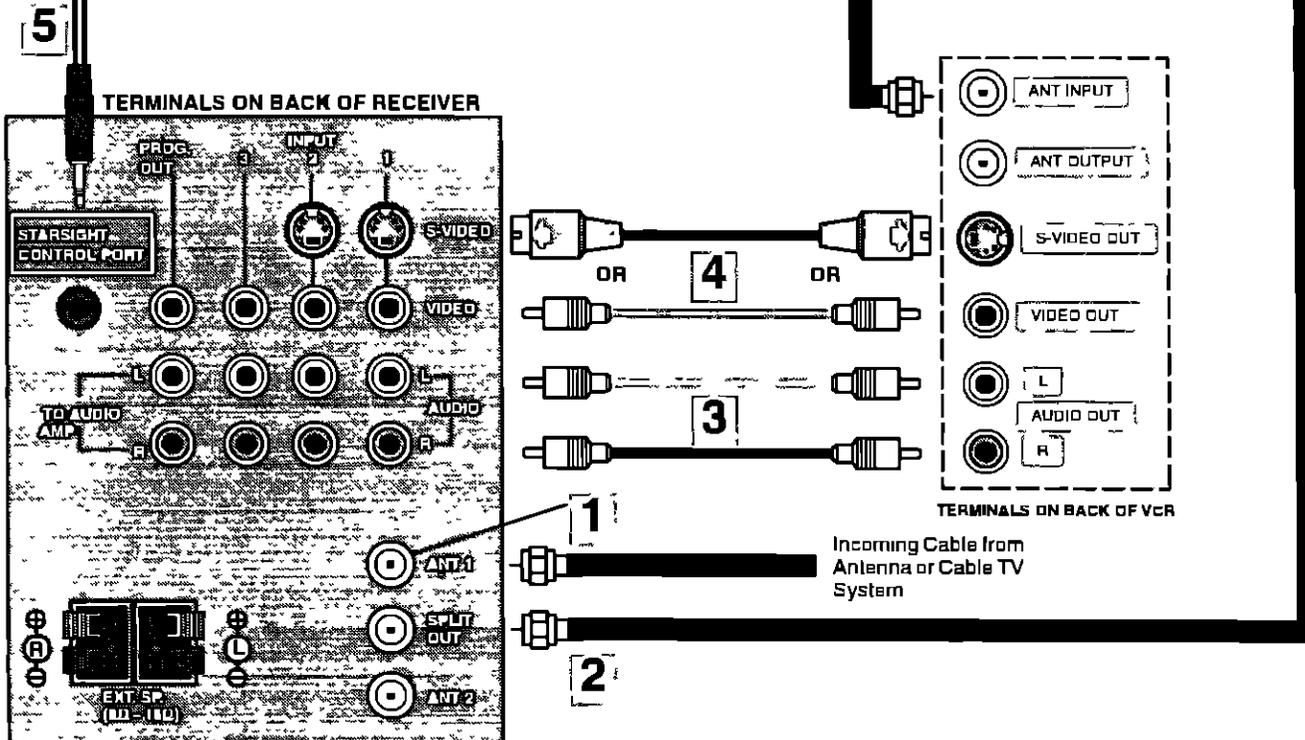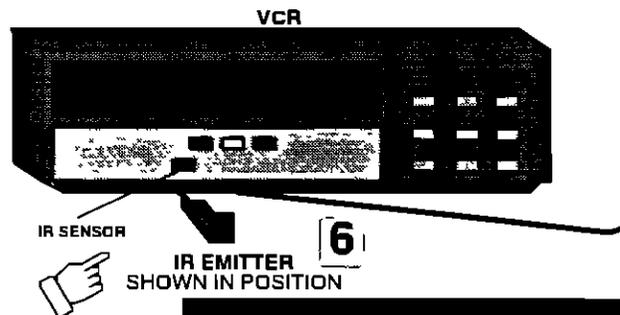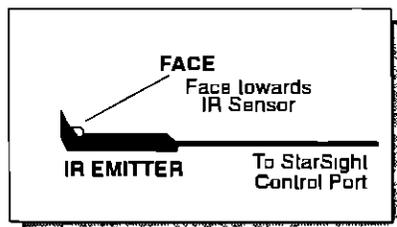

StarSight Antenna Connection (Cable Box, no VCR)


Use this configuration when connecting the TV to the Cable TV system using a Cable Box. Be sure to select ANT 2 and Cable Mode (see the *Input Select* and *Set-Up Features* sections in this Manual for details)

- 1** Connect the cable from the antenna or cable system to the ANT 1 terminal on the back of the TV
- 2** Connect the cable from the SPLIT OUT terminal on the back of the TV to the Input terminal on the back of the Cable Box
- 3** Connect the cable from the Output terminal on the back of the Cable Box to the ANT 2 terminal on the back of the TV
- 4** Connect the StarSight IR Emitter cable to the StarSight Control Port on the back of the TV
- 5** Place the StarSight IR Emitter in front of the Cable Box's IR sensor with the IR Emitter's face towards the Cable Box. The IR Emitter can be placed as shown or in any position as long as the face is towards the Cable Box's IR sensor

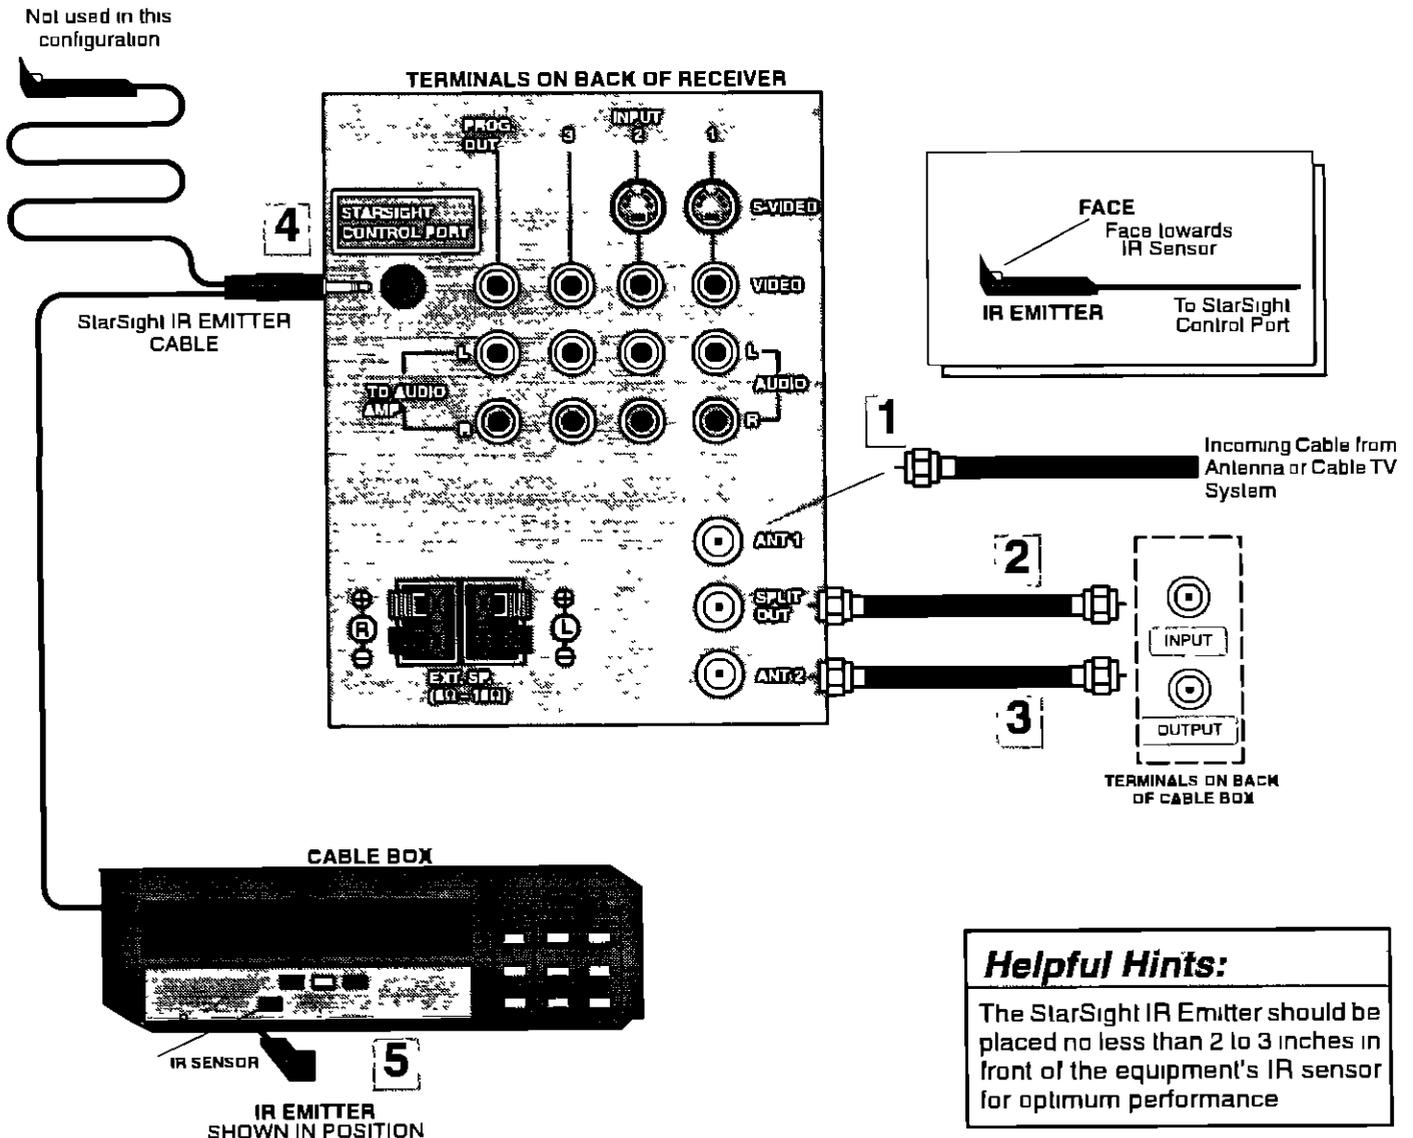

StarSight Antenna Connection (Cable Box and VCR)


Use this configuration when connecting the TV to the Cable TV system using a Cable Box and a VCR. Be sure to select ANT 2 and CABLE Mode (see the *Input Select* and *Set-Up Features* sections in this Manual for details)

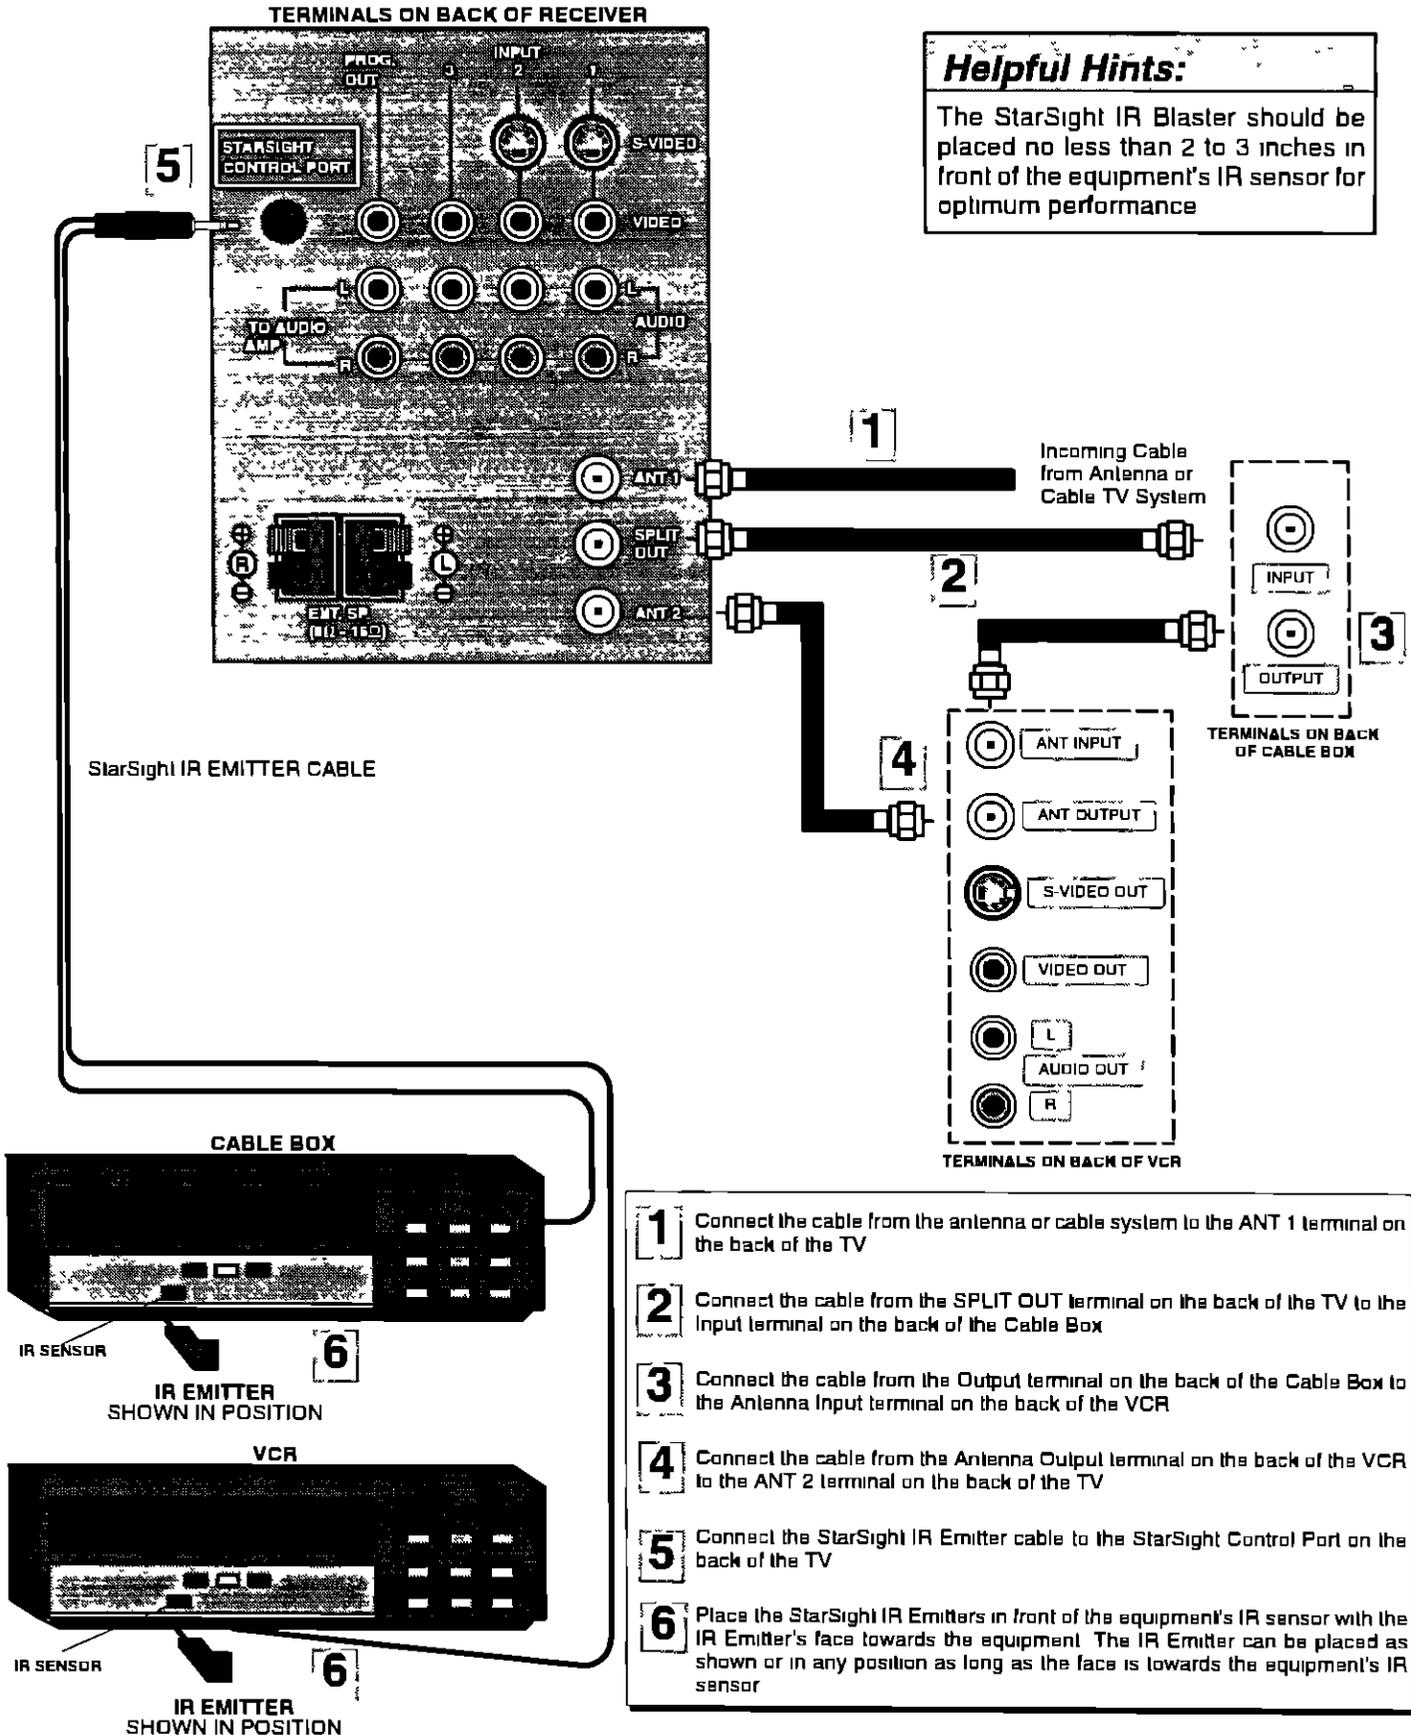

Optional Equipment Connection and Operation

Helpful Hints:

These terminals can also be used to connect to a VCR or another TV/Monitor. Connect them to the input of the desired device. See figure for details replacing the Audio Amp with either a VCR or TV/Monitor. Don't forget to connect the video (PROG OUT) as needed (not shown in figure)

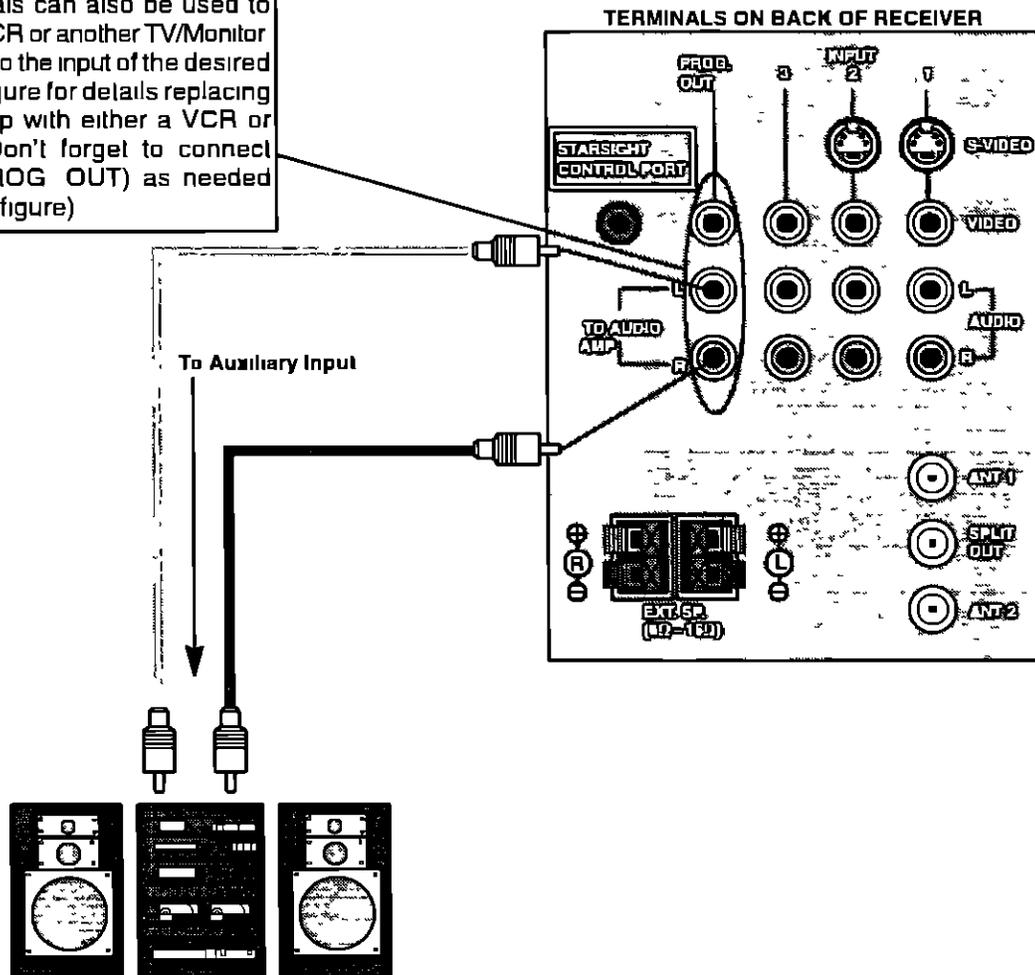

To Audio AMP Connection (Stereo)

- To Audio AMP

Connect to an external audio amp auxiliary input for monitoring sound through a stereo system


Note: "TO AUDIO AMP" terminals cannot be used directly with external speakers

Adjustment – When an audio amp is connected to "TO AUDIO AMP" terminals

- 1 Select SPEAKER "ON" Mode (Refer to the Audio Menu Speaker section)
- 2 Set volume of audio amp to near minimum
- 3 Adjust volume of TV to desired listening level
- 4 Adjust volume of audio amp to match the volume of the TV
- 5 Select SPEAKER "OFF&VAO" (Variable Audio Output) Mode (Refer to the Audio Menu Speaker section)
- 6 Audio bass, treble, balance, volume, and mute can now be controlled by the TV Remote Control. When "OFF&FAO" (Fix Audio Output) mode is selected in the Audio Menu, the external amplifier speakers are controlled by the Audio Amplifier

Optional Equipment Connection and Operation (cont.)

S-Video connection is optional and overrides the standard Video connection when connected

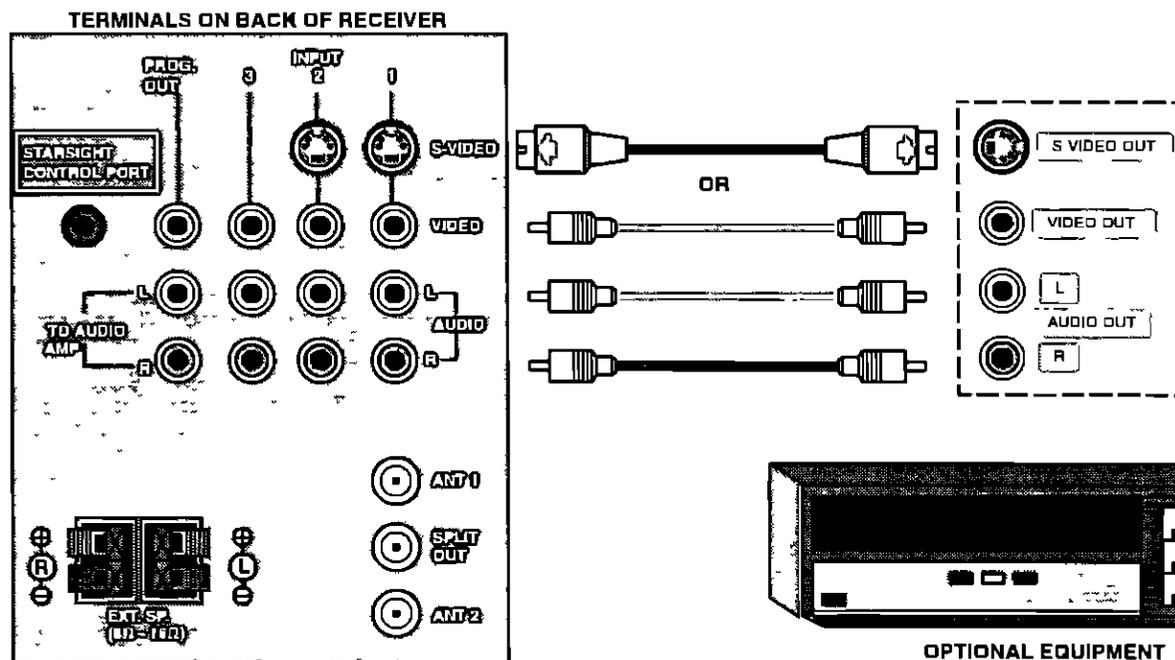

Audio/Video Connection

Operation

- 1 Connect optional equipment as shown to INPUT 1, 2, 3, or 4 (input 4 is located on front of Receiver)
- 2 Select the desired Video mode by pressing the TV/VIDEO button (or refer to the Input Select Menu)

Notes


- You must select the VIDEO Mode that corresponds with the terminal that the equipment is connected to—VIDEO 1 for INPUT 1, VIDEO 2 for INPUT 2, VIDEO 3 for INPUT 3 or Video 4 for INPUT 4
 - S-Video is only available with VIDEO 1 and VIDEO 2
 - Connection of optional S-Video automatically disconnects the normal INPUT 1 or 2 Video terminal
- 3 Operate optional equipment (VCR-VDP) as instructed in the manual that came with that equipment

Optional Equipment Connection and Operation (cont.)

PROG (Program) Out Connection

Operation


- 1 Connect optional video equipment as shown
- 2 Output terminal signal is same as that being viewed on screen
- 3 Monitor or Record as instructed in Optional Equipment Manual

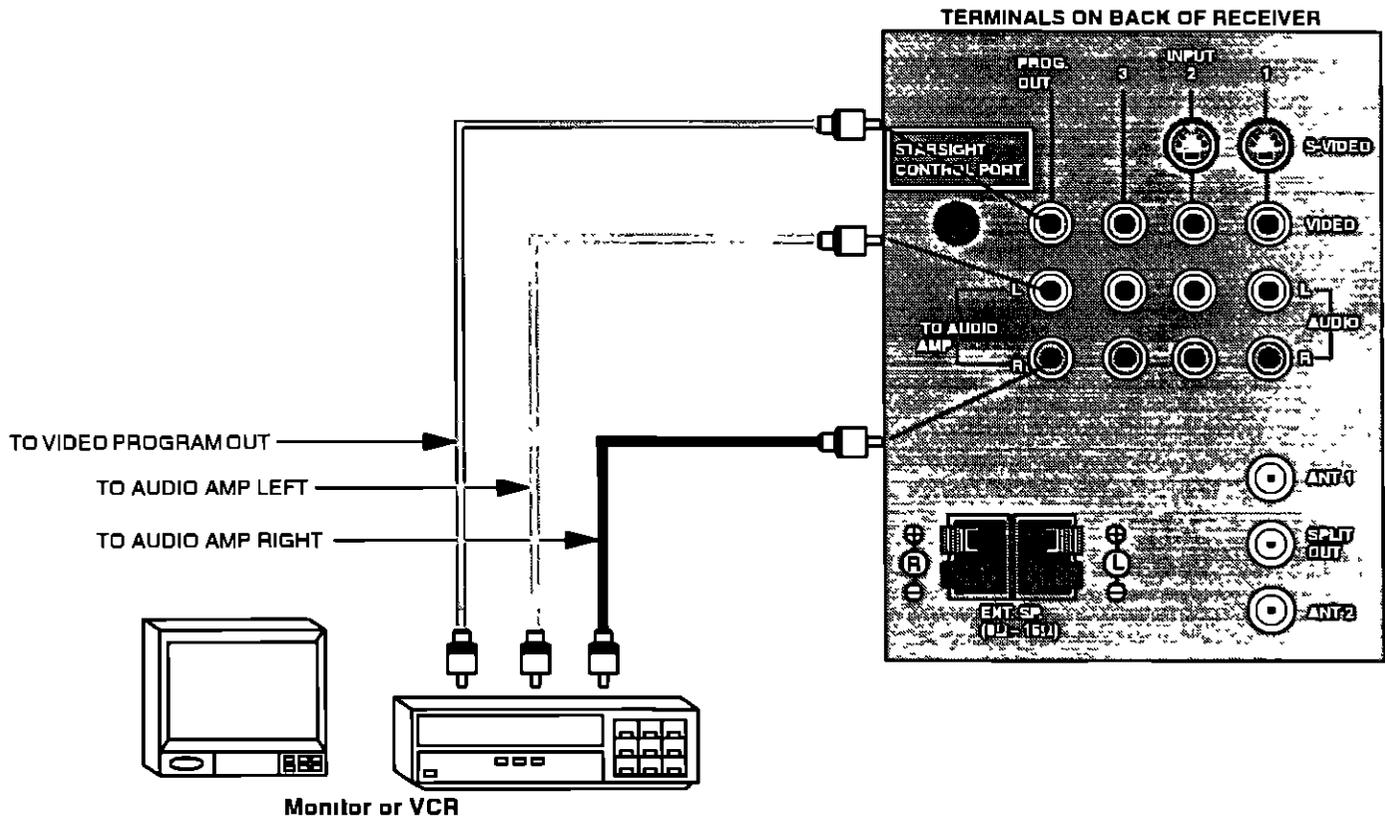


Picture in Picture External Video and Antenna Connection

This Receiver has the "PICTURE IN PICTURE" feature that uses two tuners. This allows you to watch two (2) live broadcasts at the same time without an external video source. Press the PIP button to display the PIP frame. (See PIP Antenna Connection, Detail 1) If you wish an external video source (VCR, Laser Disc Player, or Camcorder) may be monitored in the PIP Frame. (See PIP External Video Connection, Detail 2)

Detail 1 – PIP Antenna 1 Connection

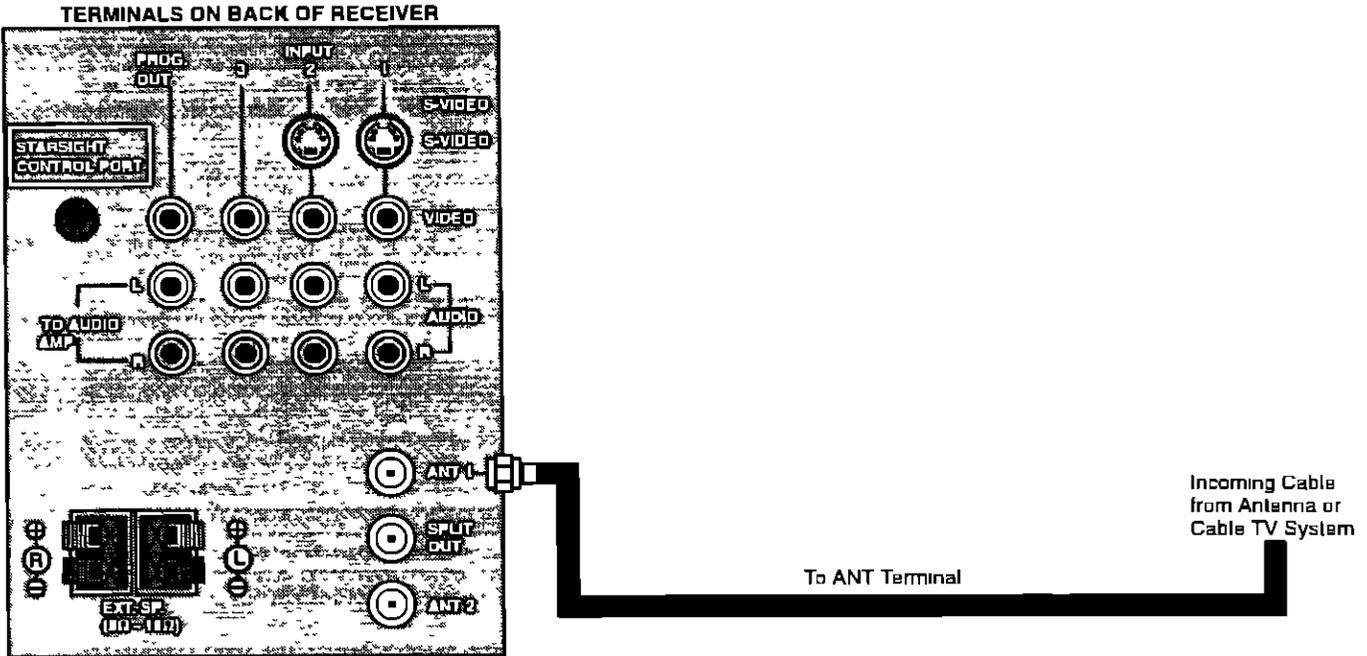


Detail 2 – PIP External Video Connection

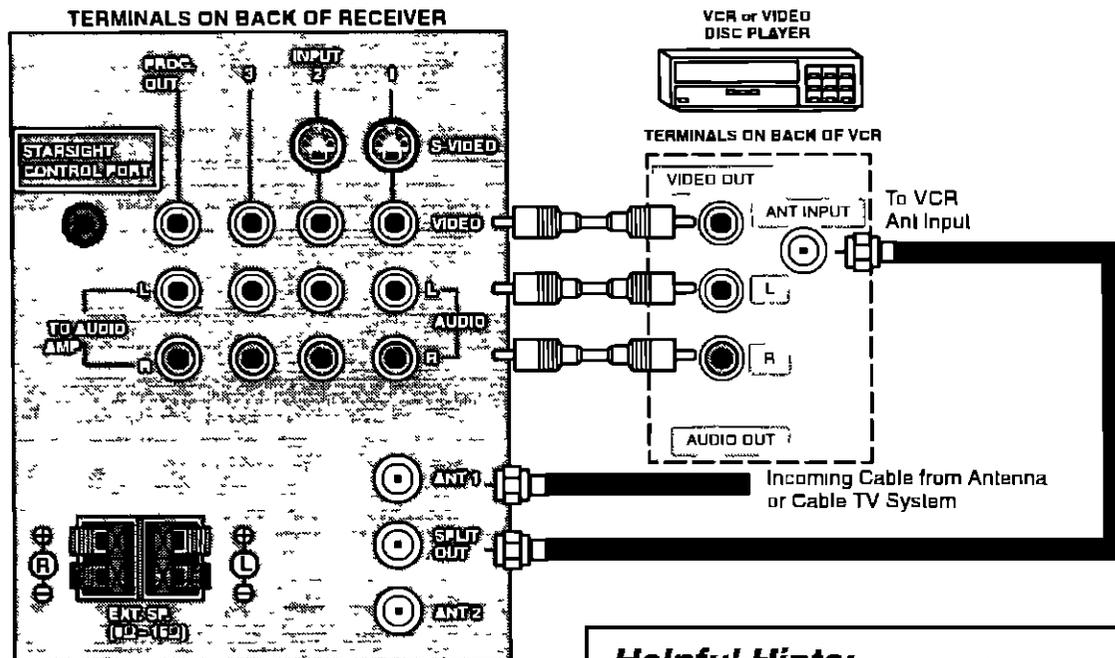

Helpful Hints:

The PIP will operate using Audio/Video Input terminals 1, 2, 3, or 4. Use the TV/VIDEO button to select proper mode. The PIP feature will also operate using S-Video Input terminals 1 or 2.


Location of Controls (Receiver)

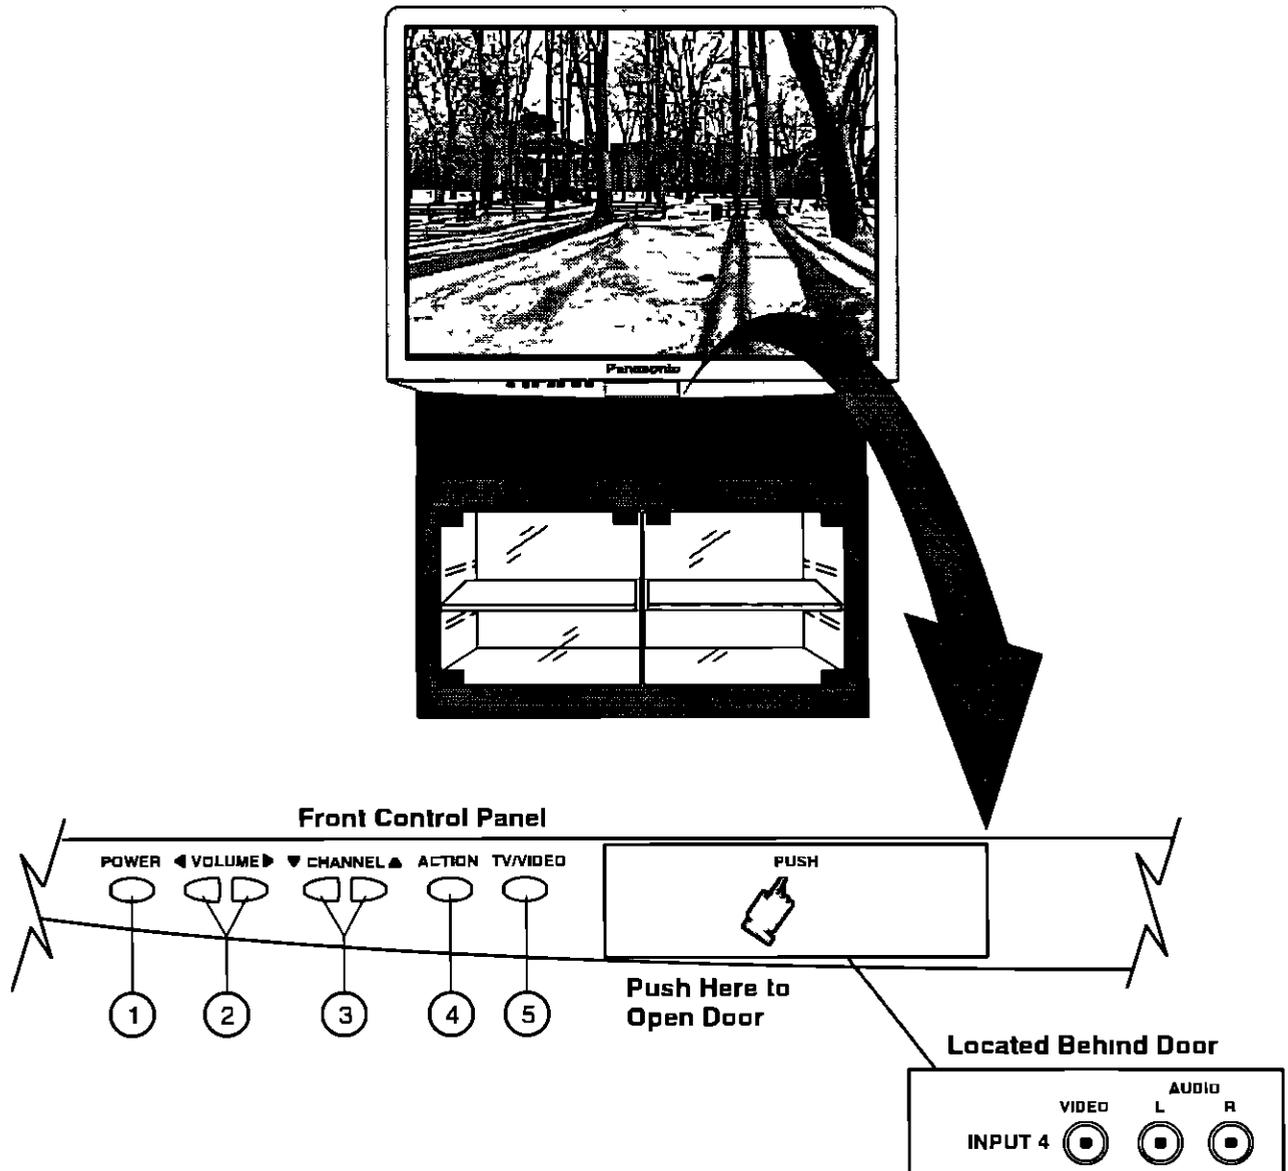

Quick Reference Control Operation

- ① **Power Button** – Press to turn ON or OFF
- ② **Volume Buttons** – Press to adjust Sound Level Press to adjust Audio Menus, Video Menus, and select operating features when menus are displayed
- ③ **Channel Buttons** – Press to select programmed channels Press to highlight desired features when menus are displayed
- ④ **Action Button** – Press to display Main Menu and access or exit On-Screen feature and Adjustment Menus
- ⑤ **TV/Video Button** – Press to select TV, or one of four Video Inputs for the Main Picture, or the PIP frame (when the PIP frame is displayed)

Location of Controls for the Illuminated Home Theater Remote Unit

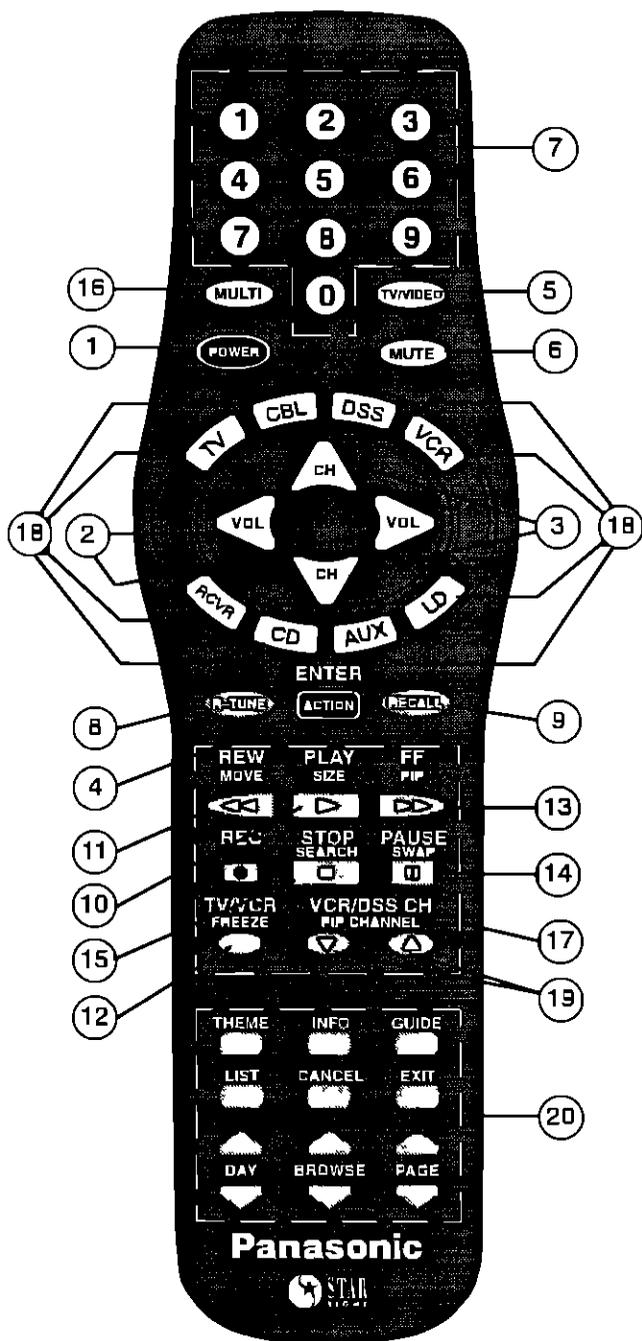

Basic Remote Control Functions for Television Operation

The following is a basic overview of the remote control unit for television operation. Ensure the TV mode is selected by initially pressing 

- ① **Power Button** – Press to turn the TV ON or OFF
- ② **Volume Buttons** – Press to adjust TV sound level. Use with Channel buttons to navigate in menus.
- ③ **Channel Buttons** – Press to select channels. Use with Volume buttons to navigate in menus.
- ④ **Action Button** – Press to display Main Menu and access or exit On-Screen feature and Adjustment Menus.
- ⑤ **TV/Video Button** – Press to select TV or one of four (4) Video Inputs, for the Main Picture or the PIP frame when the PIP frame is displayed.
- ⑥ **Mute Button** – Press to mute sound. A second press returns sound.
- ⑦ **Numeric Keypad (0 through 9 Buttons)** – Press desired channel number to access any channel.
- ⑧ **R-Tune (Rapid Tune) Button** – Press to switch to the previous channel.
- ⑨ **Recall Button** – Press to display Time, status of Sleep Timer, Channel, Video Mode, Channel Caption (Station Identifier), and Audio Mode.
- ⑩ **Size Button** – Press to select size of PIP frame when the PIP frame is displayed.
- ⑪ **Move Button** – Press to position PIP frame to any corner of the Main Picture when PIP frame is displayed.
- ⑫ **Freeze Button** – Press to stop action of the Main Picture or PIP frame when the PIP frame is displayed.
- ⑬ **PIP (Picture In Picture) Button** – Press to display the PIP frame, press again to remove PIP frame.
- ⑭ **Swap Button** – Press to interchange PIP frame with Main Picture when the PIP frame is displayed.
- ⑮ **Search Button** – This button is used to select PIP Search to automatically scan channels within the PIP Frame.
- ⑯ **Multi Button** – Programmable to operate up to six (6) Remote Function buttons simultaneously.
- ⑰ **VCR Function Buttons** – Programmable to operate many brands of VCR's.
- ⑱ **Mode Selection Buttons** – Selects the operation mode for the remote control.
- ⑲ **VCR/DSS (PIP) Channel Buttons** – These buttons are used to select VCR or DSS channels UP or Down, or to move the channels within the PIP frame UP or DOWN.
- ⑳ **StarSight Buttons** – These buttons are used to operate the StarSight On-Screen TV Program Guide. A subscription is required to activate these functions.

Note: In order to maximize the life of the batteries, the lights can be turned OFF and ON by pressing R-TUNE and RECALL at the same time.

Helpful Hints:

If the selected component does not respond to the remote control, ensure that the proper mode is selected. **First**, press the **Mode Selection Button** that corresponds to that component. For example, after first pressing the TV Mode Button, the remote will remain in the TV mode for any following commands. If another mode button is pressed while operating the television, the TV mode button must be pressed again to reset the TV mode condition.

Note: For more information on the Remote Control, please refer to the Remote Control Quick Reference Functional Key Chart.

Remote Control

Quick Reference Functional Key Chart

KEY	MODE	FUNCTION
	TV VCR CABLE, DSS	Selects Channel Selects Channel Selects Channel
	RECEIVER/AMPLIFIER	4 Selects Tuner 5 Selects CD Player 6 Selects Tape Cassette Player 7 VCR 1 8 VCR 2 9 VCR 3
	CD PLAYER	Selects Track Number
	LD PLAYER	Selects Track Number
	ALL COMPONENTS	Programmable Button That Can Operate Up To Six (6) Remote Functions at Once
	TV	Selects the TV Input Mode
	ALL COMPONENTS	Turns On and Off Selected Components
	TV, DSS, VCR, LDP CABLE RECEIVER/AMPLIFIER	Mutes TV Audio Mutes Audio Mutes Audio
	TV	TV Mode Selection for Remote Control
	CABLE	Cable Mode Selection for Remote Control
	DSS (DIGITAL SATELLITE SYSTEM)	DSS Mode Selection for Remote Control
	VCR	VCR Mode Selection for Remote Control
	RECEIVER/AMPLIFIER	Receiver/Amplifier Mode Selection for Remote Control
	COMPACT DISC	CD Mode Selection for Remote Control
	CASSETTE PLAYER, DVD	AUX Mode Selection for Remote Control Enables User to Operate a Tape Cassette Player, or Digital Video Disc
	LASER DISC PLAYER	LD Mode Selection for Remote Control
 	TV CABLE DSS LDP CD RECEIVER/AMPLIFIER DVD	Channel Up/Down, Menu Navigation Channel Up/Down DSS Guides and Menu Navigation Skip FF, REW Preset or Tuning Frequency Skip FWD / Skip REW
 	TV CABLE DSS RECEIVER/AMPLIFIER VCR LDP	Volume Up/Down, Menu Navigation Volume Up/Down DSS Guides and Menu Navigation Volume Up/Down TV Volume Up/Down TV Volume Up/Down
 	StarSight	StarSight On-Screen TV Program Guide Navigation Please Refer to the "Using StarSight Guide" for Operation

Remote Control

Quick Reference Functional Key Chart

KEY	MODE	FUNCTION
	LDP TV CABLE VCR DSS RECEIVER/AMPLIFIER CD TAPE CASSETTE PLAYER	Side A/B Selects Previously Tuned Channel Selects Previously Tuned Channel Selects Previously Tuned Channel Selects Previously Tuned Channel Switches between AM and FM Selects Next Disc Selects Tape Cassette Player A or B
	TV DSS	Activates TV Menus Acts as Menu Button for DSS
	TV DSS VCR LDP	Displays Channel, Time, and Audio Mode Displays Current DSS Settings Displays Current VCR Settings Displays Current LDP Settings
	TV DSS VCR LDP TAPE CD DVD	PIP Move DSS Guide Rewind Rewind Rewind Selects Previous Track Rewind
	TV DSS VCR LDP TAPE CD DVD	PIP Size Enter/Select Play Play Play (in Normal Direction) Play Play
	TV DSS VCR LDP TAPE CD DVD	PIP On/Off Exit/Clear Fast Forward Fast Forward Fast Forward Selects Next Track Fast Forward
	DSS VCR TAPE CABLE	One Touch Record in DSS Mode Record Record VCR Record
	TV DVD VCR LDP TAPE CD CABLE	PIP Search Stop Stop Stop Stop Stop VCR Stop
	DVD TV VCR LDP TAPE CD CABLE	Pause PIP Swap Pause Pause Pause Pause VCR Pause
	TV VCR DSS CABLE	PIP Freeze Selects TV/VCR Mode Selects TV/DSS Mode Selects TV/VCR Mode
	TV VCR DSS CABLE	PIP Channel Up/Down (2 Tuner PIP Models Only) Channel Up/Down Channel Up/Down VCR Up/Down

Control Operation

Helpful Hints:

Press the TV Mode Selection button to operate TV Remote functions, if necessary.




Power Button – Press the POWER button after selecting a mode to turn ON. Press again to turn OFF.



Volume Button – Press the VOLUME (VOL) LEFT or RIGHT button for desired listening level (when On-Screen menus are not displayed).

Located On Remote Control

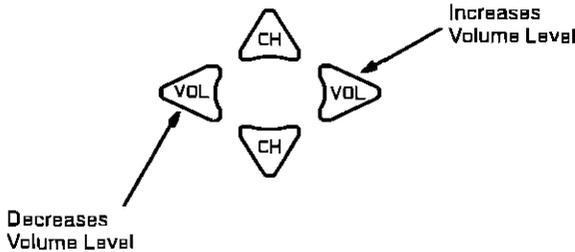

Mute Button – Press the MUTE button to quickly reduce sound level. "MUTE" will appear on screen momentarily. Press again to restore sound.



Helpful Hints:

Helpful information will display On Screen momentarily when Receiver is first turned on and when the channel is changed.


NOTE: If "SPEAKER OFF" is displayed On Screen after pressing the VOLUME button, refer to Audio Menu to turn Speakers "ON".

Channel Buttons (UP/DOWN)

Press the CHANNEL (CH) UP/DOWN button to sequentially scan through programmed channels (when On-Screen menus are not displayed).


NOTE: Press the TV Mode button to operate TV Remote functions, if necessary.

Located On Remote Control

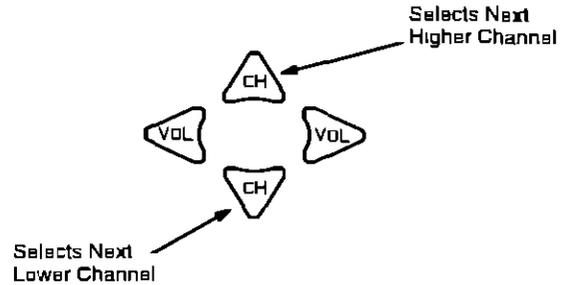


Numeric Keypad (0 through 9 Buttons)

These buttons let you directly access any channel (Example: press 5 for channel 5, press 1 then 3 for channel 13). For channels over 99, press three number buttons.

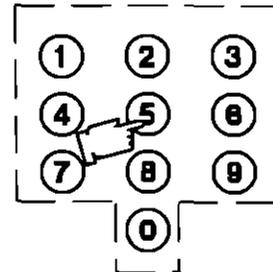


VCR Function Buttons – The VCR function buttons have been designed to operate numerous brands of VCRs. The infrared code must be obtained prior to use. (Please refer to Programming the Universal Remote for programming instructions.)

NOTE: Press the VCR Mode Selection button to operate VCR Remote functions.

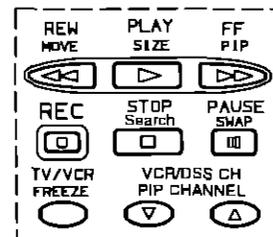


Recall Button — Press the RECALL button to review

- ① Audio Mode status
- ② CH number or Video Input selected
- ③ Sleep Timer status
- ④ Clock time
- ⑤ Channel Caption (Station Identifier)

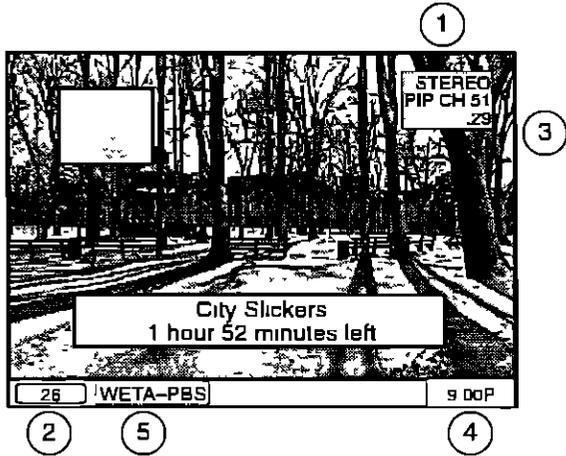


StarSight Activated

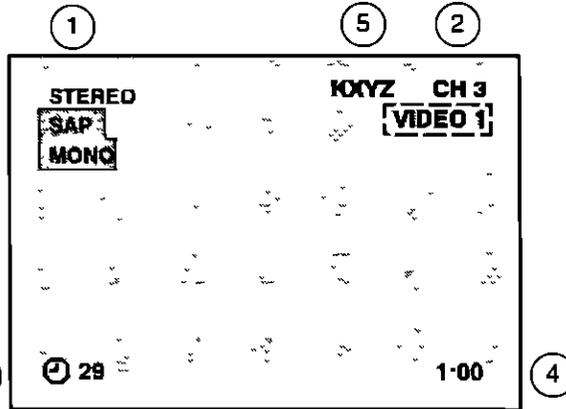

StarSight Not Activated

R-Tune Button — Pressing the R-TUNE (RAPID TUNE) button will switch between the last two channels selected on the numeric keypad

NOTE: When rapidly scanning channels with the CHANNEL UP/DOWN button, pressing the R-TUNE button will switch between the last channel scanned, and initial channel at the start of scanning

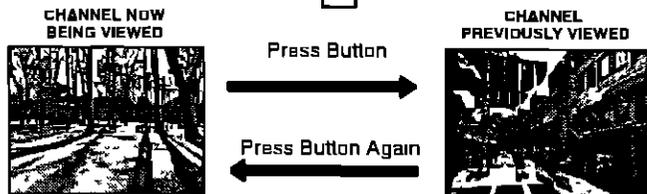


Multi Button

The MULTI button can be programmed to operate up to six (6) Remote function buttons at the same time. For Example: TV Power/On, VCR Power/On, and Cable box Power/On (selected brands) can be operated at the same time with one press of the MULTI button

Procedure

- 1 Program the Remote for the selected device Infrared access code Confirm that the Remote Control is compatible with the device
- 2 Face the Remote Control transmitter away from all equipment remote sensors
- 3 Press and hold the Remote POWER button, then press and hold the ACTION button down at the same time for three seconds (All previous commands are erased)


PRESS AT THE SAME TIME FOR THREE SECONDS

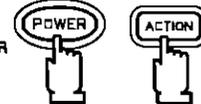

- 4 After three seconds, all the illuminated buttons will begin to flash Release the POWER and ACTION buttons
- 5 Press the MULTI button (Waiting more than 30 seconds without pressing another button will exit the programming mode)
- 6 Press a maximum of six (6) function buttons on the Remote Control

Each button you press is equal to one function If six (6) Remote button functions are entered, all will register in the MULTI button memory in the sequence entered When finished, press the MULTI button to exit the programming mode

The following is an example flow chart of Remote functions that can be programmed into the MULTI button. (The VCR Mode button should be programmed before starting procedure see pg. 42).

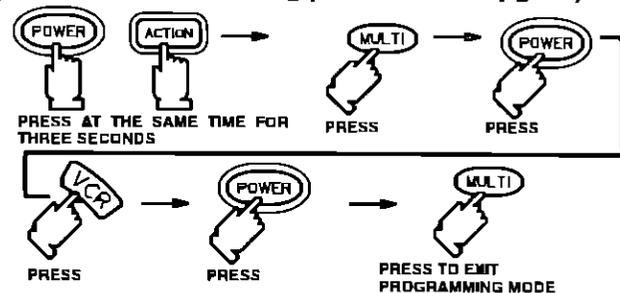

You can now turn the TV and VCR ON/OFF at the same time with one press of the MULTI button

To delete entered functions — Press and hold the Remote POWER button, then press and hold the ACTION button down at the same time for three seconds You can now enter from one to six different Remote functions

NOTE: You can also program the MULTI button to perform most individual Remote Control button functions Buttons which continuously perform a function as long as pressed (Volume Up/Down, Channel Up/Down, etc) cannot be programmed, only those buttons which perform a function when initially pressed (Power On/Off, Mute, Direct Channel Entry, etc) can be programmed

Helpful Hints:


Press the TV Mode Selection button to operate TV Remote functions, if necessary




TV/Video Button – Press the TV/VIDEO button to select desired input for Main Picture or PIP frame (when the PIP Frame is displayed)



Signal coming from

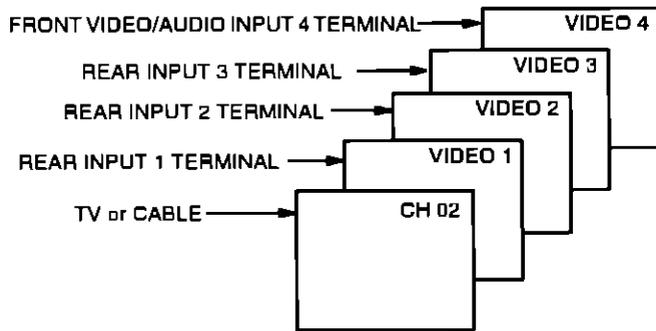

Signal coming from

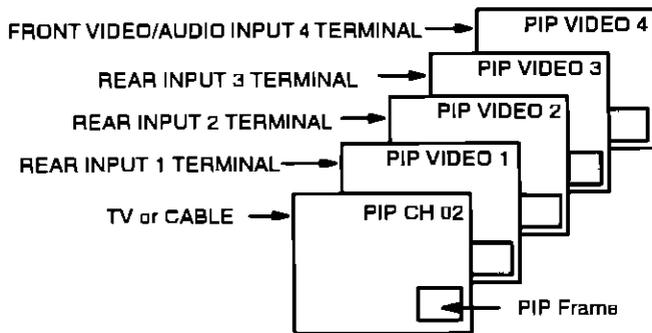

PIP (Picture in Picture) Button – This feature allows the viewer to monitor one channel program while watching another. The monitored source (PIP) can be a different channel or a different video source (such as a VCR) when connected to the input jacks


- S-Video connection will also operate the PIP feature
- When the Main Picture is in Video mode with no signal, the PIP will not operate properly

PIP Operation

- 1 Press the TV Mode Selection button to operate TV Remote functions, if necessary



- 2 Press the PIP button (television must be ON). The PIP frame will appear at the position it was last displayed. The PIP Video Source will display on screen momentarily. Audio will be that of Main Picture.

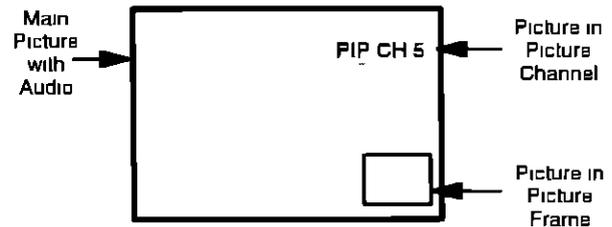


- 3 Press the PIP button again to cancel PICTURE IN PICTURE feature (if desired)



NOTE: For PIP Video source connection, refer to the Picture in Picture External Video and Antenna Connection section

Swap Button – Press the SWAP button (when the PIP frame is displayed) to interchange what is being viewed on the Main Picture with that of the PIP frame

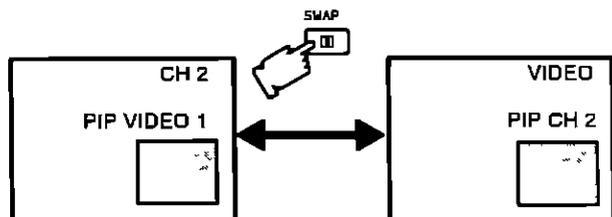


NOTE: Audio will be that of the Main Picture

Helpful Hints:

Press the TV Mode Selection button to operate TV Remote functions, if necessary



Size Button — Press the SIZE button (when the PIP frame is displayed) to choose either the large or small PIP frame

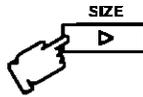

Large PIP Frame



Small PIP Frame

Freeze Button — Press the FREEZE button to stop action in the PIP frame



Main Picture


Freeze Frame

Notes:

- Pressing the FREEZE button when the PIP frame is not displayed will stop action in the Main Picture and display it within a PIP frame
- Pressing the FREEZE button when PIP frame is displayed will stop action in the PIP frame. Press the FREEZE button again to continue action
- Press the PIP button to delete PIP frame

PIP Channel Buttons


Press the PIP CHANNEL UP/DOWN button while the PIP frame is displayed to sequentially scan through Channels

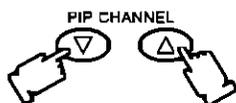

Scan Channel Down
(next lower)

Scan Channel Up
(next higher)

Search Button — The SEARCH button allows you to scan channels in "Channel Scan memory" one at a time. This feature will work with or without an external video signal as the Main Picture

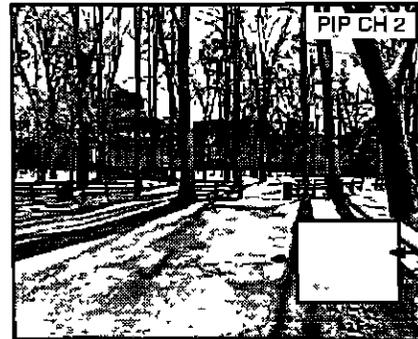

Press Search to Scan


Search Operation

- Press the SEARCH button. A PIP frame will appear on the Main Picture. The PIP frame will continuously scan channels in sequence as programmed into channel memory.
- Press the search button again to delete search frame, or press the PIP button to stop Search feature on desired channel for PIP frame. Press the PIP button again, to delete PIP frame.


Move Button — This feature allows the viewer to move the PIP frame to any corner of the Main Picture. Activate the PIP frame. Press the MOVE button to move the PIP frame to the desired location.




Note: Each time MOVE button is pressed (when the PIP frame is displayed), the PIP frame will move counterclockwise as illustrated.

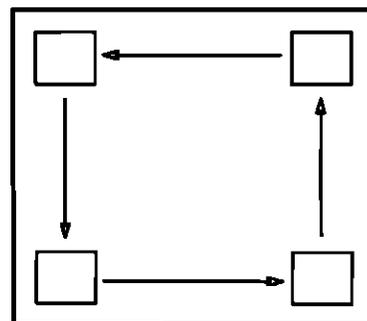

Main Menu (Trilingual Animated Icons)

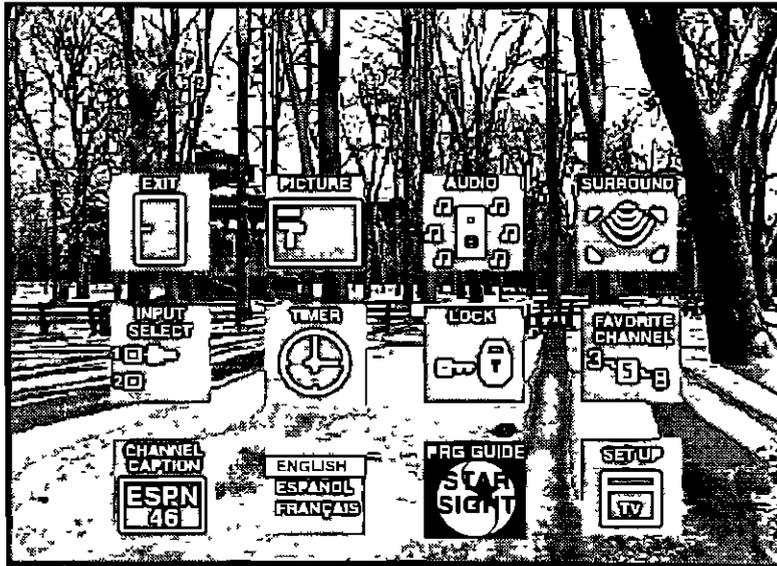

NOTE: Only the selected Icon will be animated

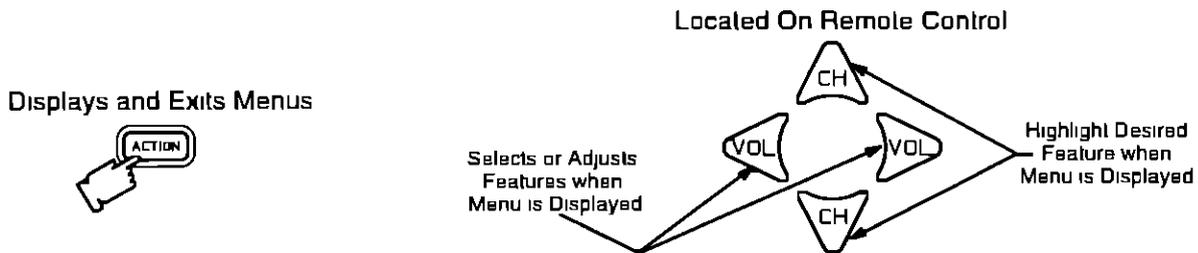

- 1 Press the ACTION button to display the Main Menu with Icons
- 2 Press the CH UP/DOWN and the VOL LEFT/RIGHT buttons to select the desired Icon when the Main Menu is displayed (selected Icon will be indicated in Red)
- 3 Press the ACTION button to select and display the desired menu
- 4 To exit the Main Menu first select the EXIT Icon, then press the ACTION button

Language Menu

The LANGUAGE MENU is factory set to ENGLISH. Follow these instructions to change the Language Menu to SPANISH or FRENCH and back to ENGLISH.

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Language ENGLISH/ESPAÑOL (Spanish)/FRANÇAIS (French) Icon
- 3 Press the ACTION button to display the Language select Menu




- 4 Press the CH UP/DOWN button to select ENGLISH, SPANISH, or FRENCH for the Language Menu
- 5 Press ACTION button twice to exit menus

Picture Adjustments


- Picture Norm
- Color
- Tint
- Brightness
- Picture
- Sharpness
- Color Temp (Temperature)
- Auto Color
- Video NR
- AI Picture

Located On Remote Control

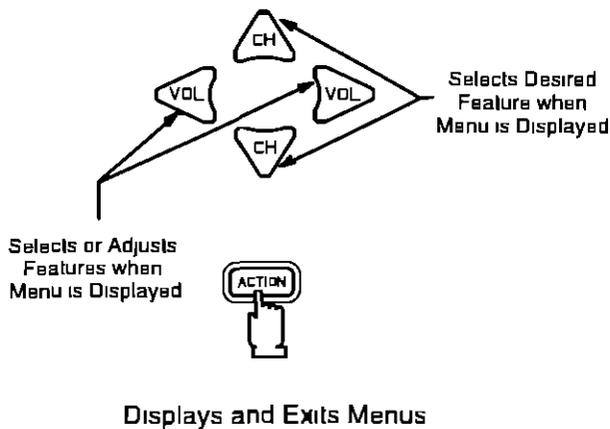

Picture Norm – This feature is used to reset Color, Tint, Brightness, Picture, and Sharpness adjustments back to a factory preset level

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon
- 3 Press the ACTION button to display the Picture Adjustment Menu

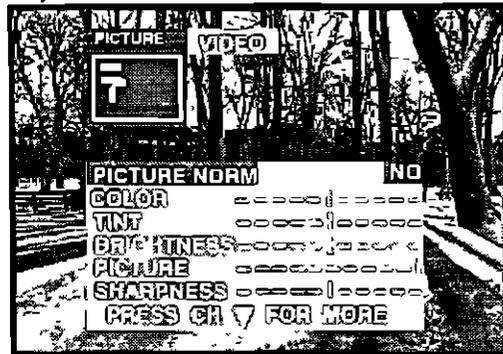

- 4 Press the CH UP/DOWN button to highlight PICTURE NORM
- 5 Press the VOL LEFT/RIGHT button to select "SET" to Normalize Color, Tint, Brightness, Picture, and Sharpness
- 6 Press ACTION button twice to exit menus

Color, Tint, Brightness, Picture, and Sharpness Adjustments

Before setting the following Picture Adjustments select the desired mode of AI Picture (ON or OFF) Picture Adjustments may require re-adjustment when changing between AI Picture ON or OFF

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon
- 3 Press the ACTION button to display the Picture Adjustment Menu



- 4 Press the CH UP/DOWN button to select the desired Picture Adjustment (Color, Tint, Brightness, Picture, or Sharpness)
- 5 Press the VOL LEFT/RIGHT button to adjust your selection (The Selected Picture Adjustment will be displayed)
- 6 Repeat steps 4 and 5 for the remaining Picture Adjustments
- 7 Press ACTION button twice to exit menus

Helpful Hints:

- COLOR – adjust for desired color intensity
- TINT – adjust for natural flesh tones
- BRIGHTNESS – adjust so dark areas of picture slightly become black for a crisp detail
- PICTURE – adjust the white areas of the picture as desired
- SHARPNESS – adjust for best clarity of outline detail

Picture Adjustment (cont.)

Color Temp (Temperature) – This feature selects three (3) options for picture temperature

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon
- 3 Press the ACTION button to display the Picture Adjustment Menu



- 4 Press the CH UP/DOWN button to highlight COLOR TEMP
- 5 Press the VOL LEFT/RIGHT button to select NORMAL, WARM, or COOL
 - NORMAL (no tint)
 - WARM (reddish tint)
 - COOL (bluish tint)
- 6 Press ACTION button twice to exit menus

Auto Color – This feature automatically optimizes color adjustment to compensate for signal variations

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon
- 3 Press the ACTION button to display the Picture Adjustment Menu



- 4 Press the CH UP/DOWN button to highlight AUTO COLOR
- 5 Press the VOL LEFT/RIGHT button to turn Auto Color feature ON or OFF
- 6 Press ACTION button twice to exit menus

Video NR (Noise Reduction) – This feature reduces video noise (snow in picture) due to weak signal


- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon
- 3 Press the ACTION button to display the Picture Adjustment Menu



- 4 Press the CH UP/DOWN button to highlight VIDEO NR (Noise Reduction)
- 5 Press the VOL LEFT/RIGHT button to turn Video NR feature ON or OFF
- 6 Press ACTION button twice to exit menus

AI Picture – This feature provides Flesh Tone Correction, Color Edge Correction, Color Noise Reduction, and Optimum Flesh Tone Brightness. For the best possible picture quality this feature should be activated (ON)

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon
- 3 Press the ACTION button to display the Picture Adjustment Menu

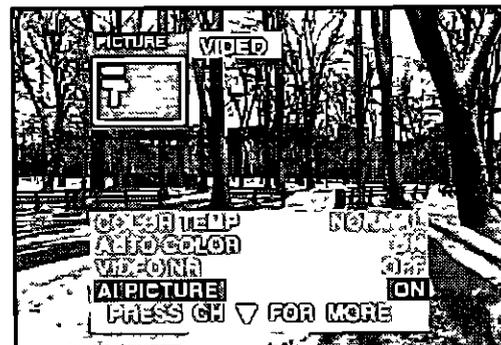


- 4 Press the CH UP/DOWN button to highlight AI PICTURE
- 5 Press the VOL LEFT/RIGHT button to select ON or OFF
- 6 Press ACTION button twice to exit menus

Audio Adjustments

- Audio Norm
- Bass
- Treble
- Balance ADJ In Test
- Mode
- [TV] Speaker
- Extra Bass
- AI Sound

Located On Remote Control

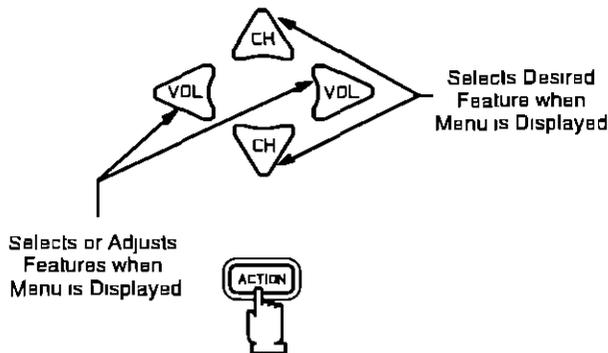

Displays and Exits Menus

Audio Norm – This feature is used to reset BASS and TREBLE back to a factory preset level

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon
- 3 Press the ACTION button to display the Audio Adjustment Menu



- 4 Press the CH UP/DOWN button to highlight AUDIO NORM
- 5 Press the VOL LEFT/RIGHT button to select "SET" to normalize Bass and Treble
- 6 Press ACTION button twice to exit menus

Bass and Treble – While the AI (Artificial Intelligence) Sound is "ON", the Bass and Treble are automatically set and cannot be selected

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon
- 3 Press the ACTION button to display the Audio Adjustment Menu



- 4 Press the CH UP/DOWN button to highlight BASS or TREBLE
- 5 Press the VOL LEFT/RIGHT button to adjust for desired audio response
- 6 Press ACTION button twice to exit menus


Helpful Hints:

BASS – To increase or decrease the Bass response
 TREBLE – To increase or decrease the Treble response

NOTE: BALANCE ADJ IN TEST cannot be selected, refer to Surround Test Tone section to emphasize the speaker volume (LEFT/RIGHT) (p 30)

Audio Adjustments (cont.)


Located On Remote Control

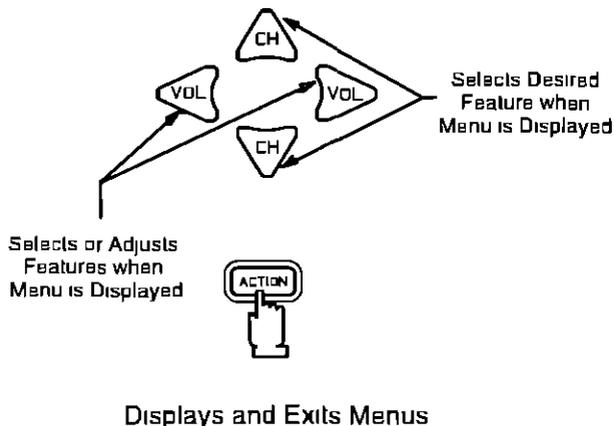

Mode – Stereo/SAP/Mono

When Audio is broadcast in Stereo or SAP, an On-Screen display will appear on initial "Turn On" and "Channel Change"

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon
- 3 Press the ACTION button to display the Audio Adjustment Menu

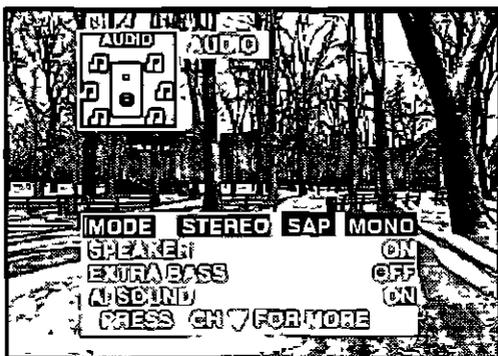

- 4 Press the CH UP/DOWN button to highlight MODE
- 5 Press the VOL LEFT/RIGHT button to select STEREO, SAP (Second Audio Programming), or MONO The selected mode will be highlighted
 - STEREO – Two channel Audio reception
 - SAP – Second Audio Programming (typically used for bilingual audio)
 - MONO – Use when stereo signal is weak
- 6 Press ACTION button twice to exit menus

[TV] Speaker – This feature is used to turn the internal speakers ON or OFF. It is used when the Receiver is connected to an External Audio Amplifier (Refer to "To Audio Amp Connection" section for further information)


- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to select the Audio Icon
- 3 Press the ACTION button to display the Audio Adjustment Menu

Note: Speaker is not displayed in audio menu when the unit is in Pro-Logic mode




- 4 Press the CH UP/DOWN button to highlight SPEAKER
- 5 Press the VOL LEFT/RIGHT button to select ON, OFF&VAO or OFF&FAO
 - ON – TV SPEAKERS operate normally
 - OFF&VAO (Variable Audio Output) – TV SPEAKERS off, the sound output varies according to the TV volume. Use the TV remote to control the volume, muting, bass, treble, and balance of the External Amplifier System
 - OFF&FAO (Fixed Audio Output) – TV SPEAKERS off, sound output is not adjustable. The audio is controlled by the External Amplifier System volume control
- 6 Press ACTION button twice to exit menus

Audio Adjustments (cont.)

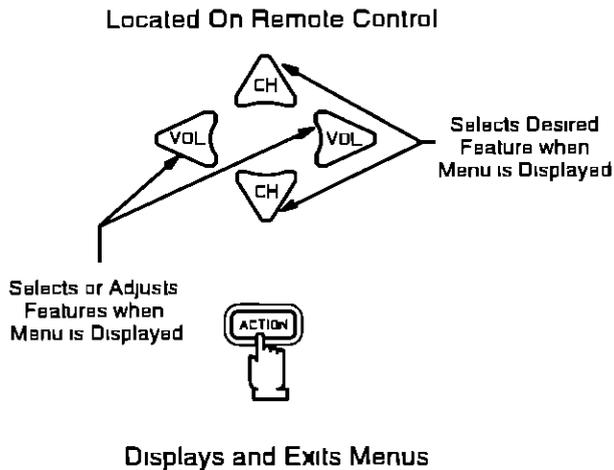

Extra Bass — This feature puts additional emphasis on bass frequencies to allow for low volume listening, and provides a fullness of sound with rich bass tones

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon
- 3 Press the ACTION button to display the Audio Adjustment Menu

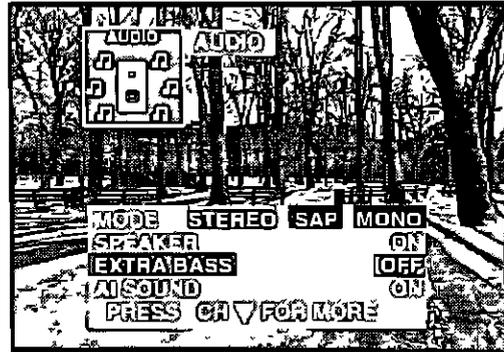

- 4 Press the CH UP/DOWN button to highlight EXTRA BASS
- 5 Press the VOL LEFT/RIGHT button to select ON or OFF
- 6 Press ACTION button twice to exit menus

AI Sound — This feature is used to enhance sound quality through automatic adjustment of bass and treble during speech or music segments of the audio broadcast. It also regulates the volume between program and commercial audio to maintain a constant sound output level.

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon
- 3 Press the ACTION button to display the Audio Adjustment Menu

Note: AI Sound is not displayed in audio menu when the unit is in Pro-Logic mode.




- 4 Press the CH UP/DOWN button to highlight AI SOUND
- 5 Press the VOL LEFT/RIGHT button to select AI SOUND ON or OFF
- 6 Press ACTION button twice to exit menus

Surround

- Surround Mode (Off)
- Test Tone (adjustment for PTV speakers audio balance)
- Surround Pro-Logic Mode (Wide/Normal/Phantom)
- Surround Mode (Cinema/Hall/Stadium)

Located On Remote Control

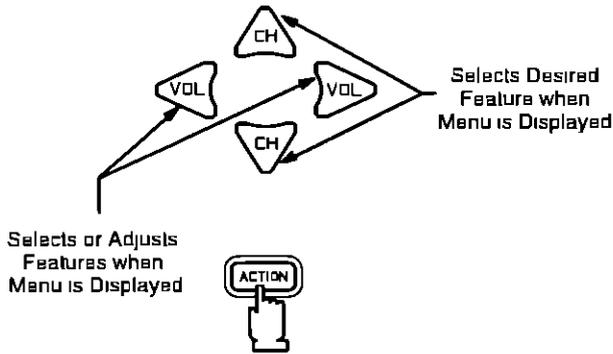


Displays and Exits Menus

Surround Mode (Off)

This feature is used to turn the Surround Mode off or to emphasize the Left/Right speaker volume

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the SURROUND Icon
- 3 Press the ACTION button to display the Surround Menu

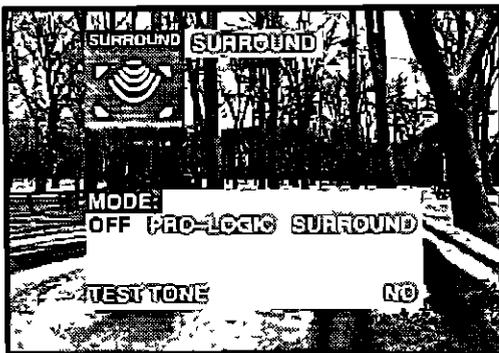


- 4 Press the CH UP/DOWN button to highlight MODE
- 5 Press the VOL LEFT/RIGHT button to select OFF
- 6 Press ACTION button twice to exit menus


Test Tone for Adjustment of PTV Speakers Audio Balance

This feature is used to emphasize Left and Right speaker volume (Surround must be in the OFF mode)

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the SURROUND Icon
- 3 Press the ACTION button to display the Surround Menu

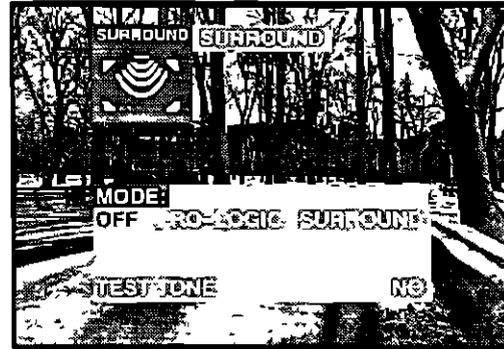

- 4 Press the CH UP/DOWN button to highlight TEST TONE

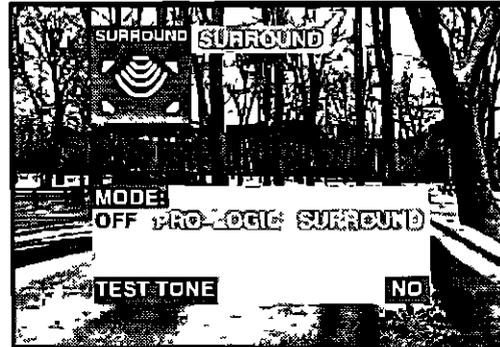

- 5 Press the VOL LEFT/RIGHT button to display the Surround Test Tone Menu



- 6 Press the VOL LEFT button while the left or right is highlighted to decrease speaker volume, or press the VOL RIGHT button while the left or right is highlighted to increase speaker volume
- 7 Press ACTION button three times to exit menus


Surround (cont.)

Surround Pro-Logic Mode (Wide/Normal/Phantom)


The built-in Dolby Pro-Logic Surround Sound processor eliminates the need for a separate Dolby receiver. It provides exceptional sound reproduction when using video software encoded with Dolby Surround information. The PTV speakers can function as center channel speakers in a Dolby Pro-Logic configuration. Refer to Dolby Pro-Logic Surround Connection section for connection instructions.

NOTE: Adjust the PTV Main volume to a normal listening level. (Use the volume button on the Remote Control.)


- 1 Press the ACTION button to display the Main Menu.
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Surround icon.
- 3 Press the ACTION button to display the Surround Menu.

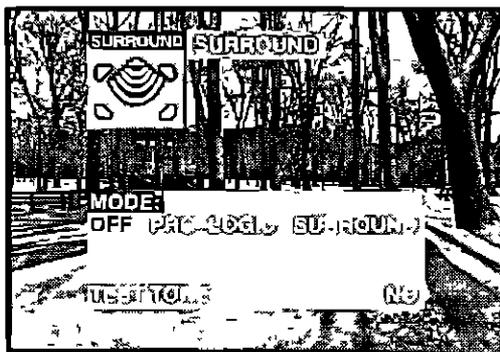

- 4 Press the CH UP/DOWN button to highlight MODE.
- 5 Press the VOL LEFT/RIGHT button to select PRO-LOGIC.

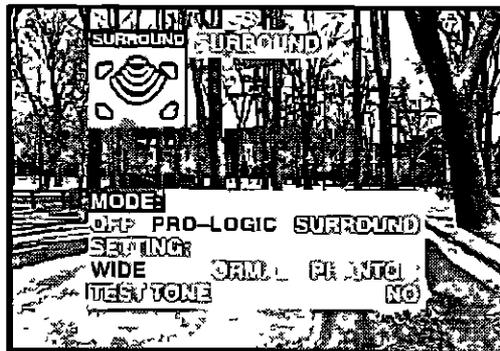


- 6 Press the CH UP/DOWN button to highlight SETTING.

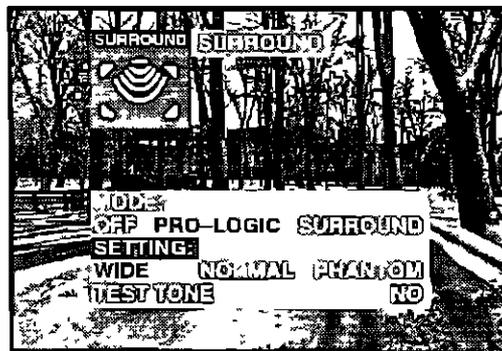

- 7 Press the VOL LEFT/RIGHT button to select WIDE, NORMAL, or PHANTOM.
 - WIDE When the center speaker sound is the same or larger than the front speakers.
 - NORMAL When the center speaker sound is smaller than the front speakers.
 - PHANTOM The sound which would have been sent to the center speaker will be divided equally between both the left and right front speakers.
- 8 Press the CH DOWN button to highlight TEST TONE.




- 9 Press the VOL LEFT/RIGHT button to display the Surround Test Tone Menu.

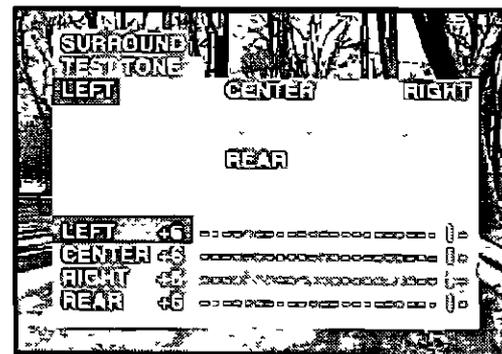

Select Pro-Logic Wide or Normal mode to adjust this menu.


Surround (cont.)

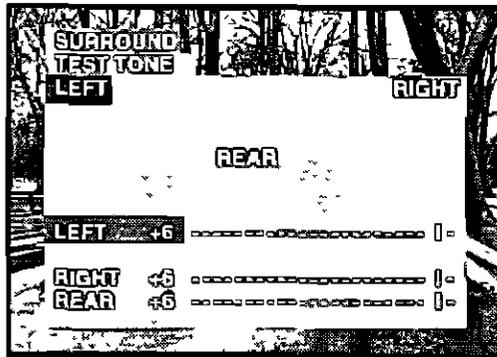

Select Pro-Logic Phantom mode to adjust this menu.


- 10 Press the CH UP/DOWN button to select
 - LEFT For adjusting tone to front-left and/or optional, amplifier speaker
 - CENTER For adjusting tone to PTV speakers (center-front channel)
Note: For PHANTOM mode, the center channel will be divided equally between front PTV speakers (left and right)
 - RIGHT For adjusting tone to front-right and/or optional amplifier speaker
 - REAR For adjusting tone to rear Surround Speakers (left and right)

Note: Before adjusting the Test Tone Volume level, the listener should be positioned in the center of all speakers as shown below

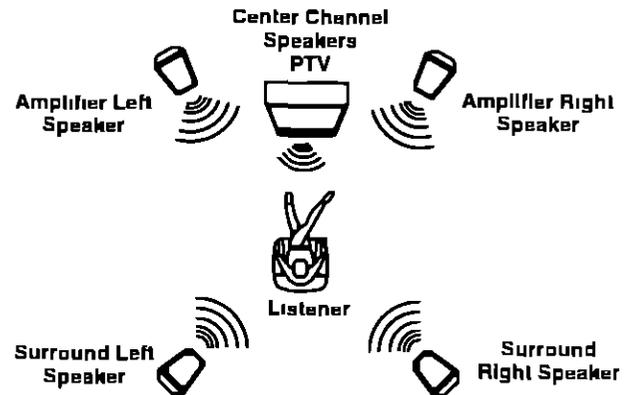

- 11 Press the VOL LEFT/RIGHT button to adjust your selection. The volume level that is being adjusted will be highlighted. Adjust so that left and right optional Amplifier Speakers, TV Center channel speakers, and Rear Surround Speakers tone level will be equal.
- 12 Press ACTION button three times to exit menus.


Surround (cont.) Dolby Pro-Logic Surround Connection

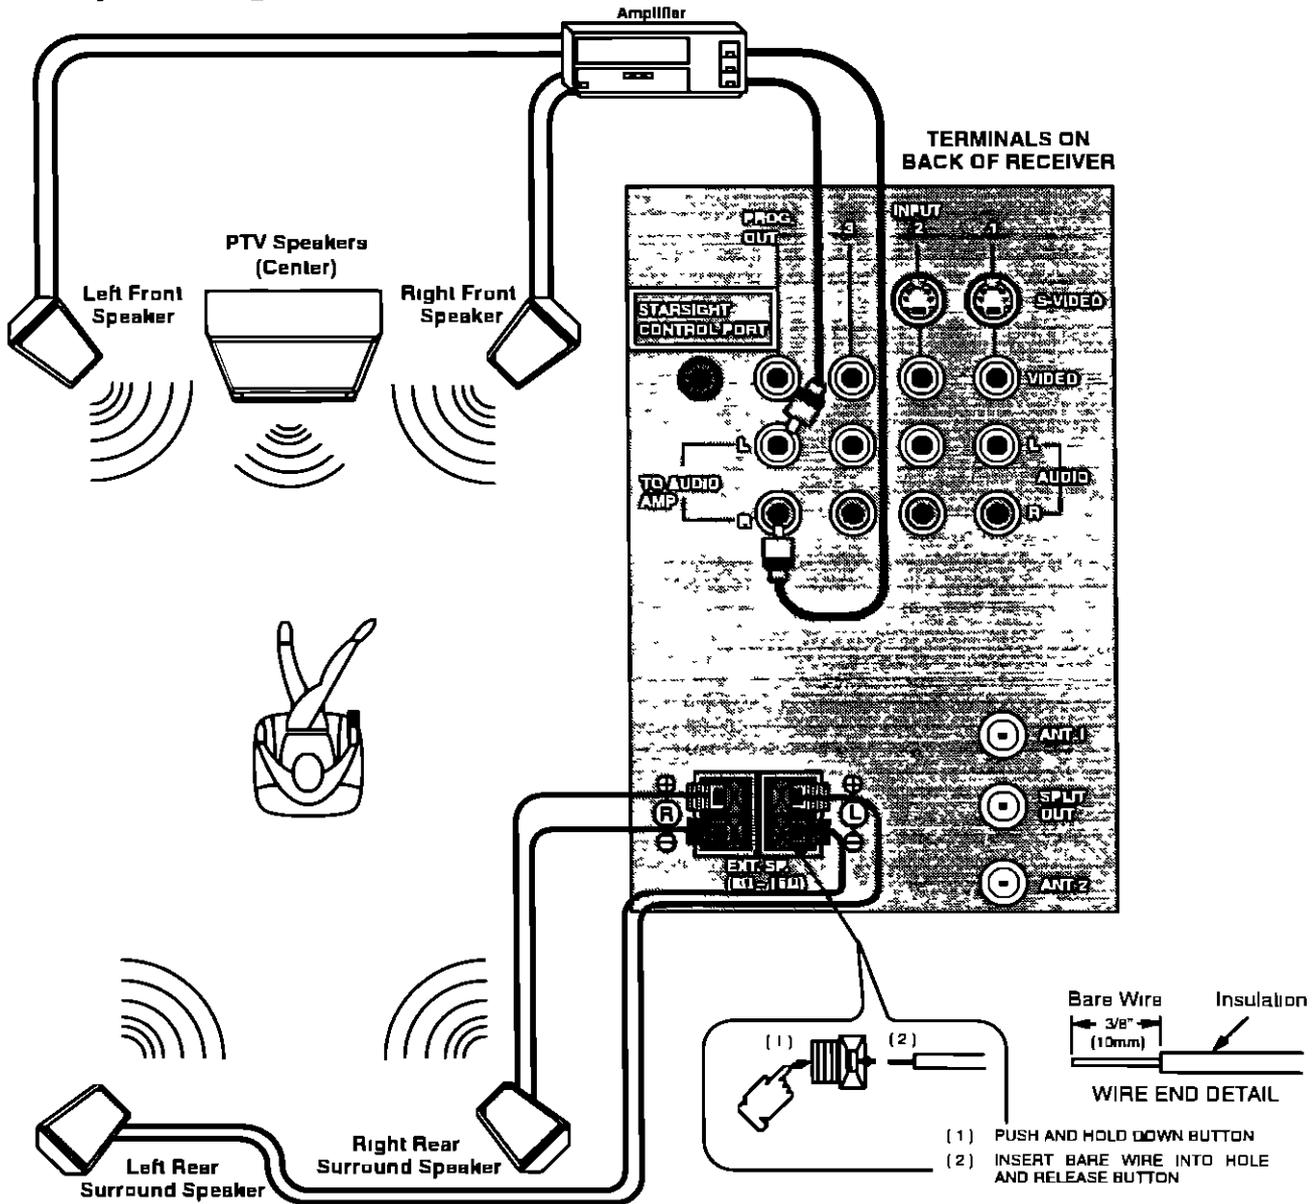

- 1 Connect the Audio amplifier speakers and the surround rear speakers to the PTV as shown in the diagram above
- 2 The PTV Volume should be set at a normal listening level

NOTE: The PTV main audio volume control will vary all audio channels at the same time, similar to a master volume control


- 3 Set up the Dolby Pro-Logic Surround menu system as follows
MODE: PRO-LOGIC
SETTINGS: WIDE or NORMAL
 (Refer to the Surround Pro-Logic Mode section for setting up menu procedures)
- 4 Balance the system by using the Surround Pro-Logic Test Tone menu. Adjust the levels of the Optional Amplifier front LEFT and RIGHT Speakers, PTV Center channel Speaker, and the LEFT and RIGHT Rear Surround Speakers to be equal
 (Refer to the Surround Pro-Logic section for the procedure to adjust Test Tone levels)

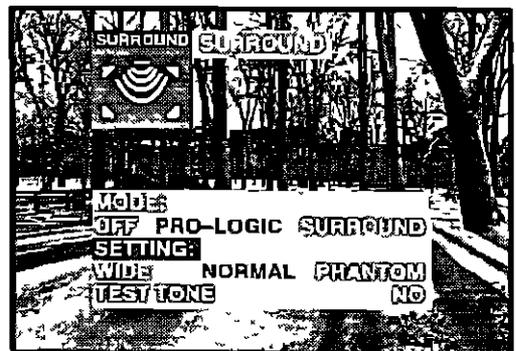


Surround (cont.)

Surround Mode (Cinema/Hall/Stadium)

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Surround Icon
- 3 Press the ACTION button to display the Surround Menu

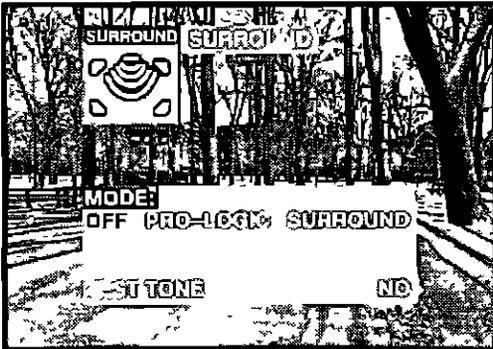

- 4 Press the CH UP/DOWN button to highlight MODE
- 5 Press the VOL LEFT/RIGHT button to select SURROUND

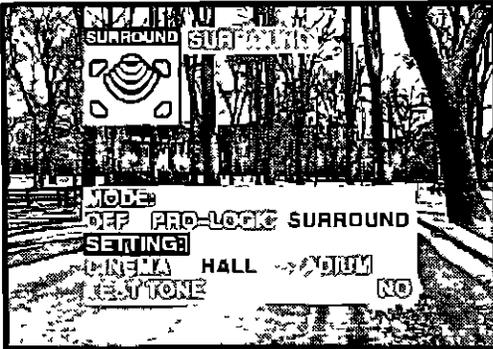


- 6 Press the CH UP/DOWN button to highlight SETTING




- 7 Press the VOL LEFT/RIGHT button to select CINEMA, HALL, or STADIUM

- **CINEMA** The Cinema mode simulates the sound of a good movie theater, with strong bass and spacious feel
- **HALL** The Hall mode establishes a club atmosphere for pop music and well defined vocals
- **STADIUM** The Stadium mode creates a vast, high-rooted stadium feeling, regardless of the actual size of your listening room

- 8 Press the CH DOWN button to highlight TEST TONE

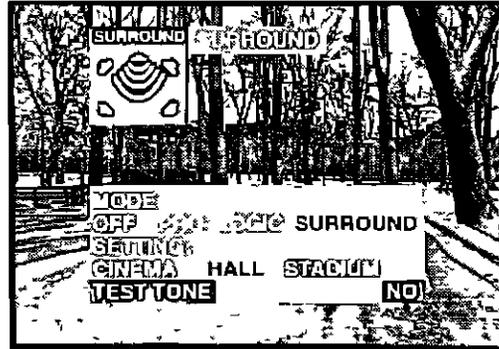


- 9 Press the VOL LEFT/RIGHT button to display the Surround Test Tone Menu

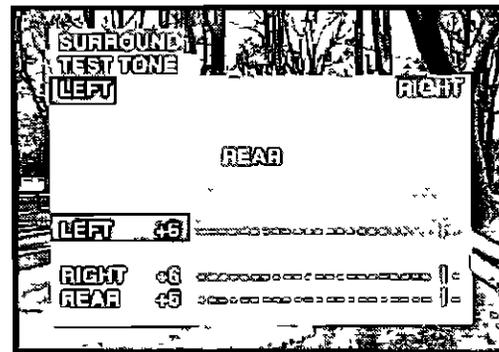


- 10 Press the CH UP/DOWN button to select
 - LEFT For adjusting tone for left front PTV speaker
 - RIGHT For adjusting tone for right front PTV speaker
 - REAR For adjusting tone for rear Surround speakers (left and right)

Note: Before adjusting the Test Tone Volume level, the listener should be positioned in the center of all speakers as shown below

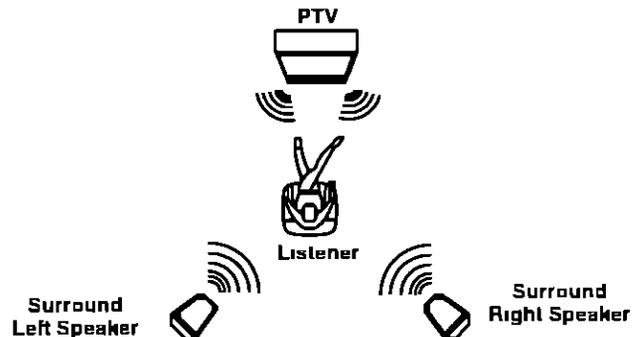

- 11 Press the VOL LEFT/RIGHT button to adjust your selection. The volume level that is being adjusted will be highlighted. Adjust so that TV Speakers and Rear Surround Speakers tone level will be equal
- 12 Press ACTION button three times to exit menus

Surround (cont.) Surround Connection

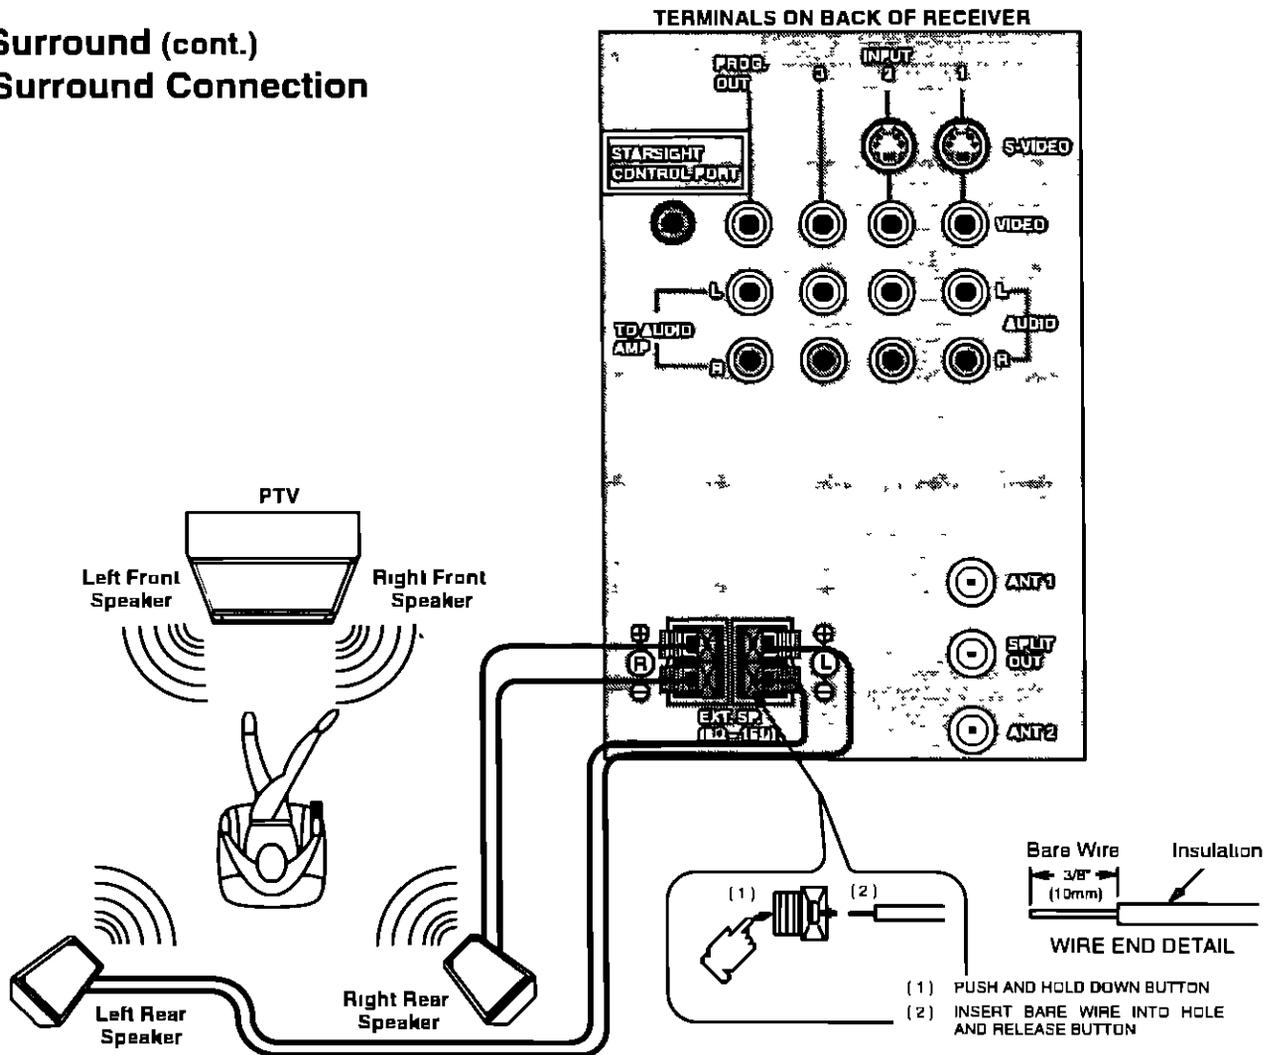

NOTE: After wire connection, gently pull to check that it is securely connected. Ensure wire does not protrude from its terminal or come into contact with other wires as damage to components could result.

System Set-Up Procedures

NOTE: Be sure the PTV audio balance adjustments are made before setting up the surround system. Refer to Test Tone for Adjustment of PTV section for speakers Audio balance.


- 1 Connect the Speakers to the PTV as shown in the diagram above
- 2 The PTV Volume should be set at a normal listening level
- 3 Set up the Surround menu system as follows
MODE: SURROUND
SETTINGS: CINEMA, HALL, or STADIUM
 (Refer to Surround Mode section for menu operation procedures)
- 4 Balance the system by using the Test Tone Menu. Adjust the levels of the PTV LEFT and RIGHT Speakers and the LEFT and RIGHT Rear Surround Speakers to be equal



Input Select

- Antenna Input Selection
- Main Picture Input Selection
- PIP (Picture in Picture) Input Selection
(When PIP the frame is displayed)


Located On Remote Control

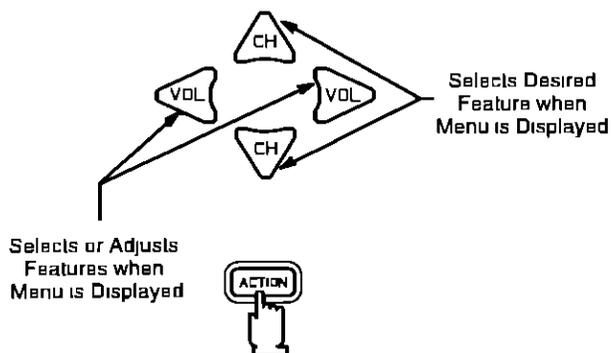

Displays and Exits Menus

Antenna Input Selection

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Input Select Icon
- 3 Press the ACTION button to display the Input Select Menu

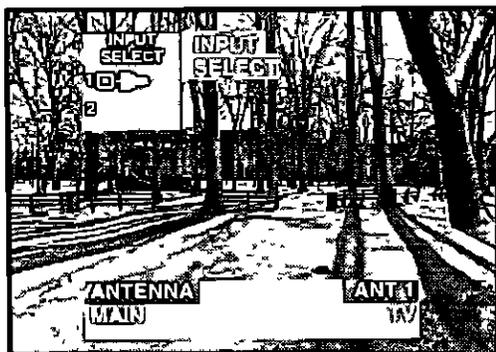

- 4 Press the CH UP/DOWN button to highlight ANTENNA
- 5 Press the VOL LEFT/RIGHT button to select ANT 1 or ANT 2
- 6 Press ACTION button twice to exit menus

StarSight Notes:

- Changing the Antenna mode once StarSight is activated will result in a loss of StarSight functions. Returning to the correct Antenna mode will return StarSight functions.
- This TV will function without StarSight as outlined in this manual. The correct Antenna mode must be selected for StarSight to function.

Main (Picture) Input Selection

This feature is used to select TV Mode Operation or one of four Video Inputs for the Main Picture (used with optional accessory Video equipment)

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Input Select Icon
- 3 Press the ACTION button to display the Input Select Menu



- 4 Press the CH UP/DOWN button to highlight MAIN
- 5 Press the VOL LEFT/RIGHT button to select TV, Video 1, Video 2, or Video 3 for Main Picture Input
- 6 Press ACTION button twice to exit menus

PIP Input Selection

This feature is used to select TV Mode Operation or one of four Video Inputs for the PIP (Picture in Picture) frame when the PIP frame is displayed (used with optional accessory Video equipment)

- 1 Press the PIP button to display the PIP frame
- 2 Press the ACTION button to display the Main Menu
- 3 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Input Select Icon
- 4 Press the ACTION button to display the Input Select Menu




- 5 Press the CH UP/DOWN button (when the PIP frame is displayed) to highlight PIP
- 6 Press the VOL LEFT/RIGHT button to select TV, Video 1, Video 2, or Video 3 for the PIP frame Input
- 7 Press ACTION button twice to exit menus

Timer Feature

- Sleep Timer
- (Dual Program) Timer

Located On Remote Control

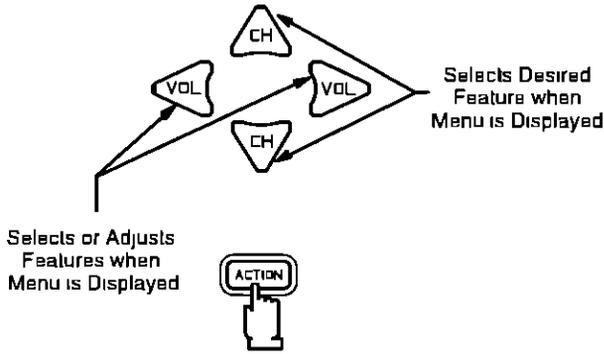


Displays and Exits Menus

Sleep Timer – This feature is used for automatic OFF in 30, 60, or 90 minutes as desired

NOTE: Display will flash 3, 2, and 1 to indicate the last three remaining minutes prior to turn OFF

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Timer Icon
- 3 Press the ACTION button to display the Timer Control Menu

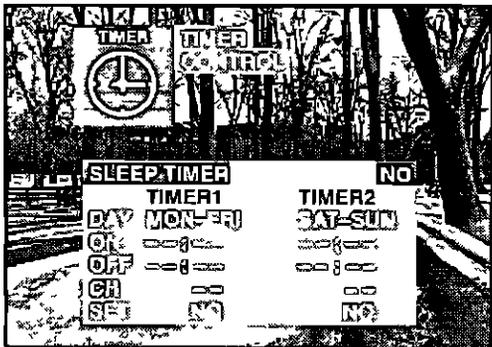

- 4 Press the VOL RIGHT button to select NO, 30, 60, or 90 (minutes) for Sleep Timer to be activated
- 5 Press ACTION button twice to exit menus

Note: To deactivate Sleep Timer repeat steps 1 through 4. In step 4, select "NO" instead of minutes

Special Feature:

Automatic "OFF" after 90 minutes.

The TV has a special feature that will shut itself OFF after 90 minutes when turned ON by the program timer, unless a function key is pressed during the 90 minutes

This feature is useful so that the TV will not remain ON unattended for an extended period of time.

Programming the OFF timer will also cancel the automatic OFF feature

(Program) Timer – The (Dual Program) Timer feature is capable of turning the TV on to a desired channel and then turning the set OFF at a predetermined time

NOTE: The clock and day must be set for this feature to operate (Refer to Set Up Menu to Set Time and Day)


- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Timer Icon
- 3 Press the ACTION button to display the Timer Control Menu




- 4 Press the CH UP/DOWN button to highlight the TIMER 1 or TIMER 2 setting
 - Day or days you wish the Timer to activate
 - ON (time) – hours and minutes
 - OFF (time) – hours and minutes
 - CH – channel you want tuned when the ON Timer activates
 - SET – NO (Timer feature will not activate)
– YES (Timer feature will activate)

Timer Feature (cont.)


- 5 Highlight the Timer 1 Day/Days option
- 6 Press the VOL LEFT/RIGHT button to set the day or days you wish the Receiver to turn ON
The options for setting day are (MON-FRI), (SAT-SUN), (DAILY), (SUN), (MON), (TUE), (WED), (THR), (FRI), (SAT), (EVR SUN), (EVR MON), (EVR TUE), (EVR WED), (EVR THR), (EVR FRI), (EVR SAT)
- 7 Press the CH DOWN button to highlight the ON (Hours) position

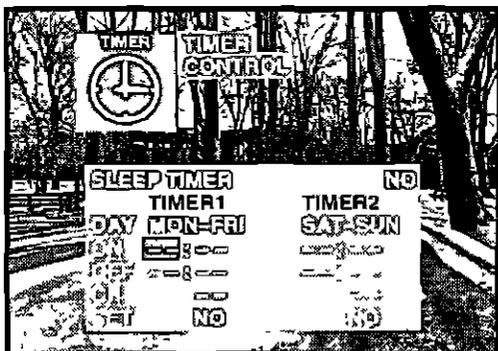


- 8 Press the VOL LEFT/RIGHT button to set the desired time for the Receiver to turn ON
Note: Press CH DOWN to change selection from hours to minutes
- 9 Press the CH DOWN button to highlight the OFF (Hours/Minutes) position

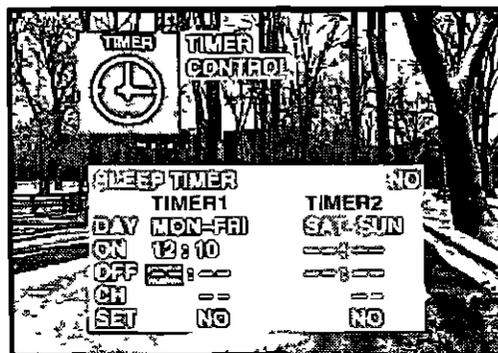

- 10 Press the VOL LEFT/RIGHT button to set the time you wish the Receiver to turn OFF
Note: Press CH DOWN to change selection from hours to minutes
- 11 Press the CH DOWN button to highlight the CH position

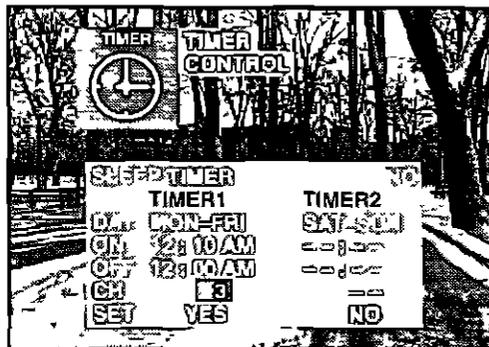

- 12 Press the VOL LEFT/RIGHT button to select a channel (from Program Channel Memory) that you want to be tuned to when the set turns ON
- 13 Press the CH DOWN button to highlight the SET position

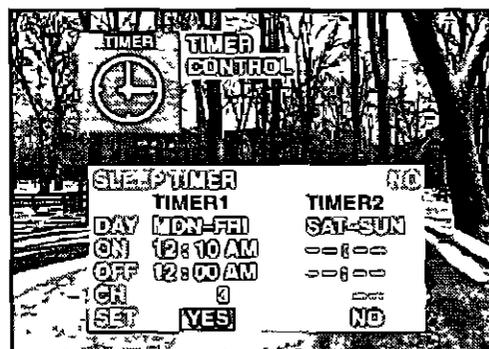

- 14 Press the VOL RIGHT button to activate or LEFT button to deactivate Timer 1
 - YES=Feature is activated
 - NO=Feature is not activated
- 15 Press the CH DOWN button to set Timer 2 (if desired) Follow Steps 6 through 14
- 16 Press ACTION button twice to exit menus


Helpful Hints:

- The Program Timer overrides the Sleep Timer
- Program Timer can only access channels in Program Channel Memory
- "Set Time First" will appear on screen when trying to set Timer Day Option without the clock being set
- If the Program Timer "ON" functions while the set is operating the set will automatically tune to the channel designated in the Program Timer

Lockout Features

- Game Lockout
- Channel Lockout
- All Channels plus Video Inputs Lockout

Located On Remote Control

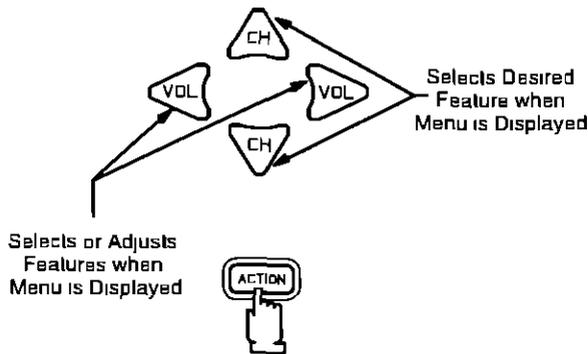


Displays and Exits Menus

Lockout Mode – This feature allows you to lockout


- Game – (Lockout Channel 3 and 4 plus Video Inputs)
- Channel – (Lockout up to 4 Channels)
- All – (Lockout All Channels plus Video Inputs)

Note: This feature will Lockout your selection for up to 48 hours. Be sure to understand this feature before attempting its use. **Use a code that you will easily remember**


- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Lock icon
- 3 Press the ACTION button to display the Lock Menu
Note: When the Lockout Menu is displayed, the Lock mode option will be highlighted
- 4 Press the VOL LEFT/RIGHT button to select GAME, CH (CHANNEL), or ALL

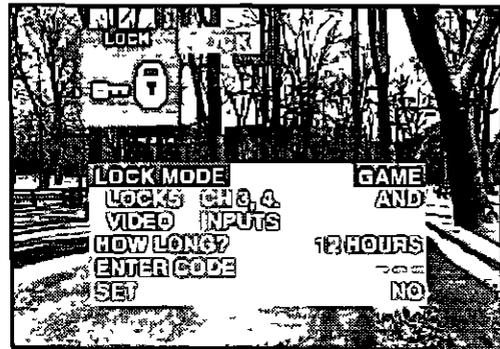

Game Lockout Menu
(Channels 3 and 4 plus Video Inputs)

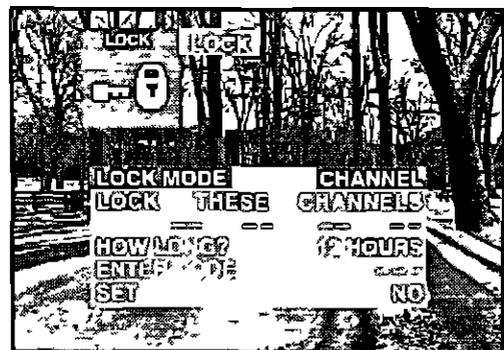

Channels Lockout Menu
(up to 4 Channels)

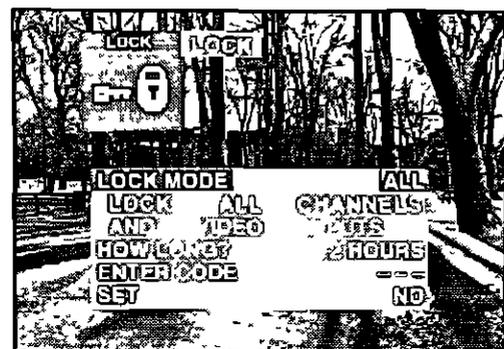

All Lockout Menu
(All Channels plus Video Inputs)

StarSight Notes:


- The Lockout feature is not fully functional when StarSight is activated with a Cable Box. Channels selected for lock will not be viewable, but will still display StarSight pop-up information when tuned
- StarSight overrides this feature because channel 3 or 4 (whatever channel is required by the Cable Box), is needed for gathering and viewing StarSight information

Note: If you see a red "PG" (StarSight not active) or "PG" in a blue box (StarSight active) in the upper right hand corner the channel or Video mode you have selected has been locked out

Lockout Features (cont.)

Unlock – Follow Steps 1 through 3 from previous page and enter the same 3-digit code as in Step 7. Channel Unlocked display will appear.

Note: When the LOCK MODE CHANNEL is selected, perform procedure Steps A through D.

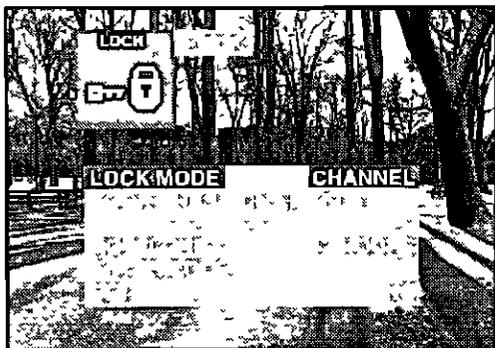

ENTER SAME 3-DIGIT CODE

Step A

Press the CH DOWN button to highlight "LOCK THESE CHANNELS"

Step B


Then use the Remote Control Numerical Keypad to select a channel you desire to lockout

Step C

Press the CH DOWN button to select next Channel position


Step D

Then repeat Step B and C until desired Channels are locked out (up to 4 Channels)

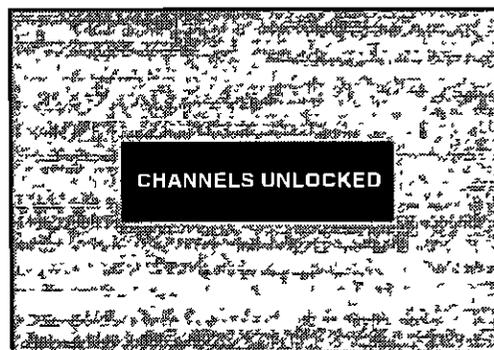


IF 3-DIGIT CODE IS THE SAME

- 5 Press the CH DOWN button to highlight "HOW MANY HOURS"
- 6 Press the VOL LEFT/RIGHT buttons to select 12, 24, or 48 (hours lockout time)
- 7 Press the CH DOWN button to highlight "ENTER CODE" then enter a 3-digit code by using the Remote Control Keyboard
IMPORTANT NOTE: Use a code you can easily remember.
- 8 Press the VOL RIGHT button to activate Lock feature
"CHANNELS LOCKED" will display On Screen

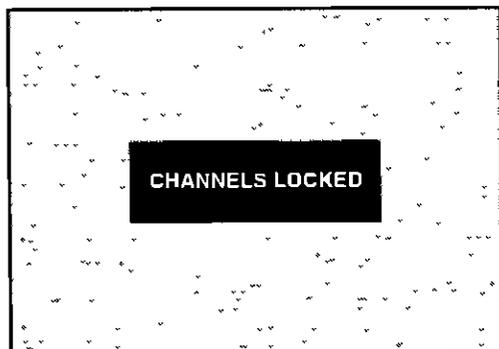

Lock Feature Activated

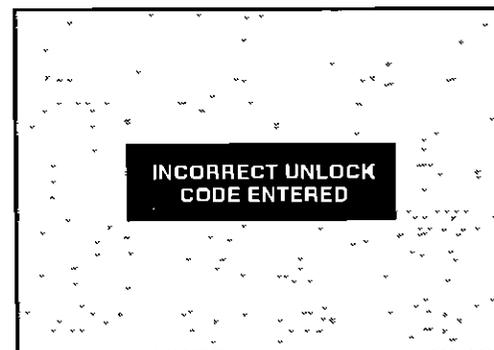


IF 3-DIGIT CODE IS NOT THE SAME

Favorite Channel Feature

- Channel Scan
- Favorite Channel Select

Channel Scan – This feature is used to select which Channels will be accessed when using CH UP/DOWN buttons, ALL or FAV (Favorite) Channels

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Favorite Channel Icon
- 3 Press the ACTION button to display the Favorite Channel Menu

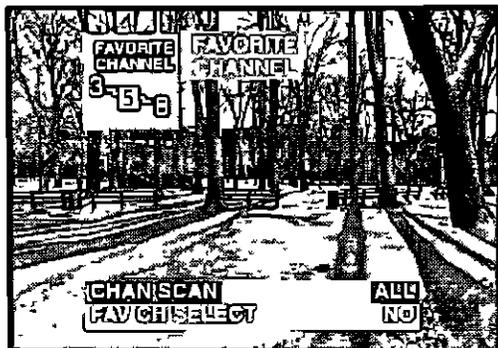

- 4 Press the CH UP/DOWN to highlight CHAN SCAN
- 5 Press the VOL LEFT/RIGHT button to select ALL or FAV (Favorite)
 - ALL – The CH UP/DOWN buttons will access all channels in Channel Memory
 - FAV – The CH UP/DOWN buttons will only access channels in Favorite Channel Select Memory
- 6 Press ACTION button twice to exit menus

StarSight Notes:


This feature is not functional when StarSight is activated. When StarSight is active, the channel scan memory is selected/deselected by the "Select Guide channels" menu, in the *Using StarSight Guide*, located in section 12.

Helpful Hints:


After Auto Channel Programming has completed, the first 15 channels selected (or less depending on existing channels in memory) will automatically be added to Favorite Channel memory.

Favorite Channel Select – The Favorite Channel Programming feature allows you to program up to 15 of your favorite channels. You can use the CH buttons on the Remote Control to scan channels without going through channels you don't normally view.

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Favorite Channel Icon
- 3 Press the ACTION button to display the Favorite Channel Menu

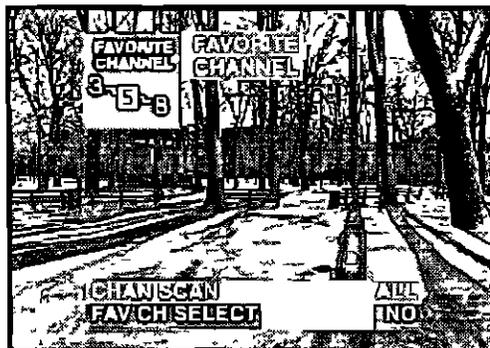

- 4 Press the CH UP/DOWN button to highlight CHAN SCAN. Then, press the VOL LEFT/RIGHT button to select FAV option for Favorite Channels setting.
- 5 Press the CH UP/DOWN button to highlight "FAV CH SELECT"
- 6 Press the VOL LEFT/RIGHT button to display the Favorite Channel Select Menu

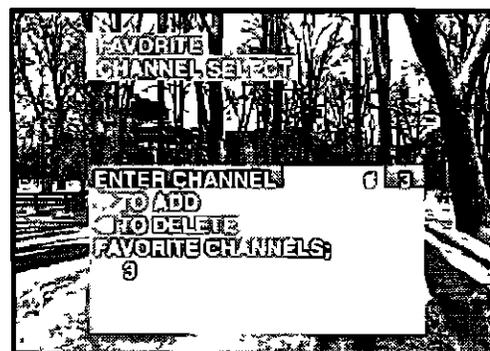

- 7 Enter the channel number you wish to add or delete from Favorite Channel Memory (using the Remote Keyboard or CH UP/DOWN buttons)
- 8 Press the VOL RIGHT button to add or press the VOL LEFT button to delete channel(s) from Favorite Channel Memory
- 9 Repeat Steps 7 and 8 to continue adding or deleting channels (up to 15 channels may be stored in Favorite Channel Memory)

Note: When your desired channels have been programmed, press the ACTION button to exit the menu.
- 10 Press the CH UP/DOWN button to scan through the Favorite Channels programmed

Channel Caption Features


Preset Caption

This feature allows you to select from 56 preset captions, and assign corresponding channel numbers utilized in your area. Captions are easily assigned to the channel numbers you select by following the simple steps outlined below. The channel number will then display, along with preset captions when changing channels or pressing the RECALL button.

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Channel Caption Icon
- 3 Press the ACTION button to display the Channel Caption Menu




- 4 Press the CH UP/DOWN button to highlight PRESET CAPTION
- 5 Press the VOL LEFT/RIGHT button to display the Preset Caption Menu

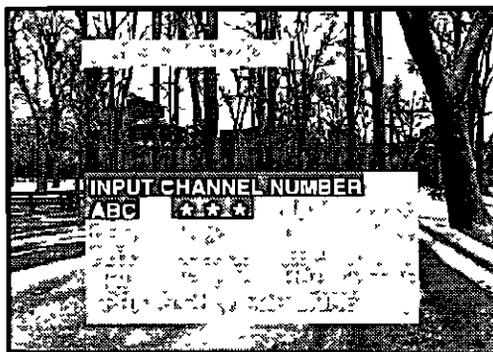

- 6 Press the CH UP/DOWN button to highlight the desired Preset Channel Caption
- 7 Use the Remote Control keyboard to assign the channel number to the Channel Caption in your area (Refer to your local TV guide)

Note: To delete an assigned channel number from channel caption, press the VOL LEFT button while the assigned channel number is highlighted

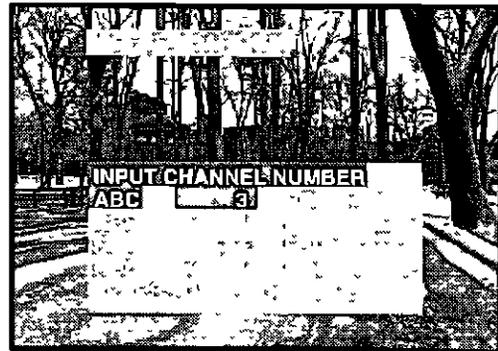


- 8 Press the CH DOWN button to select a different Preset Channel Caption, then repeat step 7 until all desired Preset Channel Captions have an assigned channel number
- 9 Press ACTION button three times to exit menus

StarSight Notes:

StarSight automatically includes station identifiers and channel captions when StarSight is activated


Channel Caption Features (cont.)

Located On Remote Control

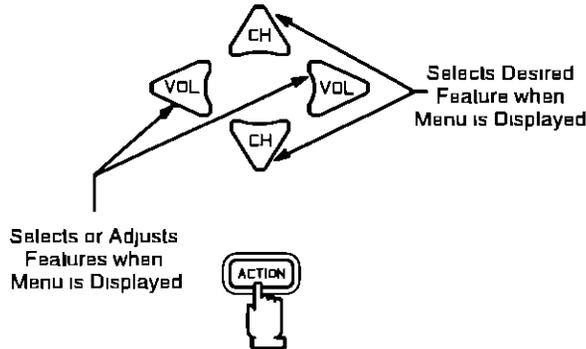

Displays and Exits Menus


Manual Caption — The Channel Caption (Station Identifier) allows you to input the call names of up to 30 stations into memory (using up to four (4) characters) The call name will then display, along with the channel number when changing channels or pressing **RECALL**

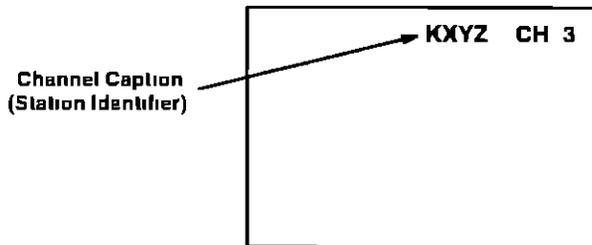


- 1 Press the **ACTION** button to display the Main Menu
- 2 Press the **CH UP/DOWN** and **VOL LEFT/RIGHT** buttons to highlight the Channel Caption Icon
- 3 Press the **ACTION** button to display the Channel Caption Menu



- 4 Press the **CH UP/DOWN** button to highlight **MANUAL CAPTION**
- 5 Press the **VOL LEFT/RIGHT** button to display the **MANUAL CAPTION** menu

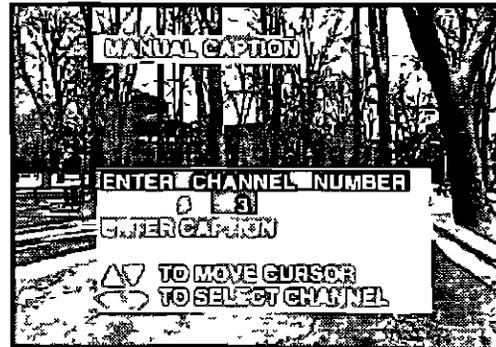

- 6 Use the Remote Control Keyboard or **VOL LEFT/RIGHT** buttons to enter channel number you wish to assign a channel caption (station identifier)
- 7 Press the **CH DOWN** button to highlight **ENTER CAPTION**

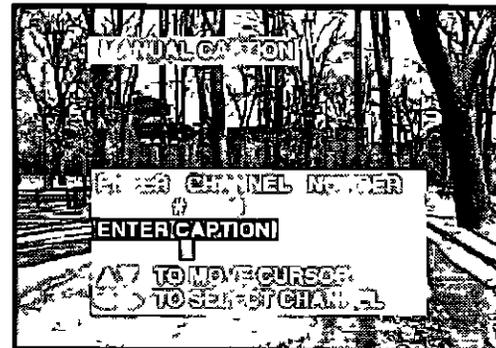


- 8 Press the **VOL LEFT/RIGHT** button to select first character in channel caption (station identifier)
- 9 Press the **CH DOWN** button to move to second character position, and repeat steps 7 and 8 until the complete caption is entered (up to 4 characters)
- 10 Press the **CH UP/DOWN** button repeatedly to highlight **ENTER CHANNEL NUMBER** Then repeat steps 6 through 10 to continue adding channel caption (station identifiers)
- 11 Press **ACTION** button three times to exit menus

StarSight Notes:

StarSight automatically includes station identifiers and channel captions when StarSight is activated

Trilingual Menu Selection

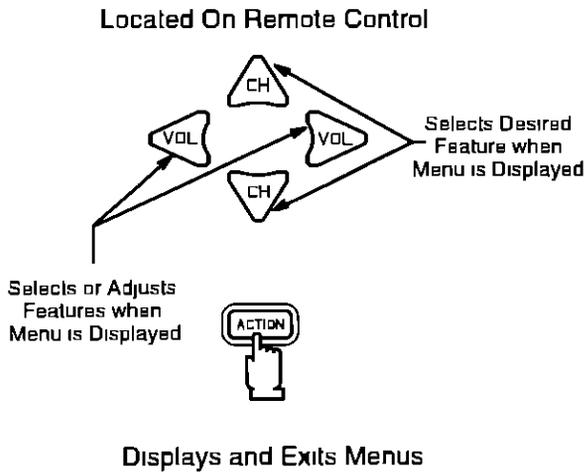


Language Selection (English/Spanish/French)

The LANGUAGE MENU is factory set to ENGLISH
Follow these instructions to change the Language Menu to SPANISH or FRENCH and back to ENGLISH

Note: The Language Menu is factory set to ENGLISH


- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Language ENGLISH / ESPAÑOL (Spanish) / FRANÇAIS (French) Icon
- 3 Press the ACTION button to display the LANGUAGE select Menu

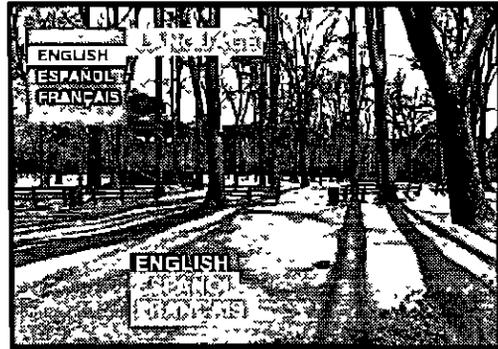

- 4 Press the CH UP/DOWN button to select ENGLISH, SPANISH or FRENCH for the Language Menu
- 5 Press ACTION button twice to exit menus

StarSight Program Guide

- Select Guide Channels
- Change Channel Order
- Change Cable Box/Service
- Replace/Remove VCR
- Re-Activate/Change Address
- StarSight Demonstration

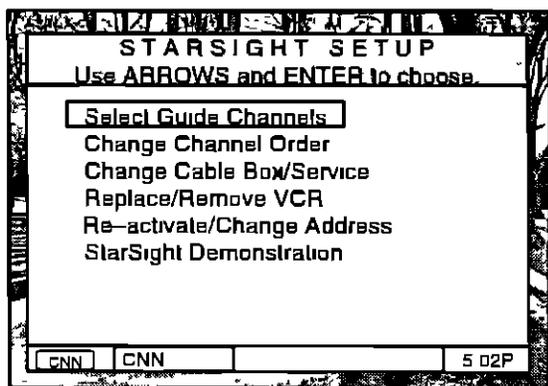

Program Guide – This menu is used to access and change StarSight settings

- 1 Press the ACTION/ENTER button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the PRG GUIDE Icon
- 3 Press the ACTION/ENTER button to display the StarSight Setup Menu
- 4 Press the CH UP/DOWN buttons to highlight the desired function
- 5 Press the ACTION/ENTER button to display the desired Setup Menu
- 6 Follow the on-screen instructions
- 7 Press EXIT to return to normal viewing

Note: For more information, please refer to sections 12 through 16 of the *Using StarSight* guide


StarSight Notes:

Pressing the EXIT button will close the current pop-up and return to the currently tuned channel

Set-Up Features

- Set Time
- Set Day
- Mode (TV or Cable)
- Convergence Adj
- Auto Program
- Manual Program
- CC On Mute
- CC Mode

Located On Remote Control

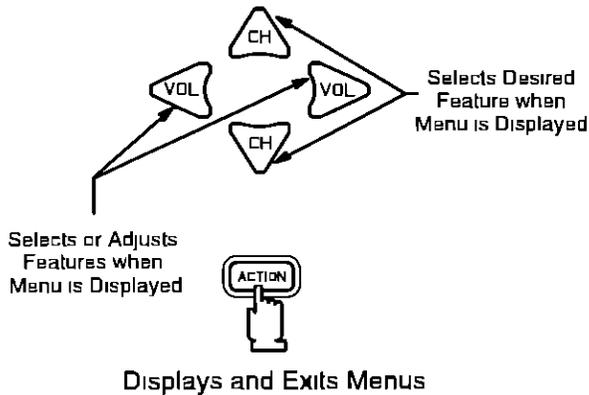

Set Time – Clock (when set) will display On Screen at initial turn on, after a channel change and when pressing Recall button. It must be set to operate the dual Timer feature


- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon
- 3 Press the ACTION button to display the Set Up Menu



StarSight Notes:

When StarSight is activated, the Set Time and Set Day features are automatically set

- 4 Press the CH UP/DOWN button to highlight SET TIME hours

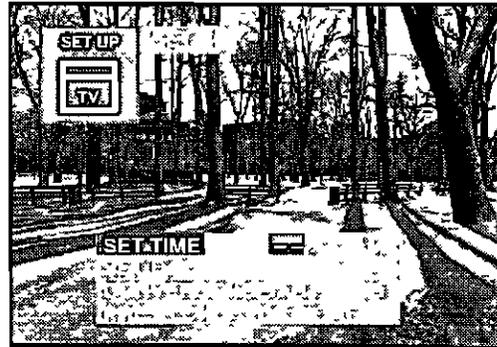

- 5 Press the VOL LEFT/RIGHT button to Set Hours (set AM/PM accordingly)
- 6 Press the CH DOWN button to highlight minutes position
- 7 Press the VOL LEFT/RIGHT button to set minutes
- 8 Press ACTION button twice to exit menus

Set Day – The day of the week must be set in order to operate the Dual Timer feature

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT button to highlight the Set Up Icon
- 3 Press the ACTION button to display the Set Up Menu



- 4 Press the CH UP/DOWN button to highlight SET DAY
- 5 Press the VOL LEFT/RIGHT button to select proper day of the week
- 6 Press ACTION button twice to exit menus

Set-Up Features (cont.)

Convergence Adj. (Adjustment) – This unit incorporates a special *Digital Convergence Adjustment* feature. For the convenience of the customer, this adjustment is preset at the factory. Adjustment may be required when the Receiver is moved due to the influence of earth's magnetic field on the projection tubes. Convergence can also be reset as necessary. Perform the convergence adjustment using the following procedure:



Green Adjustment

Turn the Receiver ON and tune in a local channel that provides a clear picture. The test pattern requires a received channel for stabilization. Green is the standard reference for the convergence adjustment procedure. Follow the steps below:

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon
- 3 Press the ACTION button to display the Set Up Menu
- 4 Press the CH DOWN button to highlight CONVERGENCE ADJ.



- 5 Press the VOL LEFT/RIGHT button to display the Convergence Adjustment screen

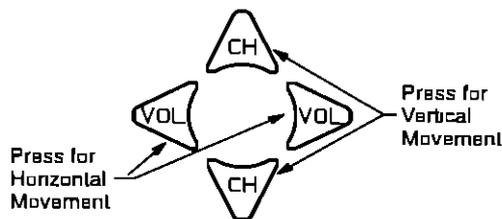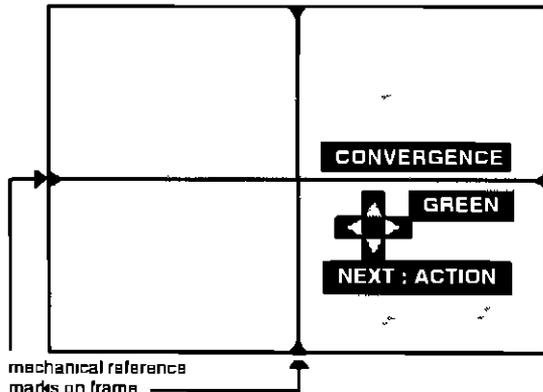


- 6 Green horizontal and vertical test lines must be present at the screen frame mechanical reference marks
- 7 Align the Green test marks with the frame mechanical reference marks. Press the VOL LEFT/RIGHT button on Remote Control for horizontal movement and the CH UP/DOWN button on Remote Control for the vertical movement.

Red Adjustment

- 8 Press the ACTION button on the Remote Control to display red adjustment menu


Note: A properly converged cross pattern will appear as white with a minimum of red color fringing.

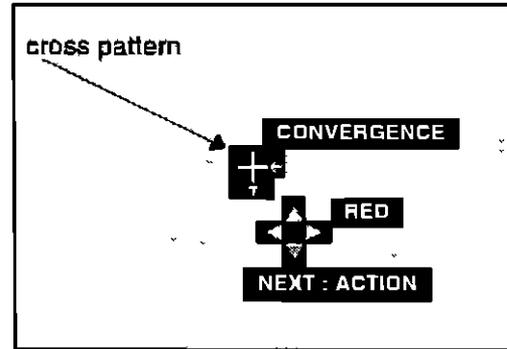

- 9 Align the Red Cross with the white cross pattern at the center of the screen. Press the VOL LEFT/RIGHT button on Remote Control for horizontal movement and the CH UP/DOWN button on Remote Control for the vertical movement.

Blue Adjustment

- 10 Press the ACTION button on the Remote Control to display blue adjustment menu

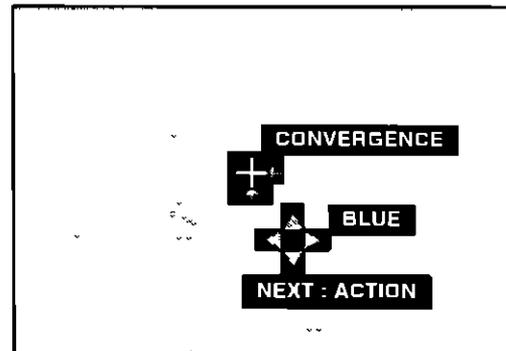


- 11 Align the Blue Cross with the white cross pattern at the center of the screen. Press the VOL LEFT/RIGHT button on Remote Control for horizontal movement and the CH UP/DOWN button on Remote Control for the vertical movement.
- 12 Press ACTION button three times to exit menus.



NOTE: TO PREVENT PICTURE TUBE DAMAGE, DO NOT LEAVE TEST PATTERN ON FOR A LONG PERIOD OF TIME

Set-Up Features (cont.)

Located On Remote Control

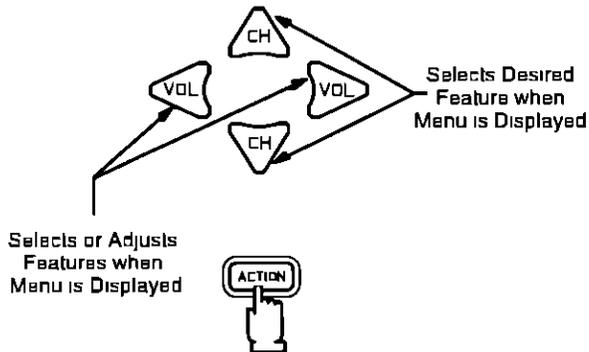

Displays and Exits Menus


Mode (TV or Cable)

IMPORTANT NOTE: The proper input mode must be selected for the type of signal at the antenna input

- TV is used when the Receiver is not connected to a Cable TV System, for example, when using a VHF/UHF antenna (Channels 02-69)
- CABLE is used when the Receiver is connected to a Cable TV System

Note: Some Cable TV Systems encode (scramble) program material on specific channels. A cable company supplied decoder is required to reproduce an acceptable picture. Certain Cable TV Systems offset some channels to reduce interference. It will be necessary to use the cable company supplied converter to receive these specific channels.

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon
- 3 Press the ACTION button to display the Set Up Menu

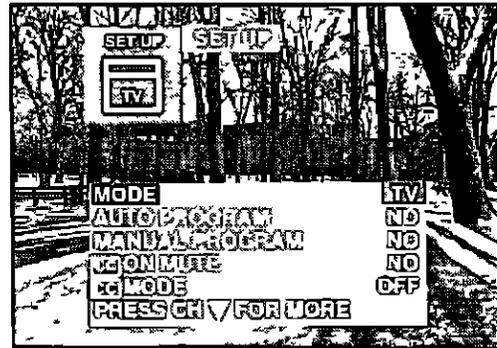

- 4 Press the CH UP/DOWN button to highlight Mode
- 5 Press the VOL LEFT/RIGHT button to select TV or CABLE
- 6 Press ACTION button twice to exit menus

StarSight Notes:


When StarSight is activated, for the first time, MODE (TV or cable) is automatically set

Set-Up Features (cont.)

Auto Program – The Auto Programming feature allows you to place all channels with a video signal into Channel Scan Memory. When you press the CHANNEL UP or DOWN button, only those channels with a video signal will be accessed.

Note: TV or Cable Tuning mode must be set properly for your system.

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT button to highlight the Set Up Icon
- 3 Press the ACTION button to display the Set Up Menu

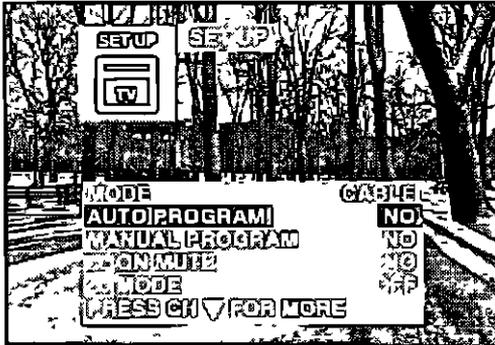

- 4 Press the CH UP/DOWN button to highlight AUTO PROGRAM
- 5 Press the VOL LEFT/RIGHT button to start Auto Programming. Scan Channels will automatically advance until all channels have been scanned.

Note: Channel numbers with video signal present will turn blue which indicates stored in Channel Scan Memory.

- 6 Press ACTION button twice to exit menus.
Note: Some channels with very weak signals may be locked into memory. If desired, these channels can be deleted manually using the Manual Program feature.

StarSight Notes:

When StarSight is active, the channel scan memory is selected/deselected by the "Select Guide channels" menu, in the *Using StarSight Guide*, located in section 12.

Helpful Hints:

After Auto Programming:


Blue channel number indicates channel is in Channel Scan Memory.

All channels are available by direct access using the numeric keypad (0 through 9 buttons).

Up to 15 channels will be programmed into the FAVORITE Channel Scan after Auto Programming Scan has been completed. Any original channels that were programmed into FAV CHANNEL will remain. (Refer to Favorite Channel Scan for deleting unwanted channels.)

Manual Program – This feature allows you to select which channels are placed into Channel Scan Memory, so when you press the CHANNEL UP/DOWN button, only those channels you desire will be accessed.

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon
- 3 Press the ACTION button to display the Set Up Menu

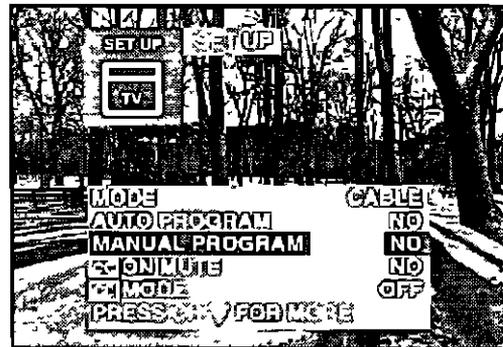

- 4 Press the CH UP/DOWN button to highlight MANUAL PROGRAM
- 5 Press the VOL LEFT/RIGHT button to display Manual Program Menu



- 6 Use the Remote Control Numeric Keypad (0 through 9 buttons) or CH UP/DOWN buttons to select channels.
- 7 Press the VOL RIGHT button to add channel(s) to memory (blue). Press the VOL LEFT button to delete channel(s) from memory (yellow).
- 8 Repeat Steps 6 and 7 to continue adding or deleting channels.
- 9 Press ACTION button twice to exit menus.


Set-Up Features (cont.)

CC Closed Caption – This Receiver has a built in decoder that provides a visual depiction of the audio portion of a television program in the form of written words across the screen (white or colored letters on a black background) It allows the viewer to read the dialogue of a television program or other information

CC On Mute – Activates the On-Screen Closed Caption feature, when the MUTE button on the Remote Control is pressed To deactivate press the MUTE button again

Note: This feature functions when the Closed Caption Mode is in the "OFF" position The program being viewed must be broadcast with Closed Caption (Refer to your local TV guide)

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon
- 3 Press the ACTION button to display the Set Up Menu

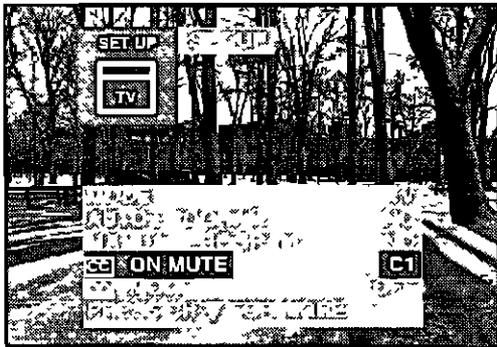

- 4 Press the CH UP/DOWN button to highlight CC ON MUTE
- 5 Press the VOL LEFT/RIGHT button to select NO (OFF), C1, C2, C3, or C4


Note: Recommended menu Set Up for Closed Caption when using Mute Button

- CC ON MUTE. C1
- CC MODE OFF

- 6 Press ACTION button twice to exit menus
 - 7 Press the MUTE button when the program being viewed is broadcast with Closed Caption to activate
- Note:** Press the MUTE button again to deactivate

CC Mode – Activates the On-Screen Closed Caption feature When activated this feature will remain on until OFF is selected in this menu

- 1 Press the ACTION button to display the Main Menu
- 2 Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon
- 3 Press the ACTION button to display the Set Up Menu

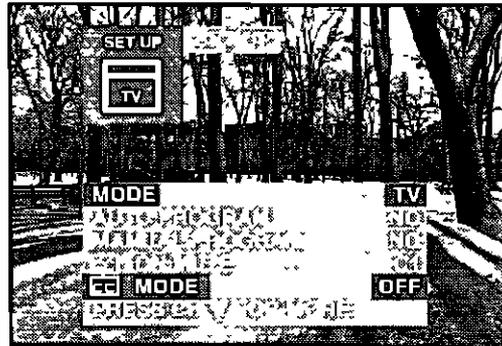

- 4 Press the CH UP/DOWN button to highlight CC MODE
- 5 Press the VOL LEFT/RIGHT button to select OFF, C1, C2, T1, T2, C3, C4, T3, or T4
 - **CAPTION OFF** – Recommended mode when Closed Caption is not being used
 - **CAPTION C1** – For video related information that can be displayed (up to 4 lines of script strategically placed on the television screen so that it does not obstruct relevant parts of the picture) Script can be in any language
 - **CAPTION C2** – Another mode used for video related information
 - **TEXT T1** – Blanks out a large portion of the picture on the television screen, and displays program guide or any other information currently being transmitted
 - **TEXT T2** – Another mode which displays information and blanks out a large portion of the picture on the television screen
 - **CAPTION C3** – Another mode used for video related information
 - **CAPTION C4** – Another mode used for video related information
 - **TEXT T3** – Another mode which displays information and blanks out a large portion of the picture on the television screen
 - **TEXT T4** – Another mode which displays information and blanks out a large portion of the picture on the television screen
- 6 Press ACTION button twice to exit menus

Programming the Illuminated Remote Control Using Access Codes

The remote control can be preset for other manufacturers, by utilizing the **MODE SELECTION BUTTONS** for **CABLE**, **DSS**, **VCR**, **RCVR** (a Receiver or Amplifier), **CD**, **LD**, and **AUX** (for **Cassette Players** or a **DVD**)

Procedure – Code Known

Procedure for setting up the remote using the numerical buttons.

- Determine brand of device
- Identify code(s) associated with the brand in the infrared code index (located in this manual on pages 52 thru 55) Record all possible codes
- Confirm the device is plugged in and operating properly

1 Press and hold the **ACTN** button, then the **POWER** button so that both are pressed at the same time for at least 5 seconds. All of the Mode buttons will flash.

2 Press the desired Mode button That Mode button will illuminate steadily All other buttons will go out

3 Enter the three digit code, by using the Remote Control Keyboard "0 through 9" buttons

- If you entered a valid code, the mode key will blink twice then go out

Now your remote is set for this code.


4 Press **POWER** to test your device

NOTE Some brands have multiple codes. Repeat the procedure using each listed code until the device responds correctly

- If you enter an unlisted code, or if you do not complete your entry within 30 seconds, the mode key illumination will go out and the settings will not change

Note: In order to maximize the life of the batteries, the lights can be turned OFF and ON by pressing R-TUNE and RECALL at the same time.

Code From Index Sheet

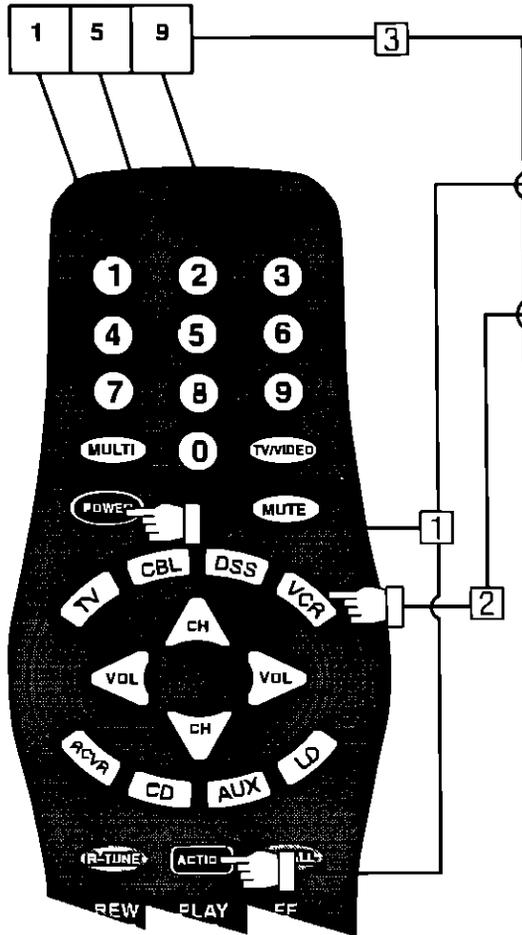

Infrared Remote Codes for Specific Components

Helpful Hint: Write down the code numbers for your components in the space provided below. This will serve as a handy reference whenever you need to reprogram your remote control.


CABLE Cable TV Converter Box	<input type="text"/> <input type="text"/> <input type="text"/>	VCR Video Cassette Recorder	<input type="text"/> <input type="text"/> <input type="text"/>	CD Compact Disc Player	<input type="text"/> <input type="text"/> <input type="text"/>
DSS Digital Satellite System	<input type="text"/> <input type="text"/> <input type="text"/>	RCVR Receiver or Amplifier	<input type="text"/> <input type="text"/> <input type="text"/>	LD Laser Disc Player	<input type="text"/> <input type="text"/> <input type="text"/>
Other Component	<input type="text"/> <input type="text"/> <input type="text"/>	Other Component	<input type="text"/> <input type="text"/> <input type="text"/>	Other Component	<input type="text"/> <input type="text"/> <input type="text"/>
Other Component	<input type="text"/> <input type="text"/> <input type="text"/>	Other Component	<input type="text"/> <input type="text"/> <input type="text"/>	Other Component	<input type="text"/> <input type="text"/> <input type="text"/>

VCR Infrared Codes Index

The Universal Infrared Remote Control is capable of operating many brands of VCRs. Refer to page 51 for programming procedures.

NOTE: The Universal Remote Control memory is limited. Some models of VCRs may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

NOTE: After entering the proper infrared code, press the Remote VCR Selection Mode button (*). To operate the Remote VCR function buttons, refer to pages 18 and 19 for Remote Control Key Functions.

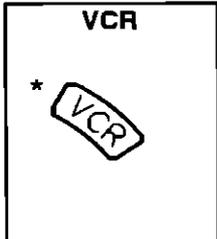

Code Index For VCRs

VCR Brand	Code(s)	VCR Brand	Code(s)
Adventura	000	MTC	000, 240
Aiko	278	Multitech	000, 072
Aiwa	000	NEC	038, 041, 067
Akai	041, 061	Nikko	037
American High	035	Noble	240
Asha	240	Olympus	035
Audiovox	037	Optimus	037, 048, 104
Baumark	240	Panasonic	035, 162, 225, 454
Bell & Howell	104	Panney	035, 037, 038, 042
Broksonic	121, 184		240
Calix	037	Pentax	042
Canon	035	Philco	035
Carver	081	Philips	035, 081
CCE	072, 278	Pilot	037
Citizen	037, 278	Pioneer	067
Coll	072	Protec	072
Craig	037, 047, 072, 240	Pulsar	039
Curtis Mathes	035, 041, 060	Quarter	046
Cybermax	240	Quartz	046
Daewoo	045, 278	Quasar	035
Dynatech	000	Radio Shack	000, 037
Electrohome	037	Radix	037
Electrophonic	037	Randax	037
Emerex	032	RCA	042, 060
Emerson	000, 002, 037, 043, 061, 121, 184, 278	Realistic	000, 035, 037, 046, 047, 048, 104, 240
Fisher	047, 104	Ricoh	034
Fuji	033, 035	Runco	039
Funai	000	Samsung	045, 240
Garrard	000	Sanky	039, 048
GE	035, 060	Sansui	041, 067
Goldstar	037, 038	Sanyo	046, 047, 104, 240
Gradiente	000	Scott	043, 045, 121, 184
Harley Davidson	000	Sears	035, 037, 042, 046, 047, 104
Harman/Kardon	038	Sharp	048
Harwood	072	Shintom	072
Headquarter	046	Shogun	240
HI-Q	047	Singer	072
Hitachi	041, 042	Sony	032, 033, 034, 035
Jensen	041	STS	042
JVC	041, 067	Sylvania	000, 035, 043, 081
Kenwood	038, 041, 067	Symphonic	000
KLH	072	Tatung	041
Kodak	035, 037	Teac	000, 041
Lloyd	000	Technics	035, 162
Logik	072	Teknika	000, 035, 037
LXI	037	TMK	240
Magnavox	035, 039, 081	Toshiba	043, 045
Magnin	240	Television	037, 240
Marantz	035, 081	Unitech	240
Marta	037	Vector	045
Matsushita	035	Vector Research	038
MEI	035	Video Concepts	045, 061
Memorex	000, 035, 037, 039, 046, 047, 048, 104	Videasonic	240
		Wards	000, 035, 042, 047, 048, 072, 240
MGA	043, 061	XR-1000	000, 035, 072
MGN Technology	240	Yamaha	038
Minolta	042	Zenith	033, 034, 039
Mitsubishi	043, 061, 067		
Motorola	035, 048		


CABLE CONVERTER BOX AND CD PLAYERS

Infrared Codes Index

The Universal Infrared Remote Control is capable of operating many brands of Cable Converter Boxes, and CD Players Refer to page 51 for programming procedures


NOTE: The Universal Remote Control memory is limited Some models of Cable Converter Boxes and CD Players may not operate The Universal Remote Control is not designed to control all features that are available in all models

NOTE: After entering the proper infrared code, press the Remote **CBL** Selection Mode button (☆) To operate the Remote Cable function buttons, refer to pages 18 and 19 for Remote Control Key Functions

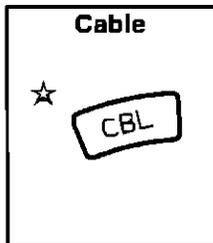

Codes For Cable Converter Box			
Brand of Cable-TV Box	Code(s)	Brand of Cable-TV Box	Code(s)
ABC	003, 007, 008, 011, 013, 014, 017	Pioneer	144, 533
Archer	153	Pulsar	000
Century	153	RCA	021
Citizen	153	Regal	020, 259
Conlec	019	Rambrandt	011
Dae Ryung	008	Ranco	000
Garrard	153	Samsung	144
Gemini	015	Scientific Atlanta	008, 017, 477
General Instrument	011, 476	Signal	015
Goldstar	144	Signature	011
Hamlin	009, 020, 259	Sprucer	021
Hitachi	011	Starcom	003, 015
Hytex	007	Stargate	015
Jasco	153	Starquest	015
Jerrold	003, 011, 012, 014, 015, 476	Tocom	012, 013
Memorex	000	Toshiba	000
Oak	007, 019	Tusa	015
Panasonic	000, 021, 107	Unika	153
Paragon	000	United Artists	007
Philips	153	United Cable	003
		Universal	153
		Zenith	000, 525

NOTE: After entering the proper infrared code press the Remote **CD** Selection Mode button (☆☆) To operate the Remote CD Player function buttons, refer to pages 18 and 19 for Remote Control Key Functions

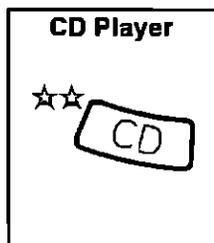

Codes For CD Players			
Brand of CD Players	Code(s)	Brand of CD Players	Code(s)
Aiwa	124, 157	Onkyo	101
CA Audio Lab	029	Optimus	000, 032, 037, 305, 426, 468
Carver	157	Panasonic	029, 367
Dennon	003	Philips	157
DKK	000	Pioneer	032, 468
Emerson	305	Proton	157
Fisher	048	QED	157
Genexxa	032, 305	Quasar	029
Harman-Kardon	426	RCA	305
Hitachi	032	Rotel	157
JVC	072	SAE	157
Kenwood	028, 037, 048, 190	Sansui	157, 305
Krell	157	Scott	305
LXI	305	Sears	305
Magnavox	157	Sharp	037
Marantz	029, 157	Sherwood	426
MCS	029	Sony	000
Mission	157	Technics	029, 303
Nakamichi	147	Victor	072
NSM	157		


CASSETTE PLAYERS, RECEIVERS, and AMPLIFIERS

Infrared Codes Index

The Universal Infrared Remote Control is capable of operating many brands of Cassette Players, Receivers, or Amplifiers. Refer to page 51 for programming procedures.


NOTE: The Universal Remote Control memory is limited. Some models of Cassette Players, Receivers, and Amplifiers may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

NOTE: After entering the proper infrared code, press the Remote **AUX** Selection Mode button (*). To operate the Remote Cassette Player function buttons, refer to pages 18 and 19 for Remote Control Key Functions.

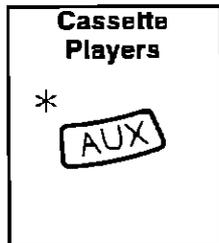

Code Index For Cassette Players			
Brand of Cassette Players	Code(s)	Brand of Cassette Players	Code(s)
Aiwa	029	Panasonic	272
Carver	029	Philips	029
Denon	076	Pioneer	027, 220
Kenwood	070	Sansui	029
Magnavox	029	Sherwood	337, 338
Marantz	029	Sony	170, 243
Nakamichi	147	Technics	229
Optimus	027, 220, 337, 338	Wards	027
		Yamaha	094, 097

NOTE: After entering the proper infrared code, press the Remote **RCVR** Selection Mode button (**). To operate the Remote Receiver or Amplifier function buttons, refer to pages 18 and 19 for Remote Control Key Functions.

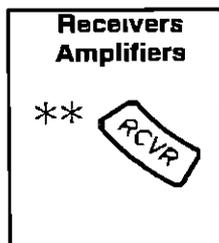


Code Index For Receivers And Amplifiers			
Brand of Receiver / Amplifier	Code(s)	Brand of Receiver / Amplifier	Code(s)
ADC	531	Panasonic	039
Aiwa	121, 158, 189	Penney	195
Carver	008, 042, 189, 269	Philips	189, 269
Casio	195	Pioneer	013, 014, 080, 300, 531
Clarinette	195	Quasar	039
Denon	004	RCA	531
Fisher	042, 219	Realistic	195
JVC	074	Sansui	189, 321
Kenwood	027, 186	Sanyo	219
Lloyd's	195	Sharp	186
Magnavox	189, 195, 269, 531	Sherwood	502
Marantz	039, 189, 269, 321	Sony	158
MCS	039	Technics	039, 208, 308, 309, 518
Modulaire	195	Victor	074
NAD	320	Wards	013, 014, 042, 080, 158, 189
Nakamichi	321, 347	Yamaha	176, 186, 354
Onkyo	135	Yorx	195
Optimus	013, 080, 186, 219, 300, 531		

LASER DISC, DSS (Digital Satellite System), and DVD (Digital Videodisc) Infrared Codes Index

The Universal Infrared Remote Control is capable of operating selected brands of Laser Disc, DSS Digital Satellite System, and DVD (Digital Videodisc) Refer to page 51 for programming procedures


NOTE: The Universal Remote Control memory is limited. Some models of Laser Disc, DSS Digital Satellite System, and DVD (Digital Videodisc) may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

NOTE: After entering the proper infrared code, press the Remote **LD** Selection Mode button (○) To operate the Remote Laser Disc function buttons, refer to pages 18 and 19 for Remote Control Key Functions

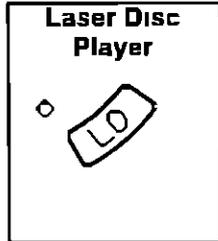


Codes For Laser Disc	
Brand of Laser Disc	Code(s)
Mitsubishi	059
NAD	059
Panasonic	204
Pioneer	059
Quasar	204
Sony	201

NOTE: After entering the proper infrared code, press the Remote **DSS** Selection Mode button (○○) To operate the Remote Satellite function buttons, refer to pages 18 and 19 for Remote Control Key Functions

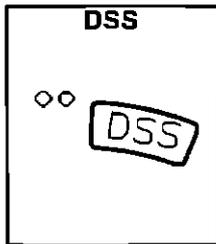

Codes For DSS (Digital Satellite System)	
Brand of Satellite	Code(s)
Panasonic	701
RCA	566
Sony	639

NOTE: After entering the proper infrared code, press the Remote **AUX** Selection Mode button (★) To operate the Remote DVD (Digital Videodisc) function buttons, refer to pages 18 and 19 for Remote Control Key Functions

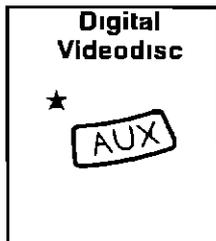


Codes For DVD (Digital Videodisc)	
Brand of DVD	Code(s)
Panasonic	490

Cabinet Glass Door Installation Instructions



GLASS DOORS ARE MOUNTED WITH FOUR (4) SCREWS ON CABINET LOWER BACK BOARD.

- 1 Affix (2) hinge plates to the inside surface of each glass door by removing paper backing and place as shown

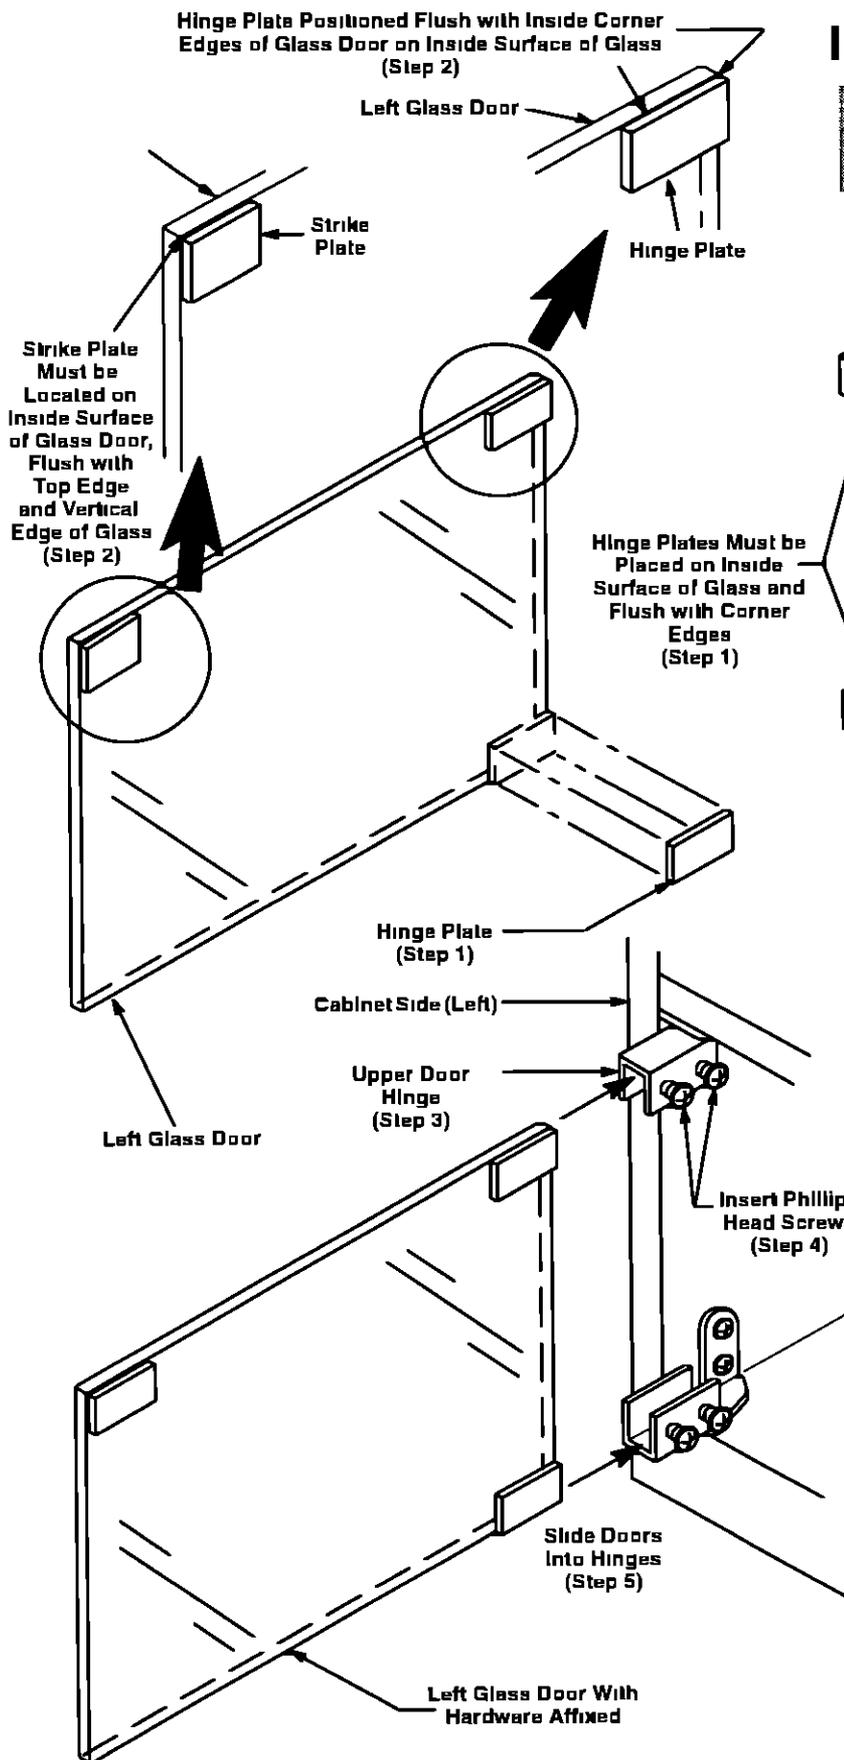


- 2 Remove paper backing from strike plate and position it flush with top edge and flush with vertical edge of both left & right inside surface of glass doors as shown
- 3 Open glass door hinges parallel to cabinet sides
- 4 Take (8) Phillips head screws from plastic bag, insert them (2 per hinge) and tighten just enough to hold screws in place (Do not tighten all the way)
- 5 Carefully slide one of the glass doors into upper & lower door hinges as shown

- 6 Hold glass door in place with the back edge of glass flush with inside back edge of upper & lower door hinges and against top of the upper hinge, then tighten (4) hinge screws per glass door
- 7 Repeat Steps 6 & 7 for the other glass door
- 8 Once both glass doors are attached, close them slowly to ensure doors are aligned properly and the (2) strike plates catch on to the cabinet mounted magnetic latches
- 9 If the glass doors are binding anywhere against the cabinet or each other they are mis-aligned and must be corrected
- 10 To do so, simply loosen the Phillips head screws on the side(s) that is not aligned and adjust (move) glass door(s) accordingly and re-tighten screws

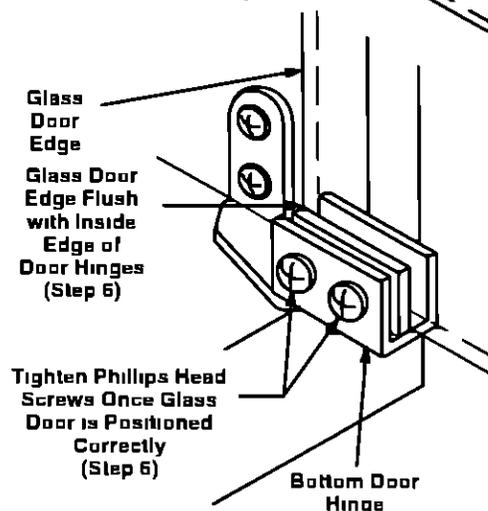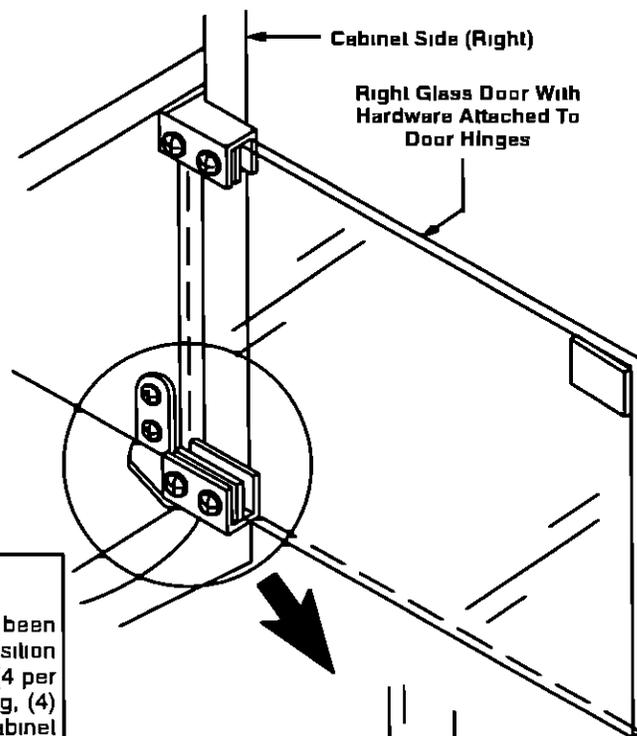

Shelves Mounting Instructions

- 1 The two cabinet shelves have been mounted in the middle shelf position with (8) metal shelf hangers (4 per cabinet shelf) and for shipping, (4) shipping blocks (2 per cabinet shelf) Remove these (4) shipping blocks for free movement of the shelves
- 2 If the top or bottom position is desired for mounting the shelf, lift and hold or rest the shelf diagonally while removing the (4) metal shelf hangers and reposition them accordingly **NOTE** Do not use glue, so you can change shelf position at a later time if you wish
- 3 Next, lift and rest shelf on one side of the cabinets' shelf hangers and then lower it down on the opposite side

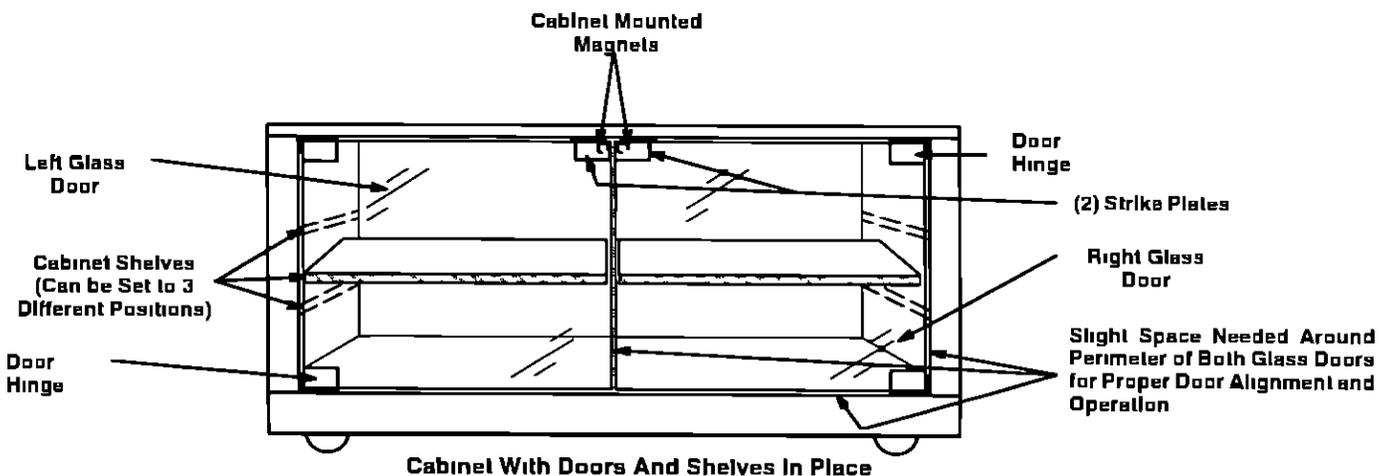

Care and Cleaning

Plastic Cabinets

Wipe the cabinet with a soft cloth dampened with water or a mild detergent solution and wipe dry with a soft clean cloth. Avoid excessive moisture. Do not use benzene, thinners or other petroleum based cleaners.

Wood Cabinets

When dusting or polishing the cabinet, use a clean soft cloth and stroke straight with the grain. An occasional coat of furniture polish will help preserve the finish. Do not use benzene, thinners or other petroleum based cleaners. Do not place objects made of plastic or rubber directly on top of the cabinet. A chemical reaction could result causing permanent marring of the finish.

Remote Control Transmitter

Do not use benzene, thinners or other petroleum based cleaners to clean the Remote Control Transmitter. To clean, wipe with a soft cloth slightly moistened with a mild detergent and then wipe dry with a soft clean cloth.

Screen Caution

Your Projection screen may be marred by accidental contacts or improper cleaning. Avoid BUMPING or SCRAPING the screen BY ANY OBJECTS.

Screen Cleaning

The projection screen has a protective shield which is fully washable by using these following precautions. Use a mild soap solution or window cleaner and a clean cloth. Do not use laundry detergent, automatic dishwasher soap, abrasive cleaners, products containing alcohol, ammonia or petroleum distillates. Avoid excessive moisture and wipe dry.

Power Loss


Prolonged power interruption causes the following features to reset to their factory preset state.

FEATURE	FACTORY PRESET STATE	FEATURE	FACTORY PRESET STATE
POWER	OFF	SLEEP TIMER	NO/OFF
VOLUME	APPROX -1/3	TIMER	NO/OFF
CHANNEL	CH 03	ANTENNA MODE	CABLE
PROGRAM MEMORY	UNPROGRAMMED	TV/VIDEO	TV
VIDEO MENUS	NORMALIZED	NOISE REDUCTION	OFF
AUDIO MENUS	NORMALIZED	PIP FEATURES	OFF
STEREO/SAP/MONO	STEREO	AUTO COLOR	ON
CLOCK	NOT SET	MENU LANGUAGE	ENGLISH


Notes

Troubleshooting Chart


Before you call for service, determine the symptoms and make a few simple checks shown below

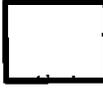Symptoms		Check
Picture	Sound	
 SNOWY PICTURE	 NOISY SOUND	- ANTENNA LOCATION AND/OR CONNECTION
 MULTIPLE IMAGE	 NORMAL SOUND	- ANTENNA DIRECTION AND/OR LOCATION - ANTENNA LEAD-IN WIRE
 INTERFERENCE	 NOISY SOUND	- ELECTRICAL APPLIANCES, LIGHTS, CARS AND TRUCKS - DIATHERMY AND OTHER MEDICAL EQUIPMENT
 NORMAL PICTURE	 NO SOUND	- VOLUME CONTROL SETTING - MUTE CONTROL (IF APPLICABLE) - TV SPEAKER SWITCH (IF APPLICABLE) IN OFF OR EXT POSITION - TRY ANOTHER CHANNEL
 NO VIDEO	 NOISY SOUND	- TV/ANT-CABLE TUNING SYSTEM SET TO PROPER SETTING - ANTENNA INPUT MODE INCORRECT
 NO PICTURE	 NO SOUND	- CHECK THAT AC POWER LINE IS PLUGGED INTO AC OUTLET AND POWER BUTTON IS ON - BRIGHTNESS AND AUDIO CONTROLS SET PROPERLY - TRY ANOTHER CHANNEL
 NO COLOR	 NORMAL SOUND	- COLOR CONTROL SETTINGS - TRY ANOTHER CHANNEL
 BLUE PICTURE	 NO SOUND	- RECEIVER IN VIDEO MODE WITH NO SIGNAL
 NO VIDEO	 NOISY SOUND	- CHANNEL LOCKOUT FEATURE ACTIVATED
 BLACK BOX IN PICTURE	 SOUND	- CC (CLOSED CAPTION) IN TEXT MODE - PUT IN CAPTION OFF MODE TO ELIMINATE BLACK BOX

Should this unit turn ON momentarily and then turn OFF, or fail to operate, unplug the AC cord, and contact your Authorized Servicer for repairs

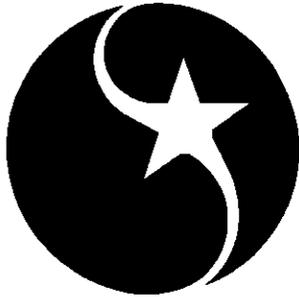

**STAR
SIGHT®**

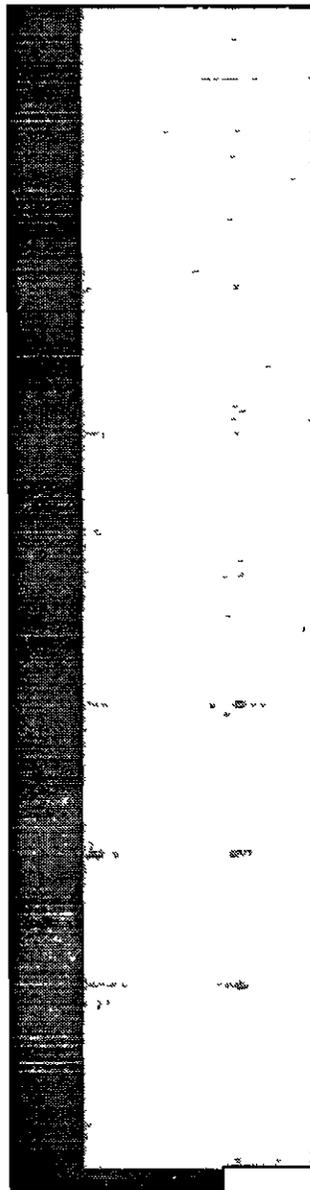

Installation and Activation Guide



Getting Started with StarSight®

StarSight is a new way to receive and display TV program information and manage the many channels you receive. With StarSight, you can

- Record a program with the touch of a button
- See an instant description of what's on any channel
- Select a program from a list that displays your favorite types of shows by theme (movies, sports, comedies, etc.)
- Get information about plots, actors, movie ratings, show times
- Tune from an on-screen guide right to the program you selected
- Rearrange the order of channels to put your favorite ones first

Installing StarSight

To bring StarSight information into your home you must complete these simple steps in the following order

- Make sure your equipment is hooked up according to the instructions in the *Installing Your TV Set* section of this operating guide
- Fill out the StarSight Checklist on the next page
- Activate StarSight by following the directions on your TV screen. The entire process takes only a few minutes
- Test your StarSight setup. If you have a Cable Box or VCR, you will be guided through an on-screen process that will determine the codes that operate your equipment

**Please follow the directions on the following pages, then call:
1-800-643-STAR**

Your Panasonic TV that is equipped with the StarSight system is not designed to operate with, or control, a satellite dish. For information on StarSight products specifically designed for satellite systems, see your local satellite dealer.

© 1996 StarSight Telecast, Inc. StarSight and the StarSight logo are registered trademarks of StarSight Telecast, Inc. StarSight is a subscription service. VCR required for recording.

STARSIGHT® FEATURES LICENSED UNDER ONE OR MORE OF THE FOLLOWING U.S. PATENTS 4,706,121, 5,151,789, 5,335,277, 5,353,121, 5,479,266 AND 5,479,268, USE RIGHTS RESERVED

STARSIGHT TELECAST, INC. IS NOT IN ANY WAY LIABLE FOR THE ACCURACY OF THE PROGRAM SCHEDULE INFORMATION PROVIDED BY THE STARSIGHT SYSTEM. IN NO EVENT SHALL STARSIGHT TELECAST BE LIABLE FOR ANY AMOUNTS REPRESENTING LOSS OF PROFITS, LOSS OF BUSINESS, OR INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE PROVISION OR USE OF ANY INFORMATION, EQUIPMENT, OR SERVICES RELATING TO THE STARSIGHT SYSTEM.



StarSight Checklist

Please fill in the blanks below. Keep this Checklist close at hand when you activate StarSight. You will find the information you need to complete this Checklist in the *PBS Stations*, *Cable Box Codes* and *VCR Codes* sections of this guide.

A. PBS Stations:

From the *PBS Stations* section, find the PBS station closest to your city. (If you have a choice of two or more PBS stations, select the one with the clearest picture.) Write the PBS station letters and channel number below.

PBS Station Letters: _____

PBS Station Channel Number: _____

For Cable Users Only:

Check your cable company's channel line-up or your local newspaper's TV listing to see if the PBS station in your area has a different channel number than the one you wrote down above. If so, enter your PBS station's cable channel number here: _____

(You will tune to this channel number during the activation process.)

For Canadian Customers Only:

From the *PBS Stations for Canadian Customers* section on page 58, find the PBS station that you receive. (If you have a choice of two or more PBS stations, select the one with the clearest picture.) Write the PBS station letters and channel number in the spaces provided above.

B. Code Numbers:

From the *Cable Box Codes* section, find the code numbers that apply to your brand of Cable Box and enter them below.

Code 1: _____ **Code 2:** _____ **Code 3:** _____ **Code 4:** _____ **Code 5:** _____

From the *VCR Codes* section, find the code numbers that apply to your brand of VCR and enter them below.

Code 1: _____ **Code 2:** _____ **Code 3:** _____ **Code 4:** _____ **Code 5:** _____

C. Activating StarSight:

Now go to the *Activating StarSight* section on the next page. During activation, StarSight will display your STAR number and ID number on your TV screen. When these numbers appear, write them below.

STAR #: _____

ID #: _____



Activating StarSight

For your TV to receive StarSight information, you need to activate StarSight. You complete the process directly through your TV, in simple steps that take only minutes.

- 1 Follow the step-by-step instructions for connecting your VCR and setting up your Cable Box in the beginning of this operating guide. Be sure to position your Remote Emitter in front of your Cable Box or VCR.
- 2 Complete parts A and B of the StarSight Checklist.
- 3 Have your Panasonic TV remote control handy.
- 4 Have a telephone nearby to call StarSight's toll-free activation number **1-800-643-STAR**.
- 5 Follow the *To Activate StarSight* instructions below.

To Activate StarSight:

If you have a Cable Box, make sure your TV is tuned to the Cable Box output channel (usually channel 3 or 4).

- 1 Press  on your Panasonic TV remote control to use StarSight.
- 2 If you have a Cable Box, tune it to the PBS channel on your StarSight Checklist. Do this manually or with your Cable Box remote control.

If you do not have a Cable Box, use the number pad on your Panasonic TV remote control to tune your TV to the correct PBS channel. StarSight will search for schedule information on this channel.



- 3 Press  to display the Panasonic TV menu.

Use , ,  or  to highlight  then press .

- 4 You'll see the "Welcome to StarSight" menu.


Highlight "Activate StarSight," then press .

Follow the on-screen instructions.

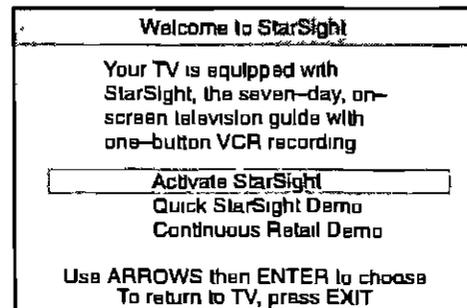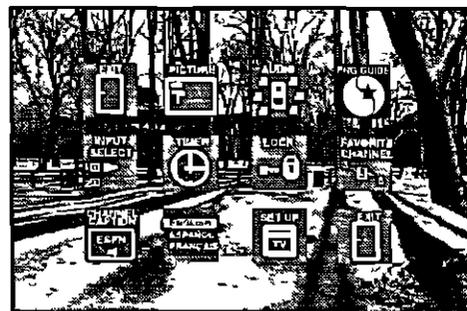


Activating StarSight (cont.)

5. StarSight asks you to enter a selection for your equipment

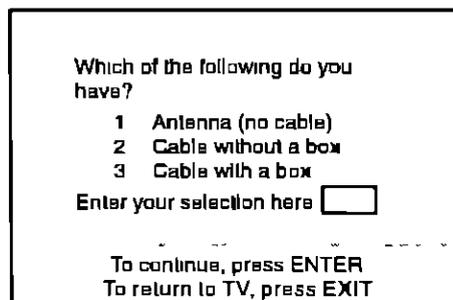


6. StarSight then asks you to tune to your PBS station
(If you have a Cable Box, you will tune it to your PBS station)
(If you don't have a Cable Box, you will tune your TV to your PBS station)
Make sure you have tuned to your PBS station, and continue following the on-screen instructions

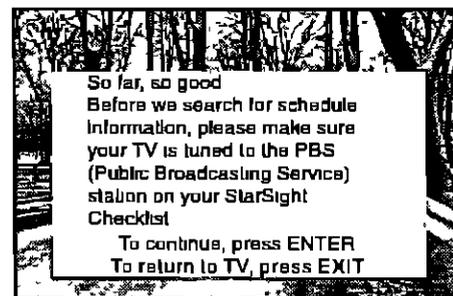


7. Next, StarSight displays your STAR # and ID #
(Please write these numbers in section C of your StarSight Checklist)

Call StarSight toll free at **1-800-643-STAR.**

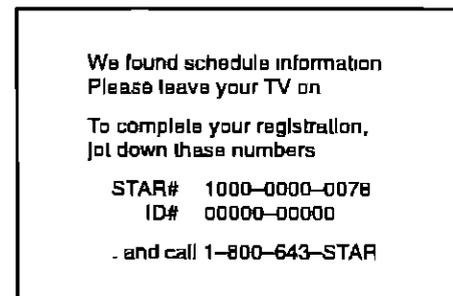

8. When you call StarSight, you will be asked for your STAR # and ID # StarSight will then be activated in your TV

9. When StarSight has been activated, you will see a "Congratulations!" message

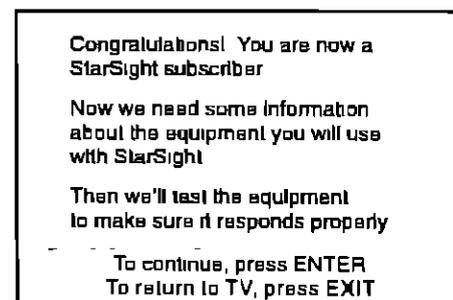

10. Press  to continue

YOU SHOULD ALSO KNOW...

- StarSight works with almost all Cable Boxes that can be operated by a wireless remote control
- If no schedule data is found, you may be tuned to the wrong PBS station. Check the PBS station written on your StarSight Checklist and try again. Or, try tuning to a different PBS station that is listed for your area in the *PBS Stations* section. (If no station is listed for your area, call **1-800-628-STAR** for further information.)



Testing 1, 2, 3

Checking Your StarSight Setup

Now that you've subscribed, the final step is to test your equipment setup. Here's how:

1. Press  on your remote control when you see the "Congratulations!" message.

StarSight will now guide you through a series of on-screen displays. Please follow the instructions carefully. All you have to do is respond to the on-screen prompts.

2. Find the Cable Box and VCR codes on your StarSight Checklist.

If you've listed more than one code for a given brand of Cable Box and VCR, don't worry. StarSight lets you test each code until the correct one has been entered.

Be sure the Remote Emitters you placed previously are positioned according to the instructions.

3. With your equipment set up and StarSight activation complete, you'll begin to collect StarSight program information. Your system will be automatically updated with the latest program information whenever your TV is turned off or anytime your TV is tuned to your PBS station (the channel you used for activating StarSight). Initially, it will take between 4 and 12 hours to collect program information. Don't be alarmed if your StarSight guide is not full right away, it has seven days of program information to collect. In a day or so, your data will be complete and will continue to be updated daily.

That's it! Your Panasonic TV is now all set up and ready to collect program information. To learn how to use StarSight, please see the separate *Using StarSight* guide.

YOU SHOULD ALSO KNOW...

- To maintain StarSight program information, always leave your TV power cord plugged in and your Cable Box on (if you have one).
- It usually takes 3 to 5 seconds to change channels with your Cable Box. This is the time it takes for the Cable Box Controller to communicate with your Cable Box.
- It is important that you leave your VCR off when it's not being used. If you forget to turn off your VCR, a scheduled recording cannot occur.

PBS Stations

Choose the station closest to your city (It may be in a bordering state)

City	Station	Channel	City	Station	Channel	City	Station	Channel
ALABAMA			Gainesville	WUFT	5	Fort Dodge	KTIN	24
Anniston	WCIQ	7	Jacksonville	WJCT	7	Iowa City	KIIN	12
Birmingham	WBIQ	10	Miami	WPBT	2	Mason City	KYIN	24
Decatur	WHIQ	25	Naples	WSFP	30	Red Oak	KHIN	36
Dothan	WGIQ	43	Orlando	WMFE	24	Sioux City	KSIN	27
Huntsville	WHIQ	25	Panama City	WFSG	56	Waterloo	KRIN	32
Mobile	WEIQ	42	Pensacola	WSRE	23	KANSAS		
	WSRE	23	St Petersburg	WEDU	3	Lakin	KSWK	3
Montgomery	WAIQ	26	Tallahassee	WFSU	11	Pittsburg	KOZJ	26
ALASKA			Tampa	WEDU	3	Topeka	KTWU	11
Anchorage	KAKM	7	Thomasville	WFSU	11	KENTUCKY		
Fairbanks	KUAC	9	West Palm Beach	WXEL	42	Bowling Green	WKYU	24
ARIZONA			GEORGIA			Cape Girardeau	WSIU	8
Phoenix	KAET	8	Albany	WABW	14	Lexington	WKLE	46
Tucson	KUAT	6	Atlanta	WGTV	8	Louisville	WKPC	15
ARKANSAS			Augusta	WCES	20	Paducah	WSIU	8
Little Rock	KETS	2	Chatsworth	WCLP	18	Tr-Cities	WSBN	47
Pine Bluff	KETS	2	Columbus	WJSP	28	LOUISIANA		
CALIFORNIA			Dawson	WACS	25	Alexandria	KLPA	25
Eureka	KEET	13	Macon	WDCO	15	Baton Rouge	WLPB	27
Fresno	KVPT	18	Savannah	WVAN	9	El Dorado	KLTM	13
Los Angeles	KCET	28	Waycross	WXGA	8	Lafayette	KLPB	24
Monterey	KTEH	54	HAWAII			Lake Charles	KLTL	18
Redding	KIXE	9	Honolulu	KHET	11	Monroe	KLTM	13
Sacramento	KVIE	6	Waikiki	KMEB	10	New Orleans	WYES	12
Salinas	KTEH	54	IDAHO			Shreveport	KLTS	24
San Diego	KPBS	15	Boise	KAID	4	MAINE		
San Francisco	KQED	9	Idaho Falls	KISU	10	Bangor	WMEB	12
San Jose	KQED	9	Twin Falls	KITT	13	Calais	WMED	13
Santa Barbara	KCET	28	ILLINOIS			Lewiston	WCBB	10
Stockton	KVIE	6	Carbondale	WSIU	8	Presque Isle	WMEM	10
Visalia	KVPT	18	Champaign	WILL	12	MARYLAND		
COLORADO			Chicago	WTTW	11	Annapolis	WMPT	22
Colorado Springs	KTSC	8	Moline	WQPT	24	Baltimore	WMPB	67
Denver	KRMA	6	Peoria	WTVP	47	Frederick	WFPT	62
Pueblo	KTSC	8	Quincy	WQEC	27	Hagerstown	WWPB	31
Connecticut			Rock Island	WQPT	24	Oakland	WGPT	36
Bridgeport	WEDW	49	Springfield	WILL	12	Salisbury	WCPB	28
Hartford	WEDH	24	INDIANA			MASSACHUSETTS		
New Haven	WEDY	65	Elkhart	WNIT	34	Boston	WGBH	2
	WEDH	24	Evansville	WNIN	9	Holyoke	WGBY	57
Norwich	WEDN	53	Fort Wayne	WFWA	39	Springfield	WGBY	57
DELAWARE			Indianapolis	WFYI	20	MICHIGAN		
Seaford	WDPB	64	Lafayette	WFYI	20	Alpena	WCML	6
Wilmington	WHYY	12	South Bend	WNIT	34	Bad Axe	WUCX	35
DIST OF COLUMBIA			Vincennes	WVUT	22	Bay City	WUCM	19
Washington, D C	WETA	26	IOWA			Detroit	WTVS	56
FLORIDA			Ames	KDIN	11	Flint	WFUM	28
Daytona Beach	WMFE	24	Cedar Rapids	KIIN	12	Grand Rapids	WGVU	35
Ft Lauderdale	WPBT	2	Council Bluffs	KBIN	32	Kalamazoo	WGVK	52
Ft Myers	WSFP	30	Davenport	KQCT	36		WGVU	35
			Des Moines	KDIN	11	Lansing	WKAR	23

StarSight

PBS Stations (cont.)

Choose the station closest to your city. (It may be in a bordering state)

City	Station	Channel	City	Station	Channel	City	Station	Channel
Marquette	WNMU	13	NEW JERSEY			Oklahoma City	KETA	13
Mouni Pleasant	WCMU	14	N New Jersey	WNET	13	Tulsa	KOED	11
Saginaw	WFUM	28	S New Jersey	WHYY	12	OREGON		
Traverse City	WCMW	21	NEW MEXICO			Bend	KOAB	3
MINNESOTA			Albuquerque	KNME	5	Corvallis	KOAC	7
Austin	KYIN	24	Santa Fe	KNME	5	Eugene	KEPB	28
Duluth	WDSE	8	NEW YORK			Klamath Falls	KFTS	22
La Crescent	WHLA	31	Albany	WMHT	17	Medford	KSYS	8
Mason City	KYIN	24	Binghamton	WSKG	46	Portland	KOPB	10
Minneapolis-			Buffalo	WNED	17	PENNSYLVANIA		
St Paul	KTCI	17	New York	WNET	13	Altoona	WPSX	3
Superior	WDSE	8	Norwood	WNPI	18	Erie	WQLN	54
MISSISSIPPI			Plattsburgh	WCFE	57	Harrisburg	WITF	33
Biloxi	WMAH	19	Rochester	WXXI	21	Johnstown	WPSX	3
Bude	WMAU	17	Schenectady	WMHT	17	Lancaster	WITF	33
Columbus	WMAB	2	Syracuse	WCNY	24	Philadelphia	WHYY	12
Greenville	WMAO	23	Watertown	WNPE	16	Pittsburgh	WQED	13
Greenwood	WMAO	23	NORTH CAROLINA			Scranton	WVIA	44
Gulfport	WMAH	19	Asheville	WUNF	33	Wilkes-Barre	WVIA	44
Jackson	WMPN	29	Charlotte	WUNG	58	RHODE ISLAND		
Mendian	WMAV	14	Columbia	WUND	2	New Bedford	WSBE	36
Oxford	WMAV	18	Greensboro	WUNL	26	Providence	WSBE	36
MISSOURI			Greenville	WUNK	25	SOUTH CAROLINA		
Hannibal	WQEC	27	Jacksonville	WUNM	19	Allendale	WEBA	14
Joplin	KOZJ	26	Linville	WUNE	17	Beaufort	WJWJ	16
Kansas City	KCPT	19	Raleigh-Durham	WUNC	4	Charleston	WITV	7
Pittsburg	KOZJ	26	Roanoke Rapids	WUNP	36	Columbia	WRLK	35
Springfield	KOZK	21	Wilmington	WUNJ	39	Conway	WHMC	23
St Louis	KETC	9	NORTH DAKOTA			Florence	WJPM	33
MONTANA			Bismarck	KBME	3	Greenville	WNTV	29
Bozeman	KUSM	9	Drakinson	KDSE	9	Greenwood	WNEH	38
Butte	KUSM	9	Ellendale	KJRE	19	Huntington	WPBY	33
NEBRASKA			Fargo	KFME	13	Rock Hill	WNSC	30
Bassel	KMNE	7	Grand Forks	KGFE	2	Spartanburg	WRET	49
Hastings	KHNE	29	Minot	KBME	3	Sumter	WRJA	2
	KUON	12	Williston	KWSE	4	SOUTH DAKOTA		
Lexington	KLNE	3	OHIO			Aberdeen	KDSD	16
Lincoln	KUON	12	Akron	WEAO	49	Brookings	KESD	8
Merriman	KRNE	12		WVIZ	25	Eagle Butte	KPSD	13
Norfolk	KXNE	19	Athens	WOUB	20	Lowry	KQSD	11
North Platte	KPNE	9	Cleveland	WVIZ	25	Martin	KZSD	8
Omaha	KYNE	26	Cincinnati	WCET	48	Pierre	KTSD	10
Scottsbluff	KTNE	13	Columbus	WOSU	34	Rapid City	KBHE	9
NEVADA			Dayton	WPTD	16	Vermillion	KUSD	2
Las Vegas	KLVX	10	Lima	WBGU	27	TENNESSEE		
Reno	KNPB	5	Portsmouth	WPBO	42	Chattanooga	WTCI	45
NEW HAMPSHIRE			Steubenville	WOUC	44	Jackson	WLJT	11
Durham	WENH	11	Toledo	WGTE	30	Johnson City	WSJK	2
Keene	WEKW	52	Youngstown	WNEO	45	Knoxville	WKOP	15
Littleton	WLED	49	OKLAHOMA			Memphis	WKNO	10
			Cheyenne	KWET	12	Nashville	WDCN	8
			Eufaula	KOET	3	Sneedville	WSJK	2

Starsight

PBS Stations (cont.)

Choose the station closest to your city (It may be in a bordering state)

City	Station	Channel	City	Station	Channel	City	Station	Channel
TEXAS			VIRGINIA			Charleston		
Amarillo	KACV	2	Arlington	WETA	26	Clarksburg	WNPB	24
Austin	KLRU	18	Charlottesville	WHTJ	41	Huntington	WPBY	33
Corpus Christi	KEDT	16	Harrisonburg	WVPT	51	Parkersburg	WOUB	20
Dallas	KERA	13	Lynchburg	WBRA	15	Weston	WNPB	24
El Paso	KCOS	13	Norfolk	WHRO	15	Wheeling	WOUC	44
Ft Worth	KERA	13	Norton	WSBN	47	WISCONSIN		
Harlingen	KMBH	60	Petersburg	WCVE	23	Appleton	WPNE	38
Houston	KUHT	8	Portsmouth	WHRO	15	Eau Claire	WHLA	31
Lubbock	KTXT	5	Richmond	WCVE	15	Green Bay	WPNE	38
Odessa Midland	KOCV	36	Roanoke	WBRA	15	La Crosse	WHLA	31
San Antonio	KLRN	9	WASHINGTON			Madison	WHA	21
Temple	KNCT	46	Seattle	KCTS	9	Menomonie	WHWC	28
Waco	KNCT	46	Spokane	KSPS	7	Milwaukee	WMVS	10
UTAH			Tacoma	KCTS	9	Park Falls	WLEF	36
Salt Lake City	KUED	7	Yakima	KYVE	47	Rhineland	WHRM	20
VERMONT			WEST VIRGINIA			WYOMING		
Burlington	WCVE	57	Beckley	WSWP	9	Cheyenne	KTNE	13
			Bluefield	WSWP	9	Evanston	KUED	7

PBS Stations (cont.)

Choose the station closest to your city (It may be in a bordering state)

<u>City</u>	<u>Station</u>	<u>City</u>	<u>Station</u>	<u>City</u>	<u>Station</u>
PBS Stations for Canadian Customers					
MAINE		NORTH DAKOTA		OHIO	
Bangor	WMEB, WMED	Fargo	KFME, KGFE	Cleveland	WVIZ
				Toledo	WGTE
MICHIGAN		NEW YORK		PENNSYLVANIA	
Detroit	WTVS	Buffalo	WNED	Erie	WQLN
Marquette	WNMU	Plattsburgh	WCFE	WASHINGTON	
		Rochester	WXXI	Seattle	KCTS
		Watertown	WNPE	Spokane	KSPS
MINNESOTA					
Duluth	WDSE				

Cable Box Codes

ABC	001, 011, 003, 017, 007, 013, 014, 047, 206	Pulsar	000
Antronix	207	PVP Stereo Visual Matrx	003
Archer	022, 039, 153, 207	RCA	021
BBT	267	Realistic	207
Cable Star	056	Regal	279, 259, 020, 273
Cabletenna	022	Regency	002, 003
Century	153	Rembrandt	070
Citizen	153	RK	304, 306
Colour Voice	025, 031	Runco	000
Comband	232, 233	Samsung	040, 144
Comtronics	060, 040	Scientific Atlanta	008, 017, 006, 277, 294
Diamond	035	Signal	015, 040
Eagle Comtronics	040	Signature	011
Eastern	002, 274	SL Marx	040
Electricord	078	Spectrovision	058
Garrard	153	Sprucer	021, 307
GC Electronics	016, 056	Standard Components	096, 155
Gemini	057, 070, 015, 242	Starcom	015, 003, 047, 098, 222
General Electric	232, 233	Stargate	040, 015
General Instrument	011, 003	STS	156
Hamlin	259, 273, 020, 009, 034	Sylvania	001
Hitachi	011, 154	Tandy	258
Jasco	153	Tatung	097
Jerrold	014, 011, 012, 003, 015, 024, 026, 047, 098, 222, 276, 215	Teknika	146
Macom	033	Telecaption	221
Magnavox	027, 032, 069	Texscan	001, 096
Memorex	000	TFC	310
Movie Time	078, 156, 203	Tocom	013, 012, 059
Northcoast	314	Toshiba	000
Nova Vision	008, 277	TV86	063
NSC	063, 203, 070, 156	Uniden	225
Oak	007, 019, 248	Unika	207, 153, 022
Panasonic	021, 107	United Artists	007
Paragon	000	United Cable	003
Philips	060, 030, 025, 027, 028, 029, 031, 290	Universal	077, 078, 191, 022, 039, 056, 153, 207
Philips ECG	242	Video Way	250
Pioneer	144, 023, 260	Viewstar	027, 060, 063, 111, 211, 258, 289
Popular Mechanics	400	Zenith	000, 054

VCR Codes

Action	317
Admiral	121, 184, 039, 048, 060
Aiko	278
Aiwa	000
Akai	041, 106, 053, 049, 061, 156, 242
Akiba	072
Akura	271
Alba	020, 209, 278
Amstrad	000
Anitech	072
ASA	037, 081
Astra	249
Asuka	037
Audiovox	037
Baird	104, 107
Basic Line	020, 072, 278
Bell+Howell	104
Blaupunkt	162, 226, 227
Brandt	187
Broksonic	184, 211, 121
Bush	072, 209, 278
Canon	035, 167, 102
Capehart	020
Carver	081
Catron	020
CCE	072, 278
CGE	000
Cimline	072
Clatronic	020
Condor	020
Craig	240, 047, 271, 060, 236, 072, 037, 081
Crown	072, 278
Curtis Mathis	035, 758
Daewoo	278, 020, 045, 017, 087
Dansai	072
Daytron	020
De Graff	042, 166
Decca	000, 081
Dual	041
Dumont	000, 081, 104, 105
Dynatech	000
Elcatech	072
Elin	051
Emerson	184, 121, 212, 000, 002, 036, 037, 061, 068, 088, 208, 209, 211, 294, 295, 361
ESC	278
Ferguson	041, 107
Fidelity	000
Finlandia	081, 104, 110
Finlux	000, 042, 081, 104, 105
Firstline	037, 043, 045, 072, 209
Fisher	046, 047, 054, 066, 104
Frontech	020
Funai	000
General Electric	035, 060, 065
GEC	081
General	052

VCR Codes (cont.)

Go Video	232, 279
Goldstar	037, 018, 038
Goodmans	000, 020, 037, 062, 072, 278
Gradients	000
Graetz	041, 104
Granada	046, 081, 104
Grandin	000, 037, 072
Grundig	081, 226
Harmon/Kardon	038, 075
HCM	072
Hinari	072, 208
Hitachi	042, 235, 105, 000, 041, 065, 145, 166, 292, 032, 033, 034, 040, 067, 022
Hypson	072
Imperial	000
Interfunk	081
ITT	041, 046, 104, 106
ITT Nokia	268
ITV	278
JCL	035
Jensen	041
JVC	041, 067, 008, 206, 207, 384
Kaisui	072
Kendo	106
Kenwood	038, 046, 041, 067, 384
Korpel	072
Leyco	072
Lloyd	000
Loewe	037
Loewe Opta	081
Logik	072, 240
Luxor	043, 046, 106
LXI	037, 105
M-Electronic	000
Magnavox	035, 039, 081, 149, 103, 110
Manesth	045, 072
Marantz	035, 038, 081, 062, 146, 161
Marta	037
Matsui	036, 208, 209
MEI	035
Memorex	035, 037, 048, 000, 039, 046, 047, 104, 268, 299
Memphis	072
MGA	043, 061
MGN Technology	240
Minolta	105, 042
Mitsubishi	043, 061, 242, 067, 075, 081, 173, 214, 181
MTC	000, 240
Multi Tech	000, 072
Murphy	000
NAD	058
NEC	038, 040, 041, 050, 067, 082, 088, 208, 209
Neckermann	081
Nikko	037
Noblex	240
Nokia	041, 046, 104, 106, 240
Nordmende	041
Oceanic	000

VCR Codes (cont.)

Oplonica	048, 062
Orion	036, 088, 121, 208, 209, 184
Osaki	037, 000, 072
Otto Versand	081
Palladium	037
Pallidium	072
Panasonic	035, 077, 102, 162, 225, 226, 227, 254, 24
Pathe Cinema	036
JC Penney	042, 035, 037, 240, 038, 040
Pentax	105, 042, 065
Perdio	000
Philco	035, 081
Philips	035, 081, 062, 110, 146
Phonola	081
Pilot	037
Pioneer	058, 067, 081, 168
Portland	020
Pioneer	058, 067, 081, 168
Portland	020
Proline	000
Proscan	060
Pulsar	039
Pulser	051
Pye	081
Quartz	046, 155
Quasar	035, 077, 096, 162, 226
Quelle	081
Radiola	081
RCA	060, 065, 035, 042, 077, 105, 149, 202, 277
Realistic	037, 240, 048, 000, 035, 046, 047, 062, 066, 104
Rex	041
Ricoh	034, 253
Roadstar	037, 072, 240, 278
Runco	039
Saba	041, 206, 207
Saisho	036, 088, 145, 208, 209
Salora	043, 046, 106
Samsung	240, 045, 053, 051
Sansui	067, 041, 271, 082, 209
Sanyo	046, 047, 104, 240, 268
SBR	081, 146
Schaub Lorenz	000, 041
Schneider	000, 072, 081, 110
Scott	045, 121, 184, 210, 212
Sears	047, 046, 054, 035, 037, 042, 057, 066, 104, 105
SEC	240
SEI	081
Seleco	041
Sentra	020
Sharp	048, 062, 021
Shintom	072, 067
Siemens	037, 104
Silva	037
Sinudyne	081
Solovox	020
Sontec	037

VCR Codes (cont.)

Sony	033, 034, 032, 011, 035, 253, 275
STS	042
Sunpack	253
Sunstar	000
Sylvania	000, 035, 043, 081, 103, 110
Symphonic	000
Tandy	000, 104
Tashiko	000
Tatung	000, 041, 081
Teac	000, 041
Technics	035, 162, 246
Teknika	037, 035, 000, 052
Telefunken	041, 187
Tenosal	072
Tensai	000
Thomson	041
Thorn	041
TMK	- 036
Toshiba	045, 043, 066, 041, 056, 057, 210, 212, 033
Television	240, 037
Triumph	208
Unitech	240
Universum	000, 037, 049, 081, 106
Vector Research	038, 040
Victor	008, 067
Video Concepts	040, 061, 221
Videosonic	240
Wards	048, 035, 072, 042, 062, 212, 149, 047, 000, 240
XR 1000	072
Yamaha	038, 041
Yamishi	072
Yokan	072
Yoko	020, 240
Zenith	039, 034, 033, 000



Your Panasonic television that is equipped with the StarSight® System is not designed to operate with, or control, a satellite dish. For information on StarSight products specifically designed for satellite systems, see your local satellite dealer.

©1996, StarSight Telecast, Inc. All rights reserved. StarSight and the StarSight logo are registered trademarks of StarSight Telecast, Inc. StarSight is a subscription service. VCR required for recording

To be licensed to use the StarSight System and the StarSight features of this equipment, you must be registered with StarSight or an authorized representative. StarSight® features licensed under one or more of the following U.S. patents: 4,706,121, 5,151,789; 5,335,277; 5,353,121, 5,479,266; and 5,479,268. Use rights reserved

StarSight is not in any way liable for the accuracy of the program schedule information provided by the StarSight System. In no event shall StarSight Telecast, Inc. be liable for any amounts representing loss of profits, loss of business, or indirect, special, or consequential damages in connection with the provision or use of any information, equipment, or services relating to the StarSight System.

**Matsushita Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America**
One Panasonic Way
Secaucus, New Jersey 07094

Matsushita Electric of Canada Limited
5770 Ambler Drive
Mississauga, Ontario L4W 2T3
Canada

**Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico Inc ("PSC")**
Ave 65 de Infanteria, Km 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985
Tel (809) 750-4300
FAX (809) 768-2910