



Omnivision **VHS**

Panasonic®

Combination VCR Operating Instructions

Model No. **PV-C2063**



- Initial Setup and Connection Procedures are on pages 8 and 9.



As an **ENERGY STAR®** Partner,
Matsushita Electric Corporation of America has determined
that this product or product model meets the **ENERGY STAR®**
guidelines for energy efficiency.



Please read these instructions carefully before attempting to connect, operate, or adjust this product. Please save this manual.
Spanish Quick Use Guide is included.
(Guía para rápida consulta en español está incluida.)

Initial Setup

Basic Operation

TV Operation

Timer Operation

Advanced Operation

For Your Information

LSOT0666A

Important Safeguards and Precautions

READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON UNIT

INSTALLATION

1 POWER SOURCE CAUTION

Operate only from power source indicated on unit or in this manual. If uncertain, have your Electric Utility Service Company or Video Products Dealer verify your home power source.

2 POWER CORD PLUG

For safety, this unit has a polarized type plug (one wide blade), or a three-wire grounding type plug. Always hold the plug firmly and make sure your hands are dry when plugging in or unplugging the AC power cord. Regularly remove dust, dirt, etc. on the plug.

POLARIZED PLUG CAUTION:

The plug fits into outlet one way. If it cannot be fully inserted, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not tamper with the plug.

GROUNDING PLUG CAUTION:

The plug requires a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not tamper with the plug.

3 POWER CORD

To avoid unit malfunction, and to protect against electrical shock, fire or personal injury:

- Keep power cord away from heating appliances and walking traffic. Do not rest heavy objects on, or roll such objects over the power cord.
- Do not tamper with the cord in any way.
- An extension cord should have the same type plug (polarized or grounding) and must be securely connected.
- Overloaded wall outlets or extension cords is a fire hazard.
- Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified electrician.

4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If blocked, heat build-up may result in a fire hazard or heat damage to cassettes.

For your protection:

- a. Never cover ventilation slots while unit is ON, or operate unit while placed on a bed, sofa, rug, or other soft surface.
- b. Avoid built-in installation, such as a book case or rack, unless properly ventilated.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place unit over or near a heater or radiator, in direct sunlight, etc. If unit is suddenly moved from a cold place to a warm place, moisture may condense in unit and on the tape causing damage.

6 TO AVOID PERSONAL INJURY


- Never place unit on support or stand that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- Move any appliance and cart combination with care. Quick stops, excessive force, and uneven surfaces may cause objects to overturn.
- Carefully follow all operating instructions.



OUTDOOR ANTENNA INSTALLATION

1 SAFE ANTENNA AND CABLE CONNECTION

An outside antenna or cable system must be properly grounded to provide some protection against built up static charges and voltage. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information regarding proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

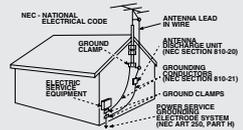

2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

Locate an outside antenna system well away from power lines and electric light or power circuits so it will never touch these power sources should it ever fall. When installing antenna, absolutely never touch power lines, circuits or other power sources as this could be fatal.

USING THE UNIT

Before unit is brought out of storage or moved to a new location, refer again to the INSTALLATION section of these safeguards.

1 KEEP UNIT WELL AWAY FROM WATER OR MOISTURE, such as vases, sinks, tubs, etc.

2 IF EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug unit and have it inspected by a qualified service technician before use.

3 ELECTRICAL STORMS

During a lightning storm, or before leaving unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

4 WHEN UNIT IS PLUGGED IN

• DO NOT OPERATE IF:

- liquid has spilled into unit.
- unit was dropped or otherwise damaged.
- unit emits smoke, malodors, or noises.

Immediately unplug unit, and have it inspected by a service technician to avoid potential fire and shock hazards.

- Never drop or push any object through openings in unit. Touching internal parts may cause electric shock or fire hazard.
- Keep magnetic objects, such as speakers, away from unit to avoid electrical interference.

5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

6 CLEANING UNIT

Unplug unit. Use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into unit and cause electrical shock. Any substance, such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

SERVICE

1 DO NOT SERVICE PRODUCT YOURSELF

If, after carefully following detailed operating instructions, the unit does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug unit and contact a qualified service technician.

2 REPLACEMENT OF PARTS

Make sure the service technician uses only parts specified by the manufacturer, or have equal safety characteristics as original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

3 SAFETY CHECK AFTER SERVICING

After unit is serviced or repaired, request that a thorough safety check be done as described in the manufacturer's service literature to ensure video unit is in safe operating condition.

Safety Precautions/Mesures de sécurité

- Warning :** To prevent fire or shock hazard, do not expose this equipment to rain or moisture.
- Caution :** To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- Avertissement :** Afin de prévenir tout risque d'incendie ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à une humidité excessive.
- Attention :** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.
- FCC WARNING :** Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment. Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used. This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

This product utilizes both a Cathode Ray Tube (CRT) and other components that contain lead. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <<http://www.eiae.org>>

Congratulations

On your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your unit.

Date of Purchase _____

Dealer Purchased From _____

Dealer Address _____

 
Dealer Phone No. _____

Model No. **PV-C2063** _____

Serial No. _____


Accessories

- Remote Control




LSSQ0381

 - Batteries 2 "AA"



To order accessories, call toll free 1-800-332-5368.

Loading the Batteries

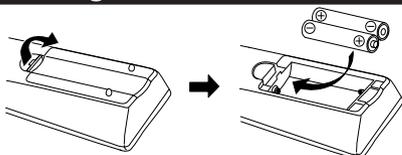


Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

Prevent Accidental Tape Erasure

Break off the tab to prevent recording.

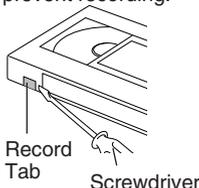

To record again.



Unit Information

Head Cleaning

Playing older or damaged tapes may eventually cause video heads to become clogged.

Head Clog Sensor

During playback this screen appears if clogging is detected. To remove screen, press PLAY on the remote or unit.

VIDEO HEADS MAY
NEED CLEANING
PLEASE INSERT HEAD
CLEANING CASSETTE
OR REFER TO MANUAL

END:PLAY

- Use "dry" type head cleaning cassette only. (Part No. NV-TCL30PT is recommended.)
- Follow cleaning tape directions carefully. Excessive use of head cleaning tape can shorten the video head life.

Features for a Quality Picture

Digital Auto Tracking

Continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control (to reduce picture noise)

Use during Playback and Slow Motion mode to reduce picture noise. Press the 3 or 6 number key on the remote control or CH ▲▼ on the unit until the picture clears up. To return to Auto Tracking, press POWER off, then on again a few seconds later.

V-Lock Control

In Still mode, the 3 or 6 number key on the remote control or CH ▲▼ on the unit operate as a V-lock control to reduce jitter.

Record/Playback Time

Only use tapes with the **VHS** mark in this unit.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

Specifications

Display		
Picture Tube	20 inch measured diagonal 90° deflection Picture Tube	
VCR		
Video Recording System	4 rotary heads helical scanning system	
Audio Track	1 track	
Tuner		
Broadcast Channels	VHF 2 ~ 13, UHF 14 ~ 69	
CABLE Channels	Midband A through I (14 ~ 22) Superband J through W (23 ~ 36) Hyperband AA ~ EEE (37 ~ 64) Lowband A-5 ~ A-1 (95 ~ 99) Special CABLE channel 5A(01) Ultraband 65 ~ 94, 100 ~ 125	
FM Radio		
Band Range	87.5 MHz ~ 108.1 MHz	
General		
Power Source	120 V AC, 60 Hz	
Power Consumption	Power On	Approx. 110 W
	Power Off	Approx. 2.5 W
Television System	EIA Standard NTSC color	
Speaker	2 pieces 1.5 W	
Operating Temperature	5 °C ~ 40 °C (41 °F ~ 104 °F)	
Operating Humidity	10 % ~ 75 %	
Weight	23 Kg (50.6 lbs.)	
Dimensions (W X H X D)	515 mm (20-5/16") X 505 mm (19-7/8") X 474 mm (18-11/16")	

Note

- Designs and specifications are subject to change without notice.

DST (Daylight Saving Time)

Unit auto adjusts clock for DST (Daylight Saving Time.)

■ Spring (First Sunday in April)

DST: ON → Sets clock ahead one hour.

■ Autumn (Last Sunday in October)

DST: OFF → Turns clock back one hour.

- If your area does not observe Daylight Saving Time, select DST: OFF.
- Keep these time changes in mind when programming the unit for timer recordings.

Table of Contents

Important Safeguards and Precautions	2
Safety Precautions/Mesures de sécurité.....	3
Unit Information.....	4
Location of Controls	6
Connections/Initial Setup (Ready to Play)	8
<hr/>	
Reset Language, Channels, Clock, Time Zone Adjust.....	10
Playback a Tape.....	12
Record On a Tape.....	12
Copy Your Tapes (Dubbing).....	13
<hr/>	
TV Operation	14
MTS Broadcast/TV Stereo System.....	15
TV Timer Features	16
Closed Caption System	18
FM Radio	20
Picture Adjustment.....	21
<hr/>	
Timer Recording.....	22
<hr/>	
Tape Operation	24
Special VCR Features	27
V-Chip Control Feature	29
Cable Box Universal Remote Control Feature.....	32
<hr/>	
On-Screen Display (OSD)	34
Before Requesting Service.....	35
Limited Warranty	36
Customer Services Directory	37
Spanish Quick Use Guide/Guía para rápida consulta.....	38
Index	40

Initial Setup

Basic Operation

TV Operation

Timer Operation

Advanced Operation

For Your Information

Location of Controls

Remote Control Buttons

EJECT

Ejects tape.

POWER

Turns on or off the unit.

FM/TV

Receives FM radio signal.

MUTE

Mutes the sound instantly.

CHANNEL UP/DOWN

Selects a channel.

SELECT UP/DOWN

Controls navigation around on-screen menu.

ACTION

Displays Main Menu.

NUMBER Keys

Selects a channel directly.

PLAY

Begins playback.

REWIND/SEARCH

Rewinds tape, and searches reverse scene.

PAUSE/SLOW

Pauses and slow motion and frame advance picture.

SLEEP

Turns off the unit automatically.

AUDIO

Selects the desired audio mode.

CM SKIP/ZERO SEARCH

In Stop mode, goes to the counter "0:00:00." In Play mode, skips over 1 to 3 minutes of tape.

NIGHT

Color and picture intensity level are adjusted during night time use.

SPEED

Selects recording speed.

STOP

Stops recording or playback.

COMBO

Returns to COMBO mode.

LIGHT

See below.

DSS/CABLE

Sets the remote to control some basic DSS or Cable box functions.

RAPID TUNE

Displays the last channel you were watching.

VOLUME UP/DOWN

Adjusts volume.

SET/BACK SPACE

Sets a selected menu, or goes back to correct.

PROGRAM

Displays SET PROGRAM screen. You can set Timer Program and On-Timer.

TRACKING UP/DOWN

Reduces picture noise during Playback and Slow Motion.

ADD/DELETE

Adds or deletes a channel.

FAST FORWARD/SEARCH

Fast forwards tape, and searches forward scene.

DISPLAY/ENTER

Displays the VCR status and clock. In DSS or CABLE mode, it may be necessary after channel selection.

TAPE POSITION

Finds out present tape position and amount of tape remaining.

REC


Records the program.

SEARCH

Goes directly to the desired recording. Locates end point of recording.

COUNTER RESET


Resets to "0:00:00" at the desired position.

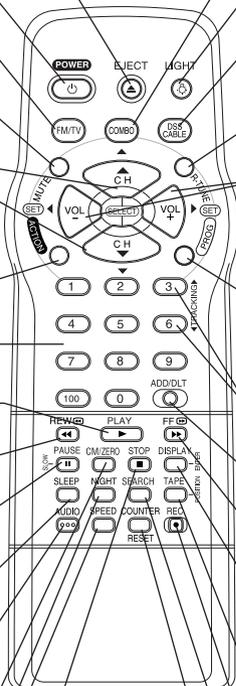

Notes

- When LIGHT is pressed, available buttons in the selected mode light up and the selected mode button (COMBO or DSS/CABLE) flashes for 5 seconds. If no button is pressed, light goes out in 5 seconds to conserve batteries. Also, by holding down a button, you can confirm the selected mode (mode button will flash) in the dark.
- When EJECT is pressed, the tape is ejected from Cassette Compartment. If EJECT is pressed during recording, the unit will not respond to the command.

Front View of the Unit and Indicators

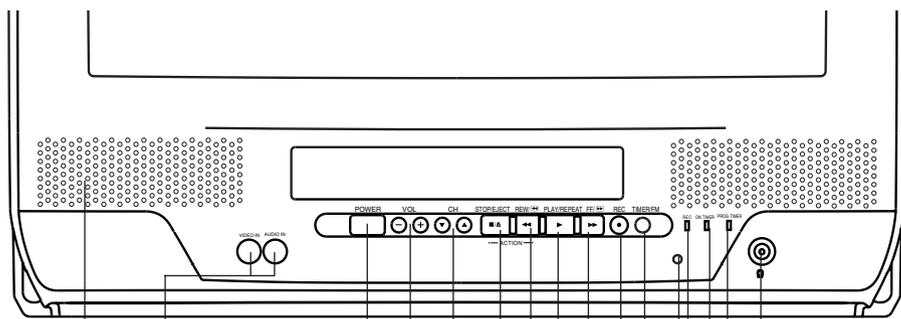

Built-In Speaker

AUDIO VIDEO IN Jack
For dubbing.

POWER
See previous page.

**VOLUME UP/DOWN
SET/BACK SPACE**
See previous page.

**CHANNEL UP/DOWN
TRACKING UP/DOWN
SELECT UP/DOWN**
See previous page.

**STOP/EJECT
ACTION**
Press together with
REW.

**REWIND/SEARCH
ACTION**
See previous page.
Press together with STOP.

**PLAY
REPEAT**
See previous page.
Repeats a recording.

**FAST
FORWARD/SEARCH**
See previous page.

REC
See previous page.

TIMER/FM
Sets a timer alarm up 60 min.
Enables FM Radio.

PHONES Jack
Connect an earphone or headphones.


PROG TIMER Indicator
Lights when the unit is set for Timer Recording.

ON TIMER Indicator
Lights when the On-Timer is set.

REC Indicator
Lights during recording.

Remote Sensor

Rear View of the Unit

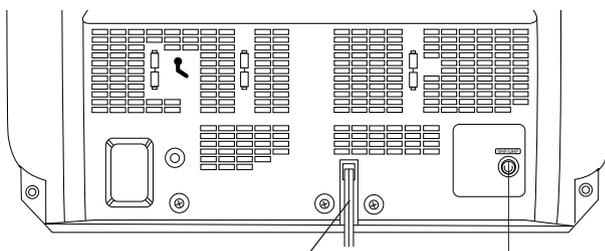

AC Power Plug
When plugged into an AC outlet, the unit consumes 2.5 W of electric power in OFF condition.

VHF/UHF Antenna Input Terminal
In from your Antenna or Cable (See page 8).


Connections/Initial Setup (Ready to Play)

Please make all cable or antenna connections before power on.

Connecting


For ANT./Cable

Connect the cable from Antenna/Cable to the VHF/UHF terminal on the unit.

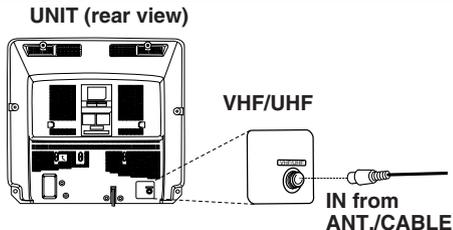

For DSS/Cable Box

Connect the OUT jack on your cable box to the VHF/UHF terminal on the unit with a RF cable.

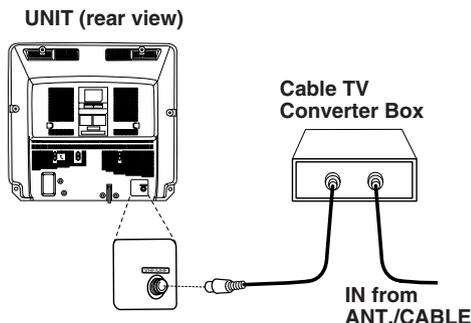

WARNING:

Overtightening "Nut type" RF coaxial cables may damage jacks. Finger tighten only.

Initial Setup (Ready to Play)

Press COMBO on the remote for Combo mode.

- 1 Plug the unit power cord into AC wall outlet.
- 2 Press **POWER*** on the remote or unit. The unit comes on and auto channel and clock set starts.


- If you use a cable box, turn it on and set it to the Public Broadcasting Service (PBS) channel in your time zone. If you use a DSS receiver, it must be turned off.



- 3 Settings are made automatically. When setup is done, this screen appears.



If AUTO CLOCK SET IS INCOMPLETE screen appears, set the clock using MANUAL CLOCK SET procedure on next page.

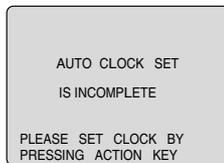

Notes


- Function buttons are inoperative during Initial Setup.
- To remove a cassette during Auto Set, press EJECT twice on the remote or STOP twice on the unit. In this case, settings must be made manually. (See page 10.)
- Depending on conditions, Auto Clock Set may take longer than 30 minutes. If so, press STOP to stop setup and perform settings manually. (See page 10.)

***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Manual Clock Set

If AUTO CLOCK SET was incomplete, manually set the clock as follows.


- 1 Press **ACTION** on the remote to display SET CLOCK Menu screen.

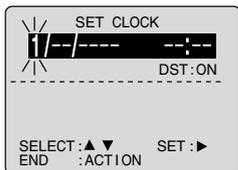

- 2 Press ▲ ▼ to select the month and press ► to set. In the same manner, select and set the date, year, time, and DST. (Daylight Saving Time)




- 3 Press **ACTION** twice to start CLOCK and exit.

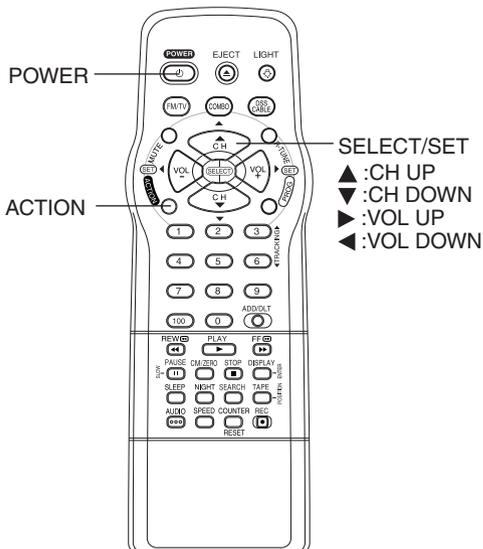

Reset all unit Memory Functions

When moving unit to a new location, or if a mistake was made in the Initial Setup section.

- Make sure a tape is not inserted in the unit.

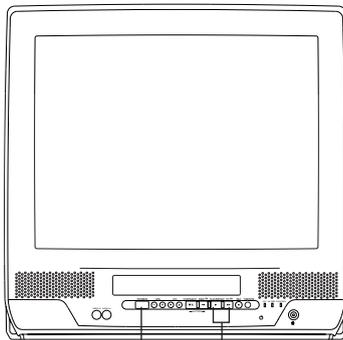


- 1 Turn the unit Power on.
- 2 Press and hold both **PLAY/REPEAT** and **FF** on the unit for more than 5 seconds.
 - The power will shut off.
 - Please ignore "NO CASSETTE" warning.
- 3 Do "Initial Setup" on page 8.

Note to CABLE System Installer

This reminder is provided to call the CABLE (Cable TV) System Installers attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Reset Language, Channels, Clock,

1

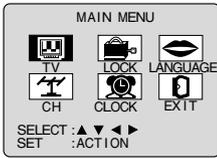


Press **ACTION*** to display MAIN MENU.


2

Language


- 1) Press ▲▼◀▶ to select language icon.

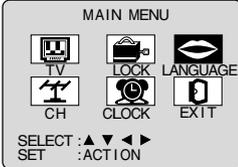


- 2) Press **ACTION** repeatedly.

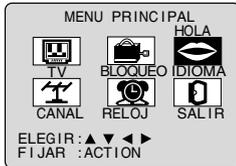

For Spanish

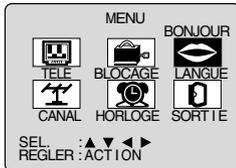

For French

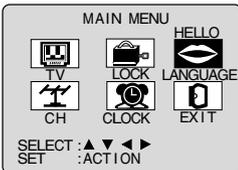


For English


- 3) Press ▲▼◀▶ to select "EXIT". Press **ACTION** to exit.

Channels

- 1) Press ▲▼◀▶ to select "CH".

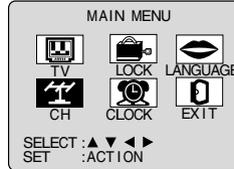

- 2) Press **ACTION**.

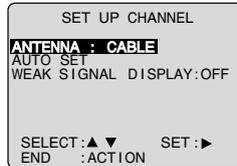


- 3) Press ▲▼ to select "ANTENNA," then press ▶ to set your antenna system ("TV" or "CABLE").
- 4) Press ▲▼ to select "AUTO SET," then press ▶.


• After Channel Auto Set is finished, Clock Auto Set will be performed. (If clock is set manually, Clock Auto Set will not be performed.)

Clock

- 1) Press ▲▼◀▶ to select "CLOCK".

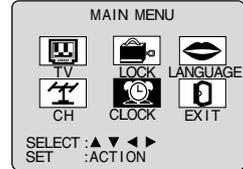

- 2) Press **ACTION**.

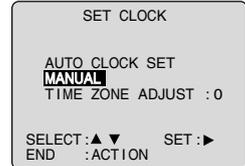

("TIME ZONE ADJUST" appears only when auto clock is set.)

- 3) Press ▲▼ to select "MANUAL" or "AUTO CLOCK SET" and press ▶.
- For Auto Clock Set, select "AUTO CLOCK SET," then press ▶.



- 4) Press ▲▼ and press ◀▶ to select and set the month, date, year, time, and DST (Daylight Saving Time).
- 5) Press **ACTION** twice to start the clock and exit this mode.

Time Zone Adjust


*Important:

If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.


Time Zone Adjust

(Only when Auto Clock is set.)



- 1) Press **▲▼◀▶** to select "CLOCK".

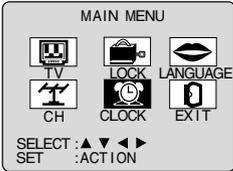


- 2) Press **ACTION**.

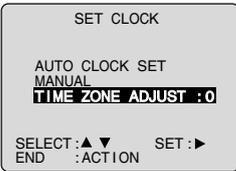

 - 3) Press **▲▼** to select TIME ZONE ADJUST and **press ▶** repeatedly to select mode. (See below.)

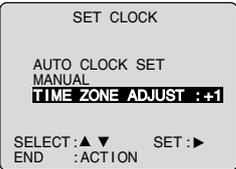


- 4) Press **ACTION** twice to exit.

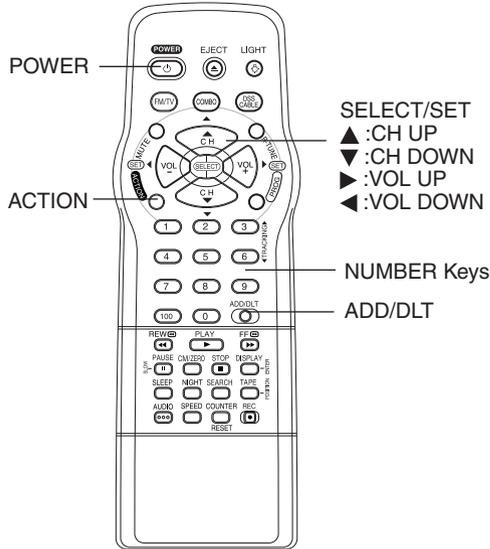


Basic Operation

ACTION key on the unit

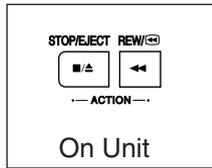

You can operate the menu screen using unit buttons. To display the menu, press STOP/EJECT and REW together with no tape inserted. To exit the menu, repeat above with or without tape inserted until normal screen appears.

Using ▲▼◀▶ keys

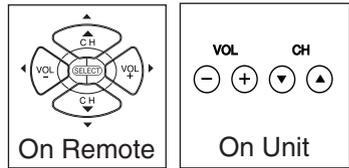


- ▲ : CH UP
- ▼ : CH DOWN
- ▶ : VOLUME UP
- ◀ : VOLUME DOWN

Whenever the menu or program screen is displayed, CHANNEL UP/DOWN function as ▲▼ and VOLUME UP/DOWN function as ◀▶ only.

Add or Delete a Channel

To add channel: Select channel with number keys and press ADD/HLT.

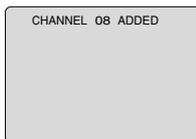

To delete channel: Select channel with CH ▲▼ or number keys and press ADD/HLT.




Playback a Tape

Record On a Tape


✓ Ready Check List

- All connections are made.
- Your unit is plugged in.

- 1** Insert a cassette.
- The unit power comes on automatically.

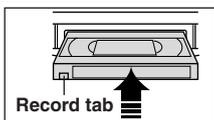

 To prevent tape jam, remove loose or peeling labels from tapes.



- 2** Press **PLAY***.
- Playback begins if cassette has no record tab.

■ Forward/Reverse scene search

- Press **FF** or **REW**
- Press **PLAY** to release.

■ Still (Freeze) picture

- Press **PAUSE/SLOW**
- Press **PLAY** to release.

■ Slow Motion picture

- Hold down **PAUSE/SLOW** in Still mode
- Press **PLAY** to release.

■ Frame by Frame picture

- Press **PAUSE/SLOW** in Still mode
- Press **PLAY** to release.

Notes

- These features work best in SLP mode.
- After the unit is in Still or Slow mode for 3 minutes, it will switch to Stop mode automatically to protect the tape and the video head.


■ Stop → Press **STOP**

■ Rewind tape → Press **REW** in Stop mode

■ Fast forward tape → Press **FF** in Stop mode

■ Eject tape → Press **EJECT** on the remote or **STOP/EJECT** on the unit

You can operate on the unit

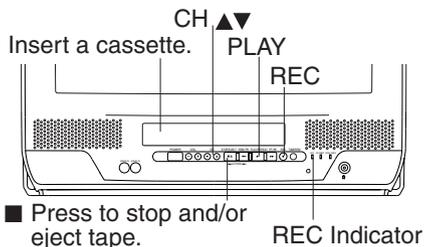

- 1** Insert a cassette with record tab
- The unit power comes on automatically.

- 2** Press **CH ▲▼** or number keys to select a channel.
- For "LINE" input, see bottom of next page.

 
- 3** Press **SPEED** to select recording speed (see page 4).
- SP = Standard Play
 - LP = Long Play
 - SLP = Super Long Play
 - Selected speed is displayed.

- 4** Press **REC*** to start recording.
- To edit out unwanted portions, press **PAUSE/SLOW** to pause and resume recording.
 - You cannot view another channel during recording.

■ Stop → Press **STOP**

■ One Touch Recording (OTR)


Press **REC** repeatedly to set the recording length (30 min. - 4 hours).



- The unit stops recording at a preset time.
- **PROG TIMER** indicator lights on the unit.

Notes


- After the unit has been in Rec Pause mode for 5 minutes, it will stop automatically to protect the tape and the video head.
- The remaining recording time of an OTR can be displayed by pressing **DISPLAY**.

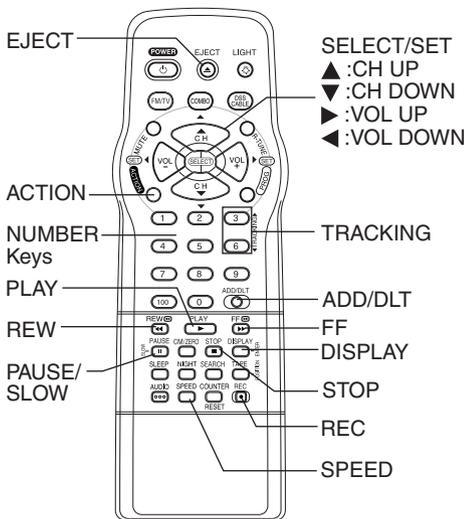

Copy Your Tapes (Dubbing)






***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Connections you'll need to make.

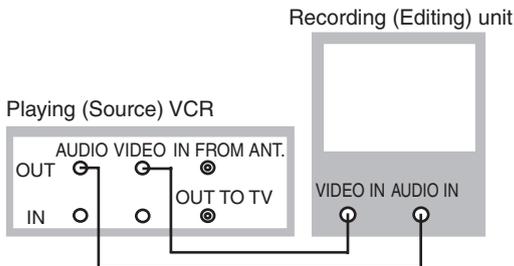

Playback (Source)

   Recording (Editing) unit

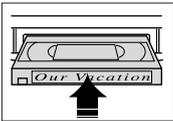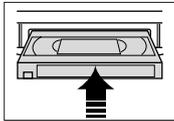
- | | | | | |
|---|---|--|---|--|
| 1 |  | Insert pre-recorded tape. |  | Insert blank tape with record tab.
• Dubbing tapes protected with Copy Guard will have poor quality results. |
| 2 | _____ | | Select "LINE" mode.
See "Selecting Input Mode" below. | |
| 3 |  | Press PLAY then PAUSE at starting point to put in Standby mode. |  | Press REC, then PAUSE/SLOW immediately to put in Standby mode. |
| (Perform operation of steps 4 and 5 on both units at same time.) | | | | |
| 4 |  | Press PLAY to start dubbing. |  | Press PAUSE/SLOW to start dubbing. |
| 5 |  | Press STOP to stop dubbing. |  | Press STOP to stop dubbing. |

Caution

- Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

Selecting Input Mode

 Method 1:
Press CH ▲▼. The display will change as follows.



Method 2:

- Press **ACTION** for MAIN MENU.
- Press ▲▼◀▶ to select "TV", then press **ACTION** for SET UP TV screen.
- Press ▲▼ to select "INPUT SELECT," and then press ▶ to select "TUNER" or "LINE".
- Press **ACTION** twice to exit this mode.

TV Operation

***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.


1 Press **POWER*** on the remote or unit.

2  **Use CH ▲▼ or number keys** to select a channel.

3  **Press VOL + or VOL -** to adjust volume.

NIGHT Mode

Color and picture intensity levels are adjusted so the screen is easier on your eyes during night time use.

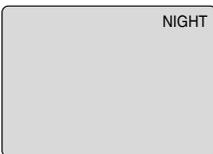

Press NIGHT to set NIGHT mode.


- NIGHT mode may be selected when watching TV or playing a tape.

Press NIGHT to cancel.

- Previous settings are restored.
- NIGHT mode is canceled when power is turned off or power failure occurs.

Ready Check List

- All connections are made.
- Your unit is plugged in.

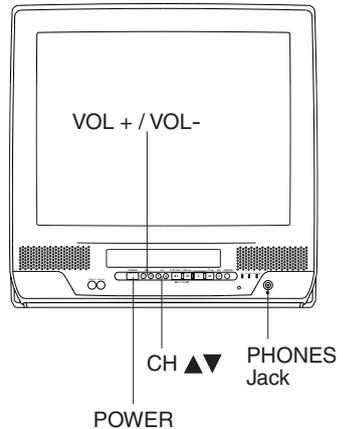

■ Using the 100 key

When selecting CABLE channels 100 to 125 with the number keys, first press the 100 key, and then enter the remaining two digits.

■ Rapid Tune

Press R-TUNE to display the last channel you were watching.

■ Audio Mute


Press MUTE to instantly mute the sound. Press again to restore the previous sound level.

■ Phones

Connect an earphone (not supplied) or headphones (not supplied) to the Phones Jack.

MTS Broadcast/TV Stereo System

Equipped with **dbx**[®] -TV Noise Reduction for true MTS reproduction. **dbx**[®] -TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**[®] is a registered trademark, and is licensed by **dbx**[®] Technology Licensing.

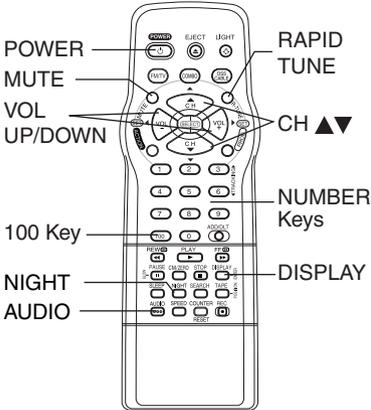

Receivable Broadcast Types


The following are possible audio broadcast types and on-screen displays. The signal being received is indicated with an “Ⓢ” mark while the selected audio mode is indicated with an arrow. To change the audio mode for these broadcasts, see the “Select Audio Mode for TV Viewing” section (below.)

Press DISPLAY to display the broadcast signal being received.




MTS Stereo and SAP broadcast

Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously. Select the STEREO or SAP audio mode.

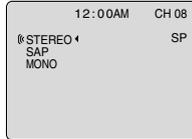


MTS Stereo broadcast

Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode. • If stereo broadcast is weak and the display flickers, select MONO audio mode for possibly better results.

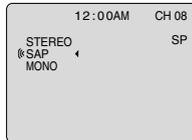

SAP broadcast

Secondary Audio Program (sub language). Select SAP audio mode for the sub language.

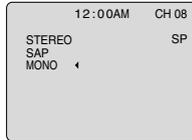

MONO broadcast

Normal monaural sound broadcast.

TV Operation


Select Audio Mode for TV Viewing

Press AUDIO to select the desired audio mode as described above.

(Arrow shows selection.)

- Each press of AUDIO will change the audio mode as shown below.
- “SAP” is selected with first press of AUDIO.

< Example >

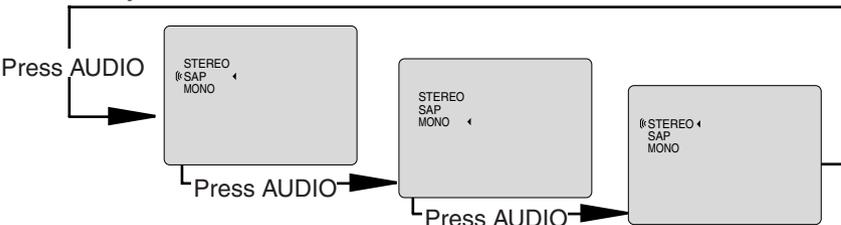

IMPORTANT NOTE:

- This stereo system is designed for TV viewing only. Recording and playback will always be in monaural.

TV Timer Features

ON-TIMER with Alarm

This unit can be set to automatically power on in one of 3 modes (TV, Playback, or FM radio). You can also combine the On-Timer with a one minute alarm that gradually increases in volume.


Ready Check List

- The clock is set to the correct time.

1 Press **PROG*** to display SET PROGRAM screen.




- 1) Press **▲▼** to select "ON TIMER".
- 2) Press **►** to display ON TIMER screen.

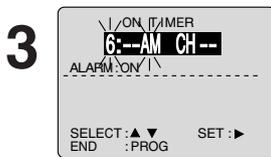


- 1) Press **▲▼** to select desired settings.
- 2) Press **►** to set the ON-TIMER TIME or ON-TIMER mode.

 - Make sure a tape is inserted if Playback mode is selected.
- See "FM Radio" on page 20 for instructions on how to preset FM stations.



- ON-TIMER mode selection order

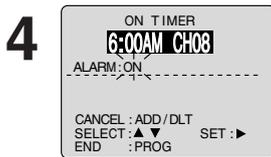

- Press **▲▼** to select ALARM "ON" or "OFF".


When "ON" is selected, an alarm will gradually increase in volume for one minute or until canceled by pressing any button (including VOL + -).

To Make Corrections, use **▲▼** and **◀▶** to move back and correct.

5 Press **PROG** to set ON TIMER.
 • "ON TIMER SET" is displayed.
 • ON TIMER Indicator lights on the unit.

To Cancel ON-TIMER,

Repeat steps 1 and 2. Then, **press ADD/DLT** to clear the time in step 3. Now, **press PROG** to end. "ON TIMER END" briefly appears on-screen.

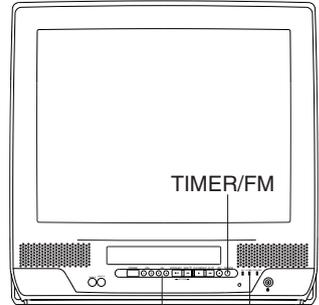

CH ▲▼ ON TIMER indicator

Note

- If no button on the remote or unit (including a button used to turn off the alarm) is pressed within 60 minutes after unit turns itself on, it will turn itself back off.

***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Sleep Timer


This unit can be set for auto power off.

Press **SLEEP** repeatedly to set SLEEP TIMER.

• Pressing **DISPLAY** with sleep timer set displays remaining time.

Press **SLEEP** repeatedly until "SLEEP TIMER 00" appears to cancel.

SLEEP TIMER 30
↓
SLEEP TIMER 60
↓
SLEEP TIMER 90
↓
SLEEP TIMER 00

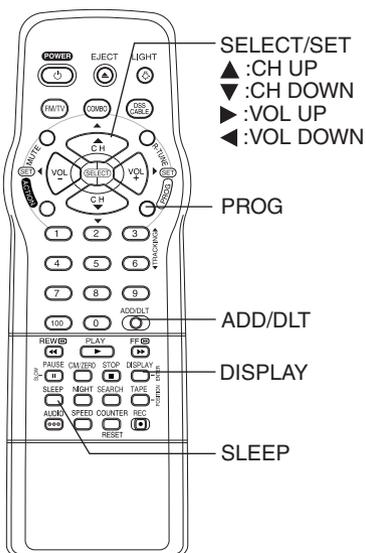


Instant Alarm

You can set a timer alarm up to 60 min. Useful when you are cooking, etc.


1 Press **TIMER/FM** on the unit to display the instant alarm CANCEL/SET screen.

2

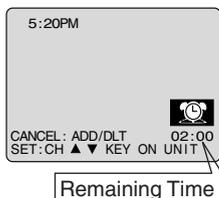

Press **CH ▲▼** on the unit with CANCEL/SET screen displayed to set alarm. (Time changes in the order shown left.)

 • Pressing **TIMER/FM** repeatedly on the unit will change display as follows.




To cancel, press **TIMER/FM** then press **ADD/HLT** on the remote while CANCEL/SET screen is displayed.

To increase timer in progress, repeat step 2. Time will be rounded up to next 1, 5, or 10 minute interval. (See chart left.)

<Example>

- If current time remaining is 12:15, countdown will restart from 15:00.
- If current time remaining is 9:15, countdown will restart from 10:00.

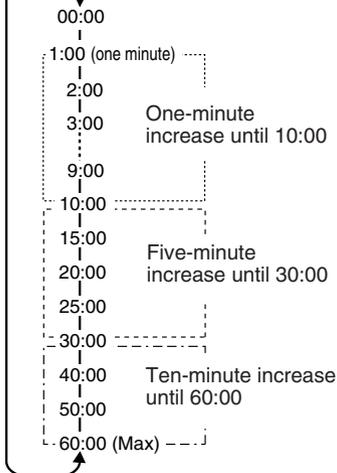

Note

- While timer function is in progress, you can change channels on the unit with **CH ▲▼** while "CANCEL/SET" screen is not displayed.

3 Alarm will sound at 0:00. Press any button to stop.

- The volume of the alarm gradually increases for one minute and then continues to beep until any button is pressed.

Closed Caption System


Closed Caption is ...

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also makes useful information from TV stations available to everyone.

Closed Caption Mode Feature


1 Press **ACTION*** to display MAIN MENU.

2

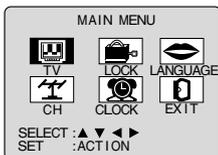


- 1) Press **▲▼◀▶** to select "TV".
- 2) Press **ACTION** to display SET UP TV screen.

3

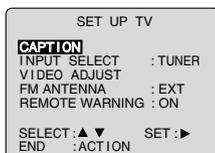

- 1) Press **▲▼** to select "CAPTION".
- 2) Press **>** to display CAPTION screen.

4

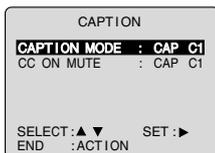

- 1) Press **▲▼** to select CAPTION MODE.
- 2) Press **>** repeatedly to select mode. (See left.)



5 Press **ACTION** three times to return to the normal screen.

Closed Caption Mode Selections

Caption Mode: CAP C1 or C2

A narration of selected TV programs is displayed. Check TV program listings for CC (Closed Caption) broadcasts.

Caption Mode: TEXT C1 or C2

The lower half of the screen will be blocked out. When the TV station broadcasts information, such as program listings, it will appear in this space.

Caption Mode: OFF

Closed Caption / Text narration will not be displayed.


NOTES :

- The closed caption or text signal may be broadcast over C1, C2, or both. Also, text contents can vary so you may wish to try different settings.
- While recording of one station and watching another is being done, Captioning will not be displayed.

Recording and Playing Back a Closed Caption/Text Program

- Record:** Record normally. Closed Caption/ Text signal, if present, is recorded automatically.
- Playback:** Start playback. Do above steps to select desired caption mode.

***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

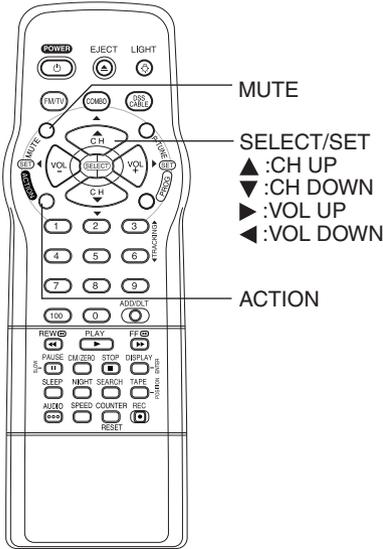

Caption On Mute Feature

Closed Caption narration, if available, is displayed when MUTE button is pressed for silence.

1 Press **ACTION** to display MAIN MENU.

2

1) Press ▲▼◀▶ to select "TV".
2) Press **ACTION** to display SET UP TV screen.

3

1) Press ▲▼ to select "CAPTION".
2) Press ▶ to display CAPTION screen.

 
4

1) Press ▲▼ to select CAPTION MODE.
2) Press ▶ repeatedly to select "OFF".

5

1) Press ▲▼ to select CC ON MUTE.
2) Press ▶ repeatedly to select desired mode.

- Each press of ▶ will change the display as shown left.
- The caption may be broadcast over CAP C1 or C2.



6 Press **ACTION** three times to return to the normal screen.

7 Press **MUTE** to mute the sound and display closed captioning.

- To cancel, press **MUTE** again.

FM Radio *Important: If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

FM Radio is ...

This unit has an FM radio with built-in antenna, 9 station preset, and a band range of 87.5 ~ 108.1 MHz. You can even set the On-Timer (page 16) to wake up to your favorite radio station.

FM Radio Setup

1 Press **FM/TV*** on the remote or **press TIMER/FM** twice on the unit to display FM radio mode.

2  Press a number key (1~9) to select the FM number.

3  **1) Press CH ▲▼** to select the desired radio station. (Each press changes frequency 200 kHz.)

 **2) Press ADD/HLT** to set the radio station.

Hold down CH ▲ or ▼ for a few seconds, then release to quickly scan for FM stations in your area.

• To cancel, **press CH ▲ or ▼** while in search mode.

To Make Corrections, select station with a number key, then do step 3 again.

To exit FM mode, press FM/TV on the remote or TIMER/FM twice on the unit.


Notes


- FM radio cannot be recorded on a Video cassette.
- You may get better reception by repositioning the unit.
- You cannot select FM Radio mode during playback or record, or while a blue back screen (PROG, ACTION, MENU) is displayed.
- Once stations are set, the selected station and current time are displayed when FM Radio mode is entered. To remove time, press DISPLAY. If DISPLAY is pressed again, the unit status screen appears.

FM ANTENNA Setup

Make sure FM tuning is done correctly (see FM Radio Setup).

1 Press **ACTION** to display MAIN MENU.

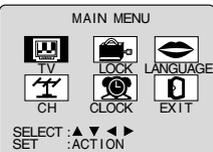2  **1) Press ▲▼◀▶** to select "TV".
2) Press ACTION to display SET UP TV screen.

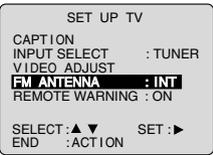3  **1) Press ▲▼** to select FM ANTENNA.
2) Press ▶ to select "INT (INTERNAL)" or "EXT (EXTERNAL)" whichever sounds the best.

■ For cable TV users → "INT"
■ For antenna users → "EXT"

4 Press **ACTION** twice to end setup.

How to use the FM radio

1 Press **FM/TV** on the remote or **press TIMER/FM** twice on the unit to display FM radio mode.

2  Press a Number key (1~9) to select a preset FM number (see "FM Radio Setup").


To cancel, press FM/TV on the remote or TIMER/FM twice on the unit.

To select Audio Mode for FM Radio


 Press **AUDIO** repeatedly to select "STEREO" or "MONO" in FM Radio mode.

Picture Adjustment


1 Press **ACTION** to display MAIN MENU.

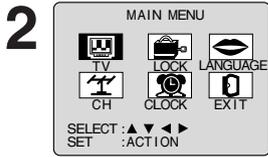


- 1) Press **▲▼◀▶** to select "TV".
- 2) Press **ACTION** to display SET UP TV screen.

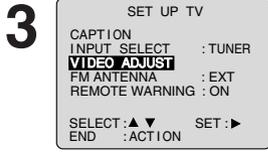

- 1) Press **▲▼** to select VIDEO ADJUST.
- 2) Press **▶** to display screen.

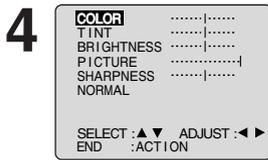


- 1) Press **▲▼** to select an adjustment item. (See below left.)
- 2) Press **◀▶** to adjust.

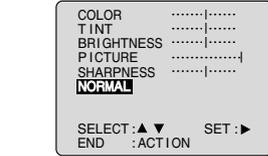

To Reset Picture Controls, press **▲▼** and **▶** to select and set "NORMAL". All controls return to their factory settings.

5 Press **ACTION** three times to exit.

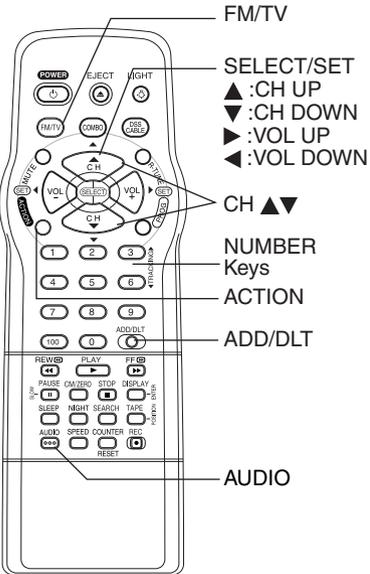

- ### Picture Adjustment
- **COLOR Control**
Adjust color intensity.
 - **TINT Control**
Adjust for natural flesh tones.
 - **BRIGHTNESS Control**
Adjust picture brightness.
 - **PICTURE Control**
Adjust picture intensity by adjusting both contrast and color level in the proper balance.
 - **SHARPNESS Control**
Adjust picture sharpness.

TV Operation

Timer Recording

You can set up to 8 programs to be recorded while you are away.

1 Press **PROG*** to display SET PROGRAM screen.



1) Press **▲▼** to select **TIMER PROGRAMMING**.
2) Press **►** to display screen.

 
• If a program is already in memory, press **▲▼**, and **►** to select an unused program number.



Press **▲▼** to select and **►** or **◀** to set the recording DATE.


- 1-31 = One time
- DAILY = MON-FRI
- WEEKLY SUN~SAT = Same time once a week

Example



Repeat step 3 to set:

- Start time, Stop time
- Channel (or LINE for outside source)
- Speed (SP, LP, SLP)

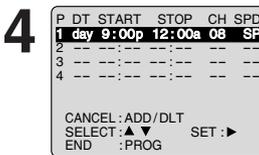

Press **PROG** to end the program.


To Enter More Programs, press **▲▼** to select and **►** to set a blank program number, and then repeat step 3.

5 Press **PROG** twice to exit this mode.

- If you're using a cable box, make sure that it is tuned to the desired channel and the power is left on for timer recording.
- PROG TIMER indicator lights on the unit.

Ready Check List

- All connections are made.
- Your unit is plugged in.
- The clock is set to correct time.
- The tape is long enough.
- The record tab is in place.

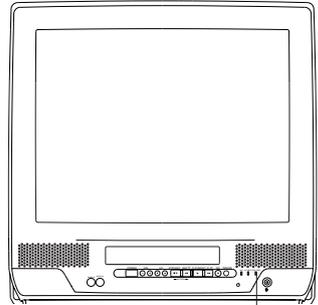

PROG TIMER indicator

***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Cancel a Timer Recording: (Recording is in progress)

Hold down STOP for a few seconds to cancel the Timer Recording.

- Any future daily or weekly recordings will be performed as programmed.

Review, Replace or Clear Program Contents : (Recording is not in progress)

1 Repeat steps 1 and 2 on page 22.

2

P	DT	START	STOP	CH	SPD
1	day	9:00p	12:00a	08	SP
2	8	10:00a	12:00p	125	SP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	LP

CANCEL : ADD/DLT
SELECT : ▲ ▼ SET : ►
END : :PROG

Press ▲▼ to select the desired program.

3 To Replace program...

DATE	/	START	STOP	CH
8 SAT		9:00P	12:00A	08
700DAY\				
SP				

SELECT : ▲ ▼ SET : ►
END : :PROG

- Press ► to display.
- Press ▲▼ to select and press ◀ or ▶ to set new program contents.
- Press PROG.

To Clear program...

P	DT	START	STOP	CH	SPD
1	day	9:00p	12:00a	08	SP
2	8	10:00p	12:00a	125	SP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	LP


CANCEL : ADD/DLT
SELECT : ▲ ▼ SET : ►
END : :PROG

Press ADD/DLT.

4 Press PROG twice to exit this mode.

Notes

- 2 minutes before Timer recording is performed, "PLEASE PREPARE FOR TIMER REC" appears and/or the PROG TIMER Indicator flashes. Be sure a cassette with record tab is loaded and the unit is in Stop mode.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a Timer Recording comes up during a normal recording or One Touch Recording (page 12), the Timer Recording will not be performed.
- If there is a power interruption of more than one minute, the recording may not be performed or continued.
- If "INCOMPLETE" appears after all items have been set, check all entries and make necessary corrections.

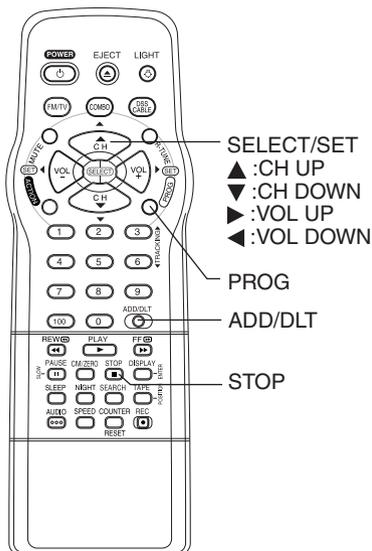

Tape Operation

Search System is ...

Each time a recording is made, an invisible index mark is placed on the tape. When timer recordings are made, program index and information are also included. These index marks can be used to access or scan recordings.

Index Search

Go directly to the desired recording.

1

INDEX SEARCH
ENTER INDEX NUMBER:1
USING 1-9 KEYS

FORWARD SEARCH:FF
REVERSE SEARCH:REW

EXIT:SEARCH

Press **SEARCH*** in Playback or Stop mode to display INDEX SEARCH screen, and then **press number keys** to select the recording number.

• To calculate number, see below.

Press **FF** or **REW** to start search.


2

INDEX SEARCH

FORWARD SEARCH:FF
REVERSE SEARCH:REW

Play begins at search end. To search forward or back 1 index, **press FF or REW** while screen left in displayed (10 sec.).

To cancel, press **PLAY**.

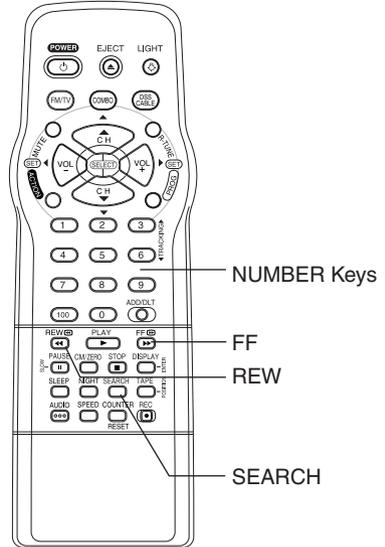

NUMBER Keys

FF


REW

SEARCH

■ To calculate the Index Number


Example 1:

 To go to rec. 2 from rec. 4, enter 3 and press REW.



Example 2:

 
To go to rec. 6 from rec. 2, enter 4 and press FF.



NOTE: ↓ indicates start points of each recording.

Notes

- Make each entry within 10 seconds, or the Index Search mode will be canceled.
- If Index Search is started very close to an index mark, that index mark may not be counted in the search.

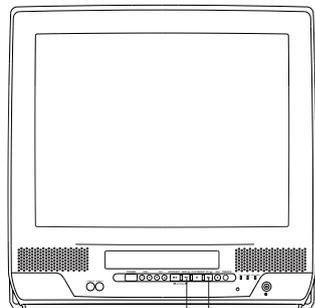

FF

REW

***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Auto Operation Functions

■ Auto Shut Off

No broadcast signal in TV (Only when Weak Signal Display is set to OFF), blank tape is Played for 5 minutes
→ Power turns off

- This feature is canceled if any button is pressed during above mode.

■ Auto Playback

Insert a tape in Power off mode
→ Power turns on


- Playback begins if tape has no record tab.

■ Auto Rewind

Tape reaches its end
→ Rewind → Stop

■ Playback Auto Eject (Repeat Play is "OFF")

Tape with no record tab reaches its end
Rewind → Stop → Eject

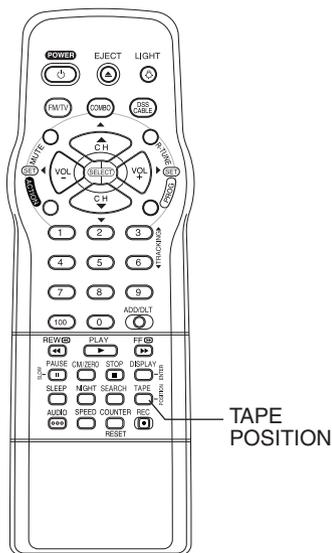

Tape Position Display

 
To find out present tape position.

Tape position is displayed for VHS-C Cassettes type, tapes under 30 minutes, and some other tapes, but the position is not correct.

1 Press TAPE POSITION to detect current tape position.

DETECTING TAPE POSITION

- "DETECTING TAPE POSITION" only appears the first time a cassette is inserted and it takes several seconds for correct indication to appear.



- The present tape position indication is displayed.

2 Press TAPE POSITION (or wait 5 seconds) to return to the normal screen.

Tape Operation (continued)


***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Zero Search

To quickly return to a specific tape counter location.

1 Press **COUNTER RESET*** during playback to display the Counter.

2

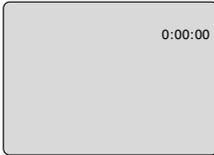

Press **COUNTER RESET** at the desired position to reset to "0:00:00."

3 Continue playback, rewind, or fast forward.

4 Press **STOP**.

5



Press **CM/ZERO** in stop mode to start **ZERO SEARCH**.

- Unit goes into FF or REW mode and stops at the last point the Counter was set to 0:00:00.

Repeat Play

Set to see a recording over and over.



In **PLAY** mode, press **PLAY/REPEAT** on the unit to turn "ON."



Repeat above to turn "OFF."

Note


- Playback repeats when tape end is reached or unrecorded portion over 30 seconds is detected.

Commercial Skip


By pressing the **CM/ZERO** button in Playback mode you can skip over 1 to 3 minutes of recorded tape in just a few seconds.

Press **CM/ZERO** repeatedly to select skip time in Play mode.

- No indication appears.

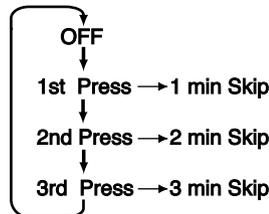


Special VCR Features

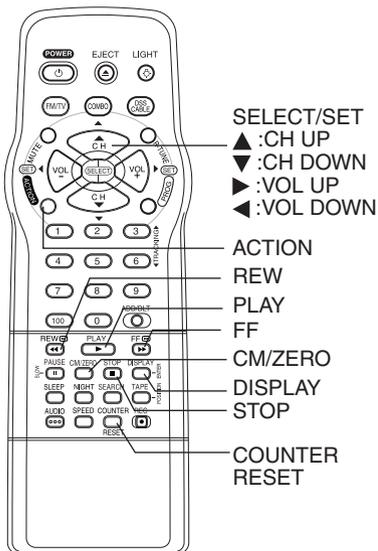


Weak Signal Display ON/OFF

When "ON" is selected, the picture is displayed even when a broadcast signal is weak or non-existent.

1 Press **ACTION** to display MAIN MENU.

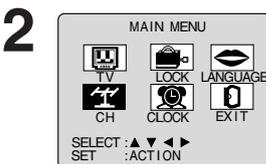

- 1) Press ▲▼◀▶ to select "CH."
- 2) Press **ACTION** to display SET UP CHANNEL screen.

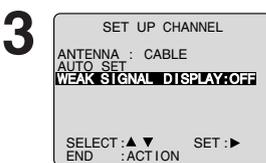


- 1) Press ▲▼ to select WEAK SIGNAL DISPLAY.
- 2) Press ▶ to set "ON" or "OFF."

Notes


- "ON" = Picture is displayed regardless of signal condition, and may not always be clearly visible.
- "OFF" = Screen turns solid blue when signal is absent or weak.
- If unit is connected to equipment which has blue back feature, selecting "ON" will have no effect on the other equipment.

4 Press **ACTION** twice to return to the normal screen.

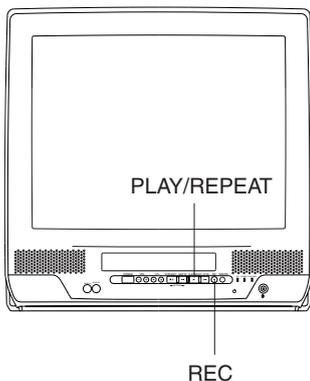

VCR Lock

All operations are prohibited except Timer recording and tape eject. Useful for families with small children.

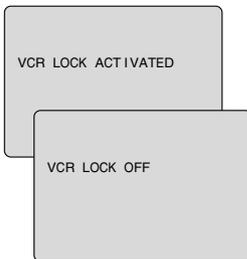

In stop mode, **hold down REC** on the unit without a cassette inserted for 7 seconds to turn "ON." Please ignore NO CASSETTE warning.

Repeat above with or without cassette to turn "OFF."

- VCR Lock is canceled automatically after about 24 hours if clock is set.

Special VCR Features (continued)


***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Remote Warning ON/OFF

When Universal Remote Control (page 32) is used, and this feature is set to "ON," a warning appears whenever an invalid key is pressed in DSS or Cable mode.

1 Press **ACTION*** to display MAIN MENU.

2

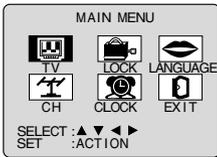

- 1) Press **▲▼◀▶** to select "TV."
- 2) Press **ACTION** to display SET UP TV screen.

3




- 1) Press **▲▼** to select REMOTE WARNING.
- 2) Press **▶** to set "ON" or "OFF."

• "REMOTE WARNING : OFF"

→ Remote warning will not appear even if invalid key is pressed.

4 Press **ACTION** twice to return to the normal screen.

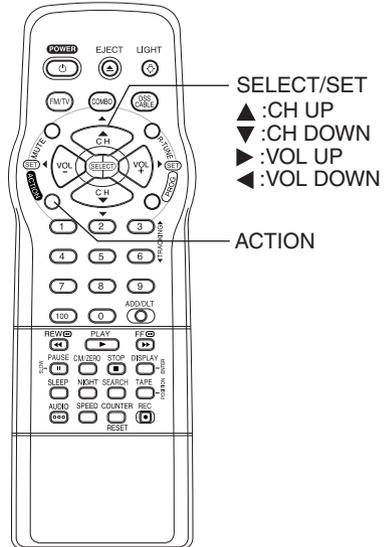

V-Chip Control Feature

Process of V-Chip Control Feature

Enter Code → **Setup** → **Blocking**

V-Chip Control Feature is...

This unit has a built-in V-Chip Control which allows you to block unwanted TV usage based on US MOVIES and US TV PROGRAMS Ratings.

Enter Secret Code

A 4-digit code must be entered to view a blocked program or change rating settings.

1 Press **ACTION** to display MAIN MENU.

2

MAIN MENU

TV	LOCK	LANGUAGE
CH	CLOCK	EXIT

SELECT : ▲▼◀▶
SET : ACTION

1) Press ▲▼◀▶ to select "LOCK."

2) Press **ACTION** to display screen.

3

LOCK

ENTER 4-DIGIT CODE

■---

ENTER : 0-9
END : ACTION

1) Press **NUMBER** keys to enter your secret code.

2) Enter same code again for confirmation.

To Make Corrections

Press ◀ repeatedly to move the cursor. Press number keys to make the correction.

- Step 2) not necessary when changing rating or secret code.
- Take care that you are not observed entering the secret code.

4

LOCK

CONFIRM 4-DIGIT CODE

RECOGNIZED

CHANGE CODE : ADD/DLT
CONTINUE : ▶
END : ACTION


Press ▶ to display US Ratings menu (see page 30).
Or
Press **ACTION** twice to exit.

Changing your secret code

- You will need your current code. Do steps 1~ 3. In step 4, press ADD/DLT to clear current code. Repeat steps 3 and 4 to enter new code.

Notes

- DO NOT forget your secret code.
- Once ratings are set, restricted tapes or programs cannot be accessed unless the secret code is entered.

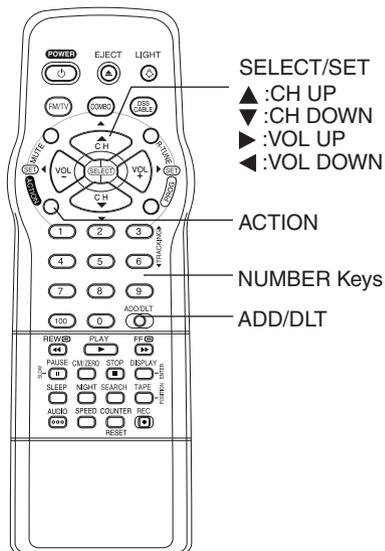

Advanced Operation

V-Chip Control Feature (continued)


If LOCK menu is not displayed, do "Enter Secret Code" steps on page 29.

Process of V-Chip Control Feature

Enter Code → Setup → Blocking

Setup US MOVIES Ratings

1

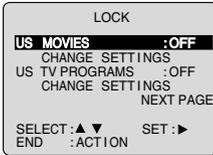

- 1) Press ▲▼* to select US MOVIES.
- 2) Press ▶ to set "ON" or "OFF."

- "ON" → V-Chip Control is activated.
- "OFF" → V-Chip Control is deactivated.

Note

- "NEXT PAGE" displays CANADIAN V-Chip setting menu. Not necessary except when viewing Canadian tapes or broadcasts.

Setup US TV PROGRAMS Ratings

1




- 1) Press ▲▼ to select US TV PROGRAMS.
- 2) Press ▶ to set "ON" or "OFF."

- "ON" → V-Chip Control is activated.
- "OFF" → V-Chip Control is deactivated.

Note


- "NEXT PAGE" displays CANADIAN V-Chip setting menu. Not necessary except when viewing Canadian tapes or broadcasts.

2

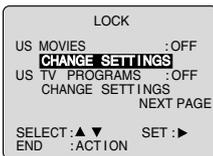


- 1) Press ▲▼ to select CHANGE SETTINGS.
- 2) Press ▶ to display screen.

2

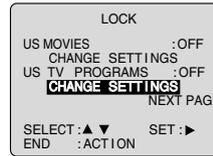

- 1) Press ▲▼ to select CHANGE SETTINGS.
- 2) Press ▶ to display screen.

3

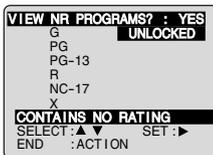


- 1) Press ▲▼ to select VIEW NR PROGRAMS?.
- 2) Press ▶ to set "YES" or "NO."

NR (Not Rated) PROGRAMS

Some movies, such as old movies or foreign movies usually have no ratings.

3

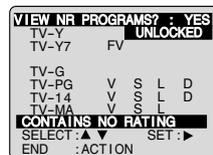


- 1) Press ▲▼ to select VIEW NR PROGRAMS?.
- 2) Press ▶ to set "YES" or "NO."

NR (Not Rated) PROGRAMS

Some TV shows, such as news, sports, weather, bulletins, emergency information usually have no ratings.


4

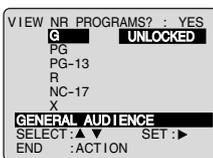

- Press ▲▼ to select and ▶ to set ratings to be blocked. (See ratings chart next page.)

- 5 Press ACTION to redisplay LOCK menu and continue with US TV PROGRAMS Ratings Setup (this page). Or, press ACTION three times to exit.

4

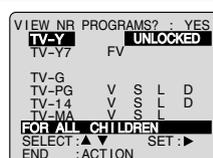

- Press ▲▼ to select and ▶ to set ratings to be blocked. (See ratings charts next page.)

Note

- You may select from standard TV ratings (chart 1), or customize to a specific content rating (chart 2).

- Ratings highlighted in Green will be blocked. Ratings in white letters will not be blocked.

- 5 Press ACTION three times to exit this mode.


***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Process of V-Chip Control Feature

Enter Code → Setup → Blocking

Blocking Message

<When V-Chip Control is activated>

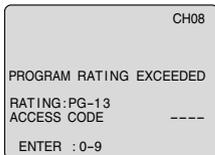

- If a program or movie exceeds the ratings you have set, a message will appear on a black background and sound is muted.


To View a Blocked Program / Movie [Temporarily Deactivate V-Chip Control]

Enter your secret code (ACCESS CODE) in the Blocking Message screen.

- V-Chip Control is reactivated when power is turned off or power failure occurs.

[Deactivate V-Chip Control]

Enter your secret code (steps 1-3 page 29). Then, set US MOVIES and/or US TV PROGRAMS to "OFF" using ▲▼ and ► keys. (Ratings set on page 30 is retained and will be in effect when V-Chip Control is activated again.)

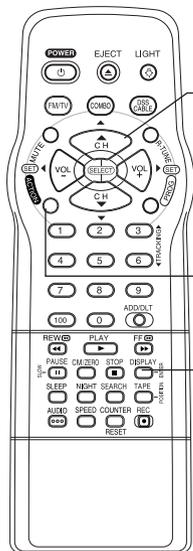

- SELECT/SET
- ▲ :CH UP
- ▼ :CH DOWN
- :VOL UP
- ◀ :VOL DOWN

ACTION

DISPLAY

US MOVIES RATINGS

G	GENERAL AUDIENCE: All ages admitted.
PG	PARENTAL GUIDANCE: Some material may not be suitable for children.
PG-13	PARENTS CAUTIONED: Some material may be inappropriate for children under 13.
R	RESTRICTED: Children under 17 must be accompanied by a parent or adult.
NC-17	OVER AGE 17 ONLY: No one 17 and under admitted.
X	ADULTS ONLY:

US TV PROGRAMS RATINGS: Chart 1

TV-Y	FOR ALL CHILDREN: Content specifically geared to young viewers ages 2-6.
TV-Y7	FOR AGE 7 AND OLDER: May contain mild physical or comedic violence which may frighten children under 7.
TV-G	GENERAL AUDIENCE: Contains little or no violence, strong language, or sexual dialogue or situations.
TV-PG	PARENTAL GUIDANCE: May contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
TV-14	PARENTS CAUTIONED: May contain sophisticated themes, sexual situations, strong language, and more intense violence.
TV-MA	MATURE AUDIENCE: May contain mature themes, profane language, graphic violence, and sexual situations.

Advanced Operation

US TV PROGRAMS RATINGS: Chart 2

FV	Fantasy Violence
V	Violence
S	Sexual Situations
L	Adult Language
D	Sexually Suggestive Dialogue

Cable Box Universal Remote Control Feature

Universal Remote Control is...

The Remote Control may be set up to control some basic DSS or Cable box functions.

The Universal Remote Control Setup

1 Find your DSS box or Cable box Brand Code Number from one of the charts on the next page.

2 Setup remote. Hold down **DSS CABLE** and press number keys to enter code.

- For code 100 or greater, first press 100 key, then the remaining digits. E.g. for 102, press 100, then press 0, and then press 2.

3 Confirm code entry. Press **POWER** to turn selected unit ON or OFF.

- See below for controllable functions in each mode.

Notes

- Please repeat the Universal Remote Control Setup after replacing remote control batteries.
- The remote control will not operate all DSS receivers or Cable Boxes made by the manufacturers listed. If you get no results, your particular brand cannot be controlled.

Using the Universal Remote Control

Once the remote control has been properly set up, you can select COMBO, DSS or CABLE mode depending on which functions you wish to control. (See below.)


Press **COMBO** or **DSS CABLE** on the remote control to select the desired mode. (See below for buttons available in each mode.)

Set to COMBO:

- All TV and VCR functions.

Set to DSS CABLE:

- Basic VCR functions, e.g. PLAY, REC, etc.
- CABLE/DSS functions, e.g. POWER, ENTER, number keys (except 100 key), CH UP/DOWN.

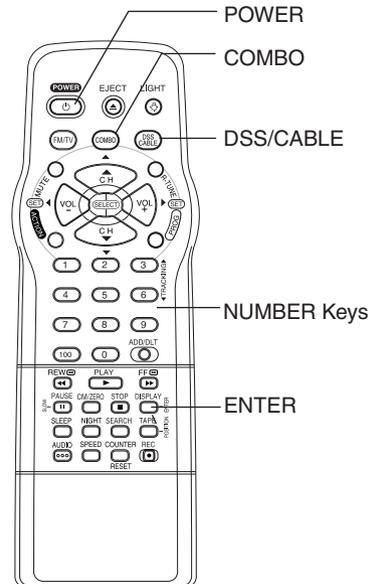

***Important:** If a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

DSS Brand Code Numbers

Toshiba	92	Magnavox/Uniden 2	95	Sony	98, 105
Hitachi/Hughes	93	Panasonic	96		
Magnavox/Uniden 1	94	RCA	97		

Cable Box Brand Code Numbers

Archer	05, 06, 01, 44, 63, 91, 126	Movietime	32, 39, 42, 44, 126, 38, 40	Sheritech	27
Cabletenna	01, 44, 63, 91, 126	NEC	38, 40, 32	Signal	26, 112
Cableview	63, 44, 42, 30, 52, 04, 124, 126	NOVAVISION	08, 09, 61, 53, 87	SL Marx	32, 40, 42, 06, 43, 44, 52, 63, 126
Century	51, 44, 59, 75, 126	NSC	38, 40, 32	Sprucer	16, 17, 97, 109
Citizen	63, 44, 42, 30, 52, 04, 124, 126	Oak	46, 11, 129	Standard Components	32, 39, 42, 44, 126
Curtis	08, 09, 61, 53, 87	Oak Sigma	46, 11, 129	Stargate	32, 40, 63, 44, 42, 30, 52, 04, 06, 124, 126
Diamond	01, 44, 63, 91, 126	Panasonic	16, 17, 97, 109	Sylvania	19
Drake	67	Philips	07, 13, 20, 23, 24, 50, 128, 129	Teknika	74
Eagle	13, 22, 58, 62, 20, 40, 26, 107	Pioneer	05, 06	Telecaption	77, 127
Eastern	28, 130	Pulsar	63, 44, 42, 30, 52, 04, 124, 126	Teleview	32, 40, 42, 06
GC Brand	63, 44, 42, 30, 52, 04, 124, 126	Quest	05, 06	Texscan	18, 19
Gemini	04, 124	Radio Shack	51, 44, 59, 75, 126	Tocom	33, 34, 01, 42, 66, 91
General Electric	57, 01	RCA	16, 17, 97, 109	Toshiba	36
General Instruments	01, 02, 03, 04, 34, 55, 83, 106, 65, 67, 68, 115, 117, 118, 124, 91	Realistic	51, 44, 59, 75, 126	Uniden Satellite	65
Hamlin	14, 15, 28, 41, 102, 103, 104, 108, 130	Recoton	51, 44, 59, 75, 126	Unika	01, 44, 63, 91, 126
Hitachi	31	Regal	14, 15, 28, 41, 102, 103, 104, 108, 130	Universal	42, 43, 44, 52, 63, 126
Jasco	04, 124	Regency	28, 130	Videoway	07, 23, 50, 129
Jerrold	01, 02, 03, 04, 34, 55, 83, 106, 65, 67, 68, 115, 117, 118, 124, 91	Rembrandt	01, 32, 39, 42, 44, 63, 126	Vid Tech	64
Macom	31	Salora	68	Vidtek	64
Magnavox	26, 112	Samsung	05, 32, 40, 42, 06	Viewstar	13, 22, 58, 62, 20, 40, 26, 107
Matsushita	16, 17, 97, 109	Scientific Atlanta	08, 09, 61, 53, 87	Zenith	07, 23, 50, 129


Notes

- In DSS or CABLE mode, it may be necessary to press ENTER after pressing number keys for channel selection.
- In DSS or CABLE mode, POWER, CH Up/Down, NUMBER Keys, ACTION, PROG, DISPLAY/ENTER, SEARCH, R-TUNE, FM/TV, or ADD/DLT are not available. Press COMBO to use these functions.
- Depending on your DSS receiver or Cable box brand, some of the functions listed may not be remote controllable.
- Some DSS receiver or Cable box brands require you to turn on the power manually.
- Due to changes in infra-red commands used by manufacturers, some brands have several codes. If your unit does not respond to the first code, please try the next one.

On-Screen Display (OSD)

VCR Status & Clock Display

Press **DISPLAY** to display or remove the overlay.

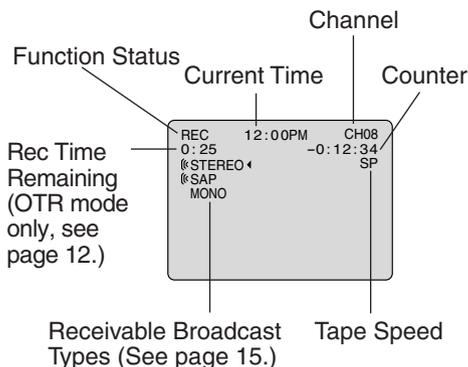


Blue Screen Display

Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with the Weak Signal Display set to "OFF" (see page 27), the screen will turn solid blue.

Channel & Function Display

When a function button is pressed (PLAY, FF, etc.) or you change channels, the unit mode or channel number will be displayed.

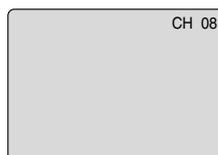

Warning and Instruction Displays

These displays will alert you to a missed operation or provide further instructions.

OSD	CAUTION	Page
PLEASE SET CLOCK BY PRESSING ACTION KEY	If you attempt to set or review a Timer Recording, or set the On-Timer and the Clock is not set...	8 - 11
CHECK CASSETTE RECORD TAB	If you press REC, and a cassette is inserted with no record tab...	3, 12
TO CANCEL TIMER REC HOLD DOWN STOP KEY FOR APPROX 3 SEC	If you press STOP during a Timer Recording...	23
NO CASSETTE	If you press PLAY, FF, REW, or REC without a cassette inserted...	12
PLEASE PREPARE FOR TIMER REC	If the unit is not in Stop mode or a cassette with record tab is not inserted two minutes before a Timer Recording is about to begin...	22 - 23
VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL END: PLAY	If head cleaning becomes necessary while playing back a tape...	4
VCR LOCK ACTIVATED	If you press a function button other than STOP/EJECT or POWER while the unit is in VCR Lock mode...	27

Before Requesting Service

Check the following points once again if you are having trouble with your unit.

Power	CORRECTION
No power...	<ul style="list-style-type: none"> • Completely insert Power Plug into an AC outlet. • Set POWER button to ON.
Monitor	CORRECTION
No picture or sound...	<ul style="list-style-type: none"> • Make sure your antenna system (TV or CABLE), is correctly set. (P.8) • Completely insert Power Plug into an AC outlet. • Set POWER button to ON.
Poor picture with normal sound...	<ul style="list-style-type: none"> • Adjust BRIGHTNESS, SHARPNESS, and PICTURE controls in the SET UP TV menu. (P.21)
Poor sound with normal picture...	<ul style="list-style-type: none"> • Adjust VOLUME control. (P.14)
Poor TV reception...	<ul style="list-style-type: none"> • Adjust SHARPNESS and PICTURE controls in the SET UP TV menu. (P.21)
No color or poor color...	<ul style="list-style-type: none"> • Adjust TINT and COLOR controls in the SET UP TV menu. (P.21)
Ghost (multiple) images...	<ul style="list-style-type: none"> • Install a directional antenna.
TV programs cannot be watched...	<ul style="list-style-type: none"> • Make sure the selected channel is in unit's memory. (P.10, 11)
Channel cannot be selected...	<ul style="list-style-type: none"> • Only the channel being recorded can be viewed on this unit.
VCR	CORRECTION
TV program cannot be recorded...	<ul style="list-style-type: none"> • Make sure your antenna system (TV or CABLE), is correctly set. (P.8) • Make sure cassette record tab is intact. (P.3)
Timer recording cannot be performed...	<ul style="list-style-type: none"> • Check that clock is set to current time and date. • Make sure DSS/CABLE box (if used) is left on and tuned to channel to be recorded. • Set recording Start/Stop times correctly. (P.22-23) • Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during a Timer Recording, even after power is restored.
No playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> • Adjust TRACKING control in either direction. (P.4) • Try Head Cleaning. (P.4)
VCR cannot be controlled...	<ul style="list-style-type: none"> • Make sure VCR LOCK is set to off. (P.27) • Make sure unit is not in a Timer Record operation.
Remote Control	CORRECTION
Unit cannot be controlled...	<ul style="list-style-type: none"> • Aim remote at remote sensor on unit (P.7) so that signal is unobstructed. • Inspect the remote batteries. (P.3) • Make sure VCR LOCK is set to off. (P.27) • Exposing unit remote sensor to direct fluorescent or outdoor light may cause signal interference.
ACTION, PROG and FM/TV buttons cannot be selected...	<ul style="list-style-type: none"> • Check remote batteries.
Miscellaneous	CORRECTION
Video cassette cannot be inserted...	<ul style="list-style-type: none"> • Insert the cassette window side up; record tab facing you.
Video cassette cannot be removed...	<ul style="list-style-type: none"> • Completely insert Power Plug into an AC outlet.
Tape cannot be ejected or inserted...	<ul style="list-style-type: none"> • Try ejecting or inserting the tape again after turning POWER off, then back on.
Video cassette ejects when a recording is started, or the power is turned off for timer recording...	<ul style="list-style-type: none"> • Make sure cassette record tab is intact. (P.3)
In Stop mode, the VCR motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> • To enable Quick Play mechanism, the VCR cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.
VCR cannot be controlled...	<ul style="list-style-type: none"> • Make sure VCR LOCK is set to off. (P.27)

If you cannot resolve the problem, please call the Customer Satisfaction Center for product assistance at 1-800-211-PANA(7262).

To locate an authorized servicenter call toll free 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com.

Limited Warranty

PANASONIC CONSUMER ELECTRONICS
COMPANY, DIVISION OF MATSUSHITA ELECTRIC
CORPORATION OF AMERICA
One Panasonic Way Secaucus, New Jersey 07094

PANASONIC SALES COMPANY, DIVISION OF
MATSUSHITA ELECTRIC OF PUERTO RICO, INC.,
AVE. 65 de Infantería, Km. 9.5 San Gabriel Industrial
Park, Carolina, Puerto Rico 00985

Panasonic/Quasar Video Products Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product	Parts	Labor	Service	Contact Number
Camcorder	One (1) Year (except CCD Image Sensor) CCD Image Sensor - 6 (Six) Months	Ninety (90) Days Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
DVD/VCR Deck, A/V Mixer	One (1) Year	Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
TV/VCR, TV/DVD, TV/DVD/VCR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	Carry-In: 21" CRT and Smaller In-Home or Carry-In: 22" CRT and Larger	1-800-211-PANA(7262)
TV/HDR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	In-Home or Carry-In	1-888-843-9788
Rechargeable Batteries (in exchange for defective item)	Ten (10) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Tape (in exchange for defective item)	Five (5) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Memory Cards (in exchange for defective item)	Ninety (90) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in or mail-in your product or arrange for in-home service, as applicable, during the warranty period.

If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

Carry-In, Mail-in or In-Home Service

For Carry-In, Mail-In or In-Home Service (as applicable) in the United States call toll free contact number listed above or visit Panasonic Web Site: <http://www.panasonic.com>

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

In-Home service, if applicable, requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer, loss of media or images, data or other memory or recorded content. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer Services Directory

*For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm; Saturday-Sunday 9 am-7 pm, EST. or send e-mail : consumerproducts@panasonic.com
For hearing or speech impaired TTY users, TTY : 1-877-833-8855*

*Web Site: <http://www.panasonic.com>
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.*

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
For hearing or speech impaired TTY users, TTY : 1-866-605-1277
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(Monday-Friday 6 am-5 pm; Saturday 6 am-10:30 am, PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:

**Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,
Carolina, Puerto Rico 00985
Phone (787)750-4300 Fax (787)768-2910**

As of August 2002

Spanish Quick Use Guide/Guía para rápida consulta

Conexiones/Configuración Inicial

Conecte por favor todas las conexiones del cable o de la antena antes de turing potencia.

Conectando

Para Ant./Cable


Conecte Ant./Cable a la entrada de antena de la TV (VHF/UHF).

Para Sistema Digital de Satelite (DSS)/ Convertidor de cable

Conecte la salida del convertidor de cable la "VHF/UHF" con el RF cable.

Realizando Configuración Inicial

- 1 Presione COMBO para mode del combo. Tape el cable electrico de la unidad en el enchufe de pared de la CA. POWER de la prensa en el telecontrol o la unidad. La unidad se adelanta y comienzo auto del canal y del reloj.

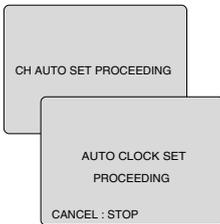

Si usa convertidor de cable, enciendala y seleccione el Servicio Publico de Canales de Television (PBS) en su horario de uso o tiempo de su zona. Si utiliza receptor DSS este debe de estar apagado.

2



Selecciones se realizaran automaticamente cuando la configuracion termine, la pantalla siguiente aparecera.



Si "AUTO CLOCK SET IS INCOMPLETE" aparece en pantalla, coloque el tiempo usando el procedimiento manual (MANUAL CLOCK SET), vealo enseguida.

Nota

- Los botones de funciones son inoperantes durante la Configuración inicial.
- Para retirar un cassette durante el Ajuste automático, pulse EJECT dos veces en el control remoto o STOP dos veces en el VCR. En este caso, los ajustes se deben realizar manualmente. (Vea la p.10 de Libro de operaciones avanzadas).
- Dependiendo de las condiciones, puede que el Ajuste automático del reloj tarde más de 30 minutos. En ese caso, pulse STOP para detener la configuración y realice los ajustes manualmente. (Vea la p.10 de Libro de operaciones avanzadas).

Ajuste Manual del Reloj

Si el ajuste automático del reloj no se ha completado, ajuste el reloj manualmente de la siguiente manera:

- 1) Presione la tecla ACTION en el control remoto para visualizar la pantalla del menú RELOJ.
- 2) Presione ▲▼ para seleccionar el mes y ► para ajustar. De la misma forma, seleccione y ajuste la fecha, año, hora y DST (Hora de Verano).
- 3) Presione dos veces la tecla ACTION para poner el RELOJ en marcha y salir.

Ajustar de nuevo el reloj

- 1 Presione ACTION para exhiba el menú.

2



Presione ▲▼◀▶ para seleccionar "RELOJ," y luego presione ACTION.

3



Presione ▲▼ para seleccionar "MANUAL" y luego presione ▶.

4



Presione ▲▼ y ◀▶ para seleccionar y ajustar la fecha.

5

 
Presione ACTION dos veces para que el reloj comience a funcionar y salir desde este modo.

Operaciones básicas para la reproducción

- 1 Inserte un casete.**
 - El videograbador combinado se enciende automáticamente.
- 2 Presione PLAY.**
 - La reproducción comienza automáticamente si el casete no tiene la lengüeta para prevención de grabación.
 - Para encontrar una escena en particular Búsqueda hacia adelante → Presione FF Búsqueda hacia atrás → Presione REW
 - Para ver una imagen fija (congelada) → Presione PAUSE/SLOW
 - Para ver en cámara lenta → Mantenga pulsado el botón PAUSE/SLOW en el modo de imagen fija
 - Para ver imágenes cuadro a cuadro → Presione PAUSE/SLOW en el modo de imagen fija
 - Para parar → Presione STOP
 - Para rebobinar la cinta → Presione REW
 - Para hacer avanzar la cinta rápidamente → Presione FF
 - Para expulsar la cinta → Presione EJECT en el control remoto o STOP/EJECT en el videograbador combinado

Operaciones básicas para la grabación

- 1 Inserte un casete con la lengüeta para prevención de grabado.**
 - El videograbador combinado se enciende automáticamente.
- 2 Seleccione el canal.** Presione CH ▲▼ o las teclas numéricas correspondiente.
- 3 Seleccione la velocidad de grabación.** Presione SPEED.
 - SP = reproducción normal
 - LP = reproducción larga
 - SLP = reproducción super larga
 La velocidad seleccionada debe aparecer en la pantalla.
- 4 Comience la grabación.** Presione REC.
 - Para editar partes no deseadas de una grabación, presione PAUSE/SLOW para hacer una pausa durante la grabación.
 - No podrá ver otro canal durante la grabación.
 - Para parar → Presione STOP.
 - El videograbador combinado deja de grabar a una hora prefijada.** (Grabación de un toque) Presione REC repetidamente para ajustar la hora de grabación (30 min - 4 horas.)



Grabación con temporizador

- 1 Exhiba FIJAR PROGRAMACION.** Presione PROG.



Exhiba TEMPORIZADOR.

- Presione ▲▼ para seleccionar.
- Presione ► para exhibir.

 
- Si ya existe un programa en la memoria, presione ▲ ▼ y ► para seleccionar un número de programa sin usar.



Ajuste la fecha de grabación.

- Presione ▲▼ para seleccionar.
- Presione ► o ◀ para ajustar.


- 1 - 31 = Grabación única
- DIARIO = a la misma hora de lunes a viernes
- SEMANTAL = a la misma hora una vez a la semana



Repita el paso 3 para ajustar:

hora de comienzo, hora de parada, canal (o LINEA para una fuente exterior), velocidad (SP, LP, SLP)

- 4 Termine el programa.** Presione PROG.

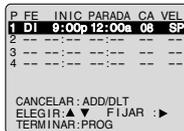

Para introducir más programas.

presione ▲▼ y ► para seleccionar y ajustar el número de programa en blanco, y luego repita los pasos 3 y 4.

- 5 Salga de este modo.** Presione PROG dos veces.

- Si está usando un decodificador de TV cable, asegúrese que se encuentra en el canal deseado y que la alimentación queda conectada para grabar con temporizador.
- El indicador PROG TIMER se enciende en el videograbador combinado.

Index

A	
Accessories	3
Audio Mute	14
Auto Operation Functions	25
B	
Before Requesting Service	35
Blocking Message	31
Blue Screen Display	34
C	
Cable Box Universal Remote Control Feature ...	32-33
Caption On Mute Feature	19
Channel & Function Display	34
Channel (SET UP CHANNEL)	10
Clock (SET CLOCK)	10
Closed Caption Mode Feature	18
Commercial Skip	26
Connections	8
Copy Your Tapes (Dubbing)	13
Customer Services Directory	37
D	
DST (Daylight Saving Time)	4
E	
Eject Tape	12
Enter Secret Code	29
F	
Fast Forward	12
Features for a Quality Picture	4
FM Radio	20-21
Forward Search	12
Frame by Frame Advance	12
Front Panel Indicators	7
H	
Head Cleaning	4
I	
Important Safeguards and Precautions	2
Index Search	24
Initial Setup	8
Instant Alarm	17
L	
Language	10
Limited Warranty	36-37
Loading the Batteries	3
Location of Controls	6-7
M	
MTS Broadcast/TV Stereo System	15
N	
NIGHT Mode	14
O	
ON-TIMER with Alarm	16
One Touch Recording	12
P	
Phones	14
Picture Adjustment	21
Playback	12
R	
Rapid Tune	14
Rec(ord)	12
Receivable Broadcast Types	15
Record/Playback Speed Settings	4
Remote Control Buttons	6
Remote Warning ON/OFF	28
Repeat Play	26
Reset all unit Memory Functions	9
Reverse Search	12
Rewind	12
S	
Selecting Input Mode	13
Select Audio Mode for TV Viewing	15
Sleep Timer	17
Slow Motion	12
Spanish Quick Use Guide	38-39
Special VCR Features	27-28
Specifications	4
Still (Freeze) Picture	12
Stop	12
T	
Tape Erasure Prevention	3
Tape Position Display	25
Timer Program Review, Replace, Clear	23
Timer Recording	22
Timer Recording Cancellation	23
Time Zone Adjust	11
TV Operation	14
TV Timer Features	16-17
U	
Unit, Front View	7
Unit, Rear View	7
Using the 100 key	14
US MOVIES RATINGS	31
US TV PROGRAMS RATINGS	31
V	
V-Chip Control Feature	29-31
VCR Lock	27
VCR Status & Clock Display	34
W	
Warning and Instruction Displays	34
Weak Signal Display ON/OFF	27
Z	
Zero Search	26

LSQT0666A

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus,
New Jersey 07094

Panasonic Sales Company ("PSC"),
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infanteria. Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985



Printed in Indonesia
LSQT0666A
S0103-0