


Palmcorder®  
MultiCam™ Camcorder



**Panasonic®**

Camcorder  
**Operating Instructions**

Model No. **PV-L672**

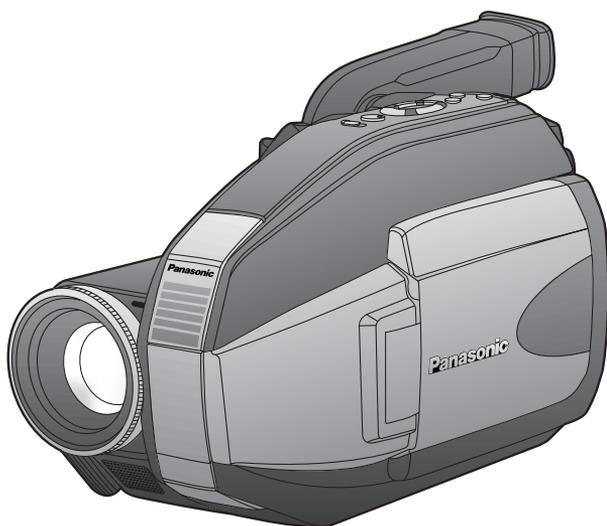

**MultiMediaCard™** 

Please read these instructions carefully before attempting to operate this product.  
Please save this manual.

**Guía para rápida consulta en español está incluida.**

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

LSQT0607A

Getting Started

Basic Operation

Special Features

For Your Information

# Things You Should Know

## Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, it will bring you years of enjoyment. Please take time to fill in the information to the right. The serial number is on the tag located on the rear side of your Camcorder. Be sure to **retain this manual** as your convenient Camcorder information source.

Date of Purchase

Dealer Purchased From

Dealer Address

Dealer Phone No.

Model No.

Serial No.

## Unpack your Camcorder

These accessories are provided in order to set up or use your Camcorder.

1 pc. AC Adaptor (PV-A20)  
with DC Power Cable  
(page 10)



1 pc. Audio/Video Cable  
(LSJA0390) (pages 21, 22)



1 pc. Battery Pack  
(PV-BP18) (pages 9, 10)




1 pc. Shoulder Strap  
(LSFC0012) (page 12)



1 pc. CR2025 Clock Battery  
(VSBW0004)  
(installed in Camcorder)  
(page 51)



1 pc. VHS PlayPak  
(PV-P1/VYMW0009) and  
one "AA" battery (page 21)

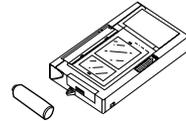


1 pc. Lens Cap (LSYK0817)  
with Lens Cap Strap  
(LSGQ0049) (page 12)



1 pc. Digital PhotoShot Disk  
for Windows 95/98/Me/2000  
(LSFT0490) (page 42)



 1 pc. PC Connection Cable  
(RS232C-2.5P)  
(LSJA0276) (page 42)



SD is a trademark of the SD Card Association.

MultiMediaCard is a registered trademark of the MultiMediaCard Association.

Microsoft and Windows are registered trademarks of Microsoft in the United States and other countries.

All product/brand names are trademarks or registered trademarks of the respective holders.

# Things You Should Know

## Safety Precautions

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.**

Your Compact VHS Camcorder is designed to record and play back in Standard Play (SP) and Super Long Play (SLP) modes. You can also play a Compact VHS Camcorder recording on your VHS VCR using the supplied VHS PlayPak.

This Camcorder is equipped with the **HQ** System to provide excellent video pictures, and is compatible with standard VHS equipment.

It is recommended that only cassette tapes that have been tested and inspected for use in VCR machines with the **VHS-C** and/or **VHS** mark be used.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</b>		
	This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.	
	This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.	

The above markings are located on the appliance's bottom cover.

### Declaration of Conformity

Model Number : **PV-L672**  
Trade Name : Panasonic  
Responsibility Party : Matsushita Electric Corporation of America  
Address : One Panasonic Way Secaucus New Jersey 07094  
Telephone Number : 1-800-211-PANA(7262)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Warning** : To assure continued FCC compliance, the user must use only provided shielded interfacing cable with ferrite cores when connecting to computer. Also, any unauthorized changes or modifications to this equipment would void the users authority to operate.

**Note:** This equipment has been tested and found to comply with Part 15 and part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver.

If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.


This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.

# Important Safeguards

- 1. Read Instructions** – All the safety and operating instructions should be read before the unit is operated.
- 2. Retain Instructions** – The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** – All warnings on the unit and in the operating instructions should be adhered to.
- 4. Follow Instructions** – All operating and maintenance instructions should be followed.
- 5. Cleaning** – Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for cleaning.
- 6. Attachments** – Do not use attachments not recommended by the video product manufacturer as they may be hazardous.
- 7. Water and Moisture** – Do not use this video unit near water – for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
- 8. Accessories** – Do not place this video unit on an unstable cart, stand, tripod, bracket, or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 9. Ventilation** – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place the video unit on a bed, sofa, rug, or other similar surface, or near or over a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 10. Power Sources** – This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.



- 11. Grounding or Polarization** – This video unit may be equipped with either a polarized 2-wire AC (Alternating Current) line plug (a plug having one blade wider than the other) or 3-wire grounding type plug, a plug having a third (grounding) pin.  
The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.  
The 3-wire grounding type plug will fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
- 12. Power-Cord Protection** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.
- 13. Outdoor Antenna Grounding** – If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Part 1 of the Canadian Electrical Code, in USA Section 810 of the National Electrical Code, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

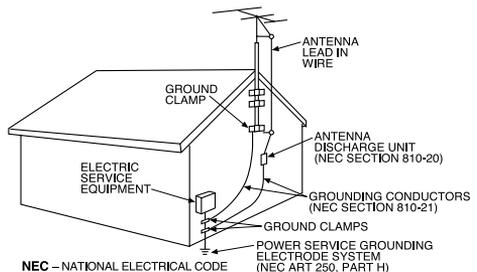

- 14. Lightning** – For added protection of this video unit receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power-line surges.

# Important Safeguards

15. **Power Lines** – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. **Overloading** – Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
17. **Objects and Liquids** – Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the video unit.
18. **Servicing** – Do not attempt to service this video unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. **Damage Requiring Service** – Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If any liquid has been spilled into, or objects have fallen onto, the video unit.
  - c. If the video unit has been exposed to rain or water.
  - d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
  - e. If the video unit has been dropped or the cabinet has been damaged.
  - f. When the video unit exhibits a distinct change in performance – this indicates a need for service.
20. **Replacement Parts** – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. **Safety Check** – Upon completion of any service or repairs to this video unit, ask the service technician to perform safety checks to determine that the video unit is in safe operating order.

## Precautions

### USE & LOCATION

- **TO AVOID SHOCK HAZARD ...** Your Camcorder and power supply should not be exposed to rain or moisture. Do not connect the power supply or operate your Camcorder if it gets wet. Your Camcorder has been designed for outdoor use, however it is not designed to sustain direct exposure to water, rain, sleet, snow, sand, dust, or a direct splashing from a pool or even a cup of coffee. This action could permanently damage the internal parts of your Camcorder. Do not attempt to disassemble this unit. There are no user serviceable parts inside. Unplug your Camcorder from the power supply before cleaning.
- **DO NOT AIM YOUR CAMCORDER AT THE SUN OR OTHER BRIGHT OBJECTS.**
- **DO NOT LEAVE THE CAMCORDER WITH THE EVF AIMED DIRECTLY AT THE SUN AS THIS MAY CAUSE DAMAGE TO THE INTERNAL PARTS OF THE EVF.**
- **DO NOT EXPOSE YOUR CAMCORDER TO EXTENDED HIGH TEMPERATURE ...** Such as, in direct sunlight, inside a closed car, next to a heater, etc... This action could permanently damage the internal parts of your Camcorder.
- **AVOID SUDDEN CHANGES IN TEMPERATURE ...** If the unit is suddenly moved from a cold place to a warm place, moisture may form on the tape and inside the unit.
- **DO NOT LEAVE YOUR CAMCORDER OR THE POWER SUPPLY TURNED ON WHEN NOT IN USE.**
- **STORAGE OF YOUR CAMCORDER ...** Store and handle your Camcorder in a manner that will not subject it to unnecessary movement (avoid shaking and striking). Your Camcorder contains a sensitive pick-up device which could be damaged by improper handling or storage.

### CARE

- **TO CLEAN YOUR CAMCORDER ...** Do not use strong or abrasive detergents when cleaning your Camcorder body.
- **TO PROTECT THE LENS ...** Do not touch the surface of the lens with your hand. Use a commercial camcorder lens solution and lens paper when cleaning the lens. Improper cleaning can scratch the lens coating.
- **TO PROTECT THE FINISH OF YOUR CAMCORDER ...** Before handling your Camcorder, make sure your hands and face are free from any chemical products, such as suntan lotion, as it may damage the finish.

# Table of Contents

## Getting Started

Things You Should Know .....	2~3
Important Safeguards .....	4~5
Precautions .....	5
Self Demo Mode .....	7
Quick Operation Guide .....	8
Supplying Power (Battery Charge/Use/Refresh/Care, AC Adaptor, Car Battery Cord) ....	9~10
Cassette Information .....	11
Before Using (Using the Shoulder and Hand Straps, Lens Cap) .....	12
Using MENU Mode .....	13
Setting the Clock (Time Zone, Auto Daylight Saving Time) .....	14~15
Built-in Auto Light (Using the Light, Replacing the Bulb) .....	16

## Basic Operation

Camera Recording (Basic, Stand-by, Programmed Recording) .....	17~19
Playing Back Recordings (Basic Playback, Visual Search, Still Picture, Tracking, TV/VCR Playback) .....	20~21
Copying your Tapes (dubbing) .....	22

## Special Features

Four-Speed Power Zoom .....	23	Digital Still Camera .....	34~41
Backlight .....	23	• Memory Card (optional) Insertion/Removal .....	34
MagicPix™ Images .....	24	• Recording .....	36
Focus (Auto/Manual Focus) .....	25	• Using the Light .....	37
High Speed Shutter (Auto/Manual Shutter) .....	26	• Playback .....	37
Auto Fade .....	27	• Displayed Directory/Image Number ...	38
Color Digital Fade .....	28	• Delete Specific Images .....	39
Color Digital Filter .....	29	• Picture in Picture Wipe Title .....	40
Digital Zoom .....	30	• Digital Wipe Mode .....	41
Digital Electronic Image Stabilization (E.I.S.) .....	31	PC Connection .....	42~45
Still/Strobe/Wide .....	32	Using a SD PCMCIA Adaptor (optional) .....	46
MotionSensor .....	33		


## For Your Information

Viewfinder/LCD Monitor Indications .....	47~49
Operation Notes (Cleaning EVF) .....	50
Notice .....	50
Replacing Clock Battery .....	51
Palmcorder Accessory System .....	52
Palmcorder Accessory Order Form .....	53
Specifications .....	54
Before Requesting Service (Video Head Cleaning, Self Diagnostic System) .....	55~56
Request for Service Notice .....	56
Limited Warranty .....	57
Customer Services Directory .....	58
Spanish Quick Use Guide/Guía Para Uso Rápido .....	59
Index .....	60

# Self Demo Mode

Self Demo mode is on when the screen below appears. To turn it off, follow steps 1-4 below.

## EVF or LCD Monitor

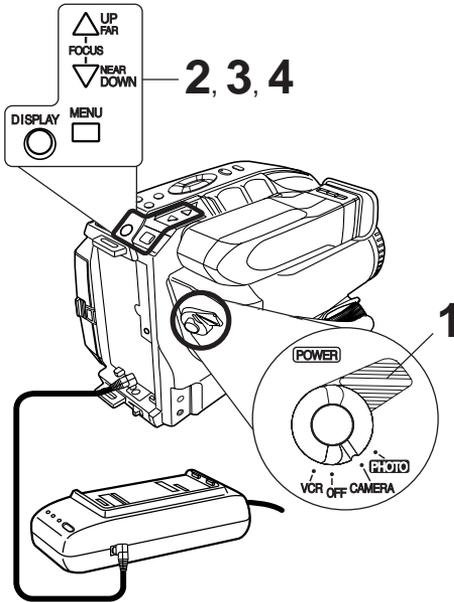

## Before you begin...

- Connect Camcorder to power source.

**1** Set POWER to CAMERA.

**2** Press MENU for MENU mode.  
Press UP or DOWN to select **SELF DEMO**.

▲	PAGE 2/2
SELF DEMO	: OFF
DIGITAL WIPE	: OFF
MAGIC PIX	: OFF
MOTION SENSOR	: OFF
VIDEO EFFECTS	: FADE BLACK
SELECT :	PUSH UP/DOWN KEY
SET :	PUSH DISPLAY KEY
END :	PUSH MENU KEY

**3** Press DISPLAY to select OFF.

**4** Press MENU to exit.

## Note:

- Self Demo stops automatically if battery is attached (page 9) and cassette tape is inserted (page 11).
- Inserting a tape alone (or attaching a partially charged battery) only temporarily stops Self Demo.
- Self Demo stops for 30 seconds when the Light is pressed.


## To turn Self Demo back on:

- Set to SELF DEMO : ON in MENU screen.


# Quick Operation Guide

## Charging the Battery Pack

Charge Battery Pack fully before operation (page 9).

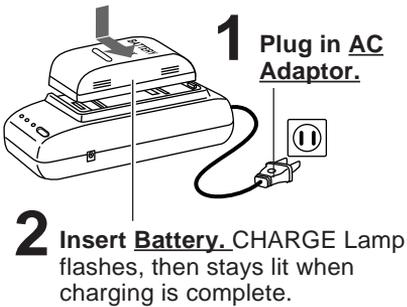

## Insert Cassette

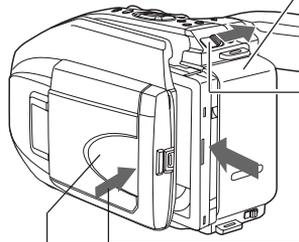

- 1** Attach fully charged **Battery** (page 9).
- 2** Slide **TAPE EJECT** to open door.
- 3** Insert **cassette** (page 11).
- 4** Press here to close door.

**Protection Film**


**Note:**

- Remove the Protection Film before use.

## Camera Recording

See page 17.

- 1** Press **LCD-OPEN** to unlock the LCD monitor. Swing it fully open and adjust the angle.

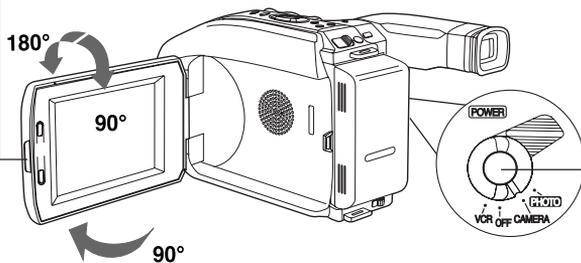


- 2** Set **POWER** to **CAMERA**.
- 3** Press **RECORD/PAUSE** to start recording. Press **RECORD/PAUSE** again to pause recording.

## Playback using the LCD Monitor


See page 20.

- 1** Press **LCD-OPEN** to unlock the LCD monitor. Swing it fully open and adjust the angle (see above).

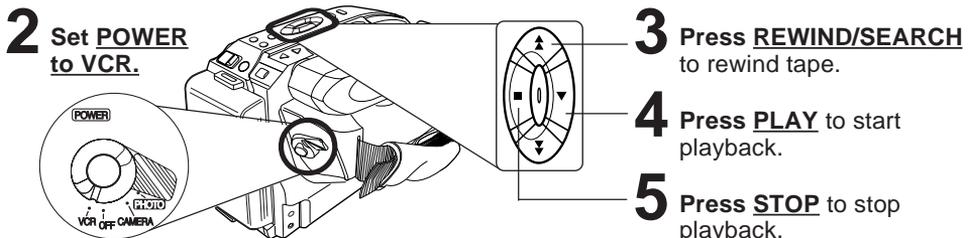

## Charging the Battery Pack

Charge Battery Pack fully before use.

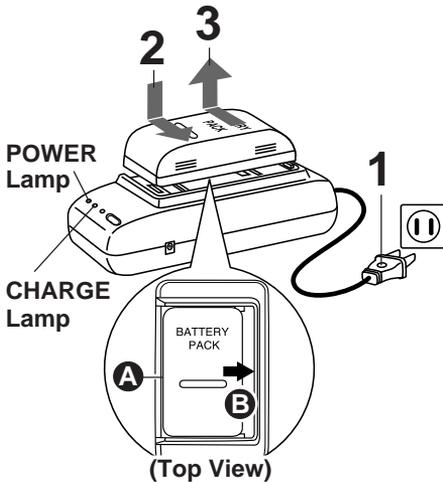

**1** Plug in **AC Adaptor**.  
POWER Lamp lights.

**2** Insert **Battery**.  
**A** Align left side of Battery with left edge of AC Adaptor.  
**B** Press Battery down and slide in direction of arrow.

The CHARGE Lamp flashes, then stays lit when charging is complete.


**3** Remove **Battery**.  
Slide Battery to the left and lift off.

### Note:

- Charging takes about 1 and 1/2 hours.
- While the DC Power Cable (supplied) is connected to the AC Adaptor, the Battery cannot be charged.
- After charging 5 times, use Battery Refresh feature as explained below.
- Battery life gradually decreases after repeated use and recharging. If operation time becomes very short even after a sufficient charge, discard Battery properly (pages 10, 50).

## Using the Battery Pack

A fully charged Battery provides a maximum of about 2 hours of continuous use (LCD monitor off) or about 1.5 hours (LCD monitor on). Actual time may vary due to operating conditions. Using the Built-in Light decreases operating time.

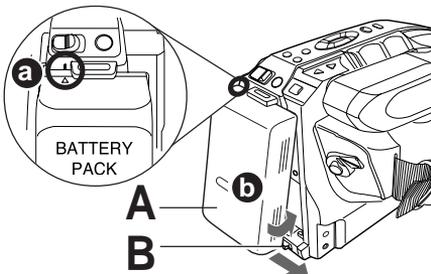


**A** Attach **Battery**.  
**a** Insert top of Battery into top of mounting surface.  
**b** Press and snap into place.

**B** Remove **Battery**.  
Slide **BATTERY RELEASE** and remove Battery.

## Battery Refresh

This feature completely discharges Battery before recharging begins. Use after every 5 charges for optimum Battery performance.

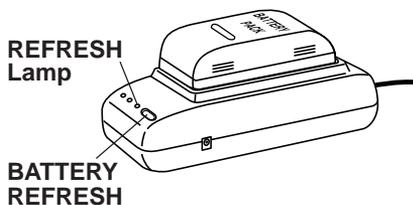

To use battery refresh, insert Battery on AC Adaptor (see steps 1~2 above), then press **BATTERY REFRESH**.

The REFRESH Lamp lights, then goes out when discharge is complete. Battery charging will then start automatically.

If **BATTERY REFRESH** is pressed by mistake, remove Battery from AC Adaptor and reinsert it for normal charging.

### Note:

- Charging takes about 7 and 1/2 hours when Battery Refresh is used.
- Battery will not operate in extremely high temperatures.

# Supplying Power

## Battery Care

### Caution:

- Charge only with specified charger.
- Battery can be charged within a temperature range of 10 °C (50 °F) and 35 °C (95 °F).
- Battery is normally warm after charging or just after use.
- Do not use an insufficiently charged or worn-out Battery.

### Safety precautions:

- Do not get Battery near, or dispose of in, fire.
- Do not directly connect (short circuit) the positive (+) and negative (-) terminals.
- Never attempt to disassemble or reassemble Battery.


### To avoid Battery damage:

- Do not drop or jar Battery.
- Use Battery with specified units only.
- If Battery is used in extremely high temperatures, a safety device will automatically prevent operation.

### To prolong Battery life:

- While not in use, remove Battery from the Camcorder and AC Adaptor, and store in a cool, dark, dry place.
- Keep Battery terminals clean.

## AC Adaptor

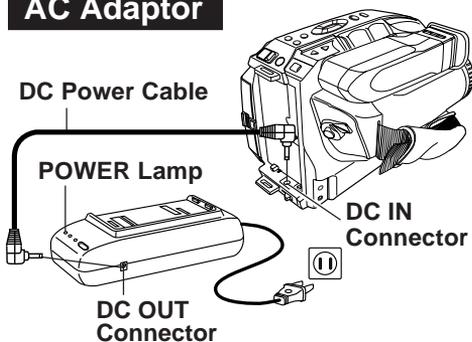

**1** Connect AC Adaptor DC OUT to Camcorder DC IN with supplied DC Power Cable.

**2** Plug in AC Adaptor. POWER Lamp lights.


### Note:

- While the DC Power Cable (supplied) is connected to the AC Adaptor, the Battery cannot be charged.
- When not in use, unplug AC Adaptor from AC outlet. (Adaptor uses 1.2 W of electricity while plugged in.)

### CAUTION:

This unit will operate on 110/120/220/240 V AC 50/60 Hz. An AC plug adaptor may be required for voltages other than 120 V AC. Please contact either a local or foreign electrical parts distributor for assistance in selecting an alternate AC plug. We recommend using the accessory power plug adaptor (VJSS0070) in an area which has special AC outlets.

## Car Battery Cord (Optional)

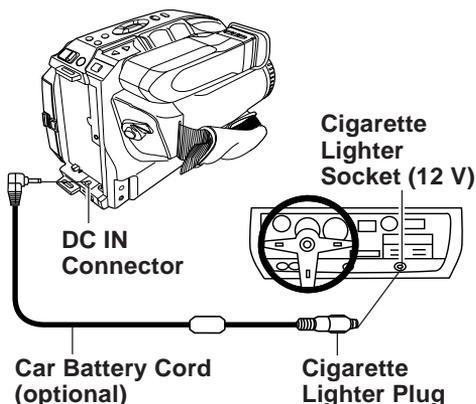

**1** Connect PV-C16 Car Battery Cord (optional) to Camcorder DC IN.

**2** **A** Start engine first.  
**B** Plug Car Battery Cord into Cigarette lighter socket.


- If Car Battery cord fuse needs replacing, use exact current rating (in amps).

### Note:

- This cord only works in vehicles equipped with DC 12 V (negative ground) battery. Check with your car/truck dealer. Use only specified car battery cord.
- To avoid blowing the car battery cord fuse, do step 2 in the proper order.
- Running vehicles must be well ventilated.
- When not in use, disconnect cigarette lighter plug.
- For personal safety the driver of the vehicle should not attempt to operate the camcorder while driving.

# Cassette Information

## Cassette Insertion/Removal

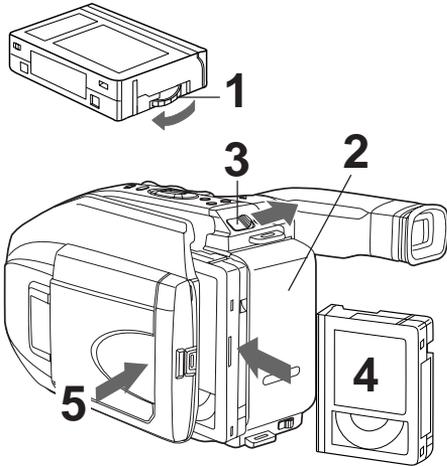

- 1 Turn **Tape Wheel** in direction of arrow until there is no slack.
  - 2 Attach **Battery** (page 9).
  - 3 Slide **TAPE EJECT** to open door.
  - 4 Insert **cassette** as shown.
  - 5 Press here to close door.
- To remove the cassette, slide the **TAPE EJECT** switch.

## Record/Playback Time


Use tapes with the **VHSC** mark in this unit.

Tape Speed Selector Position	Cassette type		
	TC-20	TC-30	TC-40
<b>SP</b> (Standard Play)	20 minutes	30 minutes	40 minutes
<b>SLP</b> (Super Long Play)	1 hour	1 hour 30 minutes	2 hours

- SLP playback may contain more picture noise.

## Erase Protection Tab

Protects tapes from being accidentally erased.

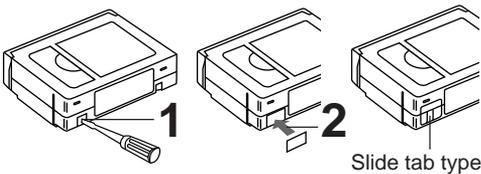

- 1 To prevent accidental erasing, **break off tab** with screwdriver. (Or, slide tab open.)
- 2 To record again, **cover hole** with adhesive tape. (Or, slide tab closed.)

# Before Using


## Attaching Shoulder Strap

Remove Battery Pack before doing steps.




min. 25.4 mm (1 inch)

## Adjust the Length of the Shoulder Strap

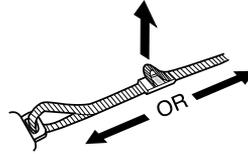


Pull a loop of strap from buckle, then pull strap tight to shorten or lengthen.

## Hand Strap

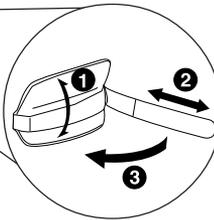


Adjust Hand Strap length to fit your hand as shown.

## Lens Cap

 

### Attaching the Lens Cap Strap:


Thread the Strap through the Lens Cap attachment ring as illustrated at left.

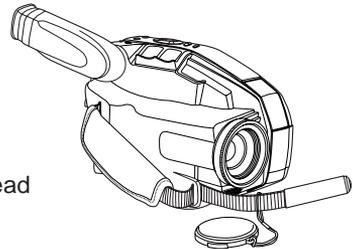

### Attaching the Lens Cap Cord to the Hand Strap:

Remove the Hand Strap from the front clasp and thread the Strap through the loop in the Lens Cap Cord. Reattach the Hand Strap.

# Using MENU Mode

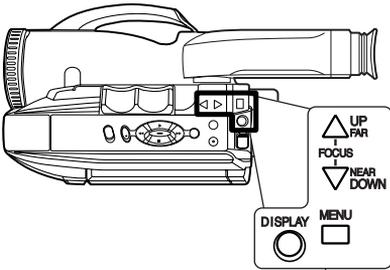

1, 2, 3, 4

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA or VCR.

- 1 Press **MENU** for MENU mode.  
The CAMERA or VCR MENU screen (see below left) appears when Menu mode is entered.
- 2 Press **UP** or **DOWN** to highlight the desired menu item.
- 3 Press **DISPLAY** to set selection.
- 4 Press **MENU** to exit.

### Note:

- The Menu mode is canceled if **UP/DOWN**, **DISPLAY**, or **MENU** are not pressed within 5 minutes when Self Demo mode is off.
- The Menu mode is canceled if **UP/DOWN**, **DISPLAY**, or **MENU** are not pressed within 30 seconds when Self Demo mode is on.

## MENU Mode (CAMERA) Screen

- 1 --- MENU --- PAGE 1/2
- 2 PROGRAMMED REC  
DISPLAY : ON
- 3 SHUTTER : AUTO
- 4 STAND-BY RELEASE ; OFF
- 5 CLOCK SET
- 6 LIGHT MODE ; OFF/ON
- 7 SELECT: PUSH UP/DOWN KEY
- 8 SET : PUSH DISPLAY KEY
- 9 END : PUSH MENU KEY
- 10
- 11
- ▲ PAGE 2/2
- 7 SELF DEMO : OFF
- 8 DIGITAL WIPE : OFF
- 9 MAGICPIX : OFF
- 10 MOTIONSENSOR ; OFF
- 11 VIDEO EFFECTS ; FADE  
BLACK
- SELECT: PUSH UP/DOWN KEY
- SET : PUSH DISPLAY KEY
- END : PUSH MENU KEY


## MENU Mode (VCR) Screen

- 5 --- MENU ---
- 2 CLOCK SET
- DISPLAY ; ON
- SELECT: PUSH UP/DOWN KEY
- SET : PUSH DISPLAY KEY
- END : PUSH MENU KEY

- 1 **PROGRAMMED REC** (page 19).  
Camcorder starts and stops recording at a preset time.
- 2 **DISPLAY** (page 47).  
ON : On-screen Display (OSD) screens are displayed.
- 3 **SHUTTER** (page 26).  
Select desired shutter speed.
- 4 **STAND-BY RELEASE** (page 18).  
ON : Enables quick resumption of recording from Stand-by mode.
- 5 **CLOCK SET** (pages 14, 15).  
Select to set clock.
- 6 **LIGHT MODE** (page 16).  
ON/OFF : Light can be set ON or OFF.  
ON/OFF/AUTO : Light can be set ON, OFF, or AUTO.
- 7 **SELF DEMO** (page 7).  
ON : SELF DEMO screen is displayed.
- 8 **DIGITAL WIPE** (pages 40, 41).  
ON : Digital wipe mode can be used.
- 9 **MAGICPIX** (page 24).  
ON : Picture sensitivity is increased.
- 10 **MOTIONSENSOR** (page 33).  
ON : Enables MotionSensor recording.
- 11 **VIDEO EFFECTS** (pages 27~29).  
AUTO FADE : BLACK or WHITE  
DIGITAL FADE : TYPE → 7 types  
COLOR → 8 colors  
DIGITAL FILTER : COLOR → 5 colors

# Setting the Clock

Set the following items in order: Time Zone, Daylight Saving Time, Date, and Time.

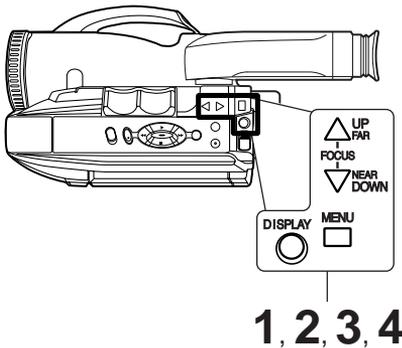

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA or VCR.

- 1 Press **MENU** for MENU mode.  
Press **UP** or **DOWN** to select **CLOCK SET**.

```
--- MENU --- PAGE 1/2
PROGRAMMED REC
DISPLAY      : ON
SHUTTER     : AUTO
STAND-BY RELEASE : OFF
CLOCK SET
LIGHT MODE  : OFF/ON
▼
SELECT: PUSH UP/DOWN KEY
SET      : PUSH DISPLAY KEY
END      : PUSH MENU KEY
```

[ CAMERA MODE ]

```
--- MENU ---
CLOCK SET
DISPLAY    : ON

SELECT: PUSH UP/DOWN KEY
SET      : PUSH DISPLAY KEY
END      : PUSH MENU KEY
```

[ VCR MODE ]

- 2 Press **DISPLAY** for CLOCK SET menu.  
Press **UP** or **DOWN** to select **TIME ZONE**, **DST**, or **DATE/TIME**.

```
--- CLOCK SET ---
TIME ZONE : EASTERN
D. S. T.   : AUTO
DATE/TIME  : 12:00:00AM
              JAN 1 2002

SELECT: PUSH UP/DOWN KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
```

- 3 Press **DISPLAY** for menu of item selected in step 2.

To change the setting:

**TIME ZONE** → Go to step 3a on page 15.

**D.S.T.** → Go to step 3b on page 15.

**DATE/TIME** → Go to step 3c on page 15.

- 4 Press **MENU** twice to exit.


(continued on next page)

# Setting the Clock

## 3a Setting the Time Zone

The Camcorder is preset to Eastern time.

### [ Time Zone chart ]

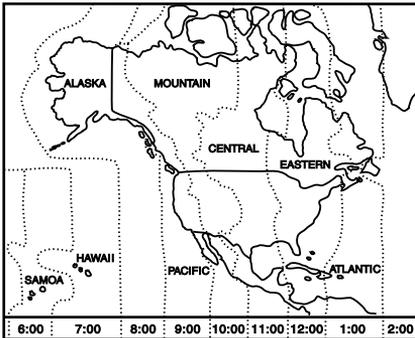

Press **UP** or **DOWN** to select local time zone.  
Press **DISPLAY** to confirm entry.



- When traveling, repeat this operation and select one of the 8 listed time zones to set the clock to local time.

#### Note :

 
- Clock may lose or gain up to 2 minutes per month.
- When traveling outside the listed time zones, set clock to local time manually.
- To adjust or set clock, see "Setting Date and Time" bottom of page.

## 3b Auto Daylight Saving Time


Clock will auto-adjust to daylight saving time (DST).

### DST: AUTO

**Spring (First Sunday in April) :**  
ahead one hour.




 **Autumn (Last Sunday in October) :**  
back one hour.



The Camcorder is preset to DST: **AUTO**.  
If DST is not observed in your area, set to **OFF** by doing the following.

Press **UP** or **DOWN** to select OFF or AUTO.  
Press **DISPLAY** to confirm entry.

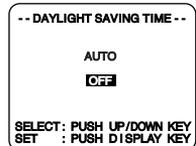



#### Note:

- Auto DST does not function if time zone is set to Hawaii or Samoa (see "Setting the Time Zone" above).

## 3c Setting Date and Time

Date and time including leap year are calculated up to DEC 31, 2099.

### EXAMPLE :

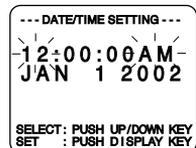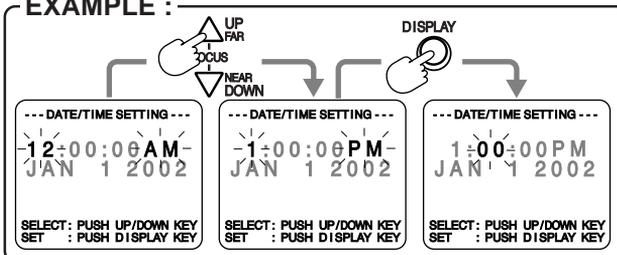

Press or hold down **UP** or **DOWN** to select hour, then press **DISPLAY** to fix.


Repeat for minute, month, day, and year.

Clock starts when year is entered and **DISPLAY** is pressed.

# Built-in Auto Light

## Using the Light

For recording in dim lighting.

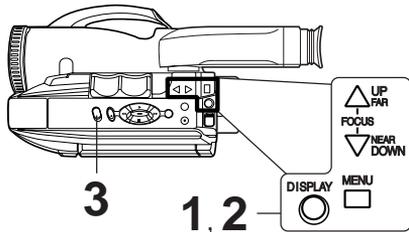


**CAUTION:**  
Light becomes hot.  
Never cover Light while on.

### Note:

- Using Light reduces battery operating time.
- Provide proper ventilation when using Light extensively in a hot environment.
- Using Light when the Camcorder is powered by a car battery may shorten bulb life.
- Set Light to OFF when not in use.

## Replacing the Bulb

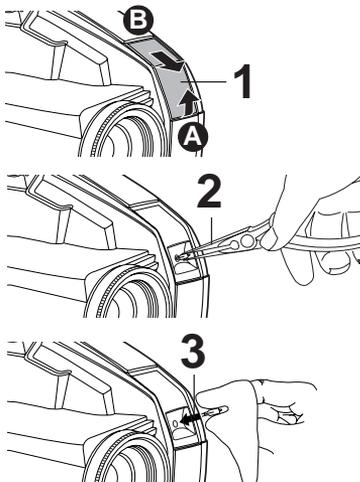

## DANGER:

Use only replacement bulb (PART NO. VLLW0015) supplied by Panasonic to reduce risk of fire.

Handle new bulb with cloth or tissue as skin oils will decrease bulb life.

Remove lens cover and allow bulb to cool before replacing to avoid possible burn hazard.


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.


**1** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **LIGHT MODE**.

**2** Press **DISPLAY** to set OFF/ON or OFF/ON/AUTO. Press **MENU** to exit.

**3** Press **LIGHT** repeatedly for Light ON, OFF, or AUTO.  
• In AUTO, light turns itself on/off according to lighting conditions.

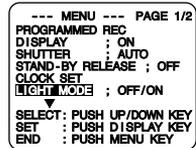

## EVF or LCD Monitor

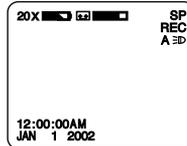

**A** : Light is on.

**A** : Light mode is auto.

## Before you begin...

- Order Part No. VLLW0015 for replacement bulb.
- Set POWER to OFF.

**1** Slightly raise portion **A** of lens cover to unhook, and slide portion **B** forward to remove.

**2** Using Tweezers or needle-nose pliers, carefully remove bulb.  
• Take unit to service center if you need assistance.

**3** Replace bulb using a clean cloth or tissue. (Do not touch with fingers.)

**4** Replace lens cover.


### Note:

- Handle bulb gently. Excessive force may cause bulb to crack.


# Camera Recording

## Recording via EVF or LCD Monitor

View recording scene on EVF (Electronic Viewer Finder) or LCD (Liquid Crystal Display) monitor.

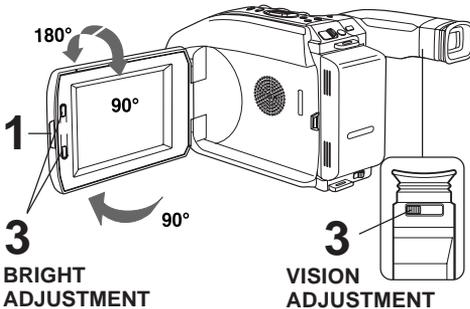

**CAUTION :**  
Rotating partially open LCD monitor may block cassette door and damage Camcorder body.

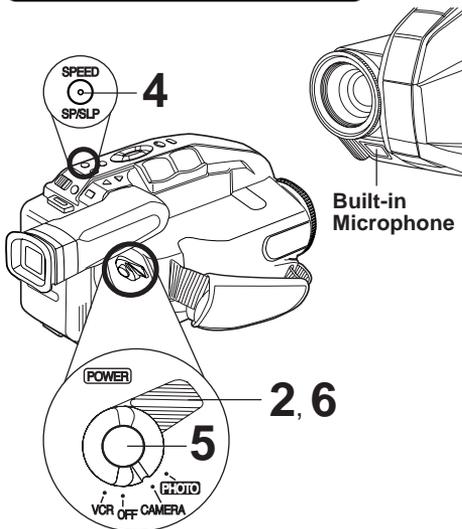

- Note:**
- When Camcorder is aimed at excessively bright objects, or bright lights, a vertical bar may appear in the picture. This is normal for the CCD pick-up. Try to avoid this when possible.
  - Using LCD monitor reduces battery operation time. Return LCD monitor to locked position when not in use.

## Before you begin...


- Connect Camcorder to power source.
- Insert cassette with record tab (page 11).

**1** Press **LCD-OPEN** to unlock the LCD monitor. **Swing LCD monitor fully open and adjust viewing angle.**

- If you want to record using EVF, close and lock LCD monitor.


**2** Set **POWER** to **CAMERA**.

- Be sure **POWER** is fully turned to **CAMERA** position.
- **EVF or LCD monitor** turns on/off by the **POWER** switch.
- Both **EVF** and **LCD monitor** turn on when **LCD** is at **180°** (see above left). This allows both you and the subject to view the recording.

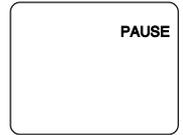

EVF or LCD Monitor (Record/Pause mode)


**3** **LCD :** Press **BRIGHT ADJUSTMENT** to adjust LCD monitor brightness level.

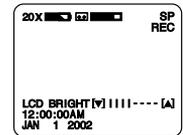

**EVF :** Look into **EVF** and adjust **VISION ADJUSTMENT** to your eyesight.

**4** Hold down **TAPE SPEED** for about 1 second to change tape speed to **SP/SLP** (page 11).

**5** Press **RECORD/PAUSE** to start or pause recording.

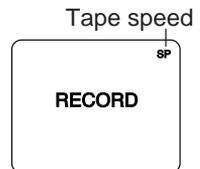

**6** Set **POWER** to **OFF** when finished.



EVF or LCD Monitor (Record mode)

- **To remove the cassette**, slide the **TAPE EJECT** switch (page 11).

# Camera Recording

## Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 11).

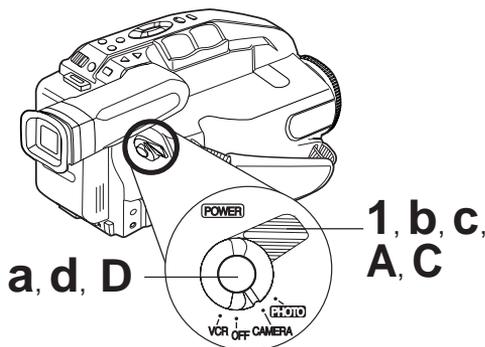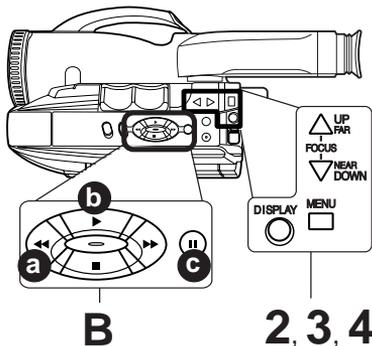

## Stand-by Quick Release

If left in RECORD/PAUSE mode for 5 minutes, Camcorder switches to Stand-by mode to conserve battery. When set to ON, Stand-by Quick Release lets you resume recording by pressing RECORD/PAUSE two times. Stand-by Quick Release is set to OFF at the factory.

**1** Set **POWER** to **CAMERA**.

**2** Press **MENU** for MENU mode.

Press **UP** or **DOWN**

to select **STAND-BY RELEASE**.

**3** Press **DISPLAY** to select ON/OFF.

**ON** : From Stand-by mode, press RECORD/PAUSE two times to resume recording.

**OFF** : From Stand-by mode, set **POWER** to **OFF**, then to CAMERA. Press RECORD/PAUSE to record.

**4** Press **MENU** to exit.

---	MENU	---	PAGE 1/2
PROGRAMMED REC	:	ON	
DISPLAY	:	ON	
SHUTTER	:	AUTO	
STAND-BY RELEASE	:	OFF	
CLOCK SET	:		
LIGHT MODE	:	OFF/ON	
▼			
SELECT:	PUSH UP/DOWN KEY		
SET :	PUSH DISPLAY KEY		
END :	PUSH MENU KEY		

## Manual Easy Editing

For proper continuity when taping from Stop mode or after attaching a new Battery.

**A** Set **POWER** to **VCR**.

**B** **a** Press REWIND/SEARCH to rewind a few seconds of tape.

**b** Press PLAY to review recording.

**c** Press STILL where you want to continue recording.

**C** Set **POWER** to **CAMERA**.

**D** Press RECORD/PAUSE to resume recording.

## Easy Edit Stand-by

For a smooth transition between scenes if recording is stopped, and then started within 24 hours.

**a** Press RECORD/PAUSE to stop recording.

**b** Set **POWER** to **OFF** and leave cassette in Camcorder.

**c** To resume recording, set **POWER** to CAMERA.

**d** Press RECORD/PAUSE to resume recording.


### Note:

- Use Manual Easy Edit (left) if more than 24 hours before recording is resumed.

# Camera Recording

## Programmed Recording

Set a recording start and stop time. Or, set a 5 or 10 second interval recording to be done each minute.

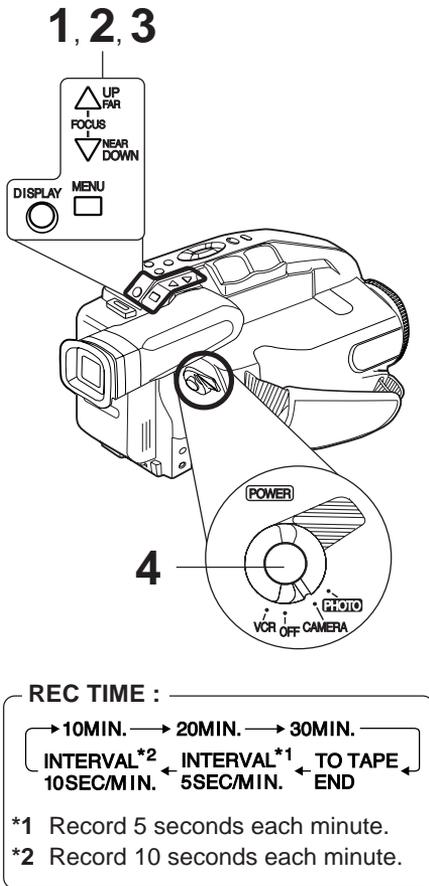

## Before you begin...

- Connect Camcorder to power source.  
Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 11).
- Set **POWER** to **CAMERA**.

**1** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **PROGRAMMED REC.**

```

--- MENU --- PAGE 1/2
PROGRAMMED REC
DISPLAY      : ON
SHUTTER     : AUTO
STAND-BY RELEASE : OFF
CLOCK SET   : OFF/ON
LIGHT MODE  : OFF/ON
SELECT: PUSH UP/DOWN KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
    
```

**2** Press **DISPLAY**. (Current time is displayed.) Each additional press of **DISPLAY** increases start time by 30 minutes.

```

START : 10:20PM
REC TIME : 10MIN.
SELECT: PUSH UP/DOWN KEY
SET    : PUSH DISPLAY KEY
START  : PUSH RECORD KEY
CANCEL: PUSH MENU KEY
10:20:00PM
    
```

**3** Press **DOWN** to select **REC TIME**. Press **DISPLAY** repeatedly to select one of the options shown at left.

```

START : 10:20PM
REC TIME : 10MIN.
SELECT: PUSH UP/DOWN KEY
SET    : PUSH DISPLAY KEY
START  : PUSH RECORD KEY
CANCEL: PUSH MENU KEY
10:20:00PM
    
```

To cancel the setup, press **MENU** twice.

**4** Press **RECORD/PAUSE** to place Camcorder in stand-by mode.

```

STAND-BY
START : 10:20PM
REC TIME : 10MIN.
10:20:00PM
JUN 1 2002
    
```

Recording will be done as scheduled.


## Note:

- Start time may not be set over 24 hours from current time.
- Camcorder shuts off at tape end, or 12 hours after Interval Recording starts.
- To cancel, set **POWER** to **OFF**.


# Playing Back Recordings

## Before you begin...

- Connect Camcorder to power source.
- Insert recorded tape.

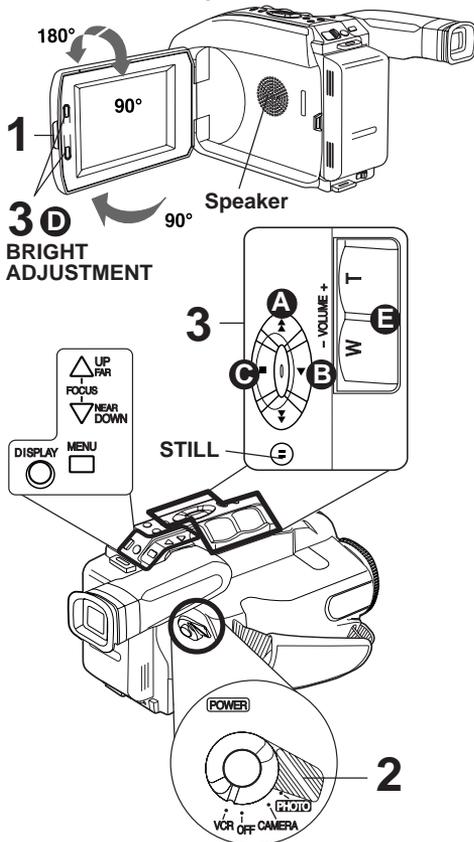

## Tracking Control

 

### Auto Tracking

Continuously analyzes each recording for optimum picture quality.

### Manual Tracking

Some recordings require manual adjustment to reduce noise.

Press **UP** or **DOWN** until Playback picture clears up.

Press **DISPLAY** to return to Auto Tracking.

**20** For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

## Playback on EVF or LCD Monitor

- 1** Press **LCD-OPEN** and swing LCD monitor fully open.
  - If you want to playback on EVF, close and lock LCD monitor.


- 2** Set **POWER** to **VCR**.
  - If tape has no record tab, auto playback begins.
  - EVF or LCD monitor turns on/off by the POWER switch.

- 3** Playback function buttons.

- A** **REW** : Rewind tape.
- B** **PLAY** : Play tape.
- C** **STOP** : Stop tape.
- D** **BRIGHT** : Adjust LCD monitor brightness.
- E** **VOLUME** : During playback, adjust volume of speaker.

Press "T" : Volume up (+).

Press "W" : Volume down (-).

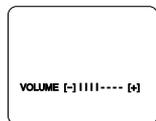

### Note:

- Using LCD monitor reduces battery operating time. Return LCD monitor to locked position when not in use.

## Special Effects

### Quick Visual Search

#### Search Speed

- SP (Standard Play) : 3 times normal.
- SLP (Super Long Play) : 9 times normal.

#### During playback, press:

- **FF** : fast forward search
  - **REW** : rewind search
- Press again or press **PLAY** for normal play.

### Still Picture

Press **STILL** to freeze picture.

Press **again** for normal play.

This feature works best in SLP mode (page 11).

### Note:


- During search, horizontal noise bars will appear. Audio is muted.
- To protect video heads and tape, operating modes will revert as follows after 5 minutes:
  - Still → Stand-by
  - Stand-by → Power off (when Battery Pack is used).
- Tape auto-rewinds if played or fast forwarded to end.

# Playing Back Recordings

## TV Playback or Viewing

Connect Camcorder to a TV to view playback or recordings in progress.

### Connections

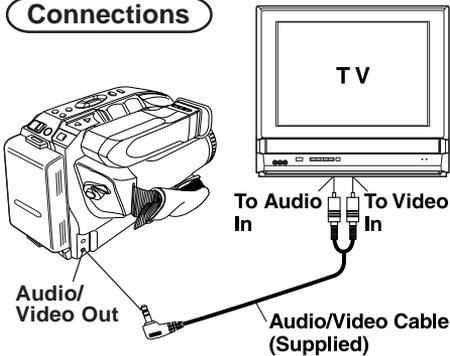


## Before you begin...

- Connect Camcorder to power source.
- Make all TV-Camcorder connections.

- 1** Set **POWER** to:  
VCR → view playback.  
CAMERA → view picture as it is recorded.
- 2** Turn TV **ON** and set to **LINE INPUT**.  
See TV owner's manual.
- 3** Begin playback or recording.

## VCR Playback using PlayPak


### Load Battery in PlayPak

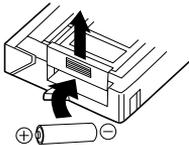

Remove Battery lid and insert AA battery.


- Do not reverse polarity.
- Replace battery when tape loading/unloading takes longer than usual.

### Insert **VHS** Cassette in PlayPak

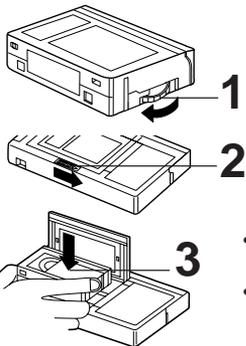


- 1** Turn **VHS** cassette **Tape Wheel** in direction of arrow to take up any slack.
- 2** Slide **RELEASE** to open cassette lid.
- 3** Insert the **VHS** cassette with the window up and on the left, then snap lid shut.

- Do not obstruct cassette reel while loading.
- Allow PlayPak Load Detector to fully retract before using in VHS VCR.

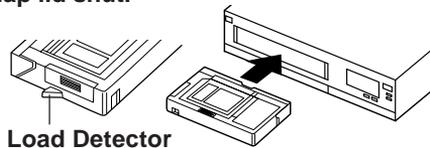


### Remove **VHS** Cassette

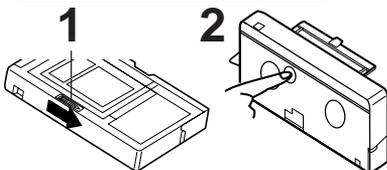

- 1** Slide **RELEASE** and wait for lid to open.
- 2** Push cassette out through hole in bottom of PlayPak with your finger.

# Copying your Tapes (dubbing)

## Connections

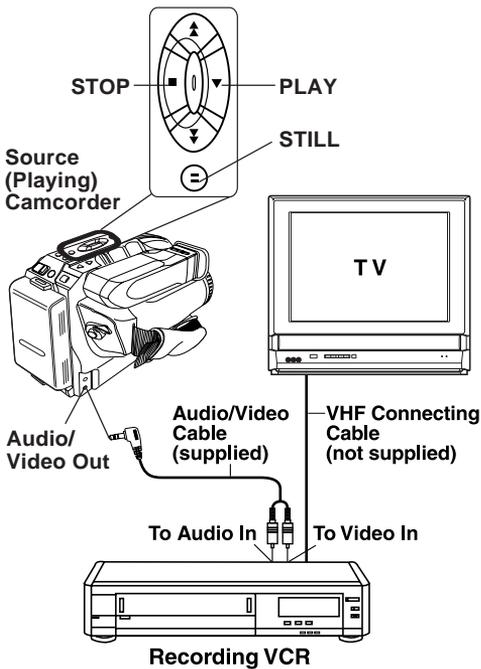

## Before you begin...

- Make Camcorder-VCR connections (see left).
- Turn both units on.
- Set VCR input signal to LINE.  
Please see VCR owner's manual.
- Set Camcorder POWER to VCR.

- 1** Insert a pre-recorded tape into Camcorder and a blank tape with record tab into VCR.
- 2** Press PLAY on Camcorder, then press STILL at starting point.
- 3** Press REC, then STILL/PAUSE on VCR.
- 4** Press STILL on Camcorder and STILL/PAUSE on VCR to start copying.
- 5** Press STOP on both units to stop copying.

## Note:

- Camcorder will only playback tapes recorded in SP or SLP mode.
- Dubbing may reduce picture quality.

## CAUTION:


Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

## Monitor with your TV

- Turn TV on and tune to VCR channel (CH3 or CH4).
- Set TV/VCR Selector on VCR to VCR.

# Four-Speed Power Zoom


Zoom in (close up) and out (wide angle) in one of four speeds ranging from slow (16 seconds) to fast (2 seconds).

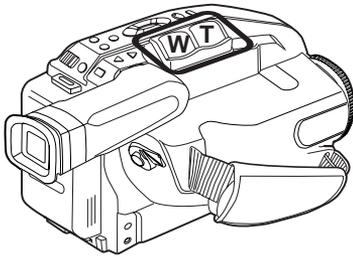

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

### Zoom In ("T")

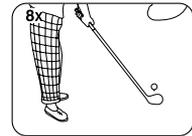

### Zoom Out ("W")

#### • Zoom slowly:


Lightly press "T" (telephoto) or "W" (wide angle) POWER ZOOM button.

#### • Zoom quickly:


Apply more pressure to the button.

# Backlight

Use when subject is darker than surroundings, in shadowed area, or in front of the light source.

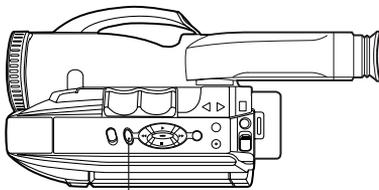

**B.LIGHT**

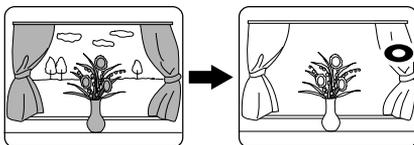

**Press B.LIGHT.**


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

Press **B.LIGHT** while recording to select the level of backlight compensation.


In normal lighting, press **B.LIGHT** repeatedly until no indicator is displayed.

### EVF or LCD Monitor

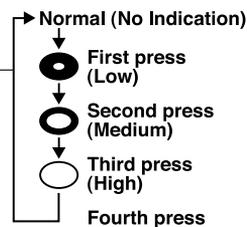

# MagicPix™ Images

Color recording of video onto a tape in low lighting.

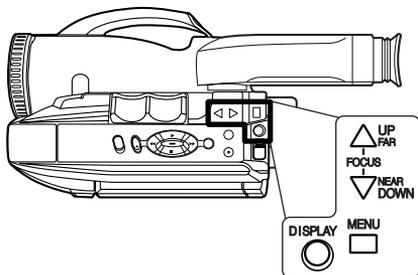

1, 2, 3

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

- 1 Press **MENU** for MENU mode.  
Press **UP** or **DOWN** to select **MAGICPIX**.

▲	PAGE 2/2
SELF DEMO	: OFF
DIGITAL WIPE	: OFF
MAGICPIX	: OFF
MOTION SENSOR	: OFF
VIDEO EFFECTS	: FADE BLACK
SELECT	: PUSH UP/DOWN KEY
SET	: PUSH DISPLAY KEY
END	: PUSH MENU KEY

- 2 Press **DISPLAY** to select ON.
- 3 Press **MENU** to exit.

### Note:

- If MagicPix is turned on, Shutter feature is disabled.
- MagicPix cannot be used with capture images on the Memory Card (optional, page 36).
- Only Manual Focus is available.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

## Auto Focus

Camcorder automatically focuses on subject even during zooming.

Auto Focus is on when "MF" is not displayed in EVF or LCD monitor.


Press **M.FOCUS** to remove "MF" in EVF or LCD monitor if necessary.

## Manual Focus

Use Manual Focus (MF) when :

- recording through glass.
- lighting is poor.
- subject is far away with objects in foreground.
- subject has distinct horizontal lines.
- subject is not centered in EVF or LCD monitor.
- subject has a shiny surface.
- subject is slanted.
- subject is bright and flat, like a white wall.
- subject has fast motion, like a golf swing.

EVF or LCD Monitor

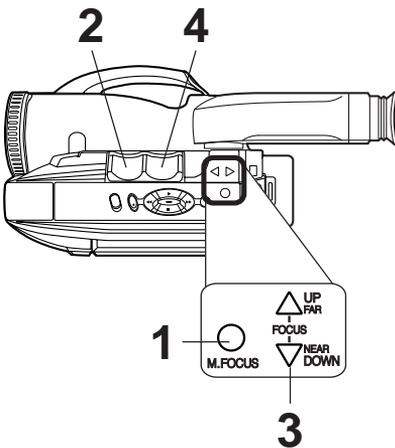

- 1 Press **M.FOCUS** so "MF" (Manual Focus) appears in EVF or LCD monitor.
- 2 Hold down "**T**" (**telephoto**) on **POWER ZOOM** to maximum zoom in.
- 3 Press **UP (FAR)** or **DOWN (NEAR)** until subject is in focus.
  - Back away from subject if necessary.
- 4 Hold down "**W**" (**wide angle**) on **POWER ZOOM** as desired.
  - Refocus as needed when aiming at new scenes.

## Macro Focus (close-ups)

Auto Focus functions up to 12.7 mm (1/2 inch) from subject.

Hold down "**W**" on **POWER ZOOM** to maximum wide angle.

Bring Camcorder up close to the subject.

# High Speed Shutter

Improves Still or Slow Motion playback picture of high speed subjects (e.g. a tennis stroke), when viewed on Camcorder or 3 or 4 head VCR.

## Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 11).
- Set POWER to CAMERA.


## Auto Shutter

In AUTO mode (no indication in EVF or LCD Monitor), shutter speed is auto-adjusted from 1/60 to 1/350 according to subject brightness.

- AUTO mode is selected each time POWER is set to CAMERA.

## Manual Selection

The faster the shutter speed, the more light is needed for proper picture and color quality. High Speed Shutter indication flashes if light is inadequate. Provide additional light.

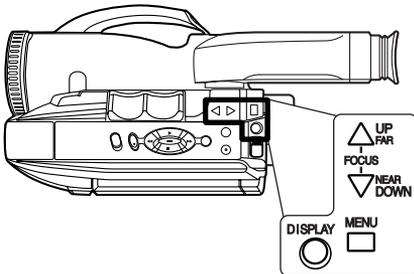

1, 2, 3

**1** Press **MENU** for MENU mode.  
Press **UP** or **DOWN** to select **SHUTTER**.

**2** Press **DISPLAY** repeatedly to select shutter speed.

```
--- MENU --- PAGE 1/2
PROGRAMMED REC
DISPLAY      : ON
SHUTTER     : AUTO
STAND-BY RELEASE : OFF
CLOCK SET
LIGHT MODE  : OFF/ON
▼
SELECT: PUSH UP/DOWN KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
```

→ AUTO → 1/60 → 1/100 → 1/250 → 1/500  
← 1/10000 ← 1/4000 ← 1/2000 ← 1/1000 ←


**3** Press **MENU** to exit.

### Note:

- Shutter speed cannot be set to 1/60 if Digital E.I.S. feature is set to ON.
- Provide additional halogen or tungsten light for use indoors or in poor light. Fluorescent light degrades picture.
- Auto Focus may not function properly if high speed shutter is used in inadequate light.
- Setting reverts to AUTO each time POWER is set to CAMERA.

# Auto Fade


An interesting way to open and close scenes.

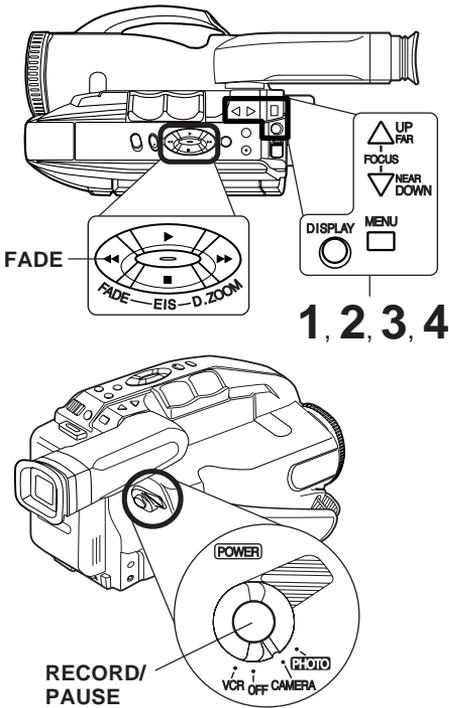


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

**1** Press **MENU** for MENU mode.  
Press **UP** or **DOWN** to select **VIDEO EFFECTS**.

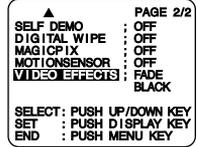

**2** Press **DISPLAY** for VIDEO EFFECTS menu. Press **UP** or **DOWN** to select **AUTO FADE**.

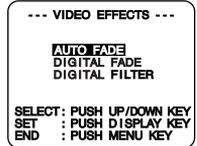

**3** Press **DISPLAY** for AUTO FADE ; COLOR menu. Press **UP** or **DOWN** to select BLACK or WHITE.



**4** Press **DISPLAY** to confirm entry. Press **MENU** to exit.

### Fade In:

In RECORD/PAUSE mode, press **FADE** so "FADE" flashes in EVF or LCD monitor.

Press **RECORD/PAUSE**.

Recording starts as picture and sound gradually fade in.


### Fade Out:

While recording, press **FADE** so "FADE" flashes in EVF or LCD monitor.

Press **RECORD/PAUSE**.


Picture and sound gradually fade out, and recording is paused.

If **FADE** is pressed accidentally, press again so "FADE" disappears in EVF or LCD monitor.

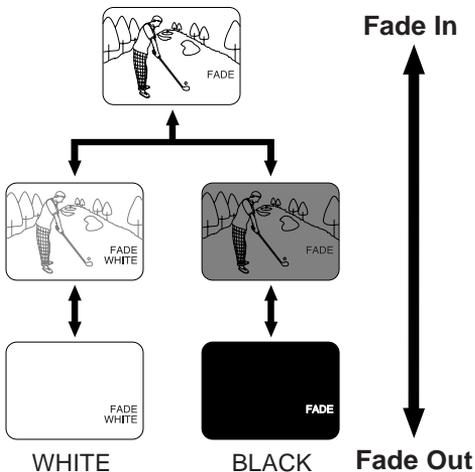


# Color Digital Fade

Choose from 7 fade effects in 8 different colors.

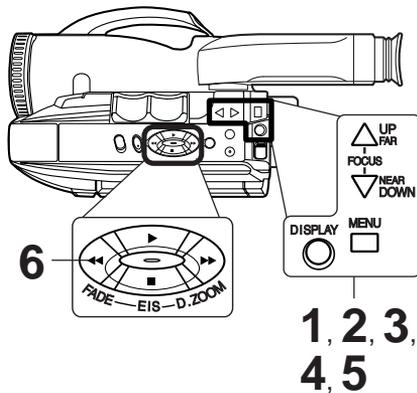

EVF or LCD monitor

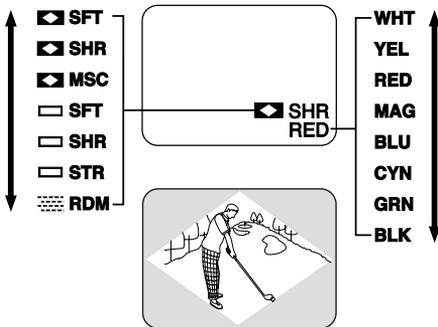

- For more effects, stop fade in or fade out at any time (except RANDOM mode) by pressing **FADE**. Then, press **FADE** to resume fade.


**Note:**

- Audio is not affected by fade.
- To cancel Digital Fade, do steps 1, 2, and 5. In step 2, select AUTO FADE.


## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.

**1** Press **MENU** for MENU mode.  
Press **UP** or **DOWN** to select **VIDEO EFFECTS**.

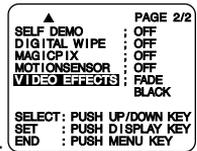

**2** Press **DISPLAY** for VIDEO EFFECTS menu.  
Press **DOWN** to select **DIGITAL FADE**.

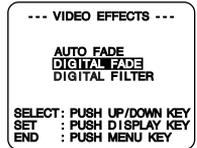

**3** Press **DISPLAY** for DIGITAL FADE menu.  
Press **UP** or **DOWN** to select **TYPE**.  
Press **DISPLAY** for TYPE menu.  
Press **UP** or **DOWN** to select from 7 different types of fades.  
• A preview of each fade type is displayed as it is selected.



**4** Press **DISPLAY** for DIGITAL FADE menu.  
Press **DOWN** to select **COLOR**.  
Press **DISPLAY** for COLOR menu.  
Press **UP** or **DOWN** to select from 8 colors.  
• A preview of each color is displayed as it is selected.




**5** Press **DISPLAY** to confirm entry.  
Press **MENU** twice to exit.


**6** Press **FADE** for about 2 seconds to fade out during recording (selected fade type flashes). Press **FADE** again to fade in.

# Color Digital Filter

Digital Filter adds one of 5 colors to entire picture, like a color filter.

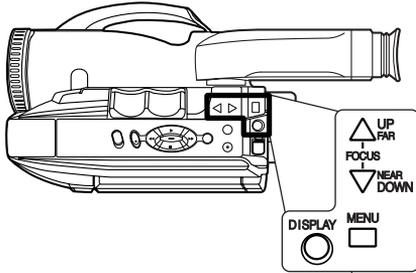


1, 2, 3, 4

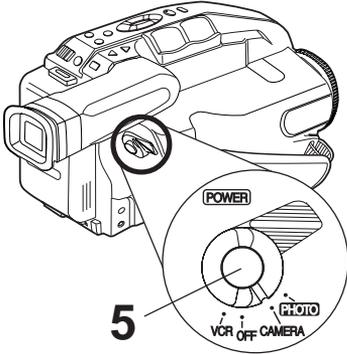

5


EVF or LCD monitor

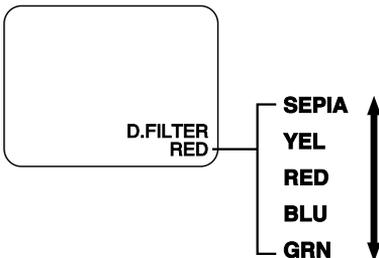


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.


**1** Press **MENU** for MENU mode.  
Press **UP** or **DOWN** to select **VIDEO EFFECTS**.

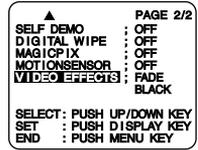

**2** Press **DISPLAY** for VIDEO EFFECTS menu. Press **DOWN** to select **DIGITAL FILTER**.

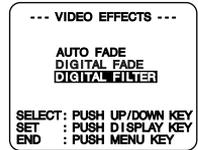

**3** Press **DISPLAY** for DIGITAL FILTER menu. Press **UP** or **DOWN** to select from 5 colors.  
• A preview of each color is displayed as it is selected.

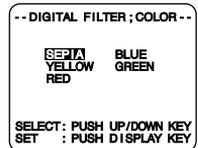

**4** Press **DISPLAY** to confirm entry. Press **MENU** to exit.

**5** Start recording (page 17).

- To cancel Digital Filter, set **POWER to OFF**.


## Note:

- Color Digital Filter will not function during Still/Strobe/Wide.
- Picture returns to normal in Still mode.

Special Features

# Digital Zoom

Power Zoom magnification is digitally increased.

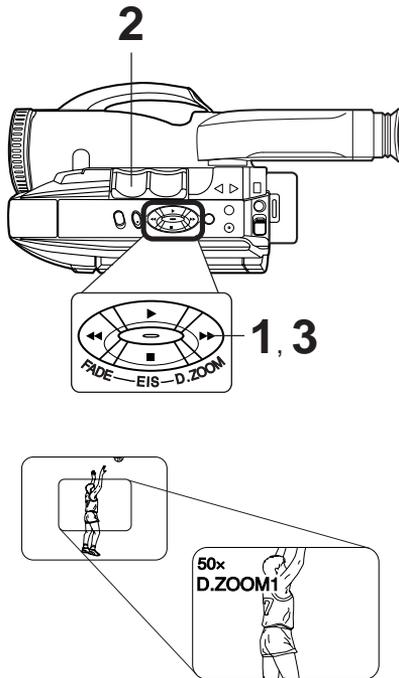

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.
- Set DIGITAL WIPE to OFF in menu.

**1** Press **D. ZOOM**.  
**once** →D.ZOOM 1 (150× maximum)  
**twice** →D.ZOOM 2 (800× maximum)  
The Higher digital magnification levels may cause picture distortion.

**2** Hold down **"T"** on **POWER ZOOM**.  
Digital Zoom starts when normal zoom reaches maximum (20×).

- Zoom level appears in EVF or LCD monitor.
- POWER ZOOM switch controls digital zoom level.
- Normal zoom resumes when level falls to 20×.


**3** Press **D. ZOOM** to turn off Digital Zoom so no indication appears.

# Digital Electronic Image Stabilization (E.I.S.)


Helps stabilize picture when recording in unstable situations.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

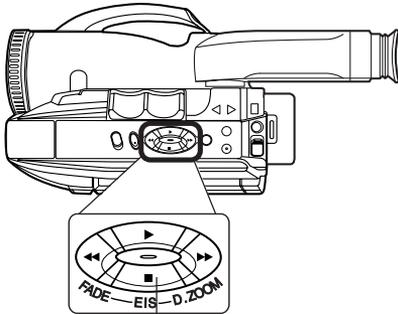

1, 2

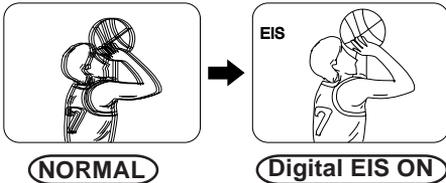

**1** Press **EIS** to display "EIS" in the EVF or LCD monitor.

- Image becomes slightly enlarged and shutter speed auto-adjusts from 1/80 to 1/350 according to brightness.
- Use High Speed Shutter (page 26) if needed. Shutter speed setting remains after EIS is canceled.

**2** Press **EIS** again to cancel when not in use.

## E.I.S. may not function during...


- extreme Camcorder movement.
- recording of subjects with distinct horizontal or vertical stripes.
- low light situations (EIS indicator flashes).
- intense fluorescent lighting situations.
- recording of very fast motion.

# Still/ Strobe/ Wide


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.
- Set DIGITAL WIPE to OFF in menu.

- 1** Press **STILL/STROBE** repeatedly for desired function as described below.

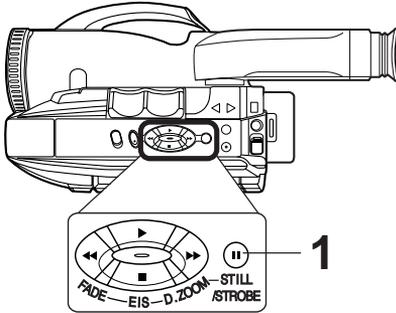

## Selection order

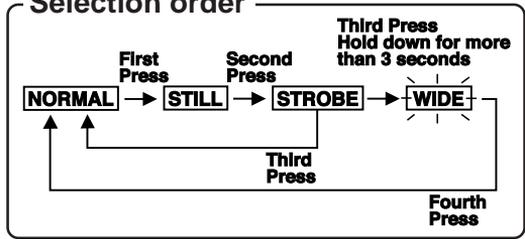


## STILL

Records a still image from the current picture.



## STROBE


Records a progression of still images in 1/6 of a sec. intervals.

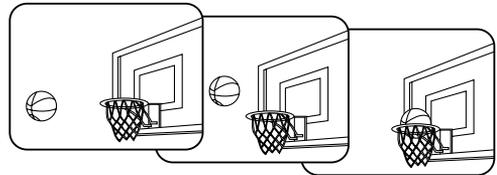

## WIDE SCREEN

Records a picture that will fill entire screen of a wide screen (16x9 aspect ratio) TV.

- Picture appears distorted in EVF or LCD monitor.

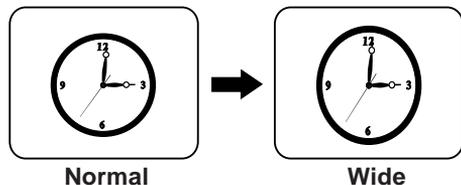


## Note:

- Pressing STILL/STROBE with DIGITAL WIPE set to ON will display "NOW IN DIGITAL WIPE" and Still/ Strobe/Wide feature cannot be used.
- Wide screen recordings must be played back on a wide screen TV (16x9 aspect ratio) or picture will be distorted.

# MotionSensor

Recording starts automatically if motion is detected.

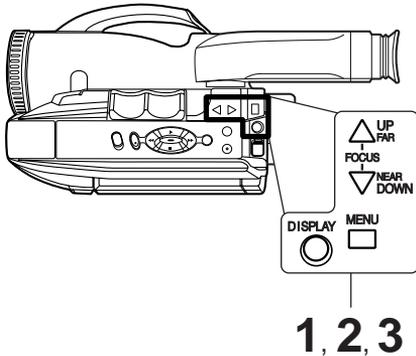

**MotionSensor may mistakenly start when:**

- background is plain, like a white wall, or has distinct vertical, horizontal, or slanted stripes, like a venetian blind.
- brightness suddenly changes.

**MotionSensor may not start when:**

- motion is very slow or fast.
- moving object is very small.
- motion occurs only in 1 corner of viewing area.
- in poor lighting (in this case, MOTIONSENSOR flashes).
- background is plain, like a white wall, or has distinct horizontal or vertical stripes.

## Before you begin...


- Connect Camcorder to power source.  
Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 11).
- Set POWER to CAMERA.
- Securely position and aim Camcorder.

- 1 Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **MOTIONSENSOR**.

▲	PAGE 2/2
SELF DEMO	: OFF
DIGITAL WIPE	: OFF
MAGIC PIX	: OFF
MOTIONSENSOR	: OFF
VIDEO EFFECTS	: FADE
	: BLACK
SELECT: PUSH UP/DOWN KEY	
SET : PUSH DISPLAY KEY	
END : PUSH MENU KEY	

- 2 Press **DISPLAY** to select ON.

- 3 Press **MENU** for MotionSensor stand-by mode. (If cassette is not inserted, "📺" will flash.)

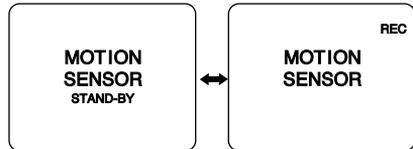

- Recording will start about 3 seconds after motion is detected.
- Date and time are recorded if displayed in EVF or LCD monitor (page 15).
- Recording stops about 30 seconds after motion ceases.

To cancel MotionSensor Mode, set **POWER to OFF**.

### Note:

- MotionSensor recording starts if Camcorder is bumped or repositioned.
- This feature is not available during normal recording.
- While in MotionSensor stand-by, the following functions are not available: Record/Pause, Stand-by mode, Digital E.I.S., Video Effects (Auto/Digital Fade, Digital Filter).

# Digital Still Camera

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to OFF.

## Memory Card\* (optional) Insertion/ Removal

\*Memory Card: MultiMediaCard or SD Memory Card.

 
Captured images will be stored on the Memory Card.

Be sure to insert the Memory Card before using the Built-in Digital Still Camera.

Listed below are the Memory Cards which can be used with this Camcorder.


Memory Card	Capacity
MultiMediaCard (SanDisk brand)	8 MB, 16 MB
SD Memory Card (optional) (See page 52.)	8 MB, 16 MB, 32 MB, 64 MB

### SD Memory Card write protection switch



A write protection switch is located on the SD Memory Card. Sliding the switch to the "LOCK" position prevents writing on or formatting the card.

Write protection switch

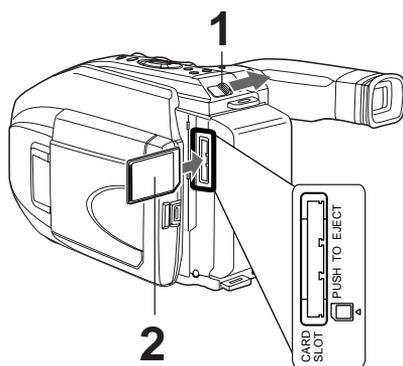

- 1** Slide **TAPE EJECT** to open door.
- 2** Fully insert the **Memory Card**, with the sloped corner down, into the Card Slot in the direction of the arrow. (See diagram.)
- 3** Push in on the inserted **Card** to eject.

#### Note:

- If Memory Card is not inserted, "NO CARD" appears on-screen.
- Do not insert card in wrong direction. (This would become the basis for trouble.)
- If "CARD ERROR" appears on-screen, see page 56.

## ■ Concerning the Memory Card

- Except for some special features, this card is compatible with other Panasonic brand products, like Digital Camera (DMC-LC5, DMC-F7).
- Panasonic only guarantees compatibility with Panasonic brand cards and those bearing the SanDisk logo.
- This Camcorder can capture a maximum of 697 still images because of camera memory capacity.


In order to capture 697 images, a larger Memory Card (optional) with approx. 62 MB of memory is needed for FINE mode and approx. 21 MB is needed for Normal mode.

### **Cautions for the Memory Card :**

- While Memory Card data is being read, do not remove it, turn off the power, or subject unit to vibrations and shocks.
- Do not leave the Memory Card in a place with high temperature, exposed to direct sunlight, or where electromagnetic waves and static electricity can be generated.
- Electromagnetic waves, static electricity, malfunction of the Camcorder or of the Memory Card itself could erase the data recorded on it. To prevent the loss of picture data, we recommend that you make a backup copy on the computer.
- Do not bend or drop the Memory Card as this could damage it or the captured contents.
- Do not touch the connector on the rear edge of the Memory Card with your fingers, and take care that no dirt, dust or water enters it.
- Do not affix other labels to the Memory Card face or back as Card insertion/removal may become impossible.

# Digital Still Camera

## Recording

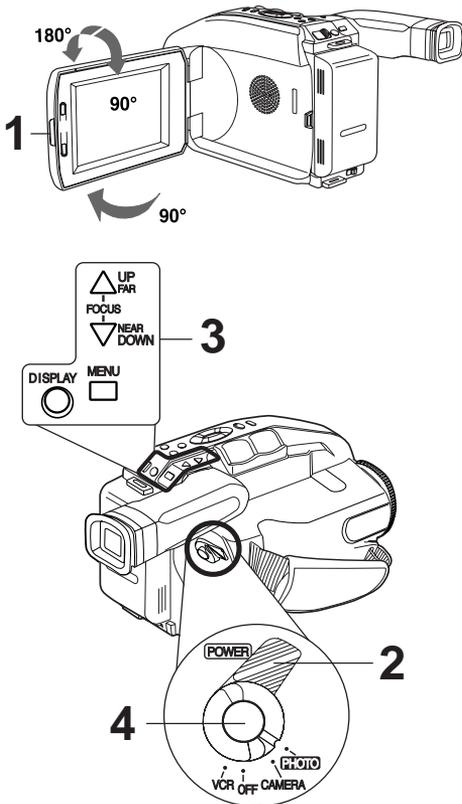

### Note:

- If Memory Card is not inserted, "NO CARD" appears on-screen. Set POWER to OFF, then insert the Memory Card.
- If "CARD ERROR" appears on-screen, see page 56.
- Sound will not be recorded.
- The features below are not available while in PHOTO mode.
  - Auto Fade
  - Digital Fade
  - Color Digital Filter
  - Digital Zoom
  - Digital E.I.S.
  - Still/Strobe/Wide
  - Motion Sensor
  - Digital Wipe Mode
  - Picture in Picture Wipe Title


### Before you begin...

- Connect Camcorder to power source.
- Insert the Memory Card (optional, page 34).


**1** Press **LCD-OPEN** and swing LCD monitor fully open. Adjust viewing angle.

**2** Set **POWER** to **PHOTO**.

- Be sure POWER is fully rotated to PHOTO position.

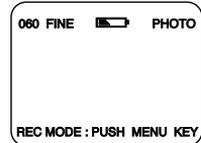


**3** Press **MENU** for REC MODE menu. Press **UP** or **DOWN** to select **NORMAL** or **FINE** (page 49). Then, press **DISPLAY** to set.

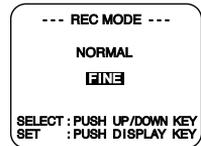

**4** Press **RECORD/PAUSE** to capture image.

- As the image is processed, the status screens below appear.
- The next image may be captured after "COMPLETED" disappears.
- Depending on the image taken, the image page remaining indication may not change, or it may be decreased by 2 images.

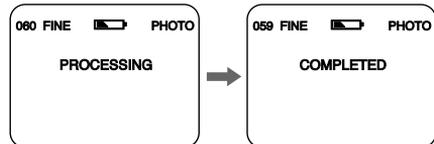

- For sharper images, set electronic shutter to higher speed when shooting in bright conditions, such as outdoors.


### WARNING:

Do not, under any circumstances, remove the card immediately after pressing the RECORD/PAUSE (during recording of an image) or while deleting. This could damage the format of the card and make it unusable.


# Digital Still Camera

## Before you begin...

- Connect Camcorder to power source.
- Insert the Memory Card (optional, page 34).
- Set POWER to PHOTO.

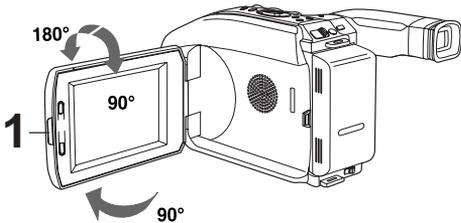

LIGHT

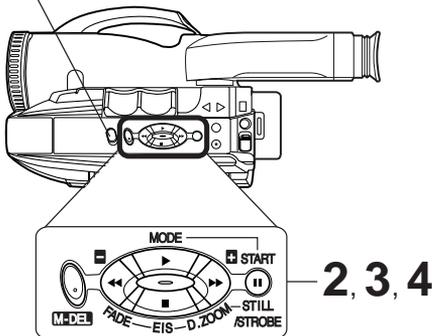

### Note:

- If Memory Card is not inserted, "NO CARD" appears on-screen. Set Power to OFF, then insert the Memory Card.
- Pictures captured with other brand products cannot be used with this Camcorder.
- If "INCOMPATIBLE IMAGE" appears on-screen, the size of the captured image cannot be played back on this Camcorder.
- Do not change POWER setting to CAMERA or change recording mode while "PLEASE WAIT" is displayed.
- If "CARD ERROR" appears on-screen, see page 56.

## Using the Light

For capture of still images in dim lighting.

### Set LIGHT to AUTO.


When **RECORD/PAUSE** is pressed to capture an image in dim lighting, the Light comes on for about 2 seconds, the image is captured, then the light goes out.

Or, set **LIGHT to ON/OFF** manually.  
(See page 16 for further details.)

## Playback

**1** Press **LCD-OPEN** and swing LCD monitor fully open. Adjust viewing angle.

**2** Press **▶ (PLAY)** to play mode.  
The Multi Image Playback screen appears. The last captured image screen is underlined.

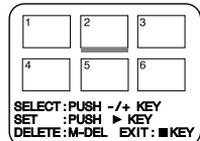


- If there are no recordings on the card, "NO PICTURE" appears on-screen.
- In NORMAL or FINE mode, the color of the Multi Image page number is as follows:

NORMAL mode → green  
FINE mode → white

**3** Press **+ (FF)** → next.  
Press **- (REW)** → previous.

- The selected image will be underlined in green.
- Continue pressing + (FF) or - (REW) for next or previous page.

**4** Press **▶ (PLAY)** to display image. This screen appears followed by image.

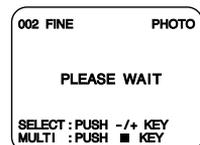

- Press **DISPLAY** to remove or redisplay this screen.
- Press **■ (STOP)** to redisplay Multi Image playback screen.

# Digital Still Camera


## Displayed Directory/Image Number

### Before you begin...


- Connect Camcorder to power source.
- Insert the Memory Card (optional, page 34).
- Set POWER to PHOTO.

**1** Repeat steps 1 and 2 on page 37 to display Multi Image Playback screen. Select any image and press ► (PLAY).

**2** Press **MENU** for DCF NUMBER DISPLAY menu. Press **UP** or **DOWN** to select ON or OFF. Then, press **DISPLAY** to set.

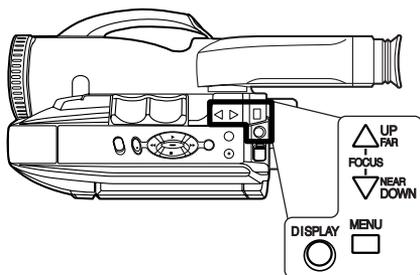


1, 2

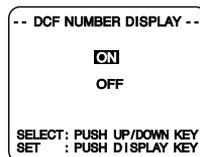

ON → Directory/Image Number is displayed.

OFF → Directory/Image Number is not displayed.

Directory/Image Number

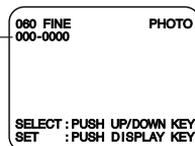

### Note:

- Directory/Image Number "xxx-xxxx" (x indicates the number) is assigned automatically.
- Even if ON is set, if the Directory/Image Number does not correspond with DCF it is not displayed.
- The Directory/Image Number becomes the folder and file name when viewed with card reader.
- This product is compliant with DCF (Design rule for Camera File System). Images saved on the Memory Card using other Digital Still Cameras that are compliant with DCF can be viewed on this product.

# Digital Still Camera

## Delete Specific Images

You can delete unwanted images and increase the remaining image memory.


### Important :

Once deleted, images cannot be restored.

**DELETE PAGE :** Deleting Specific Image Pages.

**DELETE ALL :** Deleting All Image Pages.

**FORMAT :** Format the Memory Card.

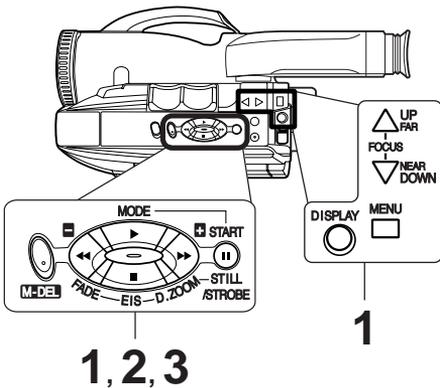

### Note:

- Pictures captured with other brand products cannot be used with this Camcorder.
- If "CARD ERROR" appears on-screen, see page 56.

### WARNING :


Do not, under any circumstances, remove the card immediately after pressing the RECORD/PAUSE (during recording of an image) or while deleting. This could damage the format of the card and make it unusable.

## Before you begin...


- Connect Camcorder to power source.
- Insert the Memory Card (optional, page 34).
- Set POWER to PHOTO.  
Press ► (PLAY) to play mode.

## Deleting Specific Image Pages


- 1 Press **M-DEL** for DELETE menu.  
Press **UP** or **DOWN** to select **PAGE**.  
• To exit menu at any time, press STOP.

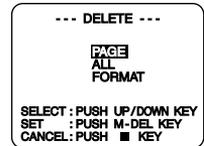

- 2 Press **M-DEL** for Multi Image screen. Press **+** (FF) or **-** (REW) to select image page.  
Press **M-DEL** to set.

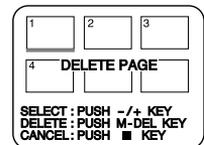


- 3 Press **M-DEL** to delete the page.  
• As image pages are deleted, page numbers adjust automatically.

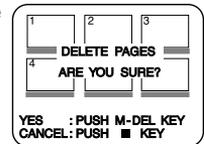


## Deleting All Image Pages

- 1 Do step 1 above, and select **ALL**.
- 2 Press **M-DEL**.  
The screen right is displayed.
- 3 Press **M-DEL** to delete all pages.  
• "NO PICTURE" appears on-screen after deletion.

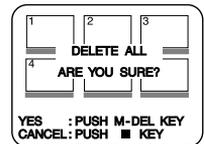

## Format the Memory Card




- 1 Do step 1 above, and select **FORMAT**.
- 2 Press **M-DEL**.  
The screen right is displayed.
- 3 Press **M-DEL** and all image data is deleted from the Memory Card.  
• "NO PICTURE" appears on-screen after deletion.

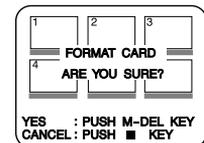

# Digital Still Camera

## Picture in Picture Wipe Title

Captured still images (page 36) can be recorded along with the current picture.

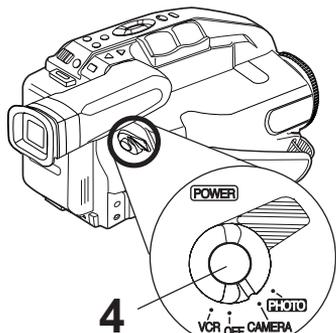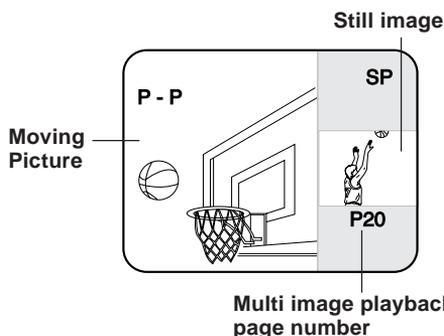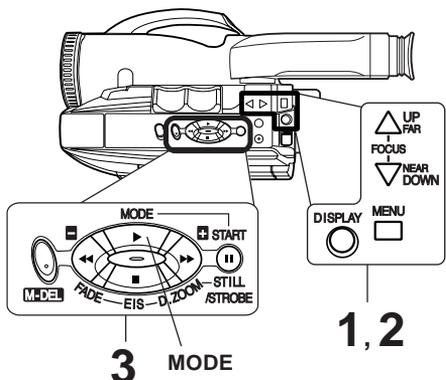

## Before you begin...

- Connect Camcorder to power source.
- Insert the Memory Card (optional, page 34).
- Set POWER to CAMERA.

## ( P - P = Picture in Picture )

**1** Press **MENU** for MENU mode.

Press **UP** or **DOWN** to select

**DIGITAL WIPE**.

▲ SELF DEMO	: OFF	PAGE 2/2
DIGITAL WIPE	: OFF	
MAGI CP IX	: OFF	
MOTION SENSOR	: OFF	
VIDEO EFFECTS	: FADE	BLACK
SELECT : PUSH UP/DOWN KEY		
SET : PUSH DISPLAY KEY		
END : PUSH MENU KEY		

**2** Press **DISPLAY** to select ON.  
Press **MENU** to exit.

- A still image captured on the Memory Card and the Multi image playback page number is displayed on the right side of the screen.
- If there are no recordings on the card, "NO PICTURE" appears on-screen.

**3** Press **+** (FF) or **-** (REW) to select still image to be used.

**4** Start recording (page 17).

- When recording starts, Multi image playback number disappears. Then the captured still images can be recorded along with the current picture.
- To exit from the Picture in Picture Wipe title mode, press **MODE** (page 41).





## Note:

- If Memory Card is not inserted, "NO CARD" appears on-screen. Set Power to OFF, then insert the Memory Card.
- Pictures captured with other brand products cannot be used with this Camcorder.
- If "INCOMPATIBLE IMAGE" appears on-screen, the size of the captured image cannot be played back on this Camcorder.
- If "CARD ERROR" appears on-screen, see page 56.
- If Picture in Picture Wipe Title is selected, the following functions are not available: Motion Sensor, Auto Fade, Digital Fade, Color Digital Filter, Digital Zoom, Digital E.I.S., Still/Strobe/Wide.

# Digital Still Camera

## Digital Wipe Mode

Insert a captured still image into the current recording, or vice versa, in one of three wipe effects.

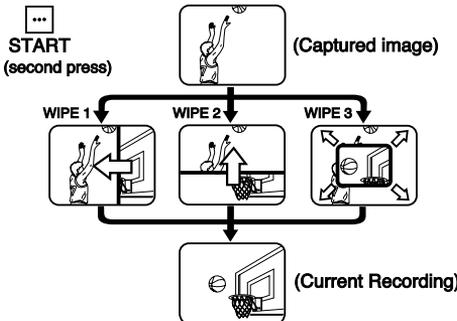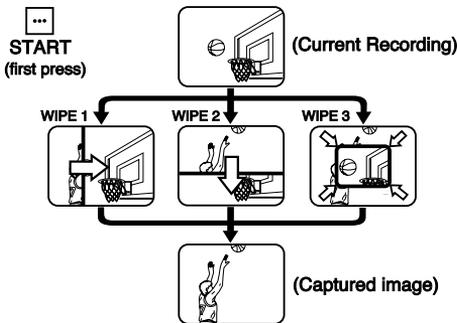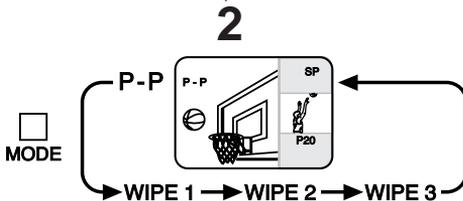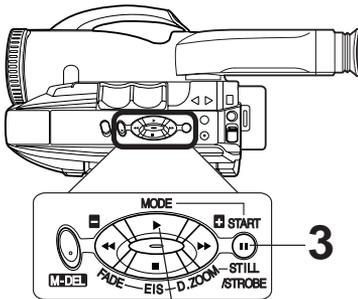

## Before you begin...

- Connect Camcorder to power source.
- Insert the Memory Card (optional, page 34).
- Set POWER to CAMERA.

**1** Repeat steps 1-3 on page 40 to set Picture in Picture Wipe title.

**2** Press **MODE** repeatedly for Wipe effect 1, 2, or 3 (See left).  
 • WIPE 1 will flash for a while to store the image for the wipe.

**3** Press **START**:  
**once** → inserts captured image.  
**twice** → inserts current recording picture.  
 • You can freeze the wipe in progress by pressing **START**. Press **START** again to resume wipe.

### Note:

- If Memory Card is not inserted, "NO CARD" appears on-screen. Set Power to OFF, then insert the Memory Card.
- Pictures captured with other brand products cannot be used with this Camcorder.
- If "INCOMPATIBLE IMAGE" appears on-screen, the size of the captured image cannot be played back on this Camcorder.
- If "CARD ERROR" appears on-screen, see page 56.
- If Digital Wipe mode is selected, the following functions are not available: MotionSensor, Auto Fade, Digital Fade, Color Digital Filter, Digital Zoom, Digital E.I.S., Still/Strobe/Wide.

# PC Connection

## Digital PhotoShot Software

A live or captured image can be transferred to your PC (Personal Computer).

## System Requirements for Digital PhotoShot

- IBM PC/AT or compatible.
- Intel® Pentium® Processor.
- Microsoft® Windows®95 or Windows®98 or Windows®Me or Windows®2000.
- RAM: 16 MB or more.
- 2 MB of available hard-disk space.

## Before you begin...

- Turn your PC off.
- Set Camcorder POWER to OFF.


- 256 color monitor (full color recommended).
- 3.5 inch 1.44 MB floppy disk drive (for installation).
- RS-232C serial port (D-Sub 9-pin).  
An adaptor (D-Sub 9-pin male to a D-Sub female) is required for a D-Sub 25-pin.
- Mouse or other pointing device.

## PC-Camcorder Connection

Connect Camcorder PC jack to the serial port on your PC (Personal Computer) using the supplied PC connector cable. Refer to PC or Windows manual to identify which COM port to be used for connection.

### Note:

- Be sure to turn PC off before connection for proper image transfer.
- After Camcorder and PC are connected by starting up the software included, video recording is not possible.

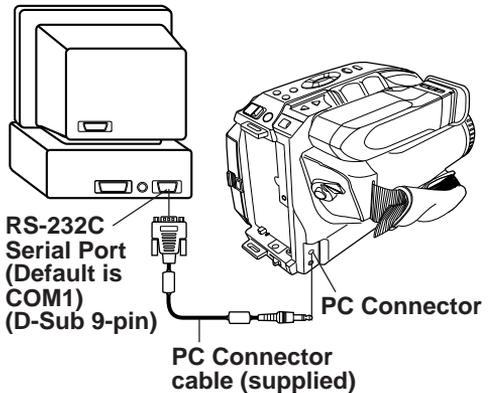

## Software Installation (Windows 95/98/Me/2000)

### Before you begin...

- Your PC is in the power on mode.

- 1 Turn on PC (Personal Computer) and start up Windows.
- 2 Insert Digital PhotoShot disk (Windows 95/98/Me/2000) into a floppy disk drive.
- 3 Click on Start, then “Run...”
- 4 Type in “a:\setup.exe” and click OK.
  - If your 3.5 inch floppy disk drive is not “A”, use appropriate letter.
- 5 Follow instructions as they appear on PC screen until the installation is complete.
  - Setup window will disappear when the installation is complete.



## Before you begin...


- Insert the Memory Card (optional, page 34).
- Make Camcorder-PC connections (page 42).
- Turn your PC on.
- Set Camcorder POWER to PHOTO.

## Running the Software (Windows 95/98/Me/2000)

- 1** Select Programs/  
Panasonic/Palmcorder/  
Digital PhotoShot from  
the Start menu.
- 2** “Digital PhotoShot” is  
opened.

### Note:

- COM Port and Baudrate are automatically selected.

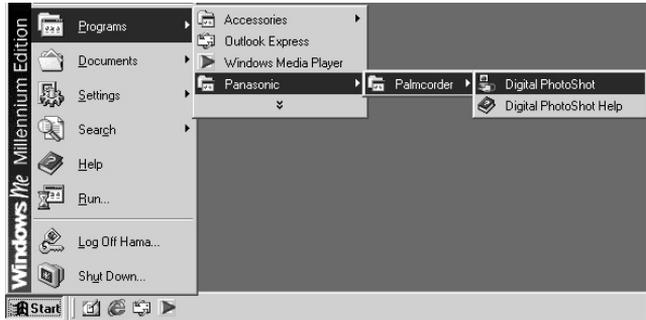

Refer to Help for information about application operation and other Error messages.



## Using Live Image Data

 You can capture the current Camcorder picture to your PC.

- 1** Repeat steps 1 and 2 on above to run the Software.
- 2** Click on “Window,” then select “1 Live image Window.”
- 3** Click on “Preview,” then Click on “Capture.”
  - Repeat this step to decide on an image.
  - Captured image is transferred to your PC when you click on “Capture”.
- 4** Click on “Window,” then select “Live photo Zoom In.”
- 5** Click on “File,” then select “Save As.”
  - Captured image is stored to your PC.

### Note:

- If, while transferring the image to your PC, the displayed picture appears abnormal, restart the PC application and turn Camcorder POWER off, and then back on.

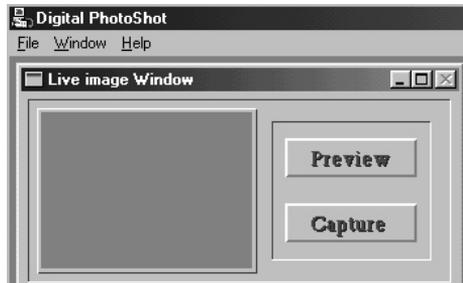

# PC Connection

## Before you begin...

- Insert the Memory Card (optional, page 34).
- Make Camcorder-PC connections (page 42).
- Turn your PC on.
- Set Camcorder POWER to PHOTO.

## Using Memory Card Image Data

Pictures captured with your Camcorder can be transferred to your PC.

**1** Repeat steps 1 and 2 on page 43 to run the Software.

**2** “Preview Window” screen appears.

**3** Select the image data you want to transfer to your PC.  
• The selected image will be underlined in green.

**4** Click on:

### Transfer

- The picture image is transferred to your PC and displayed.

### Delete

- The picture image is deleted.

### Save...

- The picture image is transferred to your PC and displayed. Save window appears.



## Note:

- If, while transferring the image to your PC, the displayed picture appears abnormal, restart the PC application and turn Camcorder POWER off, and then back on.

## Using PC Image Data

You can use JPEG or Bitmap files from your PC for Picture in Picture Wipe Title and Digital Wipe by transferring them to the Camcorder using the Digital PhotoShot Software.

**1** Repeat steps 1 and 2 on page 43 to run the Software.

**2** Click on “Window,” then select “2 Preview Window.”

**3** Click on “File,” then Click on “Open.”

- At your PC, please select and open the data you want to transfer to the Camcorder.


## Note:

- When transferring image data larger than VGA size (640x480) from the PC to the Camcorder, the perimeter of the image is cropped to VGA size.


**4** Click on “File,” then select “Data out to camera,” then select **Fine** or **Normal** mode.

- Your PC image data is transferred to the Camcorder.

**44** For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

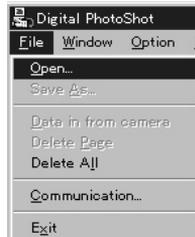

## Driver Quick Reference

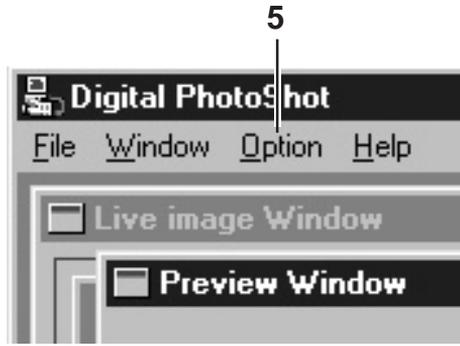

### 1 File

- **Open...**  
To open an existing image (Bitmap or JPEG).
- **Save As**  
To save the active image file under a new file name while preserving the original file.
- **Data in from CAMERA**  
To display a dialog box listing all images in the Card memory along with Preview, Transfer, Delete, etc. commands.
- **Delete Page**  
To delete the selected image from the Card memory.
- **Delete All**  
To delete all images from the Card memory.
- **Communication**  
To specify the port to which the Camcorder is connected.
- **Print...**  
To print the currently active image.
- **Exit**  
To quit the "Digital PhotoShot" application.

### 2 Image

- **Image Adjustment**  
To modify the captured image as desired.
- **Copy to Clipboard**  
To copy a view image to clipboard.

### 3 Window

- **Close Image**  
Select "Close image" to close all view windows.
- **Live Photo Zoom In**  
To open a view window.

### 4 Help

- **Help**  
To display the Help screen.
- **About**  
To display software version information.


### 5 Option

- **Reload**  
To load the picture from the Camcorder to your PC again when Camcorder Memory Card was changed.

# Using a SD PCMCIA Adaptor (optional)

If your PC has a PCMCIA type II slot, you can insert the Memory Card (optional) into a SD PCMCIA adaptor (optional, page 52) to transfer images, captured with this Camcorder only, to your PC.

## Inserting a Memory Card (optional)

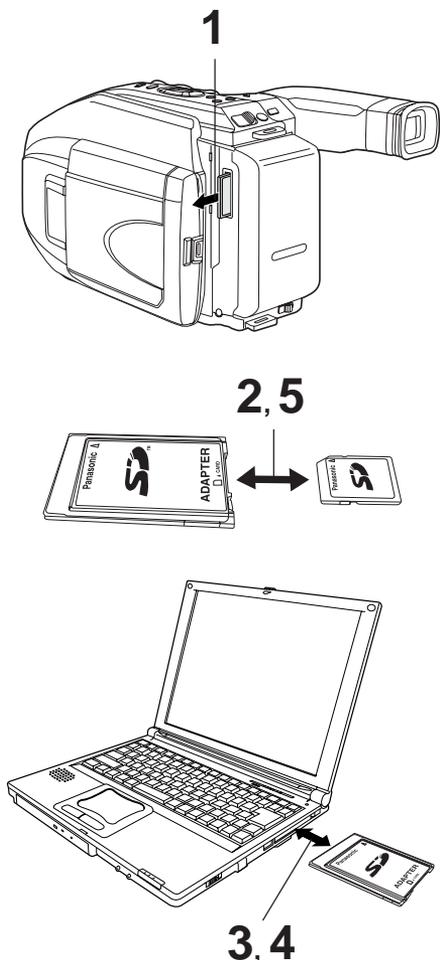

## Before you begin...

- Turn your PC on.
- Set Camcorder POWER to OFF.

- 1** Remove the **Memory Card** from the Camcorder (page 34).
- 2** Hold the **Memory Card** so that the arrow side faces up and points toward the **SD PCMCIA Adaptor**. Securely insert the card into the SD PCMCIA Adaptor slot as far as it will go.
- 3** Hold the **SD PCMCIA Adaptor** so that the arrow side points toward the PCMCIA type II slot of **your PC (Personal Computer)**. Securely insert the SD PCMCIA Adaptor as far as it will go.
  - Depending on the PC, it may be necessary to turn the SD PCMCIA Adaptor upside down in order to insert the card.
- 4** To remove, push the eject button on your PC (may vary by machine) and pull the **SD PCMCIA Adaptor** out until it is no longer inserted in the **PC (Personal Computer)**.
- 5** Pull the **Memory Card** out of the **SD PCMCIA Adaptor**.


## Note:

- Do not remove the SD PCMCIA Adaptor from the PC while the PC is working or while image data is being transferred between the Memory Card and the PC (including operation such as opening and storing images), this will cause irreversible damage to the memory.
- If you change file name or folder in the memory card, the images will be displayed properly on PHOTO mode.
- If your PC does not have a PCMCIA type II slot but has a USB port, you can use the optional SD USB Reader/Writer (optional, see page 52).

Please carefully read the Operating Instructions that come with the SD USB Reader/Writer before using.

# Viewfinder/LCD Monitor Indications

Tape remaining and battery charge level can be displayed.

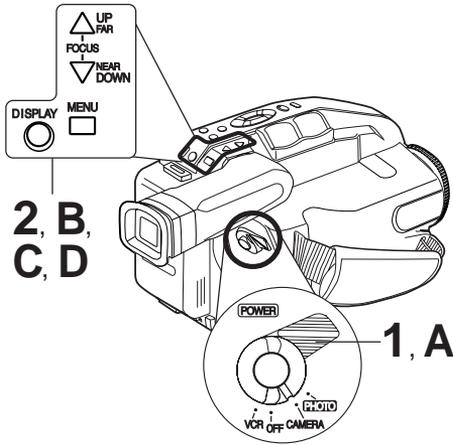


2, B,  
C, D

1, A

Battery Remaining:

Tape Remaining:

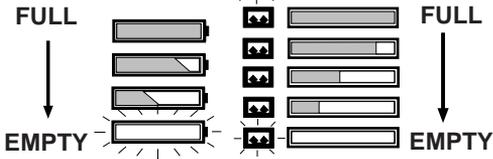


**Before you begin...**

- Connect Camcorder to power source.

**1** Set POWER to CAMERA.


**2** Press DISPLAY repeatedly to select the following displays.

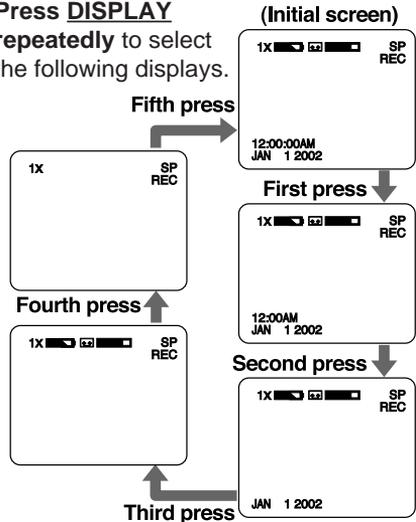

- Tape remaining indicator operates a few seconds after tape starts moving.

## Recording the Date and Time

- a** Do steps 1 and 2 above to select time/date, date only, or no display.
- b** Start a recording (page 17).  
• Only the Date and/or Time are recorded.

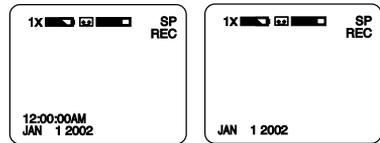

## Display-Off Mode


- A** Set POWER to CAMERA or VCR.
- B** Press MENU for MENU mode.  
Press UP or DOWN to select DISPLAY.
- C** Press DISPLAY to select OFF.  
Press MENU to exit.
- D** Press DISPLAY repeatedly to remove time/date.

--- MENU --- PAGE 1/2

PROGRAMMED REC  
DISPLAY : ON  
SHUTTER : AUTO  
STAND-BY RELEASE : OFF  
CLOCK SET  
LIGHT MODE : OFF/ON

SELECT: PUSH UP/DOWN KEY  
SET : PUSH DISPLAY KEY  
END : PUSH MENU KEY

[CAMERA MODE]

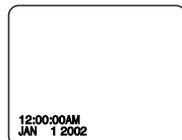

--- MENU ---

CLOCK SET  
DISPLAY : ON

SELECT: PUSH UP/DOWN KEY  
SET : PUSH DISPLAY KEY  
END : PUSH MENU KEY


[VCR MODE]


Indications are restored the next time Camcorder is turned on.

For Your Information

# Viewfinder/LCD Monitor Indications

 
## CAMERA/VCR mode

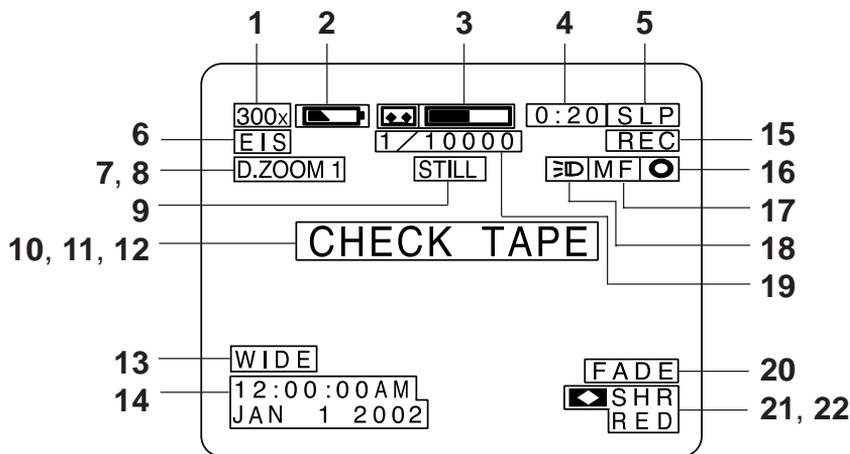

- 1 **Zoom Magnification level** (pages 23, 30).
- 2 **Battery Remaining**  (page 47).  
“WARNING LOW BATTERY” appears and Camcorder shuts off after 15 seconds.
- 3 **Tape Remaining** (page 47).  
“” flashes and “TAPE END” appears for 5 seconds when:
  - End of tape is reached.
  - “” flashes 1 minute and “CHECK TAPE” appears for 5 seconds when:
    - RECORD/PAUSE is pressed with no cassette, or cassette has no record tab in Camera (RECORD) mode.
    - PLAY, FF or REW is pressed with no cassette inserted in VCR mode.
- 4 **10-Second Reminder**  
Each time a recording is started, a 10 second incremental display (up to 59:50) lets you monitor how long one scene is recorded.  
 0:00 0:10 0:20 . . . . . 59:50  
  
 (return to 0:00 and continue)
- 5 **TAPE SPEED** (pages 11, 17).  
(SP=standard play, SLP=super long play).
- 6 **Digital E.I.S.** (page 31).
- 7 **Digital Zoom** (page 30).
- 8 **Digital Wipe** (pages 40, 41).
- 9 **Still/Strobe** (page 32).
- 10 **VCR-MODE**  
“VCR-MODE” appears 1 minute when POWER is set to VCR or if RECORD/PAUSE is pressed in VCR mode.
- 11 **DEW**  
If moisture condensation occurs in unit, “WARNING DEW DETECTED” appears, and Camcorder will shut off in 15 seconds. Wait until “WARNING” no longer indicates when Camcorder is turned on to use.
- 12 **Motion Sensor** (page 33).
- 13 **Wide Screen** (page 32).
- 14 **Date and Time** (pages 14, 15).
- 15 **Operating Mode**
  - REC (record)
  - PAUSE
  - FF (fast forward)
  - PLAY
  - REW (rewind)
- 16 **Backlight** (page 23).
- 17 **Manual Focus** (page 25).
- 18 **Light ON/OFF/AUTO** (page 16).
- 19 **High Speed Shutter** (page 26).
- 20 **Fade** (page 27).
- 21 **Color Digital Fade** (page 28).
- 22 **Color Digital Filter** (page 29).

# Viewfinder/LCD Monitor Indications

## PHOTO mode

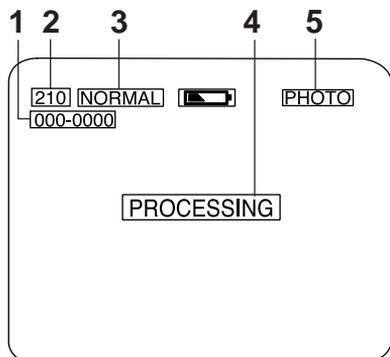

**1 Directory/Image Number** (page 38)

**2 Image Page Remaining Indication** (page 36)

- Image pages left in selected mode. "000" flashes when memory is full.
- Memory capacity provided all pictures are taken in the same mode:  
 "NORMAL" mode → Approx 210 images (Optional 8 MB Memory Card)  
 "FINE" mode → Approx 60 images (Optional 8 MB Memory Card)

**3 REC MODE**

- NORMAL or FINE mode.
- Image Size :  
 "NORMAL" mode → 320 x 240 pixels.  
 "FINE" mode → 640 x 480 pixels.

**4 Image Status Indication**

Image status is displayed when captured.

**PROCESSING:**

Image is being processed.  
 Note: Do not change setting to CAMERA or change recording mode while "PROCESSING" is displayed.

**COMPLETED:**


Image processing is completed.  
 The next image may be captured when "COMPLETED" disappears.

**PLEASE WAIT:**


Displayed when image is selected from Multi Image Playback screen.  
 Note: Do not change POWER setting to CAMERA or change recording mode while "PLEASE WAIT" is displayed.

**5 Recording Mode**

- POWER is set to PHOTO.

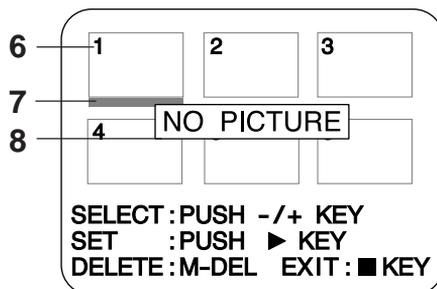

SELECT : PUSH -/+ KEY  
 SET : PUSH ► KEY  
 DELETE : M-DEL EXIT : ■ KEY

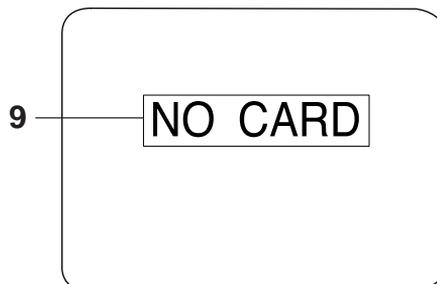

**6 Multi Image Playback page number.**

**7 Currently selected image is underlined in green or white.**

"NORMAL" mode → green  
 "FINE" mode → white

**8 Image Status Indication**

**NO PICTURE:**

No image is captured, all images are deleted from card.


**9 MEMORY CARD Indication**

When the Memory Card (optional) is not inserted in CAMERA or PHOTO mode, "NO CARD" appears.  
 If the Memory Card is defective, "CARD ERROR" appears.

# Operation Notes

## Cleaning EVF (Electronic Viewer Finder)

To Remove

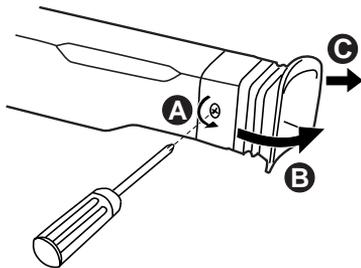

- 1** **A** Remove the screw with a Phillips screwdriver.  
Turn counterclockwise.  
**B** Turn the EVF Eyepiece.  
**C** Pull the EVF Eyepiece.
- 2** Remove any lint or dust particles with a soft clean cloth being careful not to scratch the glass surfaces.
- 3** Replace the EVF Eyepiece and the screw.

## Notice

This product utilizes both a Cathode Ray Tube (CRT) and other components that contain lead. It also has a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <<http://www.eiae.org>>

### ATTENTION :



A nickel cadmium battery that is recyclable powers the product you have purchased. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.

# Replacing Clock Battery


The clock battery is pre-installed. Follow the steps below if replacement becomes necessary.

## WARNING:

Replace battery with Panasonic PART NO. VSBW0004 (CR2025) only. Use of another battery may present a risk of fire or explosion.

Caution: Battery may explode if mistreated. Dispose of used battery promptly. Keep away from children. Do not recharge, disassemble or dispose of in fire.

## Clock Battery

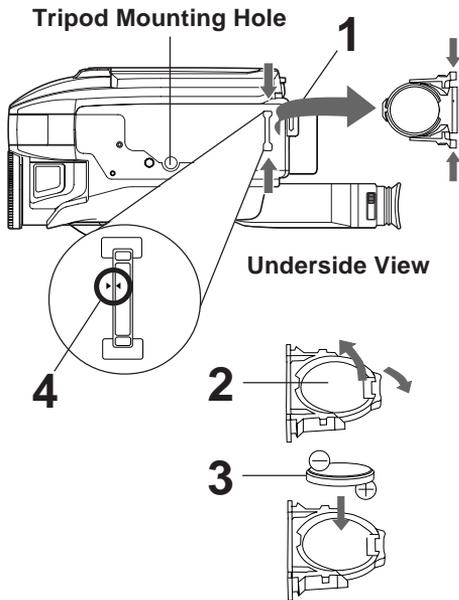

- 1** While pinching the 2 tabs, pull Battery Tray out.
- 2** Bend middle tab out and remove Battery.
- 3** Snap new Battery (⊕ mark down) into Battery Tray.
  - Do not reverse the polarity.
- 4** Insert Battery Tray so the triangle marks meet.


### Note:

 - Keep Battery out of children's reach. Swallowing it may be harmful.
- Improper installation, discharge, or missing battery causes "CLOCK BATTERY" to appear when DISPLAY is pressed.
- Battery life is approximately 5 years.

# Palmcorder Accessory System

To order instructions, see the Accessory Order Form page.

- The listed standard battery use times are based on continuous recording using this Palmcorder.

Accessory #	Figure	Description	Price
PV-A19		AC Adaptor with DC Power Cable (Charging of the Nickel Cadmium Battery or Nickel Metal Hydride Battery)	Call For Pricing
PV-A20		AC Adaptor with DC Power Cable (Charging of the Nickel Cadmium Battery or Nickel Metal Hydride Battery)	Call For Pricing
HHR-V60A/1B		Up to 6 hr Battery Pack (Rechargeable Nickel Metal Hydride Battery)	\$119.95
HHR-V40A/1B		Up to 4 hr Battery Pack (Rechargeable Nickel Metal Hydride Battery)	\$69.95
HHR-V20A/1B		Up to 2 hr Battery Pack (Rechargeable Nickel Metal Hydride Battery)	\$59.95
PV-AA6		"AA" Battery Case	\$20.00
PV-C16		Car Battery Cord	\$70.00
PV-P1		VHS PlayPak	\$39.95
PV-H18A		Soft Sided	\$49.95
RP-SD064BPPA RP-SD032BPPA RP-SD016BPPA RP-SD008BPPA		64 MB SD Memory Card 32 MB SD Memory Card 16 MB SD Memory Card 8 MB SD Memory Card	Call For Pricing
BN-SDCAPE/1B		USB Reader/Writer for SD Memory Card (compatible with MultiMediaCard)	\$79.95
BN-SDABPE/1B		SD PCMCIA Adaptor (compatible with MultiMediaCard)	\$79.95

**Note:**

- Prices subject to change without notice.

# Palmcorder Accessory Order Form

Please photocopy this form when placing an order.

1. Palmcorder Model # \_\_\_\_\_

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Subtotal				
Your State & Local Sales Tax				
Shipping & Handling				6.95
Total Enclosed				

3. Method of payment (check one)

- Check or Money Order enclosed (NO C.O.D.SHIPMENTS)
- VISA                      Credit Card # \_\_\_\_\_
- MasterCard              Expiration Date \_\_\_\_\_
- Discover                    Customer Signature \_\_\_\_\_

Make Check or Money Order to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms. \_\_\_\_\_

First    Last

Phone #:

Day (    )

Street Address

Night (    )

City    State              Zip

TO OBTAIN ANY OF OUR PALMCORDER ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368

[6 AM-5 PM M-F, 6 AM-10:30 AM SAT, PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC SERVICES COMPANY ACCESSORY ORDER OFFICE

20421 84th Avenue South Kent, WA. 98032

For Your Information

# Specifications

<b>Power Source:</b>	Compact VHS Camcorder: DC 6 V AC Adaptor: 110/120/220/240 V AC, 50/60 Hz Battery: Nickel-Cadmium Type DC 6 V
<b>Power Consumption:</b>	Compact VHS Camcorder: 6V DC 8.5 W (Max. 11.5 W) AC Adaptor: 19 W 1.2 W (when not in use.)
<b>Video Signal:</b>	EIA Standard (525 lines, 60 fields) NTSC color signal
<b>Video Recording System:</b>	2 rotary heads plus flying erase head Helical scanning system
<b>Audio:</b>	1 track
<b>Pick-Up System:</b>	Sequential color difference field reverse system
<b>Pick-Up Device:</b>	One integral color filter Charge Coupled Device (CCD)
<b>Lens:</b>	20:1 zoom lens, F1:1.7 with auto iris control Focal length: 3.8 mm - 76.0 mm 4 speed power zoom function
<b>Viewfinder:</b>	10.2 mm (0.4 inch) Electronic Viewfinder
<b>LCD Monitor:</b>	101.6 mm (4.0 inch) Liquid Crystal Display
<b>Memory:</b>	8 MB SD Memory Card (optional)
<b>Image Size:</b>	FINE: 640 × 480 pixels Normal: 320 × 240 pixels
<b>Image Storage:</b>	FINE: Approx. 60 images Normal: Approx. 210 images
<b>Image Format:</b>	JPEG
<b>Minimum Illumination Required:</b>	0.8 lx (F1:1.6) 0.08 footcandles 7 lx (F1:1.6) 0.7 footcandles (EIA Standard)
<b>Operating Temperature:</b>	0 °C~40 °C (32 °F~104 °F)
<b>Operating Humidity:</b>	10 %~75 %
<b>Weight:</b>	Compact VHS Camcorder: 1.03 kg 2.27 lbs. AC Adaptor: 0.3 kg 0.66 lbs.
<b>Dimensions:</b>	Compact VHS Camcorder: 106 (W) × 125 (H) × 190.5 (D) mm 4-3/16 (W) × 4-15/16 (H) × 7-1/2 (D) inch AC Adaptor: 68 (W) × 41 (H) × 140 (D) mm 2-11/16 (W) × 1-5/8 (H) × 5-1/2 (D) inch

Weight and dimensions shown are approximate.  
Designs and specifications are subject to change without notice.

# Before Requesting Service

If a problem arises, you may be able to correct it yourself.  
See Symptom and Correction list below.

Symptom	Correction
No picture in EVF or LCD monitor ...	<ul style="list-style-type: none"> <li>• Connect Power Source. (pp. 9, 10)</li> <li>• Set POWER to VCR or CAMERA. (pp. 17, 20)</li> <li>• Check for Dew Indication. (p. 48)</li> <li>• Use fully charged Battery. (p. 9)</li> <li>• Firmly connect all needed cables. (p. 10)</li> </ul>
The right side of the screen appears grayish...	<ul style="list-style-type: none"> <li>• Be sure DIGITAL WIPE is set to ON. (p. 40)</li> </ul>
Video cassette cannot be inserted ...	<ul style="list-style-type: none"> <li>• Connect Power Source. (pp. 9, 10)</li> <li>• Insert cassette, window side facing out. (p. 11)</li> </ul>
Video cassette cannot be removed ...	<ul style="list-style-type: none"> <li>• Connect Power Source. (pp. 9, 10)</li> </ul>
Operation buttons do not work ...	<ul style="list-style-type: none"> <li>• Check for Dew Indication. (p. 48)</li> </ul>
Recording cannot be done ...	<ul style="list-style-type: none"> <li>• Make sure record tab is intact. (p. 11)</li> <li>• Check Battery Indicator. (p. 47)</li> <li>• Check for Dew Indication. (p. 48)</li> </ul>
Auto Focus does not operate ...	<ul style="list-style-type: none"> <li>• Set FOCUS to AUTO. (p. 25)</li> <li>• Set POWER to CAMERA. (p. 17)</li> </ul>
Sound from microphone can't be monitored ...	<ul style="list-style-type: none"> <li>• Set unit to REC or Record/Pause mode.</li> </ul>
Camera picture is too dark ...	<ul style="list-style-type: none"> <li>• Set HIGH SPEED SHUTTER to AUTO. (p. 26)</li> </ul>
No playback picture, or the playback picture is noisy or contains streaks ...	<ul style="list-style-type: none"> <li>• Press UP/DOWN button during playback (Tracking Control). (p. 20)</li> </ul>
"Panasonic ITS TAPES CAN PLAY IN YOUR VCR ..." appears in EVF or LCD Monitor ...	<ul style="list-style-type: none"> <li>• Set POWER to CAMERA, then set SELF DEMO : OFF in MENU screen to cancel Demo mode. (p. 7)</li> </ul>
"NO CARD" appears in EVF or LCD Monitor ...	<ul style="list-style-type: none"> <li>• Make sure Memory Card (optional) is inserted. (p. 34)</li> </ul>
Cannot capture the image ...	<ul style="list-style-type: none"> <li>• Set POWER to PHOTO. (p. 36)</li> <li>• No memory remaining. Delete some images before capturing more images.</li> </ul>
Cannot playback Still image ...	<ul style="list-style-type: none"> <li>• Set POWER to PHOTO. (p. 37)</li> <li>• Make sure Memory Card (optional) is inserted. (p. 34)</li> </ul>
"NO PICTURE" appears in EVF or LCD Monitor ...	<ul style="list-style-type: none"> <li>• There are no images in memory.</li> </ul>
Top of playback picture waves back and forth excessively ...	<ul style="list-style-type: none"> <li>• A playback signal is not as stable as an off the air TV signal, so the top of your TV screen may appear bent or unstable during playback. This is called, "Horizontal AFC time constant change." To correct, slowly turn the TV horizontal hold control. If your TV does not have this control, or adjusting it does not help, contact your TV service center. (Some nominal service charges may be required.)</li> </ul>

## Video Head Cleaning



**Clogged Video Head**

While head cleaning is normally not needed, playing old or damaged tapes may clog the heads. When playback picture resembles example at the left, head cleaning is required.

Ideally, head cleaning should be performed by a qualified service technician. When this is not possible, purchase a head cleaning cassette. Be sure to follow cleaning cassette instructions exactly and only use when symptoms occur.

# Before Requesting Service

## Self Diagnostic System

If any of the following numbers appear on-screen, the camcorder may have a problem. Do not remove the battery (if attached) and write down the displayed number on below. Then, take the camcorder to a service center for repair.

Error No.	Description
U11	Card Error
U12	Card Error
U13	Card Error
U14	Card/Camcorder Dialogue Error
U15	No Card Memory
U16	Captured image limit exceeded
U17	Captured image limit exceeded
U30	Error other than above

## Request for Service Notice

Please photocopy this form when making a request for service notice.

### Request for Service Notice:

In the unlikely event this product needs service.

- Please include your **proof of purchase**.  
(Failure to do so will delay your repair.)
- To further speed your repair please provide an explanation of what is wrong with the unit and any symptom it is exhibiting.

---

---

---

Mail this completed form and your Proof of Purchase along with your unit to:

Panasonic Services Company  
1705 N. Randall Road  
Elgin, IL. 60123-7847  
Attn: Camcorder Repair

Please write the displayed Self Diagnostic number here.  
(See above)

# Limited Warranty

PANASONIC CONSUMER ELECTRONICS COMPANY,  
DIVISION OF MATSUSHITA ELECTRIC  
CORPORATION OF AMERICA  
One Panasonic Way Secaucus, New Jersey 07094

PANASONIC SALES COMPANY, DIVISION OF MATSUSHITA  
ELECTRIC OF PUERTO RICO, INC.,  
AVE. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park,  
Carolina, Puerto Rico 00985

## Panasonic/Quasar Video Products Limited Warranty

### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product	Parts	Labor	Service	Contact Number
Camcorder	One (1) Year (except CCD Image Sensor) CCD Image Sensor - 6 (Six) Months	Ninety (90) Days Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
DVD/VCR Deck, A/V Mixer	One (1) Year	Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
TV/VCR, TV/DVD, TV/DVD/VCR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	Carry-In: 21" CRT and Smaller In-Home or Carry-In: 22" CRT and Larger	1-800-211-PANA(7262)
TV/HDR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	In-Home or Carry-In	1-888-843-9788
Rechargeable Batteries (in exchange for defective item)	Ten (10) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Tape (in exchange for defective item)	Five (5) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Memory Cards (in exchange for defective item)	Ninety (90) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in or mail-in your product or arrange for in-home service, as applicable, during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

### Carry-In, Mail-in or In-Home Service

For Carry-In, Mail-In or In-Home Service (as applicable) in the United States call toll free contact number listed above or visit Panasonic Web Site: <http://www.panasonic.com>

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

In-Home service, if applicable, requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

### Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.** (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed item if applicable, or travel to and from the servicer, loss of media or images, data or other memory or recorded content. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.**

For Your Information

# Customer Services Directory

*For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:  
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm; Saturday-Sunday 9 am-7 pm, EST.  
or send e-mail : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)*

*Web Site: <http://www.panasonic.com>  
You can purchase parts, accessories or locate your nearest servicer by visiting our Web Site.*

## **Accessory Purchases:**

**1-800-332-5368 (Customer Orders Only )**  
**Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032**  
**(Monday-Friday 6 am-5 pm; Saturday 6 am-10:30 am, PST)**  
**(Visa, MasterCard, Discover Card, American Express, Check)**

## **Product Repairs**

### **Centralized Factory Servicer**

**MAIL TO :** Panasonic Services Company  
1705 N. Randall Road,  
Elgin, IL 60123-7847  
Attention: Camcorder Repair

Please carefully pack and ship, prepaid and insured, to the Elgin Centralized Factory Servicer. Customer's in Puerto Rico, please ship or carry in to location below ("Service in Puerto Rico").

### **Service in Puerto Rico**

**Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicer:**  
**Ave. 65 de Infanteria. Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985**  
**Phone (787) 750-4300 Fax (787) 768-2910**

As of February 2002


# Spanish Quick Use Guide/Guía Para Uso Rápido

## Antes de comenzar...

- Inserte un casete con lengüeta para prevención del grabado.

### Cargue la batería


Cargue completamente la batería antes de usarla.

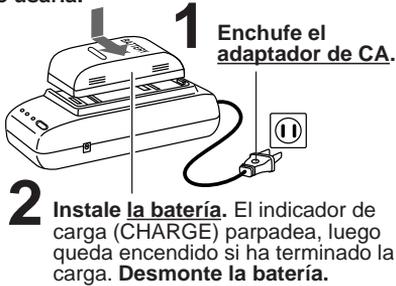

**1** Enchufe el adaptador de CA.

**2** Instale la batería. El indicador de carga (CHARGE) parpadea, luego queda encendido si ha terminado la carga. Desmonte la batería.

### Inserte el casete

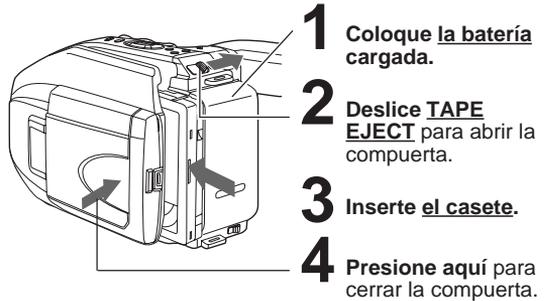

**1** Coloque la batería cargada.


**2** Deslice TAPE EJECT para abrir la compuerta.

**3** Inserte el casete.

**4** Presione aquí para cerrar la compuerta.

### Grabación con la videocámara

**1** Presione LCD-OPEN para abrir el monitor LCD. Abralo completamente y ajuste el ángulo.

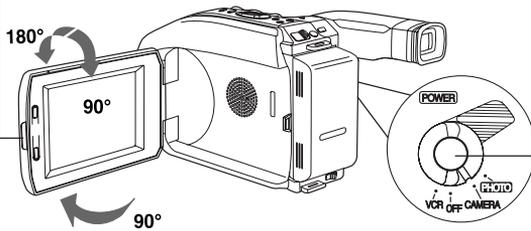


**2** Ajuste POWER a CAMERA.

**3** Presione RECORD/PAUSE para comenzar la grabación. Presione RECORD/PAUSE otra vez para hacer una pausa en la grabación.

### Reproduzca usando el monitor LCD

**1** Presione LCD-OPEN para abrir el monitor LCD. Abralo completamente y ajuste el ángulo (vea arriba).

**2** Ajuste POWER a VCR.

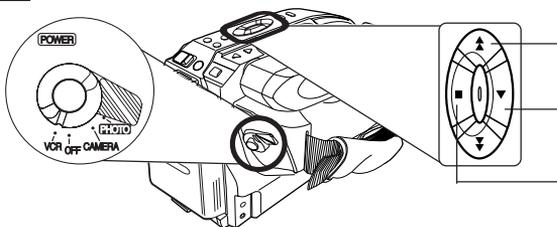

**3** Presione REWIND/SEARCH para rebobinar la cinta.

**4** Presione PLAY para comenzar la reproducción.

**5** Presione STOP para finalizar la reproducción.

### Reproducción con efectos especiales

Para localizar rápidamente una escena específica

- Oprimir el botón de localización (SEARCH).

Para congelar una imagen

- Oprimir el botón de pausa/imagen fija (PAUSE/STILL).
- Oprimir nuevamente el botón cuando se desea continuar reproduciendo.

# Index

## Symbols

+ (FF) Button ..... 37, 39, 40  
- (REW) Button ..... 37, 39, 40

## A

AC Adaptor ..... 10  
Accessories (Optional) ..... 52  
Accessories (Supplied) ..... 2  
Audio/Video Cable ..... 21, 22  
Audio/Video Out ..... 21, 22  
Auto Daylight Saving Time ... 15

## B

Backlight ..... 23  
B.LIGHT Button ..... 23  
Battery Pack ..... 9, 10  
BATTERY RELEASE Button .. 9  
Before Requesting Service  
..... 55, 56  
BRIGHT ADJUSTMENT. 17, 20  
Built-in Microphone ..... 17

## C

Camera Recording ..... 17~19  
Car Battery Cord ..... 10  
Cassette Information ..... 11  
Charging Battery ..... 9  
Cleaning EVF ..... 50  
Clock Battery ..... 51  
Clock Set ..... 14, 15  
Color Digital Filter ..... 29  
Copying your Tapes ..... 22

## D

D.ZOOM Button ..... 30  
DC IN ..... 10  
DC Power Cable ..... 10  
Digital E.I.S. .... 31  
Digital PhotoShot Disk ..... 42  
Digital Still Camera ..... 34~41  
Digital Wipe Mode ..... 41  
Digital Zoom ..... 30  
DISPLAY Button ..... 13, 20, 47  
Display-off Mode ..... 47

## E

EIS Button ..... 31

## F

Fade ..... 27, 28  
FADE Button ..... 27, 28  
FAST FORWARD/SEARCH  
Button ..... 20  
Focus ..... 25

## H

Hand Strap ..... 12  
High Speed Shutter ..... 26

## L

LCD Monitor ..... 17, 20, 36, 37  
LCD-OPEN Button  
..... 17, 20, 36, 37  
Lens Cap ..... 12  
Light ..... 16, 37  
LIGHT Switch ..... 16, 37  
Limited Warranty ..... 57

## M

MagicPix™ Images ..... 24  
Memory Card (optional)  
..... 34, 35, 46  
MENU Button ..... 13  
MENU Mode ..... 13  
M-DEL Button ..... 39  
M.FOCUS Button ..... 25  
MODE Button ..... 40, 41  
MotionSensor ..... 33

## P

PC Connection ..... 42~45  
PC Connector ..... 42  
PCMCIA Adaptor (optional) .. 46  
Picture in Picture Wipe Title . 40  
PLAY Button ..... 20, 37  
Playback ..... 20, 21  
PlayPak ..... 21  
Power Supply ..... 9, 10  
POWER Switch ... 7, 17, 20, 36  
POWER ZOOM Button  
..... 23, 25, 30  
Programmed Recording ..... 19

## Q

Quick Operation Guide ..... 8

## R

RECORD/PAUSE Button 17, 36  
Record/Playback Time ..... 11  
Replacing Clock Battery ..... 51  
Request for Service Notice .. 56  
REWIND/SEARCH Button ... 20

## S

Safety Precautions ..... 3  
Self Demo Mode ..... 7  
Self Diagnostic System ..... 56  
Servicenter List ..... 58  
Shoulder Strap ..... 12  
Speaker ..... 20  
Special Effects ..... 20  
Specifications ..... 54  
START Button ..... 41  
STILL Button ..... 20  
Still Picture ..... 20  
STILL/STROBE Button ..... 32  
Still/Strobe ..... 32  
STOP Button ..... 20

## T

Tab ..... 11  
TAPE EJECT Switch 11, 17, 34  
TAPE SPEED Button ..... 17  
Tracking Control ..... 20  
Tripod Mounting Hole ..... 51

## U

UP (FAR) / DOWN (NEAR)  
Button ..... 13, 20, 25

## V

VHF Connecting Cable ..... 22  
Video Cassettes (tapes) ..... 11  
Video Head Cleaning ..... 55  
Viewfinder/LCD Monitor  
Indications ..... 47~49  
Viewing (TV/VCR) ..... 21  
VISION ADJUSTMENT ..... 17  
VOLUME ..... 20

## W

Wide (Screen) ..... 32

## Z

Zoom ..... 23, 30

**Panasonic Consumer Electronics Company,**  
**Division of Matsushita Electric Corporation of America**  
One Panasonic Way Secaucus, New Jersey 07094

**Panasonic Sales Company ("PSC"),**  
**Division of Matsushita Electric of Puerto Rico, Inc.**  
Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park Carolina,  
Puerto Rico 00985



Printed in Indonesia  
LSQT0607A  
S0202Y0