


Thank you for choosing

Panasonic Omnivision **VHS**

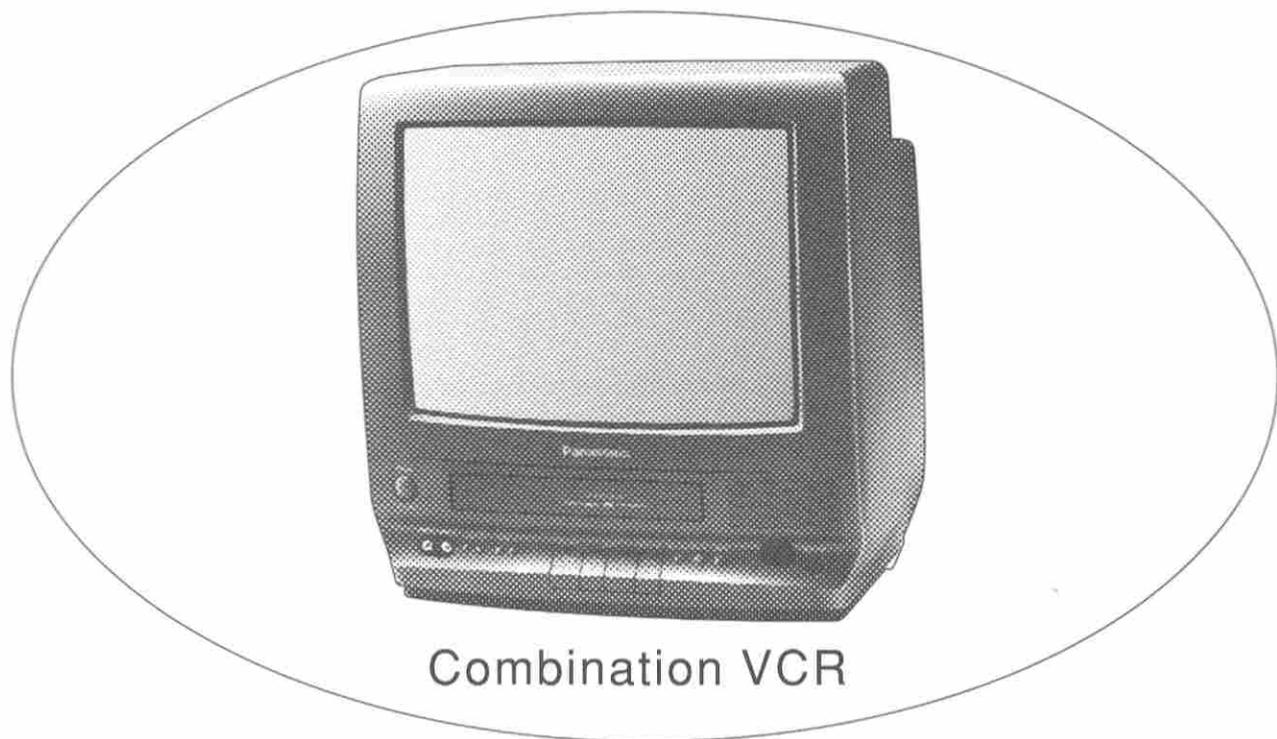

Combination VCR

MODEL PV-M1367AD

Operating Instructions

Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.
Spanish Quick Use Guide is included.
Guía para rápida consulta en español está incluido.

P2 ~ P12
Getting Started

P13 ~ P17
Basic TV Operation

P18 ~ P19
Basic VCR Operation

P20 ~ P23
More you Can Do

P24 ~ Back Cover
Other Information

Things You Should Know

Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information at right. The serial number is on the tag located on the back of your Combination VCR.

Date of Purchase _____
 Dealer Purchased From _____
 Dealer Address _____
 Dealer Phone No. _____
 Model No. **PV-M1367AD**
 Serial No. _____

Safety Precautions

Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment. Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.


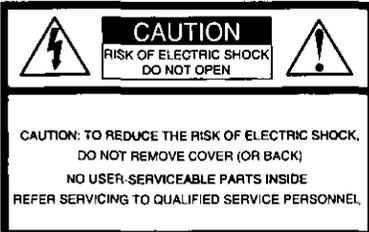
		<p>This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.</p> <p>This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.</p>
---	---	--

Table of Contents

Important Safeguards and Precautions.....	3
Unpacking Your Combination VCR • Product Features	4
Unit and Cassette Information.....	5
Getting Started	
Antenna or Cable Connections (Outdoor Antenna, Indoor Antenna, Cable Box, Scrambled/Unscrambled Channels).....	6
Connecting to a Power Source	7
Location of Controls (Remote Control, Combination VCR)	8, 9
One Time Setup (On-Screen Language, Channel Memory, Auto Clock Set).....	10, 11
On-Screen Displays (OSD) (Function, Channel, Menu, VCR Status/Clock, Warning, Instruction)	12
Basic TV Operation	
TV Operation (Main Operation, Using the 100 key, Rapid Tune, Audio Mute, Phones, Game mode).....	13
Picture Adjustment (Color, Tint, Bright, Picture, Sharpness, Reset)	14
TV Timer Features (Alarm Timer, Sleep Timer)	15
Closed Caption System (Main Operation, Caption On Mute).....	16
FM Radio.....	17
Basic VCR Operation	
Playback a Tape (Special Effects, Quality Picture Features)	18
Record On a Tape (Main Operation, One Touch Record, Input Select)	19
More You Can Do	
Timer Recording (Main Operation, Cancel, Clear, Replace Program).....	20, 21
Copying Your Tapes (Connection, Main Operation)	21
Tape Operation (Repeat Play, One Minute Skip, Zero Search, Auto Functions).....	22
Special VCR Features (VCR Lock, Warning Beeper)	23
Other Information	
Operation Differences Using AC or DC Power.....	24
Before Requesting Service (Self-check Items)	25
Service Center List.....	26
Spanish Quick Use Guide/Guía para rápida consulta	27, 28, 29, 30, 31
Warranty	Back Cover

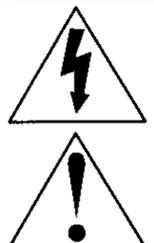

Important Safeguards and Precautions

FOR YOUR SAFETY, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE UNIT

INSTALLATION

1 POWER SOURCE CAUTION

Operate only from a power source indicated on the unit or in this manual.
If necessary, have your Electric Utility Service Company or Video Products Dealer verify the power source in your home.

2 POLARIZED OR GROUNDING PLUG

As a safety feature, this Video product comes with either a polarized power cord plug (one blade is wider than the other), or a three-wire grounding type plug.

POLARIZED PLUG CAUTION:

This plug will only fit into an outlet one way. If you cannot fully insert the plug, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

GROUNDING PLUG CAUTION:

This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not defeat the safety feature by tampering with the plug.

3 POWER CORD

Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic.
If an extension cord is used, make sure it also has either a polarized or grounded plug and that the cords can be securely connected.
Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician.
Overloaded outlets and extension cords are fire hazards and should be avoided.

4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes.
For protection follow these rules:

- a. Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- b. Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place the unit over or near any kind of heater or regulator, in direct sunlight, inside a closed vehicle, etc.. Do not move the unit suddenly between areas of extreme temperature variation. If the unit is suddenly moved from a cold place to a warm place, moisture may condense in the unit and on the tape.

6 TO AVOID PERSONAL INJURY


- Do not place unsecured equipment on a sloping surface.
- Support for the unit should be firm, level, and adequately strong.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.



OUTDOOR ANTENNA INSTALLATION

1 SAFE ANTENNA AND CABLE CONNECTION

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

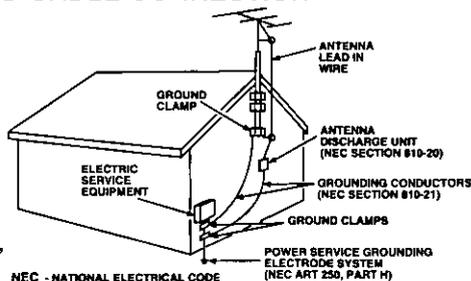

2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

An outside antenna system should be located well away from power lines, electric light or power circuits and where it will never come into contact with these power sources if it should happen to fall. When installing an outside antenna, extreme care should be taken to avoid touching power lines, circuits or other power sources as this could be fatal. Because of the hazards involved, antenna installation should be left to a professional.

USING THE VIDEO UNIT

If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.

1 KEEP THIS VIDEO UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.

2 IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug the unit and have it inspected by a qualified service technician before use.

3 DURING AN ELECTRICAL STORM

During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

4 WHEN THE UNIT IS PLUGGED IN

- Never expose the unit to rain or water. DO NOT OPERATE if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
- Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard.
- Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.

5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

6 CLEANING THE UNIT

Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

SERVICE

1 DO NOT SERVICE THIS PRODUCT YOURSELF

If, after carefully following the detailed operating instructions, this Video product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.

2 IF REPLACEMENT PARTS ARE REQUIRED

Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

3 HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK


After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to insure that the video unit is in safe operating condition.

Unpacking Your Combination VCR • Product Features


Unpacking Your Combination VCR

The accessories shown below are provided to help you use or set up your Combination VCR.

Accessories

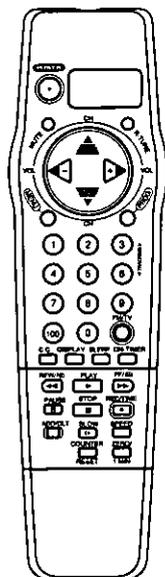


Remote Control
VSQS1481

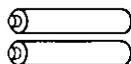


2 "AA" Batteries




300 ohm-75 ohm
Transformer
VSQS0974

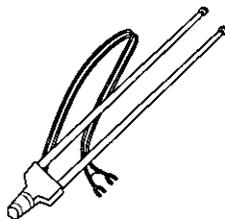

Indoor Antenna
TSA700009

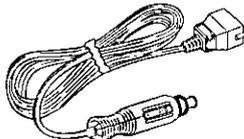

DC Car Cord (2m)
TXFEK01135VP

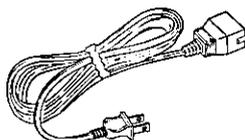


AC Power Cord
TXFSX02135VP


To order accessories,
call toll free 1-800-332-5368.

Load the batteries


1 Push in and up on the latch with your thumb nail and lift off the lid.

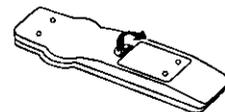

2 Install two batteries as indicated inside the Battery Compartment.

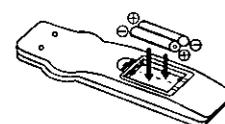

3 Fit the lid's hinge piece into the indent on the case, and snap the lid into place.

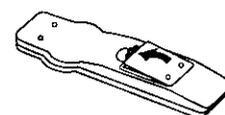

Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

Product Features

Alarm Timer	15
All Channel Auto Set/181-CH TV/CATV Tuner	10
Auto Clock Set	10, 11
Auto Daylight Saving Time	5
Auto Operation Functions (Auto Shut Off, Auto Playback, Rewind, Tape Eject, Power Off)	22
Auto Repeat Function	22
Closed Caption System	16
Easy-to-Read English/Spanish/French On-Screen Displays	10, 11, 20, 21
FM Radio	17
Front-mounted A/V In Terminals	21
Game Mode	13
One Minute Skip	22
One Month, 8 Program Auto Timer Recording	20, 21
One Touch Recording (OTR)	19
Quick Play Mechanism	25
Rapid Tune	13
Special Effects Playback	18
Special VCR Features (VCR Lock, Warning Beeper)	23
Zero Search	22



Unit and Cassette Information

Erase Protection (Record Tab)

Cassettes have a record tab to ensure that recordings are not accidentally erased.

To prevent accidental erasure, break off the tab with a screwdriver.



To record again, cover the hole with cellophane tape.



Maximum Record/Playback Time


Only use tapes with the **VHS** mark in this unit.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

D.S.T. (Daylight Saving Time)


Spring (First Sunday in April)

When the Combination VCR is set to DST:ON, it automatically adds one hour and adjusts the clock.

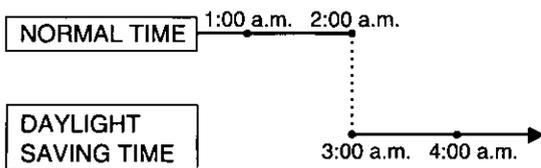

Autumn (Last Sunday in October)

When the Combination VCR is set to DST:ON, it automatically turns back one hour and adjusts the clock.

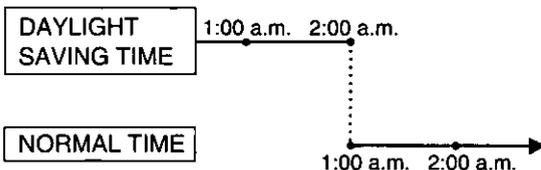

SELF-DEMO MODE

In Power ON condition, hold down PLAY/REPEAT on the Combination VCR, with no tape inserted, for 5 seconds. The demo screen appears.

To cancel: Repeat the above operation. The demo screen disappears.

Reset all Combination VCR Memory Functions

Use when moving the Combination VCR to a new location, or if a mistake was made in the One Time Setup section.

- Make sure a tape is not inserted in the Combination VCR.
- 1) Push POWER to turn the Combination VCR on.
- 2) Hold down both the PLAY and REW buttons on the Combination VCR for more than 5 seconds.
 - The power will shut off.
- 3) Turn the power back on and perform the One Time Setup section on page 10.

Head Cleaning

Your Combination VCR will not normally require head cleaning, however the heads may become clogged when playing an old or damaged tape.

Video Heads Sensor System

If head cleaning becomes necessary, the Combination VCR will display the screen at right while playing back a recorded signal. To exit this screen, push PLAY on the remote control or Combination VCR.

V VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL

END:PLAY KEY

- Use "dry" type head cleaning cassette* only.
- Be sure to follow the cleaning tape instructions carefully. Excessive use of a cleaning cassette can shorten head life.
- If using a head cleaning cassette does not solve the problem, contact your nearest Factory Service Center or authorized Service Center. (See page 26.)

*Cleaning cassette part No. NV-TCL30PT is recommended.

Product Specifications

Display

Picture Tube: 13 inch measured diagonal 90° deflection Picture Tube

VCR

Video Recording System: 2 rotary heads helical scanning system

Audio Track: 1 track

Tuner:

Broadcast Channels: VHF 2~13, UHF 14~69

CATV Channels: Midband A through I (14~22)

Superband J through W (23~36)

Hyperband AA~EEE (37~64)

Lowband A-5~A-1 (95~99)

Special CATV channel 5A (01)

Ultraband 65~94, 100~125

FM Radio

Band range: 87.5~108.1 MHz

General

Power Source: 120V 60 Hz (AC)

12V (DC)

Power Consumption:

Power on

Approx. 73 watts (AC)

Approx. 95 watts (DC)

Power off

Approx. 6 watts (AC)

Approx. 9 watts (DC)

Television System:

EIA Standard NTSC color

Speaker:

1 piece

Operating Temperature:

41°F~104°F (5°C~40°C)

Operating Humidity:

10%~75%

Weight:

28.6 lbs. (13 Kg)

Dimensions:

15-3/16" (W) X 15-3/16" (H) X

16-11/16" (D)

386 (W) X 385 (H) X 424 (D) mm


Note: Designs and specifications are subject to change without notice.



Antenna or Cable Connections


Outdoor Antenna Connection

Unhook the antenna from your previous TV or VCR and connect it to the back of the Combination VCR as shown in the diagram. If your antenna system has separate UHF and VHF lead-ins, you need a UHF/VHF Band Mixer (not supplied).

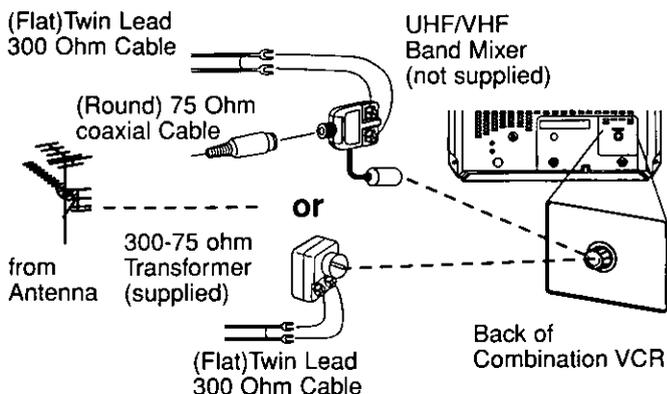

Indoor Antenna Connection

Insert the Indoor antenna (supplied) into the receptacle on the back of the Combination VCR. Then, connect the two wires to the 300 ohm-75 ohm transformer (supplied). Next, connect the transformer to the back of the Combination VCR as shown. Now, extend the antenna and adjust its length, direction and angle for the clearest picture.

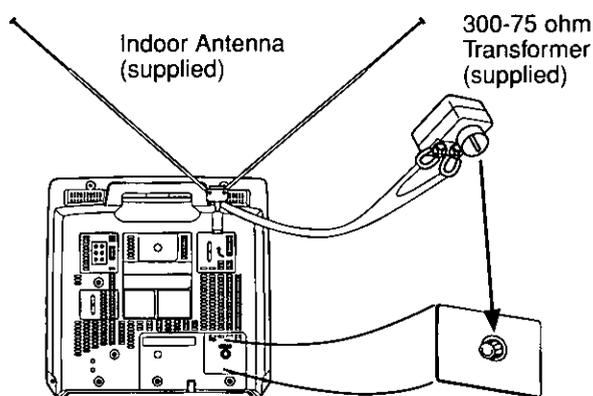



Cable Connections

(A) Without a Converter/Descrambler Box

With this connection, you can: use your Combination VCR remote control to select channels for viewing and select unscrambled channels for timer recording. Scrambled channels may not be viewed or recorded with this connection.

(B) With a Converter/Descrambler Box

With this connection, you may record and view any channel including scrambled channels. Please note, however that channel selection must be made at the cable company converter box. Timer recording is limited to one channel at a time, and you can only view the channel you are recording.

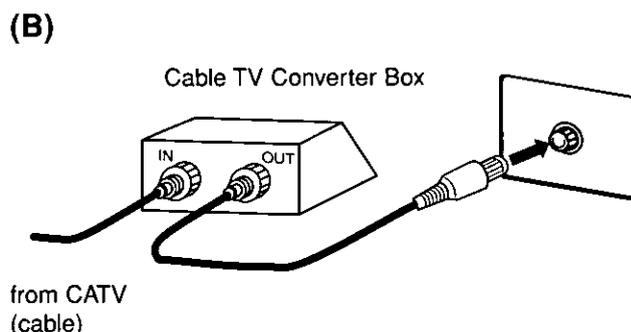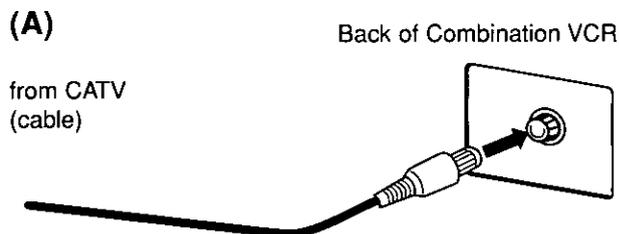

FCC WARNING: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

Note to CATV System Installer

This reminder is provided to call the CATV (Cable TV) System Installers attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

To Watch and Record Scrambled/Unscrambled Channels


Set the Combination VCR to the output channel of the cable converter box (e.g. CH3). Now, select channels to be viewed or recorded at the cable converter box.

Connecting to a Power Source

Your Combination VCR goes where you go with two different ways to supply power. You may connect the supplied AC (alternate current) cord for use with any AC outlet. Or when travelling, connect the supplied DC (direct current) Car Battery cord which can be inserted in your vehicle's cigarette lighter. For your safety and to avoid damage to the Combination VCR, please follow instructions and connections carefully.

Connecting the (supplied) AC Cord

1. Connect the supplied AC cord to the AC input jack on the back of the Combination VCR as shown.
2. Plug the AC cord into an AC wall outlet.

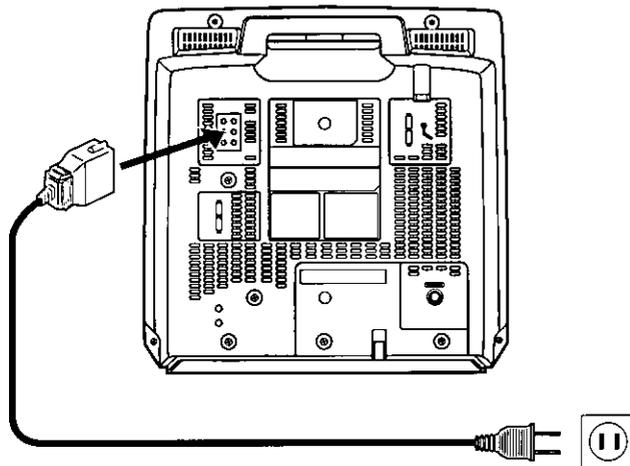


Connecting the (supplied) DC Car Battery Cord

1. Connect the DC Car Battery cord to the DC input on the back of the Combination VCR as shown.
2. Start the engine of your vehicle.
 - **DO NOT** insert the cord into the cigarette lighter until the engine is running.
3. Remove the cigarette lighter from its socket and insert the Car Battery plug in its place.

IMPORTANT NOTES


- This cord can only be used in vehicles equipped with DC 12V (negative ground) batteries. Check your car's owner's manual.
- Use only the Car Battery cord packed with your Combination VCR.
- To avoid a loss voltage, do not attach an extension to the Car Battery cord.
- When unit is not in use, disconnect the Car Battery cord from the cigarette lighter socket to save car battery.

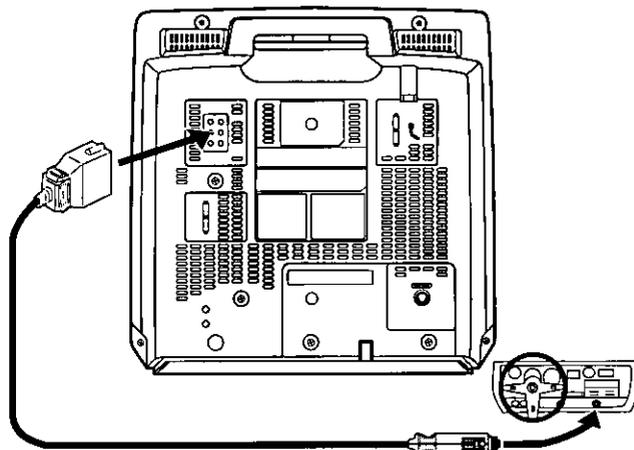

Replacing the DC Car Cord Fuse

If the safety fuse in the car cord plug blows out, replace it as follows.


1. Unscrew the cap (counterclockwise).
2. Replace using a 125V 13A fuse.
 - Only use fuses with the exact voltage and amps specified.
3. Replace the cap (clockwise).

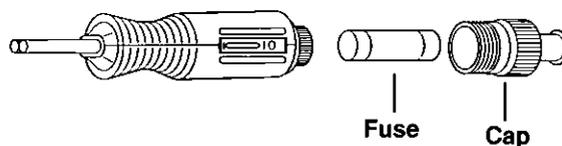




Location of Controls

Remote Control Buttons

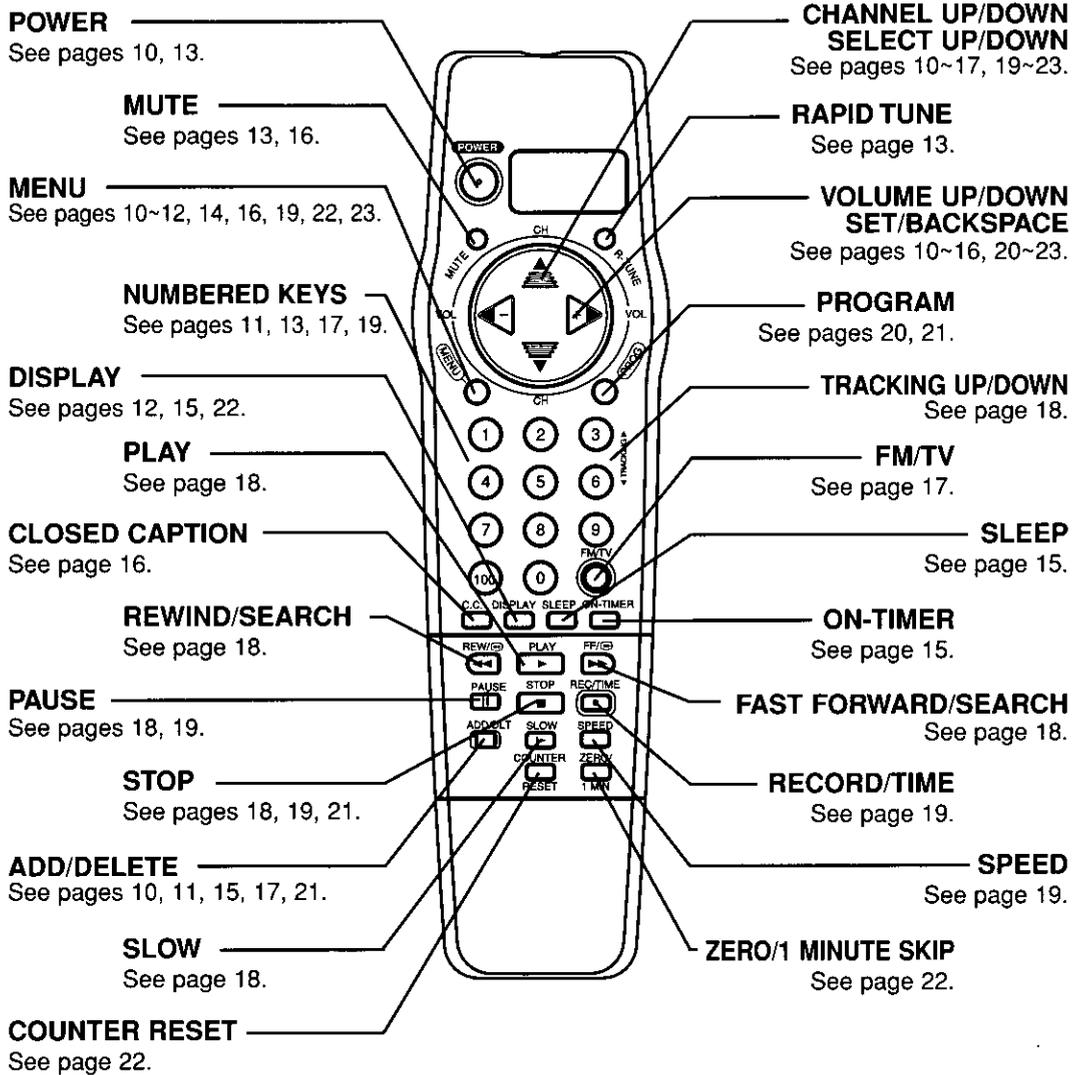

Indicators on the Front Panel

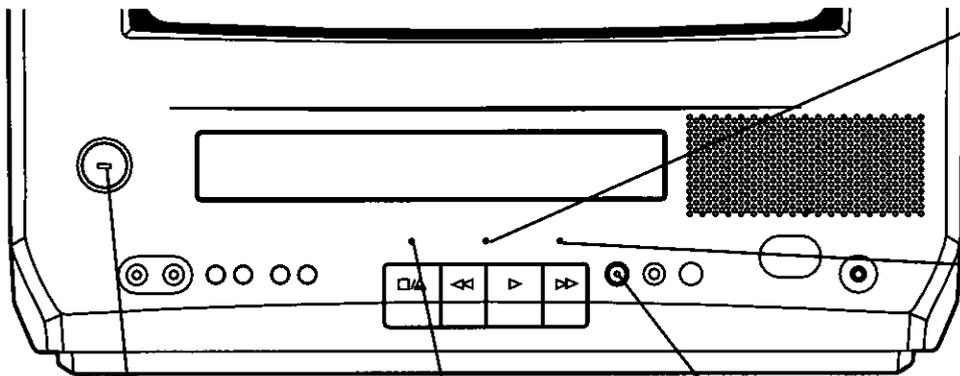

POWER Indicator
Lights when the Combination VCR is turned on. Remote Control is functional only when this indicator is lit.


ON TIMER Indicator
Lights when the On Timer is set.
See page 15.

RECORD Indicator
Lights during recording. In Rec Pause or OTR Pause mode, the indicator flashes.
See page 19.


REPEAT Indicator
Lights when "REPEAT PLAY: ON" is selected and playback is in progress.
See page 22.

PROGRAM TIMER Indicator
Lights when the Combination VCR is set for Timer Recording. It flashes when a Timer Recording has been set, with no tape inserted, the clock is not set, or the tape is in motion.
See pages 19, 20, 21.

Front View of the Combination VCR

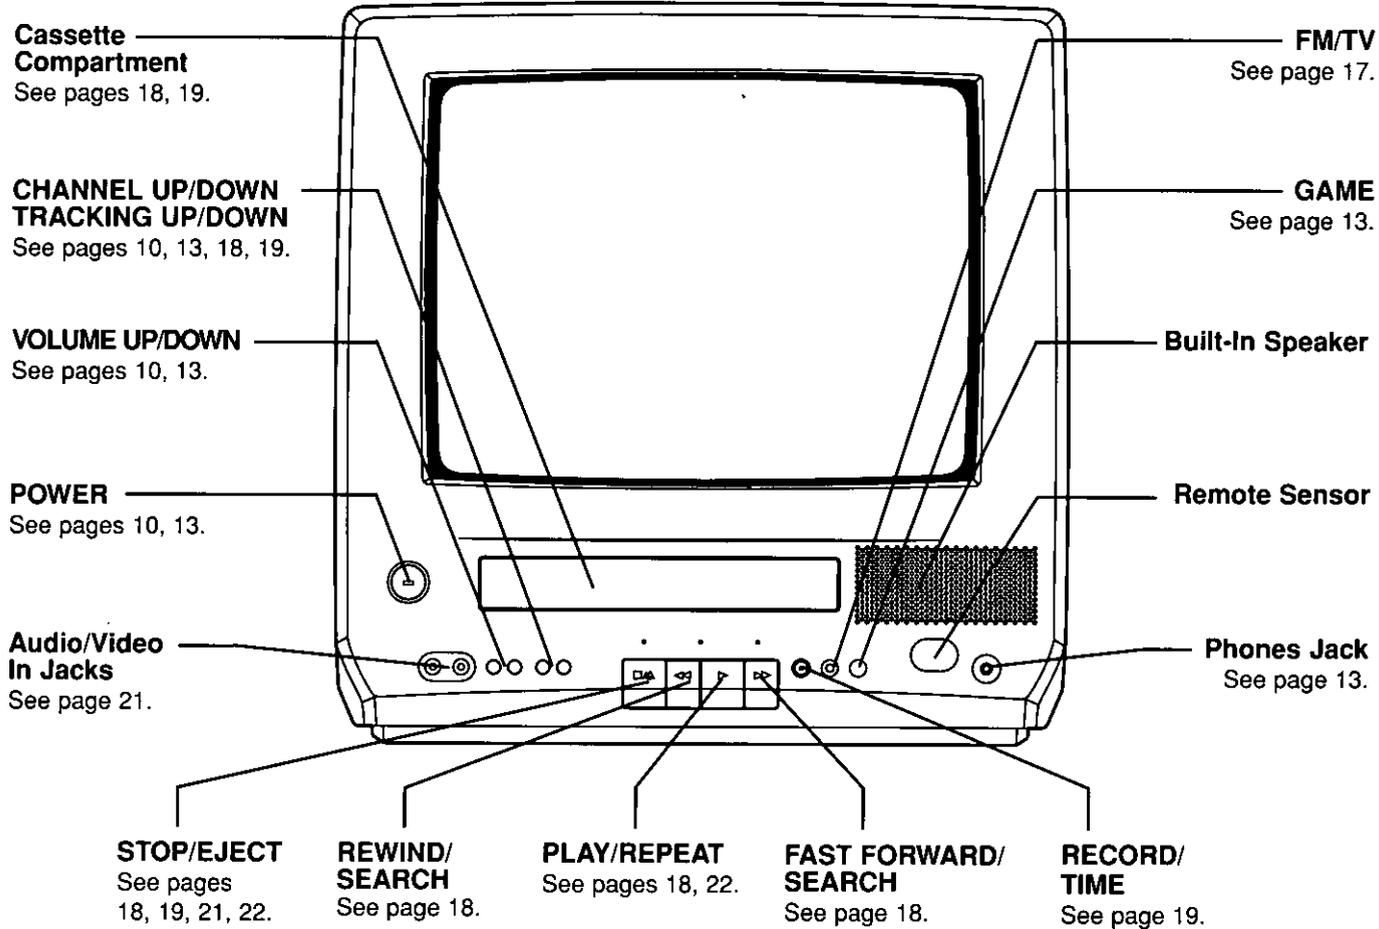

Rear View of the Combination VCR

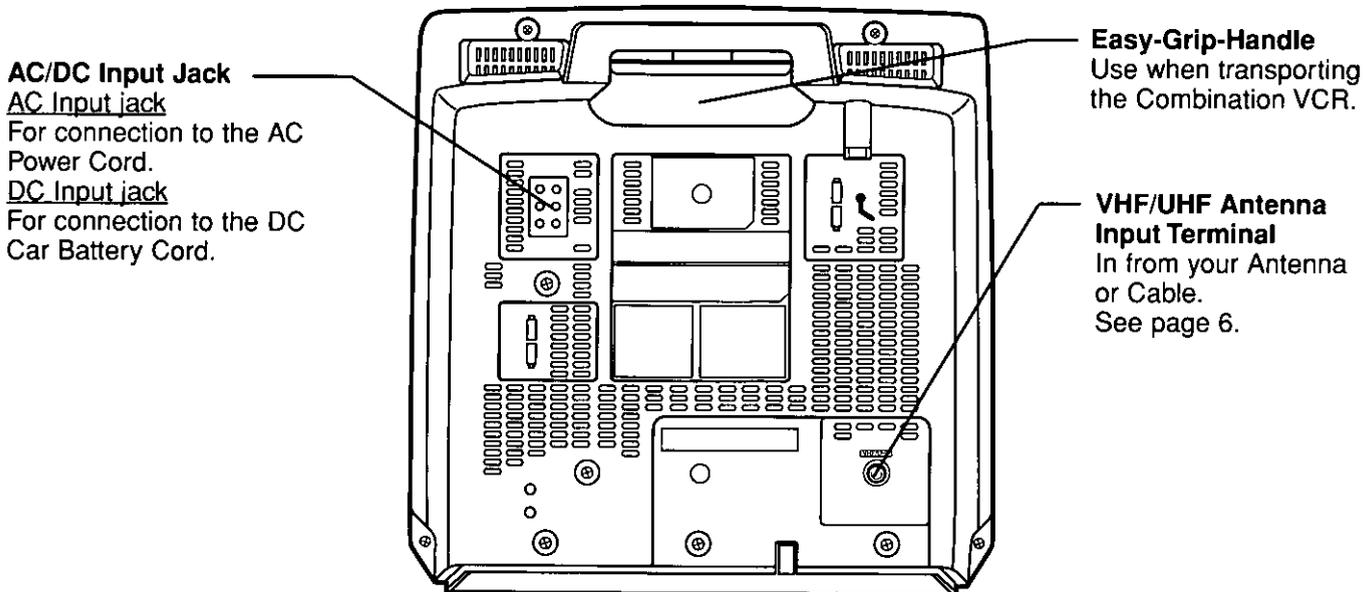





One Time Setup

✓ Check list before you begin.


- Your Combination VCR is connected to an Antenna, or Cable system (see page 6).

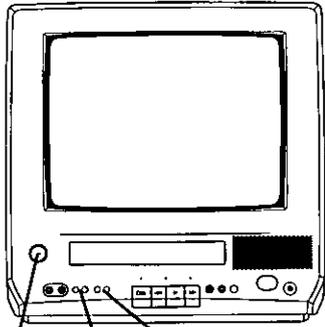

① ② ② ③ ④

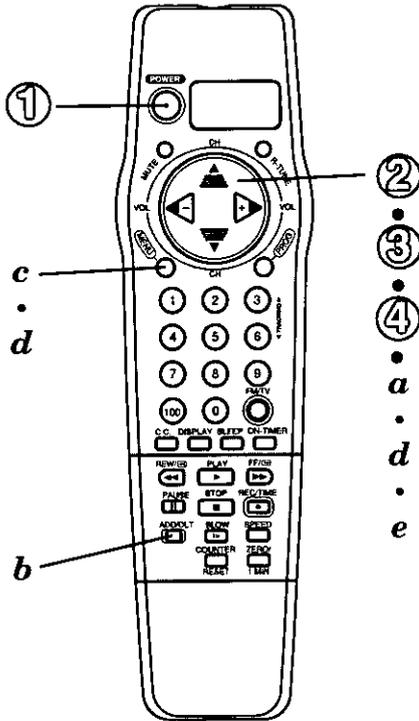

Using the keys

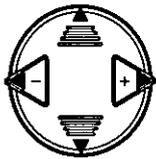


Whenever a menu or program screen is displayed, CHANNEL UP/DOWN and VOLUME UP/DOWN on the remote control function as  only. For VOLUME UP/DOWN functions, use the buttons on the Combination VCR.

To Set Language, Channels, and Clock


When the Combination VCR power is first turned on the channel auto set and set clock screens appear automatically.

①

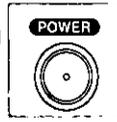


Push **POWER** to turn the Combination VCR on.

②

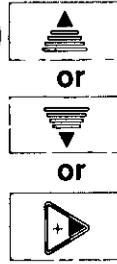

Push , , or  for on-screen displays in English, Spanish or French.

- If you choose the wrong language, please see the "Reset all Combination VCR Memory Functions" section on page 5.
- If you use a cable box, the cable box must be left on for auto channel set.

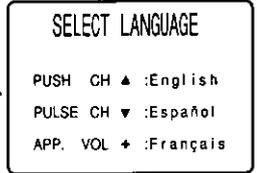


③



Important: If you use a cable box, turn it on and select PBS station in your time zone.


Push  to start Channel Auto Set and Clock Auto Set.

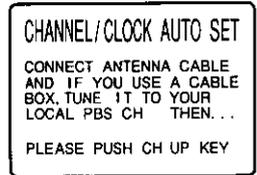


These on-screen displays will appear in sequence.

- CH AUTO SET PROCEEDING
- CH AUTO SET COMPLETED
- AUTO CLOCK SET PROCEEDING

Case 1

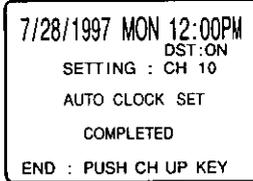

Case 2

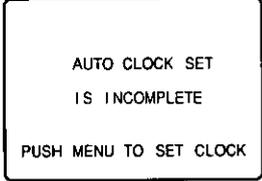

④

Case 1 Confirm that displayed time is correct and push  to exit.

If the displayed time and D.S.T. are incorrect,

In the rare event that you live within broadcast range of two PBS stations in two different time zones, the Combination VCR may recognize the wrong PBS station. To correct this situation, do the following:

- Make a note of the SETTING: CH number shown on-screen and push  to exit.
- Delete the setting channel from the Combination VCR channel memory. (See the Add or Delete a Channel section on the next page.)
- Push **MENU** to display the menu.
- Push , , ,  to select "CLOCK," and then push **MENU** to display the SET CLOCK screen.
 - If you use a cable box and have multiple PBS stations, tune the cable box to a different PBS station and try auto clock set again using the menu.
- Push ,  to select "AUTO SET," and then push  to set and to  start.




- Auto clock set will be performed when the Combination VCR is turned off the first time each day. If you use a cable box and you want auto clock set to be performed, the cable box must be left on and tuned to the PBS channel at the time the Combination VCR power is turned off.
- If for any reason the time is changed manually, automatic time correction will not occur.

Case 2 If AUTO CLOCK SET IS INCOMPLETE appears, please set the clock manually.

a. Push MENU to display the SET CLOCK screen.

b. Push ▲ ▼ to select and ► to enter the month, date, year, time, and D.S.T. (Daylight Saving Time).

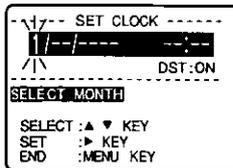


To Make Corrections,

push ◀▶ repeatedly to move back or forward to the desired item.

c. Push MENU to start the clock. Then, push ▲ ▼ ◀▶ to select "EXIT." Now, push MENU to exit the MAIN MENU.


• "DST:ON" automatically adjusts for daylight saving time. (See page 5.)

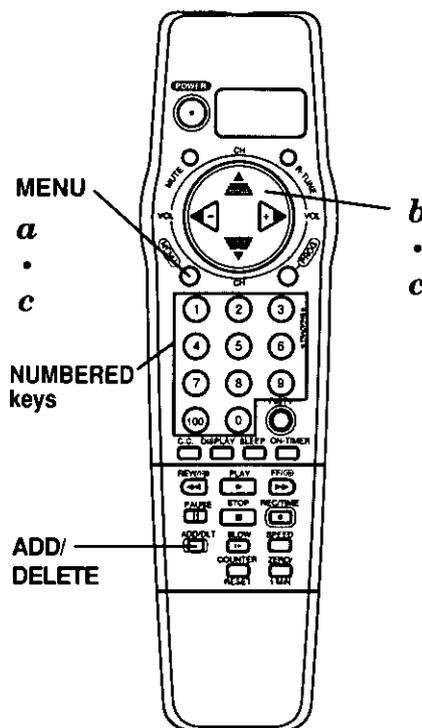

To Change or Re-enter One Time Setup Items

To Change the OSD Language

- 1 Push MENU to display the MAIN MENU.
- 2 Push ▲ ▼ ◀▶ to select the language selection icon.
- 3 Push MENU repeatedly to change the language as shown.


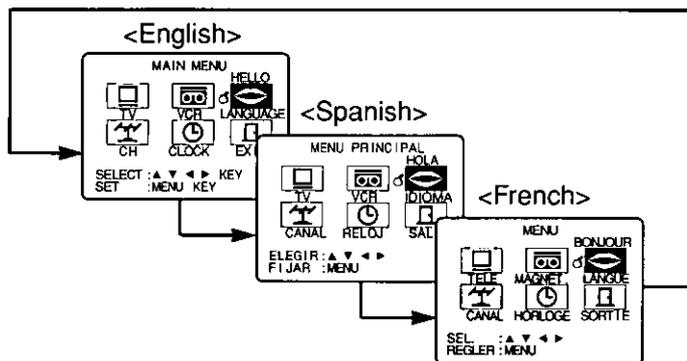


- 4 Push ▲ ▼ ◀▶ to select "EXIT," and then push MENU to exit the MAIN MENU.

To Replace Channels in Memory

In case, you have cable installed, etc.


- 1 Push MENU to display the MAIN MENU.
- 2 Push ▲ ▼ ◀▶ to select "CH," and then push MENU to display the SET UP CHANNEL screen.
- 3 Push ▲ ▼ repeatedly to select ANTENNA SYSTEM, and then push ► to select your antenna system (TV or CATV).
- 4 Push ▲ ▼ to select AUTO SET, and then push ► to start.
 - To exit this mode, push MENU. Then, push ▲ ▼ ◀▶ to select "EXIT." Now, push MENU to exit the MAIN MENU.

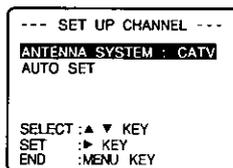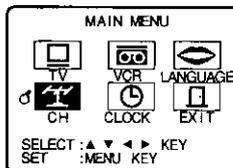

To Set or Reset the Clock


In case the clock is wrong, or a power failure occurred.

- 1 Push MENU to display the MAIN MENU.
- 2 Push ▲ ▼ ◀▶ to select "CLOCK." Then, push MENU to display the SET CLOCK screen.
- 3 Push ▲ ▼ to select "MANUAL SET," and then ► to display the SET CLOCK screen.
- 4 Please do steps b and c at the top of this page.

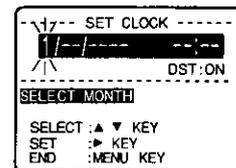

To Add or Delete a Channel

- 1 Select a channel using the NUMBERED keys to add or the CH ▲ ▼ to delete.
- 2 Push the ADD/DLT to add or delete the channel.
 - To select a channel once it's deleted, use the NUMBERED keys.

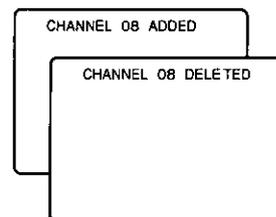

- This Combination VCR will accurately maintain its calendar up to Dec. 31, 2089, 11:59PM.
- Normal TV or Cable channels are automatically selected and placed in memory depending on how your Combination VCR is hooked up.




On-Screen Displays (OSD)

Channel & Function Display

Whenever the channel is changed, the channel number will appear for a few seconds on-screen. (Some station names may also appear.)

When a function button is pushed (PLAY, FF, etc.), the Combination VCR mode will be displayed.


- When a recording is started, both REC and the channel number will appear together.

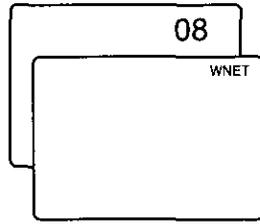


Warning and Instruction Displays

These displays will alert you of a missed operation or provide further instructions.

If no active channels are found for CHANNEL MEMORY... (see page 6.)

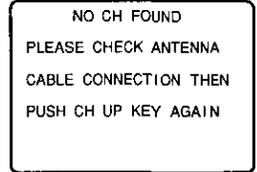


If you attempt to set or review a Timer Recording or set the On Timer and the Clock is not set... (see pages 10, 11.)

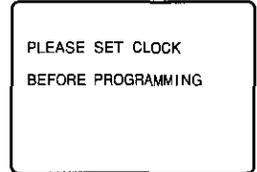


Menu Screen

- 1 Push MENU to display the MAIN MENU.
- 2 Push ▲ ▼ ◀ ▶ and MENU to make your selection (see page 10).


- To get the most from each feature, please read the Operation Manual before attempting any operation.

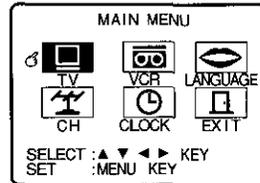

If you push REC on the remote control or the Combination VCR, and a cassette is inserted with no record tab... (see page 5.)

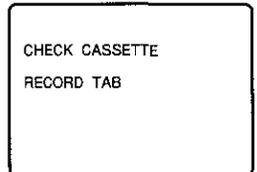


If you push PLAY, FF, REW, or REC on the remote control or the Combination VCR without a cassette inserted... (see pages 18, 19, 22.)

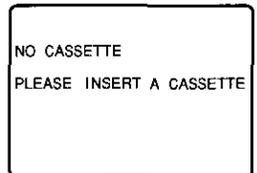

VCR Status & Clock Display




Push DISPLAY to display and remove the overlay shown below.

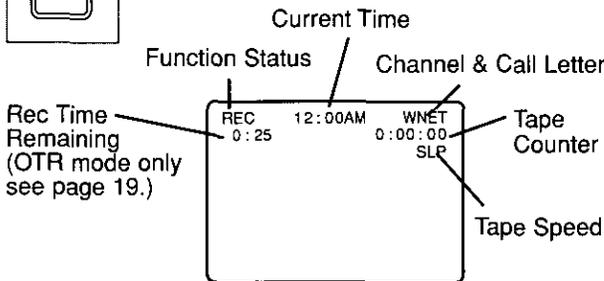

If Combination VCR is not in Stop mode or a cassette with record tab is not inserted two minutes before a Timer Recording is about to begin... (see pages 20, 21.)




If head cleaning becomes necessary while playing back a tape... (see page 5.)

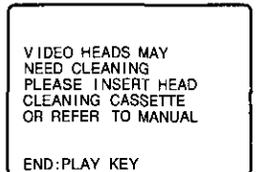


Dew Detection System

To prevent damage to your tapes, this unit is equipped with a dew detection system. When moisture condensation is detected inside the Combination VCR, "DEW" will appear on-screen for a few seconds. If a tape is inserted, it will be ejected. Also, VCR functions will be non-operational until dew condition passes. Push DISPLAY to see if dew condition still exists. In order to avoid this condition, try not to move the unit directly from a cold place to a warm place. TV functions are not affected.

If you push a function button other than STOP/EJECT or POWER while the Combination VCR is in VCR Lock mode... (See page 23.)

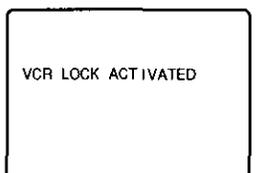

If moisture condensation is detected inside the Combination VCR...

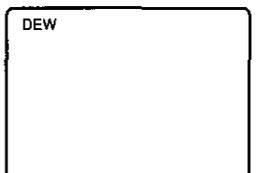

Blank Tape/ No Video Signal Indication


When a blank section of tape comes up in Play mode, or the selected channel has no broadcast signal, the TV screen will turn solid blue.




TV Operation

✓ Check list before you begin.

- All connections are made (see page 6).
- Your Combination VCR is plugged in.

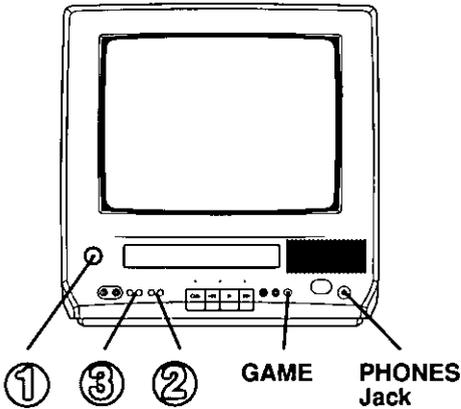

①  Push **POWER** to turn the Combination VCR on.

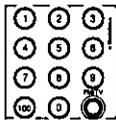②  or  Select a channel using   or the **NUMBERED** keys.

③  Push **VOL**   to adjust the volume level.



Using the 100 key

When selecting CATV channels 100 to 125 with the **NUMBERED** keys, first push the 100 key, and then enter the remaining two digits. For example, for channel 125: Push the **NUMBERED** keys 100-2-5.

Rapid Tune

Push **R-TUNE** to display the last channel you were watching.

Previous channel Present channel

- When selecting channels with **CH**  , the channels must be displayed for at least 4 seconds in order for the Combination VCR to recognize them as a new selection.

CH08 ↔ **CH10**

Audio Mute

Push **MUTE** to instantly mute the sound. Push again, to restore the previous sound level.

Phones

Connect an earphone (not supplied) or headphone (not supplied) to the **Phones Jack**.


Game Mode Feature

This feature adjusts the color and picture intensity levels so the screen is easier on the eyes when video games are played.

- This Combination VCR contains no video game software.

 Push **GAME** on the Combination VCR to select "ON".

- "GAME" is displayed for 4 seconds.

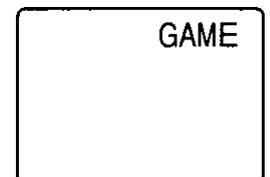


To Cancel the Game Mode, push **GAME** again to cancel.

- The previous color and picture settings will be restored.



- This feature is not available when tape playback is in progress.
- Game mode is turned off when one of the following functions is performed:


- | | |
|---------------------------|------------------------|
| • Power is turned Off | • Play mode is entered |
| • Channel is changed | • Power failure occurs |
| • Input signal is changed | • FM mode is selected |

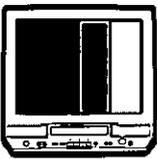


Picture Adjustment


✓ Check list before you begin.


- All connections are made (see page 6).
- Your Combination VCR is plugged in.

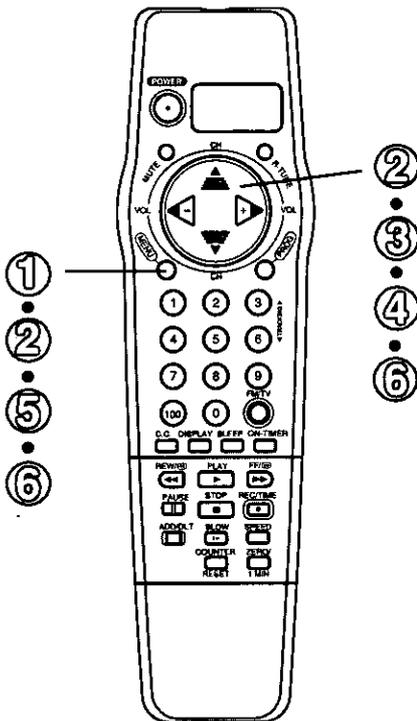


1  Push MENU to display the MAIN MENU.

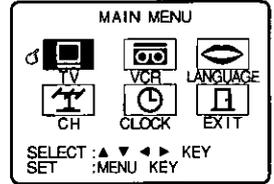


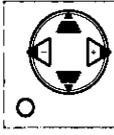2  Push ▲ ▼ ◀ ▶ to select "TV," and then push MENU to display the SET UP TV screen.

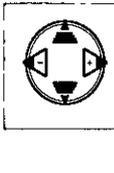3  Push ▲ ▼ to select "VIDEO ADJUST," and then push ▶ to display the VIDEO ADJUST screen.

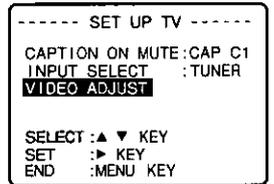

4  Push ▲ ▼ repeatedly to select the desired adjust item, and then push ◀ ▶ to adjust. (See description below.)

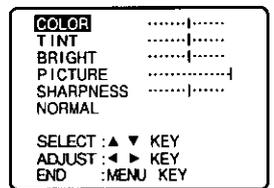

Picture Adjustment

COLOR Control

To adjust the intensity of the colors.

TINT Control

To adjust for the most natural fleshtones.

BRIGHT Control

To adjust the brightness of the picture.

PICTURE Control

To adjust the intensity of the picture by adjusting contrast and color level at the same time and in the proper balance.


SHARPNESS Control

To adjust the sharpness of the picture.

To Reset Picture Controls to the Factory Setting


Push ▲ ▼ and ▶ to select and set NORMAL.

All controls return to factory settings.

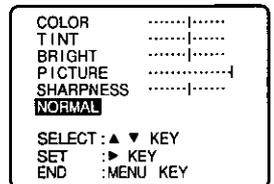


5  Push MENU twice to exit the VIDEO ADJUST mode.

- If no button is pushed within 5 minutes, the video adjust overlay disappears.

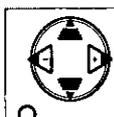6  Push ▲ ▼ ◀ ▶ to select "EXIT," and then push MENU to exit the MAIN MENU.




Due to the earth's magnetic fields, or magnetic charge build-up from nearby electrical appliances, color distortion may occur if the Combination VCR direction is changed while it is on. To avoid this, position the Combination VCR before turning it on. If this phenomenon does occur, push the POWER off and then on again.

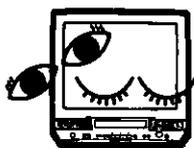


TV Timer Features

Check list before you begin.

- All connections are made (see page 6).
- Your Combination VCR is plugged in.

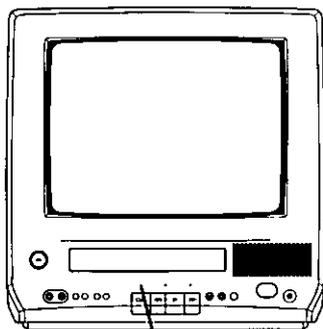

ON-TIMER Indicator

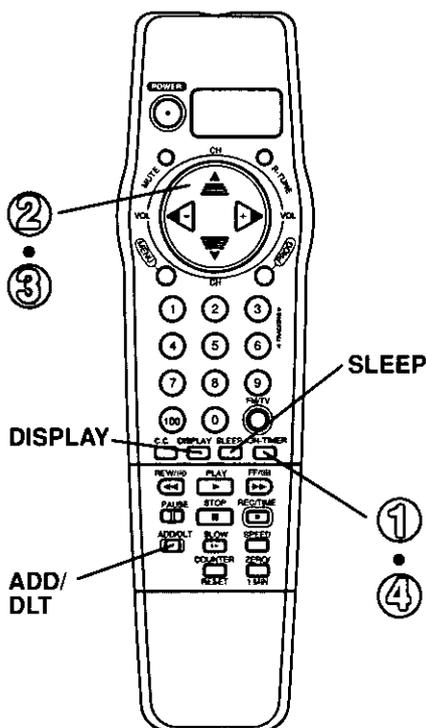


On-Timer with Alarm Feature

The Combination VCR can be set to automatically power on in one of 3 modes (TV, Playback, or FM radio). You can also combine the On-Timer with a one minute alarm that gradually increases in volume.


1 Push ON-TIMER to display the ON TIMER screen.



2 Push ▲ ▼ to select and ► to fix the On Timer time and then to choose the On-Timer mode (TV, PLAY, or FM radio). See the ▲ ▼ selection order shown at right.

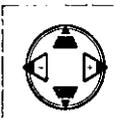


• Make sure a tape is inserted if VCR Playback mode is selected.

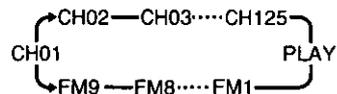

• See "FM Radio Feature" on page 17 for instructions on how to preset FM stations.


3 Push ▲ ▼ to select alarm "ON" or "OFF".

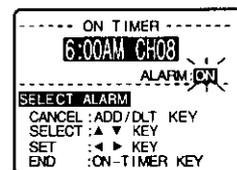

When "ON" is selected, an alarm will gradually increase in volume for one minute or until cancelled by pushing any button on the remote or Combination VCR (including Volume UP/DOWN). When the alarm sound stops, the sound of the mode you selected will ensue.

To Make Corrections, use ▲ ▼ and ◀ ▶ to move back and correct as necessary.

4 Push ON-TIMER to set the On Timer. This screen will appear for about 5 seconds.

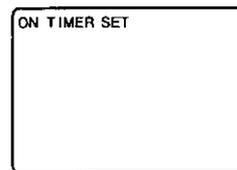

• The ON-TIMER indicator lights on the front panel.

To Cancel, push ON-TIMER to redisplay the screen in step 3. Then, push ADD/DLT to clear the time ("6" is flashing). Now, push ON-Timer to end. "ON TIMER END" appears on-screen for a few seconds.

NOTE If no button on the remote or Combination VCR (including a button used to turn off the alarm) is pushed within 60 minutes after the Combination VCR turns itself on, it will turn itself back off.


Set the Sleep Timer

The Combination VCR can be set for auto power off.

Push SLEEP to display the desired sleep timer.



• Each push of SLEEP will change the time in the order shown at right.

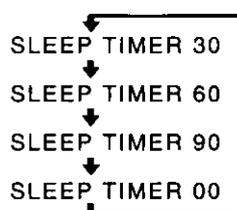

• If you push DISPLAY with the SLEEP TIMER set, the remaining time will appear on-screen.



To Cancel, push SLEEP repeatedly until "SLEEP TIMER 00" appears.

CC Closed Caption System

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also makes useful information from TV stations available to everyone.

✓ Check list before you begin.

- All connections are made (see page 6).
- Your Combination VCR is plugged in.

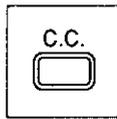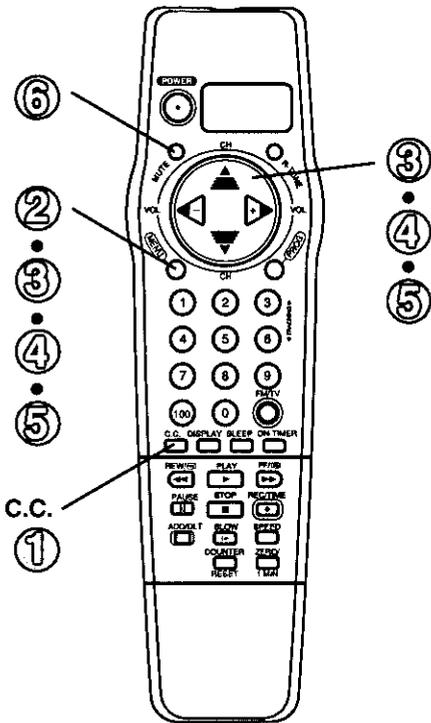

Push C.C. repeatedly to select the desired Caption Mode (see "Caption Mode description" below).

- Selected mode is displayed on screen.
- Each push of C.C. will change the Caption Mode as shown at right:



Closed Caption Modes to Choose From

Caption Mode: CAPTION C1 or C2

A narration of selected TV programs will be displayed on the screen. Check your TV program listings for C.C. (Closed Captioned) broadcasts.

Caption Mode: TEXT C1 or C2

The lower half of the screen will be blocked out. When the TV station broadcasts text, such as program listings, special information, etc., it will appear in this space.

Caption Mode: OFF


Narration will not appear on the screen even if a closed caption or text broadcast is received.

- The closed caption or text signal may be broadcast over C1, C2, or both. Also, text contents can vary so you may wish to try different settings.


Caption On Mute Feature

This feature allows you to turn off the sound and, at the same time, display Closed Caption narration. Perfect for when you need silence, but would like to continue enjoying the program.


1

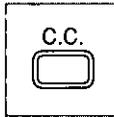


Push C.C. until CAPTION OFF is displayed on screen.

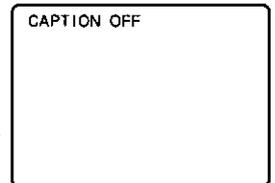


2

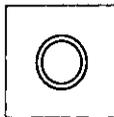


Push MENU to display the MAIN MENU.

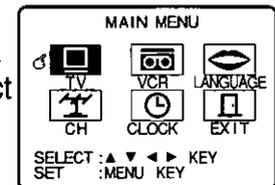


3

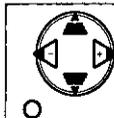

Push ▲ ▼ ◀ ▶ to select "TV," and then push MENU to display the SET UP TV screen.

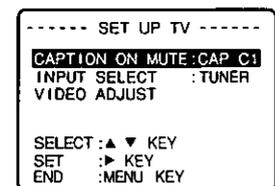


4

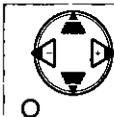


Push ▶ repeatedly to select the desired caption on mute mode, and then push MENU to exit the SET UP TV screen.

- Each push of ▶ will change the display as shown at right.

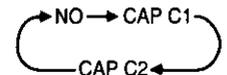


5

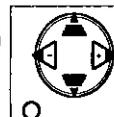

Push ▲ ▼ ◀ ▶ to select "EXIT," and then push MENU to exit the MAIN MENU.

6

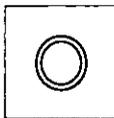

Push MUTE to instantly mute the sound. The closed caption narration is displayed on the screen.

- Push MUTE again to resume normal sound and picture.
- Not all programs have Closed Caption information, therefore, narration may not be displayed.

Recording and Playing Back a Closed Caption/Text Program

Record: Your Combination VCR will automatically record the Closed Caption/Text signal. Just follow normal recording operation.


Playback: To display the Closed Caption narration or Text during playback, simply push C.C. until desired Caption Mode is displayed.




FM Radio

✓ Check list before you begin.

- All connections are made (see page 6).
- Your Combination VCR is plugged in.

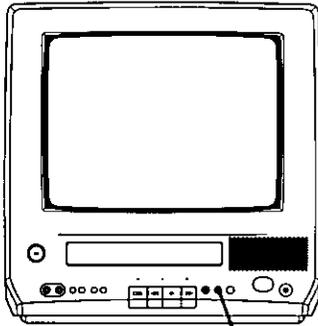

① • ③

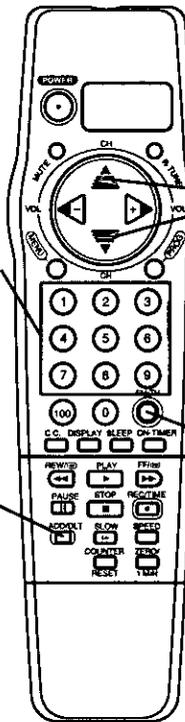

② •

a

b

① •

③

FM Radio Feature


The Combination VCR has an FM radio with built-in antenna, 9 station preset, and a band range of 87.5~108.1 MHz. You can even set the On-Timer to wake up to your favorite music station.

①




Push FM/TV on the remote control or Combination VCR to select FM Radio mode.

- This screen changes to a black screen after 10 seconds.

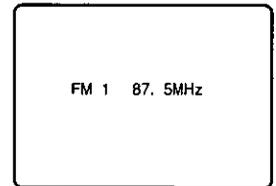


To Memorize Stations


a Push NUMBERED keys (1~9) in FM Radio mode.

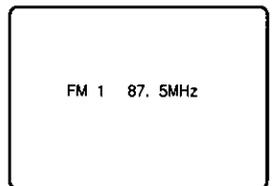


b Push ▲ ▼ to select desired radio station. (Each push changes the frequency by 200 KHz.)

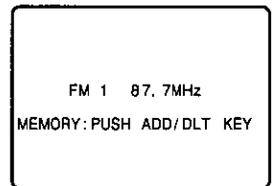

c Push ADD/HLT to memorize the desired station. • To memorize other positions, repeat steps a~c.

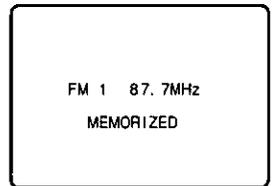


②

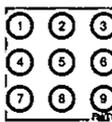

Push the Numbered key (1~9) to select a memorized channel (see above).

③

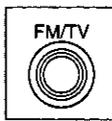

Push FM/TV on the remote control or Combination VCR again to exit the FM Radio mode.






- You can not record FM radio stations on the Video Cassette tape.
- You may get improved FM reception for some stations by repositioning the Combination VCR.
- You can not set to FM Radio mode in the Playback, Recording, and Blue Back OSD screens (MENU, PROGRAM, and ON-TIMER).

▶ Playback a Tape

✓ Check list before you begin.


- All connections are made (see page 6).
- Your Combination VCR is plugged in.

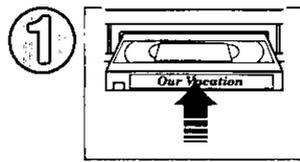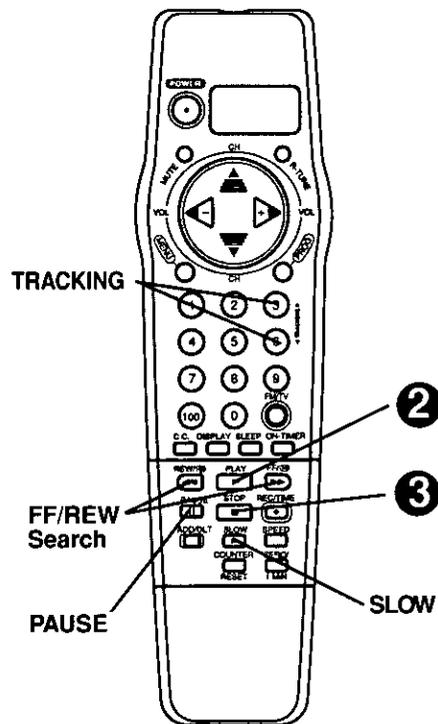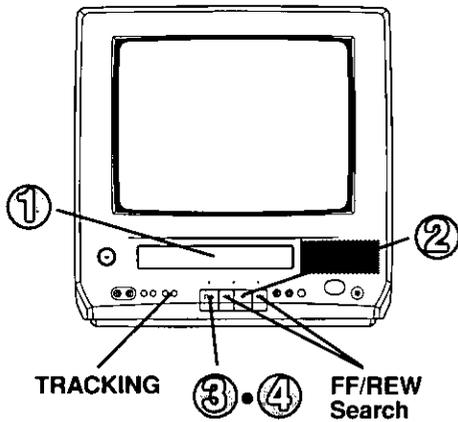

① Insert a cassette.
• Combination VCR power comes on automatically.



② Push PLAY on the remote control or Combination VCR to start playback.
• Playback begins automatically if cassette has no record tab (see page 22).

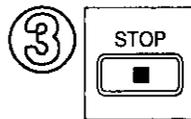


③ Push STOP on the remote control or Combination VCR to stop playback.



④ Push STOP/EJECT on the Combination VCR to eject the cassette.
• You may eject a cassette with power on or off.

To Find a Particular Scene During Playback

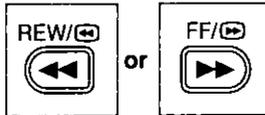

Push REW or FF on the remote control or Combination VCR to quickly locate a scene.

- SLP mode tapes have a search speed of 27 times (AC power) or, 15 times (DC power) the normal speed.
- Some noise bars will appear during search.

Special Effects During Playback

These features work best in SLP mode. The sound will be muted.

Slow Motion Playback

Push SLOW to start slow motion playback. Push PLAY or SLOW to release.

Still (Freeze) Frame Picture

Push PAUSE to freeze and release the picture.

- To reduce picture noise, first push SLOW. Then, use the 3 or 6 NUMBERED keys on the remote control or CH UP/DOWN on the Combination VCR to clear up the picture, then push PAUSE.

Frame by Frame Advance

While in Still mode, push SLOW repeatedly or hold down to advance the still picture one frame at a time. Push PAUSE or PLAY to release.

(After the Combination VCR is in Still or Slow mode for 3 minutes, it will switch to the Stop mode automatically to protect the tape and the video head.)

Features for a Quality Picture

Digital Auto Tracking


This feature continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control

Use during Playback and Slow Motion mode to reduce picture noise. Push the 3 or 6 NUMBERED keys on the remote control or CH UP/DOWN on the Combination VCR until the picture clears up. To return to Auto Tracking, push POWER off and then on again.

Caution:

Please inspect your cassette tapes and remove any loose or peeling labels to prevent them from becoming jammed in your unit.


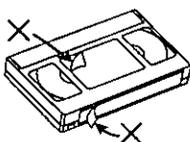





Record On a Tape

✓ Check list before you begin.


- All connections are made (see page 6).
- Your Combination VCR is plugged in.

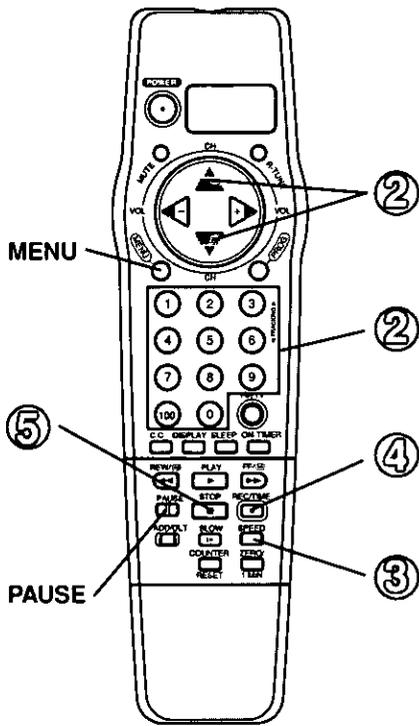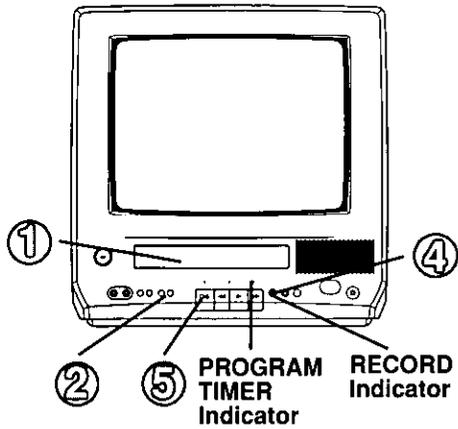


- ① Insert a cassette with record tab.
- The Combination VCR power comes on automatically.

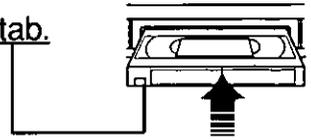


- ② Push ▲ ▼ or NUMBERED keys on the remote control to select a channel.
- or
- ① ② ③
④ ⑤ ⑥
⑦ ⑧ ⑨
⑩ ⑪ ⑫
- Or, push CH UP/DOWN on the Combination VCR.
 - To record from an outside source, push ▲ ▼ to select LINE (see below).

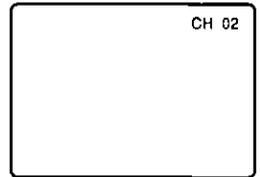

- ③ Push SPEED until the desired speed appears on-screen (See page 5).
- SPEED
- SP = Standard Play
LP = Long Play
SLP = Super Long Play

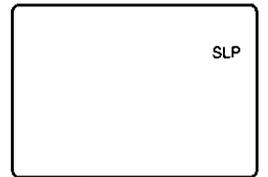


- ④ Push REC/TIME on the remote control to start recording.
- REC/TIME
- Or, push REC/TIME on the Combination VCR.
 - To edit out unwanted portions, push PAUSE to pause the recording in progress. To release, push PAUSE again.

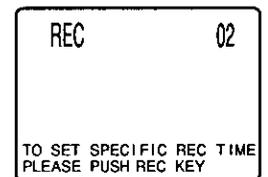

One Touch Timer Recording (OTR)

The Combination VCR stops recording at a preset time.

In step 4, push REC/TIME repeatedly to set the length of the recording. Each push will change the time as shown.

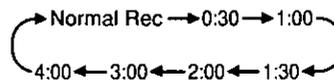


- PROGRAM TIMER indicator lights on the front panel.

- ⑤ Push STOP on the remote control to stop recording.
- STOP
- Or, push STOP/EJECT on the Combination VCR.

Selecting the Input Mode

You can select the Input Mode in one of two ways.

- Push ▲ ▼. The display will change in the order below.

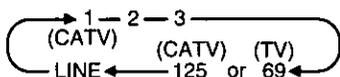

- a. Push MENU to display the menu.
- b. Push ▲ ▼ ◀ ▶ to select "TV," and then push MENU to display the SET UP TV screen.
- c. Push ▲ ▼ to select "INPUT SELECT," and then push ▶ repeatedly to select "TUNER" or "LINE."



- While it is possible to change the tape speed when you are recording, there will be some distortion on the tape where the change occurred.
- The remaining recording time can be displayed by pushing DISPLAY in OTR mode.
- After the Combination VCR has been in Rec Pause mode for 5 minutes, it will stop automatically to protect the tape and video head.
- When using DC Power supply, pushing POWER on the Combination VCR will cancel an OTR (One Touch Recording) in progress.




Timer Recording



Your Combination VCR can be set up to do a recording while you are away or otherwise occupied. Up to 8 programs can be placed in memory. You can choose to record one time, daily, or weekly.

✓ Check list before you begin.


- All connections are made (see page 6).
- Your Combination VCR is plugged in.
- The clock is set.
- The tape is long enough.
- The record tab is in place.

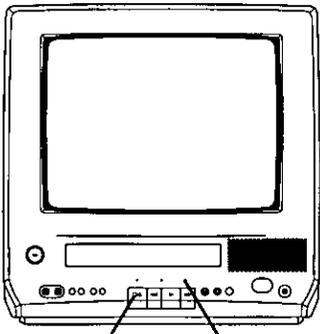


STOP/EJECT PROGRAM TIMER Indicator

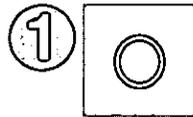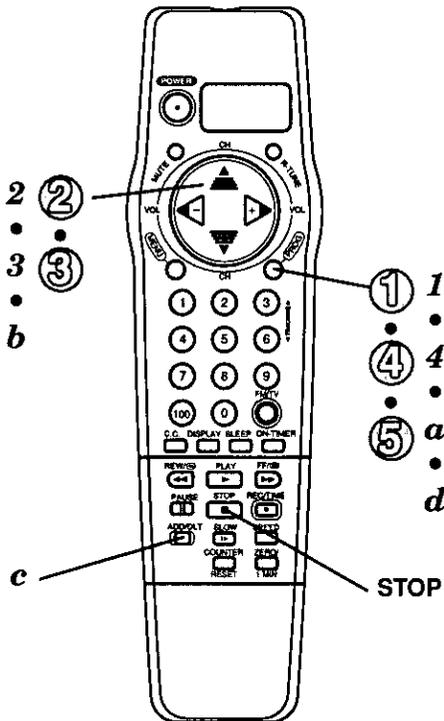

Push PROG to display the program screen.

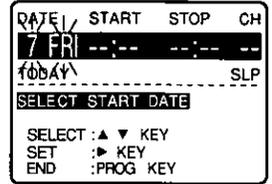



- If a program is already in memory, push ▲ ▼ and ▶ to select an unused program number.

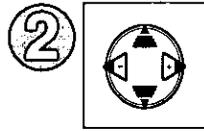

Push ▲ ▼ and ▶ to select and set one of the following:

- 1~31 = One time recording
- DAILY = Same time MON ~ FRI
- WEEKLY = Same time once a week

Example

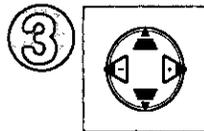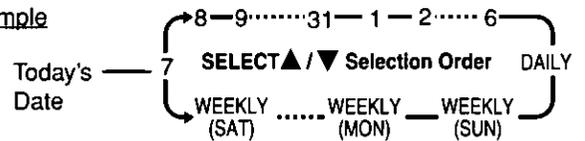


Push ▲ ▼ and ◀ ▶ to select and set each of the remaining items at right.

Remaining Items:

- START time
- STOP time
- CH(annel) number, or LINE for outside source recording
- Speed (SP, LP, SLP)


To Make Corrections

Repeatedly push ▶ to move the cursor to the right, or ◀ to move to the left to the incorrect entry and make the correction.

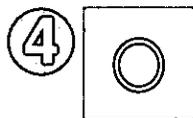


Push PROG to end the program.

- This screen appears for confirmation.

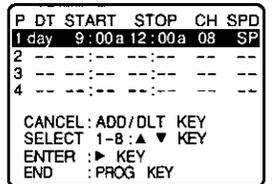

To Enter More Programs

Push ▲ ▼ and ▶ to select and set a blank program number, and then repeat steps 2 and 3.

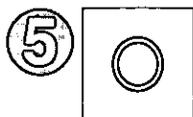

Push PROG to exit this mode and return to the normal screen.

- The PROGRAM TIMER indicator lights on the front panel.
- If you're using a cable box, make sure that it is tuned to the desired channel and the power is left on for timer recording.

Two minutes before the Timer Recording starts, "TIMER REC WILL START SOON" will appear on-screen.



- If "PLEASE PREPARE FOR TIMER REC" appears and/or the PROGRAM TIMER indicator flashes, check that a cassette with record tab is loaded and the Combination VCR is in Stop mode.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a timer recording comes up during a normal recording or One Touch Recording (page 19), the timer recording will not be performed.
- If there is a power interruption of more than one minute, the recording may not be performed or continue.
- If "INCOMPLETE" appears after all items have been set, check all entries and make necessary corrections.
- When using DC Power supply, a Timer Recording can not be performed if POWER on the Combination VCR is pushed OFF.

Cancel a Timer Recording: (Recording is in progress)

Hold down STOP for a few seconds to cancel the Timer Recording.

- Any future daily or weekly recordings will be performed as programmed.

Replace Program Contents: (Recording is not in progress)

- Do step 1 on previous page. All currently set programs will be displayed on-screen.

P	DT	START	STOP	CH	SPD
1	---	---	---	---	---
2	8	10:00p	12:00p	125	SLP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	SLP

SELECT 1-8: ▲ ▼ KEY
ENTER : ► KEY
END : PROG KEY

- Push ▲ ▼ repeatedly to select the desired timer recording, and then push ► to display the settings. (See page 20.)

- Push ▲ ▼ repeatedly to select, and then push ► to enter replacement information.

DATE	START	STOP	CH
8 SAT	10:00P	11:00P	125
12/11			SLP

SELECT START DATE
SELECT : ▲ ▼ KEY
SET : ► KEY
END : PROG KEY

- Push PROG twice to exit this mode and return to the normal TV screen.

Review or Clear Program Contents: (Recording is not in progress)

- Do step 1 on previous page. All currently set programs will be displayed on-screen.

P	DT	START	STOP	CH	SPD
1	day	9:00a	12:00a	08	SP
2	8	10:00p	12:00p	125	SLP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	SLP

CANCEL: ADD/DLT KEY
SELECT 1-8: ▲ ▼ KEY
ENTER : ► KEY
END : PROG KEY


- Push ▲ ▼ repeatedly to select the desired program number.

- Push the ADD/DLT to clear the program.

P	DT	START	STOP	CH	SPD
1	---	---	---	---	---
2	8	10:00p	12:00p	125	SLP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	SLP

SELECT 1-8: ▲ ▼ KEY
ENTER : ► KEY
END : PROG KEY


- Push PROG to exit this mode and return to the normal TV screen.

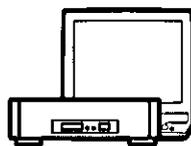

Copying Your Tapes (Dubbing)

Connections you'll need to make.


- Use this same connection for your video camera, laser disc player, video games, etc.

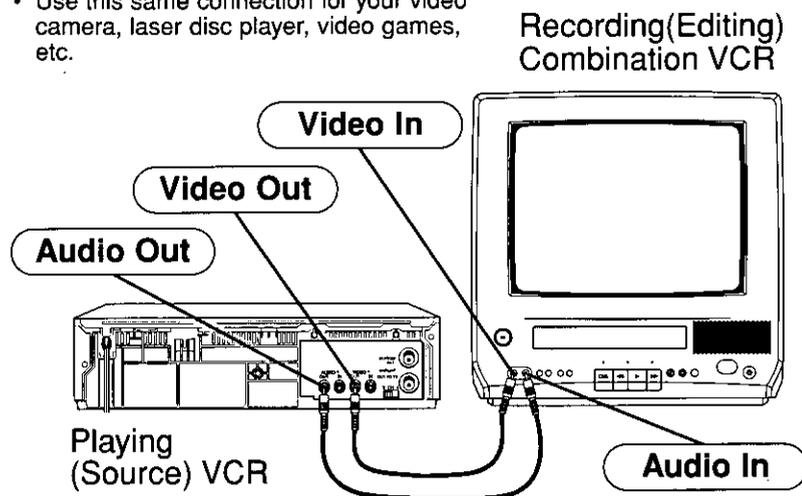

- Insert a pre-recorded tape into the Playing (source) VCR.



- Insert a blank tape with record tab into the Recording (editing) Combination VCR.

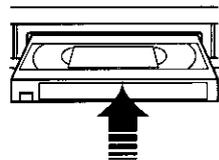

- Select "LINE" as the input on the Recording Combination VCR.

- See "Selecting the Input Mode" section on page 19.

- Push PLAY on the playing VCR. Then, push PAUSE when the tape reaches the point you want to start copying.

- Push REC on the recording Combination VCR, and then push PAUSE on the remote control immediately.

- Push PAUSE on both units at the same time to begin copying.

You can edit out unwanted parts of the original recording by using PAUSE (on the Recording unit) while copying is in progress.

- Push STOP on both units to stop copying.


Caution:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.




Tape Operation

Your Combination VCR is equipped with several time saving features as well as convenient automatic functions which make tape operation easier than ever.


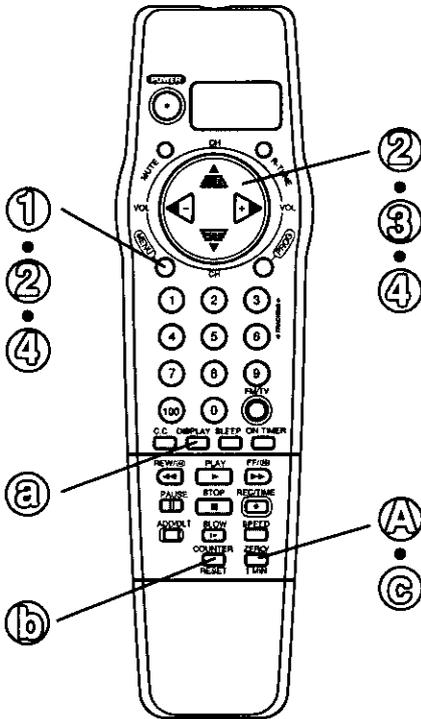


Repeat Play


You can set your Combination VCR up to play a recording over and over.

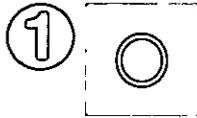

Push MENU to display the MAIN MENU.

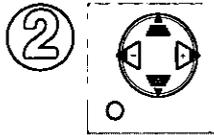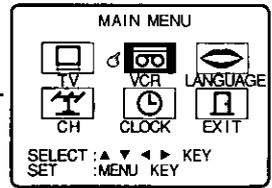


Push **VCR** and then push MENU to display the SET UP VCR screen.

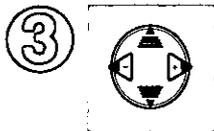

Push **▶** repeatedly to select "ON" or "OFF."

- When REPEAT PLAY : "ON" is selected, the Combination VCR will play to the end of a tape, or until it reaches a blank portion of 30 seconds or more. (Erased portions of tape are not considered blank.) Then, the Combination VCR will automatically rewind the tape and play it again and again until you cancel repeat play. The REPEAT indicator lights on the front panel.
- All function buttons (REW, FF, etc.) are operational during Repeat Play.

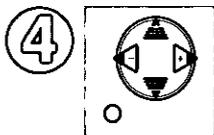

Push MENU to exit the SET UP VCR screen. Then push **EXIT**. Now, push MENU to exit the MAIN MENU.



You may also turn the repeat play feature on and off at the Combination VCR by pushing PLAY during playback once or twice until the repeat indicator lights up (ON), or goes out (OFF).

Auto Operation Functions

Auto Shut Off

In TV or Game mode, when a broadcast signal is not received for 5 minutes, the Combination VCR will automatically power off (except when LINE INPUT is selected).

In Playback mode, when a Video signal is not detected for 5 minutes, the Combination VCR will automatically power off and the tape will be rewound.

- This feature is deactivated when any button on the Combination VCR or remote control is pushed even if there is no signal present.

Auto Playback

When a tape is inserted, the power turns on (Auto). If the record tab* is removed, playback begins (Auto).

- This feature cannot be activated when the POWER button on the Combination VCR is turned OFF (POWER indicator is not lit).

Auto Rewind

When a tape reaches its end during playback or fast forward the Combination VCR will rewind and go into Stop mode.

Playback Auto Eject (Repeat Play is "OFF:") When a tape without a record tab* is played to its end, the Combination VCR will rewind and then eject the tape.

Rec Auto Eject

After a tape reaches its end during normal recording, the Combination VCR will rewind and then eject the tape.


Memory Rewind Off (Only AC Power)

When POWER is pushed during rewind, rewind will be completed even though the Combination VCR turns off.

*For record tab information, see page 5.

One Minute Skip

With this feature, you can skip over commercials recorded on a tape.

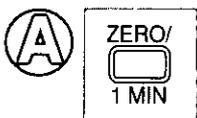


Push ZERO/1MIN in Play mode.



- The Combination VCR will go into FF search mode and skip over 60 seconds of recorded time. Then, normal playback will resume.

Zero Search

You can reset the Timer Counter to zero and then return to that point.


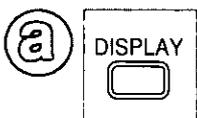


Push DISPLAY to display the Time Counter overlay.

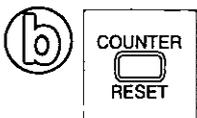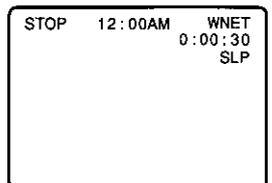

Push COUNTER RESET to reset the Time Counter.

- Reset to 0:00:00 at whatever point you wish on the tape.

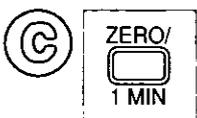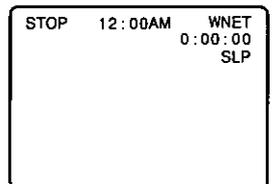


Push ZERO/1MIN in Stop mode.


- The Combination VCR will go into FF or REW mode and stop at the last point the Time Counter was set to 0:00:00.

✓ Check list before you begin.

- All connections are made (see page 6).
- Your Combination VCR is plugged in.

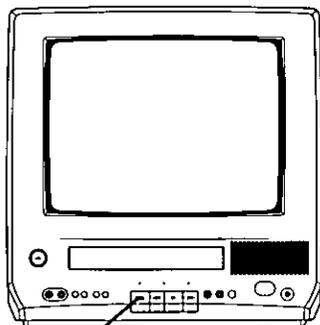


STOP/EJECT

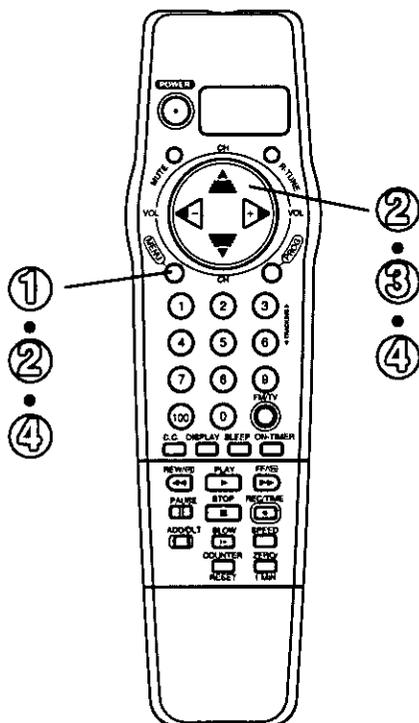


VCR Lock Feature

When activated, this feature prohibits all operations except for timer recording and tape eject. This feature is used to keep children from operating the Combination VCR.

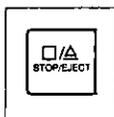


Hold down STOP/EJECT on the Combination VCR for 7 seconds during Stop or Power OFF mode.

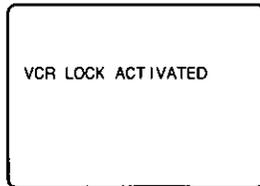

To Cancel the VCR Lock feature,



Hold down STOP/EJECT on the Combination VCR for 7 seconds again during Stop or Power OFF mode.

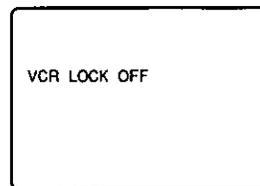


- VCR Lock mode is cancelled automatically after 24 hours as long as the clock is set.
- This feature cannot be activated or cancelled when a timer or one touch recording is in progress.
- This feature cannot be activated when the POWER button on the Combination VCR is turned OFF (POWER indicator is not lit).


Warning Beeper Feature

When you select BEEPER ON, a short warning will sound each time an invalid entry or incomplete operation is made.


①

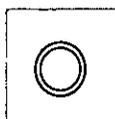

Push MENU to display the MAIN MENU.

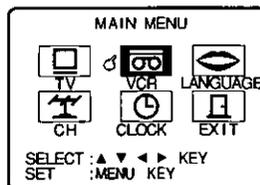


②

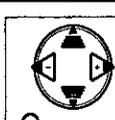


Push ▲ ▼ ◀ ▶ to select "VCR," and then push MENU to display the SET UP VCR screen.


③

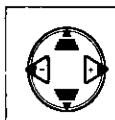

Push ▲ ▼ to select "BEEPER," and then push ▶ to select "ON" or "OFF."

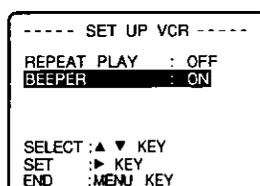

④

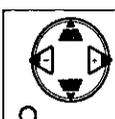

Push MENU to end, and then push ▲ ▼ ◀ ▶ to select "EXIT." Now, push MENU to exit the MAIN MENU.

More you Can Do

Operation Differences Using AC or DC Power

This Combination VCR is equipped to be operated on either AC or DC power. However, there are some differences in Combination VCR operation depending on which power supply is used.

NOTES:

- The Combination VCR will accept commands from the remote control only when POWER on the Combination VCR is turned ON (POWER indicator is lit).
- When POWER on the Combination VCR is OFF (DC power source), it's the same as if the Combination VCR were unplugged. Therefore, all memory data, i.e. clock data, etc. is erased in approximately one minute.
- If there is a loss in battery voltage of more than 30 seconds, the Combination VCR automatically shuts off. When normal voltage is restored, pushed POWER on the Combination VCR OFF and then ON.

AC Power Supply is Used Power Switch is ON on the Unit	DC Power Supply is Used Power Switch is ON on the Unit
<ul style="list-style-type: none"> • If POWER on the remote control is pushed OFF during rewind, the power will shut off but the rewind will continue (Memory Rewind). If it is pushed during recording, the recording will continue. 	<ul style="list-style-type: none"> • If POWER on the remote control is pushed OFF during rewind, the rewind is terminated and the Combination VCR shuts off. If it is pushed while recording, the recording is terminated and the Combination VCR shuts off.
<ul style="list-style-type: none"> • It takes from 3 to 5 minutes to rewind a two hour tape. 	<ul style="list-style-type: none"> • It takes 5 minutes to rewind a two hour tape.
<ul style="list-style-type: none"> • When STOP is pushed, the cylinder continues to rotate for 5 minutes. 	<ul style="list-style-type: none"> • When STOP is pushed, the cylinder stops.
<ul style="list-style-type: none"> • The search speed in SLP mode is 27 times normal. 	<ul style="list-style-type: none"> • The search speed in SLP mode is 15 times normal.
<ul style="list-style-type: none"> • If the AC cord is unplugged and then plugged back in, the Combination VCR will be in OFF condition. 	<ul style="list-style-type: none"> • If POWER on the Combination VCR is pushed OFF, the Combination VCR will be in Stop mode when turned back on. • If the DC cord is unplugged, and then plugged back in; <u>within one minute</u>, Play and Rec mode will continue. All other functions will change to Stop mode. If unplugged for <u>over one minute</u>, the Combination VCR will be in STOP mode when plugged back in.
AC Power Supply is Used	DC Power Supply is Used
<ul style="list-style-type: none"> • If POWER on the Combination VCR is pushed OFF, OTR (One Touch Recording) is continued. 	<ul style="list-style-type: none"> • If POWER on the Combination VCR is pushed OFF, OTR (One Touch Recording) will be cancelled.
<ul style="list-style-type: none"> • If POWER on the Combination VCR is pushed OFF, Timer Recording will be performed. 	<ul style="list-style-type: none"> • If POWER on the Combination VCR is pushed OFF, while a Timer Recording is in progress, the Timer Recording will be cancelled.
<ul style="list-style-type: none"> • If POWER on the Combination VCR is pushed OFF during rewind, the power will shut off but the rewind will continue (Memory Rewind). 	<ul style="list-style-type: none"> • If POWER on the Combination VCR is pushed OFF during rewind, the rewind is terminated and the Combination VCR shuts off.

WARNING:

- There may be an excessive drain on the battery if the Combination VCR is used along with, such power consuming things as fog lamps, air conditioner, power windows, etc.
- Never watch or operate the Combination VCR while driving a vehicle.
- Avoid leaving the Combination VCR in places of extreme heat, such as inside a hot vehicle, or in direct sunlight as this may damage the Combination VCR.



Before Requesting Service

Check the following points once again if you are having trouble with your Combination VCR.

Power	Correction
No power...	<ul style="list-style-type: none"> • Completely insert the Power Plug into an AC wall outlet, or when using the DC Car Battery cord, check to see if the fuse is blown. • Set the POWER button to ON.
Monitor	Correction
No picture or sound...	<ul style="list-style-type: none"> • Make sure your antenna or cable system is connected to the Combination VCR. (P.6) • Check that the power plug is completely plugged into an AC outlet. (Or use the DC Car Battery Cord.) • Check that the POWER button is set to on.
Poor picture with normal sound...	<ul style="list-style-type: none"> • Adjust the BRIGHT, SHARPNESS, and PICTURE controls in the SET UP TV menu. (P.14)
Poor sound with normal picture...	<ul style="list-style-type: none"> • Adjust the VOLUME control. (P.13)
Poor TV reception...	<ul style="list-style-type: none"> • Adjust the SHARPNESS and PICTURE controls in the SET UP TV menu. (P.14)
No color or poor color...	<ul style="list-style-type: none"> • Adjust the TINT and COLOR controls in the SET UP TV menu. (P.14)
Ghost (multiple) images...	<ul style="list-style-type: none"> • Install a directional antenna.
TV programs cannot be watched...	<ul style="list-style-type: none"> • Make sure that the channel being received is in the Combination VCR's memory. (P.10)
VCR	Correction
TV program cannot be recorded...	<ul style="list-style-type: none"> • Make sure your antenna or cable system is connected to the Combination VCR. (P.6) • Make sure that the record tab is intact on the cassette. (P.5)
Timer recording cannot be performed...	<ul style="list-style-type: none"> • Set the recording Start/Stop time correctly. (P.20-21) • Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during a Timer Recording, even if power resumes thereafter.
No playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> • Adjust the TRACKING control in either direction. (P.18)
VCR cannot be controlled...	<ul style="list-style-type: none"> • Make sure that VCR LOCK is set to off. (P.23)
Remote Control	Correction
Combination VCR cannot be remote controlled...	<ul style="list-style-type: none"> • Aim the Remote Control directly at the remote sensor on the Combination VCR. (P.9) • Avoid all obstacles which may interfere with the signal path. • Inspect the remote batteries for possible replacement. (P.4) • Make sure that VCR LOCK is set to off. (P.23) • Exposing the Combination VCR remote sensor to direct fluorescent or outdoor light may cause signal interference. • Make sure the POWER switch on the Combination VCR is turned on.
Miscellaneous	Correction
Video cassette cannot be inserted...	<ul style="list-style-type: none"> • Insert cassette with window side up and the record tab facing you.
Video cassette cannot be removed...	<ul style="list-style-type: none"> • Check that the power plug is completely plugged into an AC outlet. (Or use the DC Car Battery Cord.)
Eject does not function or insertion cannot be done...	<ul style="list-style-type: none"> • Turn the POWER off and then on, and try ejecting or inserting the tape again.
Video cassette ejects when a recording is started, or the power is turned off for timer recording...	<ul style="list-style-type: none"> • Make sure the record tab is intact on the cassette. (P.5)
In stop mode, the VCR motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> • To enable the quick play mechanism, the VCR cylinder will rotate for about 5 minutes. This reduces response time from Stop to Play mode from Play to Rewind Search mode.
VCR cannot be controlled...	<ul style="list-style-type: none"> • Make sure that VCR LOCK is set to off. (P.23)

If you cannot resolve your problem, please call the Customer Satisfaction Center for product assistance at 201-348-9090.

To locate an authorized servicenter call toll free 1-800-545-2672.

Service Center List

PRODUCT INFORMATION • OPERATION ASSISTANCE • LITERATURE REQUESTS • DEALER LOCATIONS

Customer Service Center 2F-3, One Panasonic Way, Secaucus, NJ 07094 (Headquarters)
201-348-9090 (9:00am-8:00pm Monday-Friday, EST)

ACCESSORY PURCHASES

Panasonic Services Company 20421 84th Avenue South Kent, WA 98032
(6 am to 6 pm Monday-Friday ; 6 am to 10:30 am Saturday ; PST)
(Visa, Mastercard, Discover card, American Express, Check)

AUTHORIZED SERVICENTERS • PARTS DISTRIBUTOR LOCATIONS

To locate an independent authorized servicenter or parts distributor in your area,
within the USA dial toll free 1-800-545-2672, 24 hours a day, 7 days a week.

PRODUCT REPAIRS

Factory Servicenters

CALIFORNIA

6550 Katella Avenue
Cypress, CA 90630
Phone (714) 373-7426
Fax (714) 894-8534
800 Dubuque Avenue
S. San Francisco, CA 94080
Phone (415) 871-6373
Fax (415) 871-6840
20201 Sherman Way
Suite 102
Canoga Park, CA 91306
Phone (818) 709-1775
Fax (818) 709-2165
3878 Ruffin Road
Suite A
San Diego, CA 92123
Phone (619) 560-9200
Fax (619) 560-1831

COLORADO

1640 South Abilene Suite D
Aurora, CO 80012
Phone (303) 752-2024
Fax (303) 752-0610

FLORIDA

3700 North 29th Avenue
Suite 102
Hollywood, FL 33020
Phone (954) 925-2880
Fax(954) 925-5224

GEORGIA

8655 Roswell Road
Suite 100
Atlanta, GA 30350
Phone (770) 518-6301
Fax (770) 518-6306

HAWAII

99-859 Iwaiwa Street
Aiea, Hawaii 96701
Phone (808) 488-4369
Fax (808) 486-4369

ILLINOIS

1703 North Randall Road *
Elgin, IL 60123
12:30 to 4:30, Mon-Fri
Phone (847) 468-5464
Fax (847) 468-5465

9060 Golf Road
Niles, IL 60714
Phone (847) 608-1010
Fax (847) 299-1710

MARYLAND

62 Mountain Road
Glen Burnie, MD 21061
Phone (800) 973-4071
Fax (410) 760-3779

MASSACHUSETTS

60 Glacier Drive, Suite G
Westwood, MA 02090
Phone (617) 329-4280
Fax (617) 329-0586

MICHIGAN

37048 Van Dyke Avenue
Sterling Heights, MI 48312
Phone (810) 939-2060
Fax (810) 939-2638

MINNESOTA

7850-12th Avenue South
Airport Business Center
Bloomington, MN 55425
Phone (612) 854-8624
Fax (612) 854-2089

OHIO

2236 Waycross Road
Cincinnati, OH 45240
Phone (513) 851-4180
Fax (513) 851-8443

PENNSYLVANIA

2221 Cabot Boulevard West
Suite B
Langhorne, Pa 19047
Phone (215) 741-0661
Fax (215) 741-0521

Chartiers Valley Shopping
Center
1025 Washington Pike
Bridgeville, PA 15017
Phone (412) 257-4522
Fax (412) 257-4650

TENNESSEE

919-8th Avenue South
Nashville, TN 37203
Phone (615) 244-4434
Fax (615) 244-6713

TEXAS

7482 Harwin Drive
Houston, TX 77036
Phone (713) 781-1528
Fax (713) 781-0643

13615 Welch Road
Suite 101
Farmers Branch, TX 75244
Phone (972) 385-1975
Fax (972) 960-7626

WASHINGTON

20425-84th Avenue South
Kent, WA 98032
Phone (206) 872-7922
Fax (206) 872-0918

Service in Puerto Rico

**Matsushita Electric
of Puerto Rico, Inc.
Panasonic Sales Company/
Factory Servicenter**
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985
Phone (787) 750-4300
Fax (787) 768-2910

* pick-up/drop-off only

REPAIR INQUIRIES

Regional Customer Care Department

EAST (PCE)

2221 Cabot Boulevard West
Suite A
Langhorne, PA 19047
Phone (215) 741-0676
Fax (215) 750-6492

Covers:

CT, DE, ME, MD, MA, NH, NJ,
NY, PA, RI, VT, VA, DC, WV

EAST (PCE)

1225 Northbrook Parkway
Suite 2-390
Suwanee, GA 30174
Phone (770) 338-6860
Fax (770) 338-6548

Covers:

AL, FL, GA, MS, NC, SC, TN

CENTRAL (PCC)

1707 North Randall Road
Elgin, IL 60123
Phone (847) 468-5530
Fax (847) 468-5528

Covers:

AR, IL, IN, IA, KS, KY, LA,
MI, MN, MO, NE, ND, OK,
SD, TX, WI, OH

WEST (PCW)

6550 Katella Avenue
Cypress, CA 90630
Phone (714) 373-7440
Fax (714) 373-7447


Covers:

AK, AZ, CA, CO, ID, MT, NV,
NM, OR, UT, WA, WY, HI

Spanish Quick Use Guide/Guía para rápida consulta


Conexión de la antena externa

Desenganche la antena del televisor o de la videograbadora que tuviera anteriormente y conéctela a la parte trasera del registrador Combinación de VCR/TV, como se muestra en el diagrama. Si el sistema de su antena tiene conductores UHF y VHF separados, usted necesita un mezclador de banda UHF/VHF (no viene con el equipo).

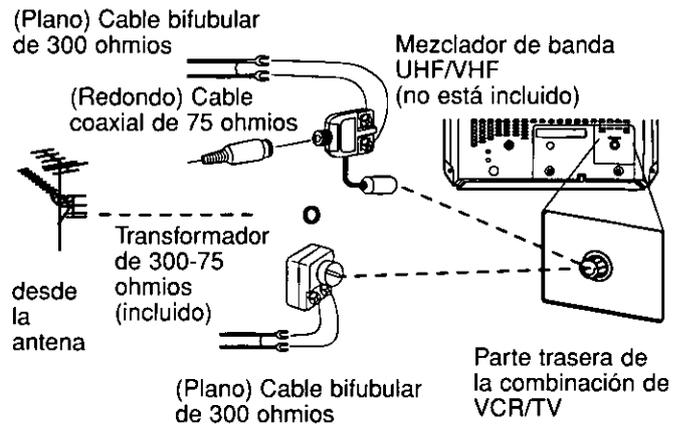

Conexión de la Antena Interior

Inserte la antena varilla (suministrada) en el receptáculo de la parte trasera de la combinación de VCR/TV. Luego, conecte los dos alambres al transformador de 300 ohmios-75 ohmios (suministrado). Entonces, conecte el transformador a la parte trasera de la combinación de VCR/TV como se muestra. Ahora, despliegue la antena y ajuste su longitud, dirección y ángulo para la más clara imagen.

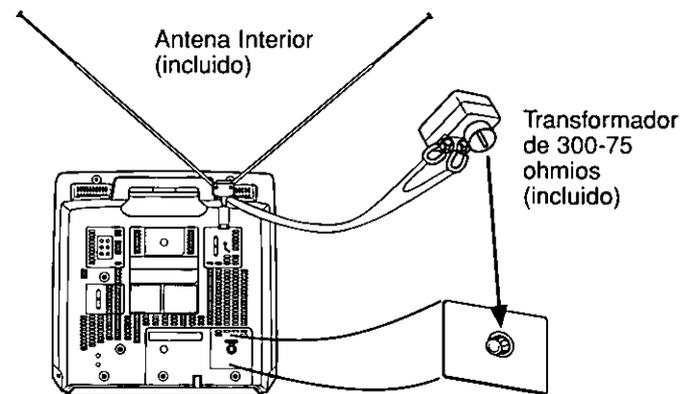



Conexiones de TV por cable

(A) Sin la caja convertidora/decodificadora

Con esta conexión usted podrá utilizar su control remoto de la combinación de VCR/TV para seleccionar los canales que desea ver y seleccionar canales no codificados para su grabación programada. Esta conexión no permite ver ni grabar canales codificados.

(B) Con una caja convertidora/decodificadora

Con esta conexión, usted podrá grabar y ver cualquier canal, incluyendo los canales codificados. Sin embargo, la selección de canales se debe efectuar en la caja convertidora de TV por cable que suministra esta empresa. La grabación programada está limitada a un canal cada vez, y sólo se podrá ver el canal que esté grabando.

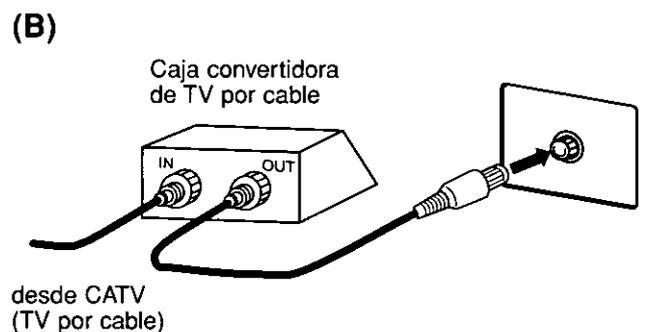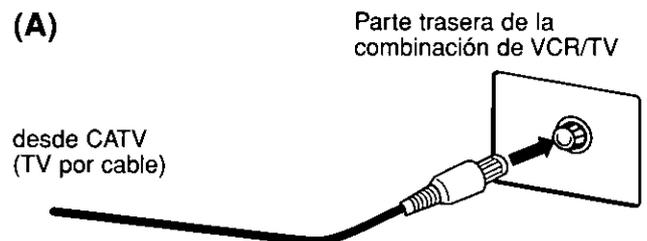

Para ver y grabar un canal codificado/ no codificado

Sintonice el canal del Registrador de la combinación de VCR/TV en el canal de salida de la caja convertidora de televisión por cable (por ejemplo el canal 3).


Después, seleccione en la caja convertidora de TV por cable el canal que se quiera ver o grabar.

Spanish Quick Use Guide/Guía para rápida consulta

Ud. podrá llevar su combinación de VCR/TV a donde ud. va con dos diferentes formas de alimentación. Ud. podrá conectar su cable de C.A. (corriente alterada) incorporado a cualquier fuente de CA. Cuando está viajando, conecte su cable para batería de coche al enchufe de su encendedor de cigarrillo para su seguridad de uso y para evitar daños al aparato, por favor siga las instrucciones y conexiones con cuidado.

Conexión del cable de CA (incorporado)

1. Conecte el cable de CA incorporado al enchufe de entrada CA en la parte trasera del aparato como está demostrado.
2. Conecte el cable de CA al enchufe de CA su pared.

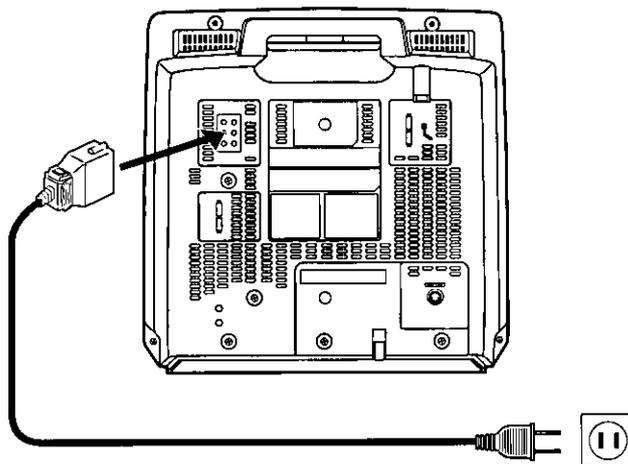


Conexión del cable para la batería de coche (incorporado)

1. Conecte el cable para batería de coche al enchufe de entrada CC en la parte trasera del aparato como está demostrado.
2. Arranque su vehículo.
 - **No** conecte su cable al enchufe del encendedor de cigarrillo antes de arrancar su vehículo.
3. Desconecte el encendedor de cigarrillo y conecte el enchufe de su cable para batería.

NOTAS IMPORTANTES:


- Este cable sólo se puede usar en vehículos con batería de 12V (toma a tierra negativo). Verifique en su manual de instrucciones de su vehículo.
- Use solamente el cable para batería de coche incorporado con su combinación de VCR/TV.
- Para evitar la disminución del voltage, no extienda el cable para batería de coche desde usando otro cable de extensión.
- Cuando no está usando el aparato, desconecte el cable para batería de coche desde el enchufe del encendedor para cigarrillo para evitar la descarga de la batería de su automovil.

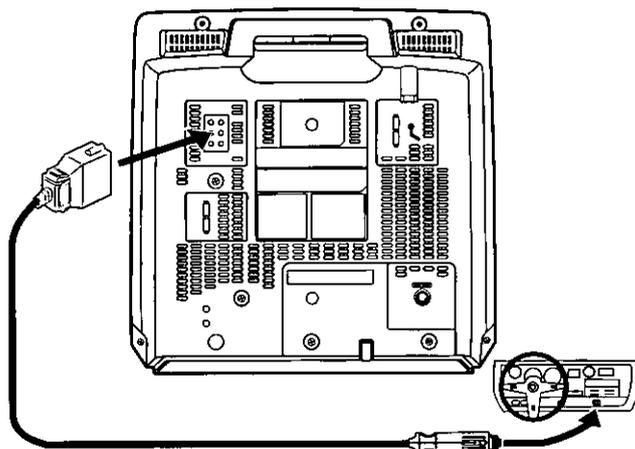

Cambio del fusible de cable para batería de coche

Si su fusible de seguridad se ha cortado, cambie como sigue al siguiente.


1. Destornille la tapa.
2. Cambie su fusible con otro fusible de 125V 13A.
 - Use sólo fusibles con las especificaciones correctas.
3. Reponga la tapa.

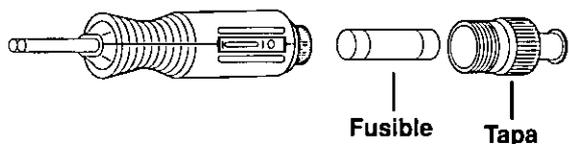


Para fijar el idioma, canal y reloj

Al encender la combinación de VCR/TV por primera vez, aparecerán las pantallas para fijar automáticamente los canales y el reloj.

- 1** Oprimir POWER para encender el aparato.

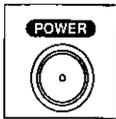

- 2** Oprimir ▲, ▼ o ► para la exhibición de la pantalla en inglés, español o francés.

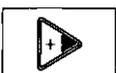

SELECT LANGUAGE
PUSH CH ▲ :English
PULSE CH ▼ :Español
APP. VOL + :Français

- 3** **Importante: si está usando una caja de TV por cable, encienda la caja y sintonice al canal PBS de su zona.**



FIJACION AUTO. (CA/RELOJ)
CONECTE EL CABLE DE LA ANTENA Y SI ESTA USANDO UNA CAJA DE TV POR CABLE SINTONICE AL CANAL PBS DE SU LOCAL LUEGO...
POR FAVOR OPRIMIR CH UP

Oprimir ▲ para iniciar la fijación de los canales y el reloj.

Las siguientes informaciones aparecerán seguidamente:

- AUTOPROGRAMACION EN PROCESO
- AUTOPROGRAMACION COMPLETO
- FIJACION AUTOMATICA DEL RELOJ EN PROCESO

Caso 1

7/28/1997 LUN 12:00PM
HORA VERANIEGA: ACT
CANAL FIJADO : CA 10
FIJACION AUTOMATICA
COMPLETO
TERMINAR : PULSE CH UP

Caso 2

FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO
PULSE MENU PARA FIJAR EL RELOJ

- 4** **Caso 1** Comprobar si la hora está fijada para terminar la fijación.

Si la hora y la hora veraniega es incorrecta, Raras veces, en caso de que ud. vive cerca de dos zonas con hora diferente, el aparato puede elegir un canal PBS con diferente hora de su zona. En este caso, haga los siguientes pasos:

- Tome nota del canal que está fijado en la pantalla y salga desde este modo oprimiendo el botón ▲.
- Anule este canal desde los canales memorizados en la combinación de VCR/TV.
- Oprima el botón MENU para que aparezca la pantalla del MENU.
- Oprima ▲ ▼ ◀ ▶ para elegir "RELOJ" y luego oprima MENU para que aparezca la pantalla de FIJACION DEL RELOJ.
 - Si ud. esta usando una caja de TV por cable y tiene muchos canales PBS, sintonice la caja de TV por cable a un canal PBS diferente e intente la fijación automática otravez usando el menú.
- Oprimir ▲ ▼ para elegir "FIJACION AUTOMATICA", luego oprimir ▶ para fijar y oprimir ▲ para iniciar.

- Por cualquier razón, si ha cambiado la hora manualmente, no funcionará la corrección automática de la hora.
- La fijación automática del reloj efectuará cada día al apagar la combinación de VCR/TV por primera vez. Si ud. usa una caja de TV por cable y desea efectuar la fijación automática del reloj, la caja de TV por cable debe permanecer encendido y sintonizado el canal PBS cuando se apaga la combinación de VCR/TV.

- Caso 2** Si aparece FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO, por favor fije el reloj manualmente.

- Oprimir MENU para que aparezca la pantalla de la fijación del reloj.
- Oprimir ▲ ▼ para elegir y oprimir ▶ para fijar el mes, la fecha, el año, la hora y la hora veraniega.

Para hacer correcciones,

- Oprimir ◀ ▶ repetidamente para retroceder o avanzar hasta el paso que desea corregir.
- Oprimir MENU para iniciar a funcionar el reloj. Luego oprimir ▲ ▼ ◀ ▶ para elegir "SALIR" y oprimir MENU para salir de la pantalla del MENU PRINCIPAL.

Para fijar o fijar de nuevo el reloj


En caso de que el reloj es incorrecto o ha ocurrido un corte eléctrico.

- Oprima MENU para que parezca el MENU PRINCIPAL.
- Oprima ▲ ▼ ◀ ▶ para elegir "RELOJ". Luego, oprima MENU para que aparezca la pantalla de la FIJACION DEL RELOJ.
- Oprima ▲ ▼ para elegir "FIJACION MANUAL", y luego ▶ para que aparezca la pantalla de la FIJACION DEL RELOJ.
- Por favor continúe con los pasos b y c de la instrucción anterior (Caso 2).




Operaciones para ver la TV



- 1** Oprimir POWER para encender la combinación de VCR/TV.

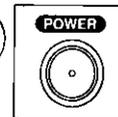

- 2** Elegir el canal usando ▲ ▼ o usando la teclas numéricas.

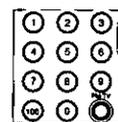


- 3** Oprimir ◀ ▶ para ajustar el nivel del volumen.

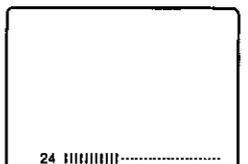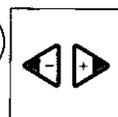

Encendedor automático con alarma

La combinación de VCR/TV se puede fijar para que se encienda automáticamente en uno de los tres modos (TV, reproducción o radio FM). Ud. también puede combinar con un alarma despertador de un minuto.

1  Oprimir ON-TIMER para que aparezca la pantalla del encendedor automático.

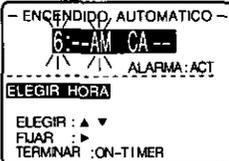

2  Oprimir ▲ ▼ para elegir y oprimir ► para fijar la hora del encendedor automático y luego para elegir el modo (TV, reproducción o radio FM). Vea el orden para elegir a la derecha.



CA02 — CA03 CA125
 CA01 — FM9 — FM8 FM1

- Asegúrese de que una cinta de video esté introducido en la combinación de VCR/TV, si ha elegido la reproducción de la videogradora.


3  Oprimir ▲ ▼ para elegir la fijación del alarma.

Si ha elegido "ACT", sonará un alarma por un minuto o hasta cancelar oprimiendo cualquiera de las teclas del control remoto. Cuando se apaga el alarma, sonará el sonido del modo que ha elegido.



Para hacer correcciones, use ▲ ▼ y ◀ ▶ para retroceder o avanzar como se necesita.

4  Oprimir ON-TIMER para fijar la función del encendedor automático. Esta pantalla aparecerá cerca de 5 segundos.

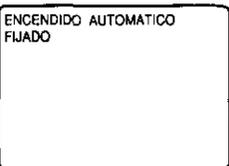

- El indicador de ON TIMER (encendedor automático) se encenderá en el panel delantero.

Para cancelar, oprima ON-TIMER para que aparezca de nuevo la pantalla del paso 3. Luego, oprima ADD/HLT para anular la hora ("6" destellará). Ahora, oprima ON-TIMER para terminar. "ENCENDIDO AUTOMATICO ANULADO" aparecerá unos segundos en la pantalla.


60 minutos luego de que la combinación de VCR/TV se ha encendido automáticamente, éste se apagará por sí mismo si no se ha oprimido ningún botón del control remoto o del aparato.

Fijación del temporizador para dormir

La combinación de VCR/TV se puede fijar para que se apague automáticamente.



SLEEP  Oprimir SLEEP para que aparezca el tiempo de la fijación.

- Si ud. oprime el botón DISPLAY con el temporizador para dormir fijado, aparecerá en la pantalla el tiempo que sobra para apagarse.

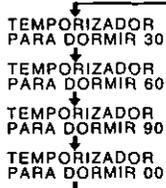

Para cancelar, oprimir SLEEP sucesivamente hasta que aparezca "TEMPORIZADOR PARA DORMIR 00".


Operaciones básicas para la reproducción

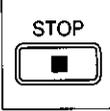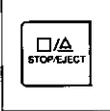- 1** Introducir una cinta.
- La combinación de VCR/TV se enciende automáticamente.
- 2**  Oprimir PLAY en el control remoto o combinación de VCR/TV para comenzar a reproducir.
- Si la cinta no tiene la lengüeta para evitar el borrado, la combinación de VCR/TV comienza a reproducir automáticamente.
- 3**  Oprimir STOP en el control remoto o combinación de VCR/TV para parar la reproducción.
- 4**  Oprimir STOP/EJECT en la combinación de VCR/TV para expulsar la cinta.
- Usted puede expulsar la cinta cuando el aparato está encendido o apagado.

Para buscar una escena durante la reproducción


-  Oprimir REW o FF durante la reproducción para buscar una escena.
- La velocidad de búsqueda es a 15 veces más rápida que la velocidad normal para el modo SP (alimentación CC) y 27 veces más rápida para el modo SLP (alimentación CA).
- 

Operaciones básicas para la grabación

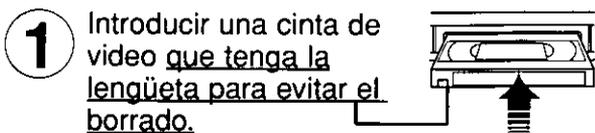

1 Introducir una cinta de video que tenga la lengüeta para evitar el borrado.

- la combinación de VCR/TV se enciende automáticamente.

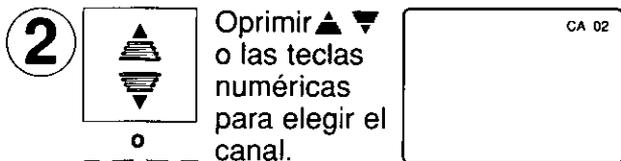


2 Oprimir ▲ ▼ o las teclas numéricas para elegir el canal.

- U oprimir ▲ ▼ de la combinación de VCR/TV.
- Para grabar desde una fuente externa, oprimir ▲ ▼ y elija LINEA.



3 Oprimir SPEED hasta que aparezca la velocidad deseada.

- SP = reproducción normal
- LP = reproducción larga
- SLP = reproducción super larga

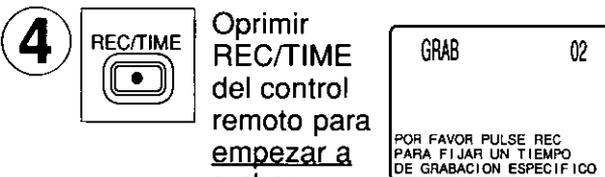


4 Oprimir REC/TIME del control remoto para empezar a grabar.

- U oprimir REC/TIME de la combinación de VCR/TV.
- Oprimir PAUSE para hacer una pausa en la grabación de un toque.


Grabación de un toque (OTR)

La combinación de VCR/TV se puede fijar para parar la grabación a una hora fijada anteriormente.

En el paso 4, oprimir repetidamente REC/TIME para fijar el tiempo de grabación.

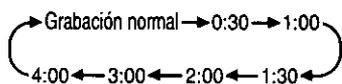


- La luz indicador de la grabación programada (TIMER) se enciende en el panel delantero.

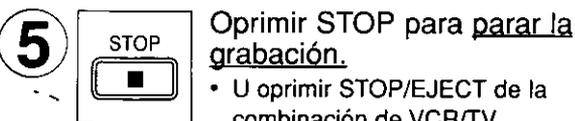

5 Oprimir STOP para parar la grabación.

- U oprimir STOP/EJECT de la combinación de VCR/TV.

Grabación con temporizador

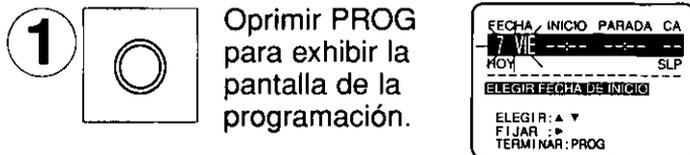


1 Oprimir PROG para exhibir la pantalla de la programación.

- Si ya existe una programación memorizada, oprima ▲ ▼ y ▶ para elegir un número sin programación.

2 Oprimir ▲ ▼ y ▶ para elegir y fijar uno de los siguientes:

- 1~31 = Grabación de una sola vez
- DIARIO = A una misma hora LUN ~VIE
- SEMANAL = Una vez a la semana a una misma hora

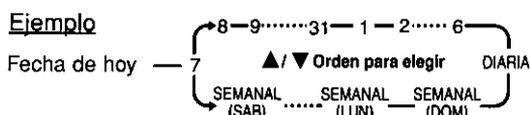


3 Oprimir ▲ ▼ y ◀ ▶ para elegir y fijar las siguientes fijaciones.

- Fijaciones:**
- Hora de inicio
 - Hora de parada
 - Canal o LINEA para una fuente externa
 - Velocidad de la cinta (SP, LP, SLP)

Para hacer correcciones

Oprimir ▶ sucesivamente para avanzar u ◀ para retroceder hasta el paso que desea corregir.

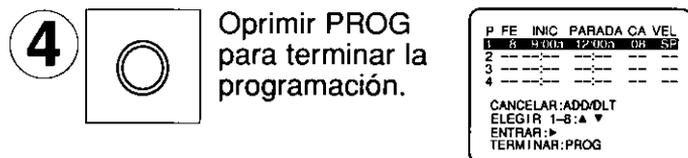

4 Oprimir PROG para terminar la programación.

Para hacer más programaciones

Oprimir ▲ ▼ y ▶ para elegir y fijar un número de programa en blanco y luego repita los pasos 2 y 3.

5 Oprimir PROG para salir desde este modo y volver a la pantalla normal.

- La luz indicador de la grabación programada (TIMER) se enciende en el panel delantero.
- Si ud. está usando una caja de TV por cable, asegúrese de que esté sintonizado el canal deseado y que esté encendido para la grabación con temporizador.

Dos minutos antes de empezar la grabación, "GRABACION PROGRAMADA INICIARA ENSEGUIDA" aparecerá en la pantalla.

Warranty

Panasonic Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America,
One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
AVE. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

PANASONIC Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

<u>PRODUCT</u>	<u>PARTS</u>	<u>LABOR</u>
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS
VCR	ONE (1) YEAR	NINETY (90) DAYS
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS
MONITOR-VCR	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS CUSTOMER PAYS ALL LABOR CHARGES AFTER 90 DAYS

Monitor-VCR In-home or carry-in Service: 19" (diagonal) CRT / LCD and Larger Monitor-VCR Carry-in Service: 18" (diagonal) CRT / LCD and smaller

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free 1-800-545-2672, to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 2/11/97

Panasonic Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America
One Panasonic way Secaucus,
New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of
Puerto Rico, Inc. ("PSC")
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985

Printed in U.S.A.
VQTS3305 (A)

