Panasonic®

Operating Instructions 54" Class 1080p Plasma HDTV

(54.1 inches measured diagonally)

Model No.

TC-P54Z1



Quick Start Guide

(See page 8-24)

- For assistance (U.S.A./Puerto Rico), please call: 1-877-95-VIERA (958-4372) or visit us at www.panasonic.com/contactinfo
- For assistance (Canada), please call: 1-866-330-0014 or visit us at www.vieraconcierge.ca























Turn your own living room into a movie theater!

Experience an amazing level of multimedia excitement



VIECA LINK**

VIERA Link[™] is a trademark of Panasonic Corporation.

VIETA CAST

VIERA CAST™ is a trademark of Panasonic Corporation.




SDHC Logo is a trademark.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



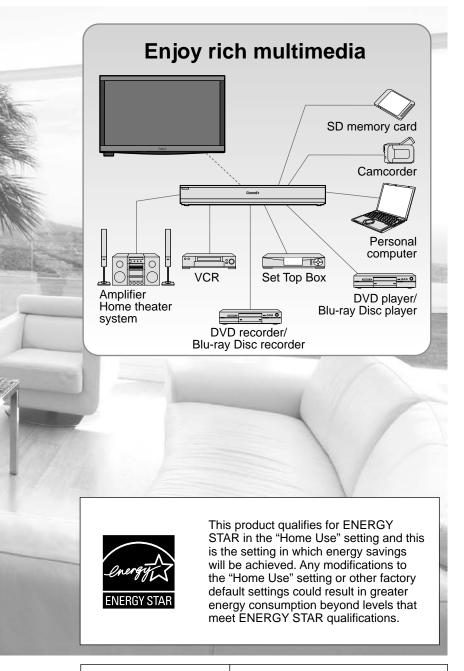

BBE.VIVAHD3D Sound

Manufactured under license from BBE Sound, Inc.



Licensed by BBE Sound, Inc. under one or more of the following US patents: 5510752, 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

HDAVI Control™ is a trademark of Panasonic Corporation.

The WiHD™ logo is licensed for use by WirelessHD, LLC.

Contents

Please read before using the unit Safety Precautions Notes	4
Quick Start Guide Accessories/Optional Accessory	. 8
Basic Connection Identifying Controls First Time Setup	15 19
Enjoy your TV! Basic Features	
 Watching TV Using VIERA TOOLS Viewing from an SD Card Watching Videos and DVDs VIERA CAST™ Network Camera Displaying PC Screen on TV 	27 28 32 34 36
Advanced Features	
 How to Use Menu Functions (picture, sound quality, etc.) VIERA Link™ "HDAVI Control™" Network setting VIERA CAST setting Lock Editing and Setting Channels Closed Caption Input Labels Using Timer Remote control registration Recommended AV Connections 	44 50 52 54 56 58 59 60 61
FAQs, etc.	ca
 Ratings List for Lock Technical Information Care and Cleaning Specifications FAQ Limited Warranty 	64 68 69
(for U.S.A. and Puerto Rico only) Customer Services Directory (for U.S.A. and Puerto Rico)	

Limited Warranty (for Canada) ----- 74

Safety Precautions



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: To reduce the risk of electric shock, do not remove cover or back.

No user-serviceable parts inside. Refer servicing to qualified service personnel.



A

The lightning flash with arrowhead within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place liquid containers (flower vase, cups, cosmetics, etc.) above the set (including on shelves above, etc.).

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.

WARNING/CAUTION



Small parts can present choking hazard if accidentally swallowed.

Keep small parts away from young children. Discard unneeded small parts and other objects, including packaging materials and plastic bags/sheets to prevent them from being played with by young children, creating the potential risk of suffocation.

■ Set up

This Plasma TV may fall and can cause personal injury or even death if not installed correctly. To prevent personal injury or death, follow these warnings:

- Install the Plasma TV in accordance with the manufacturer's recommended pedestal or stand, corresponding hardware and installation instructions. This Plasma TV is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability. The following accessories are manufactured by Panasonic Corporation.
 - Wall-hanging bracket (Vertical) TY-WK5P1SW
- Be sure to ask a qualified technician to carry out the installation and set-up.

Two or more people are required to install or remove the television.

- Some wall mounts (wall-hanging brackets) are not designed to be mounted to walls with steel studs or old cinder block constructions.
 - Ask your dealer or licensed contractor to properly secure the wall-hanging bracket.
- Do not place the Plasma TV or its stand on a sloped or unstable surface.

The Plasma TV may fall or tip over.

- Do not support the Plasma TV on a non-specified pedestal.
- Do not place the Plasma TV on furniture that can easily be used as steps, such as a chest of drawers.
- Do not climb or allow children to climb on the Plasma TV
- Place or install the Plasma TV where it cannot be pushed, pulled over or knocked down.
- Route all cords and cables such that they cannot be tripped over or pulled by curious children.
- Do not place any objects on top of the Plasma TV.
 If water spills onto the Plasma TV or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Plasma TV, please consult an Authorized Service Center.

■ AC Power Supply Cord

To prevent fire or electric shock:

- The Plasma TV is designed to operate on a 120 V AC, 60 Hz service. Insert the power cord plug as far as it will go into the wall socket.
 - If the plug is not fully inserted, heat may generate, which could cause a fire.
- Do not handle the power cord plug with wet hands.
- Do not do anything that might damage the power supply cord.
- When disconnecting the power supply cord, hold the plug, not the cord.

■ Handling the power supply cord

- Insert the power plug fully into the socket outlet. (If the power plug is loose, it could generate heat and cause fire.)
- Ensure that the power plug is easily accessible.
- Ensure the earth pin on the power plug is securely connected to prevent electrical shock.
 - An apparatus with CLASS I construction shall be connected to a power socket outlet with a protective earthing connection.
- Do not touch the power plug with a wet hand. (This may cause electrical shock.)
- Do not use any power cord other than that provided with this TV. (This may cause fire or electrical shock.)
- Do not damage the power cord. (A damaged cord may cause fire or electrical shock.)
 - Do not move the TV with the cord plugged in the socket outlet.
 - Do not place a heavy object on the cord or place the cord near a high-temperature object.
 - Do not twist the cord, bend it excessively, or stretch it.
 - Do not pull on the cord. Hold onto the power plug body when disconnecting cord.
 - Do not use a damaged power plug or socket outlet.

■ Radio waves

 Do not place this TV in any medical institutions or locations with medical devices.

Radio waves from this TV may interfere with the medical devices and cause accidents due to the malfunction.

- Do not use this TV near any automatic control devices such as automatic doors or fire alarms.
 - Radio waves from this TV may interfere with the automatic control devices and cause accidents due to the malfunction.
- Keep the RF remote control, Tuner Box and Wireless Unit away at least 8.7 inches (22 cm) from the location where a cardiac pacemaker is implanted.
 - Radio waves from this TV may interfere with the operation of the pacemaker.
- Do not disassemble the RF remote control, Tuner Box or Wireless Unit.

It may cause troubles such as difficulties in communication.

■ If Problems Occur During Use

- If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odor is detected from the Plasma TV, unplug the power supply cord immediately. Continued use of the TV under these conditions might cause a fire or permanent damage to the TV. Have the TV evaluated by an Authorized Service Center. Servicing of the TV by unauthorized personnel is strongly discouraged due to its high voltage.
- If water or an object gets inside the Plasma TV, if the Plasma TV is dropped, or if the enclosure becomes damaged, unplug the power supply cord immediately. A short-circuit may occur, which could cause a fire. Contact an Authorized Service Center for an evaluation.

CAUTION

- Do not cover the ventilation holes.
 Doing so may cause the Plasma TV to overheat, which can cause a fire or damage to the Plasma TV.
- Leave a space of 3 15/16" (10 cm) or more at the top, left and right, and 2 3/4" (7 cm) or more at the rear.
- When using the pedestal, keep the space between the bottom of the TV and the pedestal or stand surface clear from objects that may obstruct ventilation.

■ When Moving the Plasma TV

 Be sure to disconnect all cables before moving the Plasma TV.

Moving the TV with its cables attached might damage the cables which, in turn, can cause fire or electric shock

- To prevent an electric shock, disconnect the power plug from the wall outlet as a safety precaution before carrying out any cleaning.
- Transport only in upright position
 Transporting the unit with its display panel facing upright or downward may cause damage to the internal circuitry.
- Using a dry cloth, clean any dust from the power supply cord and plug regularly.

Build-up of dust on the power cord plug can increase humidity, which might damage the insulation and cause a fire.

This Plasma TV radiates infrared rays;

therefore, it may affect other infrared communication equipment. Install your infrared sensor in a place away from direct or reflected light from your Plasma TV.

The TV will still consume some power as long as the power supply cord is connected to the wall outlet.

- Display panel is made of glass. Do not apply strong force or impact to the display panel.
 - This may cause damage resulting in injury.
- The TV is heavy. TV should be handled by 2 or more people. Support as shown to avoid injury by the TV tipping or falling.

When the Wireless Unit (Receiver) is attached, do not hold it.



Safety Precautions (Continued)

FCC STATEMENT

FCC Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by Panasonic Corp. of North America could void the user's authority to operate this device.

FCC RF Exposure Warning:

- This product contains wireless transmitter that complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This product's internal mounted wireless transmitter must not be installed or operated within 20 cm (8 inches) spacing between all person's body (excluding extremities of hands, wrist and feet for RF remote control) and other outside wireless transmitters.
- This product's wireless transmitter must not be co-located or operated with any other antenna or transmitter.

FCC Declaration of Conformity Model No. TC-P54Z1

Responsible Party: Panasonic Corporation of North America

One Panasonic Way, Secaucus, NJ 07094

Contact Source: Panasonic Consumer Electronics Company

1-877-95-VIERA (958-4372)

email: consumerproducts@panasonic.com

This device complies with Part 15 of the FCC Rules and RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CANADIAN NOTICE:

For Model TC-P54Z1

This Class B digital apparatus complies with Canadian ICES-003.



▲WARNING

CEA CHILD SAFETY NOTICES: Flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations. Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and may cause personal injury or even death.

The consumer electronics industry (of which Panasonic is a member) is committed to making home entertainment enjoyable and safe. To prevent personal injury or death, be sure to follow the following safety guidelines:

TUNE INTO SAFETY:

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use
 of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on "larger than life" flat panel displays. Care should be taken to install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.

WALL MOUNTING: IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY. ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure the wall where you are mounting the display is appropriate. Some wall mounts are not
 designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure,
 contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.

Panasonic recommends that a qualified installer perform the wall-mount installation. See page 4.

Notes

■ Do not display a still picture for a long time

This causes the image to remain on the plasma screen ("Image retention"). This is not considered a malfunction and is not covered by the warranty.





To prevent "Image retention", the screen saver is automatically activated after a few minutes if no signals are sent or no operations are performed. (p. 71)

Typical still images

- Channel number and other logos
- Image displayed in 4:3 mode
- SD Card photo
 Video game
 Computer image

■ Set up

- Do not place the unit where it's exposed to sunlight or other bright light (including reflections).
- Use of some types of fluorescent lighting may reduce the remote control's transmission range.

Accessories/Optional Accessory

Accessories

✓ Check you have all the items shown.

Accessories


- □ Remote Control Transmitter
 - N2QBYB000005
- □ Batteries for the Remote Control Transmitter (2)
 - AA Battery




☐ Cleaning cloth



☐ Pedestal TBLX0107

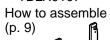

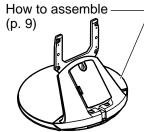

☐ Tuner Box TU-Z100U



- □ Operating Instructions
- ☐ Viera Concierge and basic instruction for HDTV
- ☐ Wireless Unit set ⇒ p. 11 (Receiver and Transmitter)

☐ Cable clamper (2)



- ☐ Product Registration Card (U.S.A.)
- ☐ Customer Care Plan Card (U.S.A.)
- ☐ Speaker set ⇒ p. 10
- ☐ RS232C terminal **Specifications**

Optional Accessory





Wall-hanging bracket (vertical) TY-WK5P1SW

Note

- In order to maintain the TV's performance and safety, be absolutely sure to ask your dealer or a licensed contractor to secure the wall-hanging
- Carefully read the instructions accompanying the plasma TV stand or pedestal, and be absolutely sure to take steps to prevent the TV from tipping over.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause its panel to crack.

Installing the remote's batteries

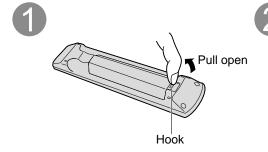

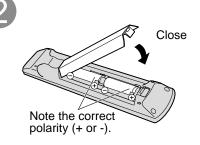


Caution)

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
 - Do not mix old and new batteries.
 - Do not mix different battery types (such as alkaline and manganese batteries).
 - Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or break batteries.
- Do not disassemble or modify the remote control.


Attaching the pedestal to TV

■Assembling the pedestal

- Be careful not to scratch the surface (part with gloss finish) of the base during assembly
- Remove the cable cover attached to the frame. (It will be used again after the pedestal is attached to the display Unit.)

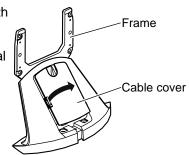



- Fix securely with assembly screws (A). (Total 2 screws)
- Tighten screws firmly (tightening torque: 1.8 2.0 N• m)

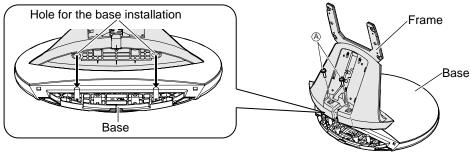

■Set-up


- 1) Attach the pedestal to TV
 - Slide the pedestal frame posts into the brackets on the back of the TV.
 Fix securely with assembly screws (C). (Total 4 screws)
 - Tighten screws firmly (tightening torque: 1.5 1.8 N• m)

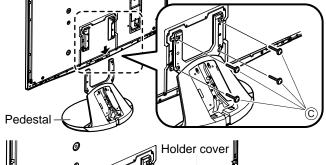

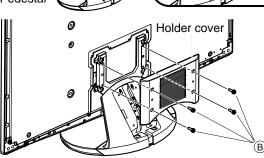


Attach the Holder cover with assembly screws (B).
 (Total 4 screws)

2 Attach the cable cover

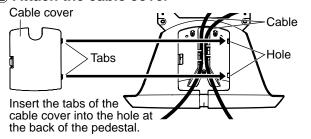

- Place each cable in the groove at the back of the pedestal and snap the cable cover in.
- * The lower part of the groove is separated in right and left. Use the one suitable for you.

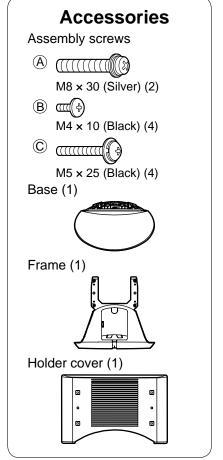

Accessories/Optional Accessory

Attaching the pedestal to TV

Warning

Do not disassemble or modify the pedestal.

Otherwise the TV may fall over and become damaged, and personal injury may result.

Caution

Do not use any other TV and displays.

Otherwise the TV may fall over and become damaged, and personal injury may result.

Do not use the pedestal if it becomes warped or physically damaged.


 If you use the pedestal when it is physically damaged, personal injury may result. Contact your nearest Panasonic Dealer immediately.

During set-up, make sure that all screws are securely tightened.


• If sufficient care is not taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

Attaching the Speaker to TV


- ① Fix the Mounting bracket securely to the back of the Display unit with Assembly screws ⓐ.
- ② Insert the speaker mounting screws ⓑ temporarily in the screw outermost holes of the speaker and fix the speaker mounting screws ⓑ to the speaker mounting bracket.
- Orient the front side of the Mounting bracket toward the rear side of the speaker and Display Unit side.
- Fix it same as the speaker at the other side.
- There will be a gap between the Display Unit and the speaker.

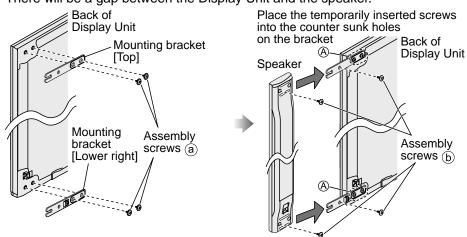

3 Connect Display Unit and speaker with speaker cable.

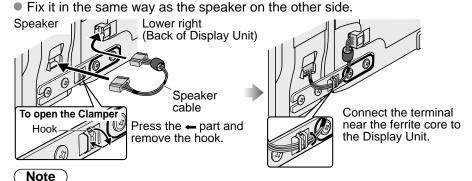

- Tighten the screws firmly.
- Insert to the end of the speaker cable terminal firmly.
- Loosen the screw shown in fig. A above to adjust the gap between the speaker and the Display Unit.
- Do not hold the speaker to transport the unit.

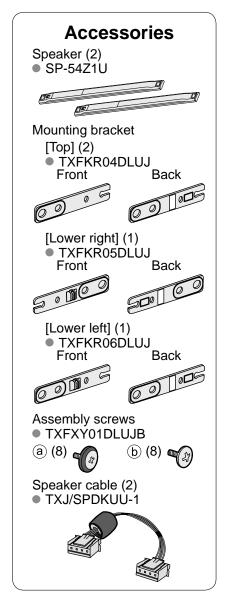


(Continued)

Connecting Display Unit, Tuner Box and Wireless Unit


■Wired connection


Connect Display Unit to Tuner Box

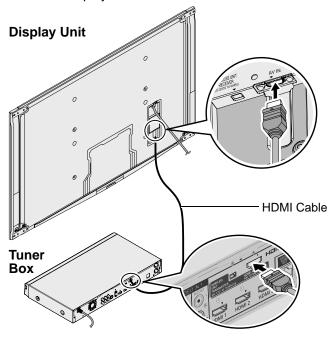

■Wireless connection


Connect Wireless Unit (Receiver) to Display Unit

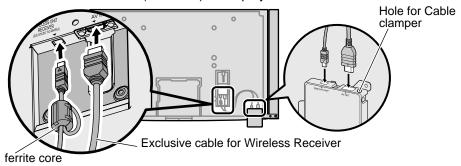

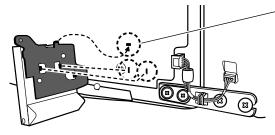

Insert the metal tab on the top of the Wireless Unit (Receiver) into the groove of the Display Unit.

Insert the tabs on the front of the Wireless Unit (Receiver) into the holes at the back of the Display Unit.

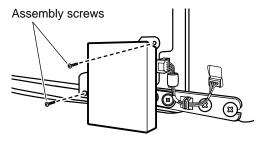

Fix securely with assembly screws (Total 2 screws).

Accessories

Assembly screws (2) TXFXY01JSUJB



 $M4 \times 10$

HDMI cable

K1HY19YY0006 9.8 ft (3.0 m)



Exclusive cable for Wireless Unit

TXFMM01JSUU

Exclusive cable for Wireless Receiver

1.6 ft (0.5 m)



Exclusive cable for Wireless Transmitter

3.3 ft (1.0 m)



Cable clamper (2)

TMME364



Wireless Unit (Receiver) TU-WHR1U



Wireless Unit (Transmitter) TU-WHT1U




Caution


- Do not disassemble or modify the Wireless Unit.
- Connect the Exclusive cable for Wireless Receiver which has ferrite core on Display Unit side.

Accessories/Optional Accessory

Connect Wireless Unit (Transmitter) to Tuner Box

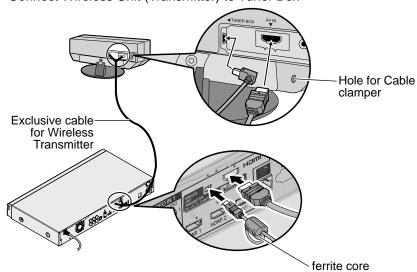

■Cable Binding for Wireless Unit

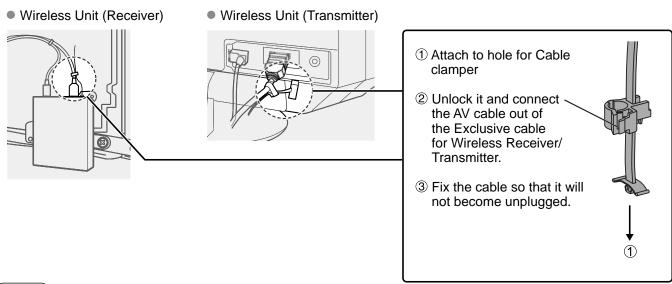

Note


- Do not connect any other device than Wireless Unit to the HDMI terminal of the Display Unit/Tuner Box.
- Connect the Exclusive cable for Wireless Transmitter which has ferrite core to Tuner Box side.
- If the connection is not correct, the following icons will be displayed when the Display unit and the Tuner box are turned on.



This Display Unit is connected to a device other than Tuner Box.

(Continued)

Installing the Display Unit, Tuner Box and Wireless Unit

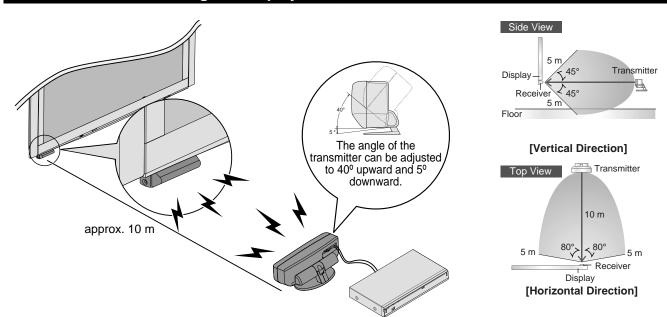

Precautions for Wireless Unit

Transmission Range

Use the Wireless Unit (Transmitter) within a straight line distance of 10 m (approx.) from the Wireless Unit (Receiver). The range may be shortened if there are any obstacles or the surrounding environment or building structure affects the transmission.

Installation Environment

Do not install this apparatus in the following locations to avoid distortion of image or audio or unit failure due to the radio performance degradation.

- Location subject to be high temperature (near the heater etc.)
- Location with poor air circulation (at the end of a closed rack etc.)

In the following cases, the image or audio may be distorted or intermittent, or the apparatus may not operate properly:

- There is a strong obstacle for the radio waves between the Wireless Unit (Transmitter) and Wireless Unit (Receiver). (furniture, AV devices, rack, rack door etc.)
- Wireless Unit (Transmitter) is not facing the Wireless Unit (Receiver).
- Wireless Unit (Transmitter) is placed significantly far from the front of Wireless Unit (Receiver) direction.
 (Especially in a high position near the TV display, behind the TV, behind the right side of the pedestal)

Interference from Other Devices

If the Wireless Unit (Transmitter)/Wireless Unit (Receiver) is too close to other devices, failures such as malfunction or slow remote control response may occur due to the radio wave interference.

Keep the transmitter away from the following devices as much as possible:


Wireless LAN, Microwaves, Telephones, Other electric devices


Note

• When the signal state is poor and the power lamp of the Wireless Unit (Transmitter) / Wireless Unit (Receiver) is lit red, communication may not be able to be performed again automatically (no video and audio output). In such a case, turn the power off and then on again with the remote control.

Accessories/Optional Accessory (Continued)


Cable Binding Instructions

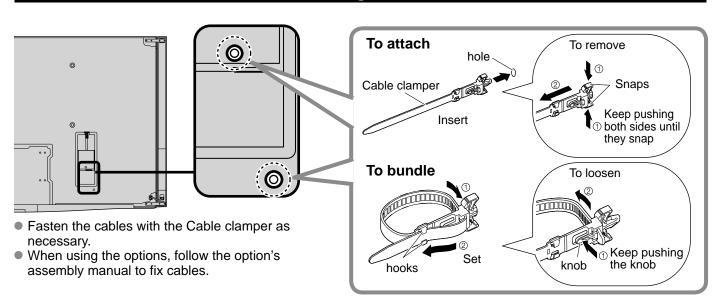

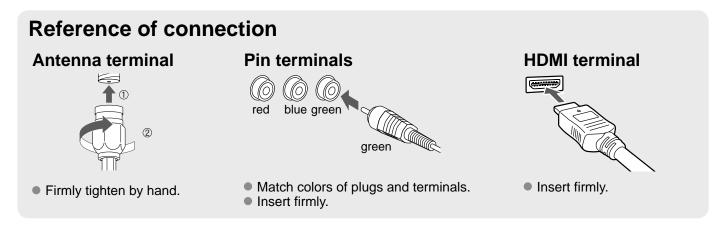


Basic Connection

Example 1 Connecting Antenna (To watch TV)

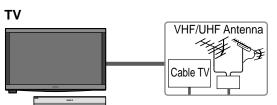

VHF/UHF Antenna

- NTSC (National Television System Committee): Conventional broadcasting
- ATSC (Advanced Television Systems Committee):
 Digital TV Standards include digital high-definition television (HDTV), standard-definition television (SDTV), data broadcasting, multi-channel surround-sound audio and interactive television.

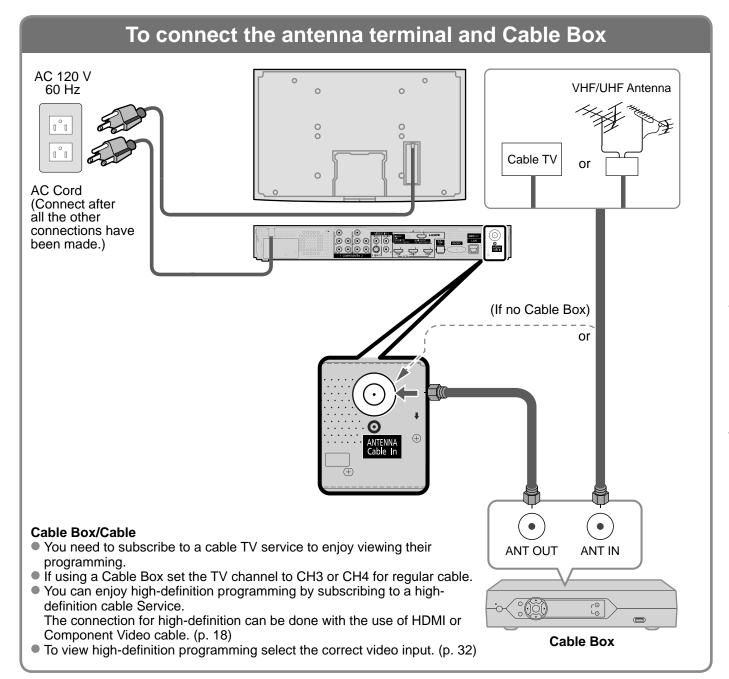

Note

- Not all cables and external equipment shown in this book are supplied with the TV.
- For more details on the external equipment's connections, please refer to the operating manuals for the equipment.
- When disconnecting the power cord, be absolutely sure to disconnect the power cord plug from the wall outlet first.
- For additional assistance, visit us at: www.panasonic.com www.panasonic.ca

Basic Connection (Continued)

Example 2 Connecting DVD recorder (VCR) (To record/playback)




DVD Recorder


If the source has a higher resolution signal (480p/720p/1080i/1080p), connection can be made with the use of a Component Video or HDMI cable. (p. 18)

VCR


Connection can be made with the use of an RF cable and Composite Video/S Video cable. (p. 18)

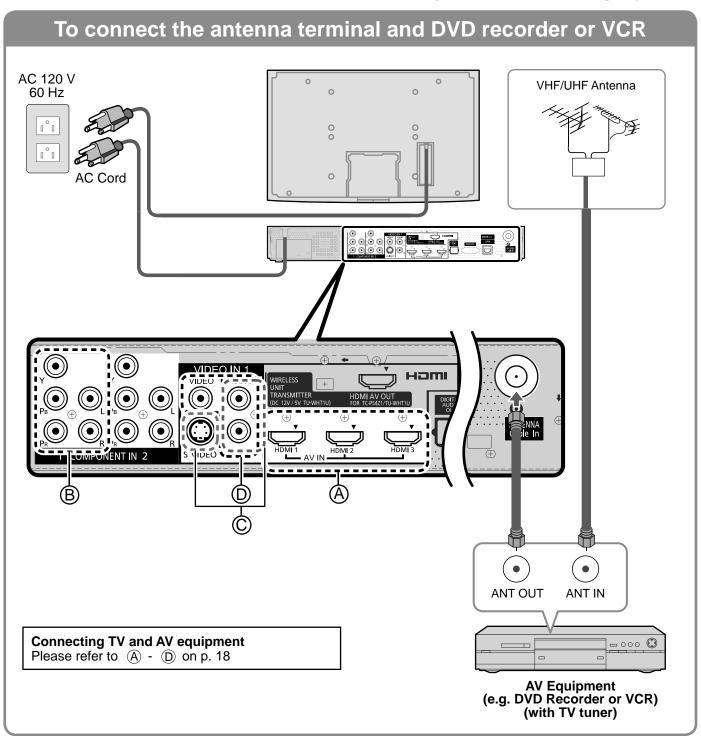

Example 3 Connecting DVD recorder (VCR) and satellite receiver

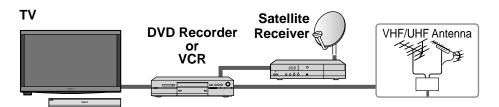

You can enjoy high-definition programming by subscribing to high-definition satellite service. Connection can be done with the use of HDMI or Component Video cable. (p. 18)

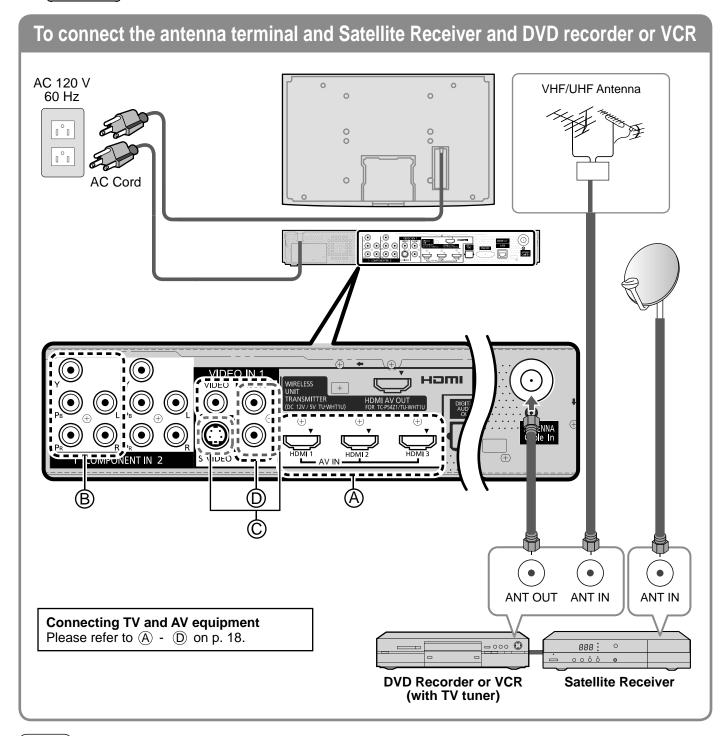



Note

• For details of external equipment connections, please refer to the operating manuals for the equipment.

Basic Connection (Continued)

AV cable connections

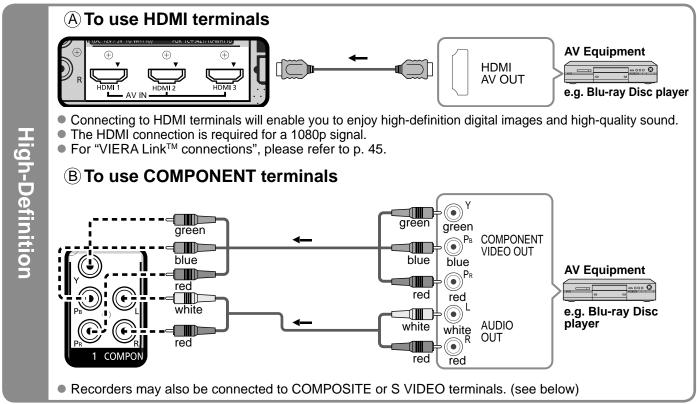

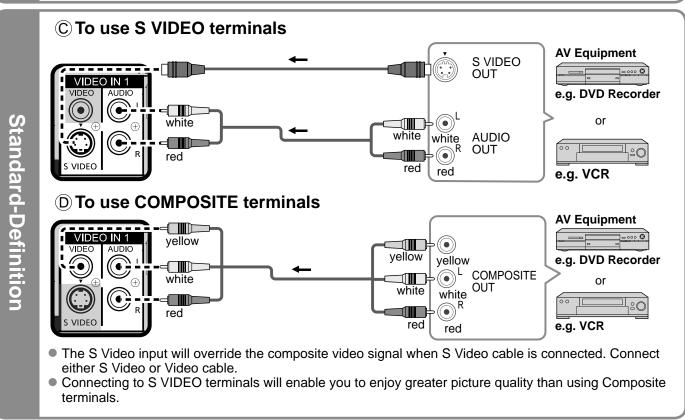


Note)

- Some programs contain a copyright protection signal to prevent recording.
- When the copyright protection program is displayed, do not connect the other TV monitor through a VCR. Video signals fed
 through VCRs may be affected by copyright protection systems and the picture will be distorted on the other TV monitor.
- For more details on the external equipment's connections, please refer to the operating manuals for the equipment.

Identifying Controls

TV controls/indicators


■ Display Unit

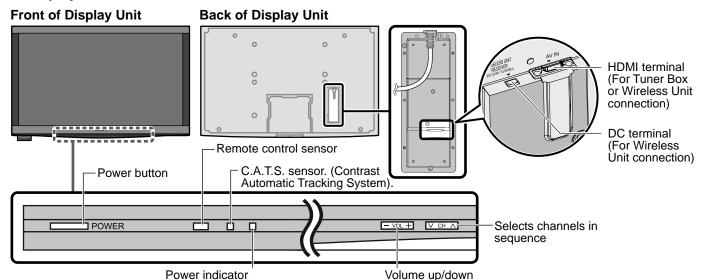

■Tuner Box


(On: red, Standby: orange, Off: no light)

Front of Tuner Box

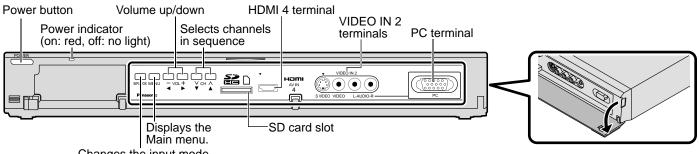


Changes the input mode Chooses menu and submenu entries.

Back of Tuner Box

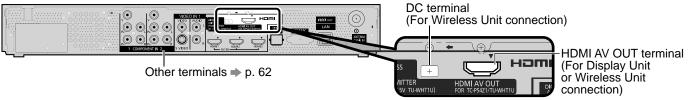

■ Wireless Unit

Front of Wireless Unit (Transmitter)

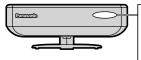


Power off

Power on and no communication Green: Power on and communication state good Orange: Power on and communication state not good

Red (blinking): Indicates malfunction

Front of Wireless Unit (Receiver)

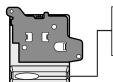


Power off

Power on and no communication Red: Green: Power on and communication state good

Red (blinking): Indicates malfunction


 When the red LED is blinking, turn the power of the Tuner Box and Display Unit off and then on again. If the problem is not resolved, consult your local Panasonic dealer.

Back of Wireless Unit (Transmitter)

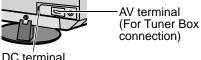

(For Tuner Box connection)

Back of Wireless Unit (Receiver)

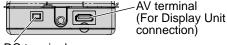

DC terminal

(For Display Unit connection)


Identifying Controls (Continued)

Remote control

This TV uses a RF remote control.

The remote control is operable when it is not facing the Display Unit or Tuner Box.

As the radio waves reflect on walls or other obstacles, the remote control is operable even there are obstacles between the remote control and the Tuner Box.

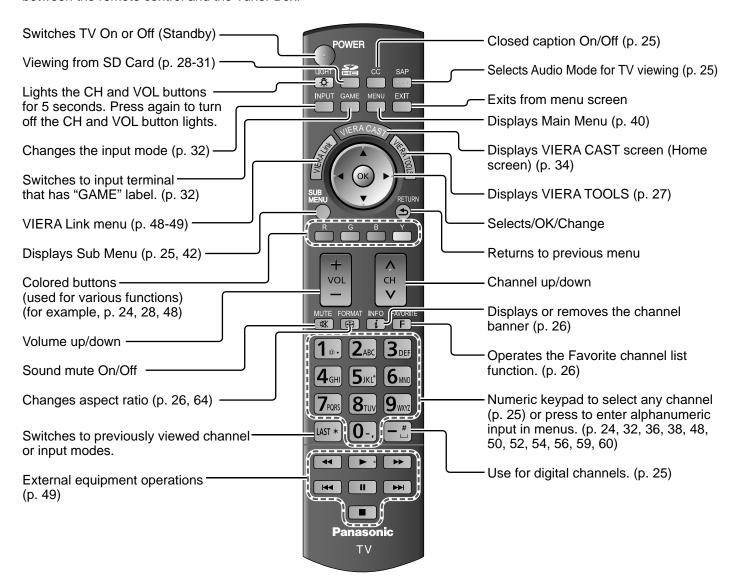

Transmission Range

Use the RF remote control within the range of 7 m from the TV tuner.

The range may be shortened if there are any obstacles or the surrounding environment or building structure affects the transmission.

Interference from Other Devices


If the TV tuner is too close to another device, failures such as malfunction or slow remote control response may occur due to the radio wave interference.

Keep the transmitter away from the following devices as much as possible:

Wireless LAN, Microwaves, Telephones, Other electric devices

First Time Setup (Remote control registration)


Make sure to register your remote control with the following procedure when the TV is turned on for the first time.

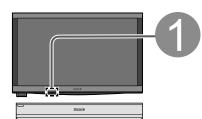


Panasonic

Turn the TV On with the POWER button (Display Unit)

(The Tuner Box power will be also turned on).

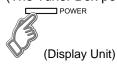

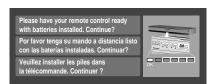


Confirmation screen will be displayed.



Press the 'OK' button and the '1' button simultaneously for at least 3 seconds.

• If there is no registered remote control, the "Remote control registration" screen is displayed every time the TV is turned on.

Select

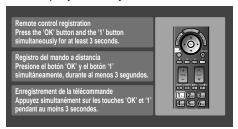





You can also go to step ③ selecting "No".
(Use control panel of Tuner Box, when Remote control is not available)



Remote control registration ⇒
 (p. 61)









First Time Setup (Continued)

"First time setup" is displayed only when the TV is turned on for the first time after the power cord is inserted into a wall outlet and when "Auto power on" (p. 42-43) is set to "No".






Select your viewing environment


- * This setting will be skipped next time if you select "Home Use".
- 1 Select your language



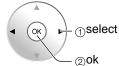

② Be sure to select "Home Use"



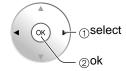

- Please confirm your selection (Home Use) before pressing OK button.
 - If you select "Store Demonstration" by mistake in ②, confirmation screen will be displayed.






- Select "No" and return to previous screen ②.
- If you select "Yes", Screen enters store demonstration mode.


To display the "Please select your viewing environment" screen again as shown above and select "Home Use", do one of the following:

- Press and hold down the front POWER button.
- Unplug the TV and plug it again.

Auto channel setup


1) Select "ANT/Cable setup"

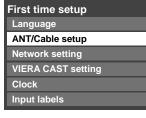

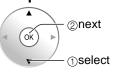

■ Press to return



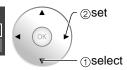

ANT in Cable: Cable TV Antenna: Antenna Not used: Skip TV tuning ⇒ ao to ⑤

Select "Not used" when no wire is connected to the "Antenna/Cable" terminal.

- Typical when Cable/Satellite box is connected to a TV input.
- Prevents accidental tuning to an unavailable signal.




■ Press to exit from

a menu screen

screen

RETURN

22

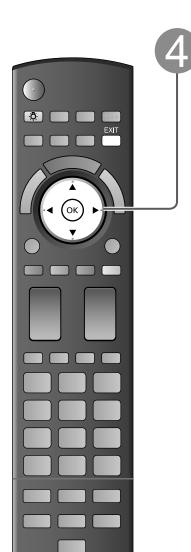

3 Select "Auto program"



4 Select scanning mode (ALL channels/Analog only/Digital only)







Start scanning the channels

Available channels (analog/digital) are automatically set.

All channels: Scans digital and analog channels Analog only: Scans Analog channels only Digital only: Scans Digital channels only

5 Confirm registered channels

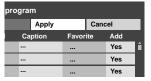

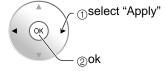

- If OK is not pressed after selecting "Apply", the channels will not be saved.
 The channel will be saved when no operation is performed for 60 seconds and the "Manual program" menu will also exit automatically.
- If you perform scanning more than twice, previously saved channels are erased.

■ Press to exit from a menu screen


Panasonic




Note

 To change setting (Language/ ANT/Cable setup/ Network setting/ VIERA CAST setting/ Clock/Input labels) later, go to Menu screen (p. 42)




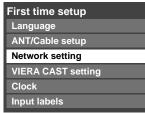


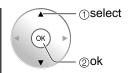

Network setting (p. 50-51)

VIERA CAST setting

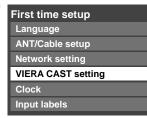

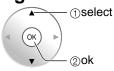


VIERA CAST setting (p. 52-53)

First Time Setup (Continued)



Adjust the clock

First time setup
Language
ANT/Cable setup
Network setting
VIERA CAST setting
Clock
Input labels

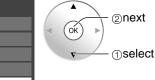

②set

1) select item

Mode

Manual: Adjust the clock manually (Year/Month/Day/Hour/Minute)

The clock is adjusted Auto: automatically via Internet

service.

Only available when the TV is on a network.

⇒ Set "Network setting" and "VIERA CAST setting" first. (Time zone/DST)

	•
Year	Select the year
Month	Select the month
Day	Select the day
Hour	Adjust the hour
Minute	Adjust the minute

Time zone

On:

Select your time zone. (EST/CST/MST/PST/AKST/ HST/NST/AST)

DST Set DST (Daylight Saving Time) setting. (On/Off)

> Advances the clock one hour from the time is set according to the time zone.


1 Manual setting


Clock	
Mode	← Manual →
Year	2009
Month	1
Day	7
Hour	10 AM
Minute	10
Time zone	NST
DST	Off




Clock	2009/ 6/11 8:07AM
Mode	← Auto →
Year	2009
	•
Timezone	Est
DST	On


Set the Input labels

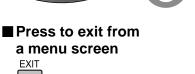

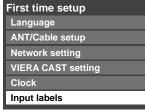

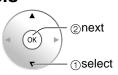

Input labels Component 1 Component 2 HDMI 2 HDMI 3 HDMI 4 GAME Video 1 Video 2 GAME РС

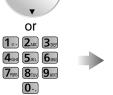

0-.

1) select

2)set



Switches Input mode alphabet to numeric

a menu screen **EXIT**



Note

About broadcasting systems

Analog (NTSC):

Conventional broadcasting

Digital (ATSC):


New programming that allows you to view more channels featuring high-quality video and sound

Label: [BLANK] SKIP/VCR/DVD/CABLE/SATELLITE/DVR/GAME/AUX/RECEIVER/ COMPUTER/Blu-ray/CAMERA/DVD REC/HOME THTR/MONITOR/MEDIA CTR/MEDIA EXT/OTHER


Watching TV

Connect the TV to a cable box/cable, set-top-box, satellite box or antenna cable (p. 15-18)



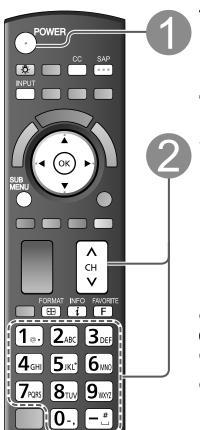

Turn power on

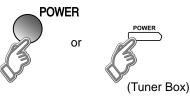

Note

 If the mode is not TV, press and select TV. (p. 32)

Select a channel number









■ To directly input the digital channel number

When tuning to a digital channel, press the button to enter the minor number in a compound channel number.

example: CH15-1: 1. 5 kg -# 1.

(Note)

- Reselect "Cable" or "Antenna" in "ANT in" of "ANT/Cable setup" to switch the signal reception between cable TV and antenna. (p. 22, 57)
- The channel number and volume level remain the same even after the TV is turned off.

Listen with SAP (Secondary Audio Program)

■ Select Audio Mode for watching TV



Digital mode

Press SAP to select the next audio track (if available) when receiving a digital channel.



Analog mode

Press SAP to select the desired audio mode.

Each press of SAP will change the audio mode. (Stereo/SAP/Mono)

Closed caption





Display the SUB MENU






■ Switches Closed caption mode On or Off

■ Press SUB MENU to show sub menu screen. (p. 42) This menu consists of shortcuts to convenient functions.

Watching TV (Continued)

■ Other Useful Functions (Operate after ②)

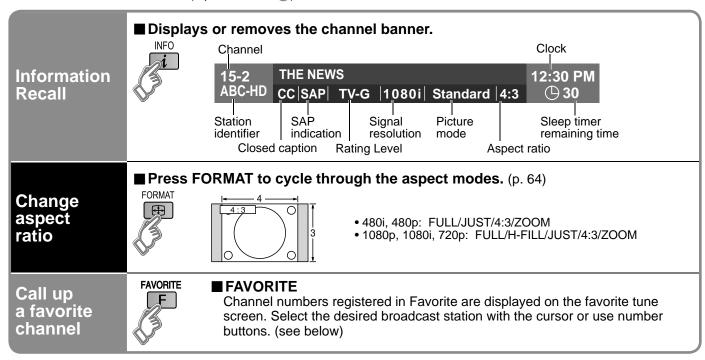


Favorite Feature


■Set Favorite Feature

Display the SUB MENU.





Select "Set favorite"

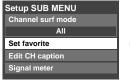

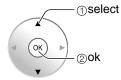

Set the displayed channel

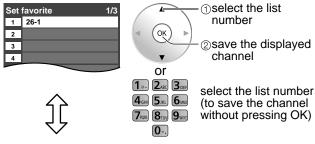

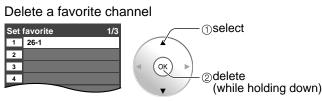

■Use Favorite Feature


Display "Favorite channels"




2 Select the channel



3 Set Favorite channel

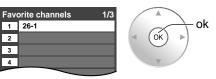


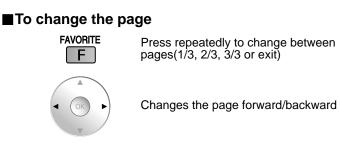

Using VIERA TOOLS

VIERA TOOLS is the easy way to access high use menu items. They are displayed as shortcut icons on the TV screen.

Unlike a conventional menu, you can enjoy using, playing or setting a function quickly.

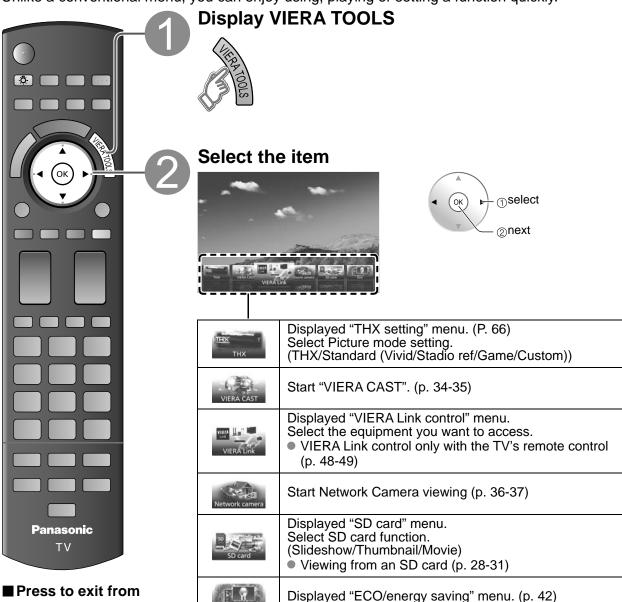

■ Press to return to the previous screen


a menu screen


RETURN



Viewing from an SD Card

You can view movies and photos taken with a digital camera or digital video camera and saved on an SD card. (Media other than SD Cards may not be reproduced properly.)

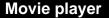

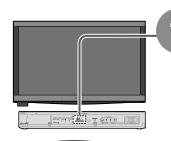

Insert the SD card -

* This setting will be skipped next time unless you select "Set later".

Set "SD card setting" and select "Play SD card now" "SD card setting" will be displayed automatically each time an SD card is

inserted for the first time.

select

(2) ok





Slideshow: A Slideshow will start

automatically next time.


Thumbnail: The Photo viewer menu will be displayed automatically next time.

Movie: The video data plays

automatically from next time. Set later: "SD card setting" menu will be displayed repeatedly.

The data can be played manually.

■ Manual operation ("Play SD card automatically" is "Off")

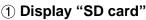



Using VIERA TOOLS (p. 27)





Select the movie to be listed



Recording format (MPEG2/AVCHD) Movie information



Navigation area

Off:

Date and time: Date and time of recording are displayed.

Duration: Recording time is displayed.

View








■To display/hide banner ⇒


Date and time 06/10/2009

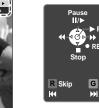

To display Navigation area



■To hide Navigation area ⇒ Elapsed time of current movie-

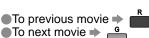


■ Press to exit from a menu screen **EXIT**

Panasonic ΤV

■ Press to return to the previous screen RETURN



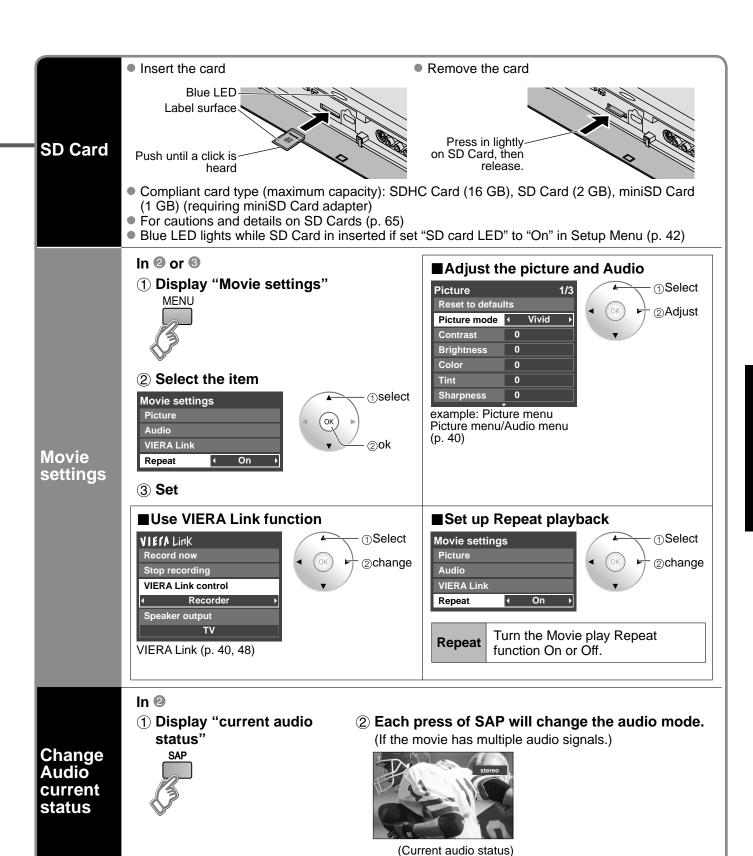

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See http://www.mpegla.com.

It may take several seconds to change the sound.

Viewing from an SD Card

Photo viewer





Follow direction in Movie player (P. 28)





Select the data to be viewed

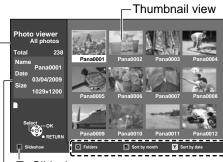

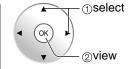

To Slideshow

Selected picture information is displayed.

Total number of images.

Note)

Depending on the JPEG format, "Information" contents may not be displayed correctly. Refer to p. 65 (Data format for SD card browsing) for details.




View




Displays one at a time

- To display/hide Navigation area → i
- Return to Thumbnail view (s)

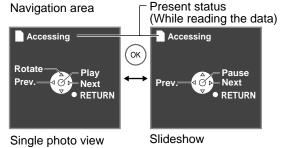



To previous photo

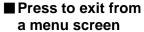

Panasonic


INFO i



■ Press to return to the previous screen RETURN



(Continued)

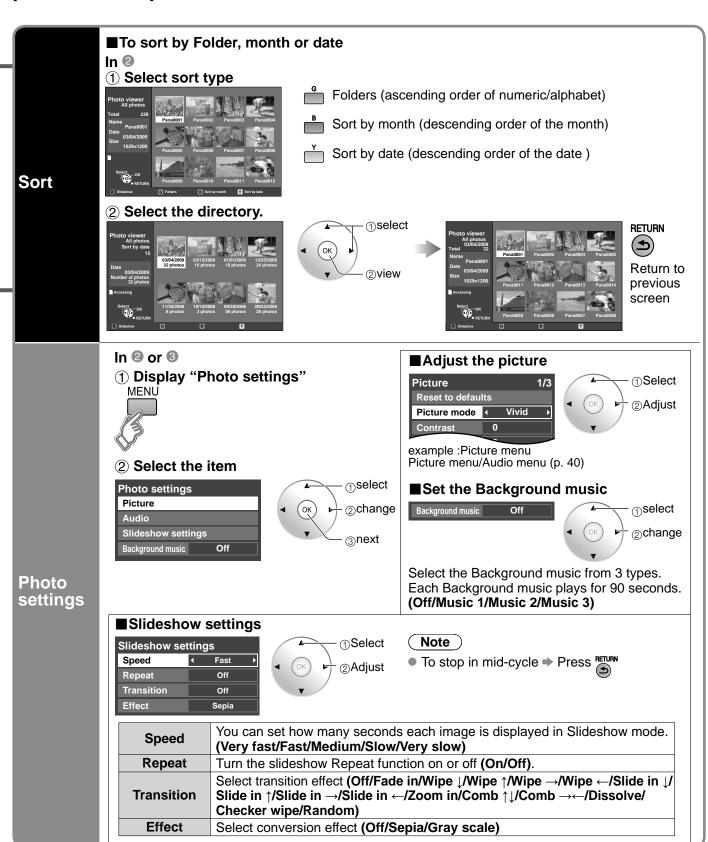

VIERA IMAGE VIEWER


The VIERA Image Viewer is a function that lets you easily view still and motion images on a VIERA television by simply inserting an SD card into the VIERA SD card slot.

Watching Videos and DVDs

If you have applicable equipment connected to the TV, you can watch videos and DVDs on the TV's screen.

Input Select


You can select the external equipment to access.

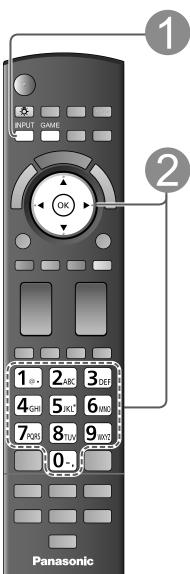


With the connected equipment turned On Display the Input select menu



Select the input mode

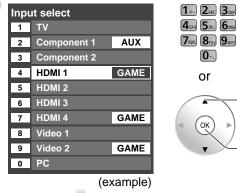

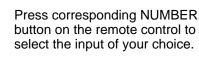

Select the input of your choice, then press OK.

 During the selection, if no action is taken for several seconds, the "Input select" menu disappears.

Terminal Label (example)

 The terminal and label of the connected equipment are displayed. To label each of the inputs, please refer to p. 59.

Note]

The input label will be displayed on "Input select" screen if Input label is set on p. 59.

1) select


②enter


- For side input terminals (HDMI 4/Video 2), "GAME" input label is set as default. (Picture mode is set to "Game", refer to p. 66.)
- For more details for picture mode setting, refer to p. 66. For Input label, refer to p. 59.

■ To return to TV




■ Press Game to switch to the game screen Switches to Input terminal that has "GAME" label.

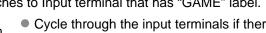

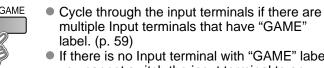

If there is no Input terminal with "GAME" label, you cannot switch the input terminal to any other input terminal than the one currently selected.

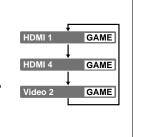


Operate the connected equipment using the remote control supplied with the equipment

Note `

For details, see the manual of the connected equipment.

VIERA Link™ Setting

If you connect equipment that has the "HDAVI Control" function to a TV using an HDMI cable, you will find it easier to use. Please refer to p. 44-49. Before using these functions, you need to set "VIERA Link" setting to "On" as shown below.

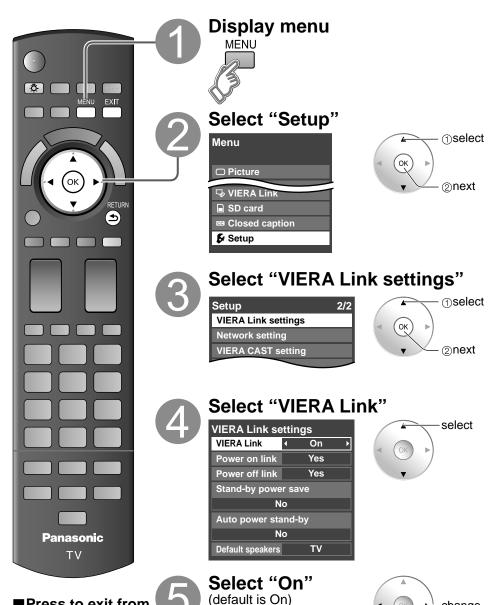

■Press to exit from a menu screen



■ Press to return to the previous screen

> RETURN (\mathbf{z})

Note

Now you can set each "VIERA Link" function according to your preference (p. 46-49).

change


- If no HDMI equipment is connected or standard HDMI equipment (non- "VIERA" Link") is used, set it to "Off".
- For more details on the external equipment's connections, please refer to the operating manuals for the equipment.

VIERA CAST™

Operate VIERA CAST

You can access information services (TV content) from the Home screen via the Internet.

You need broadband environment to use this service.

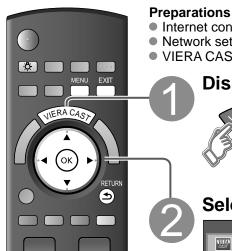

Internet connections (p. 35)


- Network setting (p. 50)
- VIERA CAST setting (p. 52)

Display the Home screen



Select the item and press OK



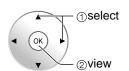

■ Press to exit from a menu screen



■ Press to return to the Home screen



This screen is an example. It varies according to the usage conditions.


* Depending on the usage conditions, it may take a while to read all the data.

Other settings

■To adjust picture and audio


Display "Menu" MENU

Select "picture" or "Audio"

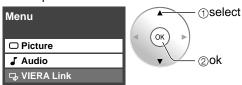

Select the item and adjust


menu (p. 40)

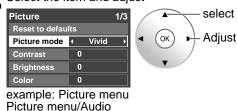

■To use VIERA Link function

Display "Menu" MENU



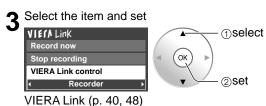

Internet connections



NOTICE: If you don't have Internet service by your local provider, please order a high-speed Internet service at no less than the following connection speed. If you already have such service, make sure that the connection speed exceeds the following.

- Required speed (effective): at least 1.5 Mbps for SD and 6Mbps for HD picture quality, respectively.
- Dial-up Internet service cannot be used for VIERA CAST.

Select wired or wireless connection

If the Cable/DSL modem is close to the TV and you have only one TV set, you may choose a wired connection. If the Cable/DSL modem is far from the TV and/or you have more TVs in the house, you may want to use a wireless network.

Connecting to the Internet

(A) Basic connection


If you are not using the network for connecting anything else but the TV, you could just connect the TV directly to the Cable/DSL Ethernet connection (see schematic below).

B Advanced wired connection

If you are using the network for connecting various PCs/Laptops and want to connect the TV, you should use a router to connect the TV to the Internet (see schematic below).

© Advanced wireless connection

If you are using the network for connecting various PCs/Laptops and want to connect the TV, you could also use a wireless router to connect the TV to the Internet (see schematic below).

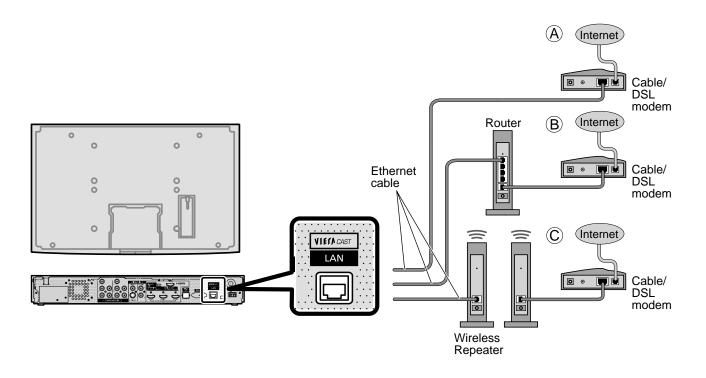

Network Camera

You can operate the Network camera from TV's remote and also check the images from Network camera on your TV

Basic operation for Network camera



OK

2_{ABC}

5JKL

8_{TUV}

13def

|6mno

Preparations

- Internet connections (p. 35)
- Example of Network Camera connection (p. 37)
- Network setting (p. 50)
 - Before connecting a Network camera to the TV, please complete the "IP setting" and run a "Connection test" (p. 50)

Note

This feature is only available with Panasonic-made network cameras released after summer 2009. (Preliminary model numbers: BL-C210A and BL-C230A) A number of VIERA-compatible network cameras can be founded at the following sites: http://www.panasonic.com/

http://panasonic.net/pcc/products/netwkcam/

1

With all connected equipment turned on

Start up Network camera


If there is no registered camera displayed, please set it in "Network Camera" settings. (p. 37)

Select "Network Camera" in "VIERA Link"



Using VIERA TOOLS (p. 27)



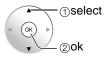


There is also an option to start with sensor detection.

2

View

Multi screen (Still image) Without Default camera (Default camera setting (p. 37))

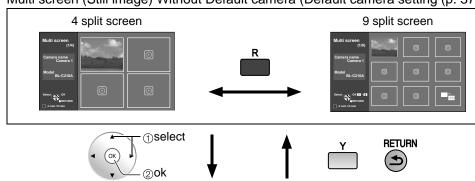

Single screen With Default camera (Default camera setting (p. 37))



 For more details on setting and operation of Network camera, please also read the operating manuals for the Network camera.





Panasonic

■ Press to return to the previous screen
RETURN




Example of Network Camera connection

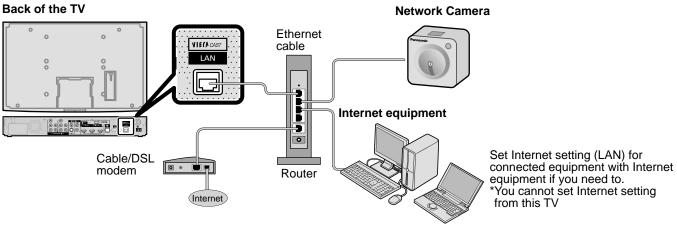

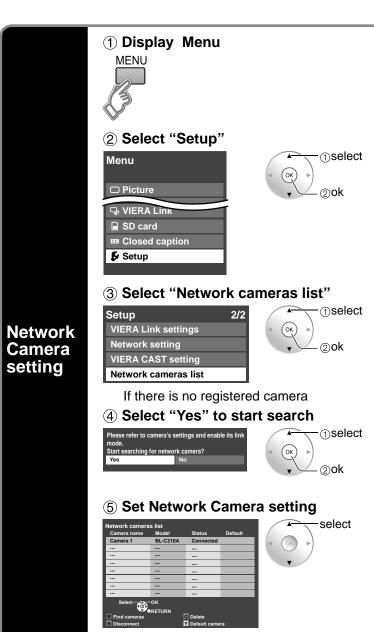


■ Network Camera setting operation

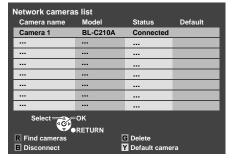

	R	"Please refer to camera's settings and enable its link mode. Start searching for network camera?" → "Yes" to start camera search. ■ Before you start to search for a camera, switch the camera to registration mode. (For this operation, please refer to the operating manual for the Network camera.) ■ Search condition also depends on "Network setting" (p. 50)
	G	"Remove camera information?" ⇒ "Yes" to delete camera information.
	В	"Disconnect to camera?" ⇒ "Yes" to delete camera connection. "Disconnected" will be displayed in "Status"
	Y	"Set this camera as default camera?" ⇒ "Yes" to set to default use. Displayed "(Default)" next to camera name.
(OK)	(Available only when reconnecting) "Connect to Camera? ⇒ "Yes": "Connect" will be displayed in "Status" (Attach up to 8 Network cameras simultaneously)

Displaying PC Screen on TV

The screen of the PC connected to the unit can be displayed on the TV. You can also listen to PC sound with the audio cable connected. To connect PC (p. 62)

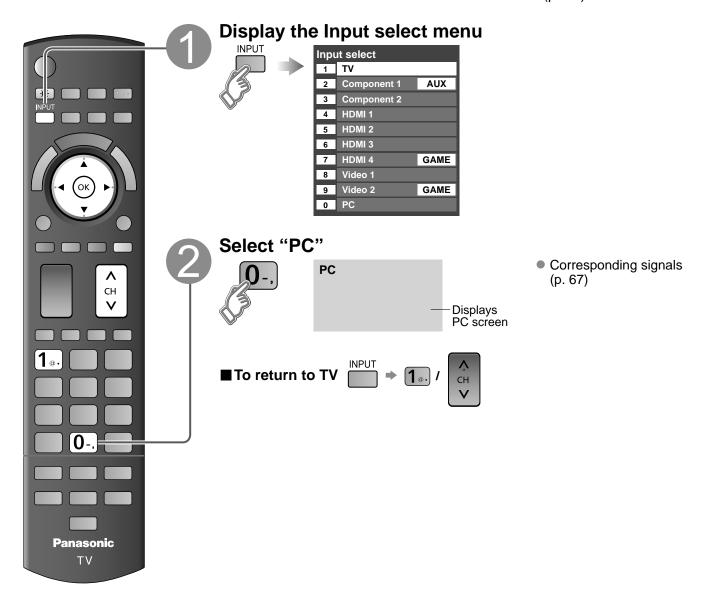

■ PC menu setting (change as desired)

• Making settings → "How to Use Menu Functions" 1 to 4 (p. 40)

Menu	Ite	m	Adjustments/Configurations (options)
		Reset to defaults	Resets PC adjust
		Sync	 H & V: The H and V sync signals are input from the HD/VD connector. (p. 68) On green: Uses a synchronized signal on the Video G signal, which is input from the G connector. (p. 68)
		Dot clock	Alleviates the problem if a picture appears to be vertically-striped, flickers partially or is blurred.
		H-position	Adjusts the horizontal position.
Picture	PC adjustments	V-position	Adjusts the vertical position.
Ф		Clock phase	Alleviates the problem if the whole picture appears to flicker or is blurred. First adjust the Dot Clock to get the best possible picture, then adjust the Clock Phase so that a clear picture appears. Note It may not be possible to display a clear picture due to poor input signals.
		Input resolution	Switches to wide display. Input signal switched from 640×480 to 852×480 Input signal switched from 1024×768 to 1280×768 or 1366×768
		H-frequency V-frequency	Displays the H (Horizontal)/V (Vertical) frequencies. ■ Display range Horizontal: 15 - 110 kHz Vertical: 48 - 120 Hz

Audio menu (p. 40)

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you.





Display menu




Displays the functions that can be set (varies depending on the input signal)

Select the menu

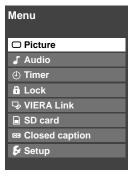

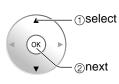


Select the item

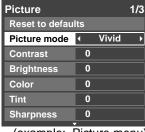



(example: Picture menu)

Adjust or select

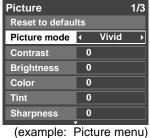



■ Press to exit from a menu screen **EXIT**

TV

■ Press to return to the previous screen RETURN



■ Men	u lis	t						
Menu		Item						
	Reset to defaults							
	Picture mode							
	Contrast, Brightness, Color, Tint, Sharpness							
	Color temp.							
	Color mgmt.							
	x.v.Color							
	C.A.T.S.							
	Video NR							
	Pro s	setting						
		n adjustments						
Pi	PC a	djustments						
oictur		3D Y/C filter						
lre		Color matrix						
		Block NR						
	Ą	Mosquito NR						
	Уvа	Black level						
	nce	3:2 pulldown						
	Advanced picture	24p Direct in						
		HD size						
		H size						
	Rese	t to defaults						
	Bass							
	Treble							
	Balance							
		A.I. sound						
Audic	Adı	BBE ViVA						
ō	/an	BBE						
	ced	Surround						
	Advanced audio	Volume leveler						
	dio	TV speakers						
		HDMI 1 in, HDMI 2 in, HDMI 3 in, HDMI 4 in						
	Slee	p, Timer 1-5						
Lock	Racc	ord now						
VIEI	Stop	recording						
¥ R A	VIERA Link control Speaker output							
SD card	SD c							
Closed								
caption	Clos	ed caption						

Resets all picture adjustments to factory default settings except for "Advanced picture".		
	Reset to def	aults
Basic picture mode (Vivid/Standard/Studio ref/THX/Game/Custom) (p. 66)	Picture mode	e Vivi
Adjusts color, brightness, etc. for each picture mode to suit your taste	Tint	0
 Display range Contrast/Brightness/Color/Sharpness: 0 - 100 Brightness Brightness 	Sharpness	0
Tint: -50 - +50		
Selects a choice of Cool(blue), Normal, or Warm(red) color. (Cool 2/Cool 1/Normal/Warm 1/Warm 2)	Color temp.	Norr
On: Enhances green and blue color reproduction, especially outdoor scenes. (On/Off)	Color mgmt	Oı
Auto: Provide the appropriate picture when images corresponding to "x.v.Color" are input via the HDMI input of this TV. (Off/Auto)	x.v.Color	Au
Adjusts the brightness and gradation according to the ambient lighting condition. (Off/On)	C.A.T.S.	0
Reduces noise, commonly called snow. Leave it off when receiving a strong signal. (Off/Weak/Medium/Strong)	Video NR	01
Adjust the "Picture mode" setting in more detail. (p. 66)	Dra potting	
(This setting can be adjusted only when "Custom" or "Photo" is selected.)	Pro setting	
Adjusts vertical alignment and size when aspect setting is "ZOOM" (p. 64)	Zoom adjus	
Sets PC display (p. 38)	PC adjustme	
Minimizes noise and cross-color in the picture. (On/Off)	3D Y/C filter	0
Selects image resolution of component-connected devices (HD/SD) SD: Standard Definition HD: High Definition	Color matrix	SI
 Only 480p signal accepted; regular TV (NTSC) is not available. 		
Reduces noise of specific digital signals of DVD, STB, etc. (On/Off)	Block NR	O
Reduces HDTV flicker noise in the contoured sections of an image (Off/On)	Mosquito N	₹ 0
Selects Dark or Light. Valid only for external input signals. (Dark/Light)	Black level	Lig
Adjust the picture recorded in 24 fps for optimum quality. (On/Off) 96Hz/48Hz: Achieves more cinematic playback by reproducing the movie contents at 2 or 4 times the	3:2 pulldow	n O
 If flicker is seen using 48Hz, please use 60Hz or 96Hz. If you use the Wireless Unit system and select 24p Direct in 48Hz or 96Hz, the link between the transmitter and receiver may disconnect and reconnect causing the picture to briefly drop out when the signal changes between 1080/24p and another format, i.e. 1080/60p, 1080/60i, 720/60p. This is normal operation. 	24p Direct in	1 60
Selects between 95 % (Size 1) or 100 % (Size 2) for the scanning area with High-definition signal. (Size 1/ Size 2) Select "Size 1" if noise is generated on the edges of the screen. Size 1: Selected item for "HD size". Scanning 95%	HD size	
Size 2: Selected item for "HD size". Scanning 100%		Siz
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) 	H size	
Size 2: Selected item for "HD size". Scanning 100%	H size	Siz
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) 		Size
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. 	Reset to def	Siz
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. 	Reset to def	Siz
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. 	Reset to def Bass Treble	Size aults 0 0 0
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. 	Reset to def Bass Treble Balance	Siz
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE ViVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE 	Reset to def Bass Treble Balance A.I. sound	Siz
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE ViVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE ViVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) 	Reset to def Bass Treble Balance A.I. sound BBE VIVA	Siz aults 0 0 0 0 0
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE ViVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE ViVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off) 	Reset to def Bass Treble Balance A.I. sound BBE ViVA	Siz aults 0 0 0 0 0 0 0 0 0 0
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE ViVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE ViVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off) Enhances audio response when listening to stereo. (On/Off) Minimizes volume disparity after switching to external inputs. Switch to "Off" when using external speakers (On/Off) 	Reset to def Bass Treble Balance A.I. sound BBE ViVA BBE Surround Volume levele	Size aults 0 0 0 0 0 r 0
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE ViVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE ViVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off) Enhances audio response when listening to stereo. (On/Off) Minimizes volume disparity after switching to external inputs. Switch to "Off" when using external speakers (On/Off) "A.I. sound," "BBE ViVA", "BBE", "Surround" and "Volume leveler" do not work if "Off" is selected. 	Reset to def Bass Treble Balance A.I. sound BBE ViVA BBE Surround Volume levele TV speakers	Size Size
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE VIVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE VIVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off) Enhances audio response when listening to external inputs. Switch to "Off" when using external speakers (On/Off) Minimizes volume disparity after switching to external inputs. Switch to "Off" when using external speakers (On/Off) Minimizes volume disparity after switching to external inputs. Switch to "Off" when using external speakers (On/Off) "A.I. sound", "BBE ViVA", "BBE", "Surround" and "Volume leveler" do not work if "Off" is selected. The default setting is "Digital" for HDMI connection. (Digital input signal) Select audio input terminal when DVI cable is connected. (Analog audio input 	Reset to def Bass Treble Balance A.I. sound BBE ViVA BBE Surround Volume levele TV speakers	Size aults 0 0 0 0 0 0 Digital aults
Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE VIVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE VIVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off) Enhances audio response when listening to stereo. (On/Off) Minimizes volume disparity after switching to external inputs. Switch to "Off" when using external speakers (On/Off) "A.I. sound", "BBE ViVA", "BBE", "Surround" and "Volume leveler" do not work if "Off" is selected. The default setting is "Digital" for HDMI connection. (Digital input signal) Select audio input terminal when DVI cable is connected. (Analog audio input signal) (Digital Digital D	Reset to def Bass Treble Balance A.I. sound BBE ViVA BBE Surround Volume levele TV speakers	Size aults 0 0 0 0 0 0 Digital aults
 Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE ViVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE ViVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off) Enhances audio response when listening to stereo. (On/Off) Minimizes volume disparity after switching to external inputs. Switch to "Off" when using external speakers (On/Off) "A.I. sound", "BBE ViVA", "BBE", "Surround" and "Volume leveler" do not work if "Off" is selected. The default setting is "Digital" for HDMI connection. (Digital input signal) Select audio input terminal when DVI cable is connected. (Analog audio input signal) (Digital/Component 1/Component 2/Video 1/Video 2) 	Reset to def Bass Treble Balance A.I. sound BBE ViVA BBE Surround Volume levele TV speakers	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
■ Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE VIVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE VIVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off) Enhances audio response when listening to stereo. (On/Off) Minimizes volume disparity after switching to external inputs. Switch to "Off" when using external speakers (On/Off) ■ "A.I. sound", "BBE ViVA", "BBE", "Surround" and "Volume leveler" do not work if "Off" is selected. The default setting is "Digital" for HDMI connection. (Digital input signal) Select audio input terminal when DVI cable is connected. (Analog audio input signal) (Digital/Component 1/Component 2/Video 1/Video 2) The TV can automatically turn On/Off at the designated date and time (p. 60) Locks the channels and programs (p. 54) [Record now/Stop recording] Records programs on the recorder immediately with the TV's remote control (VIERA Link control) Selects equipment to access and operate. (Recorder/Home theater/Player/Camcorder/LUMIX/MES) Speaker output] Selects equipment to access and operate. (Recorder/Home theater/Player/Camcorder/LUMIX/MES)	Reset to def Bass Treble Balance A.I. sound BBE ViVA BBE Surround Volume levele TV speakers HDMI3 in HDMI4 in	Siz aults 0 0 0 0 0 0 Dig Dig
■ Size 2: Selected item for "HD size". Scanning 100% Adjust horizontal display range to reduce noise of both side edges of an image. (Size 1/Size 2) Size 2: Adjust image size according to aspect mode for reducing noise. (p. 67) Resets Bass, Treble and Balance adjustments to factory default settings. Increases or decreases the bass response. Increases or decreases the treble response. Emphasizes the left / right speaker volume. Equalizes overall volume levels across all channels and external inputs. (On/Off) BBE VIVA HD3D (High-Definition 3D) Sound provides musically accurate natural 3D image with Hi-Fi sound. The clarity of the sound is improved by BBE while the width, depth and height of sound image are expanded by BBE's proprietary 3D sound process. BBE VIVA HD3D Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. (On/Off) BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism. (On/Off) Enhances audio response when listening to stereo. (On/Off) Minimizes volume disparity after switching to external inputs. Switch to "Off" when using external speakers (On/Off) ■ "A.I. sound", "BBE ViVA", "BBE", "Surround" and "Volume leveler" do not work if "Off" is selected. The default setting is "Digital" for HDMI connection. (Digital input signal) Select audio input terminal when DVI cable is connected. (Analog audio input signal) (Digital/Component 1/Component 2/Video 1/Video 2) The TV can automatically turn On/Off at the designated date and time (p. 60) Locks the channels and programs (p. 54) [Record now/Stop recording] Records programs on the recorder immediately with the TV's remote control (VIERA Link control) Selects equipment to access and operate. (Recorder/Home theater/Player/Camcorder/LUMIX/MS) [Speaker output] Selects equipment to access and operate. (Recorder/Home theater/Player/Camcorder/LUMIX/MS)	Reset to def Bass Treble Balance A.I. sound BBE ViVA BBE Surround Volume levele TV speakers HDMI3 in HDMI4 in	Size aults 0 0 0 0 0 0 0 1 0 1 0 1 0 1 0 1 0 1 0

[•] In AV mode, the Audio menu and Setup menu give fewer options.

How to Use Menu Functions


Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you.






Displays the functions that can be set (varies depending on the input signal)

Select "Setup"

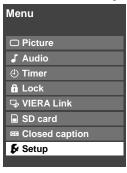

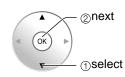


■ Press to exit from a menu screen **EXIT**








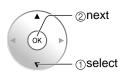






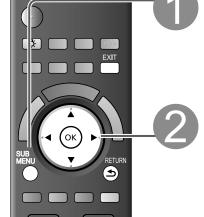


Display Sub Menu



Select the item

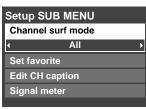

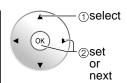

■ Menu list

Men	u iist	:					
Menu		Item					
	Channel surf mode						
	Language						
	Clock						
	ANT/Cable setup						
	Input labels						
	Ant ret	Pixel orbiter					
	\nti Imag retentior	Time (minutes)					
	nage tion	4:3 side bars					
	U)	Scrolling bar					
	Remo	ote control registration					
	۷II	VIERA Link					
	VIERA Link settings	Power on link					
		Power off link					
	าk set	Stand-by power save					
Setu	tings	Auto power stand-by					
0		Default speakers					
	Network setting						
	VIERA CAST setting						
	Network cameras list						
	ECO/ener	No signal for 10 minutes					
	ECO/energy saving	No activity for 3 hours					
	Advanced setup	Auto power on					
	ced	SD card LED					
	setup	Play SD card automatically					
	Abou						
		t to defaults					

■ Sub menu list

= 5ub	Sub illellu list							
Menu	Item							
SU	Channel surf mode							
Ser IB I	Set favorite							
Setup JB MEN	Edit CH caption							
5	Signal meter							

(Continued)

Adjustments/Configurations (alternatives)	
Sets the mode to select the channel with Channel up/down button (All/Favorite/Digital only/Analog only) Favorite: Only channels registered as FAVORITE (p. 26)	Channel surf mode
Selects the screen menu language (p. 22)	Language
Adjusts the clock (p. 24)	Clock
Sets channels (p. 56)	ANT/Cable setup
Selects the terminal and label of the external equipment (p. 59)	Input labels
Prevents "Image retention" with Wobbling. (Automatic/Periodic) Automatic: Shifts the display image automatically. Periodic: Shifts the display image every (1/2/3/4) minutes according to what was set in the "Time (minutes)" menu.	Pixel orbiter Auto
Sets the time for "Pixel orbiter-Periodic" setting. (1/2/3/4)	Time (minutes)
Change the brightness of the side bar (Off/Dark/Mid/Bright) (4:3 mode only) The recommended setting is "Bright" to prevent panel "Image retention". (p. 67)	4:3 side bars Br
Press "OK" to start "Scrolling" on the screen (p. 67)	Scrolling bar
Press "OK" to start the Remote control registration process. (p. 61)	Remote control regis
Controls equipment connected to HDMI terminals (p. 46) (On/Off) "Power off link", "Power on link", "Stand-by power save", "Auto power stand-by" and "Default speakers" cannot be selected if "Off" is set.	VIERA Link
Sets "Power on link" of HDMI connection equipment (p. 46) (Yes/No)	Power on link Y
Sets "Power off link" of HDMI connection equipment (p. 46) (Yes/No)	Power off link Y
Set "Stand-by power save" on HDMI connection equipment. (p. 46) (No/Yes)	Stand-by power sa
Set "Auto power stand-by" of HDMI connection equipment. (p. 46) (No/Yes (with reminder)/Yes (no reminder)	Auto power stand-l
Selects the default speakers (p. 46) (TV/Theater)	Default speakers 1
Sets Network setting (p. 50)	Network setting
Sets VIERA CAST setting (p. 52)	VIERA CAST settin
Set Network Camera status. (Search/Registration/Connection/Deleting/Default setting etc.) (p. 37)	Network cameras li
To conserve energy, the TV automatically turns off when NO SIGNAL and NO OPERATION is performed for more than 10 minutes. (Enable/Disable) Note Not in use when setting "Auto power on", "On/Off Timer", "Lock", "SD mode" or Digital channel. "No signal for 10 minutes was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No signal for 10 minutes". The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.	No signal for 10 min
To conserve energy, the TV automatically turns off when no operation of remote or side panel key continues for more than 3 hours. (Enable/Disable) Note Not in use when setting "Auto power on", "On/Off Timer" or PC input display. "No activity for 3 hours was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No activity for 3 hours". The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.	No activity for 3 ho Disable
Turns TV On automatically when the cable box or a connected device is turned On. (No/Yes) TV AC cord must be plugged into this device. TV comes on every time the power is restored. The "Sleep" timer, "On / Off timer", and "First time setup" will not function if "Auto power on" is set. (p. 60)	Auto power on N
Set to "On", if you want to light SD card LED while SD card is inserted. (On/Off)	SD card LED
Set "Movie", "Thumbnail" or "Slideshow" to play back SD cards automatically. (Slideshow/Thumbnail/Movie/Set later/Off)	Play SD card automa Set later
Displays TV version and software license.	About
Performing Reset will clear all items set with Setup, such as channel settings. (p. 56)	Reset to defaults

	Adjustments/Configurations (alternatives)
Sets the mode to	select the channel with Channel up/down button (All/Favorite/Digital only/Analog only)
Sets favorite cha	nnels. (p. 26)
Changes the stat	ion identifier. (p. 57)
Checks the signa	I strength if interference or freezing occurs on a digital image. (p. 57)

VIERA LinkTM "HDAVI ControlTM"*

Simultaneously control all Panasonic "HDAVI Control" equipped components using one button on the TV remote. Enjoy additional HDMI Inter-Operability with Panasonic products which have the "HDAVI Control" function. This TV supports "HDAVI Control 4" function.

Connections to the equipment (DVD recorder DIGA, HD Camcorder, Player theatre, RAM theater, Amplifier, etc.) with HDMI cables allow you to interface with them automatically.

Equipment with the "HDAVI Control" function enables the following operations:

Version	Operations
HDAVI Control or later	 Automatic Input Switching (p. 47) Power on link (p. 47) Power off link (p. 47) Default speakers (p. 47) One-touch theater playback (p. 47) Speaker control (p. 49)
HDAVI Control 2 or later	 VIERA Link control only with the TV's remote control(P. 49) Auto power stand-by (for available equipment only) (p. 47)
HDAVI Control 3 or later	 Providing the setting information (p. 47) Automatic lip-sync function (p. 47) Direct TV Recording (p. 49)
HDAVI Control 4	Stand-by power save (with quick start mode) (p. 47)

■ For the first time/When adding new equipment, reconnecting equipment or changing the setup after the connection, turn the equipment on and then switch the TV on. Set the input mode to HDMI1, HDMI2, HDMI3 or HDMI4 (p. 32), and make sure that the image is displayed correctly.

VIERA Link "HDAVI Control", based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers' equipment that supports HDMI CEC cannot be guaranteed. Please refer to the individual manuals for other manufacturers' equipment supporting the VIERA Link function.

■ HDMI cable

This function needs an HDMI compliant (fully wired) cable. Non-HDMI-compliant cables cannot be utilized. It is recommended that you use Panasonic's HDMI cable. Recommended part number: RP-CDHF15 (4.9 ft/1.5 m), RP-CDHG15 (4.9 ft/1.5 m), RP-CDHF30 (9.8 ft/3.0 m), RP-CDHG30 (9.8 ft/3.0 m), RP-CDHG50 (16.4 ft/5.0 m)

* For more details on the external equipment's connections, please refer to the operating manuals for the equipment.

VIERA Link™ Connections

Follow the connection diagrams below for HDAVI control of a single piece of AV equipment such as a DVD recorder (DIGA), RAM theater, or Player theater system. Refer to page 46-49 for Setup Menu settings and additional control information.

Optional HDMI and/or optical cables are not included.

If connection (or setting) of equipment compatible with HDAVI control is changed, switch the power of this unit Off and On again while the power of all equipment is On (so that the unit can correctly recognize the connected equipment) and check that the DVD recorder (DIGA), RAM theater, and Player theater playback operate.

Note

HDMI 1 is recommended.
 When connecting to HDMI 2/HDMI 3/HDMI 4, set the input mode to HDMI 2/HDMI 3/HDMI 4 (p. 32) initially before connecting to HDMI 2/HDMI 3/HDMI 4. After connection, confirm the HDMI control functions (p. 46-49).


■ Connecting this unit to the DVD recorder (DIGA), RAM theater, or Player theater

- For DVD recorder (DIGA): Connect with HDMI cable
- For RAM theater and Player theater:
 Connect with the HDMI and audio cables.
 If audio cable is not connected, you cannot listen to the TV program through the theater system.

■ Connecting this unit to a DVD recorder (DIGA) and AV amp

When using a "VIERA Link" audiovideo amplifier and a compatible DVD recorder (DIGA) use a daisy chain connection as shown below.



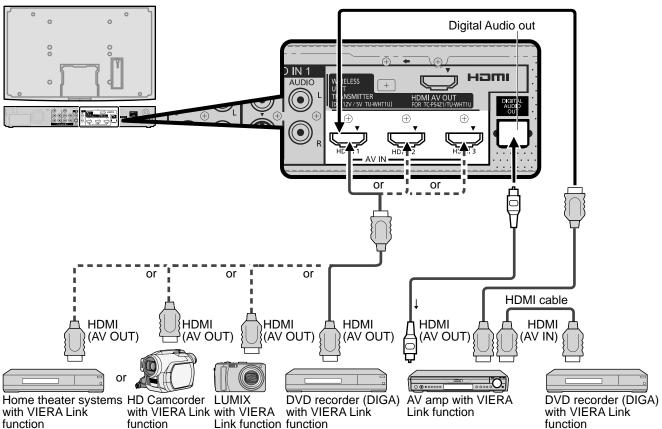

- One AV amp and one DVD recorder (DIGA) can be operated with this unit.
- Be sure to connect the AV amp between this unit and the DVD recorder (DIGA).

■ Setting of this unit after connection

After making connections as shown above, set "VIERA Link" (under "VIERA Link settings") to "On" using the Setup menu. (p. 33, 46-47).

Note

- Individual HDMI equipment may require additional menu settings specific to each model. Please refer to their respective operating instruction manuals.
- When audio from other equipment connected to this unit via HDMI is output using "DIGITAL AUDIO OUT" of this unit, the system switches to 2CH audio.
 (When connecting to an AV amp via HDMI, you can enjoy higher sound quality.)
- For details about HDMI cable for connecting Panasonic HD camcorder, read the manual for the equipment.

VIERA LinkTM "HDAVI ControlTM"*




Display menu





Select "Setup"



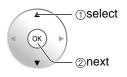


Select "VIERA Link settings"

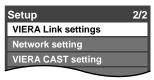

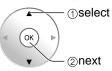


Select "VIERA Link"

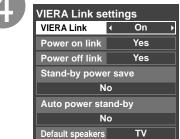




Select "On" (default is On)

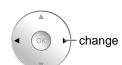

■ Press to exit from a menu screen

6

Select settings

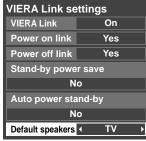



■ Press to return to the previous screen

RETURN







Automatic Input Switching

Power on link

Power off link

Stand-by power save (for "HDAVI Control 4" (with Quick Start Mode))

Auto power save (for "HDAVI Control 2 or later")

Default speakers

One-touch theater playback

Providing the setting information (for "HDAVI Control 3 or later")

Automatic lipsync function (for "HDAVI Control 3 or later")

(Continued)

At the start of the DIGA, Player theater, or RAM theater playback, the TV's input automatically switches to the input based on the playback equipment.

For the RAM theater, the speakers automatically switch to the theater system.
 If using the DIGA operation, the TV's input automatically switches to the DIGA and DIGA menu is displayed.

When "Yes" is selected (p. 43), TV is turned on automatically and switches to the appropriate HDMI input whenever VIERA Link compatible equipment is initially turned on and Play mode is selected.

When "Yes" is selected (p. 43) and the TV is turned off, all connected VIERA Link compatible equipment is also automatically turned off.

DIGA (Panasonic DVD Recorder) will not turn off if it is still in rec mode.

Caution: The TV remains on even if the VIERA Link compatible equipment is turned off.

Condition

Power off link: Yes

Stand-by power save: Yes

The equipment has "HDAVI Control 4 (with Quick Start Mode)" connected with HDMI cable.

When TV is turned off, all connected VIERA Link compatible equipment is moved to ECO standby mode* automatically under above conditions.

- * Minimum power consumption of standby condition for the equipment.
- Condition

Auto power stand-by: Yes

The equipment has "HDAVI Control 2 or later" (for available equipment only) connected with HDMI cable.

[Examples of timing for operation]

- When the input is switched from HDMI.
- When the "Speaker output" is changed from "Home theater" to "TV".

The connected VIERA Link compatible equipment will be turned off automatically when not in use.

"TV" is the default setting. To set the Home Theater system as default speakers, change the default speakers setting from "TV" to "Theater". Sound will be output from the Home Theater whenever the TV is powered on.

If the "ONE TOUCH PLAY" key is pressed on the remote control for Panasonic Home Theater system, the following sequence of operations is performed automatically.

- 1 Home Theater power switches On, and playback begins.
- 2 TV power switches On, and the playback screen is displayed.
- 3 Audio is muted on the TV and switches to the theater system.

The following information about the TV settings can be transmitted to each piece of equipment (Recorder/Home theater/Player) that has "HDAVI Control 3 or later" function connected to a TV with HDMI cable.

Transmittable data	Recorder	Home theater	Player
① On Screen Display Language setting (English/Español/Français)	0	0	0
② Panel Aspect Ratio (16:9 fixed)	0	0	0
③ Closed caption information (Mode/CC type/Digital setting)	0		
Channel information (Input signal/Channel list/Caption information)	0		

Note

- There is a possibility that all the GUI language information might be set from equipment that has HDMI CEC function connected to TV with HDMI cable. Depending on operating conditions or the specification for each piece of equipment the setting may or may not be applied.
- For more details on the external equipment's operation, please refer to the operating manuals for the equipment.

[For Recorder]

• You cannot operate other functions while transmitting TV's information above except Power On/Off key operation.


When you turn off this unit, the transmission will be interrupted (only when you are transmitting ④ Channel information).

Minimizes lip-sync delays between the picture and audio when you connect to a Panasonic theater system or Amplifier.

VIERA LinkTM "HDAVI ControlTM"

You can enjoy more convenient operation with the "HDAVI Control" function in the "VIERA Link" menu.

For more details on the "HDAVI Control" function, refer to p. 44

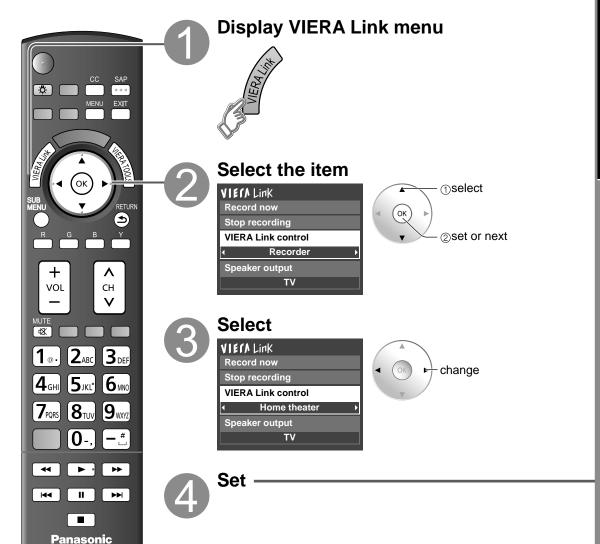

VIERA Link control only with the TV's remote control


Speaker control

(for "HDAVI Control 2 or later")

Direct TV Recording (for "HDAVI Control 3 or later")

■ Press to exit from a menu screen

ΤV

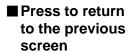

RETURN




(Continued)

You can select Home theater or TV speakers for audio output. Control theater speakers with the TV's remote control.

This function is available only when Panasonic Amplifier or Player theater is connected.

- 1 Select "Speaker output"
- 2 Select "Home theater" or "TV"

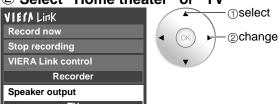

■ Home theater: Adjustment for equipment

Volume up / down


Mute ⇒

- The sound of the TV is muted.
- When the equipment is turned off, the TV speakers take over.
- Selecting "Home theater" turns the equipment on automatically if it is in standby mode.
- **TV:** The TV speakers are on.

In the VIERA Link menu, you can select HDMI connected equipment and access it quickly. Continue using your TV's remote control to operate the equipment, pointing it at the TV.

- 1 Select "VIERA Link control"
- 2 Select the equipment you want to access. (Recorder/Home theater/Player/Camcorder/LUMIX/ Network Camera)
 - Using VIERA TOOLS (p. 27)



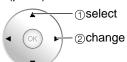

You can select available items only.

- If there is more than one equipment item, a number after the name indicates the number of items. (e.g. Recorder 1/Recorder 2/Recorder 3...)
- The number of equipment items that can be connected is three for recorders, and a total of three for Home theater/Player/Camcorder/LUMIX.

Note `

- There is a limit to the number of HDMI connectors.
- (3) Operate the equipment with the TV's remote control, pointing it at the TV.
- To operate the equipment, read the manual of the equipment.

Available TV's remote control buttons


Whether an operation is available differs depending on the connected equipment.

(i)	Move the cursor/Select	•	Play
ОК	Set/Access		Stop
RETURN	Return to previous menu	*	Reverse/Forward
SUB MENU	Display the functions menu on the equipment	[44] [Skip Reverse/Forward
R G B Y	Available when the purpose of the keys is displayed on screen	II	Pause
EXIT	Exit	CC	Closed caption
, CH	Channel Up/Down	SAP	SAP (Select Audio Mode)
0 9	0-9	- #	Select digital subchannel

Records the current program on the recorder immediately.


① Select "Record now"



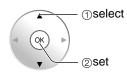

Select "Stop recording", when you want to stop recording



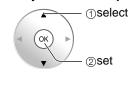

- be required. For details, read the manual of the recorder.
- For optimal recording, the settings of the recorder might
 Recording will not stop automatically when the program is finished.

Network Setting


This is a setting for connecting to a broadband environment.






Select "Setup"



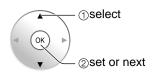

Select "Network setting"

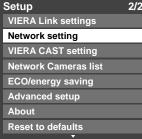



■ Press to exit from a menu screen



 (\mathbf{z})

■ Press to return to the previous screen

RETURN



Select the item and adjust







Connection test

IP setting

- IP setting mode
- IP address
- Subnet mask
- Default gateway

DNS setting

- DNS setting mode
- Primary DNS
- Secondary DNS


Connection speed setting

- LAN speed setting
- LAN speed

Software update

Check that the network settings are as shown below, and then start "Connection test".

Select "Connection test" and press OK.
 *Press OK again to cancel the test.
 (It takes a while to cancel the test.)

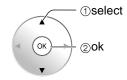

Succeeded: "Connection test" succeeded Only home network:


Home network is available.


Failed: Check the broadband environment connection and settings and the network settings, and then perform the test again.

Test in progress

---: Test not yet performed

1 Select "IP setting mode" and set to "Automatic". (When IP automatic acquisition in DHCP can be used)

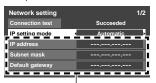


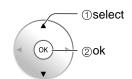

The acquired address is displayed.

■ Manual setting

- 1 Select "IP setting mode" and set to "Manual"
- (2) Select the item and press OK
- ③ Check the specifications of the broadband router and enter each IP address.

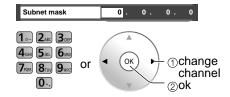


② Each IP address is acquired automatically.

Select "DNS setting mode" and set to "Automatic".

(When DNS automatic acquisition in DHCP can be used)



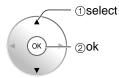


The acquired address is displayed.

② Each IP address is acquired automatically. If you are using a broadband router, IP automatic acquisition in DHCP can be used under normal circumstances. If you are not sure, check with the person who installed the equipment, or check the instructions for each device.


■ Manual setting

- (1) Select "DNS setting mode" and set to "Manual"
- (2) Select the item and press OK
- Enter each IP address as was specified by the provider.

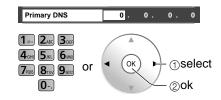

1 Select "LAN speed setting" (Default is "Automatic")




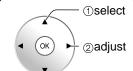

- Normally, select "Automatic".
- If "Connection test" failed, set the "LAN speed setting" to "manual" and then select "10BASE half duplex", "10BASE duplex", "100BASE half duplex" or "100 BASE duplex".
- Cannot be selected when the "LAN speed setting" is "Automatic".
- Changing the settings may make it impossible to connect some types of equipment.

1) Select "Software update"



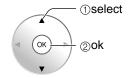

- ② Press OK to start the software update screen.
- (3) Follow directions of the screen.
- * Set "Clock" first. (p. 24)

[•] The network settings become effective when you close the menu and run "Connection test".

VIERA CAST™ Setting



Display menu




Select "Setup"





Select "VIERA CAST setting"

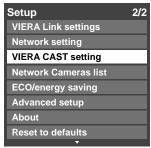



■ Press to exit from a menu screen



■ Press to return to the previous screen

RETURN

3







Connection test


Proxy setting

- Proxy address
- Proxy port

Entering characters

(1) Select "Connection test" and Press OK



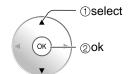

- When a connection is made to the connection test site and a message is displayed that indicates a successful connection
 - The settings are correct.
- When the connection is not successful

address and the proxy port number.

- → An error message is displayed on the screen.
- * Check the connection and settings. (p. 50-51, below)

 If you perform the proxy settings, check the proxy

Set only if specified by the provider. It is not required for normal household use.


■ Proxy address

This is the address of the relay server that is connected to the target server instead of the browser and sends data to the browser.

Setting is only required if specified by the provider.

1 Select "Proxy address" and Press OK



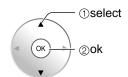

② Enter address (see "Entering characters" below)




③ Select "OK"

■ Proxy port


This number is specified by the provider together with the proxy address.

- (1) Select "Proxy port" and Press OK.
- 2 Enter the Port number.

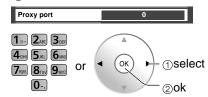

If you perform the proxy settings, it may make it impossible to view VIERA CAST movie content.

You can use the remote control key to enter the alphanumeric characters.

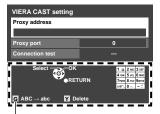

Navigation area



Switches Input mode alphabet to numeric.


Characters are displayed as shown in following table.

	ABC/abc									123			
	1	2	3	4	5	6	7	8	9	10	11	12	
1	@		/	•••	~		1						1
2	a/A	b/B	c/C	2									2
3	d/D	e/E	f/F	3									3
4	g/G	h/H	i/I	4									4
5	j/J	k/K	I/L	5									5
6	m/M	n/N	o/O	6									6
7	p/P	q/Q	r/R	s/S	7								7
8	t/T	u/U	v/V	8									8
9	w/W	x/X	y/Y	z/Z	9								9
0	-	,	;	'	"	?	!	()	&	\	0	0
LAST	*	#	\$	%	=		{	}	[]			*
-						Spa	ace						#

VIERA CAST setting will be effective when you close the menu or run "Connection test".

Lock

You can lock specified channels or shows to prevent children from watching objectionable content.

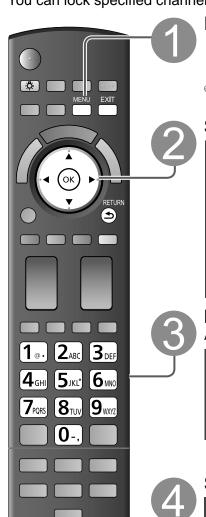


Display menu



Select "Lock"



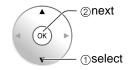

You will be asked to enter your password each time you display the Lock menu.

Input your 4-digit password

A 4-digit code must be entered to view a blocked program or change rating settings.







• If it is your first time entering the password, enter the password twice in order to register it.



Select the Lock mode

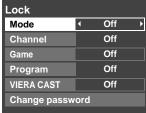

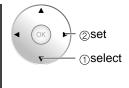

Off: Unlocks all the lock settings of "Channel", "Game", "Program" and "VIERA CAST".

All: Locks all the inputs regardless of the lock settings of "Channel", "Game", "Program" and "VIERA CAST".

Custom: Locks specified inputs of "Channel", "Game", "Program" and "VIERA CAST".

■ Press to exit from a menu screen

Panasonic

T۷



Caution

Make a note of your password in case you forget it. (If you have forgotten your password, consult your local dealer.)



Select the item

Custom
Off
Off
Off
Off
ord



"Channel", "Game", "Program" and "VIERA CAST" are not accessible unless "Custom" is selected in "Mode".

Note)


When you select a locked channel, a message will be displayed that allows you to view the channel if you input your password.



Set



■ To select the channel or the rating of the program to be locked

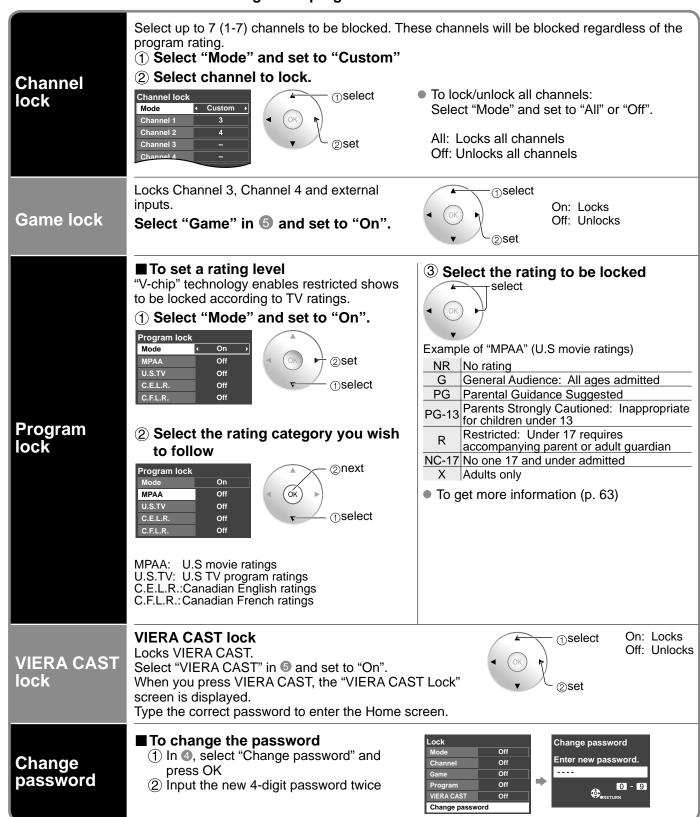


Note

- This television is designed to support the "Downloadable U.S. Region Rating System" when available. (Available only in U.S.A.)
- The Off rating is independent of other ratings.
- When placing a lock on a specific-age-based-rating level, the Off rating and any other more restrictive ratings will also be blocked.

Editing and Setting Channels

The current channel settings can be changed according to your needs and reception conditions.

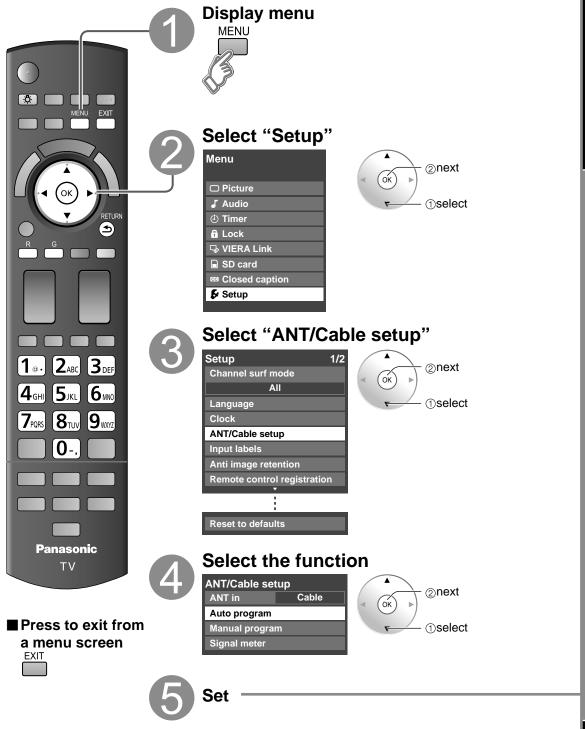

Auto program Set automatically

> Manual program

Set manually

■To reset the settings of setup menu


- ① Select "Reset to defaults" in Setup menu (3) and press OK
- 2 Input your 4-digit password with number buttons
- ③ Select "YES" on the confirmation screen and press OK

Signal meter Check signal strength Automatically searches and adds available channels to the memory.

- 1 Select "ANT in"
 - ⇒ Select Cable or Antenna Or select "Not used" (p. 22).
- ② Select "Auto program"



(3) Select a scanning mode (p. 23)

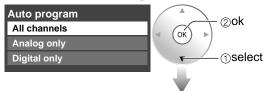

Settings are made automatically

- After the scanning is completed, select "Apply". (see below (5)).
- All previously saved channels are erased.

Use this procedure when changing the channel setup or changing the channel display.


Also, use this to add or skip channels from the channel list manually.

You can select a channel tuning mode (Digital only/ Analog only) in "Channel surf mode" (p. 42)


1 Select "Edit"



② Select the item to be edited

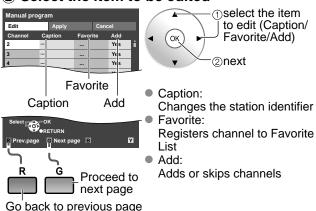



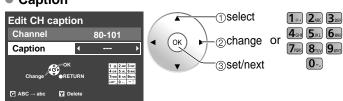

Caption

Select the station identifier (maximum 7 characters available)

Favorite



Set favorite Select the number


Press OK to select "Yes (add)" or "No (skip)"

RETURN

 (\mathbf{S})

4 Move cursor to channel number



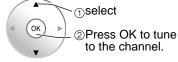










To cancel the Edit

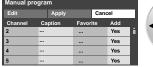

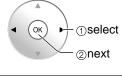




Note)

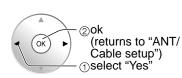


Check the signal strength if an interference is found or freezing occurs on a digital image.

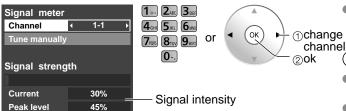


- If the signal is weak, check the antenna. If no problem is found, consult your local dealer.
- Not available if "Cable" is selected in "ANT in" (see above).
- Available only for digital antenna channels.

If "Lock" (p. 54) is activated and "ANT/Cable setup" is selected, "Enter password." will be displayed.

Closed Caption

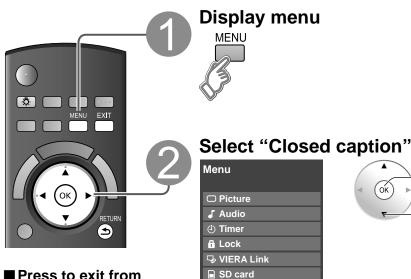

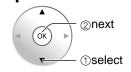

■ Press to exit from a menu screen

Closed caption

Display

Closed

caption



The television includes a built-in decoder that is capable of providing a text display of the audio. The program being viewed must be transmitting Closed caption (CC) information. (p. 64)

■ Select the item and set

[®] Closed caption

Setup



The settings in "Analog" or "Digital" depend on the broadcaster.

Select "On" (when not using, select Mode "Off").

(Choose the Closed caption service Analog of Analog broadcasting.)

CC1-4: Information related to pictures (Appears at bottom of screen)

T1-4: Textual information

(Appears over entire screen)

(The Digital Closed caption Digital

menu lets you configure the way you choose to view the digital captioning.)


Select the setting.

• "Primary", "Second.", "Service 3", "Service 4", "Service 5", "Service 6"

■ To make more in-depth display settings in digital programs

- ① Select "Digital setting" and press OK
- 2 Select the item and set



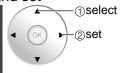



- Size: Text size
- Font: Text font
- Style: Text style (Raised, Depressed, etc.)
- Foreground: Color of text
- Fore. opacity: Opacity of text Background: Color of text box
- Back. opacity: Opacity of text box
- Outline: Outline color of text (Identify the setting options on the screen.)

■ To reset the settings

Select "Reset to defaults" and press OK

Input Labels

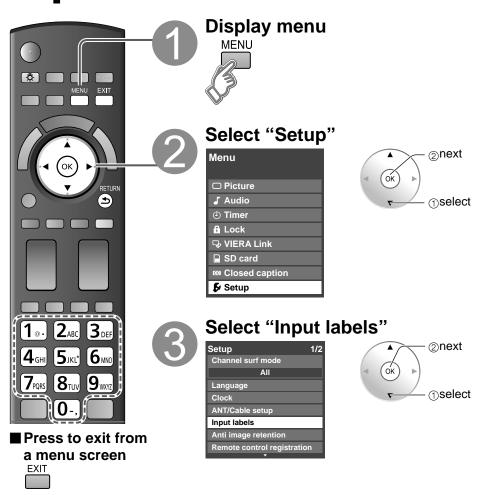


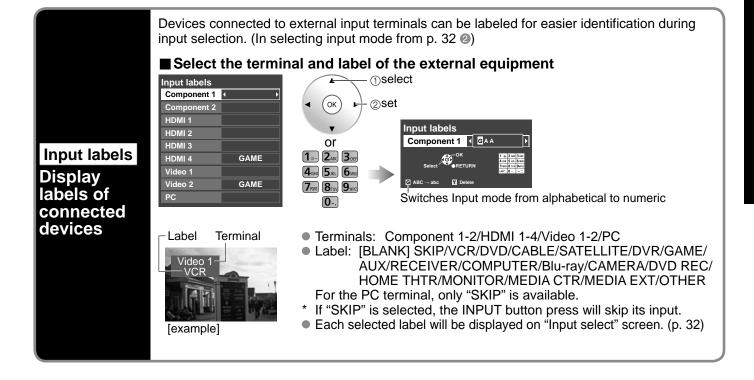

Using Timer

The TV can automatically turn On/Off at the designated date and time.

- The Clock must be set before On time/Off time settings. (p. 24)
- The "Sleep" timer and "On / Off timer" will not work if the "Auto power on" (p. 42) is set.

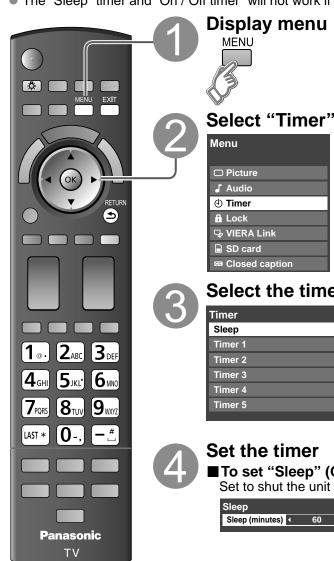

■ Press to exit from a menu screen EXIT



■ Press to return to the previous screen


RETURN



Note

The TV automatically turns Off after 90 minutes when turned On by the Timer. This operation will be cancelled if the Off time is selected or if a key is pressed.



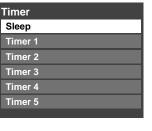



Sleep Turns Off automatically Turns On/Off automatically Timer 1 (5 timers can be set.) Timer 5

2next

1) select

(ok)

Set the timer

■To set "Sleep" (Off Timer)

Set to shut the unit off after a pre-selected amount of time.







0/30/60/90 (minutes)

■ To set "Timer 1-5" (On/Off Timer)

Select the item and set

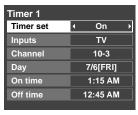



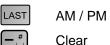

Timer set | Timer setting (On/Off) Inputs Select the inputs

Channel Select the channel

Select the day Day

SUN/MON/TUE/WED/THU/FRI/SAT (displays the nearest future date) MON-FRI/SAT-SUN/DAILY/Every SUN/Every MON/

The time to turn On On time


Off time

The time to turn Off

Every TUE/Every WED/Every THU/Every FRI/ Every SAT


Remote control registration

Remote control registration can be set on the "Setup" screen.

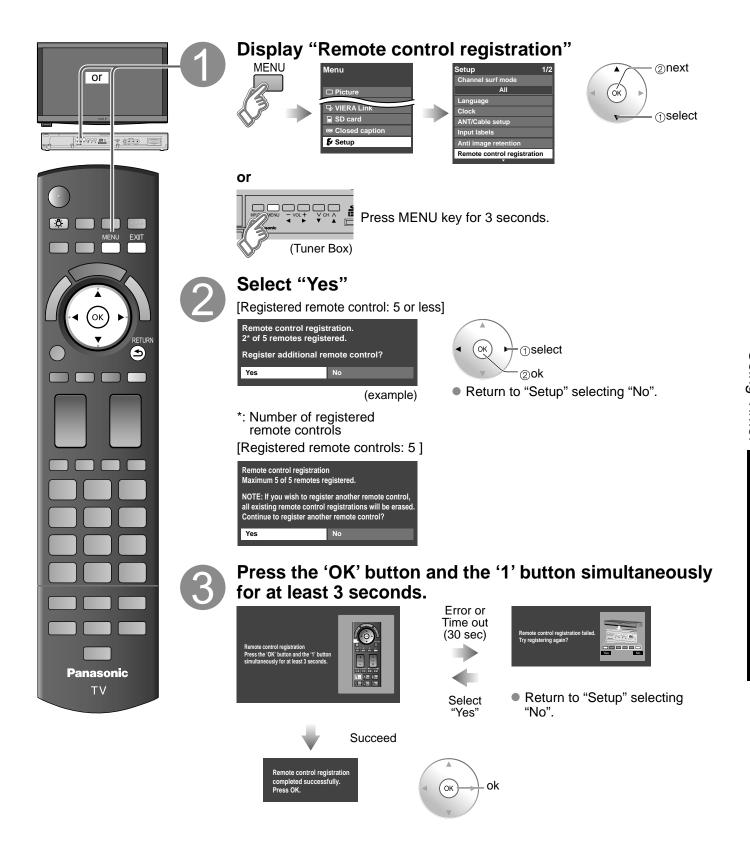

Recommended AV Connections

These diagrams show our recommendations or how to connect the TV unit to your various equipment. For other connections, consult the instructions for each piece of equipment and its specifications. For additional assistance, please visit our website at: www.panasonic.com

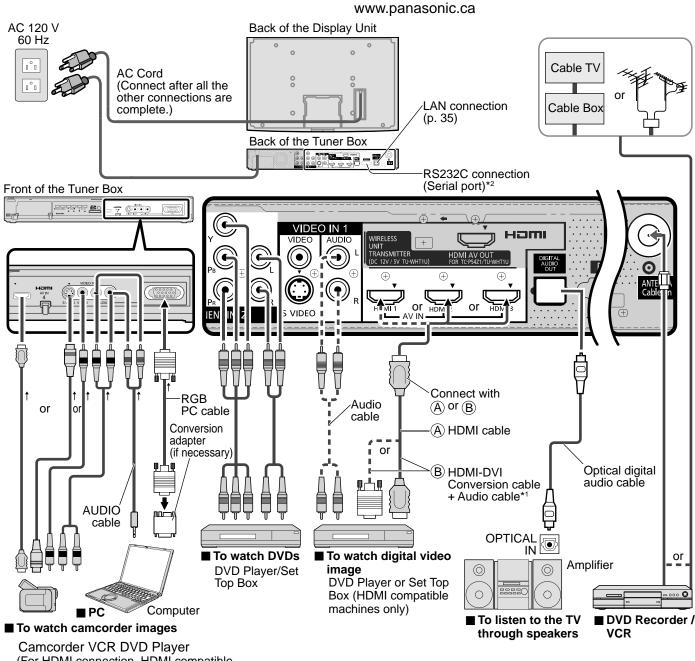

Camcorder VCR DVD Player (For HDMI connection, HDMI compatible equipment only.
For connection using HDMI-DVI Conversion cable, see HDMI 1, HDMI 2 or HDMI 3 connection on this page.)

Note

- *1 Please see p. 40-41 for setup when using an external analog audio cable with an HDMI to DVI cable.
- *2 For details about the RS232C command, contact Customer Care. (p.73, 74) Note that we only provide information in accordance with our disclosure rules.
 - See "RS232C terminal Specification" sheet. (attached separately)

Ratings List for Lock

"V-chip" technology enables you to lock channels or shows according to standard ratings set by the entertainment industry. (p. 55)

■ U.S. MOVIE RATINGS (MPAA)

NR	NO RATING (NOT RATED) AND NA (NOT APPLICABLE) PROGRAMS. Movie which has not been rated or
	where rating does not apply.
G	GENERAL AUDIENCES. All ages admitted.
PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
PG-13	PARENTS STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
NC-17	NO ONE 17 AND UNDER ADMITTED.
Χ	ADULTS ONLY.

■ U.S. TV PROGRAMS RATINGS (U. S. TV)

Age-based Group	Age-based Ratings	Possible Content Selections	Description
NR (Not Rated)	TV-NR	ViewableBlocked	Not Rated.
	TV-Y	ViewableBlocked	All children. The themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6.
Youth	TV-Y7	FV BlockedViewableBlocked	Directed to older children. Themes and elements in this program may include mild physical or comedic violence, or may frighten children under the age of 7.
	TV-G	ViewableBlocked	General audience. It contains little or no violence, no strong language, and little or no sexual dialogue or situations.
	TV-PG	D,L,S,V (all selected)Any combination of D, L, S, V	Parental guidance suggested. The program may contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
Guidance	TV-14	D,L,S,V (all selected)Any combination of D, L, S, V	Parents strongly cautioned. This program may contain sophisticated themes, sexual content, strong language and more intense violence.
	TV-MA	L,S,V (all selected)Any combination of L, S, V	Mature audiences only. This program may contain mature themes, profane language, graphic violence, and explicit sexual content.

FV: Fantasy/Cartoon Violence. V: Violence S: Sex L: Offensive Language D: Dialogue with sexual content.

■ CANADIAN ENGLISH RATINGS (C. E. L. R.)

Е	Exempt - Exempt programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.
С	Programming intended for children under age 8. No offensive language, nudity or sexual content.
C8+	Programming generally considered acceptable for children 8 years and over. No profanity, nudity or sexual content.
G	General programming, suitable for all audiences.
PG	Parental Guidance suggested. Some material may not be suitable for children.
14+	Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.
18+	18+ years old. Programming restricted to adults. Contains constant violence or scenes of extreme violence.

■ CANADIAN FRENCH RATINGS (C. F. L. R.)

	E	Exempt - Exempt programming.
	O	General - Programming intended for audience of all ages. Contains no violence, or the violence content is minimal or is depicted appropriately.
8 ans+ 8 + General - Not recommended for young children. Programming intended for a broad audience but light or occasional violence. Adult supervision recommended.		8+ General - Not recommended for young children. Programming intended for a broad audience but contains light or occasional violence. Adult supervision recommended.
	13 ans+	Programming may not be suitable for children under the age of 13 - Contains either a few violent scenes or one or more sufficiently violent scenes to affect them. Adult supervision strongly suggested.
	16 ans+	Programming may not be suitable for children under the age of 16 - Contains frequent scenes of violence or intense violence.
18 ans+ Programming restricted to adults. Contains		Programming restricted to adults. Contains constant violence or scenes of extreme violence.

Caution

- The V-Chip system that is used in this set is capable of blocking "NR" programs (non rated, not applicable and none) as per FCC Rules Section15.120(e)(2). If the option of blocking "NR" programs is chosen "unexpected and possibly confusing results may occur, and you may not receive emergency bulletins or any of the following types of programming:"
 - Emergency Bulletins (Such as EAS messages, weather warnings and others)
 - Locally originated programming News Political Public Service Announcements Religious Sports Weather


Technical Information

Closed caption (CC)


- For viewing the CC of digital broadcasting, set the aspect to FULL (If viewing with H-FILL, JUST, ZOOM or 4:3; characters might be cut off).
- The CC can be displayed on the TV if the receiver (such as a set-top box or satellite receiver) has the CC set On using the Component or HDMI connection to the TV.
- If the CC is set to On on both the receiver and TV when the signal is 480i (except for the HDMI connection), the CC may overlap on the TV.
- If a digital program is being output in analog format, the CC data will also be output in analog format.
- If the recorder or output monitor is connected to the TV, the CC needs to be set up on the recorder or output monitor.

Aspect Ratio (FORMAT)

Press the FORMAT button to cycle through the aspect modes. This lets you choose the aspect depending on the format of the received signal and your preference. (p. 26) (e.g.: in case of 4:3 image)

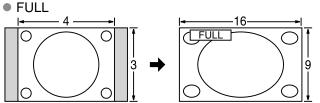


Enlarges the 4:3 image horizontally to the screen's side edges. (Recommended for anamorphic picture)

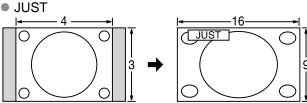


Stretches to justify the 4:3 image to the four corners of the screen.


(Recommended for normal TV broadcast)

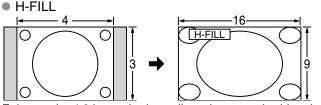

Enlarges the 4:3 image horizontally to the screen's side edges. The side edges of the image are cut off.

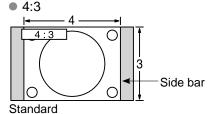

(Note that "Image retention" of the side bar may occur from displaying it for a long time.)

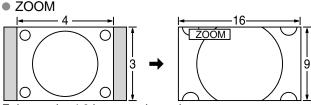

Enlarges the 4:3 image to the entire screen. (Recommended for Letter Box)

- Note
- 480i (4:3), 480i (16:9), 480p (4:3), 480p (16:9):
 FULL, JUST, 4:3 or ZOOM
- 1080p / 1080i / 720p:
 FULL, H-FILL, JUST, 4:3 or ZOOM

Zoom adjustments

Vertical image position and size can be adjusted in "ZOOM".

- ① Select "Zoom adjustments" on the "Picture" menu. (p. 40-41)
- 2 V-position: Vertical position adjustment
- ③ V-size: Vertical size adjustment













To reset the aspect ratio ⇒



Data format for SD Card browsing

Photo: Still images recorded with digital still cameras compatible with JPEG files of DCF* and EXIF** standards

Movie: SD-Video Standard Ver. 1.2 [MPEG-2 (PS format)] and AVCHD Standard compatible files with an audio format that is

either MPEG-1/Layer-2 format or Dolby Digital format (A modified data with a PC may not be displayed correctly.)


* DCF (Design rule for camerá file system): Á Japan Electrónics and Information Technology Industries Association's standard * EXIF (Exchangeable Image File Format)

Note

- Format the card with the recording equipment.
- The picture may not appear correctly on this TV depending on the recording equipment used.
- Display may take some time when there are many files and folders.
- This function cannot display Motion JPEG and still image not DCF formatted (i.e. TIFF, BMP).
- Data modified with a PC may not be displayed.
- Images imported from a PC must be compatible with EXIF 2.0, 2.1 and 2.2.
- Partly degraded files might be displayed at a reduced resolution.
- All ".JPG" extension datas in the card will be read in Photo View Mode.
- The folder and file names may be different depending on the digital camera used.
- Do not use two-byte characters or other special codes.
- The card may become unusable with this TV if file or folder names are changed.
- For the suitable SD Memory Cards, please confirm the latest information on the following website. http://panasonic.jp/support/global/cs (This site is in English only)

Cautions in handling SD Card:

- Do not remove the card while the unit is accessing data (this can damage card or unit).
- Do not touch the terminals on the back of the card.
- Do not subject the card to high pressure or impact.
- Insert the card in the correct direction (otherwise, card may be damaged).
- Electrical interference, static electricity or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the unit. (Panasonic is not liable for any deterioration or damage of recorded data.)

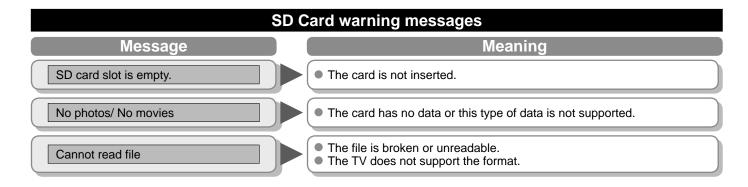

DIGITAL AUDIO OUT terminals

You can enjoy your home theater by connecting a Dolby Digital (5.1 channel) decoder and "Multi Channel" amplifier to the DIGITAL AÚDÍO OUT terminals.

Caution

- Depending on your DVD player and DVD-Audio software the copyright protection function may operate and disable optical output.
- When an ATSC channel is selected, the output from the DIGITAL AUDIO OUT jack will be Dolby Digital. When an NTSC channel is selected, the output will be PCM.
- When playing movie on SD Card Movie player, when the sound has been recorded in Dolby Digital, the output from the DIGITAL AUDIO OUT terminal will be Dolby Digital. When the sound is recorded in the other formats, the output will be PCM. See pages 54-55 for more information

Technical Information (Continued)

VIERA Link™ "HDAVI Control™"

HDMI connections to some Panasonic equipment allow you to interface automatically. (p. 44)

- This function may not work normally depending on the equipment condition.
- The equipment can be operated by other remote controls with this function on even if TV is in Standby mode.
- Image or sound may not be available for the first few seconds when the playback starts.
- Image or sound may not be available for the first few seconds when Input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment.
- If you connect the same kind of equipment at once (for example: one DIGA to HDMI 1 / another DIGA to HDMI 2), VIERA Link™ is available for the terminal with the smaller number.
- If you connect equipment that has "HDAVI Control 2" (or more) function to the TV with HDMI cable, the sound from DIGITAL AUDIO OUT terminal can be output as multi channel surround.
- "HDAVI Control 4" is the newest standard (current as of December, 2008) for the HDAVI Control compatible equipment. This standard is compatible with the conventional HDAVI equipment.

HDMI connection

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV unit and the devices.

HDMI-compatible equipment (*1) with an HDMI or DVI output terminal, such as a set-top box or a DVD player, can be connected to the HDMI connector using an HDMI compliant (fully wired) cable.

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
- If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adapter cable (*2).
- When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal.
- Audio settings can be made on the "HDMI 1 in", "HDMI 2 in", "HDMI 3 in" or "HDMI 4 in" menu screen. (p. 40) Applicable audio signal sampling frequencies (L.PCM): 48 kHz, 44.1 kHz, 32 kHz

(*1): The HDMI logo is displayed on an HDMI-compliant device. (*2): Enquire at your local digital equipment retailer shop.

(Caution)

- Use with a PC is not assumed.
- All signals are reformatted before being displayed on the screen.
- If the connected device has an aspect adjustment function, set the aspect ratio to "16:9".
- These HDMI connectors are "type A".
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- A device having no digital output terminal may be connected to the input terminal of either "COMPONENT", "S VIDEO", or "VIDEO" to receive analog signals.
- The HDMI input terminal can be used with only the following image signals: 480i, 480p, 720p, 1080i and 1080p. Match the output setting of the digital device.
- For details of the applicable HDMI signals, see p. 67.

Picture mode

Vivid: Provides enhanced picture contrast and sharpness for viewing in a well-lit room. Standard: Recommended for normal viewing conditions with subdued room lighting. Studio ref: Provides high-quality gradation and color tone picture for a cinema-like feel.

THX: Faithfully reproduces the image quality that the movie makers intended in order to provide the ultimate

cinematic experience at home.

Game: For playing video game. This mode will be set automatically if "GAME" is selected from Input label setting (p. 59)

Custom (Photo): Customizes each item according to your taste.

Photo is displayed in JPEG menu.

Note

- Picture mode will be automatically set to "Standard" if you change the Input label from "GAME" to other labels.
- Picture mode will be automatically set to "Game" if you change from an Input label other than "GAME" to "GAME" label.

Pro setting

Resets all Pro setting adjustments to factory default settings. (Set/No) Reset to defaults:

W/B high R: Adjusts the white balance for light red areas. W/B high B: Adjusts the white balance for light blue areas. W/B low R: Adjusts the white balance for dark red areas. W/B low B: Adjusts the white balance for dark blue areas. Black extension: Adjusts the dark shades of the image in gradation.

Gamma adjustment: Gamma correction. Adjusts the intermediate brightness of the image. (Normal/Mid/Full 1/Full 2)

Panel brightness:

Selects the display panel brightness. (High: Vivid, Mid: Standard, Low: Studio ref)


AGC: Increases the brightness of dark signal automatically. (On/Off)

Contour emphasis: Adjusts the contour emphasis of the image. (On/Off)

Save as default: Save all "picture" (when "Picture mode" is "Custom") and "Pro setting" adjustments.


H size

Aspect Ratio: 4:3

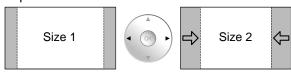

 The width will be decreased on both sides to reduce noise.

Aspect Ratio: FULL/JUST(H-FILL/ZOOM)

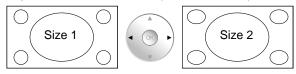

 The width will be increased on both sides to reduce noise.

See pages 40-41 for more information


4:3 side bars

Do not display a picture in 4:3 mode for an extended period, as this can cause "Image retention" to remain on either or both sides of the display field.

To reduce the risk of such "Image retention", change the brightness of the side bars.

See pages 42-43 for more information


 The side bar may flash (alternate black/white) depending on the picture. Using Cinema mode will reduce such flashing (See below).

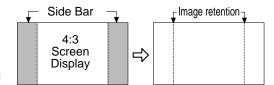

Scrolling bar

Scrolling bar: To prevent "Image retention", scrolls white vertical bar from top to bottom on a black screen.

- Press any key except the POWER key to return to previous screen.
- You will return to the previous screen if no key operation has been performed for 15 minutes.
 See pages 42-43 for more information

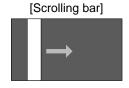

Input signal that can be displayed

* Mark: Applicable input signal for Component (Y, PB, PR), HDMI and PC

	horizontal frequency (kHz)	vertical frequency (Hz)	COMPONENT	HDMI	PC
525 (480) / 60i	15.73	59.94	*	*	
525 (480) /60p	31.47	59.94	*	*	
750 (720) /60p	45.00	59.94	*	*	
1,125 (1,080) /60i	33.75	59.94	*	*	
1,125 (1,080) /60p	67.43	59.94		*	
1,125 (1,080) /60p	67.50	60.00		*	
1,125 (1,080) /24p	26.97	23.98		*	
1,125 (1,080) /24p	27.00	24.00		*	
640 × 400 @70	31.47	70.08			*
640 × 480 @60	31.47	59.94			*
Macintosh13" (640 x 480)	35.00	66.67			*
640 × 480 @75	37.50	75.00			*
852 × 480 @60	31.47	59.94			*
800 × 600 @60	37.88	60.32			*
800 × 600 @75	46.88	75.00			*
800 × 600 @85	53.67	85.08			*
Macintosh16" (832 x 624)	49.73	74.55			*
1,024 × 768 @60	48.36	60.00			*
1,024 × 768 @70	56.48	70.07			*
1,024 × 768 @75	60.02	75.03			*
1,024 × 768 @85	68.68	85.00			*
Macintosh 21" (1,152 x 870)	68.68	75.06			*
1,280 × 1,024 @60	63.98	60.02			*
1,366 × 768 @60	48.36	60.00			*

(Note)

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

Technical Information (Continued)

PC Input Terminals Connection

- Computer signals which can be input are those with a horizontal scanning frequency of 15 to 110 kHz and vertical scanning frequency of 48 to 120 Hz. (However, the image will not be displayed properly if the signals exceed 1,200 lines.)
- Some PC models cannot be connected to the set.
- There is no need to use an adapter for computers with IBM PC/AT compatible D-sub 15P terminal.
- The maximum resolution: 1,280 x 1,024
 - If the display resolution exceeds these maximums, it may not be possible to show fine detail with sufficient clarity.
- Signal Names for D-sub 15P Connector

(1) (2) (3) (4) (5)
67890

Pin La	vout for	PC	Input	Terminal

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	R	6	GND (Ground)	11)	NC (not connected)
2	G	7	GND (Ground)	12	NC
3	В	8	GND (Ground)	13	HD/SYNC
4	NC (not connected)	9	NC (not connected)	14)	VD
5	GND (Ground)	10	GND (Ground)	15	NC

Care and Cleaning

First, unplug the Power cord plug from the wall outlet.

Display panel

The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.

- If the surface is particularly dirty, soak a soft, lint-free cloth in diluted mild liquid dish soap (1 part mild liquid dish soap diluted by 100 times the amount of water) and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth of the same type until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the surface may be adversely affected.

Cabinet

If the cabinet becomes dirty, wipe it with a soft, dry cloth.

- If the cabinet is particularly dirty, soak the cloth in a weak mild liquid dish soap and then wring the cloth dry. Use this cloth to wipe the cabinet and then wipe it dry with a dry cloth.
- Do not allow any mild liquid dish soap to come into direct contact with the surface of the Plasma TV.
 If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the cabinet surface
 may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made
 from rubber or PVC.

Pedestal

Cleaning


- Wipe the surfaces with a soft, dry cloth. If the unit is particularly dirty, clean it using a cloth soaked with water to which a small amount of mild liquid dish soap has been added and then wipe with a dry cloth. Do not use products such as solvents, thinner, or household wax for cleaning, as they can damage the surface
- coating. (If using a chemically-treated cloth, follow the instructions supplied with the cloth.)
- Do not attach sticky tape or labels, as they can make the surface of the pedestal dirty. Do not allow long-term contact with rubber, vinyl products, or the like. (Doing so will cause deterioration.)

Wireless Unit (Receiver and Transmitter)

Wipe the glossy surface of Transmitter and Receiver gently with the Cleaning cloth (included).

Specifications

		TC-P54Z1				
Power Source		AC 120 V, 60 Hz				
Power Consumption	Maximum	Display Unit: 476 W / Tuner Box: 35 W (Wireless Unit (Receiver) 12 W / Wireless Unit (Transmitter) 10 W)				
nption	Standby condition	Display Unit: 0.2 W / Tuner Box: 0.2 W				
Plasma Display	Drive method	AC type				
asr spl	Aspect Ratio	16:9				
na ay	Visible screen size	54 " class (54.1 inches measured diagonally)				
panel	(W x H x Diagonal)	47.1 " × 26.5 " × 54.1 " (1,198 mm × 673 mm × 1,374 mm)				
<u>ਦ</u>	(No. of pixels)	2,073,600 (1,920 (W) × 1,080 (H)) [5,760 × 1,080 dots]				
Sound	Audio Output	20 W [10 W + 10 W] (10 % THD)				
PC s	ignals	VGA, SVGA, XGA, WXGA, SXGA Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz				
Char (Digi	nnel Capability ital/Analog)	VHF/UHF: 2 - 69, CATV: 1 - 135				
Oper	rating Conditions	Temperature: 32 °F – 104 °F (0 °C – 40 °C) Humidity: 20 % – 80 % RH (non-condensing)				
	VIDEO IN 1-2	VIDEO: RCA PIN Type × 1 1.0 V [p-p] (75 Ω) S-VIDEO: Mini DIN 4-pin Y: 1.0 V [p-p] (75 Ω) C: 0.286 V [p-p] (75 Ω) AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]				
Connection Terminals	COMPONENT IN 1-2	Y: 1.0 V [p-p] (including synchronization) PB, PR: ±0.35 V [p-p] AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]				
tion	HDMI 1-4	TYPE A Connector x 4 ■ This TV supports "HDAVI Control 4" function.				
Term	PC	D-SUB 15PIN: R,G,B / 0.7 V [p-p] (75 Ω) HD, VD / 1.0 - 5.0 V [p-p] (high impedance)				
ina	RS232C (Serial)	D-sub 9pin for external control				
S	LAN (for VIERA CAST IPTV)	RJ45 (10BASE-T/100BASE-TX)				
	Card slot	SD CARD slot x 1				
	DIGITAL AUDIO OUT	PCM / Dolby Digital, Fiber Optic				
FEAT	TURES	3D Y/C FILTER CLOSED CAPTION V-Chip IPTV (VIERA CAST) Photo viewer Movie player HDAVI Control 4				
⊋¤.	Including pedestal	56.3 " × 35.2 " × 15.0 " (1,428 mm × 893 mm × 379 mm)				
Dimensions (W×H×D)	Display Unit only	56.3 " × 32.3 " × 1.0 " (1,428 mm × 820 mm × 25 mm)				
× H	Tuner Box	17.0 " × 2.4 " × 9.5 " (430 mm × 59 mm × 240 mm)				
-	Wireless Unit (Transmitter) Wireless Unit (Receiver)	5.1 " × 5.3 " × 1.9 " (128 mm × 133 mm × 46 mm)				
	Including pedestal Display Unit only	83.8 lb (38.0 kg)				
Z.	Display Unit only	70.6 lb (32.0 kg)				
Mass	Tuner Box	6.7 lb (3.0 kg)				
	Wireless Unit (Transmitter) Wireless Unit (Receiver)	0.7 lb (280 g) 0.9 lb (400 g)				
[T(C-P54711					

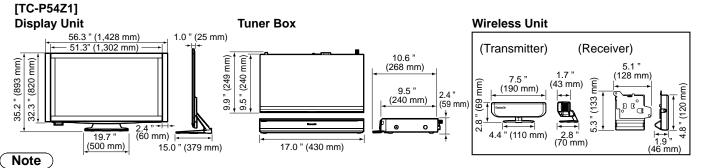

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.
- Dimensions and Mass are the values for a speaker installation.

FAQ

Before requesting service or assistance, please follow these simple guides to resolve the problem. If the problem still persists, please contact your local Panasonic dealer or Panasonic Service Center for assistance. For details (p. 73, 74)

For additional assistance, please contact us via the website at: www.panasonic.com/contactinfo

www.panasonic.ca

White spots or shadow images (noise)





 Check the position, direction, and connection of the antenna.


Interference or frozen digital channels (intermittent sound)




- Change the direction of antenna for digital channels.
- Check "Signal meter" (p. 57).
 If the signal is weak, check the antenna and consult your local dealer.

The remote control does not work

- Are the batteries installed correctly? (p. 8)
- Are the batteries new?

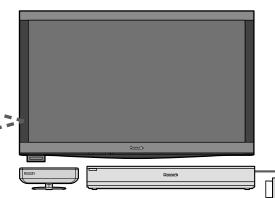

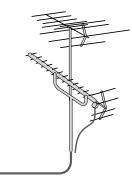

When a wireless unit is used for connection and a devise which supports VIERA Link (such as DVD recorder DIGA) is connected to a HDMI cable via AV amplifier, image and audio may not be output properly.

 In this case, usage of the Panasonic SC-ZT1 is recommended.



Pictures from external equipment are distorted when the unit is connected via HDMI

- Is the HDMI cable connected properly? (p. 45, 62)
- Turn Off the TV unit and equipment, then turn them On again.
- Check an input signal from the equipment. (p. 67)
- Use equipment compliant with EIA/CEA-861/861B.

When the channel is changed on an STB that is connected with HDMI, "HDMI" may be displayed on the top left of the screen

This is not a malfunction.

Recording does not start immediately

 Check the settings of the recorder. For details, read the manual of the recorder.

Problem

"Press any button to

return" moves on the

screen

The function to prevent "Image retention" is activated. (Not a faulty symptom)

The screen saver is activated if the TV unit is not operated for a certain time in SD mode.

Actions

"Image retention" (p. 7)

Some spots remain bright or dark

The Plasma panel is made up of a few million pixels and is produced with advanced technology through an intricate process. Sometimes a few pixels may be bright or dark. These pixels do not indicate a defective panel and will have no impact on the performance of the TV.

Chaotic image, noisy

Check nearby electrical products (car or motorcycle ignition systems, fluorescent lamp, etc.)

No image can be displayed

Check Picture menu (p. 40)

- Check the cable connections. (p. 11-12, 15-18)
- Check that the correct input has been selected. (p. 32)

Only spots are displayed instead of images

- Check the channel settings. (p. 56)
- Check the antenna cables.

Neither image nor sound is produced

- Is the AC power cord plugged into the outlet?
- Is the TV unit turned On?
- Check Picture menu (p. 40) and volume.
- Check the AV cable connections. (p. 15-18)
- Check that the correct input has been selected. (p. 32)

Black Box appears

Change settings of Closed caption (CC). (p. 58)

No sound is produced

- Are the speakers' cables connected correctly? (p. 62)
- Is "Sound Mute" active? (p. 20)
- Is the volume set to the minimum?
- Is "TV speakers" set to "Off"? (p. 40)
- Change "SAP" settings. (p. 25)
 Check "HDMI 1 in", "HDMI 2 in", "HDMI 3 in" or "HDMI 4 in" settings. (p. 40)

Sound is unusual

- Set "SAP" setting to "Stereo" or "Mono."
- Check the HDMI device connected to the unit.
- Set the audio setting of the HDMI device to "Linear PCM."
- If digital sound connection has a problem, select analog sound connection.

Unknown sound heard

- 1- Sounds from TV cabinet
- 2- Whirring sound
- 3- Tick/Click sound
- 4- Buzzing sound

- Changes in the temperature and humidity of the room may cause the TV's cabinet to expand or contract and produce metallic sounds. This is not a sign of faulty operation or a malfunction.
- The TV may have a cooling fan that makes a soft whir. This is not a sign of faulty operation or a malfunction.
- 3- When the TV is powered on, an electrical component in the TV activates producing a tick/click sound. This is not a sign of faulty operation or a malfunction.
- 4- Electrical circuits are active while the TV set is on. This is not a sign of faulty operation or a malfunction.

Parts of the TV set become hot.

Even when the temperature of parts of the front, top and rear panels has risen, these temperature rises will not pose any problems in terms of performance or quality.

Sound

Limited Warranty (for U.S.A. and Puerto Rico only)

PANASONIC CONSUMER ELECTRONICS COMPANY, DIVISION OF PANASONIC CORPORATION OF NORTH AMERICA One Panasonic Way Secaucus, New Jersey 07094

Panasonic Plasma Television Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

PLASMA TV CATEGORIES	PARTS	LABOR	SERVICE
Up to 37' (diagonal)	1 (ONE) YEAR	1 (ONE) YEAR	Carry-In
42" (diagonal) and larger	I (ONE) YEAR	I (ONE) YEAR	On-Site

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts.

You must carry-in your product or arrange for on-site service during the Limited Warranty period. If non-rechargeable batteries are included, they are not warranted. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of the original purchase date is required for Limited Warranty service.

On-Site or Carry-in Service

For On-Site or Carry-In Service in the United States and Puerto Rico call 1-877-95-VIERA (1-877-958-4372).

On-site service where applicable requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain on-site repairs will not be completed on-site, but will require that the product or parts of the product, at the servicer's discretion be removed for shop diagnosis and/or repair and then returned.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the glass panel resulting from viewing fixed images (including, among other things, non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE LIMITED WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied Limited Warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN ON-SITE SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer Services Directory (for U.S.A. and Puerto Rico)

Customer Services Directory (United States and Puerto Rico)

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

http://www.panasonic.com/help

or, contact us via the web at:

http://www.panasonic.com/contactinfo

You may also contact us directly at:

1-877-95-VIERA (958-4372)

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

■ For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases (United States and Puerto Rico)

Purchase Parts, Accessories and Instruction Books on line for all Panasonic Products by visiting our Web Site at:

http://www.pstc.panasonic.com

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday - Friday 9 am to 9 pm, EST.)

Panasonic Service and Technology Company

20421 84th Avenue South.

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

■ For hearing or speech impaired TTY users, TTY: 1-866-605-1277

Panasonic

Operating Instructions 54" Class 1080p Plasma HDTV (54.1 inches measured diagonally)

> **TC-P54Z1** Model No.



Quick Start Guide

- For assistance (U.S.A./Puerto Rico), please call: 1-877-95-VIERA (958-4372) or visit us at www.panasonic.com/contactinfo
- For assistance (Canada), please call: 1-866-330-0014 or visit us at www.vieraconcierge.ca























Limited Warranty (for Canada)

Panasonic Canada Inc.

PANASONIC PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect for a period as stated below from the date of original purchase.

Viera TV (42" & over)	In-home service	One (1) year, parts (including panel) and labour.
Viera TV (under 42")	Carry-in service	One (1) year, parts (including panel) and labour.

In-home Service will be carried out only to locations accessible by roads and within 50 km of an authorized Panasonic service facility.

LIMITATIONS AND EXCLUSIONS

This warranty does not apply to products purchased outside Canada or to any product which has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during shipping, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Dry cell batteries are also excluded from coverage under this warranty.

This warranty is extended to the original end user purchaser only. A purchase receipt or other proof of date of original purchase is required before warranty service is performed.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

In-home service requires clear, complete and easy access to the product by the Authorized Servicentre and does not include removal or re-installation of an installed product. If removal is required to service the product, it will be at the discretion of the Servicentre and in no event will Panasonic Canada Inc. or the Servicentre be liable for any special, indirect or consequential damages.

WARRANTY SERVICE

For product operation and information assistance, please contact:

Our Customer Care Centre: 1-800 #: 1-866-330-0014

Email link: www.vieraconcierge.ca

FOR PRODUCT REPAIRS, please contact Viera Customer Care Agent using the above contact info.

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton. Include details of the defect claimed, and proof of date of original purchase.

Note

ŀ			
		u	ı
l	7	•	۹
	J	•	:
Ļ	d	4	ı
ı	1	8	þ
١	٠	-	ď
ľ	đ	1	1
	Ĭ		
		٠	
	1	•)
ĺ	•		
	7	5	١
١	J	ī.	4
ľ			

Customer's Record The model number and serial number of this product can be found on its back cover. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of you purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.
Model Number Serial Number
anasonic Corporation

Web Site: http://panasonic.net/ © Panasonic Corporation 2009