

Panasonic®



Operating Instructions

Progressive Wide Plasma Display

Model No. **TH-37PWD6UX**
TH-42PWD6UX



Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.

English

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
WARNING: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.		



The lightning flash with arrow-head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING: To prevent damage which may result in fire or shock hazard, do not expose this apparatus to rain or moisture. Do not place containers with water (flower vase, cups, cosmetics, etc.) above the set. (including on shelves above, etc.)

WARNING: 1) To prevent electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.
2) Do not remove the grounding pin on the power plug. This apparatus is equipped with a three pin grounding-type power plug. This plug will only fit a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician.
Do not defeat the purpose of the grounding plug.



Important Safety Instructions

- 1) Read these instructions.
All the safety and operating instructions should be read before the appliance is operated.
- 2) Keep these instructions.
The safety and operating instructions should be retained for future reference.
- 3) Heed all warnings.
All warnings on the appliance and in the operating instructions should be adhered to.
- 4) Follow all instructions.
All operating and use instructions should be followed.
- 5) Do not use this apparatus near water.
For example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
- 6) Clean only with dry cloth.
Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
Slots and Openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the Manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
This will prevent damage to the product due to lightning and power-line surges.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.



Dear Panasonic Customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new Plasma Display.

To obtain maximum benefit from your set, please read these Instructions before making any adjustments, and retain them for future reference.

Retain your purchase receipt as well, and record the model number and serial number of your set in the space provided on the rear cover of these instructions.

Table of Contents

Important Safety Instructions	3	PRESENT TIME SETUP/SET UP TIMER	23
FCC STATEMENT	5	PRESENT TIME SETUP	23
Safety Precautions	6	SET UP TIMER	24
Accessories	8	SCREENSAVER (For preventing after-images)	25
Accessories Supplied	8	Setup of SCREENSAVER Time	26
Remote Control Batteries	8	Reduces screen after-image	26
Connections	9	SIDE BAR ADJUST	27
PC Input Terminals connection	10	Digital Zoom	28
SERIAL Terminals connection	11	Reduces power consumption	29
Power ON/OFF	12	Customizing the Input labels	29
AC cord connection	12	SET UP for MULTI DISPLAY	30
Power ON/OFF	12	How to setup MULTI DISPLAY	30
Input Signal Selection	13	How to set the Display location number for each Plasma Display	31
Select the Input Signal	13	SET UP for Input Signals	32
Selecting the ON-Screen Menu Language	13	COMPONENT/RGB IN SELECT	32
Basic Controls	14	3D Y/C FILTER – For NTSC Video images	32
On-Screen Menu Displays	16	COLOR SYSTEM / Panasonic AUTO	33
ASPECT Controls	18	3:2 PULLDOWN	33
Adjusting PICTURE POSITION/SIZE	19	SYNC	34
SOUND Adjustment	20	H-FREQ. (kHz)/V-FREQ. (Hz)	34
MUTE	20	Troubleshooting	35
PICTURE Adjustments	21	Input signal can be displayed	36
ADVANCED SETTINGS	22	Specifications	37

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

To assure continued compliance and possible undesirable interference, the provided ferrite cores must be used when connecting this plasma display to video equipment; and maintain at least 40 cm spacing to other peripheral devices. Any changes or modifications not expressly approved by Matsushita Electric Corporation of America could cause harmful interference and would void the user's authority to operate this device.

FCC Declaration of Conformity

Responsible Party: Matsushita Electric Corporation of America
One Panasonic Way, Secaucus, NJ 07094
Contact Source: Panasonic Consumer Electronics Company
1-888-843-9788
email: consumerproducts@panasonic.com

Attach the ferrite core:

The ferrite cores provided as a supplied accessory must be used when connecting this Plasma Display to video equipment. (see page 10, 11)

CANADIAN NOTICE:

This Class B digital apparatus complies with Canadian ICES-003.

Note:

Do not allow a still picture to be displayed for an extended period, as this can cause permanent after-image to remain on the Plasma Display.

Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.

Trademark Credits

- VGA is a trademark of International Business Machines Corporation.
- Macintosh is a registered trademark of Apple Computer, USA.
- S-VGA is a registered trademark of the Video Electronics Standard Association.

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

Safety Precautions

WARNING

Set up

Do not place the Plasma Display on sloped or unstable surfaces.

- The Plasma Display may fall off or tip over.

Do not place any objects on top of the Plasma Display.

- If water spills onto the Plasma Display or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Plasma Display, please consult an Authorized Service Center.

Do not cover the ventilation holes.

- Doing so may cause the Plasma Display to overheat, which can cause fire or damage to the Plasma Display.

If using the pedestal (optional accessory), leave a space of 3 ¹⁵/₁₆" (10 cm) or more at the top, left and right, 2 ³/₈" (6 cm) or more at the bottom, and 2 ³/₄" (7 cm) or more at the rear. If using some other setting-up method, leave a space of 3 ¹⁵/₁₆" (10 cm) or more at the top, bottom, left and right, and ³/₄" (1.9 cm) or more at the rear.

Avoid installing this product near electronic equipment that easily receives electromagnetic waves.

- It may cause interference in image, sound, etc. In particular, keep video equipment away from this product.

AC Power Supply Cord

The Plasma Display is designed to operate on 120 V AC, 50/60 Hz.

Securely insert the power cord plug as far as it will go.

- If the plug is not fully inserted, heat may be generated which could cause fire. If the plug is damaged or the wall socket plate is loose, they should not be used.

Do not handle the power cord plug with wet hands.

- Doing so may cause electric shocks.

Do not do anything that might damage the power cable. When disconnecting the power cable, hold the plug, not the cable.

- Do not make any modifications, place heavy objects on, place near hot objects, heat, bend, twist or forcefully pull the power cable. Doing so may cause damage to the power cable which can cause fire or electric shock. If damage to the cable is suspected, have it repaired at an Authorized Service Center.

If the Plasma Display will not be used for a long period of time, unplug the power cord from the wall outlet.

If problems occur during use

If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odor is detected from the Plasma Display, unplug the power cord immediately.

- Continuous use of the Display under these conditions might cause fire or permanent damage to the unit. Have the Display evaluated at an Authorized Service Center. Services to the Display by any unauthorized personnel are strongly discouraged due to its high voltage dangerous nature.

If water or foreign objects get inside the Plasma Display, if the Plasma Display is dropped, or if the cabinet becomes damaged, disconnect the power cord plug immediately.

- A short may occur, which could cause fire. Contact an Authorized Service Center for any repairs that need to be made.

CAUTION

This Plasma Display is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability which could result in the possibility of injury.

(All of the following accessories are manufactured by Matsushita Electric Industrial Co., Ltd.)

- Speakers TY-SP37P5W-K (TH-37PWD6UX)
TY-SP42P5W-K (TH-42PWD6UX)
- Pedestal TY-ST05-K
- Wall stand TY-ST42PW1
- Wall-hanging bracket (vertical) TY-WK37PV3 (TH-37PWD6UX)
TY-WK42PV1 (TH-42PWD6UX)
- Ceiling unit TY-CE42PS1
- Tuner Connection Terminal Board TY-42TM6H
- RCA Composite Video Terminal Board TY-42TM6V
- RCA Component Video Terminal Board TY-42TM6Z

Always be sure to ask a qualified technician to carry out set-up.

When using the Plasma Display

Do not bring your hands, face or objects close to the ventilation holes of the Plasma Display.

- Top of the Plasma Display is usually very hot due to the high temperature of exhaust air being released through the ventilation holes. Burns or personal injuries can happen if any body parts are brought too close. Placing any object near the top of the display could also result in heat damages to the object as well as to the Display if its ventilation holes are blocked.

Be sure to disconnect all cables before moving the Plasma Display.

- Moving the Display with its cables attached might damage the cables which, in turn, can cause fire or electric shock.

Disconnect the power plug from the wall outlet as a safety precaution before carrying out any cleaning.

- Electric shocks can result if this is not done.

Clean the power cable regularly to prevent it from becoming dusty.

- Built-up dust on the power cord plug can increase humidity which might damage the insulation and cause fire. Unplug the cord from the wall outlet and clean it with a dry cloth.

This Plasma Display radiates infrared rays, therefore it may affect other infrared communication equipment.

Install your infrared sensor in a place away from direct or reflected light from your Plasma Display.

Cleaning and maintenance

The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.

- If the surface is particularly dirty, soak a soft, lint-free cloth in a weak detergent solution and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth, of the same type, until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents and thinner, otherwise the quality of the surface may be adversely affected.

If the cabinet becomes dirty, wipe it with a soft, dry cloth.

- If the cabinet is particularly dirty, soak the cloth in a weak detergent solution and then wring the cloth dry. Use this cloth to wipe the cabinet, and then wipe it dry with a dry cloth.
- Do not allow any detergent to come into direct contact with the surface of the Plasma Display. If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents and thinner, otherwise the quality of the cabinet surface may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made from rubber or PVC.

Note:

Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the Plasma Display.


Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.

Accessories


Accessories Supplied

Check that you have the Accessories and items shown


Operating Instruction book

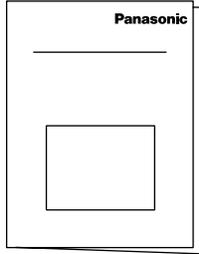


Remote Control Transmitter EUR646529

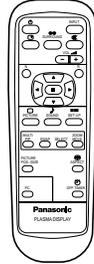


Batteries for the Remote Control Transmitter (AA Battery × 2)

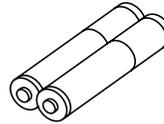


AC cord

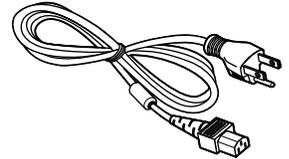


Ferrite core (small size) × 1

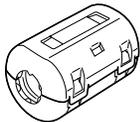

Ferrite core (large size) × 2

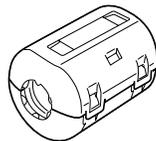


Fixing bands

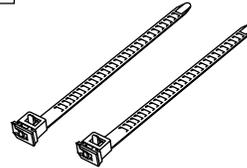


Remote Control Batteries

Requires two AA batteries.


1. Turn the transmitter face down. Press and slide off the battery cover.

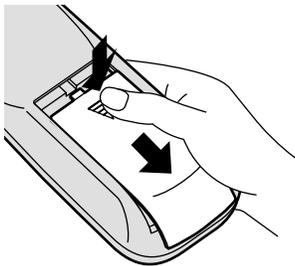

2. Install the batteries as shown in the battery compartment. (Polarity + or – must match the markings in the compartment.)

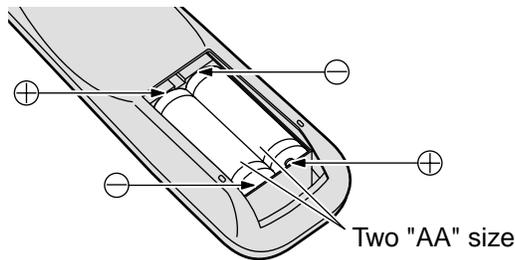

3. Replace the cover and slide in reverse until the lock snaps.

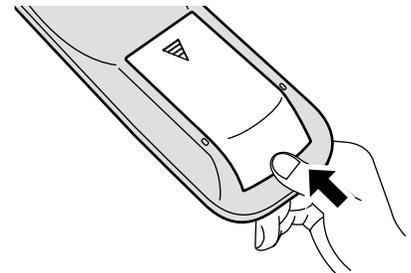

Helpful Hint:

For frequent remote control users, replace old batteries with Alkaline batteries for longer life.

Precaution on battery use




Incorrect installation can cause battery leakage and corrosion that will damage the remote control transmitter.

Observe the following precautions:




1. Batteries should always be replaced as a pair. Always use new batteries when replacing the old set.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (example: "Zinc Carbon" with "Alkaline").
4. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
5. Battery replacement is necessary when the remote control acts sporadically or stops operating the Plasma Display.

Connections

When connecting the speakers, be sure to use only the optional accessory speakers. Refer to the speaker's Installation Manual for details on speaker installation.

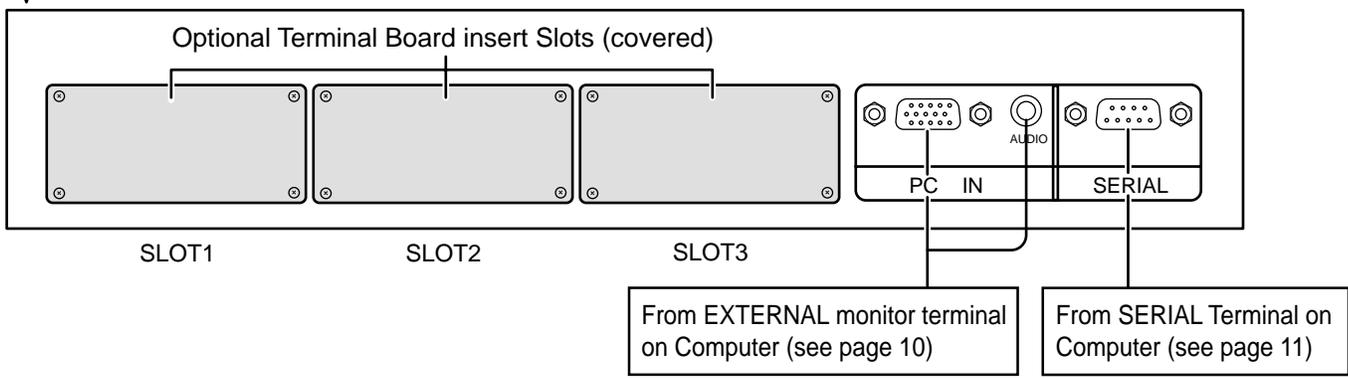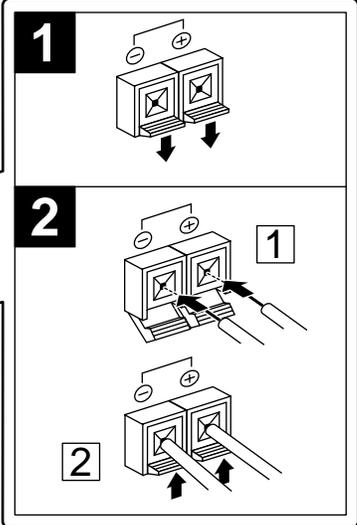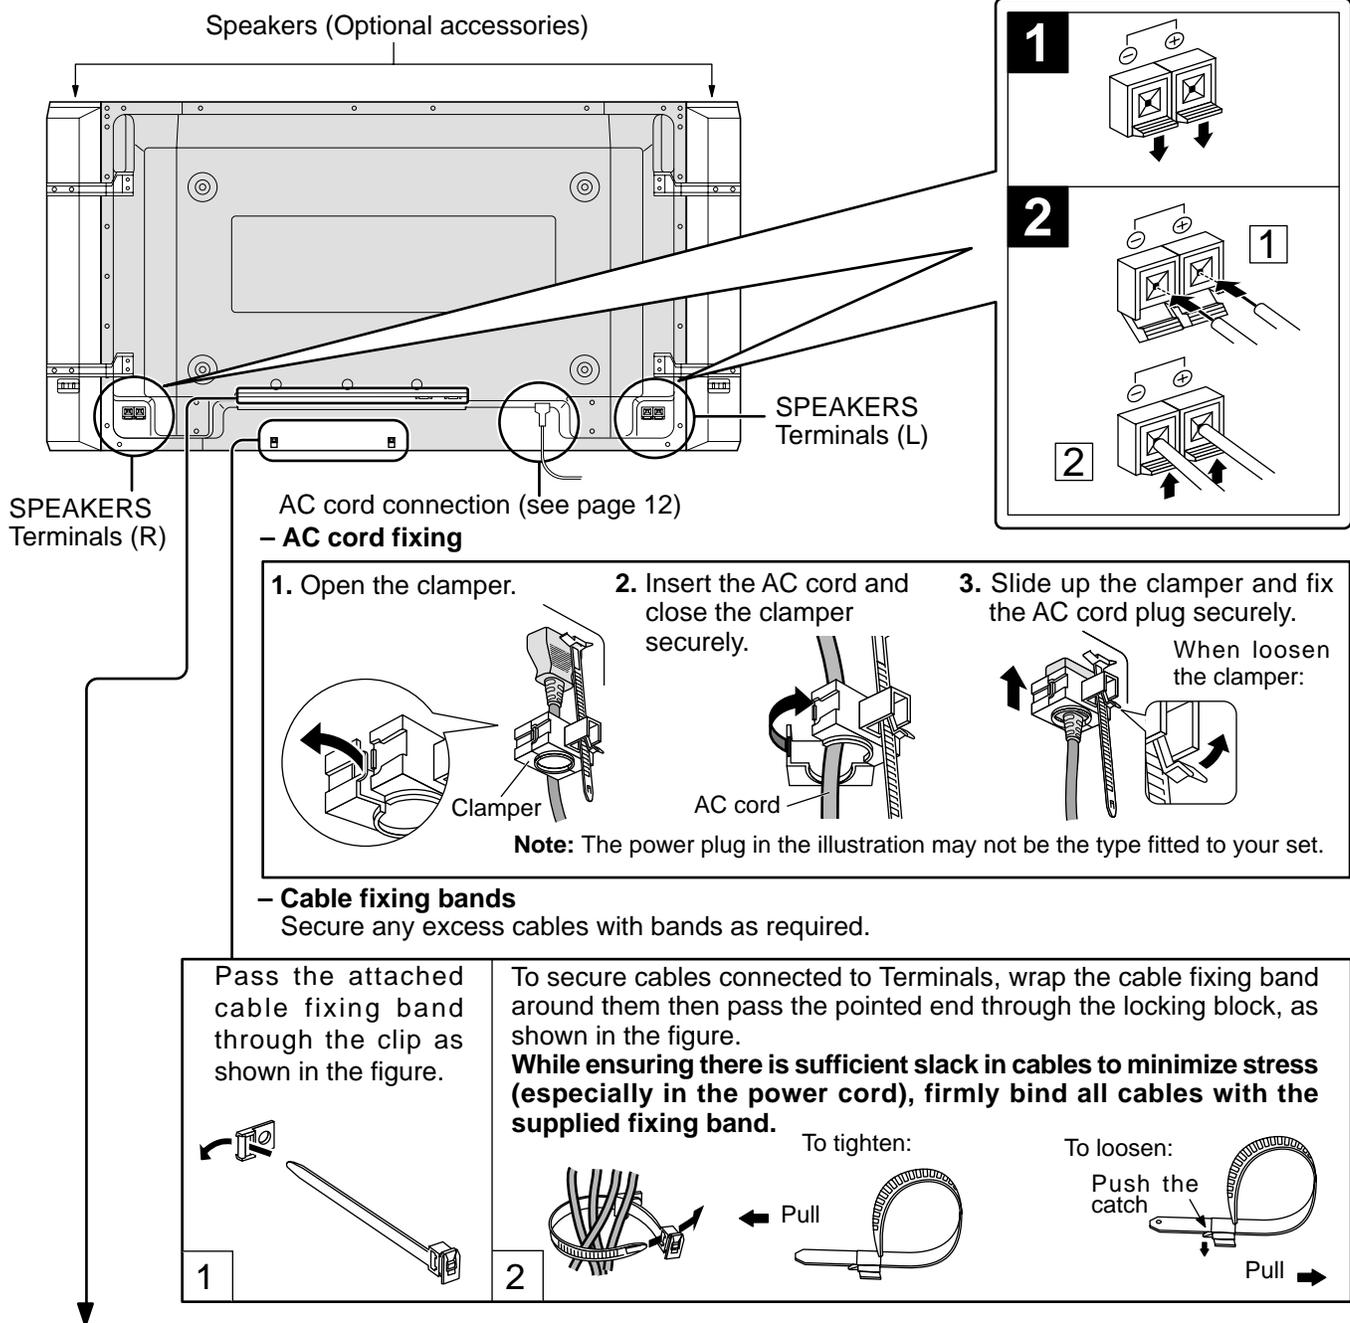


PC Input Terminals connection

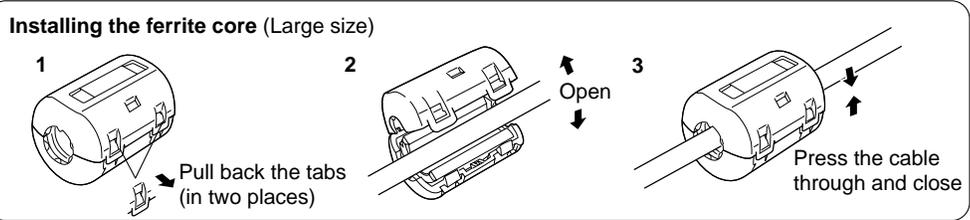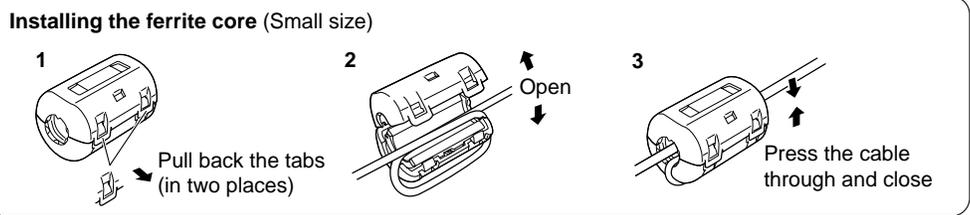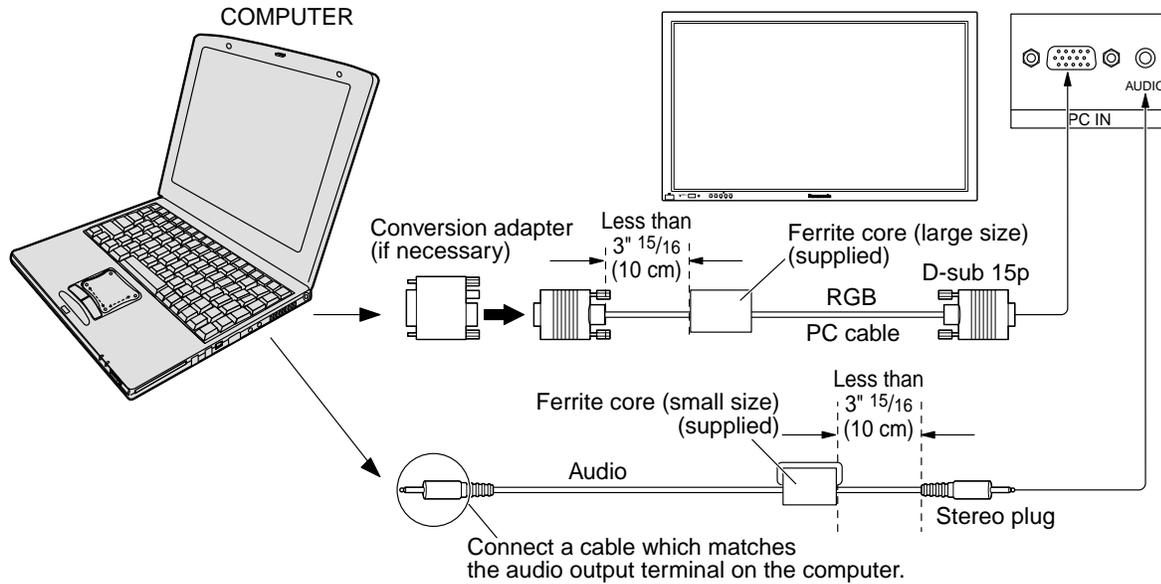

Notes:

- (1) Computer signals which can be input are those with a horizontal scanning frequency of 15 to 110 kHz and vertical scanning frequency of 48 to 120 Hz. (However, the image will not be displayed properly if the signals exceed 1,200 lines.)
- (2) The display resolution is a maximum of 640 × 480 dots when the aspect mode is set to “4:3”, and 852 × 480 dots when the aspect mode is set to “16:9”. If the display resolution exceeds these maximums, it may not be possible to show fine detail with sufficient clarity.
- (3) The PC input terminals are DDC1/2B-compatible. If the computer being connected is not DDC1/2B-compatible, you will need to make setting changes to the computer at the time of connection.
- (4) Some PC models cannot be connected to the set.
- (5) There is no need to use an adapter for computers with DOS/V compatible D-sub 15P terminal.
- (6) The computer shown in the illustration is for example purposes only.
- (7) Additional equipment and cables shown are not supplied with this set.
- (8) Do not set the horizontal and vertical scanning frequencies for PC signals which are above or below the specified frequency range.
- (9) Component Input is possible with the pin 1,2,3 of the D-sub 15P Connector.

Signal Names for D-sub 15P Connector

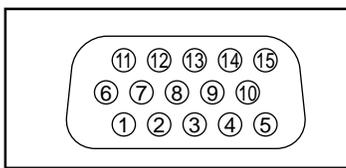


Pin Layout for PC Input Terminal

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R (P _R /C _R)	⑥	GND (Ground)	⑪	GND (Ground)
②	G(Y)	⑦	GND (Ground)	⑫	SDA
③	B(P _B /C _B)	⑧	GND (Ground)	⑬	HD/SYNC
④	GND (Ground)	⑨	NC (not connected)	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	SCL

SERIAL Terminals connection

The SERIAL terminal is used when the Plasma Display is controlled by a computer.

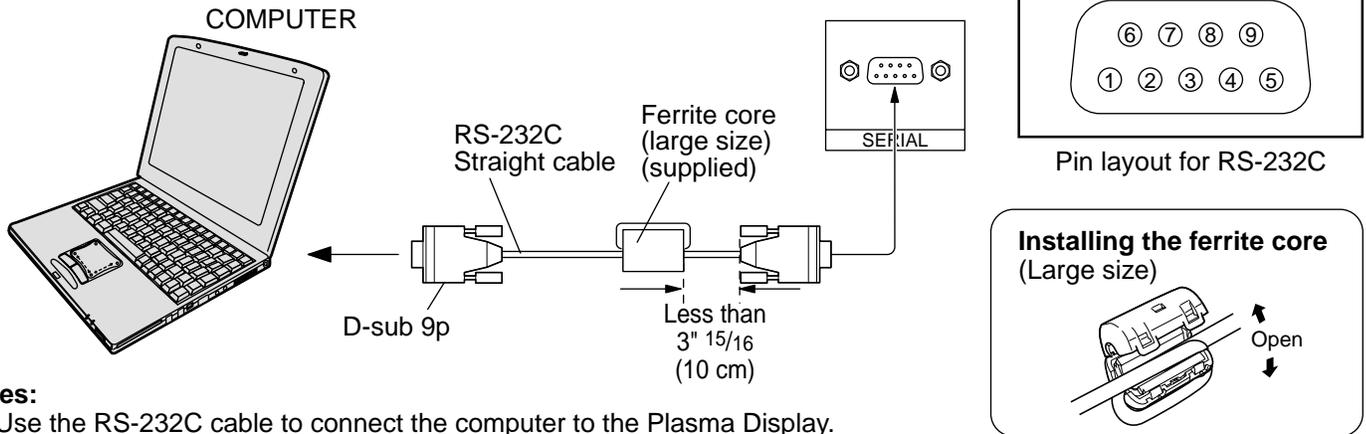

Notes:

- (1) Use the RS-232C cable to connect the computer to the Plasma Display.
- (2) The computer shown is for example purposes only.
- (3) Additional equipment and cables shown are not supplied with this set.

The SERIAL terminal conforms to the RS-232C interface specification, so that the Plasma Display can be controlled by a computer which is connected to this terminal.

The computer will require software which allows the sending and receiving of control data which satisfies the conditions given below. Use a computer application such as programming language software. Refer to the documentation for the computer application for details.


Communication parameters

Signal level	RS-232C compliant
Synchronization method	Asynchronous
Baud rate	9600 bps
Parity	None
Character length	8 bits
Stop bit	1 bit
Flow control	-

RS-232C Conversion cable	
D-sub 9-pin female	Details
②	R X D
③	T X D
⑤	GND
④ • ⑥	Non use
⑦	Shorted
⑧	
① • ⑨	NC

Basic format for control data

The transmission of control data from the computer starts with a STX signal, followed by the command, the parameters, and lastly an ETX signal in that order. If there are no parameters, then the parameter signal does not need to be sent.

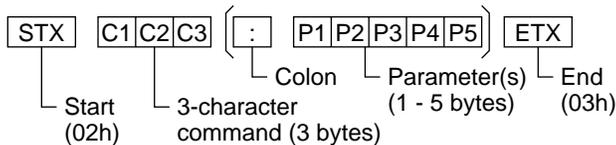

Notes:

- (1) If multiple commands are transmitted, be sure to wait for the response for the first command to come from this unit before sending the next command.
- (2) If an incorrect command is sent by mistake, this unit will send an "ER401" command back to the computer.

Command



Command	Parameter	Control details
PON	None	Power ON
POF	None	Power OFF
AVL	**	Volume 00 - 63
AMT	0	Audio MUTE OFF
	1	Audio MUTE ON
IMS	None	Input select (toggle)
	SL1	Slot1 input
	SL2	Slot2 input
	SL3	Slot3 input
	PC1	PC input
DAM	None	Screen mode select (toggle)
	NORM	NORMAL (4:3)
	ZOOM	ZOOM
	FULL	FULL
	JUST	JUST
	SELF	Panasonic AUTO

With the power off, this display responds to PON command only.

Power ON/OFF


AC cord connection

Connecting the AC cord plug to the Plasma Display.

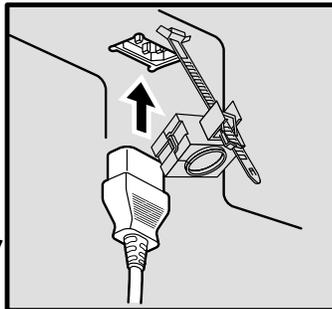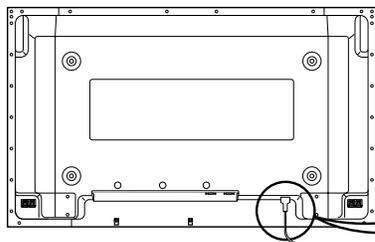

Fix the AC cord plug securely to the Plasma Display with the clasper.

Power ON/OFF

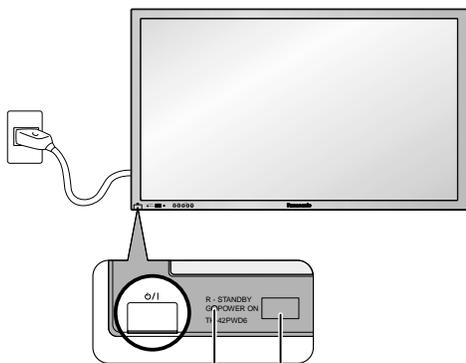

Power Indicator

Remote Control Sensor

Connecting the plug to the Wall Outlet

Press the POWER switch on the Plasma Display to turn the set on : POWER-ON.


Power Indicator : Green

Example: The screen below is displayed for a while after the Plasma Display is turned on. (setting condition is an example.)



When the POWER is turned on for the first time, the LANGUAGE selection screen is displayed.

From the second time on, language selection can be done from the setup menu. (see page 13)

Select the desired language using the ▲ and ▼ keys and press the ACTION  button.

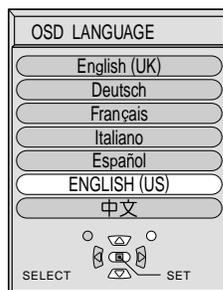

From the second time on, the screen shown below is displayed for a while (setting condition is an example).

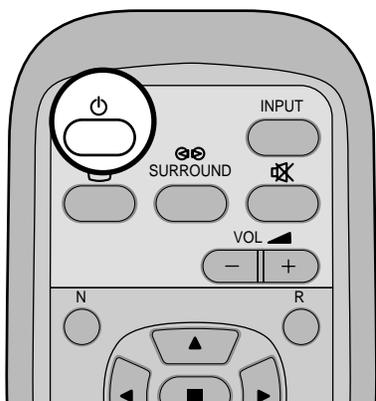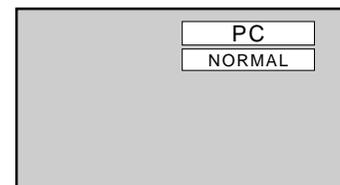

Press the  button on the remote control to turn the Plasma Display off.

Power Indicator: Red (STAND-BY)

Press the  button on the remote control to turn the Plasma Display on.




Power Indicator: Green

To turn the power for the Plasma Display off, press the  switch on the Plasma Display, when the Plasma Display is on or in standby mode.

Note: During operation of the power management function, the power indicator turns orange in the power off state.

Input Signal Selection

Select the Input Signal

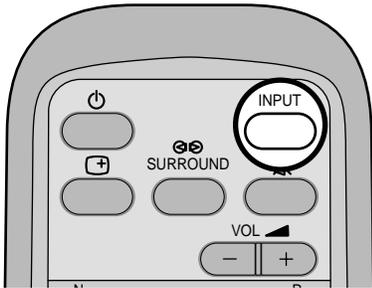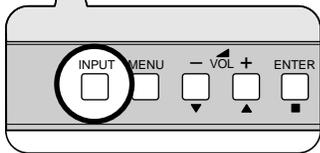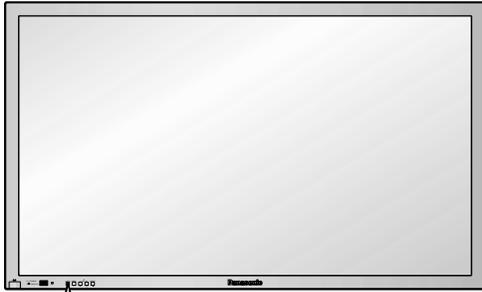

Press the INPUT button to select the input signal to be played back from the equipment which has been connected to the Plasma Display.

Select the input signals to be connected by installing the optional Terminal Boards.


Input signals will change as follows:

→ INPUT1 → INPUT2 → INPUT3 → PC IN →


Notes:

- (1) Input terminal will not be selected if the terminal board is not installed into the SLOT.
- (2) Select to match the signals from the source connected to the component/RGB input terminals. (see page 32)
- (3) In 2 screen display, the same input mode cannot be selected for the main picture and sub picture.

Selecting the On-Screen Menu Language

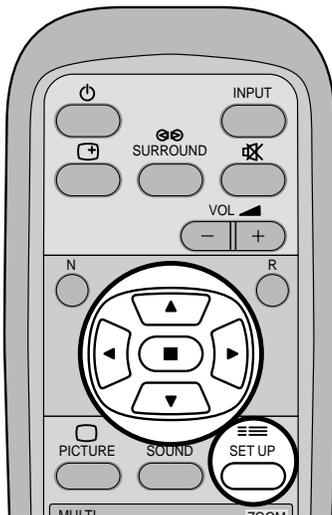

press to display the SET UP menu.

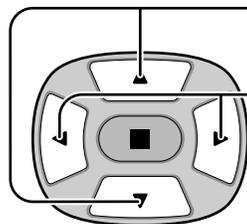


press to select OSD LANGUAGE.


press to select your preferred language.

Selectable languages

ENGLISH(UK)
Deutsch
Français
Italiano
Español
ENGLISH(US)
中文(Chinese)

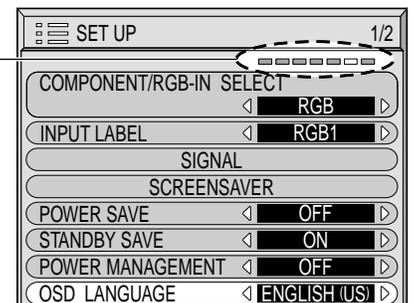

Basic Controls

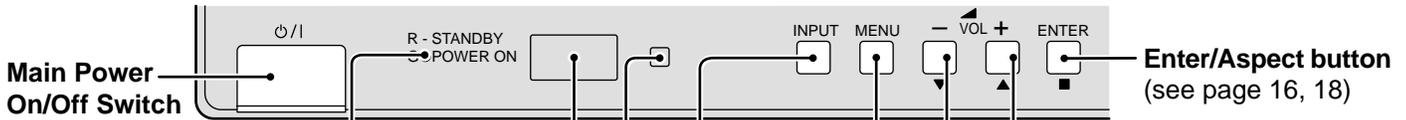

Power Indicator

The Power Indicator will light.

- Power-OFF .. Indicator not illuminated (The unit will still consume some power as long as the power cord is still inserted into the wall outlet.)
- Stand-by ϕ Red
- Power-ON Green
- DPMS Orange [With PC input signal and during operation of PC's screensaver.]

C.A.T.S sensor

Plasma C.A.T.S (Contrast Automatic Tracking System)

Plasma C.A.T.S automatically senses the ambient light conditions and adjusts the brightness and gradation accordingly, to optimise contrast. (Effective when Picture mode is set to Auto.)

MENU Screen ON/OFF

Each time the MENU button is pressed, the menu screen will switch. (see page 16)



INPUT button

(INPUT1, INPUT2, INPUT3 and PC IN Selection) (see page 13)

Volume Adjustment

Volume Up “+” Down “-”

When the menu screen is displayed.


“+”: press to move the cursor up

“-”: press to move the cursor down

(see page 16)

Status button

Press the “Status” button to display the current system status.

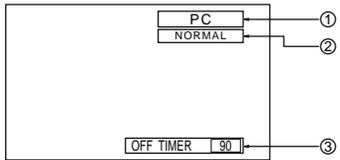

① Input label

② Aspect mode (see page 18)

③ Off timer

The off timer indicator is displayed only when the off timer has been set.

N button


(see page 19, 20, 21, 22)

PICTURE button

(see page 21)


MULTI PIP

Each time pressing this button main picture and sub picture will be displayed as follows bellow.

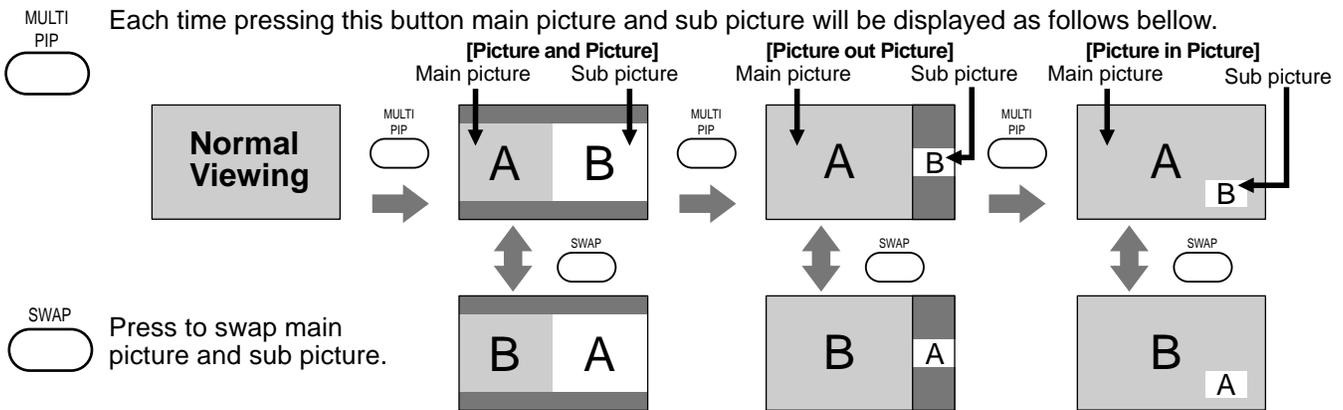

SWAP Press to swap main picture and sub picture.

SELECT Press the SELECT button Under the main Picture and sub picture display, select the picture which you would like to change input modes.

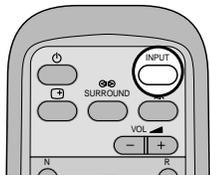

INPUT Press to change input signal.


ZOOM MOVE Press the MOVE button Each time the location of the sub picture will be moved.

Notes: (1) This button is effective only in the picture in picture.

(2) The sub picture may be hidden by the on screen display, depending on its position.

Note: Sound output is from the main picture.

[Example] Main picture label is bright Sub picture label is bright

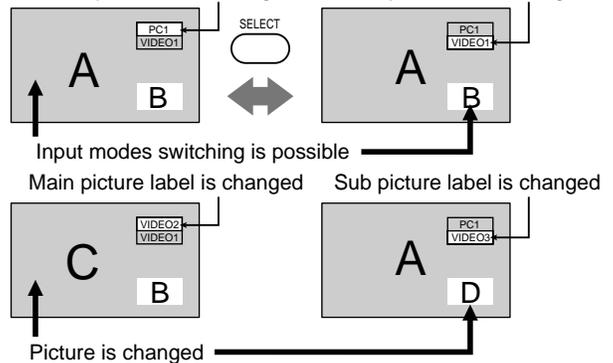


Input modes switching is possible

Main picture label is changed

Sub picture label is changed

Picture is changed

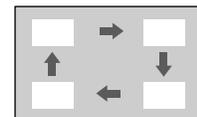

Stand-by (ON/OFF) button


The Plasma Display must first be plugged into the wall outlet and turned on at the power switch (see page 12). Press this button to turn the Plasma Display On, from Standby mode. Press it again to turn the Plasma Display Off to Standby mode.

SURROUND button

The benefits of surround sound are enormous. You can be completely enveloped in sound; just as if you were at a concert hall or cinema.

The surround setting switches on and off each time the SURROUND button is pressed.

ON ← → OFF

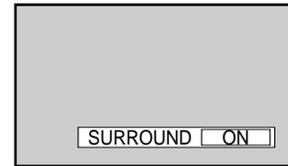

Note:

The surround settings are memorized separately for each Sound mode (Normal, Auto).

INPUT button

(INPUT1, INPUT2, INPUT3 and PC IN Selection)

Press to select INPUT1, INPUT2, INPUT3 and PC IN input SLOTS sequentially. (see page 13)

Sound mute On/Off (see page 20)

Volume Adjustment

Press the Volume Up “+” or Down “-” button to increase or decrease the sound volume level.

R button (see page 19, 20)

Press the R button to return to previous menu screen.

ACTION button

Press to make selections.

POSITION buttons

SOUND button (see page 20)

Press to adjust the SOUND.


SET UP button (see page 16)

Digital Zoom(see page 28)



Press to access Digital Zoom.

This displays an enlargement of the designated part of the displayed image.

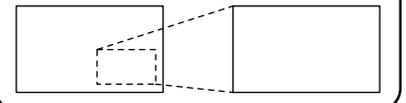



PICTURE POS./SIZE button (see page 19)

ASPECT button

Press to adjust the aspect. (see page 18)

OFF TIMER button

The Plasma Display can be preset to switch to stand-by after a fixed period. The setting changes to 30 minutes, 60 minutes, 90 minutes and 0 minutes (off timer cancelled) each time the button is pressed.

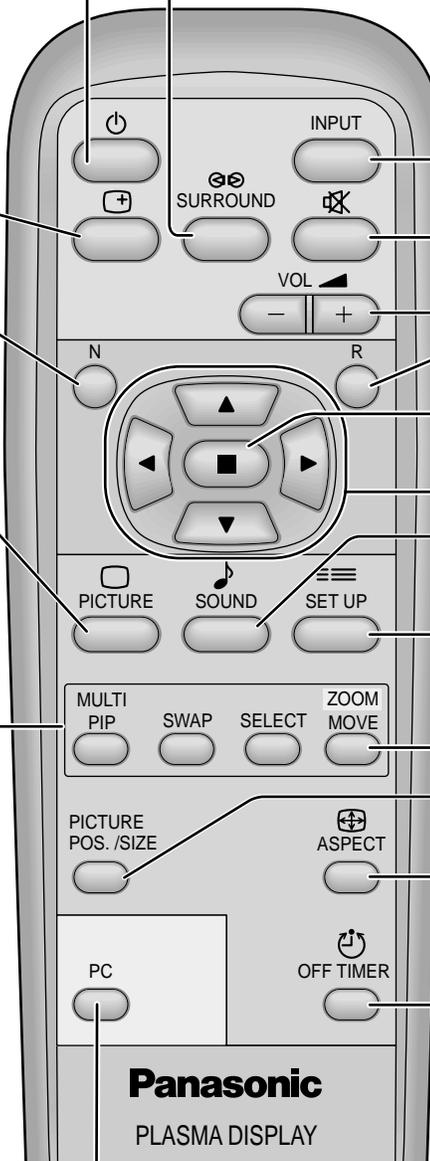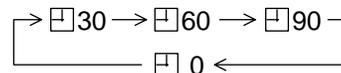

PC button

Press the “PC” input mode selection button to select the PC input mode.



This button is used to switch directly to PC input mode.

Note: In 2 screen display, the same input mode cannot be selected for the main picture and sub picture.


When three minutes remain, “Off timer 3” will flash. The off timer is cancelled if a power interruption occurs.

On-Screen Menu Displays


To PICTURE adjust menu
(see page 21)

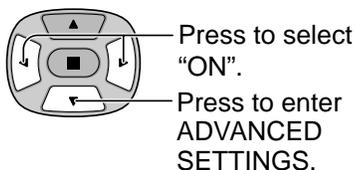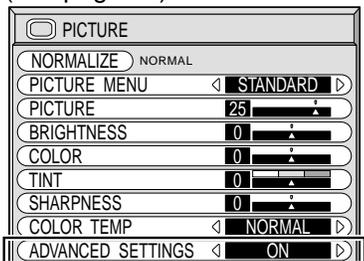

To ADVANCED SETTINGS
(see page 21, 22)

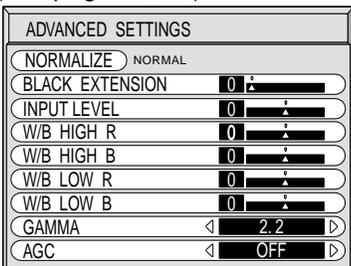


To SOUND adjust menu
(see page 20)

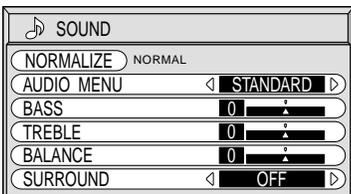


To PICTURE POS./SIZE adjust menu (see page 19)


During "VIDEO (S VIDEO)" and "COMPONENT" input signal.

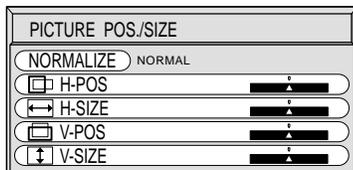



During "RGB" and "DVI" input signal.

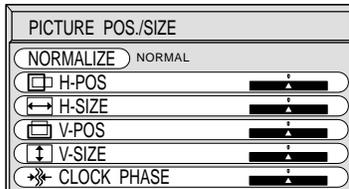


The MENU button on the unit can also be pressed.

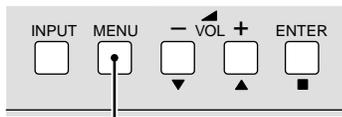




Each time the MENU button is pressed, the menu screen will switch.

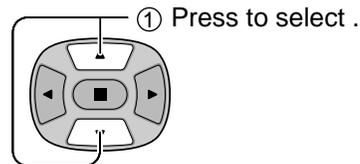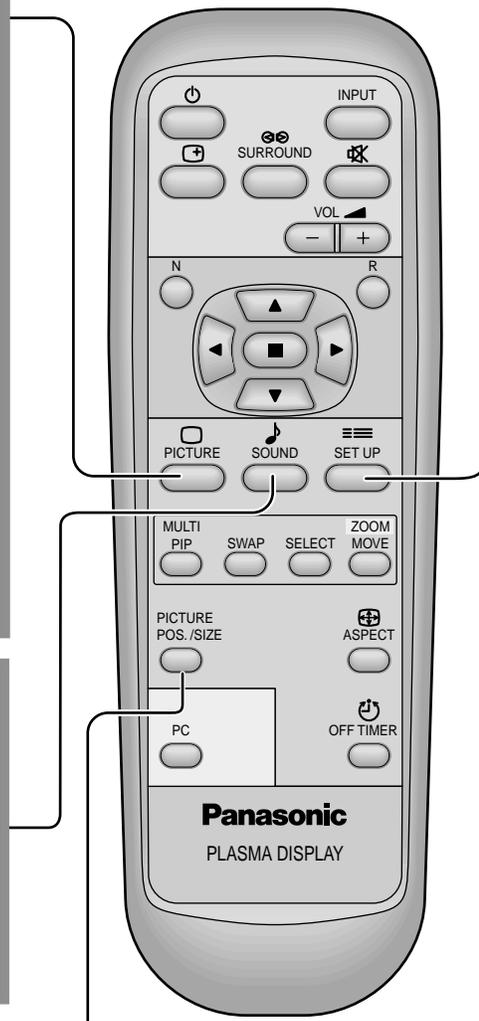


[from the unit]

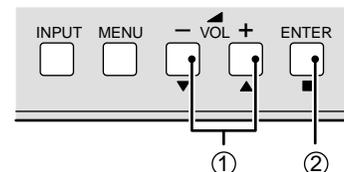


- ① Press to select.
- ② Press to access each adjust screen.

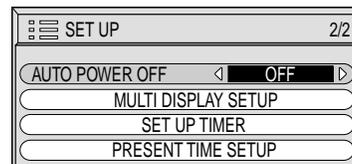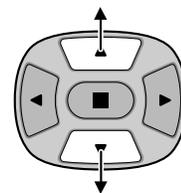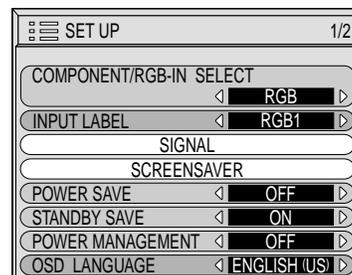


On-Screen Menu Display from Remote Control

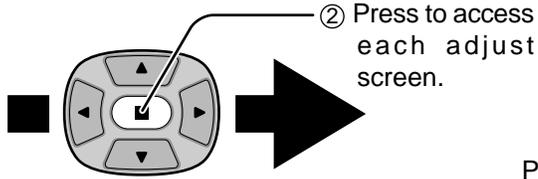

[from the unit]

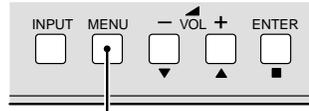


Press to return to previous menu screen.

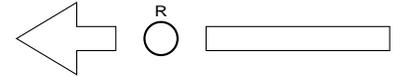


Press the R button to return to previous menu.


To SIGNAL screen for VIDEO (S VIDEO) (see page 32, 33)

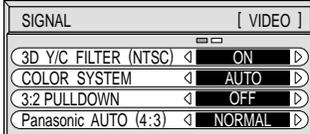

To SIGNAL screen for COMPONENT (see page 33)


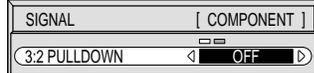


To SIGNAL screen for RGB and DVI (see page 34)

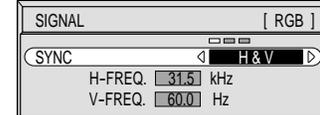



Note: "SIGNAL" setup menu displays a different setting condition for each input signal. (see page 13)

To setup SCREENSAVER (See page 25-27)

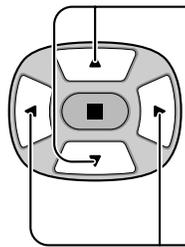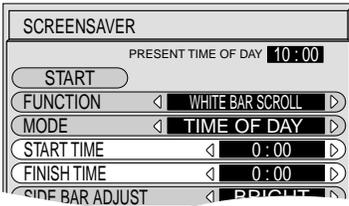


Press to select START TIME/ FINISH TIME (When TIME OF DAY is selected). Press to select SHOW DURATION/ SAVER DURATION (When INTERVAL is selected).


Press to set up.

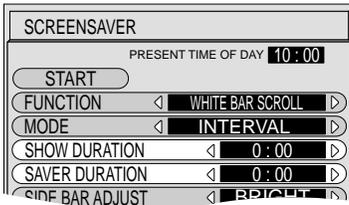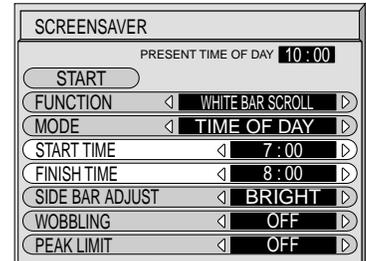


Press the R button to return to "SCREENSAVER" menu.

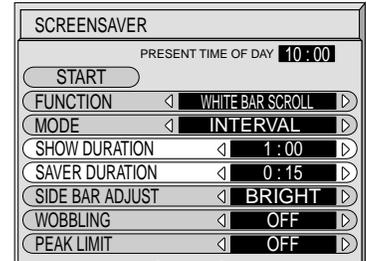


To setup MULTIDISPLAY screen. (See page 30)

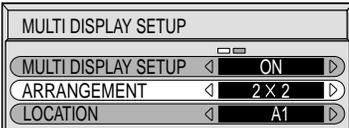


To SET UP TIMER selection screen. (see page 23, 24)

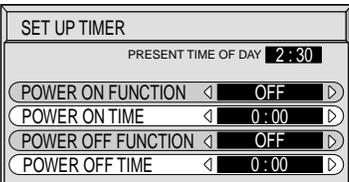



Press to select POWER ON TIME / POWER OFF TIME.

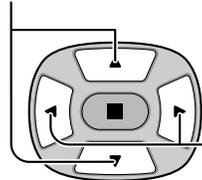


Press to set up POWER ON TIME/ POWER OFF TIME.

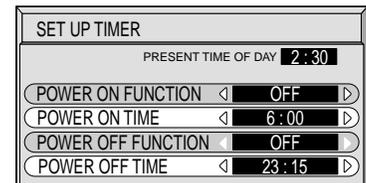

To PRESENT TIME SET UP. (see page 23)

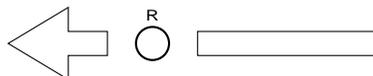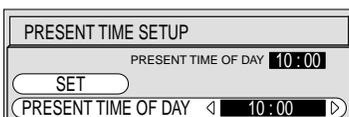


Press the R button to return to "SET UP TIMER" menu.

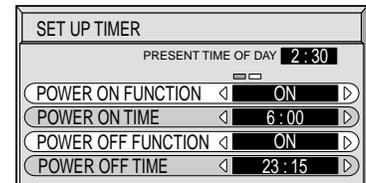


ASPECT Controls

The Plasma Display will allow you to enjoy viewing the picture at its maximum size, including wide screen cinema format picture.

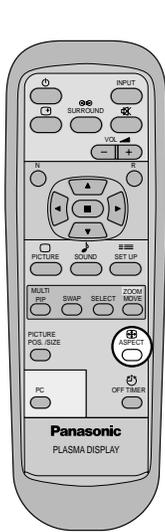


ASPECT button

The aspect mode changes each time the ASPECT button is pressed.

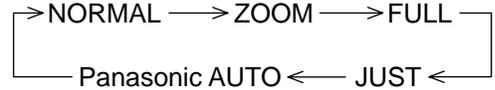

[from the unit]

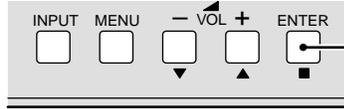

The aspect mode changes each time the ENTER button is pressed.

[During MULTI PIP Operations]

(1) Picture and Picture, Picture in Picture :



(2) Others :

Aspect switching is not possible.

Notes:

- (1) For PC signal input, the mode switches between "NORMAL", "ZOOM" and "FULL" only.
- (2) For a 1125 (1080) / 60i · 50i · 24p · 24sF, 1250 (1080) / 50i, 750 (720) / 60p · 50p signal input during "COMPONENT", "RGB" and "DVI" input signal mode, the mode is set to "FULL" mode, and switching is not possible.
Panasonic Auto can be selected only during Video signal input.
- (3) The aspect mode is memorized separately for each input terminal (INPUT1, INPUT2, INPUT3 and PC IN).

Mode	Picture	Explanation
NORMAL		NORMAL will display a 4:3 picture at its standard 4:3 size.
ZOOM		ZOOM mode magnifies the central section of the picture.
FULL		16:9 will display the picture at its maximum size but with slight elongation.
JUST		JUST mode will display a 4:3 picture at its maximum size but with aspect correction applied to the center of the screen so that elongation is only apparent at the left and right edges of the screen. The size of the picture will depend on the original signal.
Panasonic AUTO	 For an elongated image Image is expanded For a 4:3 image Changes in accordance with the Panasonic AUTO mode setting (see page 34).	The display will automatically become enlarged (depending on the picture source), allowing you to view the picture at its maximum size. Note: Panasonic AUTO mode is designed to automatically adjust the aspect ratio to handle a mix of 16:9 and 4:3 program material. Certain 4:3 program material, such as stock market data screens, may occasionally cause the image size to change unexpectedly. When viewing such programs, it is recommended that the ASPECT be set to NORMAL.

Note:

Do not allow the picture to be displayed in 4:3 mode for an extended period, as this can cause a permanent after-image to remain on the Plasma Display Panel.

Adjusting PICTURE POSITION/SIZE

Adjusting screen


1

PICTURE POS./SIZE




Press to display the PICTURE POS./SIZE menu.

2

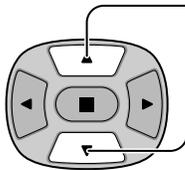


Press to select H-POS/H-SIZE/V-POS/V-SIZE/CLOCK PHASE.


During "VIDEO (S VIDEO)" and "COMPONENT" input signal.

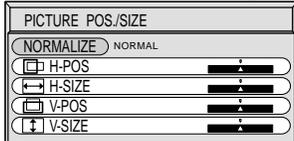

During "RGB" and "DVI" input signal.

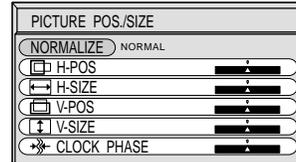


3

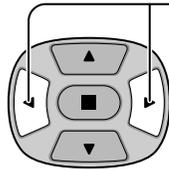

Press to adjust POS./SIZE.



Press to exit from adjust mode.

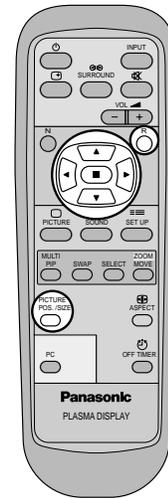

Notes:

- Adjustment details are memorized separately for different input signal formats (Adjustments for component signals are memorized for 525 (480) / 60i · 60p, 625 (575) / 50i · 50p, 1125 (1080) / 60i · 50i · 24p · 24sF, 1250 (1080) / 50i, 750 (720) / 60p · 50p each, and RGB/DVI signals are memorized for each frequency.)
- If a "Cue" or "Rew" signal from a VCR or DVD player is received, the picture position will shift up or down. This picture position movement cannot be controlled by the PICTURE POS./SIZE function.

H-POS	When the Position Left "◀" button is pressed 	When the Position Right "▶" button is pressed
H-SIZE	When the Position Left "◀" button is pressed 	When the Position Right "▶" button is pressed
V-POS	When the Position Left "◀" button is pressed 	When the Position Right "▶" button is pressed
V-SIZE	When the Position Left "◀" button is pressed 	When the Position Right "▶" button is pressed
CLOCK PHASE (RGB/PC in Mode)	Flickering and distortion can be eliminated by using the Position Left "◀" or Right "▶" button to carry out adjustment.	


Helpful Hint (/ Normalization)


While the PICTURE POS./SIZE display is active, if either the N button on the remote control is pressed at any time or the (ACTION button) is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

SOUND Adjustment

1  Press to display the Sound menu.

2 Select to adjust each item.

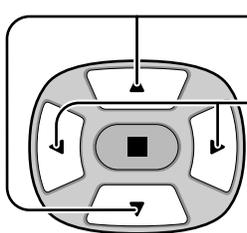 Press to select the desired adjustment menu.
Select the desired level by listening to the sound.

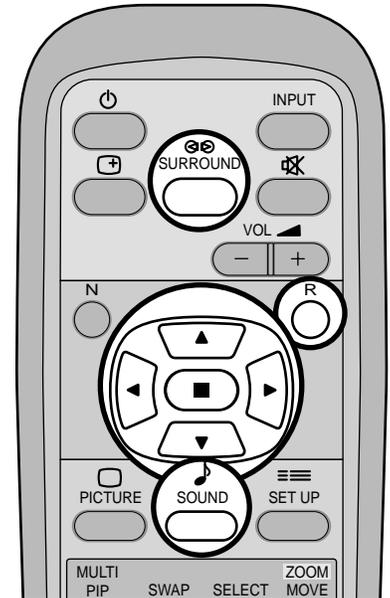


BASS
Adjusts low sounds

TREBLE
Adjusts high sounds

BALANCE
Adjusts left and right volumes

SURROUND
Select ON or OFF

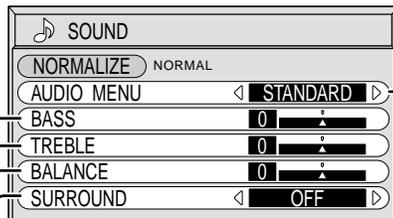

STANDARD Emits the original sound.

↕

AUTO Automatically controls proper volume level.

• To end adjustments

 Press the R button

Note:

Press the SURROUND button to directly turn the surround effect ON and OFF. (see page 15)
BASS, TREBLE and SURROUND settings are memorized separately for each SOUND mode (STANDARD, AUTO).

Helpful Hint (/ Normalization)

While the "SOUND" menu is displayed, if either the N button on the remote control is pressed at any time or the  (ACTION button) is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

MUTE


Useful when answering the phone or receiving visitors.



 Press this button to mute the sound.
Press again to reactivate sound. Sound is also reactivated when power is turned off or volume level is changed.


PICTURE Adjustments

1  Press to display the PICTURE menu.


2 Select to adjust each item.

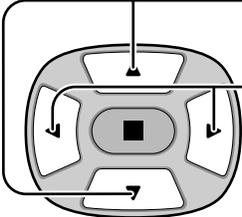 Press to select the menu to adjust.
Select the desired level by looking at the picture behind the menu.

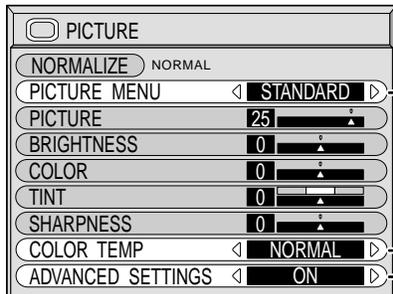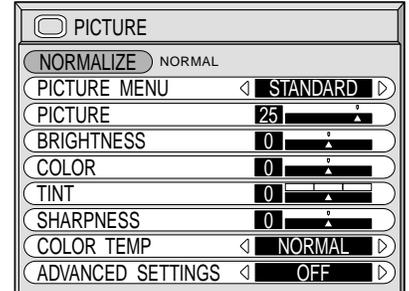

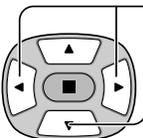
 Press to select "ON".
Press to enter Advanced Settings.

ADVANCED SETTINGS ON
Enables fine picture adjustment at a professional level (see next page).

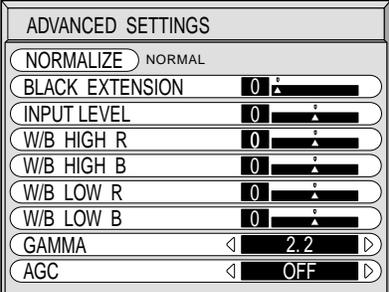

ADVANCED SETTINGS OFF
Displays images with settings of the PICTURE menu.

Press the left ◀ or right ▶ button to switch between modes.

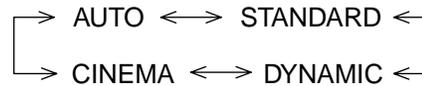

AUTO

Automatically selects the mode that best suits the brightness of the environment.

STANDARD

For viewing in standard (evening lighting) environments. This menu selects the normal levels of BRIGHTNESS and PICTURE.

DYNAMIC

For viewing in brighter environments. This menu selects higher than normal levels of BRIGHTNESS and PICTURE.


CINEMA

Ideal for movies.

Note:

If you would like to change the picture and color of the selected PICTURE menu to something else, adjust using the items in the PICTURE menu. (see next page)

Press the left ◀ or right ▶ button to switch between modes.

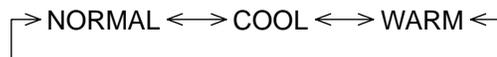

 **Helpful Hint** ( /  **Normalization**)

While the "PICTURE" menu is displayed, if either the N button on the remote control is pressed at any time or the  (ACTION button) is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

PICTURE Adjustments

Item	Effect	Adjustments
PICTURE	 Less More	Adjusts the proper picture contrast.
BRIGHTNESS	 Darker Brighter	Adjusts for easier viewing of dark pictures such as night scenes and black hair.
COLOR	 Less More	Adjusts color saturation.
TINT (NTSC only)	 Reddish Greenish	Adjust for natural flesh tones.
SHARPNESS	 Less More	Adjusts picture sharpness.

Notes:

- (1) "COLOR" and "TINT" settings cannot be adjusted for "RGB" and "DVI" input signal.
- (2) You can change the level of each function (PICTURE, BRIGHTNESS, COLOR, TINT, SHARPNESS) for each PICTURE menu.
- (3) The setting details for STANDARD, DYNAMIC and CINEMA respectively are memorized separately for each input mode (INPUT1, INPUT2, INPUT3 and PC IN).
- (4) The "TINT" setting can be adjusted for NTSC signal only during "VIDEO (S VIDEO)" input signal.

Note:

In PICTURE, there is not a noticeable change even when contrast is increased with a bright picture or reduced with a dark picture.

ADVANCED SETTINGS

Item	Effect	Details
BLACK EXTENSION	 Less More	Adjusts the dark shades of the image in gradation. (This cannot be adjusted when the input signal is RGB or DVI.)
INPUT LEVEL	 Less More	Adjustment of parts which are extremely bright and hard to see.
W/B HIGH R	 Less More	Adjusts the white balance for light red areas.
W/B HIGH B	 Less More	Adjusts the white balance for light blue areas.
W/B LOW R	 Less More	Adjusts the white balance for dark red areas.
W/B LOW B	 Less More	Adjusts the white balance for dark blue areas.
GAMMA	 Down Up	S CURVE \longleftrightarrow 2.0 \longleftrightarrow 2.2 \longleftrightarrow 2.5
AGC	 OFF ON	Increases the brightness of dark signal automatically.

Notes:

- (1) Carry out "W/B" adjustment as follows.
 - A** Adjust the white balance of the bright sections using the "W/B HIGH R" and "W/B HIGH B" settings.
 - B** Adjust the white balance of the dark sections using the "W/B LOW R" and "W/B LOW B" settings.
 - C** Repeat steps **A** and **B** to adjust.

Steps **A** and **B** affect each other's settings, so repeat each step in turn to make the adjustment.
- (2) The adjustment values are memorized separately for each input mode (INPUT1, INPUT2, INPUT3 and PC IN).
- (3) The adjustment range values should be used as an adjustment reference.
- (4) Input Level setting applies for Component and RGB signals only.


Helpful Hint ($\overset{N}{\circ}$ / NORMALIZE Normalization)


On the remote control unit, while the "ADVANCED SETTINGS" menu is displayed, if either the N button is pressed at any time or the (ACTION button) is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.



PRESENT TIME SETUP/SET UP TIMER

The timer can switch the Plasma Display ON or OFF.

Before attempting Timer Set, confirm the PRESENT TIME OF DAY and adjust if necessary. Then set POWER ON TIME/POWER OFF TIME.

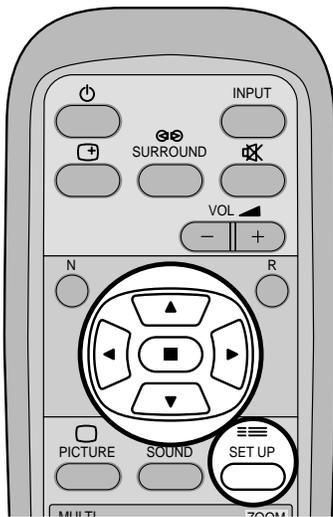

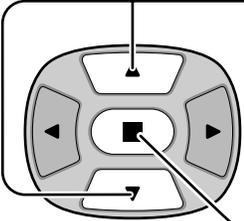
- 1  Press to display the SETUP menu screen.
- 2  Press to select SET UP TIMER or PRESENT TIME SETUP.
Press to display the SET UP TIMER screen or PRESENT TIME SETUP screen.

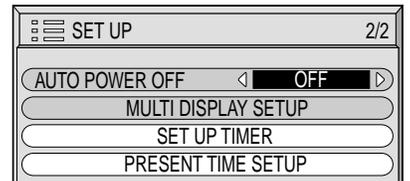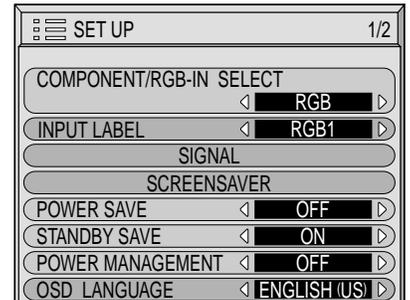


PRESENT TIME SETUP

Display the PRESENT TIME SETUP screen.


To set up PRESENT TIME, follow the procedure described below.

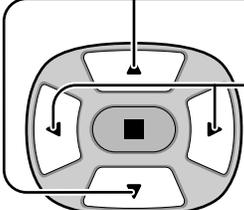
- 1  Press to select PRESENT TIME OF DAY.
Press to set up PRESENT TIME OF DAY.
▶ button: Forward
◀ button: Back

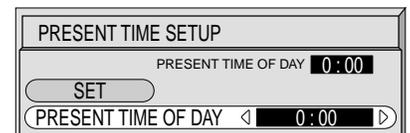

Notes:

- Pressing “◀” or “▶” button once changes PRESENT TIME OF DAY 1minute.
- Pressing “◀” or “▶” button continuously changes PRESENT TIME OF DAY by 15 minutes.

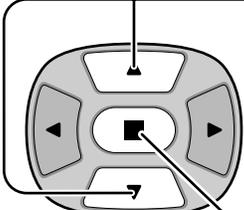- 2  Press to select Set.
Press to store PRESENT TIME SETUP.

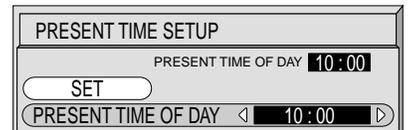

Note:


Set cannot be selected unless PRESENT TIME OF DAY is set.

-  Press to exit from PRESENT TIME SETUP.

SET UP TIMER

Display the SET UP TIMER SCREEN.


1

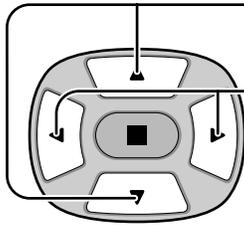

Press to select
POWER ON TIME/POWER OFF TIME.

Press to set up POWER ON TIME/
POWER OFF TIME.


- ▶ button: Forward
- ◀ button: Back

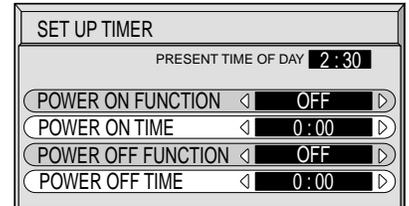

Notes:


- Pressing “◀” or “▶” button once changes POWER ON TIME / POWER OFF TIME 1minute.
- Pressing “◀” or “▶” button continuously changes POWER ON TIME / POWER OFF TIME by 15 minutes.

2

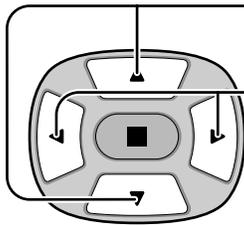

Press to select POWER ON FUNCTION/
POWER OFF FUNCTION.

Press to select ON.

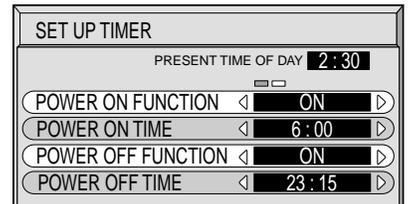

3



Press twice to exit from SETUP.


Note:


Timer function will not work unless “PRESENT TIME OF DAY” is set.

SCREENSAVER (For preventing after-images)


Do not display a still picture, especially in 4:3 mode, for any length of time.
If the display must remain on, a SCREENSAVER should be used.


1  Press to display the SETUP menu screen.

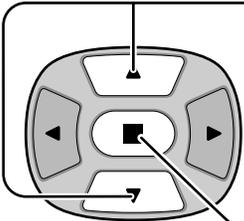2  Press to select the SCREENSAVER.
Press to select the SCREENSAVER screen.

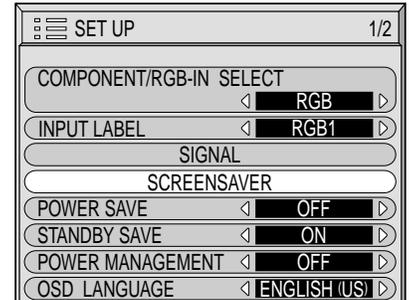


NEGATIVE / SCROLL selection

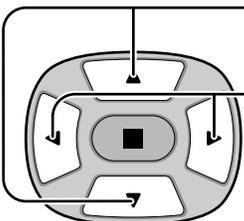3  Press to select the FUNCTION.
Press to select the desired function.
WHITE BAR SCROLL ←→ NEGATIVE

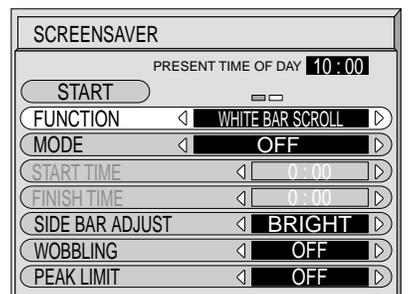


WHITE BAR SCROLL : A white bar will scroll from left to right.
NEGATIVE : A negative image will be displayed on the screen.


MODE selection

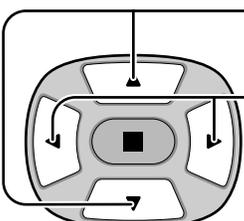
4  Press to select the MODE.
Press to select each mode items.

OFF
↕
INTERVAL : Operates when SHOW DURATION and SAVER DURATION are set up and those times arrive.
↕
TIME OF DAY : Operates when START TIME and FINISH TIME are set up and those times arrive.
↕
ON : Operates when START is selected and the  (ACTION) is pressed.

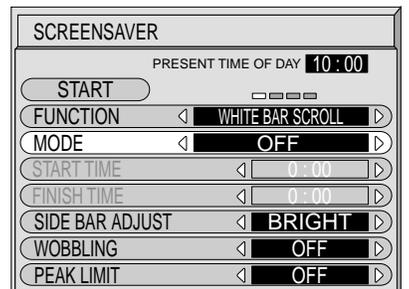

START setting

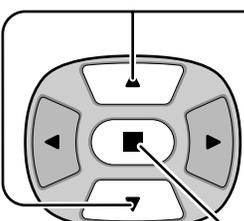5  When the Mode is set to ON, press to select START.
Press to start SCREENSAVER.




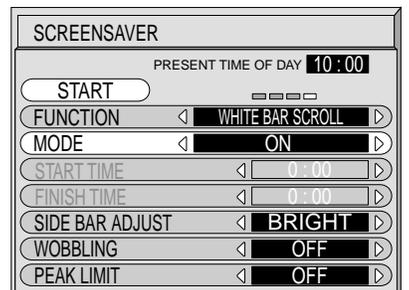


The menu screen will disappear and the SCREENSAVER will be activated. To stop the SCREENSAVER under ON, press the  button.

SCREENSAVER (For preventing after-images)

Setup of SCREENSAVER Time

After selecting TIME OF DAY or INTERVAL, the relevant SET UP TIME will become available for selection and the OPERATING TIME may be set. (Time cannot be set when "MODE" is "ON" or "OFF.")

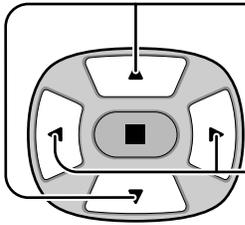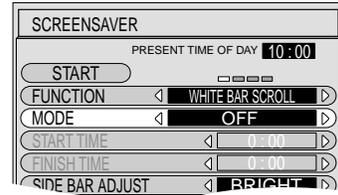
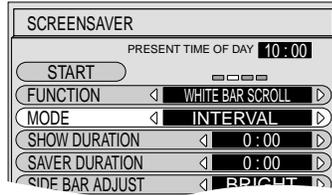
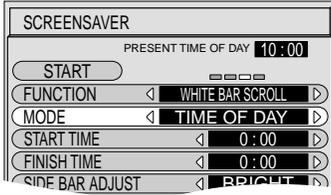


Press to select START TIME/ FINISH TIME
(When TIME OF DAY is selected).
Press to select SHOW DURATION/ SAVER
DURATION (When INTERVAL is selected).

Press to set up.
▶ button: Forward
◀ button: Back

Notes:

- Pressing "◀" or "▶" button once changes the TIME 1minute.
[However, switching occurs every 15 minutes when Periodic Time is selected.]
- Pressing "◀" or "▶" button continuously changes the TIME by 15 minutes.

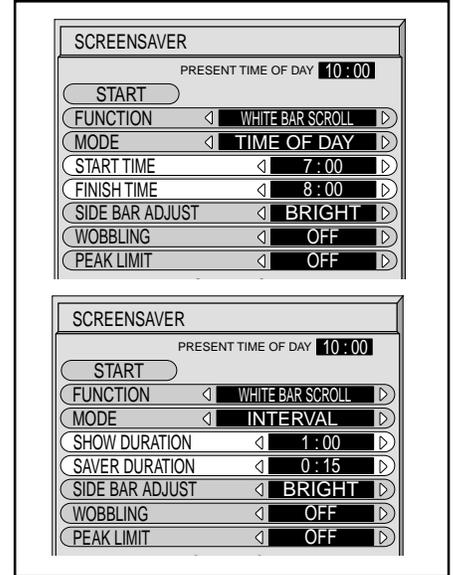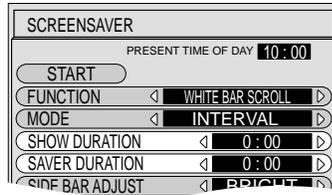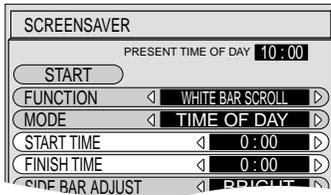

Note: Timer function will not work unless "PRESENT TIME OF DAY" is set.

Reduces screen after-image

These functions prevent the occurrence of an "after image" on the display when turned ON.

WOBBLING : Automatically shifts the display image at a dot level pitch (therefore unnoticeable to the eye) over time to prevent after image of sharper contour of image.

PEAK LIMIT : Suppresses image contrast (peak brightness).


1



SET UP


Press to display the SET UP menu screen.

2

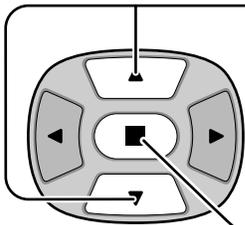

Press to select "SCREENSAVER".



3

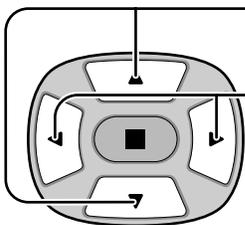

Press to display SCREENSAVER menu.

Press to select "WOBBLING" or "PEAK LIMIT".


Press to select "ON" or "OFF".

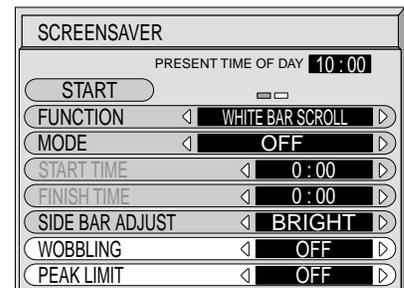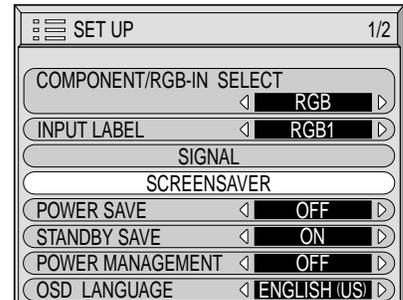


SIDE BAR ADJUST

Do not display a picture in 4:3 mode for an extended period, as this can cause an after-image to remain on the side bars on either side of the display field.

To prevent the appearance of such an after-image, change the brightness of the side bars.

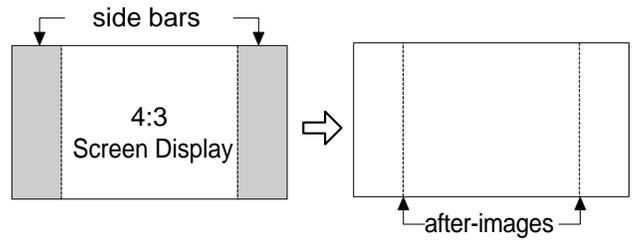


This function may be applicable to the non-picture area.

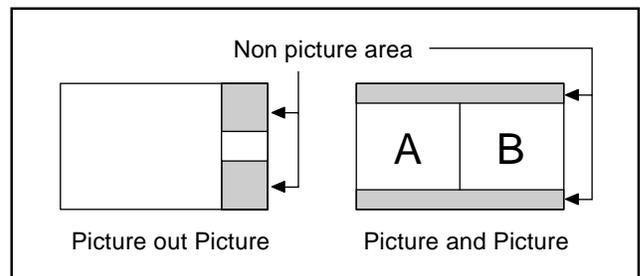


1 To display the SCREENSAVER screen.
(Refer to the previous page, operation guide steps 1 and 2)

2 Press to select the SIDE BAR ADJUST.
Press to select OFF, DARK, MID, BRIGHT.

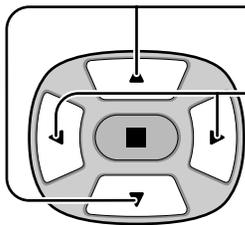

OFF ↔ DARK ↔ MID ↔ BRIGHT

3  Press to exit from SCREENSAVER.

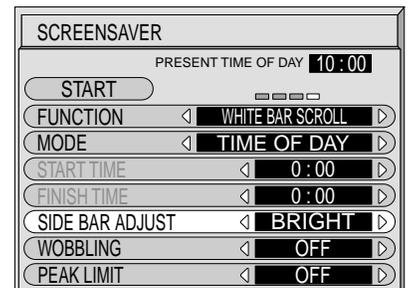


Notes:

- Setting the side bar to bright mode for an extended period may result in occurrence of after-images.
- The side bar may flash (alternate black/white) depending on the picture being shown on the screen. In such an occurrence, use the Cinema mode.

Digital Zoom



This displays an enlargement of the designated part of the displayed image.

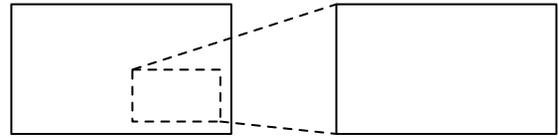

1 Display the "Operation Guide".




ZOOM MOVE
 Press to access Digital Zoom.

The "Operation Guide" will be displayed.

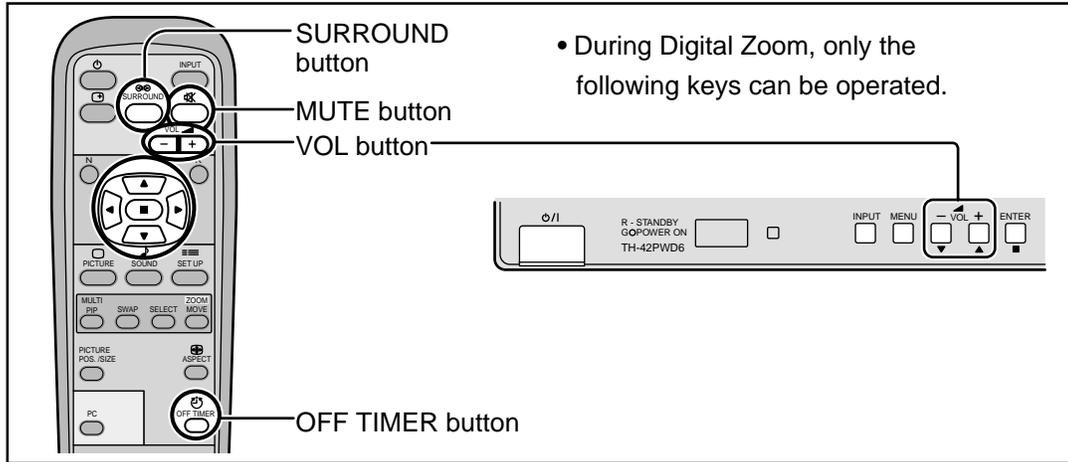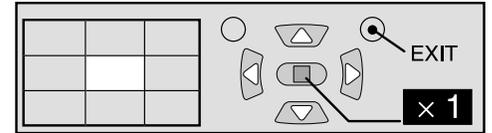



2 Select the area of the image to be enlarged.

Press on the enlargement location to select.
 The cursor will move.

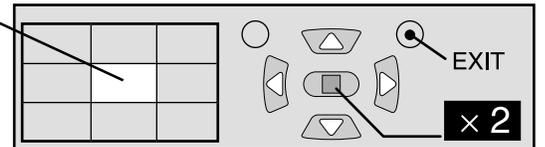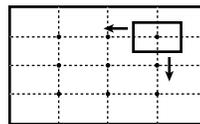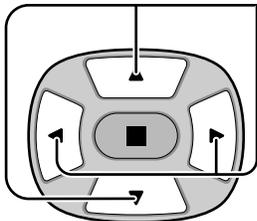

3 Select the magnification required for the enlarged display.

Each time this is pressed, the magnification factor changes. This is shown in the image being displayed.

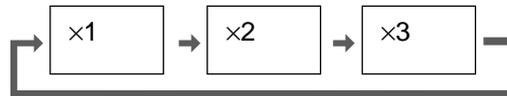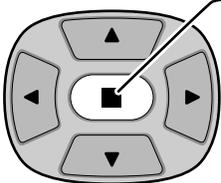

4 Return to normal display (quit Digital Zoom).





R
 Press to exit from the Digital Zoom.

Notes:

- (1) When power goes OFF (including "Off Timer" operation), Digital Zoom terminates.
- (2) The Digital Zoom function cannot be selected while in the following operation states:
 - "Multi-screen" (MULTI DISPLAY).(see page 30)
 - "Multi-viewer" (Picture in Picture, Picture out Picture, Picture and Picture) operation. (see page 14)
- (3) While Digital Zoom is in operation, "Adjusting Picture Pos./Size" cannot be used.
- (4) For RGB input signals, normal multi-display magnification is only available at the VGA, SVGA and XGA resolution.
- (5) The Digital Zoom capability is functional for the following component signals:
 525 (480) / 60i · 60p, 625 (575) / 50i · 50p, 1125 (1080) / 60i · 50i · 24sF, 750 (720) / 60p · 50p, 1250 (1080) / 50i
- (6) The Digital Zoom capability is functional for the following composite signals:
 NTSC, PAL, SECAM

Reduces power consumption

- **POWER SAVE:** When this function is turned ON, luminous level of the plasma display is suppressed, so power consumption is reduced.
- **STANDBY SAVE:** When this function is turned ON, power consumption of the microcomputer is reduced during power supply standby (see page 12,14,15), so standby power of the set is reduced.
- **POWER MANAGEMENT:** The unit power supply is turned ON or OFF depending on whether or not there is a signal during PC input mode. This function is enabled when it is turned ON. (Only during input from PC(Mini D-sub) terminal)
- **AUTO POWER OFF:** Equipment power supply is turned OFF when there is no signal. When this is set to On, the power supply of the unit goes Off 10 minutes after the input signals stop. This function is effective for input signals except input from PC (Mini D-sub) terminal.

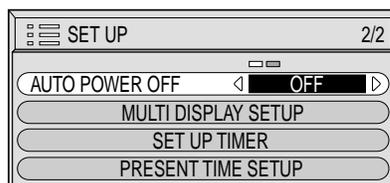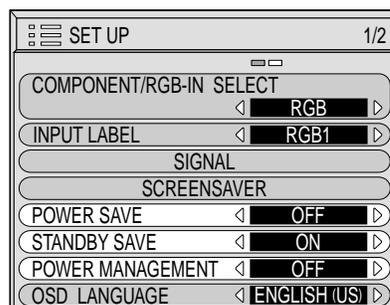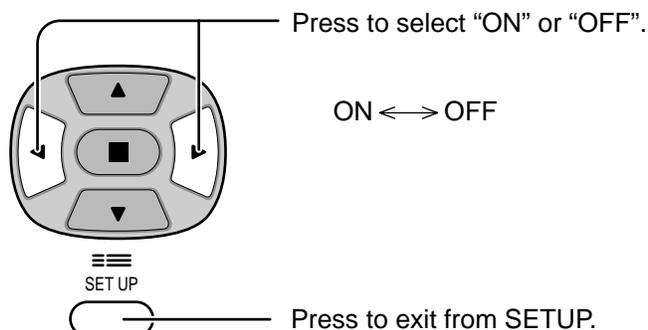
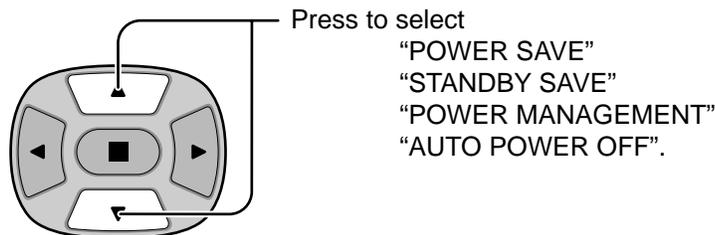


Note:

"POWER MANAGEMENT" and "AUTO POWER OFF" are effective during normal viewing (one picture screen) only.

Customizing the Input labels

This function can change the label of the Input signal to be displayed.

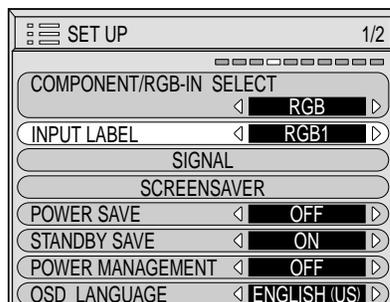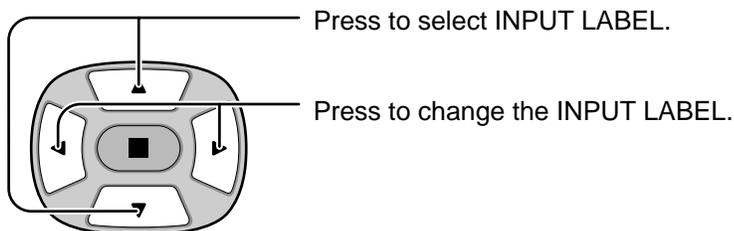

Notes:

While selecting a Input signal through Optional Terminal Board connected to Slot 1 to Slot 3, the Input label will depend on each Optional Terminal Board.

INPUT LABELS for Slot 1 to Slot 3 and miniD-sub:

- [Slot1 Input] INPUT1/VIDEO1/COMPONENT1/RGB1/RGB1(digital)/PC1/DVD1/CATV1/VCR1/STB1
- [Slot2 Input] INPUT2/VIDEO2/COMPONENT2/RGB2/RGB2(digital)/PC2/DVD2/CATV2/VCR2/STB2
- [Slot3 Input] INPUT3/VIDEO3/COMPONENT3/RGB3/PC3/DVD3/CATV3/VCR3/STB3
- [PC (MiniD-sub) input] PC/COMPONENT/RGB/DVD/STB

SET UP for MULTI DISPLAY

- ① By lining up Plasma Displays in groups of 4 or 9 as illustrated below, an enlarged picture may be displayed across all screens.
- ② For this mode of operation, each plasma display has to be set up with a DISPLAY number to determine its location.


group of 4 (2x2)



group of 9 (3x3)



How to setup MULTI DISPLAY

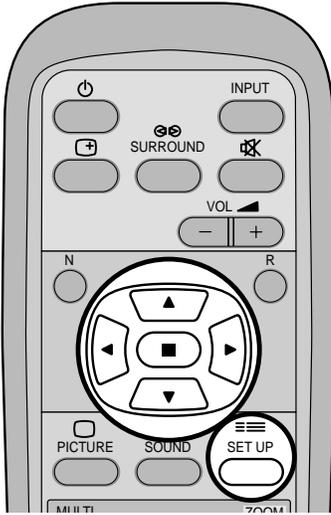


1




Press to display the SETUP menu screen.

2

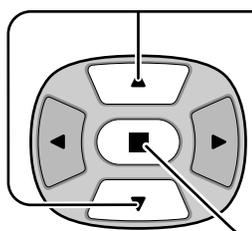




Press to select the MULTI DISPLAY SETUP.

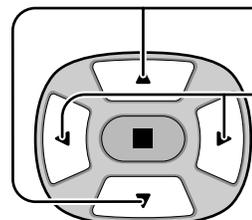

Press to display the "MULTI DISPLAY SETUP" menu.


Press to select the MULTI DISPLAY SETUP.

Press to select "ON" or "OFF".

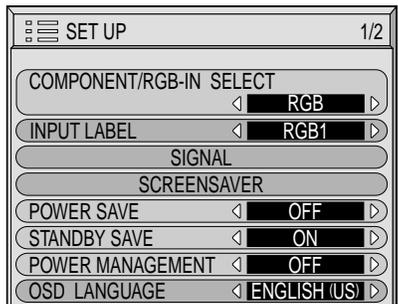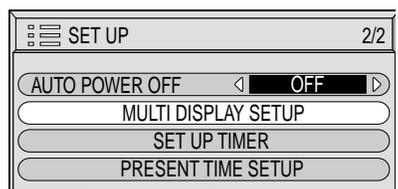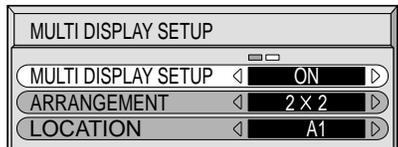
How to set the Display location number for each Plasma Display

4

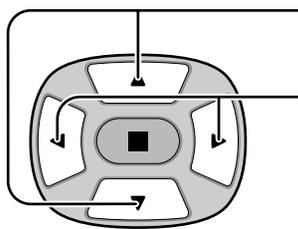


Press to select ARRANGEMENT (2nd step).

Press to select "2x2", "3x3".

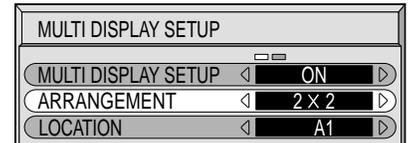


5

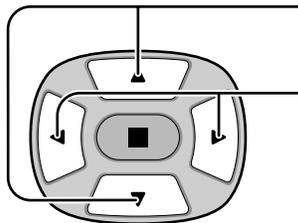

Press to select LOCATION.

Press to select the required arrangement number. (A1-C3 : Refer to the following)

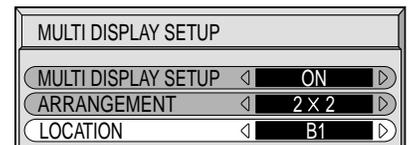

DISPLAY NUMBER locations for each arrangement.

(2x2)

A1	A2
B1	B2

(3x3)

A1	A2	A3
B1	B2	B3
C1	C2	C3

6



Press twice to exit from SETUP.

Notes:

- (1) For RGB input signals, normal multi-display magnification is only available at the VGA, SVGA and XGA resolution.
- (2) The multi-display capability is functional for the following component signals:
525 (480) / 60i · 60p, 625 (575) / 50i · 50p, 1125 (1080) / 60i · 50i · 24sF, 750 (720) / 60p · 50p, 1250 (1080) / 50i
- (3) The multi-display capability is functional for the following composite signals:
NTSC, PAL, SECAM

SET UP for Input Signals

COMPONENT/RGB IN SELECT


Select the input signals to be connected by installing the Optional Terminal Board.

(Refer to the Operating Instructions for the optional Terminal Board.)

Select to match the signals from the source connected to the COMPONENT/RGB input terminals.


Y, P_B, P_R signals ⇒ "COMPONENT"

R, G, B, HD, VD signals ⇒ "RGB"

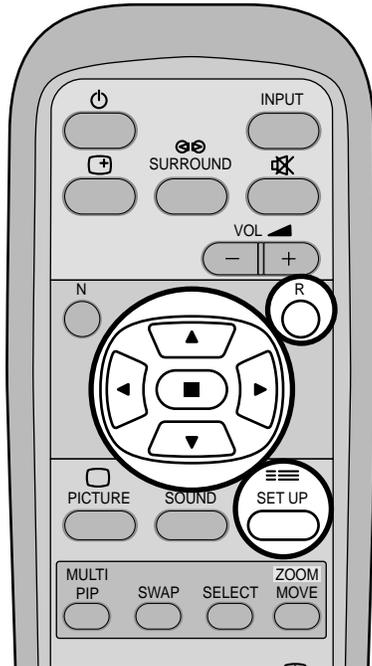

1 Press to display the SET UP menu screen.

2 Press to select the "COMPONENT/RGB IN SELECT".
 Press to select the desired mode.

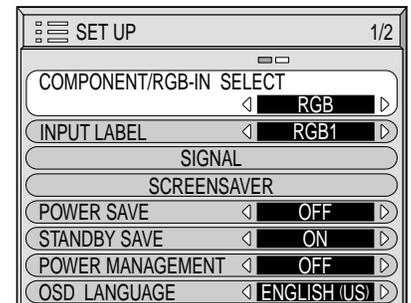

Press to exit from adjust mode.

Note:

Selection may not be possible, depending on which optional board is installed.

3D Y/C FILTER – For NTSC Video images


Select "SIGNAL" from the "SET UP" menu during VIDEO (S VIDEO) input signal mode.

("SIGNAL [VIDEO]" menu is displayed.)


Press to select the "3D Y/C FILTER (NTSC)".

Press to set ON/OFF.

Press to exit from adjust mode.

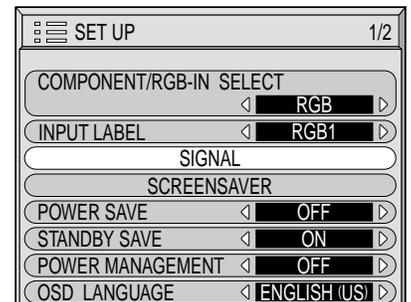

↓ Press (ACTION) button

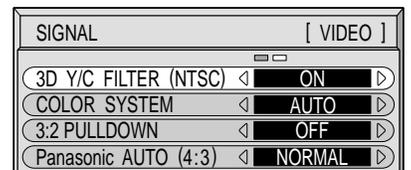


Note:

When ON, this setting only affects NTSC input signals.

COLOR SYSTEM / Panasonic AUTO


Select SIGNAL from the "SET UP" menu during VIDEO (S VIDEO) input signal mode. ("SIGNAL [VIDEO]" menu is displayed.)

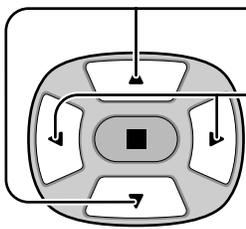


Press to select the "COLOR SYSTEM" or "Panasonic AUTO".
Press to select each function.

If the image becomes unstable:

With the system set on Auto, under conditions of low level or noisy input signals the image may in rare cases become unstable. Should this occur, set the system to match the format of the input signal.

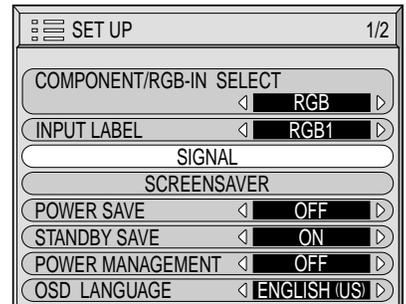

Press (ACTION) button

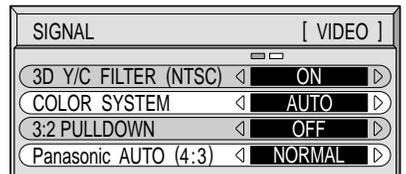


Mode	Function
COLOR SYSTEM	Set the color system to match the input signal. If set to "AUTO", the color system is determined automatically. <div style="border: 1px solid black; padding: 5px; display: inline-block;"> > AUTO <> PAL <> SECAM <> M.NTSC <> NTSC < </div>
Panasonic AUTO (4:3)	Set to "NORMAL" to view 4:3 images in an unchanged format when Panasonic AUTO is selected. If you would like to view 4:3 images in Just format, set to "JUST".

3:2 PULLDOWN

When ON, the display attempts to reproduce a more natural interpretation of sources such as movie pictures, which are recorded at 24 frames per second.

If the picture is not stable, turn the setting to OFF.

Select "SIGNAL" from the "SET UP" menu during VIDEO (S VIDEO) or COMPONENT input signal. ("SIGNAL [VIDEO]" or "SIGNAL [COMPONENT]" menu is displayed.)

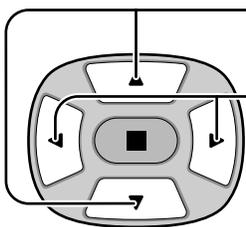

Press to select 3:2 PULLDOWN.
Press to set ON/OFF.




Press to exit from adjust mode.



Note:

When ON, this setting only affects the following signal input:

- NTSC / PAL signal input during "VIDEO (S VIDEO)" input signal.
- 525i(480i) signal input during "COMPONENT" input signal.

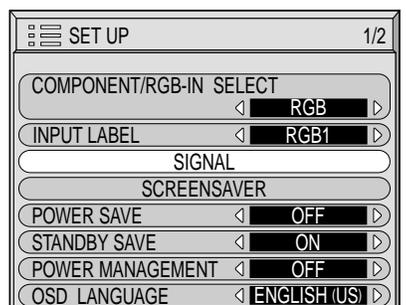




Press (ACTION) button

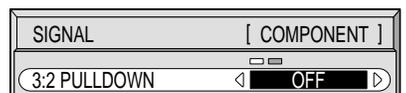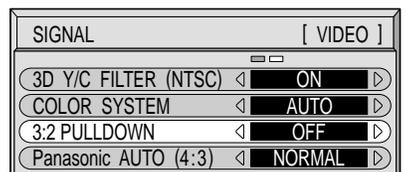


SET UP for Input Signals

SYNC

Select SIGNAL from the "SET UP" menu during RGB input signal.

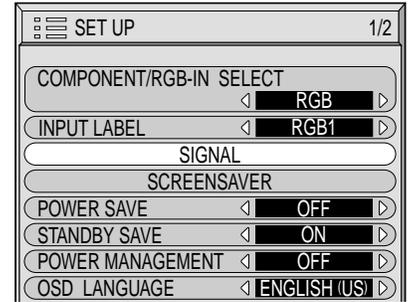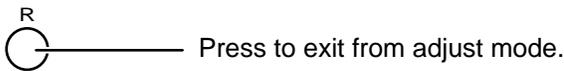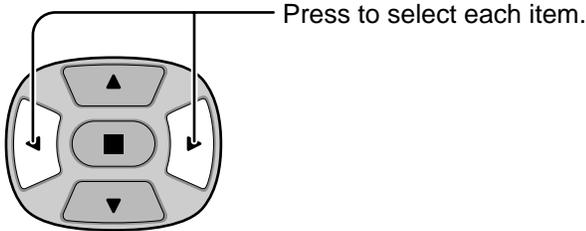

↓ Press  (ACTION) button

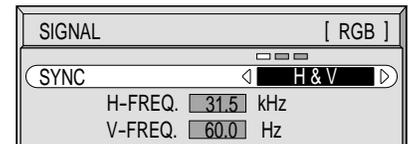


Note:

Sync cannot be adjusted while a DVI signal is being applied.

Setting RGB sync signal

Confirm that the input is set to RGB INPUT (this setting is valid only for RGB INPUT signal).

- H & V:** The H and V sync signals are input from the HD/VD connector.
- ON G:** Uses a synchronized signal on the Video G signal, which is input from the G connector.
- CS:** Uses a synchronized signal of Composite Sync input.

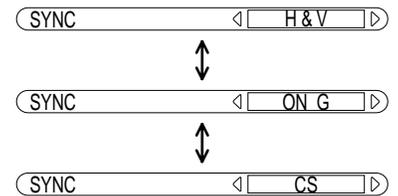


H-FREQ. (kHz)/V-FREQ. (Hz)

Displays the H (Horizontal)/V (Vertical) frequencies.

This display is valid only for RGB input and DVI input signal.





Display range:

- Horizontal 15 - 110 kHz
- Vertical 48 - 120 Hz

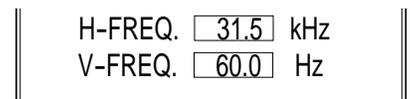

Troubleshooting

Before you call for service, determine the symptoms and make a few simple checks as shown below.

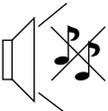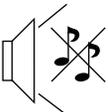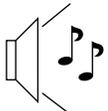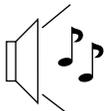Symptoms		Checks
Picture	Sound	
 Interference	 Noisy Sound	Electrical Appliances Cars/Motorcycles Fluorescent light
 Normal Picture	 No Sound	Volume (Check whether the mute function has been activated on the remote control.)
 No Picture	 No Sound	Not plugged into AC outlet Not switched on PICTURE and BRIGHTNESS/Volume setting (Check by pressing the power switch or stand-by button on the remote control.)
 No Picture	 Normal Sound	If a signal with a non-applicable color system format, or frequency is input, only the input terminal indication is displayed.
 No Color	 Normal Sound	Color controls set at minimum level. (see page 21, 22) COLOR SYSTEM (see page 33)

This Plasma Display uses special image processing. Hence a slight time lag may occur between image and audio, depending on the type of input signal. However, this is not a malfunction.

Plasma Display panel

Symptoms	Check
Some parts of the screen do not light up.	The plasma display panel is manufactured using an extremely high level of precision technology, however, sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a malfunction.
 After-images appear	Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the Plasma Display. Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode. Note: The permanent after-image on the Plasma Display resulting from fixed image use is not an operating defect and as such is not covered by the Warranty. This product is not designed to display fixed images for extended periods of time.



Input signal can be displayed

Applicable input signals for PC Input (D-sub 15P) (* Mark)

	Signal name	Horizontal frequency(kHz)	Vertical frequency(Hz)	COMPONENT	PC	When Multi Screen and Digital Zoom
1	525 (480) /60i	15.73	59.94	*	*	*
2	525 (480) /60p	31.47	59.94	*	*	*
3	625 (575) /50i	15.63	50.00	*	*	*
4	625 (575) /50p	31.25	50.00	*	*	*
5	750 (720) /60p	45.00	60.00	*	*	*
6	750 (720) /50p	37.50	50.00	*	*	*
7	1,125 (1,080) /60i	33.75	59.94	*	*	*
8	1,125 (1,080) /50i	28.13	50.00	*	*	*
9	1,125 (1,080) /24p	27.00	24.00	*	*	
10	1,125 (1,080) /24sF	27.00	48.00	*	*	*
11	1,250 (1,080) /50i	31.25	50.00	*	*	*
12	640 × 400 @70	31.47	70.00		*	*
13	640 × 480 @60	31.47	59.94		*	*
14	Macintosh13" (640 × 480)	35.00	66.67		*	*
15	640 × 480 @75	37.50	75.00		*	*
16	852 × 480 @60	31.50	60.00		*	*
17	800 × 600 @60	37.88	60.32		*	*
18	800 × 600 @75	46.88	75.00		*	*
19	800 × 600 @85	53.67	85.06		*	*
20	Macintosh16" (832 × 624)	49.73	74.55		*	*
21	1,024 × 768 @60	48.36	60.00		*	*
22	1,024 × 768 @70	56.48	70.07		*	*
23	1,024 × 768 @75	60.02	75.03		*	*
24	1,024 × 768 @85	68.68	85.00		*	*
25	Macintosh21" (1,152 × 870)	68.68	75.06		*	
26	1,280 × 1,024 @60	63.98	60.02		*	
27	1,280 × 1,024 @75	79.98	75.03		*	
28	1,280 × 1,024 @85	91.15	85.02		*	
29	1,600 × 1,200 @60	75.00	60.00		*	
30	1,067 × 600 @60	37.88	60.32		*	*
31	1,366 × 768 @60	48.36	60.00		*	*

Note: Signals without above specification may not be displayed properly.

Specifications

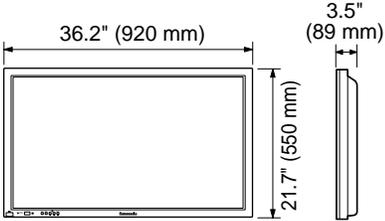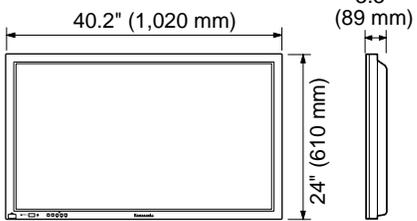	TH-37PWD6UX	TH-42PWD6UX
Power Source	120 V AC, 50/60 Hz	
Power Consumption Maximum Stand-by condition Power off condition	325 W Save OFF 1.5W, Save ON 0.6W 0.4 W	395 W Save OFF 1.5W, Save ON 0.6W 0.4 W
Plasma Display panel Contrast Ratio	Drive method : AC type 37-inch, 16:9 aspect ratio 4000:1	Drive method : AC type 42-inch, 16:9 aspect ratio 4000:1
Screen size (No.of pixels)	818 mm (W) × 461 mm (H), 939 mm (diagonal) 408,960 (852 (W) × 480 (H)) [2,556 × 480 dots]	920 mm (W) × 518 mm (H), 1,056 mm (diagonal) 408,960 (852 (W) × 480 (H)) [2,556 × 480 dots]
Operating condition Temperature Humidity	32 °F - 104 °F (0 °C - 40 °C) 20 % - 80 %	
Applicable signals Color System Scanning format PC signals	NTSC, PAL, PAL60, SECAM, Modified NTSC with TY-42TM6H 525 (480) / 60i · 60p, 625 (575) / 50i · 50p, 750 (720) / 60p · 50p, 1125 (1080) / 60i · 50i · 24p · 24sF SMPTE274M, 1250 (1080) / 50i VGA display VGA SVGA, XGA, SXGA, UXGA..... (compressed) Horizontal scanning frequency 15 - 110 kHz Vertical scanning frequency 48 - 120 Hz	
Connection terminals PC SERIAL SPEAKERS (6 Ω)	(HIGH-DENSITY D-SUB 15PIN) R,G,B/0.7 Vp-p (75-ohm) Component Y : 1.0 Vp-p (75-ohm : include sync) P _B /C _B : ± 0.35 Vp-p (75-ohm) P _R /C _R : ± 0.35 Vp-p (75-ohm) HD, VD/1.0 - 5.0 Vp-p (high impedance) AUDIO IN (M3 JACK) 0.5 Vrms (high impedance) EXTERNAL CONTROL TERMINAL (D-SUB 9PIN) RS-232C COMPATIBLE 16W [8 W + 8 W] (10 % THD)	
Accessories Supplied Remote Control Transmitter Batteries Fixing bands Ferrite core	EUR646529 2 × AA Size (TMME203 or TMME 187) × 2 J0KF00000018 × 1, J0KG00000054 × 2	
Dimensions (W × H × D)	36.2" (920 mm) × 21.7" (550 mm) × 3.5" (89 mm) 	40.2" (1,020 mm) × 24" (610 mm) × 3.5" (89 mm) 
Mass (Weight)	approx. 53.1 lbs (main unit only) approx. 62.4 lbs (with speakers)	approx. 63.7 lbs (main unit only) approx. 73.0 lbs (with speakers)

Note:

Design and specifications are subject to change without notice. Mass and dimensions shown are approximate.

Panasonic Consumer Electronics Company
Division of Matsushita Electric Corporation of America
Hospitality Sales Group
One Panasonic Way, 4A-4
Secaucus, NJ 07094

Panasonic Commercial Plasma Display Limited Warranty

Panasonic Consumer Electronics Company ("the Warrantor") will repair this product with new or rebuilt parts, free of charge, in the USA, in the event of defects in material or workmanship as follows (all time periods commence from the date of the original purchase):

Labor: On-site or Carry-in repair (at the option of the purchaser) for a period of 12 months.

Parts : New or rebuilt parts in exchange for defective parts for a period of 12 months.

On-site service requires that the servicer be given clear, complete and easy access to the product. Providing this access is the responsibility of the purchaser. On-site service does not include removal or re-installation of an installed product. It is possible that certain on-site repairs will not be completed on-site, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

Panasonic Authorized Servicers shall not be responsible under this Limited Warranty or otherwise for any loss of information contained in user-programmable integrated circuits.

On-Site or Carry-In Service

On-site or Carry-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Authorized Servicer. To locate a Panasonic Authorized Servicer call toll-free 1-800-211-PANA (1-800-211-7262).

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase will be required before warranty service is rendered.

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images resulting from viewing fixed images (including, among other things, non-expanded standard 4:3 pictures, or onscreen data in a stationary and fixed location). The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, service by anyone other than an Authorized Servicer, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE. THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF GOODWILL, PROFITS OR REVENUE, LOSS OF USE OF THIS PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF SUBSTITUTE PRODUCT, DOWNTIME COST, OR CLAIMS OF ANY PARTY DEALING WITH BUYER FOR SUCH DAMAGES, RESULTING FROM THE USE OF THIS PRODUCT OR ARISING FROM BREACH OF WARRANTY OR CONTRACT, NEGLIGENCE OR ANY OTHER LEGAL THEORY. EXCEPT AS EXPRESSLY PROVIDED ABOVE, THERE IS NO WARRANTY OR GUARANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF ANY OTHER KIND, EXPRESS OR IMPLIED. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Panasonic Authorized Servicer. If the problem is not handled to your satisfaction, then write to Panasonic Consumer Electronics Company at the address indicated above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COST OF SUCH SERVICE CALLS SHALL BE THE RESPONSIBILITY OF THE ENTITY WHICH REQUESTED THE SERVICE CALL.

Customer's Record

The model number and serial number of this product can be found on its back cover. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number _____

Serial Number _____

Matsushita Electric Industrial Co., Ltd.