
Replacement Rotors

Replacing your BladeRunner rotors is easy. Follow these instructions and you will be back in the air in no time!

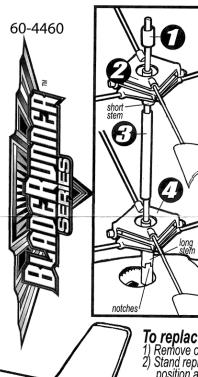

Rotor parts

- 1. Stopper. (clear plastic)
- 2. Top Rotor. (short stem) 3. Spacer.
- 4. Base Rotor. (long stem with notch)

Instructions

Insert the base rotor stem down onto the motor mount. (line up the half circles inside the tube). Slide down till the notches interlock.

Slide down the spacer. Next slide down the top rotor. Now, holding the bottom of the helicopter slide the stopper down to meet the top spacing tube. Squeeze all components together.

Keep instructions for future reference.

To replace the tail fin:
1) Remove old fin completely
2) Stand replacement fin vertically in the same position as the original fin
3) Wrap Mylar around the tail-boom and adhere to new tail fin as shown

Contact us: www.interactivetoy.com or call: 1-866-214-2220

Limited 90-day warranty
This product is warranted by interactive Toy Concepts Ltd. against manufacturing
defects in material and workmanship under normal use for
ninety (90) days from the date of purchase.