

= 使用上の制限について 🗕

本製品は、一般機器での使用を前提に、開発・設計・製造されております。 とくに、下記のような安全性が必要とされる用途に使用する場合は、フェールセー フ設計、冗長設計 および 定期点検の実施など、システム・機器全体の安全に配慮 していただいた上でご使用ください。 ・人体保護を目的とした安全装置 ・輸送機器の直接制御(走行停止など) ・航空機 ・宇宙機器 ・原子力機器 など 本製品の働きが直接人命に関る用途には使用しないでください。



お願い

この取扱説明書は、本製品をお使いになる担当者のお手元に確実に届 くようお取りはからいください。

この取扱説明書の全部、または一部を無断で複写、または転載することを禁じます。この取扱説明書の内容を将来予告なしに変更すること があります。

この取扱説明書の内容については、万全を期しておりますが、万一ご 不審な点や記入もれなどがありましたら、当社までお申し出ください。

お客様が運用された結果につきましては、責任を負いかねる場合がご ざいますので、ご了承ください。

©2000 Yamatake Corporation ALL RIGHTS RESERVED

# 確認してください

お買上げいただいたSLP-C4Aは、次のように構成されています。 商品の開梱時に次の点について確認してください。

1. ご注文の商品に間違いがないか、形番をチェックする

2. 商品に破損がないかどうか、外観をチェックする

3. 付属品が規定どおりあるか、チェックする

付属品は、次のとおりです。

開梱後は、付属品を紛失したり破損したりしないように、十分注意して取り扱ってください。

万一、異常や間違いがあった場合は、直ちにお買上げの販売店までご連絡ください。

品名	形番	数量	備考
システムディスク	SLP-C4AJ20	1	フロッピーディスク 3.5型 1.44Mバイト
専用ケーブルー式	—	1	
取扱説明書	CP-UM-5175JE	1	本書です
お客様登録カード		1	お客様登録カードに必要事 項を記入し、直ちにご返送 ください 登録をすると、バージョン アップのお知らせや問い合 わせに対するサポートが受 けられます

# この取扱説明書の位置づけ

SDC40A関連の取扱説明書は全部で4冊あります。用途に応じて必要な取扱説明書をお読みください。 必要な取扱説明書がお手元にないときは当社、または販売特約店の担当者にお申し付けください。



# この取扱説明書の構成

この取扱説明書は、次のように構成されています。

第1章 ご使用の前に

本ソフトウエアをお使いになる前に一通りお読みください。 動作に必要なパソコンなどの環境、機能の概要を説明しています。

第2章 インストール方法と基本機能

本ソフトウエアのインストール方法、起動・終了方法、機能、画面構成な ど基本動作について説明しています。

第3章 操作 本ソフトウエアを使用するために必要なローダの操作について説明しています。

**第4章 トラブルシューティング** 本ソフトウエア使用時のトラブル時の対策について説明しています。

# この取扱説明書の表記について

この取扱説明書の表記は、次のようにしています。

**! 取扱い上の注意**:取り扱い上、注意していただきたい事柄を示しています。

- 🏢 参考 :知っていただくと便利な事柄を示しています。
- :参照していただきたい項目およびページを示しています。

①②③ :操作の手順、または図などの説明のため対応する部分を示しています。

- [OK]ボタン : パソコン画面の選択ボタンを示しています。
- [ファイル] :パソコン画面のメッセージ、およびメニューを示しています。

[設定] [上書き保存]

法作の結果、パソコンや機器に表示される内容や、操作後の機器の状態を示します。

[Tab]キー、[A]キー : キーボードのキーを示しています。

[Ctrl]+[A]キー : キーボードの[Ctrl]キーを押しながら[A]キーを押すことを示しています。

# 目 次

確認し この取 この取 この取	てください 扱説明書の位置づけ 扱説明書の構成 扱説明書の表記について
第1章	ご使用の前に 1-1 概 要・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・
第2章	インストールと基本機能 2-1 インストールと起動・終了・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・
	<ul> <li>2-2 機能説明</li></ul>
第3章	操作         3-1       形番設定
第4章	<ul> <li>設定項目を選択する・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・</li></ul>

# 第1章 ご使用の前に 1-1 概要

本ソフトウエア SPL-C4A(以下、ローダと呼びます)は、デジトロニック デジタル指示調節計 SDC40A (以下、本体と呼びます)用のエンジニアリングツールです。

本ローダは、パーソナルコンピュータの日本語版 Windows95 / 98 / Me / 2000 / XP (以下、Windows と 呼びます)上で動作するソフトウェアパッケージです。

本ローダは次のような機能を持っています。

- ① パラメータの設定
- ② 本体との通信機能(パラメータの書き込み/読み出し)
- ③ ファイル機能(パラメータの書き込み/読み出し)

### ■参考

・ 【 → ■インストールの方法 (J4ページ) の手順でハードディスクにインストールしてください。
 お買い上げのシステムディスクは保存用としてください。

! 取扱い上の注意

- このディスクは、システムを含まないため、そのままでは使用できません。
- ・本ローダはSDC40A用です。SDC40B、SDC40Gには使用できません。

# 1-2 動作に必要なシステム環境

本ローダを使用するには、次のシステム環境が必要です。

### ■ ハードウェア機器

項目	内容		
パソコン	対象機種	Pentium以上のCPUを搭載している PC/AT 互換機	
	メモリ	32MB以上	
	オペレーティングシステム	日本語版 Windows95 / 98 / Me / 2000 / XP	
	日本語入力システム	Windowsに対応した日本語入力システム	
周辺機器	ディスプレイ	コンピュータ本体に接続可能または内蔵されてい てWindowsに対応したもの	
	シリアルポート	9ピン シリアルポート 1ch以上 *	
	ハードディスクドライブ	空き容量が40Mバイト以上あるハードディスク	
	フロッピーディスクドライブ	1ドライブ以上 お買い上げいただいたパッケージのフロッピーデ ィスクを読みとれるタイプのもの (1.44Mバイトフォーマット)	
	ポインティングデバイス	マウス、またはマウス相当のデバイスでWindows に対応したもの	

- \*: シリアルポートについて パソコンは9ピンシリアルポートが内蔵されているものを使用するこ とをお勧めします。 パソコンにシリアルポートが内蔵されていない場合、下記のどれかの 拡張アダプタによりローダケーブルを接続することができます。 ただし、パソコンの環境などにより動作が不安定になることがありま す。
  - ・専用インターフェイス(ポートリプリケータ) 各パソコン専用アダプタ(パソコンの機種ごとに専用です)
  - ・CFカードアダプタ IBSジャパン社製CF232 http://www.ibsjapan.com/CF232.htm 動作確認パソコンIBM社Thinkpad A31 RATOC社製REX-CF60 http://www.ratocsystems.com/products/subpage/cf60.html
  - ・USBアダプタ
     株式会社アイ・オー・データ機器製USB-RSAQ3
     http://www.iodata.jp/prod/mobile/serial/2004/usb-rsaq3/
     動作確認パソコンIBM社Thinkpad A31
     USBケーブルを接続するときには、ポート番号を確認してください。
     USBケーブルを接続する位置によって番号が変わります。

### ! 取扱い上の注意

ローダを起動させるときは、他のアプリケーションソフトをすべて終了してください。他のアプリケーションソフトが動作中のときは、ローダが動作しないことがあります。また、電力設定、赤外線通信、スクリーンセーバーはオフで使用してください。



■ 動作確認に使用したパソコン

メーカー	形番
Dell	OptiPlex Gxi5200
Dell	OptiPlex GX5166
富士通	FMV-5166T3

# 第2章 インストール方法と基本機能 2-1 インストール方法と起動・終了

### ■ インストールの方法

本ローダをパソコンにインストールする方法を説明します。

! 取扱い上の注意

 他のアプリケーションソフトが動作している場合、インストールプログラムが正常に動作しないことがあります。
 他のアプリケーションソフトの常駐を解除してからインストールプログラムを起動してください。
 また他のアプリケーション、ドライバなどの組み合わせによりローダが動作しないことがあります。
 Windows、パソコンの設定に関してはそれぞれWindows、パソコンに 付属の取扱説明書をご覧ください。

### ● ローダをインストールする

- ① 画面下部の[スタート]ボタンをクリックし、[ファイル名を指定して実行 (R)] を選択してください。
- ② A:¥setup と入力してください。
- ③ローダのディスクをディスクドライブにセットし、[OK]ボタンをクリッ クしてください。
  - 》インストールプログラムが起動され、言語選択画面になります。

言語選択	
インストール中に使用する言語を選	祝してください
Japanese(日本語) English(英語)	
ОК	Cancel

④[Japanese(日本語)] を選択し、[OK]ボタンをクリックしてください。 》次の画面が表示されます。



⑤[次へ(<u>N</u>) >]ボタンをクリックしてください。 》次の画面が表示されます。



⑥[同意する] を選択してください。

🔏 インストール 先フォルダのう	選択 🛛 🔀
	インストーラは次のフォルタリニ SLP-C4A(SDC40A) をインストールします。 違うフォルダヘインストールしたし、地場合は、「参照」「本なンをガリックして インストールしたしいフォルタを選択してください。 SLP-C4A(SDC40A) をインストールしない、地場合は「キャンセル」本ない をガリックしてインストーラを終了してください。
	インストール完フォルダ C¥Program Files¥SLP¥SLPC4A 参照(B)
	< 戻る(B) (次へ(M)) キャンセル キャンセル

### 🏥 参考

- ・インストール先ディレクトリを変更するには [参照(<u>B</u>)…] をクリ ックします。
- ⑦[次へ(<u>N</u>) >]ボタンをクリックしてください。
  - 》次の画面が表示されます。また、既存のグループにはインストールさ れているグループが表示されます。

🔏 アイコンのり゙ル~プ名選択	7	
	SLP-C4A(SDC40A)を登録するスタート メニューまたしま フログラムマネージャのグルーフフォルダを指定してくださし。	
	SLP Access IEM AdjustClock Adobe Beckyl Ver.2 Borland C++Builder 5 B's Recorder GOLD ComPort++JJ+ Enterprise Architect 360 FUJITSU FLASH MCU Programmer Intel Network Adapters Java Web Start Jude-take Microsoft Bootvis Microsoft Bootvis Microsoft Developer Network Microsoft Visual Studio 6.0	
	< 戻る(B) (次へ(W)) キャ	) 1211

### 🏢 参考

・グループを変更する場合は、グループ名を入力してください。

⑧[次へ(<u>N</u>) >]ボタンをクリックしてください。



⑨[次へ(N) >]ボタンをクリックしてください。
 》正常終了すると、次の画面が表示されます。



①[完了(E)]ボタンをクリックしてください。
 》インストールプログラムは終了します。

■ ローダを起動する

- ①タスクバーの[スタート]ボタンをクリックし [プログラム] の [SLP] の [SLP-C4A(SDC40A)] を選択してください。
  - 》SLP-C4Aが起動し、次の形番設定画面が表示されます。



### ■ 参考

・使用しているオペレーティングシステムやマウスの使用方法につい ては、Windowsに付属の取扱説明書をご覧ください。

■ ローダを終了する

① 画面右上の 🗙 ボタンをクリックしてください。

また、[メニュー] の [終了] を選択しても同じ処理が行えます。 》次の画面が表示されます。



②[OK]ボタンをクリックしてください。

# 2-2 機能説明

■ ローダの機能

- ローダは本体の機能を構築するのに必要な
- ・パラメータ編集機能
- ・ファイル管理機能
- ・データの通信機能
- を持っています。

機能の一覧は次のとおりです。



### ■ 参考

・1ファイルとは本体1台分のデータのことです。 1ファイル=各パラメータ設定+形番情報

# 2-3 画面構成

■ ローダの画面構成

・ローダの基本画面です。



・[ヘルプ] の [バージョン情報] を選択したときのダイアログボックス 表示です。



# 2-4 メニュー構成一覧

画面に表示されるメニューの一覧を示します。

メニュー	アイコン	サブメニュー1	サブメニュー2	内容	ショートカットキー
ファイル(F)	ם	初期化(N)		データを出荷値に初期化	[Ctrl]+[N]
	1	開く(O)		保存されたファイルの読み出し	[Ctrl]+[O]
		上書き保存(S)		データを保存	[Ctrl]+[S]
		名前を付けて保存(A)		データを別の名前で保存	[Ctrl]+[A]
		CSV出力(X)		データをCSV形式でファイル出力	[Ctrl]+[X]
		終了(Q)		終了	[Ctrl]+[Q]
編集		データチェック(D)		データの上下限チェックを行う	[Ctrl]+[D]
通信(C)		読出し(R)		計器のデータを読み出し	[Ctrl]+[R]
		(SDC40A→SLP)			
		書込み(W)		データを計器に書き込み	[Ctrl]+[W]
	÷	(SLP→SDC40A)			
項目(S)		SP/EV	SP(A)	編集ウインドウに[SP]を表示	[Ctrl]+[Shift]+[A]
			EV(B)	編集ウインドウに[EV]を表示	[Ctrl]+[Shift]+[B]
		PARA	可変パラメータ(C)	編集ウインドウに	[Ctrl]+[Shift]+[C]
				[可変パラメータ]を表示	
			PIDパラメータ(D)	編集ウインドウに	[Ctrl]+[Shift]+[D]
				[PIDパラメータ]を表示	
			セットアップ	編集ウインドウに	[Ctrl]+[Shift]+[E]
			パラメータ(E)	[セットアップパラメータ]を表示	
設定(O)		形番設定(T)		形番設定の変更	[Ctrl]+[T]
		環境設定(E)		動作環境の変更	[Ctrl]+[E]
ヘルプ(H)		バージョン(V)		バージョン情報を表示	

# 第3章 操作 3-1 形番設定

最初に本体の形番にあわせてローダの形番設定を行ってください。

 ③ボタンをクリックします。 [設定]の [形番設定] を選択しても同じ処理が行えます。 また、[Ctrl]+[T]キーでも同じ処理が行えます。 》形番設定ダイアログボックスが表示されます。 以下の順で設定します。 制御出力設定→機能設定→オプション1設定 →オプション2設定 形番設定 X 制御出力設定 <u>0</u>:0D ルー出力(わわまた)は時間比例) 1:60 電圧出力(電流値調整機能付、わわまたは時間比例) ○ <u>2</u>:5G 電流出力(4~20mA) ○ <u>3</u>:2G 位置比例出力 ○ 4:3D ヒートクール出力(リレー出力+リレー出力) ○ <u>5</u>:AK ヒートクール出力(リレー出力+電流出力) ○ 6:5K ヒートクール出力(電流出力+電流出力) ○ <u>7</u>:6K ヒートクール出力(電圧出力+電圧出力) ○ 8:9K ヒートクール出力(リレー出力+電圧出力) ○ <u>9</u>:BK ヒートクール出力(電流出力+電圧出力) ☞ 次へ(N) 🛛 🗙 ねン胡 形番設定 X 機能設定 ○ <u>1</u>:リモートSP機能モデル ○ 2:内部加尔小\*機能モデル <3. 戻る(B) 📭 次へ(N) 🗙 キャンセル 形番設定 形番設定 わっかうれ設定 わ。ション2設定 ◎ 00:わ゚ション1なし(イベント出力2点付) ⊙ 0<u>0</u>:オプション2なし ○ 01:外部スイッチ入力4点付 ○ 02: イベント出力1点追加 ○ 03:外部スイッチ入力4点付+イベント出力1点追加 ○ 01:外部风小天力8点追加+小小出力5点追加 ○ 04:外部スイッチ入力4点付+補助出力1点付 ○ 05: 个\* 小出力1点追加+補助出力1点付 ○ 02:外部スイッチ入力8点追加+イベント出力5点這加+RS485通信 ○ 06:外部スイッチ入力4点付+イベント出力1点追加+補助出力1点付 ○ 07:外部スイッチ入力4点付+補助出力2点付 ○ 08:八<sup>\*</sup>小出力1点追加+補助出力2点付 ○ 03:外部24.4天力8点追加+(4\*)小出力5点追加+RS232C通信 ○ 09:外部スイッチ入力4点付+イベント出力1点追加+補助出力2点付 €1 戻る(B) (□> 次へ(N) × キャ)14 ・(B) √ 完了 X Cancel
 ×

②各設定を選択項目の中から選択してください。

③[**『**次へ(<u>N</u>)]ボタンをクリックしてください。

④②、③を繰り返します。

⑤[▼完了]ボタンをクリックしてください。

! 取扱い上の注意

・ここで設定される形番は、ローダの内部で使用するための設定です。

・ローダの形番を変更しても、本体内部の形番は変わりません。

# 3-2 環境設定

パソコンの通信ポートの切り替えとフォントの切り替えを設定します。

Image: The second secon

[設定]の[環境設定]を選択しても同じ処理が行えます。
 また、[Ctrl]+[E]キーでも同じ処理が行えます。
 > 環境設定ダイアログボックスが表示されます。

環境設定
通信ポート
ボート COM1
フォント設定
9#*イント 
🗸 OK 🔀 ‡+)til

②通信ポートを設定します。各設定を選択してください。

③フォントの大きさを設定します。各設定を選択してください。

④[**✓**OK]ボタンをクリックしてください。

! 取扱い上の注意

・通常は「COM1」を使用してください。
 選択可能な場合でも通信ポートのコネクタの形状により使用できない場合があります。

# 3-3 ファイルの操作

■ 新規ファイルを作成する

□ ボタンをクリックしてください。
 [ファイル]の [初期化] を選択しても同じ処理が行えます。
 また、[Ctrl]+[N]キーでも同じ処理が行えます。
 》初期化ダイアログボックスが表示されます。

②[OK]ボタンを選択します。

》新規のファイルが開きます。

### ■ 既存のファイルを開く

① デボタンをクリックしてください。

[ファイル] の [開く] を選択しても同じ処理が行えます。 また、[Ctrl]+[O]キーでも同じ処理が行えます。

》ファイルを開くダイアログボックスが表示されます。

聞く			? ×
ファイルの場所型:	🗁 マイ トッキュメント	💌 🗈 🕻	2 📸 📰
My Pictures			
🔳 Test.c4a			
🛋 Test2.c4a			
		1	
ファイル名(N):	<u>*.C4A</u>		開(⊙)
ファイルの種類(工):	SLP-C4Aファイル(*.c4a)	-	キャンセル

②[ファイルの場所] でフォルダ名を選択してください。

③ファイル名を選択してください。

④[開く(<u>O</u>)]ボタンをクリックしてください。
 》設定したファイル名のファイルが開きます。

### ■ ファイルを上書き保存する

「ボタンをクリックしてください。
 [ファイル]の[上書き保存]を選択しても同じ処理が行えます。
 また、[Ctrl]+[S]キーでも同じ処理が行えます。
 >ファイルが上書き保存されます。

### ■ ファイルに名前を付けて保存する

- ①[ファイル]の[ファイルに名前を付けて保存]を選択してください。
   また、[Ctrl]+[A]キーでも同じ処理が行えます。
   》名前を付けて保存ダイアログボックスが表示されます。
- ②[保存する場所] でフォルダ名を選択してください。
- ③[ファイル名] にファイル名を入力してください。
- ④[保存]ボタンをクリックしてください。》設定したファイル名でファイルが保存されます。

### ■ 参考

 ファイル名ウインドウでファイル名をクリック選択したときは、上 書き保存となります。

### ■ CSV形式ファイルを出力する

- ①[ファイル]の[CSV出力]を選択してください。
   また、[Ctrl]+[X]キーでも同じ処理が行えます。
   》CSV出力ダイアログボックスが表示されます。
- ②[保存する場所] でフォルダ名を選択してください。
- ③[ファイル名] でファイル名を入力してください。
- ④[保存]ボタンをクリックしてください。
   》設定したファイル名でファイルが出力されます。

### ■ 参 考

 ファイル名ウインドウでファイル名を選択したときは、上書き保存 となります。

CSV形式はカンマで区切られたテキストファイルです。

市販の表計算ソフト Microsoft Excelなどで利用できます。

# 3-4 本体との通信

### ■ 本体からローダへ通信する(ローダへ読み出す)

 ① ¥ ボタンをクリックしてください。

[通信] の [読出し(SDC40A→SLP)] を選択しても同じ処理が行えま す。

また、[Ctrl]+[R]キーでも同じ処理が行えます。 》確認ダイアログボックスが表示されます。

, њено->	• • •	2	/ / / /	
確認				×
?	読出し	を実行	します	
	OK	×	キャンセル	

②[✓OK]ボタンをクリックしてください。
 》ローダへの読み出しを開始します。

### ■ ローダから本体へ通信する(ローダから書き込む)

[通信] の [書込み(SLP→SDC40A)] を選択しても同じ処理が行えま す。

また、[Ctrl]+[W]キーでも同じ処理が行えます。 》確認ダイアログボックスが表示されます。

②[**✓**OK]ボタンをクリックしてください。

》本体への書き込みを開始します。

# 3-5 データの設定

### ■ 設定項目を選択する

### ● キーボードで反転表示を移動する

①[→]、[←]、[↑]、[↓]キーを押すと表の中で反転表示が移動します。

### ● マウスで反転表示を移動する

①移動したい部分でクリックしてください。

②スクロールバーをクリックしてください。

》画面がスクロールします。

最上段、最下段が表示されているときはそれ以上スクロールしません。

● 操作するウインドウを変更する

①[Tab]キーを押してください。

》操作対象のウインドウが移動します。

### ■ 参考

・設定できる部分を順番に移動します。

### ■ 数値データを入力する

● 数値の入力方法

数値の入力方法は次のとおりです。

- ・数値を入力したいときはキーボードの[0]~[9]キーを押します。
- ・16進数を入力したいときはキーボードの[0]~[9]キー、[A]~[F]キーを押 します。
- ・小数点を入力したいときは希望の位置で[.]キーを押します。
- ・マイナス値を入力したいときは[-]キーを押します。
- ・入力を間違えて、1文字消したいときは[Back Space]キーを押します。 》表示されている値が1文字消えます。
- ・入力中の数値をキャンセルしたいときは[Esc]キーを押します。 》元の設定値が表示されます。

### ● 設定項目への入力

設定項目への入力は[0]~[9]キーを使用します。 ①設定項目を選択(反転表示)します。

- ②希望の設定値を[0]~[9]キーにより入力します。
- ③[Enter]キーを押します。また、[↑]、[↓]キーでも同じ処理が行えます。
   》設定値が確定されます。

### 📖 参考

- .[↑]、[↓]キーの場合、数値確定後に反転表示が移動します。
   マウスで設定項目を移動したときは、設定値は確定されません。
- ・設定値が無効なときは、元の設定値が表示されます。
   途中で取り消したいときは、設定値を確定する前に[Esc]キーを押してください。

● データを選択して入力する

### 🏢 参考

・選択入力ができる項目では自動的に項目が表示されます。

①設定項目のボタンを押してください。

[Tab]、[Alt]+[↓]キーを押しても同じ処理が行えます。
》選択項目が表示されます。

設定項目 🎬 (無題) - SLP-C4A - C40A0D0AS060X0 \_ 8 × ファイル(E) 通信(C) 項目(S) 設定(Q) ヘルプ(H) 🗅 🚅 🔛 🖞 💱 😭 🖻 🛛 🛛 : READY SP/EV 0:READY 1:RUN T. NUN/ NEADT U/ CONTACT 2:入力17/lb/(FL) 0.0 ○PARA ト目 可変ハ<sup>0</sup>ラメータ 日 PIDN<sup>0</sup>ラメータ 日 セットアッフ<sup>0</sup>テ<sup>×</sup>ータ 3:入力11/シオ(RA) 1.000 4:入力1バイアス(BI) 0.0 5:入力27/lb(FL2) 6:入力21/)オ(RA2) 7:入力2/\`{7](BI2) 8:時間比例出力周期(出力1)(CY) 10 9:時間比例出力周期(出力2)(CY2) 0.0 10:操作量変化リミット(OUTL) 11:操作量変化リミット(スレーブ側MV2)(OUTR) 12:PID)富算初期操作量(IOUT) 13:PID)富算初期化(RPID) 0 0 14:ON-OFF制御のディファレンシャル(DIFF) 5.0 15:7\\*`)\1977\*(ET1) Û 16:イベント1待機(ED1) 0 17: /\\*')ኑ29/7\*(ET2) 0 18:イベント2待機(ED2) 0 」 リスト選択中 -1,1 設定範囲:0~1

②マウスで設定を選択してください。

[→]、[←]、[↑]、[↓]キー、[Enter]キーでも同じ処理が行えます。 》設定値が確定されます。

### 💷 参考

・マウスを使用する場合、クリックで選択と決定が同時に行われます。

第4章 トラブルシューティング

■ 通信エラーメッセージ

分類	メッセージ	内容	対処方法
通信エラー	タイムアウト	タイムアウト時間内に電文を受 信できなかった 接続されている計器がSDC40A 以外のものである 本体が接続されていない	ケーブルの接続、接触を確認し てください SDC40Aに接続して使用してく ださい
	通信ポートをオープンできま せん	通信ポートをオープンできなか った	他の通信ポートを使用している ソフトと同時に使用しないでく ださい
	通信エラーが発生しました	システムのエラーが発生した	再操作またはローダを終了させ Windowsを再起動させてください
本体 状態エラー	接続中の SDC40A をサポート できません	使用しているローダと本体の バージョンが対応していない	当社支店、営業所、および販売 店にご相談ください

■ ファイルエラーメッセージ

分類	メッセージ	内容	対処方法
ファイル名 エラー	このファイル名は無効です	無効なファイル名を入れた	正しいファイル名を入力してく ださい
	このファイル名が見つかり ません パスとファイル名を確認して ください	存在しないファイル名を入力 した	存在するファイル名を正しく入 力してください
	このファイル名はデバイス名 として予約されています 別の名前を指定してください	デバイス名として予約されてい るファイル名を入力した	正しいファイル名を入力してく ださい
ディスク エラー	ディスクの空き容量が不足で す	ディスクの空き容量が不足して いる	ディスクの空き容量を十分に確 保してください
	デバイスの準備ができていま せん	ディスクが準備できていない	ディスクを準備したあと、再度 操作を行ってください
	ファイルを作成できません	保存先がCD-ROM だった	別の場所に保存してください
	ファイル名が長すぎます	ファイル名が長すぎた	ファイル名を255文字以下にし てください
パス名 エラー	パス名が存在しません パス名を確認してください	不正なパス名を入力した	正しいパス名を入力し、再度操 作を行ってください
ファイル静	ファイルサイズが不正です	ファイルが壊れている	壊れたファイルは使用できません
エラー	ファイル情報が不正です		再度、作成してください

### ■ 起動エラーメッセージ

分類	メッセージ	内容	対処方法
ローダ システム エラー	一度に複数のSLP-C4Aを起動 することはできません	ローダを多重起動した	[OK]ボタンを押してください

# 改訂履歴

印刷年月	資料番号	種類	改訂ページ	改訂内容
00-02	CP-UM-5175	初版		
00-11		第2版	見返し iii、5	重要事項 追加 (ローダプラグの注意) 誤記訂正
04-04		第3版	全体 見返し J2 J4~J6 J7~J9 J10 J11、J12 J13~J18	システム環境 Windows95/98→ Windows95/98/Me/2000/XP対応に変更、 和英合本のため、ページの付番方法変更 使用上の制限について変更 ハードウエア機器 シリアルポートについての注 記を追加 インストール方法の説明 全面変更、 旧3、4ページ 旧5~7ページ 2-4 メニュー構成一覧とし、旧10ページから移動 旧8、9ページ 旧11~16ページ
05-02		第4版	J2	USBアダプタ I/Oデータ社製USB-RSAQ2→ USB-RSAQ3に変更、HPアドレスを変更
06-01		第5版	J2	USBアダプタ 社名変更
07-08		第6版	見返し ご意見用紙	重要事項のイラスト変更 個人情報の取り扱いに関する説明を追加
08-02		第7版	J9	ダイアログボックス表示図変更
08-08	CP-UM-5175JE	第8版		資料番号変更

# FAX.送信先 FAX.0466-27-2669

### 株式会社 山武

# テクニカルマニュアル製作担当行

# 取扱説明書に関するご意見

本書を使いやすくするために、皆さまからの貴重なご意見(説明不足・誤字・脱字・ご要望など)をお待ちしております。ぜひ、ご協力をお願いします。

ご記入くださいましたら、ご面倒でもFAXにて当社までご送付願います。

機器の使用方法やトラブルの対策などについてのお問い合わせは、購入された販売店、または当社販売 員にお問い合わせください。

名	称	SDC	340A用スマートローダパッケージ	SLP-C4A	CP-UM-5175JE	第8版
ペ-	ージ	行	内容へのよ	ご指摘 / ご要望		

### 回答をご希望の方は、下記に連絡先をご記入ください。

ご芳名	電話番号	
貴社名	FAX番号	
所属部署	E-mailアドレス	
所在地	•	•

山武記入欄				
記事	受付年月日	受付No.	受付担当	
「個人はおの取りないについて」で言ういただいた何人はおけ	「小社の「伊」は	╵ 却/D 謎 ╋ ╋ ╋ ┛ / ╴ ╯Ÿ	」 」、 し =コ ブ +ビ+立 /	

【個人情報の取り扱いについて】ご記入いただいた個人情報は、当社の「個人情報保護方針」に従い、上記ご指摘/ ご要望への回答以外には使用いたしません。

当社の個人情報保護方針につきましては、http://jp.yamatake.com/をご覧ください。

 デジトロニック デジタル指示調節計 SDC40A用 スマートローダパッケージ SLP-C4A 取扱説明書

 CP-UM-5175JE

 初
 版
 2000年
 2月発行

 第8
 版
 2008年
 8月改訂

 編
 集
 株式会社 山武
 アドバンスオートメーションカンパニー

 発
 行
 株式会社 山武
 アドバンスオートメーションカンパニー

 東京都千代田区丸の内2-7-3
 東京ビル



<COMPO CLUB アドレス> http://www.compoclub.com <山武ホームページアドレス> http://jp.azbil.com [ご注意] この資料の記載内容は、お断りなく変更する場合も ありますのでご了承ください。 (15)

お問い合わせは、下記または当社事業所へお願いいたします。

ozbil

No. CP-UM-5175JE



installation, maintenance, and trou-This manual should be read by those

who design and maintain devices that use the SLP-C4A. Be sure to keep this manual nearby for handy reference.

Yamatake Corporation

### **RESTRICTIONS ON USE**

This product has been designed, developed and manufactured for general-purpose application in machinery and equipment.

Accordingly, when used in applications outlined below, special care should be taken to implement a fail-safe and/or redundant design concept as well as a periodic maintenance program.

- · Safety devices for plant worker protection
- · Start/stop control devices for transportation and material handling machines
- Aeronautical/aerospace machines
- Control devices for nuclear reactors

Never use this product in applications where human safety may be put at risk.



### NOTICE

Be sure that the user receives this manual before the product is used.

Copying or duplicating this user's manual in part or in whole is forbidden. The information and specifications in this manual are subject to change without notice.

Considerable effort has been made to ensure that this manual is free from inaccuracies and omissions. If you should find an error or omission, please contact Yamatake Corporation.

In no event is Yamatake Corporation liable to anyone for any indirect, special or consequential damages as a result of using this product.

©2004 Yamatake Corporation ALL RIGHTS RESERVED

# Unpacking

Check the following items when removing the SLP-C4A from its package:

- 1. Check the model No. to make sure that you have received the product that you ordered.
- 2. Check the SLP-C4A for any apparent physical damage.
- 3. Check the contents of the package against the Package List to make sure that all accessories are included in the package.

After unpacking, handle the SLP-C4A and its accessories taking care to prevent damage or loss of parts.

If an inconsistency is found or the package contents are not in order, immediately contact your dealer.

Name	Model No.	Q'ty	Remarks
System disk	SLP-C4AJ20	1	Floppy disk 3.5 inch disk (1.44MB)
Special cable	-	1	
User's Manual	CP-UM-5175JE	1	This manual

# The Role of This Manual

In all, three manuals have been prepared for the SDC40A. Read the manual according to your specific requirements.

The following lists all the manuals that accompany the SDC40A and gives a brief outline of the manual: If you do not have the required manual, contact Yamatake Corporation or your dealer.



### DigitroniK Line SDC40A Digital Indicating Controller User's Manual Manual No.CP-SP-1043E

For filing.

This manual is provided with the SDC40A.

People who are involved in hardware design to build the SDC40A into a control panel and maintenance must read this manual. This manual describes the outlines of hardware and controllers, installation/wiring, maintenance/checking, troubleshooting, measures and the hardware specification.



### DIGITRONIK CPL Communication SDC40A/40G User's Manual Manual No.CP-UM-1583E

This manual is required reading for those using the CPL communications functions of the SDC40A.

This manual describes an outline of CPL communications, wiring, communications procedures and SDC40A communications data, how to remedy trouble, and communications specifications.



### SLP-C4A Smart Loader Package for SDC40A Digital Indicating Controller User's Manual Manual No.CP-UM-5175JE

This manual.

This manual is supplied with the SLP-C4A Smart Loader Package. This manual is supplied with the SLP-C4A Smart Loader Package. The manual describes the software used to make various settings for SLP-C4A using a personal computer. Personnel in charge of design or setting of a system using SLP-C4A must thoroughly read this manual. The manual describes installation of the software into a personal computer, operation of the personal computer, various functions, and setup procedures.

# **Organization of This User's Manual**

This manual is organized as follows:

### Chapter 1. INTRODUCTION

Be sure to read this chapter before you start using the Smart Loader Package. This chapter describes the required operating environment for the personal computer and briefly introduces its features.

### Chapter 2. INSTALLATION AND BASIC FUNCTIONS

This chapter describes how to install, start up and quit the Smart Loader Package, its functions, screen configurations and basic operations.

**Chapter 3. OPERATION** 

This chapter describes how to operate the loader for setup and configuration of this software.

### Chapter 4. TROUBLESHOOTING

This chapter describes error messages that are displayed when trouble occurs, and how to remedy trouble.

# **Conventions Used in This Manual**

The following conventions are used in this manual:

! Handling Pr	ecautions
	: Handling Precautions indicate items that the user should pay attention to when handling the SLP-C4A.
Note Note	: Notes indicate useful information that the user might benefit by knowing.
¢	: This indicates the item or page that the user is requested to refer to.
(1), (2), (3)	: The numbers with the parenthesis indicate steps in a sequence or indicate corresponding parts in an explanation.
[OK] button :	Indicates a selection button in screens displayed on the personal computer.
[File] : [Option] [Save]	Indicates messages and menus displayed on the personal computer.
>> :	Indicates the result of an operation, details displayed on the personal computer or devices, or the state of a device after an operation.
[Tab] key, [A] key :	Indicates keys on the keyboard.
[Ctrl]+[A] key :	Indicates the operation of pressing the [A] key with the [Ctrl] key on the keyboard held down.

# Contents

### Unpacking The Role of This Manual Organization of This User's Manual Conventions Used in This Manual

### Chapter 1. INTRODUCTION

1-1	Overveiw
1-2	System Operating Environment E2
	Hardware E2
	Hardware configuration E3
	Compatible equipment E3

### Chapter 2. INSTALLATION AND BASIC FUNCTIONS

2-1	Installation, Starting Up and Quitting the Loader E	-4
	Installation E	-4
	Starting up loader E	<b>:7</b>
	Quitting loader E	27
2-2	Description of Functions E	8
	SLP functions	8
2-3	Screen Configuration E	<u>9</u>
	■ SLP screen configuration E	9
2-4	Menu Configuration List E1	0

### Chapter 3. OPERATION

3-1	Setting the Type E11
3-2	Setting the Environment E12
3-3	File Operations E13
	Making new files E13
	Opening existing files E13
	■ Overwriting and saving files E13
	Saving files with a new name E14
	Outputting CSV format files E14
3-4	Communications with the SDC E15
	■ Communicating to the SLP from the SDC (reading to SLP) E15
	■ Communicating to the SDC from the SLP (writing from SLP) E15
3-5	Setting Up Data E16
	Selecting setup items E16
	Entering numerical data E16

### Chapter 4. TROUBLESHOOTING

Communications error messages	E18
File error messages	E18
Startup error messages	E18

# Chapter 1. INTRODUCTION

# 1 - 1 Overveiw

The SLP-C4A (simply called "SLP" from here on) is an engineering tool for the DigitroniK Line SDC40A Digital Indicating Controller (simply called "SDC" from here on).

The SLP runs on Windows95/98/Me/2000/XP (simply called "Windows" from here on) on a personal computer. The SLP has the following functions:

- 1. Parameter setup
- 2. Communications with SDC (reading/writing of parameters)
- 3. File operations (reading/writing of parameters)

# 🛱 Note

Install the SLP on the hard disk following the procedure in
 Installation (page E4).
 Use the system disk that you have purchased as the backup system.

### **!** Handling Precautions

- This disk does not contain the system, and cannot be used as they are.
- This loader is used for the SDC40A, but cannot be used for the SDC40B, or SDC40G.

# 1 - 2 System Operating Environment

The following system environment is required for using the loader:

### Hardware

ltem	Description		
Personal Computer	Target model PC/AT compatibles with a Pentium chip or higher		
	Memory 32M byte or more		
	Operating system	Windows95/98/Me/2000/XP	
Peripheral Devices Display		800 X 600 dot or more, 16 bit color or more	
	Serial port 9-pin, serial port, 1ch or more *		
	Hard disk drive	Hard disk with at least 40M byte of free space	
	Foppy disk drive	At least 1 drive capable of reading the floppy disk in the product package (1.44MB format)	
	Pointing device	Windows-compatible mouse or equivalent device	

\*: Serial port

It is recommended to use a personal computer with 9-pin serial port built-in. If your personal computer does not have any serial port, you may use any of the extension adaptors listed below to connect the loader cable. However, note that the operation may become unstable depending on the personal computer environment.

• Special interface (port replicater)

Adaptor specially designed for each personal computer (special adaptor for each personal computer model)

• CF card adaptor

CF232 manufactured by Elan Digital systems URL: http://www.elandigitalsystems.com/interface/cf232.php Operation confirmed personal computer, IBM's Thinkpad A31 REX-CF60 manufacture by RATOC. URL: http://www.ratocsystems.com/products/subpage/cf60.html(Japanese)

USB adaptor

USB-RSAQ3 manufactured by I•O DATA DEVCE, INC. URL: http://www.iodata.jp/prod/mobile/serial/2004/usb-rsaq3/(Japanese) Operation confirmed personal computer, IBM's Thinkpad A31 When connecting the USB cable, check the port No. The port No. may vary depending on the USB cable connection position.

### **!** Handling Precautions

 Before starting up loader, quit all other applications.
 If you start up loader while another application is running, loader may not function.
 Also, set the power save setting, infrared communications and screen saver to OFF.

# Hardware configuration SDC40A SDC40A Communications Special cable (Accessory) Data disk

### Compatible equipment

Manufacturer	Model No.	
Dell	OptiPlex Gxi5200	
Dell	OptiPlex GX5166	
Fujitsu	FMV-5166T3	

# Chapter 2. INSTALLATION AND BASIC FUNCTIONS

# 2 - 1 Installation, Starting Up and Quitting the Loader

### Installation

This section describes how to install the loader on a personal computer.

### **!** Handling Precautions

• If you start up the Installer while another application is running, the Installer may malfunction.

Remove other resident applications from their directories before starting up the Installer.

The SLP-C4A sometimes cannot be started up depending on the combination of other applications and drivers.

For details on Windows and personal computer settings, refer to the User's Manuals provided with Windows and the personal computer.

### Installing loader

- 1. Click the [Start] button at the bottom of the screen, and then click [Run...].
- 2. Enter the message of "A:\setup".
- 3. Insert the disk provided with the loader package into the disk drive, click [OK] button.

>>The installation program is then started up automatically and the following screen appears:



4. Click [Next >] button.

>>The following screen appears :



5. Click [l agree] button.

擧 Choose Destinatio	n Location	×
₩.4 **	Setup will install SLP-C4A(SDC40A) in the following folder. To install into a different folder, click Browse, and select another folder. You can choose not to install SLP-C4A(SDC40A) by clicking Cancel to exit Setup.	
	Destination Folder C#Program Files#SLP#SLPC4A Browse.	
	< <u>B</u> ack <u>Next</u> > Cancel	

# 🛱 Note

- To change the installation destination directory, click [Browse...] button.
- 6. Click [Next >] button.
  - >>The following screen appears :

The already existing group indicates the latest group which has been installed.



# 🛱 Note

• To change the program folder, enter the new folder name.

### 7. Click [Next >] button.



- 8. Click [Next >] button.
  - >>When installation ends normally, the following screen appears:



9. Click [Einish >] button. The installer is finished.

### Starting up loader

1. Click [Start] at the bottom of the screen, and click the [SLP-C4A (SDC40A)] under [Programs] - [SLP].

>>The SLP is started up, and the opening screen appears.



### Note

• For details on the operating system and the mouse you are using, refer to the User's Manual provided with Windows.

### Quitting loader

- 1. Click  $\blacksquare$  button at the top right of the screen.
  - The operation is the same by selecting the [File] [Quit].

>>The following screen appears:



2. Click [OK] button.

# 2 - 2 Description of Functions

### ■ SLP functions

The SLP is provided with the following functions for configuring SDC functions:

- Parameter Editing Function
- File Management Function
- Data Communications Function
- The figure below shows operations available by these functions.

Function	IS	
_	Parameter Editing Function	Creates and edits parameters.
	File Management Function	<ul> <li>Saves created data to a file on floppy disk or hard disk.</li> <li>Reads saved files for re-editing.</li> </ul>
	Data Communications Function	<ul><li>Writes created data to the SDC.</li><li>Reads from the SDC to the SLP.</li></ul>

🛱 Note

• "One file" refers to data for one SDC. Each file comprises the various parameter settings and the model number information.

# 2 - 3 Screen Configuration

Basic SLP screen

### ■ SLP screen configuration

	Setup item	
Menu har ——	File Edit Communication Setup Ontion Help	
Tool bar		
	19 SP 21 SPO value(SP0) 0.0	
	LIB EV 11:Designation of PID number (when LSPO is used)(PIDNO0) 0	
	Le Parameters	
	- D PID	
	LB Setup	
<u></u>		
Selection window-		
L-•	Grid input	
	1 1 Setting range: 1999 9 to +2600 0	
	1, 1 Bound range, receipted records	11.
	Message window	

• Dialog box displayed when [Help] - [Version] is selected.



Menu	Icon	Sub Menu 1	Sub Menu 2	Description	Shortcut keys
<u>F</u> ile	D	New	-	Creates a new data	Ctrl+N
	Ħ	Open	-	Opens a existing data	Ctrl+O
		Save	-	Saves the active data	Ctrl+S
		Save As	-	Saves the active data with a new name	Ctrl+A
		CSV Out (X)	-	Saves the active data in CSV format	Ctrl+X
		Quit	-	Quits the application	-
<u>E</u> dit		Data Check	-	Checks all setting values	Ctrl+D
<u>Communication</u>	5	Read (SDC40A to SLP)	-	Reads the device data	Ctrl+R
	¥	Write (SLP to SDC40A)	-	Writes the data to the device	Ctrl+W
<u>S</u> etup		SP/EV	SP	Displays the SP	Ctrl+Shift+A
			EV	Displays the EV	Ctrl+Shift+B
		PARA	Parameters	Displays the Variable parameter	Ctrl+Shift+C
			PID	Displays the PID parameter	Ctrl+Shift+D
			Setup	Displays the setup parameter	Ctrl+Shift+E
<u>O</u> ption		Type Setting	-	Changes the type setup	Ctrl+T
	<b>R</b>	Environment Setting	-	Changes the environment setup	Ctrl+E
<u>H</u> elp		Version	-	Displays the version information	-

# Chapter 3. OPERATION

# 3 - 1 Setting the Type

First, set the  $\mathsf{SLP}$  type matched to the  $\mathsf{SDC}$  model No.

1. Click 🔛 button.

The operation is the same by selecting the [Option] - [Type Setting] command or the [Ctrl] + [T] keys.

>>The Type Setting dialog box appears.

Set in the following procedure:

Control output setting  $\rightarrow$  Function setting  $\rightarrow$  Option setup 1

 $\rightarrow$  Option setup 2

	Option Setup		
	Control output		
		portional)	
	○ 1:6D Voltage output (with current value	ue adjusting function,on-off or time propotional)	
	C 2:5G Current output (4 to 20mA/0 to	20mA)	
	C 3:2G Position proportional output		
	C 4:3D Heat/cool control, relay output	+ relay output	
	C 5:AK Heat/cool control, relay ovtput	+ current output	
	C 6:5K Heat/cool control, current output	it + current output	
	C Z:6K Heat/cool control, voltage output	it + voltage output	
	C 8:9K Heat/cool control, relay output	+ voltage output	
	© 9:BK Heat/cool control, current outpr	ut + voltage output	
	<u> </u>	<b>IS</b> ≫ <u>N</u> ext X Cancel	
	Option Setup		
	Output type control mode		
	O:Standard model		
	C 1:Remote SP function model		
	_		
	C 2:Internal cascade function model		
	wa B	ack	
Detion		Ontion2	
00: Option 1 is not provided (with 2 SPST relay contact output	.)	option.	
01: 4 remote switching		OD: Option 2 is not provided	
02: 1 added SPDT relay contact event output			
03: 4 remote switching + 1 added SPDT relay contact event of	utput		
04: 4 remote switching + 1 auxiliary output		C 01: 8 added remote switching + 5 added event output	ł.
C 05: 1 event output + 1 euviliery output	1 event output + 1 auxiliary output		
v <sub>2</sub> . + event output + + auxiliary output		C 02: 8 added remote switching + 5 added event output	t + RS-485 communication
up: 4 remote switching + 1 added SPDT relay contact event o	utput + i auxiliary output		
01: 4 remote switching + 2 auxiliary output			
08: 1 event output + 2 auxiliary output		C 03: 8 added remote switching + 5 added event output	t + RS-232C communication
09: 4 remote switching + 1 added SPDT relay contact event o	utput + 2 auxiliary output		
<b>≪1</b> <u>B</u> ack I⊃ <u>N</u> ext	X Cancel	🖘 <u>B</u> ack 🛛 ✔ Com	nplete 🗙 Cancel

- 2. Set the basic model No., output type control mode and option.
- 3. Click [ rep Next] button.
- 4. Select the desired setting from each of the 2, 3.
- 5. Click [RComplete] button.

### **!** Handling Precautions

- The model No. you set here is for internal use by the SLP.
- The model No. of the SDC does not change even if the type is changed on the SLP.

# 3 - 2 Setting the Environment

Set the communications port and font on the personal computer.

- 1. Click 🖻 button.
  - The operation is the same by selecting the [Option] [Environment Setting] command or the [Ctrl] + [E] keys.

>>The Environment Setup dialog box appears.

Enviroment Setup 🛛 🔀
Comm Port
Port COM1
Font Setup
10point 💌
VOK X Cancel

- 2. Set the communications port. Select the various settings.
- 3. Set the font size. Select the various settings.
- 4. Click [resolved] button.

### **!** Handling Precautions

• Normally, use "COM1".

Even if another communications port can be selected, it sometimes cannot be used depending on its shape of connector.

# 3 - 3 File Operations

### Making new files

1. Click 🗋 button.

The operation is the same by selecting the [File] - [New] command or the [Ctrl] + [N] keys.

>>The New dialog box appears.

2. Click [OK] button.

>>A new file opens.

### Opening existing files

1. Click 📂 button.

The operation is the same by selecting the [File] - [Open] command or the [Ctrl] + [O] keys.

>>The Open	dialog box	x appears.
------------	------------	------------

Open			? 🔀
Look in: [	My Documents	- + 🗈 🕯	* ■•
My Music	5 I		
iny fictore.	2		
File <u>n</u> ame:	*.C4A		<u>O</u> pen
Files of <u>type</u> :	SLP-C4Afile(*.c4a)	-	Cancel

- 2. Select the folder name in [Look in:].
- 3. Select the file name.
- 4. Click [Open] button.
  - >>The file having the name that you set opens.

### Overwriting and saving files

1. Click 🔚 button.

The operation is the same by selecting the [File] - [Save] command or the [Ctrl] + [S] keys.

>>The file is overwritten and saved.

### Saving files with a new name

1. The operation is the same by selecting the [File] - [Save As] command or the [Ctrl] + [A] keys.

>>The Save As dialog box appears.

- 2. Select the folder name under [Save in].
- 3. Enter the file name to [File name].
- 4. Click [Save] button.>>The file is saved under the file name that you set.

### Mote

• The file is overwritten and saved when you click (select) the file name at the File name window.

### Outputting CSV format files

1. Select the [File] - [CSV Out] command.

The operation is the same by selecting the [Ctrl] + [X] keys. The CSV Output dialog box appears.

- 2. Select the folder name under [Save in].
- 3. Enter the file name to [File name].
- 4. Click [Save] button.

>>The file is output under the file name that you set.

### Mote Note

• The file is overwritten and saved when you click (select) the file name at the File name window.

A CSV format file is a text file delimited by commas, and can be used in Microsoft Excel or other off-the-shelf spreadsheet applications.

# 3 - 4 Communications with the SDC

### ■ Communicating to the SLP from the SDC (reading to SLP)

1. Click 🛣 button.

The operation is the same by selecting the [Communications] - [Read(SDC40A to SLP)] command or the [Ctrl] + [R] keys. >>The Confirmation dialog box appears.

Confirmation 🔀



2. Click [OK] button.

>>Reading to the SLP starts.

### ■ Communicating to the SDC from the SLP (writing from SLP)

1. Click Ψ button.

The operation is the same by selecting the [Communications] - [Write(SLP to SDC40A)] command or the [Ctrl] + [W] keys. >>The Confirmation dialog box appears.

2. Click [OK] button.

>>Writing to the SDC starts.

# 3 - 5 Setting Up Data

### Selecting setup items

• Moving the highlight section on the display by operating the keyboard

1. Press the  $[\leftarrow], [\uparrow], [\downarrow], \text{ or } [\leftarrow]$  key to move the highlighted section on screen.

- Moving the highlight section on the display by operating the mouse
  - 1. Click the section you want to move.
  - 2. Click the scroll bar to scroll the screen.
    - >>The screen cannot be scrolled beyond the topmost or bottommost rows on screen.

Changing operation windows

1. Click [Tab] key.

>>The screen moves to the target operation window.

### Mote Note

• Setup items are moved to in order on screen.

### Entering numerical data

- Entering numerical values
  - To enter a numerical value

Press the [0] to [9] keys on the keyboard.

- To enter a hexadecinal value
- Press the [0] to [9] keys and the [A] to [F] on the keyboard.
- To enter a decimal point Press the [.] key at the desired decimal point position.
- To enter a minus value Press the [-] key.
- To cancel a wrong entry
- Press the [Back Space] key. >>The currently displayed value is deleted.
- To cancel the currently entered numerical value Press the [Esc] key.
   >>Original set value is redisplayed.

### Select the setup item

Entering numerical data by the [0] to [9] keys to select the setup item.

- 1. Select the setup item to highlight it.
- 2. Enter the desired set value by the [0] to [9] keys.
- 3. Press the key.

The operation is the same by pressing the  $[\uparrow]$  or  $[\downarrow]$  key. >>The set value is fixed.

### 🕅 Note

- After you have fixed the numerical value by pressing the  $[\uparrow]$  or  $[\downarrow]$  key, the highlight section moves on screen. When you have moved a setup item using the mouse, the set value is not fixed.
- When a set value is invalid, the original set value is redisplayed. To cancel a set value midway during entry, press the [Esc] key before you fix the set value.

### Selecting and entering data

### Mote Note

• Items that can be selected and entered are automatically displayed.

1. Press a setup item button.

The operation is the same by selecting the [Tab] or [Alt] +  $[\downarrow]$  keys. >>Selection item is displayed.



2. Select the setup item by the mouse.

The operation is the same by selecting the  $[\leftarrow], [\uparrow], [\downarrow], \text{ or } [\rightarrow]$  key, or the **[Enter]** key.

>>The set value is fixed.

```
Mote Note
```

• When you use the mouse, the set value is fixed at the same time that you select it with the mouse.

# Chapter 4. TROUBLESHOOTING

### Communications error messages

Category	Message	Description	Remedy
Communication error	Time out.	The message cannot be received within a period of the time-out time. An instrument other than SDC. The main unit is not connected.	Check the cable connections and contacts. Use the loader with it connected to SDC.
	Cannot open communications port.	The communication port cannot be opened.	Do not run the loader and other application using the communication port at the same time.
	Communications error has occurred.	The system error occurs.	Re-operate or quit the loader to restart Windows.
SDC status error	Cannot support currently connected SDC.	The loader currently in use is not applicable to the version of the main unit.	Contact Yamatake Corporation or its dealer.

### ■ File error messages

Category	Message	Description	Remedy
File name error	This filename is not valid.	An invalid file name is input.	Input a correct file name.
	This file cannot be found. Make sure that the correct path and filename are given.	A file name not existing is input.	Input an existing file name.
	This filename is a reserved device name. Use a different filename.	A file name reserved for the device name is input.	Input a correct file name.
Disk error	Not enough free space on disk.	The disk free capacity is insufficient.	Keep a sufficient disk free capacity.
	The device is not ready.	The disk is not ready.	Prepare the disk and restart the operation.
	Cannot make file.	The CD-ROM is specified as save destination.	Save the file to another directory.
	File name too long.	The file name is too long.	Use 256 characters or less for the file name.
Path name error	The path does not exist. Make sure that the correct path is given.	An illegal path name is input.	Input a correct path name and restart the operation.
File information	Illegal file size.	The file is corrupted.	Corrupted file cannot be used.
error	Illegal file information.		Create a file again.

### Startup error messages

Category	Message	Description	Remedy
Loader system error	Can't start up two or more SLP- C4As at once.	Two or more loaders are started at the same time.	Click [OK] button.

# **Revision History**

Apr. 2004       CP-UM-5175E       1st Edition       Image: Comparison of the system	Printed date	Manual Number	Edition	Revised pages	Description
Feb. 2005       2nd Edition       E2       USB adapter: USB-RSAQ2→USB-RSAQ3         Jan. 2006       3rd Edition       E2       USB adapter: company name changed.         Aug. 2007       4th Edition       Endpaper       Figure of important changed.         Feb. 2008       5th Edition       E9       Dialog box changed.         Aug. 2008       CP-UM-5175JE       8th Edition       Manual Number changed.	Apr. 2004	CP-UM-5175E	1st Edition		
Jan. 2006       3rd Edition       E2       USB adapter: company name changed.         Aug. 2007       4th Edition       Endpaper       Figure of important changed.         Feb. 2008       5th Edition       E9       Dialog box changed.         Aug. 2008       CP-UM-5175JE       8th Edition       Manual Number changed.	Feb. 2005		2nd Edition	E2	USB adapter: USB-RSAQ2→USB-RSAQ3 changed. HP address changed.
Aug. 2007       4th Edition       Endpaper       Figure of important changed.         Feb. 2008       5th Edition       E9       Dialog box changed.         Aug. 2008       CP-UM-5175JE       8th Edition       Manual Number changed.	Jan. 2006		3rd Edition	E2	USB adapter: company name changed.
Feb. 2008       5th Edition       E9       Dialog box changed.         Aug. 2008       CP-UM-5175JE       8th Edition       Manual Number changed.	Aug. 2007		4th Edition	Endpaper	Figure of important changed.
Aug. 2008       CP-UM-5175JE       8th Edition       Manual Number changed.	Feb. 2008		5th Edition	E9	Dialog box changed.
	Aug. 2008	CP-UM-5175JE	8th Edition		Manual Number changed.



### Yamatake Corporation Advanced Automation Company

1-12-2 Kawana, Fujisawa Kanagawa 251-8522 Japan

URL: http://www.azbil.com

Specifications are subject to change without notice. (08)