

SONY®



EN

CT



## Quick Reference

### 快捷參考

SCPH-90006

SCPH-90007

Before using this product, carefully read the supplied documentation and retain it for future reference.

使用本機以前，請先詳細閱讀隨附的文件，並妥善保存，以備將來參考之用。

## Warning

**To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.**

**To prevent fire or shock hazard, do not place a container filled with liquids on top of the console.**

 
**To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.**

## Caution

**The use of optical instruments with this product will increase eye hazard. As the laser beam used in this unit is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.**

Place the console at least 10 cm (4 in) away from walls or surrounding objects.

Placing the console close to walls or other objects can cause it to overheat.

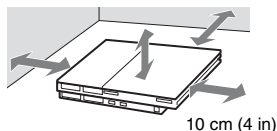

## Read carefully before operating your PlayStation®2 console

A few people may experience epileptic seizures when viewing flashing lights or patterns in our daily environment. These persons may experience seizures while watching TV or playing video games, including DVD-Videos or games played on the PlayStation®2 console. Players who have not had any seizures may nonetheless have an undetected epileptic condition. Consult your physician before operating the PlayStation®2 console if you have an epileptic condition or experience any of the following symptoms while watching TV programs or playing video games: altered vision, muscle twitching, other involuntary movements, loss of awareness of your surroundings, mental confusion and/or convulsions.

## Software title compatibility

Some PlayStation® or PlayStation®2 format software titles may perform differently on this console than they do on previous PlayStation®2 or PlayStation® consoles, or may not perform properly on this console. For more information, call the PlayStation® service line at the number listed on your warranty card for technical assistance.

## Precautions

### Safety

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

- Observe all warnings, precautions and instructions.
- Stop use and unplug the AC power cord from the electrical outlet immediately if the device functions in an abnormal manner or produces unusual sounds or smells.
- Never connect cables other than those specified in this manual to the network connector.
- Call the PlayStation® service line at the number listed on your warranty card for technical assistance if the device does not operate properly.

### Use and handling

- When operating the unit, play in a well-lit room and keep a safe distance from the TV screen.
- Avoid prolonged use of the console. To help prevent eye strain, take a break of about 15 minutes during every hour of play.
- Stop using the console immediately if you experience any of the following symptoms. If the condition persists, consult a doctor.
  - Lightheadedness, nausea, or a sensation similar to motion sickness
  - Tired, uncomfortable or aching hands or arms
  - Tired, dry or aching eyes
- Do not use the console near water.
- Do not place the console and connected accessories on the floor or in a place where they may cause persons walking by to trip or stumble.
- Do not place the console or accessories on surfaces that are unstable, tilted or subject to vibration.
- Do not expose the console or accessories to high temperatures, high humidity or direct sunlight (use in an environment where temperatures range from 5°C to 35°C/ 41°F to 95°F).
- Do not place the console in locations of poor ventilation such as small, enclosed areas, directly against a wall or on a thick carpet or bedding.
- Do not expose the console to dust, smoke or steam.

- Do not allow liquid or small particles to get into the console.
- Do not put any objects on the console.
- Do not touch or insert foreign objects into the connectors of the console or accessories.
- Do not allow dust or foreign matter to build up around the console vents. Remove the dust with a low-powered vacuum cleaner.
- Set the console in a vertical or horizontal position only. When placing in the vertical position, use the vertical stand (for PlayStation®2) (SCPH-90110) (sold separately) that is compatible with this console. Also, do not change the position while the console is turned on.
- Do not leave a disc in the console when moving or changing the position of the console.
- Do not touch a disc while it is spinning.
- Do not close the disc cover in a way that could pinch your hand or fingers.
- Adjust the settings of the DVD player according to the instructions provided before playing a DVD.
- Do not place any rubber or vinyl materials on the console exterior for an extended period of time.
- Keep the console and accessories, including cable ties and fasteners, out of the reach of small children.

### AC power cord use

- Do not touch the plug of the AC power cord with wet hands.
- Do not touch the console or connected accessories during an electrical storm.
- Do not touch the console for extended periods of time while the console is turned on as extended contact may cause low-temperature burns.
- To help ensure safe operation, regularly inspect the AC power cord. If damaged, stop use immediately and call the PlayStation® service line at the number listed on your warranty card for assistance.
- Do not use a power cord other than the supplied AC power cord.
- Check that there is no dust or lint on the mains power plug before inserting into an electrical outlet. If the plug becomes dirty, wipe it off with a dry cloth before connecting.
- Do not allow dust or foreign matter to build up around the connectors on the console. Before connecting or plugging in cords or cables, also check that there is no dust or foreign matter on the connectors of the cords or cables, or in or on the socket of the wall outlet. Dust or other matter on the connectors can result in fire

or electrical shock.

- Unplug the AC power cord from the electrical outlet before cleaning or moving the console, or when you do not intend to use the console for an extended period of time. When disconnecting, grasp the power cord by the plug and pull straight out of the electrical socket. Never pull by the cord and do not pull out at an angle.
- Do not connect the AC power cord to a voltage transformer or inverter.

## Notes on safety when using the analog controller (DUALSHOCK®2)\*

- Stop using the console immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms while operating the analog controller (DUALSHOCK®2). If the condition persists, consult a doctor.
- The vibration function of the analog controller (DUALSHOCK®2) can aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints or muscles of your hands or arms. Note that some PlayStation®2 and PlayStation® format software titles set the vibration function to "On" by default. In most cases, the vibration function can be set to "Off" in the options menu of the software. If you have an ailment or an injury, do not play such titles using the analog controller (DUALSHOCK®2) unless you have set the vibration function to "Off".
- Avoid prolonged use of the analog controller (DUALSHOCK®2). Take a break at about 30-minute intervals.  
\* These notes also apply to other controllers.

## Network (except Local Area Networks)

- A broadband Internet connection is required to connect to a network.
- When you connect your PlayStation®2 console to a network, the Internet service provider may charge additional usage fees. In some cases, usage charges may be more than anticipated. For details, refer to the information provided in your service contract or contact your Internet service provider.
- Parents are encouraged to monitor children in online gaming to ensure safe and responsible Internet usage.

## Connecting with an Ethernet cable

Do not connect Ethernet cables or telephone cords of the following types to the network connector:

- Ethernet cables not appropriate for use with a 10Base-T/100Base-TX network

- Standard residential telephone lines
- Any ISDN (digital) compatible phone or data line
- PBX phone lines
- Other "unknown" types of telephone lines

## Disc handling

- Do not touch the disc surface when handling a disc; hold it by the edges.
- Do not stick paper or tape onto discs and do not write on discs.
- Fingerprints, dust, dirt or scratches on the disc can distort the picture or reduce sound quality. Always handle carefully and make sure discs are clean before use.
- Do not leave discs near a heat source, in direct sunlight or in high humidity.
- Store discs in their cases when not in use.
- Clean discs using a soft cloth, lightly wiping from the center outwards.  
Do not use solvents such as benzene, commercially available cleaners not intended for CDs or anti-static spray intended for vinyl LPs.
- Do not use irregularly shaped discs (for example, heart- or star-shaped discs) or damaged, reshaped or repaired discs.

## Never disassemble the console or supplied accessories

Use the PlayStation®2 console and accessories according to the instructions in the product documentation. No authorization for the analysis or modification of the console, or the analysis and use of its circuit configurations, is provided. There are no user serviceable components inside the PlayStation®2 console. Disassembling the console will void the warranty. Additionally, there is a risk of exposure to laser radiation as well as to electrical shock hazards.

## When connecting the console to a plasma or projection\* TV

Do not leave a still image on the TV screen for an extended period of time, as this may leave a faint image permanently on the screen.

\* Except LCD screen types

## Note on safety when playing DVDs or CDs

If you set the volume too high, it may harm your hearing or damage the speakers. Exercise care when setting the volume.

## Moisture condensation

If the console or disc is brought directly from a cold location to a warm one, moisture may condense on the lens inside the console or on the disc. Should this occur, the console may not operate properly. In this case, remove the disc and turn off and unplug the console. Do not put the disc back in until the moisture evaporates (this may take several hours). If the console still does not operate properly, call the PlayStation® service line at the number listed on your warranty card for technical assistance.

## Cleaning

- For safety reasons, before cleaning the console or connected accessories, 1) turn off the console, 2) disconnect the mains power plug for the console from the electrical outlet, and 3) disconnect the Ethernet cable from the console.
- When cleaning the console, use a soft, dry cloth. Do not use solvents or other chemicals or a chemically-treated dust cloth to clean the product.
- Do not touch the lens located inside the disc cover. To help protect the lens from dust, keep the disc cover closed except when inserting or removing discs.

## Exterior protection

To help prevent damage to the painted parts, follow the precautions below:

- Do not spill liquids such as alcohol, solvents or other chemicals on the product.
- Do not place any rubber, vinyl or plastic items on the painted surfaces for an extended period of time.

### Differences to previous PlayStation®2 models

This version of the PlayStation®2 console may be different from previous models in compatibility with optional accessories and the method of operating game software. For full details call the PlayStation® service line at the number listed on your warranty card.

## About the PlayStation®2 console documentation

The PlayStation®2 console documentation includes the following:

- **Quick Reference (this document)**

This document contains information on setting up and performing basic operations on the console, as well as safety and troubleshooting information.

- **User's Guide (<http://asia.playstation.com/support>)**

This document (in PDF format) is accessed from a PC through the Internet and contains information on performing advanced operations on the console, technical specifications and other information.

## Checking the package contents

Check that you have all of the following items. If any items are missing, call the PlayStation®2 service line at the number listed on your warranty card for assistance.

- PlayStation®2 console ...1
- Analog controller (DUALSHOCK®2) ...1
- AV cable ...1
- AC power cord ...1
- Printed materials

# 1

## Setting up the PlayStation®2 console

 
### ⚠ Warning

- Do not plug the AC power cord for the console into an electrical outlet until you have made all other connections.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

EN

### Before setting up

- Do not place the console in locations subject to excessive cigarette smoke or dust. Cigarette smoke residue or dust build-up on the internal components, such as the lens, may cause the console to malfunction.
- Make sure the TV is turned off before connecting the PlayStation®2 console.

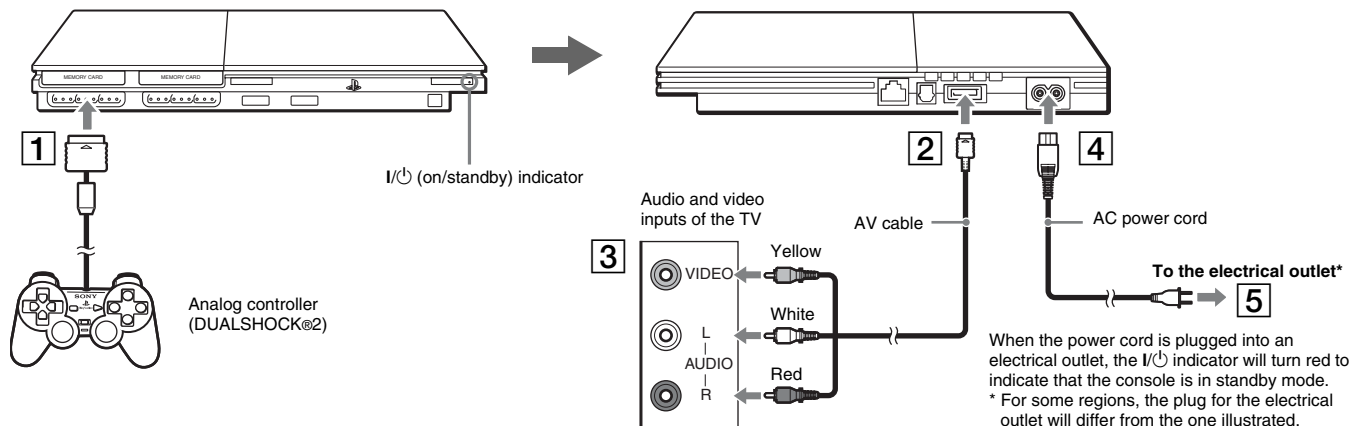


When using a cable other than the supplied AV cable, see "When using a cable other than the supplied AV cable" (→ page 13).

### Hint

 You can connect various USB devices to the PlayStation®2 console, but not all are compatible. Refer to the instructions supplied with the USB device for more information.

# 2

## Turning the console on and off

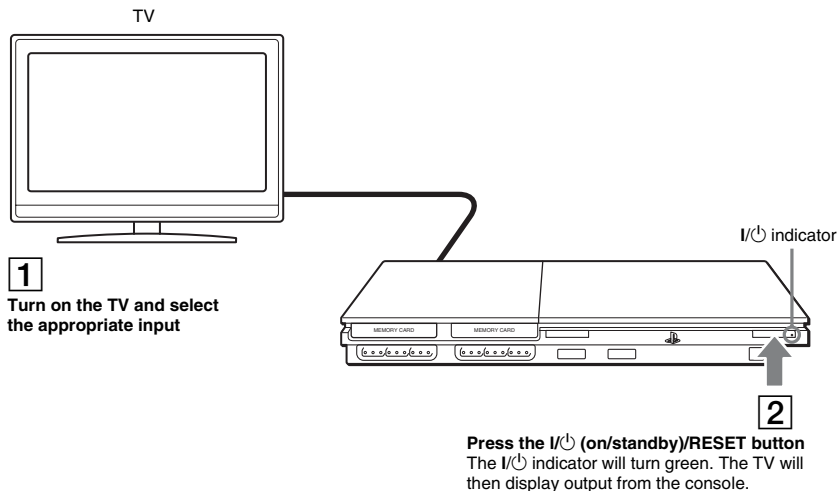

### Turning off the console

Press and hold the I/O/RESET button for at least one second. The I/O indicator will turn red to indicate that the console is in standby mode.

#### Hint

 
In standby mode, power to the console is not completely turned off. If you will not be using the console for an extended period of time, unplug the power cord from the outlet.

# 3

## Playing content

You can play games, DVD-Videos and audio CDs on the PlayStation®2 console.

Insert the disc to start playback.

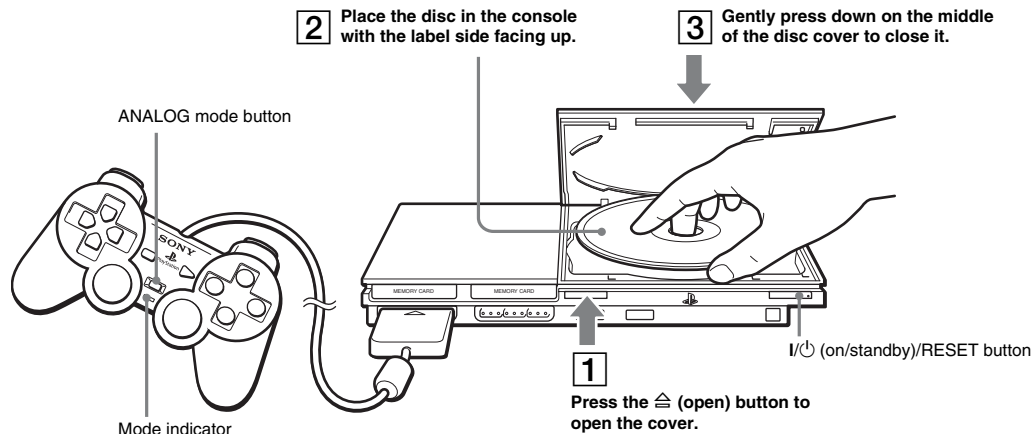

For instructions on playing a game, see "Playing a game" (→ page 10).

For DVDs, see "Watching a DVD" (→ page 11).

For audio CDs, refer to the User's Guide (→ page 6).

### Outputting Dolby Digital or DTS Audio

Connect a digital audio device to the PlayStation®2 console using a commercially available digital optical cable (for audio).

- To output audio from DVD-Videos: From the control panel (→ page 11), set "Dolby Digital" or "DTS" to "On" under (Setup) → "Audio Setup" → "Audio Digital Out".
- To output audio from games: The setup method varies depending on the game. For details, refer to the instructions supplied with the game.

## Playing a game

You can play PlayStation®2 and PlayStation® format software on the PlayStation®2 console.

### Starting a game

Insert the disc to start playback.

### Resetting a game

Press the I/⏻/RESET button. Be careful not to accidentally press the I/⏻/RESET button while playing a game, as doing so will cause the game to reset.

### Ending a game

After saving game data, turn the console off, and then remove the disc.

### Using the analog controller (DUALSHOCK®2)

The analog controller (DUALSHOCK®2) is equipped with pressure-sensitive buttons and sticks. This enables you to control game action with enhanced precision based on the force with which buttons are pressed or the angle at which the analog stick is tilted. It is also a force feedback controller with a vibration function.

### Switching modes

Depending on the game, you may need to set the controller to either digital or analog mode. Press the ANALOG mode button of the controller to switch to the analog mode (indicator: red). To return to digital mode, press the ANALOG mode button again. Some games make this adjustment automatically.

## Using memory cards

You can save and load game data using a memory card (sold separately). You can also delete game data or copy game data from one memory card to another.

### Memory card types

 
There are two types of memory cards. Select a memory card suitable for the software in use.

Memory card type	Compatible software	Amount of memory
Memory card (8MB) (for PlayStation®2) (SCPH-10020 G)	PlayStation®2 format software	Approx. 8 MB
Memory card (SCPH-1020)* * This product is no longer manufactured.	PlayStation® format software	15 memory blocks (approx. 120 KB)


MagicGate™ is a term of copyright-protection technology developed by Sony Corporation.

### Inserting a memory card

Insert the memory card into a memory card slot. Some games designate a specific memory card slot to use.

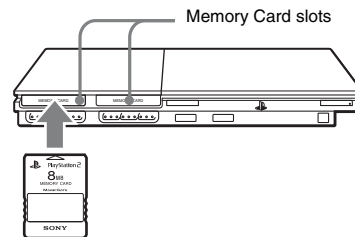

### Copying or deleting saved data

You can delete saved data or copy data to another memory card.  
Use directional buttons and the  button to select items.

- 1 With no disc inserted in the console, turn on the console, and then insert a memory card.
  - 2 Select "Browser", and then select the memory card you want to copy or delete data from.
  - 3 Select the icon for the data item, and then select "Copy" or "Delete".
- Follow the on-screen instructions to complete the operation.

### Playing online games

 
You can play online games by connecting the PlayStation®2 console to a network.

#### Items you will need

- A network compatible PlayStation®2 game
- Broadband Internet service
- A commercially available Ethernet cable
- A memory card (8MB) (for PlayStation®2) (sold separately)

#### Creating a network configuration

When playing online games, insert a commercially available Ethernet cable into the network connector, and then create a network configuration. Refer to the instructions supplied with the online game for creating a network configuration.

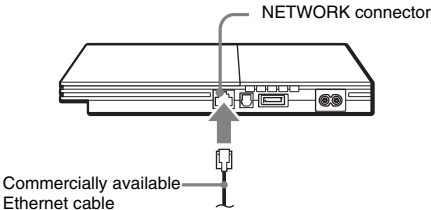

### Watching a DVD

 
You can play DVDs on the PlayStation®2 console.

### Starting a DVD

Insert the disc to start DVD playback.

### Operating the DVD player

Press the SELECT button.

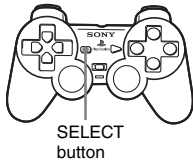






→  
The control panel is displayed on the screen.

Select an icon.



#### Control panel items

You can select the following options in the control panel.

Icon		Function
	Menu	Displays the DVD-Video menu
	Top Menu	Displays the DVD-Video menu
	Return	Returns to the previously selected screen within the DVD's menu
	Audio Options	Displays and changes audio options on DVDs with multiple audio tracks
	Angle Options	Displays and changes viewing angles on DVDs recorded with multi-angle options

Icon		Function
	Subtitle Options	Displays and changes subtitle options on DVDs with subtitle options
	Go To	Skips to the selected title, chapter or the specified time, and starts playback
	Setup	Displays and changes options for language, picture quality, Parental Control level, audio, etc.
	Time Display	Displays the current title or chapter number, the elapsed time, etc.
	Help	Displays the direct button functions of the analog controller (DUALSHOCK®2)
<b>0~9</b>	Go to Chapter	Used to enter the number of a chapter you want to play
	Previous/Next	Returns/skips to the beginning of the current, previous or next chapter
	Search	Fast reverses/forwards playback
	Slow	Changes to playback/reverse playback in slow-motion
	Play	Starts playback
	Pause	Pauses playback
	Stop	Stops playback. Selecting ■ (Stop) again after playback is stopped clears resume play (playback from the last stopping point).
<b>A-B</b>	A-B Repeat	Specifies a scene for playback, and starts playback of the scene that has been set
<b>SHUF</b>	Shuffle Play	Begins playback of titles or chapters in a random order
<b>PGM</b>	Program Play	Begins playback of titles or chapters in a programmed sequence
	Repeat Play	Selects repeated playback of all the titles on the disc, or one title or one chapter


Icon		Function
<b>P LIST</b>	Original/Play List	For DVD-RW discs (VR mode), selects Original or Play List content to play
<b>CLEAR</b>	Clear	Clears selected numbers or playback modes

#### Hints

- For more details on control panel items, refer to the User's Guide (▶▶ page 6).
- The DVD player can be operated using the DVD remote control (for PlayStation®2) (sold separately).
- Some control panel options cannot be selected during resume play. To select these options, cancel resume play by selecting ■ (Stop) on the control panel and then selecting ■ (Stop) again after playback is stopped.

## Parental control settings

### Setting parental control restrictions

From the control panel, select  (Setup) → "Custom Setup" → "Parental Control".

Follow the on-screen instructions to register or enter the password. After the password is registered or entered, proceed through the various screens to select a region or parental control level.

#### Hints

- If you select "Other" in the region options, refer to the User's Guide for a list of region codes.
- For the parental control level, note that the lower the value, the stricter the restriction.
- To clear the parental control setting, set the option to "Off".
- To change your password, select "Change Password" from the parental control options and follow the on-screen instructions to complete the operation.

### Temporary override of parental control restrictions

Start DVD playback. When prompted by the system, select "Yes", and then enter the password.

#### Hints


- You cannot change the parental control setting without a password.
- When DVD playback is stopped, the parental control level will return to its default setting.
- If you forget your password, see "Troubleshooting" (▶▶ page 16).

## When using a cable other than the supplied AV cable

Picture quality varies depending on the type of cable used. Use the information below to determine the best connection method. If you use a cable other than the supplied AV cable, refer to the instructions supplied with the cable.

TV	Cable type
A TV with S VIDEO inputs	S VIDEO cable (SCPH-10480)
A TV with component video input connectors	Component AV cable (SCPH-10490)
 
### Picture quality scale



This scale is intended only as a reference. Depending on the product or condition of your TV, the picture quality may be different.

## Compatible software





DVD	PlayStation®2 format DVD-ROM
	DVD-ROM (DVD-Video)
	DVD+R / DVD+RW
	DVD-R / DVD-RW (Video mode / VR mode)
CD	PlayStation®2 format CD-ROM
	PlayStation® format CD-ROM
	CD-DA (Audio CD)

### Notes

- Some discs may not be playable due to scratches, dust or recording problems.
- Throughout this manual, the term "DVD-Video" is used to refer to DVD-R, DVD-RW (Video mode), DVD+R and DVD+RW discs.
- The audio CD playback feature of this product is designed to conform to the Compact Disc (CD) standard. Recently, some record companies have started marketing music discs encoded with copyright protection technologies. Some of these music discs do not conform to the CD standard and may not be playable on this product.
- A DualDisc is a two sided disc product that contains DVD recorded material on one side and digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.
- Do not play illegally copied discs. This may cause a malfunction or damage to the console.

## Region codes

Some discs are assigned "region codes" for each geographic sales region. This console can play discs with the following region codes.

Disc	Region code
DVD	 
PlayStation®2 format DVD-ROM PlayStation®2 format CD-ROM PlayStation® format CD-ROM	 

## DVD-Videos

This console can only play discs recorded for the NTSC broadcast standard.

## DVD-R, DVD-RW, DVD+R and DVD+RW discs

- Only discs that have been finalized can be played.
- Copy-protected video from a digital broadcast recorded on Content Protection for Recordable Media (CPRM) compatible DVD-RW discs or on CPRM compatible DVD-R discs cannot be played back on this console.

## Accessories

When purchasing optional accessories, be sure to purchase those that are compatible with this model of the PlayStation®2 console.

### About the DVD remote control (for PlayStation®2)


When purchasing a new DVD remote control, choose model number SCPH-10420 G which does not include the IR receiver unit (for PlayStation®2).

### About multitaps

Only the multitap (for PlayStation®2) (SCPH-70120 G) (sold separately) can be used with this console. Do not connect multitap products with other model numbers to the console as this may result in damage to the console.

## Accessories not compatible with this model

The following accessories for the PlayStation® console and the PlayStation®2 console are not compatible with this model of the PlayStation®2 console.

Model number	Product name
SCPH-10090 G	Multitap (for PlayStation®2)
SCPH-1070 G	Multitap
SCPH-10040 G	Vertical stand (for PlayStation®2)
SCPH-70110	Vertical stand (for PlayStation®2)
SCPH-10110 G	Horizontal stand (for PlayStation®2)
-	Products that use the  S400 i.LINK connector

## Troubleshooting

Go through this section if you experience difficulty in operating the PlayStation®2 console. Should any problem persist, call the PlayStation® service line at the number listed on your warranty card for assistance.

### Check the following items first:


- Check that the console is turned on. Press the I/⏻ RESET button to turn on the console (the I/⏻ indicator will turn green).
- Check that the AC power cord is fully inserted into the electrical outlet.
- Check that the cables are correctly and securely connected.

## Picture

### There is no picture on the TV screen.

- ➔ Switch the input mode of the TV as appropriate for the input connector in use on the console.
- ➔ There may be a problem with the cable. Try using another cable that is compatible with the PlayStation®2 console.

### The picture is unstable.


- ➔ Set "Component Video Out" to "Y Cb/Pb Cr/Pr" in the System Configuration menu when connecting the console to the component AV inputs on a TV\*. Use the supplied AV cable to make the setting, and then connect to the TV using the component AV cable (sold separately).  
\* When connecting the console to a TV that only supports RGB input, set "Component Video Out" to "RGB".
- ➔ When the console is connected to a VCR or a DVD recorder, copy protection used by some DVDs may cause the picture to become unstable, or the picture may get brighter or darker. If this happens, connect the console directly to the TV.
- ➔ If the console is connected to a TV or cable\*<sup>1</sup> that does not support progressive scan (480p), no video will be displayed when "Progressive" is set to "On" under  (Setup) → "Screen Setup" in the DVD player's control panel. In this case,

with a DVD inserted, press the I/⏻/RESET button and immediately press and hold down the START button of the controller\*<sup>2</sup>. The "Progressive" setting will be cleared and video from the DVD will be displayed properly.

\*<sup>1</sup> The component AV cable (sold separately) is compatible with progressive scan.

\*<sup>2</sup> Connect the controller to controller port 1.

### The size of the video image and the TV screen do not match.

- ➔ If the console is connected to a widescreen TV (16:9), check the settings on the TV as they may override those for the console. Refer to the instructions supplied with your TV for details.
- ➔ Adjust the image size of the DVD to match your TV screen. Start a DVD, and then stop playback. Adjust the "TV Type" setting under  (Setup) → "Screen Setup" in the control panel.
- ➔ With some DVDs, image size cannot be changed.
- ➔ Check that the console is directly connected to the video input connector of the TV. If there is a selector or receiver (AV amplifier) connected between the console and the TV, the image size cannot be changed.
- ➔ With some TVs, image size cannot be changed.


## Sound

### There is no sound.

- ➔ Check that the TV volume is not set to "mute" and adjust the TV volume to an appropriate level.
- ➔ If the console is connected to an audio device, check the settings on the connected device. Refer to the instructions supplied with the device for details.
- ➔ There may be a problem with the cable in use. Try using another cable that is compatible with the PlayStation®2 console.
- ➔ Some PlayStation®2 format software titles do not support audio output from the DIGITAL OUT (OPTICAL) connector. When playing such software, no sound will be produced even if you connect using an optical digital cable for audio. Connect the console to the audio device using an analog AV cable, such as the supplied AV cable.


---

### **There is no sound or the sound quality from the digital audio device is poor.**

- ➔ If the console is connected to a digital audio device you must adjust the "Digital Out (Optical)" setting. Turn on the console with no disc inserted, and in the System Configuration menu set "Digital Out (Optical)" to "On".
- ➔ When playing DTS audio, set "DTS" to "On" in  (Setup) → "Audio Setup" → "Audio Digital Out". If the connected device does not have a built-in DTS decoder, DTS audio cannot be played.

---

### **The surround effect is not produced when playing a DVD with a Dolby Digital audio track.**

- ➔ Check that the console is connected to an audio device with a built-in Dolby Digital decoder using an optical digital cable.
- ➔ To play Dolby Digital audio, set "Dolby Digital" to "On" in  (Setup) → "Audio Setup" → "Audio Digital Out" in the DVD player control panel.

## **Operation**

---

### **A disc cannot be played.**

- ➔ Check that the disc is of a type that can be played on the console.
- ➔ Check that the disc is clean and in good condition. If the disc is dirty, wipe it gently with a soft cloth.
- ➔ Some PlayStation® format software may not perform properly on this console. For more information, call the PlayStation® service line at the number listed on your warranty card for assistance.
- ➔ If the disc has a label, place the disc in the console with the label side facing up.
- ➔ If a DVD-R or DVD-RW disc is not finalized, it cannot be played.
- ➔ Copy-protected video from a digital broadcast recorded on Content Protection for Recordable Media (CPRM) compatible DVD-RW discs or on CPRM compatible DVD-R discs cannot be played back on this console.
- ➔ Check that the region code of the DVD is correct for the console in use. Also check that the broadcast standard is correct.
- ➔ The parental control feature may be set on the disc. Follow the on-screen instructions and temporarily raise the parental control restriction level.

---

### **The controller does not function correctly.**

- ➔ If a software title is compatible only with the analog controller (DUALSHOCK®2), it will not work properly with the analog controller (DUALSHOCK®). Use a controller that is appropriate for the software title. Refer to the instructions supplied with the software for details.
- ➔ Some software specifies a specific controller port that must be used. Check that the controller is connected to the correct port. Refer to the instructions supplied with the software for details.
- ➔ Try using another controller that is compatible with the PlayStation®2 console. There may be a problem with the controller in use.

---

### **The response to button operations is slow.**

- ➔ The response speed of some LCD TVs and PC displays is slow. This is not a malfunction.

---

### **The left and right analog sticks of the controller do not operate properly.**

- ➔ When symptoms occur, rotate the left and right analog sticks of the analog controller (DUALSHOCK®2) in a large circle to adjust the sticks to an optimal range of operation. Be sure to rotate in a circle, not twist the sticks.

---

### **The console does not recognize the memory card. Data cannot be saved or copied to the memory card.**

- ➔ Check that the memory card is compatible with the software in use. To save or load PlayStation®2 format software, use a memory card (8MB) (for PlayStation®2) (SCPH-10020 G). To save or load PlayStation® format software, use a memory card (SCPH-1020).
- ➔ You cannot copy saved data from PlayStation®2 format software to a memory card (SCPH-1020).
- ➔ Check that the memory card is securely inserted into the console.
- ➔ There may be a problem with the memory card in use. If you have another memory card that is compatible with the PlayStation®2 console, try switching memory cards.

---

### Data saved on a memory card is corrupted.

- ➔ While saving, loading, copying or deleting data, do not attempt any of the following. Doing so may cause the data to become corrupted.
- Do not remove the memory card or the controller.
  - Do not open the disc cover.
  - Do not reset the console.
  - Do not turn off the console.

---

### The console does not function properly.

- ➔ Static electricity and other similar occurrences may affect the console's operation. Turn off the console and unplug it from the electrical outlet. Then plug in the console and turn it on.



---

### The I/O indicator flashes in red and the console does not work.

- ➔ Do not use the console until the flashing stops. Placing the console in an extremely hot location or blocking the console's vents raises the internal temperature of the console, thereby preventing proper operation.

---

### You forgot your password.

- ➔ You can clear the password using the following procedure:
- 1 **Insert a DVD without the parental control feature.**
  - 2 **In the control panel, select ■ (Stop) to stop playback, and then select ■ (Stop) again to clear resume play.**
  - 3 **In the control panel, select  (Setup) → "Custom Setup" → "Parental Control" and then press the  button.**  
The screen to enter a password is displayed.
  - 4 **Press the SELECT button on the controller, and then enter the number "7444" on the screen that is displayed.**  
The registered password is cleared, and the screen for registering a new password is displayed. Enter a new password.

---

### The DVD does not function. Some DVD settings cannot be changed.

- ➔ The playback status or settings of some DVDs have been preset intentionally by the manufacturer. Because the PlayStation®2 console plays DVDs according to

the settings on the disc, some functions may not be available even if you follow the procedures in this document.

- ➔ Some settings cannot be changed during playback or resume play. Select ■ (Stop) in the control panel to stop playback, and then select ■ (Stop) again to clear resume play.

## Network


---

### A connection to the network cannot be established.

- ➔ Check that the network settings are correct. Refer to the information from your broadband Internet service provider and the instructions supplied with the software in use and adjust the settings accordingly.
- ➔ Check that the Ethernet cable is properly connected.
- ➔ Check that you are using the correct type of Ethernet cable (cross cable or straight cable). Refer to the instructions supplied with the network device for details.
- ➔ Check that the network device is properly connected. Also check that the settings of the network device in use are correct. Refer to the instructions supplied with the network device for details.

## Copyrights and trademarks

"", "PlayStation", "", and "DUALSHOCK" are registered trademarks of Sony Computer Entertainment Inc.

"SONY" and " " are registered trademarks and "MagicGate" is a trademark of Sony Corporation.

This product is manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of DTS, Inc.

i.LINK and i.LINK logo " " are trademarks.

Sony Computer Entertainment Inc. uses DNAS (Dynamic Network Authentication System), a proprietary authentication system, to help protect copyright and security in connecting the PlayStation®2 console to a network. DNAS may retrieve information about a user's hardware and software for authentication, copy protection, account blocking, system, rules, or game management and other purposes. The information collected does not identify the user personally. The unauthorized transfer, exhibition, export, import or transmission of programs and devices circumventing its authentication scheme may be prohibited by law.

## About copy protection

Attempted copying of DVDs played on this device may be prevented or restricted by copy protection technology contained on the DVD. Attempted recording or copying of DVDs for private use by the removal or circumvention of copy protection technology may be prohibited under applicable law.

EN

## 警告

為減少發生火災或觸電的風險，切勿讓本製品淋雨或置於潮濕場所。

 
為了避免發生火災或觸電，請勿將倒入液體的容器放置於主機上。

為了避免觸電，請勿擅自打開機殼。維修應委託持有執照的專業技術人員進行。

## 注意

使用本機中的光學儀器將增加對眼睛的傷害，因此不可擅自拆卸機殼。維修應委託持有執照的專業技術人員進行。

主機與牆面或周圍物體至少應保持 10cm 的距離。主機與牆面或周圍物體距離太近會使主機過熱。

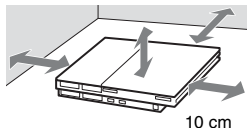

## 使用 PlayStation®2 前務必閱讀以下的注意事項

有極少部分的人，當看到閃光或受強烈的光線照射時會引發癲癇或昏迷等症狀。這種人當觀看電視（包括 DVD）或觀看如這架 PlayStation®2 等遊戲機的畫面時，有時會出現癲癇發作的情形。即使至今未曾有過類似發作經驗的人，亦有遭遇上述症狀之可能。如果您過去曾經罹患癲癇，或是曾經有過眼花撩亂、痙攣、癱瘓、昏迷不醒、精神錯亂或極度興奮等發作經驗的話，在使用本機之前，請先接受醫生的診斷治療。



廢電池請回收

（僅適用於台灣）

## 軟體標題相容性

某些 PlayStation® 或 PlayStation®2 規格的軟體，可能會有在本主機上執行時，出現某些操作與使用以往版本的 PlayStation®2 或 PlayStation® 主機時相比略顯差異，或無法正常執行之情形。如果您需要更多資訊，請就近與保證書上記載的 PlayStation® 消費者服務中心聯繫以獲得技術方面之協助。

## 使用前須知事項

### 關於安全

本產品是在充分重視安全性能的情況下設計的。但如果使用不當，任何電器產品都有可能引起火災觸電或人身傷害的潛在危險。為確保安全操作，請遵循以下各項規則：

- 遵守所有警告條文注意事項及使用說明。
- 如果裝置出現動作不正常，或者發出異常聲音或氣味時，請立即停止使用，並從電源插座中拔掉交流電源線插頭。
- 切勿將本手冊中規定之外連接線連接到網路連接端子上。
- 如果裝置有故障，請打電話給保證書上記載的 PlayStation® 消費者服務中心。

### 使用和保養

- 請選擇光線良好的房間使用本機，並與電視機螢幕保持一段安全距離。
- 避免長時間使用主機。為防止眼睛緊張疲勞，每播放一小時應休息 15 分鐘左右。
- 如果感到有以下任何症狀，請立即停止使用主機。如果狀況持續存在，請立即就醫。
  - 頭昏眼花、噁心、或類似暈船感覺
  - 手或手臂疲勞、不舒服或疼痛
  - 眼睛疲勞、乾燥或疼痛
- 切勿在水源附近使用主機。
- 切勿將主機和所連接的附屬品放置在地板上，或放置在可能造成人員走過被絆倒的地方。
- 請勿將主機或附屬品放在不平穩、傾斜或易受振動的地方。
- 請勿將主機或附屬品放在高溫、濕氣極重或日光直射的地方（使用溫度範圍為 5 °C 至 35 °C / 41 °F 至 95 °F）。
- 請勿將主機放在通風不良的地方，如小而封閉的區域內，直接靠牆或很厚的地毯或床褥上。
- 請勿將主機暴露在灰塵、煙霧或蒸氣中。
- 請勿讓液體或小顆粒進入主機。

- 請勿在主機上放置任何物體。
- 請勿觸摸、或將異物插入主機或附屬品的各端子內。
- 請勿讓灰塵或異物集聚在主機通風口的周圍。可用低功率的真空吸塵器清除灰塵。
- 請只選擇垂直或水平的放置方式放置主機。以垂直方式放置時，請使用垂直支架（用於 PlayStation®2）與本主機相容的（SCPH-90110）（選購品）。另外，於開啟主機電源後，請勿突然改變位置。
- 當移動或改變主機位置時，請勿將光碟留在主機內。
- 請勿觸碰旋轉中的光碟。
- 關閉光碟蓋時，應多加小心，避免夾傷手或手指。
- 播放 DVD 之前，請先參考說明調整 DVD 播放設定。
- 請勿將橡膠或塑膠製品長期放置在主機機殼。
- 請將主機與周邊機器（包括連接線之連接頭等零件）放置在幼童拿不到的地方保管。

### 交流電源線的使用方法

- 切勿用潮濕的手觸摸交流電源線插頭。
- 在雷雨中，切勿觸摸主機或所連接的附屬品。
- 在主機處於開啟狀態時，切勿長時間觸摸主機，否則可能會造成低溫灼傷。
- 為確保安全操作，應定期檢查交流電源線。如果損壞，請立即停止使用，並打電話給保證書上記載的 PlayStation® 消費者服務中心尋求協助。
- 除提供的交流電源線以外，切勿使用其他電源線。
- 將主電源插頭插入電源插座之前，請確保插頭上沒有灰塵或棉絨。如果插頭已經髒污，請在連接之前用乾布擦拭乾淨。
- 請勿讓灰塵或異物集聚在主機連接端子的周圍。連接或插入電源線或連接線前，還應確認電源線或連接線的連接器上，或牆壁插座中沒有灰塵或異物。連接器上的灰塵或異物會導致火災或電擊。
- 清潔或移動主機之前，或當您長期不打算使用主機時，請從電源插座中拔出交流電源線插頭。在拔下時，請抓住電源線插頭筆直將插頭拔出電源插座。決不能拉扯電線或強制朝特定方向的拔取。
- 請勿將交流電源線連接至變壓器或反相器。

## 關於使用類比控制器（DUALSHOCK®2）\* 時的安全注意事項

- 如果您開始感覺疲勞，或在操作類比控制器（DUALSHOCK®2）時感到手或手臂不適或疼痛，請立即停止使用主機。如果狀況持續存在，請立即就醫。
- 類比控制器（DUALSHOCK®2）的震動功能會加重傷勢。如果手或手臂的骨骼或關節有病狀的話，切勿使用震動功能。請注意，有些 PlayStation®2 或 PlayStation® 規格之軟件標題的初期設定將震動功能設定為“關”。在大多數情況下，您可通過軟件的選項選單將震動功能設定為“關”。如果您身體不適或受傷，在使用類比控制器（DUALSHOCK®2）播放此類標題之前，請務必將震動功能設定為“關”。
- 請避免連續長時間使用類比控制器（DUALSHOCK®2）。每 30 分鐘休息一次為宜。  
\* 以上注意事項同樣適用於其他控制器。

## 網路（除區域網路外）

- 要求使用寬頻連接網路。
- PlayStation®2 主機連網時，網路服務運營商可能要求收取額外的使用費。在某些情況下，使用費可能比預期的要昂貴。有關詳情，請參閱您的服務協議中所提供的資訊，或與您的網路服務運營商聯繫。
- 建議家長監督兒童進行線上遊戲，確保網路使用的安全可靠。

## 用乙太網路連接線連接

切勿將以下類型的乙太網路連接線或電話線連接至網路接口：

- 與 10Base-T/100Base-TX 網路不相容的乙太網路連接線
- 一般電話線
- 任何 ISDN（數碼）相容電話線
- PBX 電話線
- 其他“不明”類型的電話線

## 光碟的保養

- 請勿觸摸光碟光亮的讀寫面，持拿光碟時，請勿用手觸摸光碟表裡的光滑面。
- 請勿在光碟上粘貼紙張或膠帶，以及在光碟上寫字。
- 光碟上的指紋、灰塵、污垢或刮痕會導致圖像扭曲或音質下降。平時請仔細保養光碟，以隨時保持光碟的清潔光亮。
- 請勿把光碟放在高溫多濕或日光直射的地方。
- 不使用時，請把光碟收在光碟盒內。
- 請使用乾淨軟布從中心向外輕輕擦拭光碟。擦拭光碟時，請勿使用輕油精等非 CD 專用的市售清潔劑或用於 LP 唱片的防靜電噴霧劑等。
- 請勿使用不規則形狀的光碟（例如，心形或星形光碟）或已經損壞的、經過整形或修補過的光碟。

## 切勿分解主機或提供的附屬品

請按照商品使用說明操作 PlayStation®2 主機及附屬品。嚴禁擅自分解或改造主機，禁止分解和使用其電路結構。用戶不可自行維修 PlayStation®2 主機內的各部品。擅自分解主機將喪失所有保障權益。同時還可能有受雷射線傷害或觸電的危險。

## 將主機連接至電漿電視（Plasma TV）或投影 \* 電視機時

請勿長時間放置，並不斷播放靜止畫面，否則可能會造成影像發生失真殘影的異常現象。

\* 液晶顯示幕類型除外。

## 播放 DVD 或 CD 時的注意事項

若您音量調整得過高，可能會損傷您的耳朵或喇叭。調整音量時請多留意。

## 關於結露現象

若把主機或光碟從寒冷的地方直接搬到溫暖的場所，機內的透鏡或光碟上會凝結水氣。此種現象可能會導致主機出現異常。這時，請把光碟取出，關閉電源，並拔掉主機電源插頭。在水氣尚未蒸發之前，切勿放入光碟（水氣蒸發可能需要數小時）。如果主機仍無法恢復正常操作的話，請打電話給保證書上記載的 PlayStation® 消費者服務中心。

## 關於清潔

- 清潔主機或所連接的附屬品前，為安全起見，請務必 1) 關閉主機，2) 從電源插座中拔出主機主電源插頭。3) 從主機上切斷乙太網路連接線。
- 用柔軟的乾布清潔主機。請勿使用洗滌劑或其他化學製品或經化學處理過的防塵布清潔本產品。
- 切勿觸摸位於光碟蓋內部的透鏡。為了保護透鏡不受灰塵影響，除插入或取出光碟外，請隨時關閉光碟蓋。

## 外部防護

為防止油漆部件的損傷，應遵守以下注意事項：

- 請勿將諸如酒精、洗滌劑或其他化學製品之類的液體濺洒到本產品上。
- 請勿將橡膠、乙烯基或塑料製品長時間放置在油漆表面上。

### 與前機型 PlayStation®2 不同的地方

本機型之 PlayStation®2 主機的附屬品以及遊戲軟件的操作方法有部分與前機型不同。若您想了解詳細內容，請打電話給保證書上記載的 PlayStation® 消費者服務中心。

## 關於 PlayStation®2 主機文件

PlayStation®2 主機文件包括內容：

- **快捷參考（本文）**

本文包含有關主機設定和基本操作，以及安全和故障檢修的資訊。

- **用戶指南 (<http://asia.playstation.com/support>)**

可通過網路查閱本文（PDF 規格），其中包含有關主機進階操作的資訊、技術規格及其他資訊。

## 檢查內容

請檢查和確認箱子內是否具備以下物品：如果欠缺任何物品，請打電話給保證書上記載的 PlayStation®2 消費者服務中心。

- PlayStation®2 主機 …1
- 類比控制器（DUALSHOCK®2） …1
- AV 連接線 …1
- 交流電源線 …1
- 說明書等

# 1

 
## 設定 PlayStation®2 主機

### 警告

- 在完成所有連接之前，請勿將主機交流電源線插頭插入電源插座。
- 請插入接近且容易連接的電源插座。

### 設定之前

- 請勿將主機置於煙塵過多的地方。殘留在透鏡等內部零件上的香煙煙霧或煙灰可能會導致主機發生故障。
- 連接 PlayStation®2 主機之前，務必關閉電視機的電源。

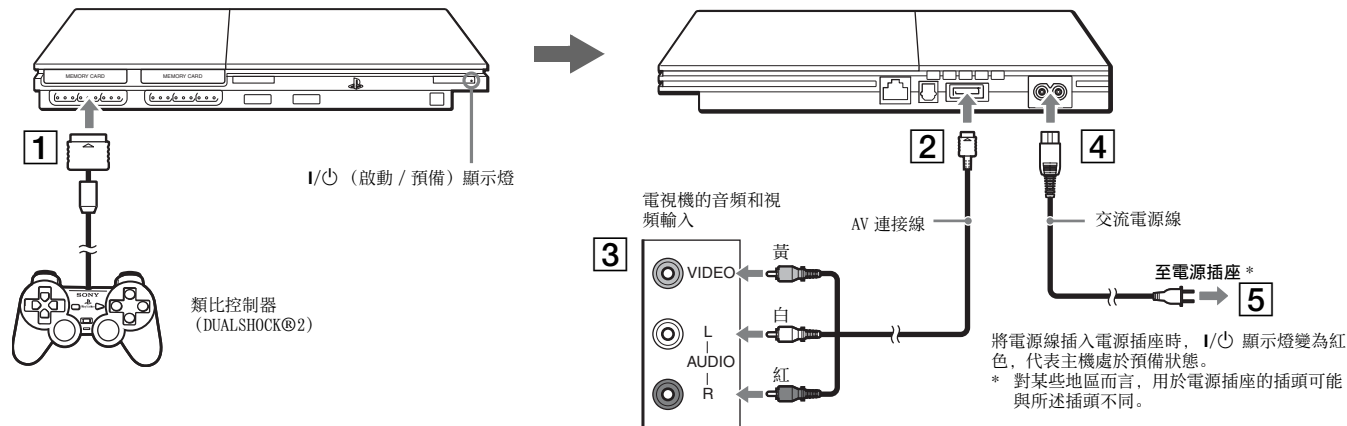


使用附帶 AV 連接線之外的其他連接線時，請參見“使用附帶 AV 連接線之外的其他連接線時”（➡ 頁 31）。

### 提示

 您可以連接不同的 USB 設備至 PlayStation®2 主機，但不一定皆相容。詳細說明請參閱 USB 設備附帶的使用說明書。

# 2

## 打開和關閉主機電源

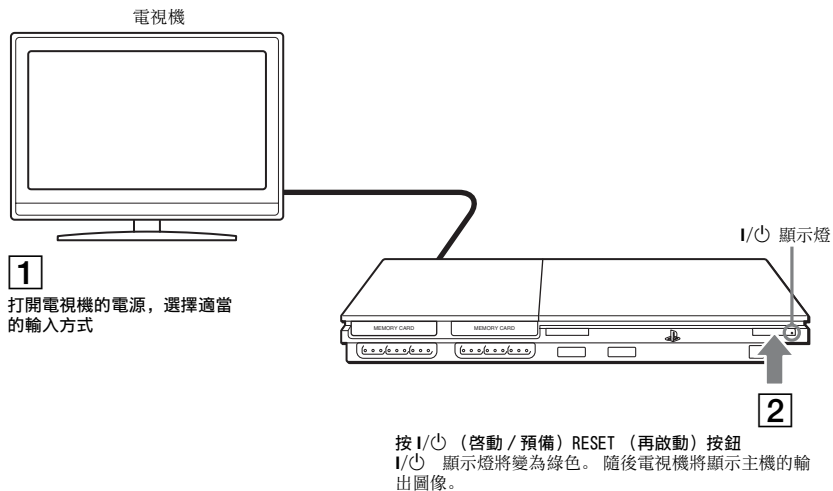

### 關閉主機電源

按住 I/ON/RESET (再啟動) 按鈕一秒鐘以上。I/ON 顯示燈將變為紅色，代表主機處於預備狀態。

 
#### 提示

在預備狀態中，主機的電源並未完全關閉。如果長時間不使用主機，請從插座上拔掉電源線插頭。

# 3

## 播放內容


您可以在 PlayStation®2 主機上播放遊戲、DVD 影像和音樂 CD。  
插入光碟開始播放。

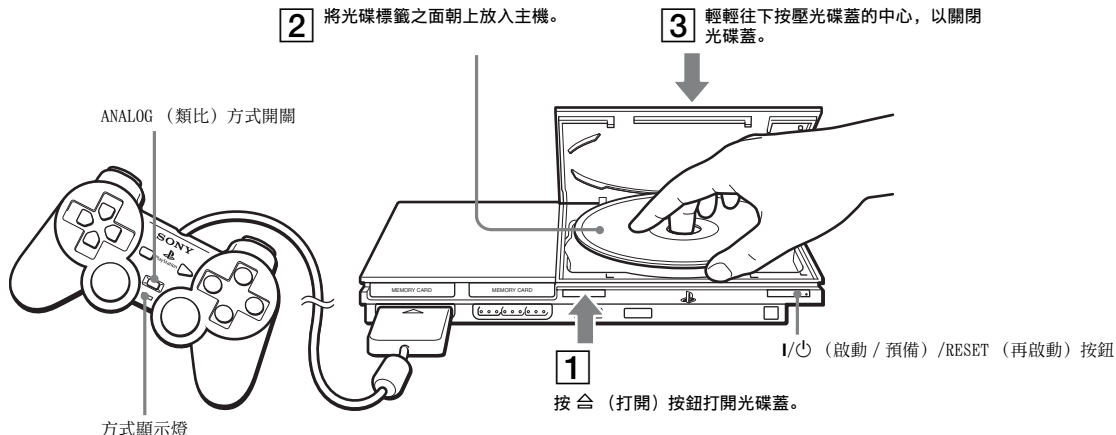

有關玩遊戲的說明，請參見“玩遊戲”（➡ 頁 28）。  
有關 DVD 的說明，請參見“觀賞 DVD”（➡ 頁 29）。  
有關音樂 CD 的說明，請參閱《用戶指南》（➡ 頁 24）。

### 輸出 Dolby Digital 或 DTS 音頻

使用市售的光纖連接線（用於音頻）將數碼音響設備連接到 PlayStation®2 主機上。

- 輸出 DVD 影像中的聲音時：使用控制面板（➡ 頁 29），在 （設定）→ “聲音設定” → “聲音數碼輸出” 項下，將 “Dolby Digital” 或 “DTS” 設為 “開”。
- 輸出遊戲聲音時：設定方式視遊戲而定。有關詳情，請參見遊戲附帶的說明。

## 玩遊戲

您可以在主機上播放 PlayStation®2 和 PlayStation® 規格軟件 PlayStation®2。

### 開始遊戲

插入光碟開始播放。

### 重啓遊戲

按 I/△/RESET（再啟動）按鈕。在玩遊戲過程中，小心不要意外按到 I/△/RESET（再啟動）按鈕，否則將強制中止遊戲，並重新開始。

### 結束遊戲

保存遊戲資料後，關閉主機電源，然後取出光碟。

### 使用類比控制器（DUALSHOCK®2）

類比控制器（DUALSHOCK®2）配備了壓力感應按鈕和操作桿。根據按鈕按壓的力度和類比操作桿傾斜的角度，可以更加精確地控制遊戲的動作。此外，這還是一個帶有振動功能的力反饋控制器。

### 切換方式

您可以根據遊戲，將控制器設為數碼或類比方式。按控制器的 ANALOG（類比）方式開關切換到類比方式（顯示燈：紅色）。要返回到數碼方式，可再次按 ANALOG（類比）方式開關。某些遊戲可自動進行此項調整。

### 使用 Memory Card（記憶卡）

您可以使用記憶卡（另售）保存和載入遊戲資料。您也可以刪除遊戲資料，或從 Memory Card（記憶卡）將遊戲資料拷貝到另外的記憶卡。

### Memory Card（記憶卡）類型

 
Memory Card（記憶卡）分為以下兩種。請配合遊玩的軟件，選擇適當的 Memory Card（記憶卡）使用。

Memory Card（記憶卡）類型	相容軟件	記憶體容量
PlayStation®2 專用 Memory Card（記憶卡）（8MB）（SCPH-10020 G）	PlayStation®2 規格之軟件	約 8MB
Memory Card（記憶卡）（SCPH-1020）* * 本產品不再生產。	PlayStation® 規格之軟件	15 個記憶體區塊（約 120KB）


MagicGate™ 是 SONY 公司開發的著作權保護技術之名稱。

### 插入 Memory Card（記憶卡）

將 Memory Card（記憶卡）插入記憶卡插槽。某些遊戲可能會指定使用專用的記憶卡插槽。

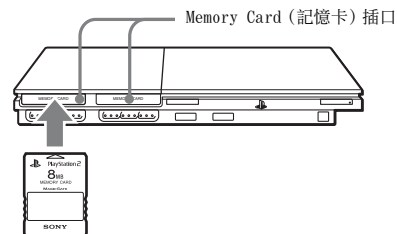

### 拷貝或刪除保存的資料

您可以刪除已保存的資料或將資料拷貝到其他記憶卡上。  
使用方向按鈕及  按鈕選擇項目。

- 1 在主機未插入光碟的情況下，打開主機電源，然後插入記憶卡。
- 2 選擇 “瀏覽器”，然後選擇您要從中刪除或拷貝的記憶卡。
- 3 選擇資料項的圖示，然後選擇 “拷貝” 或 “刪除”。  
請按照畫面顯示說明完成操作。

### 進行線上遊戲

 
將 PlayStation®2 主機連接至網路，即可進行線上遊戲。

#### 所需物件

- 網路相容 PlayStation®2 遊戲
- 寬頻上網服務
- 市售的乙太網路連接線
- PlayStation®2 專用 Memory Card（記憶卡）（8MB）（選購品）

#### 創建網路配置

進行線上遊戲時，將市售的乙太網路連接線插入網路接口，然後創建網路配置。  
有關網路配置的詳情，請參閱線上遊戲附帶的說明。

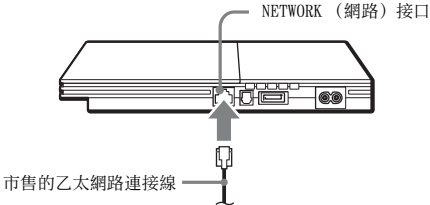

### 觀賞 DVD

您可以在 PlayStation®2 主機上播放 DVD。

### 開始播放 DVD

插入光碟，開始播放 DVD。

 
### 操作 DVD 播放器

按 SELECT（選擇）按鈕。



→  
屏幕上顯示控制  
面板。

選擇圖示。

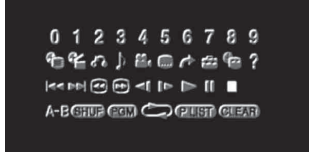

#### 控制面板選項

 
 
 
您可以選擇控制面板中的以下選項。

圖示		功能
	選單	顯示 DVD-Video 選單
	頂部選單	顯示 DVD-Video 選單
	返回	返回至 DVD 選單的前一個選擇畫面
	聲音選項	顯示和變更錄製多種聲音軌跡（語言）之 DVD 的聲音設定
	角度選項	顯示和變更錄製多種取景角度之 DVD 的角度設定

圖示		功能
	字幕選項	顯示和變更錄製字幕之 DVD 的字幕設定
	進入	跳至所選擇的標題、章或指定的時間，並開始播放
	設定	顯示和變更語言、畫質、視聽年齡限制等級、聲音等選項。
	時間顯示	顯示當前標題或章號碼、已播放時間等。
	說明	顯示類比控制器（DUALSHOCK®2）的按鈕功能
<b>0~9</b>	進入章	進入您想要播放的章號碼
	後退 / 前進	返回或 / 跳至當前章、上一章或下一章的開頭
	尋找	快退 / 快進播放畫面
	慢放	以慢動作進行播放 / 倒放
	播放	開始播放
	暫停播放	暫停播放
	停止	停止播放。播放之後再次選擇  （停止）將取消重續播放（從最後的停止點開始播放）。
<b>A-B</b>	A-B 重複播放	指定播放場景，並從已經設定的場景開始播放
<b>SHUF</b>	隨機播放	以任意順序開始播放標題或章
<b>PGM</b>	編序播放	以編排好的順序開始播放標題或章
	重複播放	選擇重複播放光碟上全部標題，或一個標題或一個章


圖示		功能
<b>PLIST</b>	原作品 / 播放目錄	對於 DVD-RW 光碟（VR 模式），請選擇原作品或播放目錄內容進行播放
<b>CLEAR</b>	解除	取消已選擇的數字或播放模式

#### 提示

- 有關控制面板選項的更多細節，請參閱《用戶指南》（ 頁 24）。
- 可使用 PlayStation®2 專用 DVD 遙控器（選購品）操作 DVD 播放器。
- 在重續播放期間不能選擇控制面板的某些選項。若要現在這些選項，可在控制面板上選擇 （停止），然後在停止播放後再次選擇 （停止）。

## 視聽年齡限制設定

### 設定視聽年齡限制

使用控制面板，選擇 （設定）→ “個人設定” → “視聽年齡限制”。按照屏幕說明註冊或輸入密碼。註冊或輸入密碼後，繼續通過各種畫面選擇某個地區或視聽年齡限制等級。

#### 提示

- 如果在地區選項中選擇“其他”，請參照《用戶指南》的地區代碼。
- 對於視聽年齡限制等級，應注意數值越低，限制越是嚴格。
- 要取消視聽年齡限制設定，可將該選項設為“關”。
- 若要變更密碼，請從視聽年齡限制選項中選擇“變更密碼”，然後按照屏幕上的指示完成操作。

### 臨時取消視聽年齡限制

開始播放 DVD。系統彈出提示後，選擇“是”，然後輸入密碼。

#### 提示

- 沒有密碼不能變更視聽年齡限制設定。
- 當 DVD 播放停止時，視聽年齡限制等級將返回至預設標準設定。
- 如果您忘了密碼，請參見“故障檢修”（▶ 頁 34）。

## 使用附帶的 AV 連接線以外的其他連接線時

畫質可能會因您所使用的連接線類型而有所差異。請參閱以下資訊確定最佳的連接方法。如果使用附帶的 AV 連接線以外的其他連接線，請參閱該連接線附帶的說明。

電視機	連接線類型
具備 S 影像輸入端子的電視機	S 視頻連接線（SCPH-10480）
具備影像色差輸入端子的電視機	影像色差連接線（SCPH-10490）

畫質等級圖

高畫質

■ AV 連接線（附帶）

■ S 影像連接線

■ 影像色差連接線

此等級圖僅作參考。畫質可能會因您所選用的電視機或狀況而改變。

## 相容軟件




DVD	PlayStation®2 規格 DVD-ROM
	DVD-ROM (DVD-Video)
	DVD+R / DVD+RW
	DVD-R/DVD-RW (視頻模式 /VR 模式)
CD	PlayStation®2 規格 CD-ROM
	PlayStation® 規格 CD-ROM
	CD-DA (音頻 CD)

## 注意事項

- 某些光碟可能會由於刮傷、灰塵或在錄製過程中發生問題而無法播放。
- 在本手冊中，術語 “DVD-Video” 是指 DVD-R、DVD-RW (視頻模式)、DVD+R 和 DVD+RW 光碟。
- 本產品的音樂CD播放特色是以Compact Disc (CD)的標準規格為基準而設計的。最近，有些唱片公司開始銷售採用保護著作權之加密技術的音樂光碟。其中有部分光碟與CD的標準規格不一致，因此可能無法在本產品上進行播放。
- DualDisc 是一種，單面為DVD規格，另一面為CD規格的雙面式光碟產品。由於音頻面並不符合CD標準，因此無法於本產品上播放。
- 請勿播放非法拷貝的光碟。否則可能會使主機故障和受損。

## 地區代碼

某些光碟配有適用於各銷售地區的 “地區代碼”。本機可以播放具有以下地區代碼的光碟。

光碟	地區代碼
DVD	 
PlayStation®2 規格 DVD-ROM PlayStation®2 規格 CD-ROM PlayStation® 規格 CD-ROM	

## DVD-Videos

本主機只能播放以 NTSC 播放標準錄製的光碟。

## DVD-R、DVD-RW、DVD+R 和 DVD+RW 光碟

- 只可播放經過最終化操作處理的光碟。
- 本主機無法播放錄製在可錄式媒體之著作權保護技術 (CPRM) 相容的 DVD-RW 光碟上或 CPRM 相容的 DVD-R 光碟上的受著作權保護的數碼廣播影像。

## 附屬品

當購買可選附屬品時，必須購買那些與本 PlayStation®2 主機機型相容的產品。

### 關於 PlayStation®2 專用 DVD 遙控器

購買新的 DVD 遙控器時，應選擇不包括紅外線接收裝置的 SCPH-10420 G 型號（適用於 PlayStation®2）。

### 關於（對戰）多重連接器

本主機只能使用 PlayStation®2 專用（對戰）多重連接器（SCPH-70120G）（選購品）。切勿連接其他型號的（對戰）多重連接器，否則可能會損壞主機。

## 不相容本主機的附屬品

PlayStation® 主機和 PlayStation®2 主機的以下附屬品與本型號的 PlayStation®2 主機不相容。

型號	產品名稱
SCPH-10090 G	PlayStation®2 專用（對戰）多重連接器
SCPH-1070 G	（對戰）多重連接器
SCPH-10040 G	PlayStation®2 專用直立架
SCPH-70110	PlayStation®2 專用直立架
SCPH-10110 G	PlayStation®2 專用橫放架
-	使用  S400 i.LINK 連接埠的產品

## 故障檢修

在使用 PlayStation®2 主機時，如果操作上遭遇到困難，請閱讀下面的文章，以便找到問題的可能原因。如果無法解決問題，請打電話給保證書上記載的 PlayStation® 消費者服務中心。

### 首先確認以下項目：

- 檢查主機電源是否已經打開。按 I/⏻ RESET (再啟動) 按鈕打開主機電源 (I/⏻ 顯示燈將變為綠色)。
- 檢查交流電源線是否已經完全插入電源插座。
- 檢查連接線是否已正確牢固連接。


## 影像

### 電視機螢幕上沒有影像。

- ➔ 切換電視機的輸入方式，以適合主機上所使用的輸入連接端子。
- ➔ 連接線可能存在問題。嘗試使用與 PlayStation®2 主機相容的其他連接線。

### 影像不穩定。


- ➔ 當主機連接至電視機上的影像色差輸入端子時，請在系統設定選單中將“影像色差輸出”設定至“Y Cb/Pb Cr/Pr”<sup>\*</sup>。請使用附帶的 AV 連接線進行設定，然後使用影像色差連接線（選購品）連接至電視機。  
<sup>\*</sup> 當主機連接至僅支援 RGB 輸入的電視機上時，請將“影像色差輸出”設為“RGB”。
- ➔ 當主機連接至錄像機和 DVD 錄像機上時，某些 DVD 所用的著作權保護功能可能會造成影像不穩定，或使影像變得更加明亮或灰暗。如果發生此現象，請將主機直接連接到電視機上。

- ➔ 如果主機連接到不支援逐行掃描 (480p) 的電視機或連接線<sup>\*1</sup>上，即使在 DVD 控制面板的  (設定) → “畫面設定”中將“Progressive”（逐行掃描）設為“開”，也不顯示影像。此時，在插入 DVD 的情況下，按 I/⏻/RESET (再啟動) 按鈕，並立即按住控制器的 START (開始)<sup>\*2</sup> 將取消“Progressive”（逐行掃描）設定，並可正常顯示 DVD 的影像。

<sup>\*1</sup> 影像色差連接線（選購品）相容逐行掃描機能。

<sup>\*2</sup> 將控制器連接到控制器端子 1。

### 視頻影像的大小與電視機螢幕不相符。

- ➔ 如果將主機連接到寬屏電視機 (16:9) 上，應檢查電視機上的設定，因為這些設定可能會使主機的設定無效。詳細說明，請參閱電視機附帶的使用說明書。
- ➔ 調整 DVD 影像的大小以符合與電視機螢幕。啟動 DVD，然後停止播放。在控制面板的  (設定) → “畫面設定”項下，調整“電視機形式”設定。
- ➔ 使用某些 DVD 時，則無法變更影像大小。
- ➔ 檢查主機是否連接到電視機的視頻輸入端子上。如果在主機和電視機之間存在選擇器或接收器（AV 放大器），則無法變更影像大小。
- ➔ 使用某些電視機時，則無法變更影像大小。


## 聲音

### 沒有聲音。

- ➔ 檢查是否已將電視機的音量設為“靜音”，將電視機的音量調整到適當的等級。
- ➔ 如果主機連接至音響設備，請確認所連接設備上的設定。詳細說明，請參閱該設備附帶的使用說明書。
- ➔ 正在使用的連接線可能有問題。嘗試使用與 PlayStation®2 主機相容的其他連接線。
- ➔ 某些 PlayStation®2 規格之軟件標題不支援來自 DIGITAL OUT (OPTICAL)（光纖數碼輸出）端子的音頻輸出。播放此類軟件時，即使使用音頻光纖數碼連接線進行連接，也無法產生聲音。使用諸如附贈的 AV 連接線等類比 AV 連接線將主機連接至音響設備。


---

數碼音響設備沒有聲音或聲音品質差。

- ➔ 將主機連接到數碼音響設備時，必須調整“DIGITAL OUT (OPTICAL)”（光纖數碼輸出）設定。在未插入光碟的情況下，打開主機電源，並在系統設定選單中將“DIGITAL OUT (OPTICAL)”（光纖數碼輸出）設為“開”。
- ➔ 播放 DTS 聲音時，在 （設定）→ “聲音設定” → “聲音數碼輸出”中，將“DTS”設為“開”。如果連接的設備沒有內建的 DTS 解碼器，則不能播放 DTS 聲音。

---

當播放 Dolby Digital 聲音軌跡的 DVD 時，沒有環繞效果。

- ➔ 確認主機使用光纖數碼連接線連接至帶有內建 Dolby Digital 解碼器的音響設備。
- ➔ 若要播放 DTS 聲音，請在 （設定）→ “聲音設定” → “聲音數碼輸出”中，將“Dolby Digital”設為“開”。

## 操作

---

不能播放光碟。

- ➔ 檢查光碟是否屬於主機可以播放的類型。
- ➔ 檢查光碟是否清潔並且狀況良好。如果光碟髒污，可用軟布輕輕擦拭。
- ➔ 某些 PlayStation® 規格之軟件可能無法在本主機上正確執行。更多資訊，請打電話給保證書上記載的 PlayStation® 消費者服務中心。
- ➔ 如果光碟貼有標籤，請將光碟貼有標籤的一面朝上放入主機。
- ➔ 如果 DVD-R 或 DVD-RW 光碟沒有最終處理完畢，則不能播放。
- ➔ 本主機無法播放錄製在可錄式媒體之著作權保護技術 (CPRM) 相容的 DVD-RW 光碟上或 CPMR 相容的 DVD-R 光碟上的受著作權保護的數碼廣播影像。
- ➔ 檢查 DVD 的地區代碼是否適於所用的主機。還要檢查廣播標準是否正確。
- ➔ 光碟上可能設定了視聽年齡限制功能。請按照畫面上顯示的說明操作，並臨時提高視聽年齡限制的等級。

---

控制器失靈。

- ➔ 如果軟件標題僅與類比控制器（DUALSHOCK®2）相容，則使用類比控制器（DUALSHOCK®）將無法正常工作。請使用適合軟件標題的控制器。詳細說明，請參閱該軟件附帶的使用說明書。
- ➔ 某些軟件規定必須使用專用的控制器端子。檢查控制器是否連接至正確的端子上。詳細說明，請參閱該軟件附帶的使用說明書。
- ➔ 嘗試使用與 PlayStation®2 主機相容的其他控制器。正在使用的控制器可能有問題。

---

按鈕操作反應速度慢。

- ➔ 某些液晶電視機和電腦顯示器的反應速度較慢。這不是故障。

---

控制器的左右類比操作桿無法正確使用。

- ➔ 出現這些症狀時，大幅度轉動類比控制器（DUALSHOCK®2）的左右類比操作桿，將操作桿調整到最佳的操作範圍。以畫圓方式轉動操作桿而非扭轉操作桿。

---

主機無法識別 Memory Card（記憶卡）。資料無法儲存到或拷貝到 Memory Card（記憶卡）。

- ➔ 確認 Memory Card（記憶卡）與正在使用的軟件相容。若要保存或載入 PlayStation®2 規格軟件，可使用 Memory Card（記憶卡）（8MB）（用於 PlayStation®2）（SCPH-10020 G）。若要保存或載入 PlayStation® 規格軟件，可使用 Memory Card（記憶卡）（SCPH-1020）。
- ➔ 您無法將所保存的資料從 PlayStation®2 規格軟件拷貝到 Memory Card（記憶卡）（SCPH-1020）上。
- ➔ 確認 Memory Card（記憶卡）牢固插入主機中。
- ➔ 正在使用的 Memory Card（記憶卡）可能有問題。如果您有另一張與 PlayStation®2 主機相容的記憶卡，可嘗試切換記憶卡。

---

儲存在 Memory Card（記憶卡）中的資料受到破壞。

- ➡ 在儲存、載入、拷貝或刪除資料過程中，切勿試圖進行以下任何操作。否則會造成資料損壞。
- 切勿取出 Memory Card（記憶卡）或控制器。
  - 切勿打開光碟蓋。
  - 切勿重新啟動主機。
  - 切勿關閉主機。

---

控制器操作異常。

- ➡ 靜電或其它類似情況可能影響主機操作。關閉主機，拔掉電源插座中的電源插頭。然後插入到主機中，再將電源打開。



---

I/O 顯示燈呈紅色閃爍，主機不工作。

- ➡ 在停止閃爍前切勿使用主機。將主機放置在異常熱的場所，或阻塞了主機的通風孔，從而使主機內部溫度升高，因此阻礙了正常操作。

---

您忘記了密碼。

- ➡ 您可以使用以下過程解除密碼。
- 1 插入沒有視聽年齡限制功能的 DVD。
  - 2 在控制面板中，選擇 ■（停止）停止播放，然後再次選擇 ■（停止）取消重續播放。
  - 3 在控制面板中，選擇 （設定）→ “個人設定” → “視聽年齡限制”，然後按  按鈕。  
顯示輸入密碼的畫面。
  - 4 按控制器上的 SELECT（選擇）按鈕，然後在顯示的畫面上輸入數字“7444”。  
已登錄的密碼被解除，顯示登錄新密碼的畫面。輸入新密碼。

---

DVD 無效。某些 DVD 設定無法變更。

- ➡ 製造商已有意預設某些 DVD 的播放狀態和設定值。由於 PlayStation®2 主機係根據光碟的設定播放 DVD，因此，即使遵照本文中的程序進行操作，也可能無法使用某些功能。
- ➡ 在播放或重續播放過程中，某些設定無法變更。在控制面板中，選擇 ■（停止）停止播放，然後再次選擇 ■（停止）取消重續播放。



## 網路


---

無法建立網路連接。

- ➡ 檢查網路連接是否正確。參閱寬頻上網服務商提供的信息以及所用軟件附帶的說明，然後相應地調整設定。
- ➡ 檢查乙太網路連接線的連接是否正確。
- ➡ 檢查您是否使用正確類型的乙太網路連接線（交叉網線或標準網線）。詳細說明，請參閱網路設備附帶的使用說明書。
- ➡ 檢查網路設備的連接是否正確。還要檢查所用網路設備的設定是否正確。詳細說明，請參閱網路設備附帶的使用說明書。


## 版權與商標

“”、“PlayStation”、“”和“DUALSHOCK”為 Sony Computer Entertainment Inc. 之註冊商標。

“SONY”和 “” 為 Sony Corporation 之註冊商標。“MagicGate”亦為該公司之商標。

This product is manufactured under license from Dolby Laboratories.  
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of DTS, Inc.

i.LINK and i.LINK logo "" are trademarks.

Sony Computer Entertainment Inc. 採用 DNAS (Dynamic Network Authentication System), 可幫助保護著作權與 PlayStation®2 主機與網路連線時的加密性。DNAS 可能會為了認證、著作權保護、帳戶阻斷、系統、規則或遊戲管理以及其他目的而自動從用戶的硬件與軟件擷取資訊。這些被擷取的資訊並不具足以識別個人的性質。各種未經認可的傳遞、公開展示、以及企圖破解認證程序的程式與裝置的進出口以及傳遞皆可能為法律所嚴禁。

## 關於拷貝保護

試圖對在本設備上播放的 DVD 進行拷貝，可能會受到 DVD 中所包含的拷貝保護技術的阻止或限制。試圖通過排除或迴避拷貝保護技術對 DVD 進行錄製或拷貝作為個人使用，可能在適用法律下被禁止。





