

b phone – User Manual

Contents

1. Introduction
2. Product Overview
 - 2.1 Parts list
 - 2.2 The b phone
 - 2.3 Using your phone
3. Safety Information

1. Introduction

The b phone is a multifunctional and multipurpose device for the use of both parent and child. It acts both as a basic mobile phone with limited call capabilities that can be controlled by the parent user, and a GPS location tracking and alert system. The b phone has a limited amount of keys designed to perform its limited functions, with its advanced tracking and alert settings controlled through a user account system.




2. Product Overview

2.1 Parts list

- b phone
- battery
- AC power adapter
- earphone

2.2 The phone

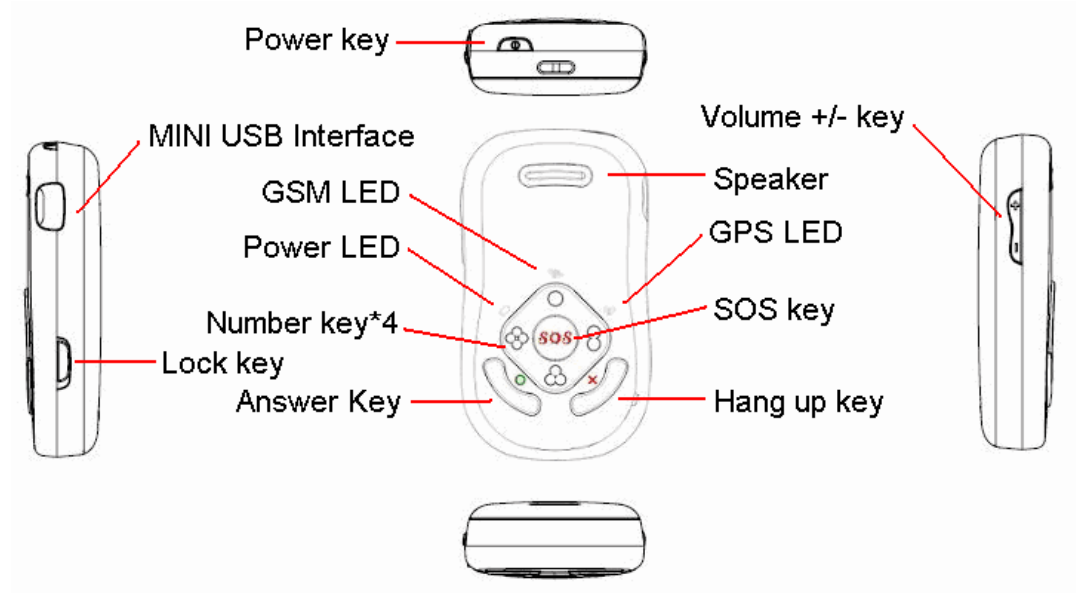

General Specifications	
Dimensions:	74.8mm*42.8mm*17.5mm
Weight:	65 g
Backup Battery:	Li-Polymer 850 mAh, 3.7V
Standby Time:	Without reporting : 120 to 150 Hours 5 minutes reporting : 50 to 60 Hours 10 minutes reporting : 70 to 80 Hours
Charge Voltage:	

b phone – User Manual

2.3 Using your phone

Key	Function
(a) Power	<ul style="list-style-type: none"> Press and hold to turn the b phone on or off
(b) Volume +/-	<ul style="list-style-type: none"> When in a call, press the + or – key to increase or decrease the speaker volume When idle, press and hold the – key to switch between normal and silent modes
(c) Answer Key (d) Number Keys (1, 2, 3, 4)	<ul style="list-style-type: none"> To make a call, press a number key then the Answer key to call the allocated phone number When there is an incoming call, press [O] to answer
(e) Hang Up	<ul style="list-style-type: none"> Press [X] to end a call When there is an incoming call, press [X] to reject the call
(f) SOS Key	<ul style="list-style-type: none"> Press and hold [SOS] for at least 3 seconds to activate the SOS notification signal
(g) Lock Key	<ul style="list-style-type: none"> Slide the key up to enable all keys Slide the key down to disable all keys, except SOS key Note: if the b phone receives a call when the keypad is locked, the Answer Key and Hang Up Key are both still functional, same as the volume keys.

LED indicator	Event	Status	Sound indicator (Normal mode)
Power	charging	slow flash	not applicable
	charging complete	continuous light	not applicable
	battery 20% full	5 slow flashes	long sound notification 3 times
	battery 10% full	10 fast flashes	long sound notification 1 time
	battery 5% full	fast flashing until shut down	short beep every 2 minutes
GSM	network searching	fast flash	
	network successfully registered	slow flash	
	SIM pin locked	continuous light	
GPS	GPS fixing	fast flash	
	GPS fixed	continuous light for 2 seconds	

3. Safety Information

- Do not immerse the b phone in liquid
- Keep the b phone away from fire
- Do not expose the b phone to extreme temperatures
- Do not store the b phone in wet or dirty environments
- Do not place the b phone in or near microwaves or similar devices
- Do not operate or store the b phone near flammable materials
- Avoid placing heavy pressure on the b phone or dropping it from height
- Do not attempt to take apart or alter the b phone in any way
- Only use authorized accessories with the device

