 



Operation Guide ID-16

CASIO®

ILLUSTRATION

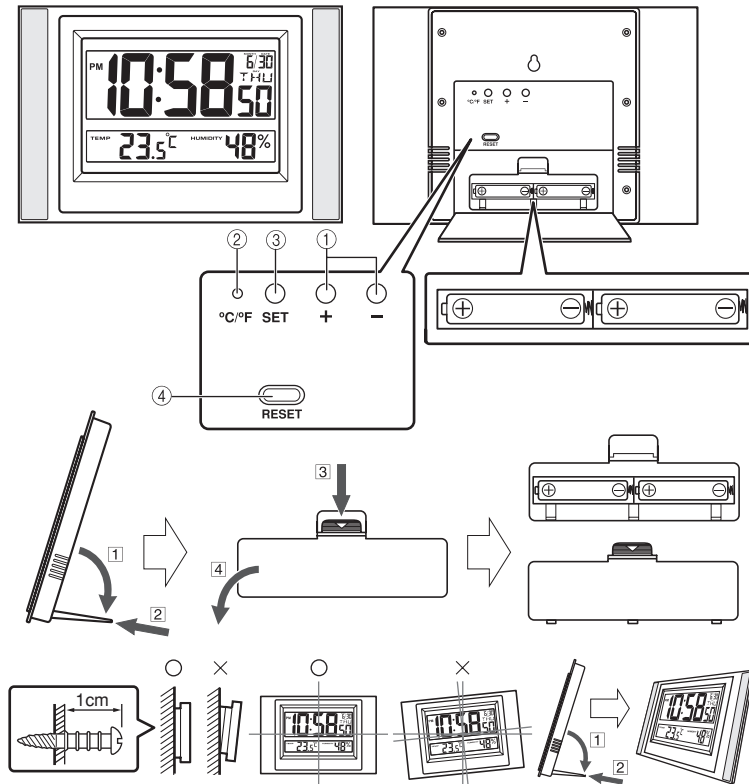

 - A sticker is affixed to the glass of the clock when you purchase it. Be sure to remove the sticker before using the clock.
- Depending on the clock model, its configuration may differ somewhat from that shown in the illustration.

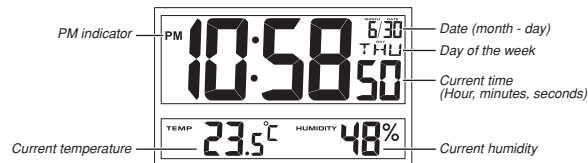


GENERAL GUIDE


- ① **+/- buttons**
Use these buttons to change the setting that is flashing on the display.
- ② **°C/°F button**
Press this button to toggle the temperature units between Celsius and Fahrenheit.
- ③ **SET button**
Use this button when setting the current time.
- ④ **RESET button**
Press this button to reset the clock after replacing its batteries.

USING THE CLOCK

 - Press the **SET** button (③) to cycle through the setting screens as shown below.

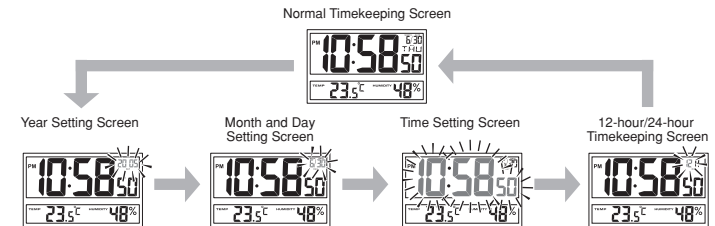

- While the screen you want is displayed, use the **+** and **-** buttons (①) to change the flashing digits.
 - Holding down **+** or **-** changes the flashing digits at high speed.
 - You can set the year in the range of 2000 to 2039. The day of the week is set automatically in accordance with the date setting.
 - Pressing **+** or **-** while the Time Setting Screen is on the display causes the seconds count to be reset to 00.
 - Each press of **+** or **-** while the 12-hour/24-hour Timekeeping Screen is on the display toggles between 12-hour and 24-hour timekeeping.
- After making the settings you want, use the **SET** button (③) to display the Normal Timekeeping Screen.
- The clock automatically returns to the Normal Timekeeping Screen if you leave a setting screen on the display for about three minutes without performing any operation.

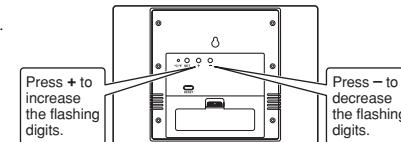 


THERMOMETER FUNCTIONS

- A built-in sensor measures temperature and shows the measured value on the display.
- The temperature display shows "LO" for temperatures below -50°C (-58°F) and "HI" for temperatures above 70°C (158°F).
- Though temperature readings are displayed up to 0°C (32°F) and greater than 41°C (105°F), note that such readings are actually outside the guaranteed temperature range of this clock.

Switching between Celsius and Fahrenheit

 - Push the **°C/°F** button (②) to select either Celsius (°C) or Fahrenheit (°F).

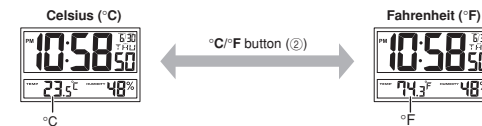

HYGROMETER FUNCTIONS

A built-in sensor measures humidity and shows the measured value on the display.

- The humidity display shows "LO" for humidity below 10% and "HI" for humidity above 90%.

BATTERY REPLACEMENT

Replace batteries whenever the display of the clock becomes dim and difficult to read.

1. Open the battery compartment cover as shown in the illustration.
2. Remove all of the old batteries.
3. Load a full set of new batteries. Make sure that their positive (+) and negative (–) ends face in the correct directions. If you load batteries incorrectly, they can burst and damage the clock.
4. Press the **RESET** button (⌚). Be sure to press the **RESET** button (⌚) after replacing batteries.
5. Replace the battery compartment cover.

Battery precautions

- Keep batteries out of the reach of small children. If a battery is accidentally swallowed, contact your physician immediately.
- Be sure to load the batteries with their positive (+) and negative (–) ends facing correctly.
- Never mix old and new batteries, or batteries of different brands.
- Never charge the batteries that come with the clock.
- Should batteries ever leak while in the clock, wipe out the fluid with a cloth, taking care not to let any get onto your skin.
- Replace the batteries at least once a year, even if the current batteries are working properly.
- The batteries that come with the clock lose some of their power during transport and storage.