

Model IBX Series Three Dynamic-Range Expander

Instruction Manual

FILE -


INSPECTION and INSTALLATION

Your unit was carefully packed at the factory in a protective carton. Nevertheless, be sure to examine both carton and contents for any signs of damage that may have occurred during shipping. If there is such evidence, don't destroy the carton or any of the packing material, and notify your dealer or distributor immediately.

In any case it is a good idea to save the carton and packing materials should you ever need to ship your unit in the future.

In addition to a model IBX III and this instruction manual, the carton should contain a set of hookup cables with RCA phono, or pin, plugs, a warranty/registration card, and a pair of brackets for mounting the unit into a standard audio equipment rack.

No special cooling or ventilation is required in any installation; other components may be stacked above or below the 1BX III provided they don't generate excessive heat.

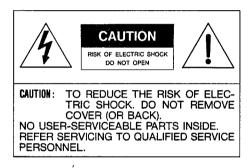



This symbol is intended to alert you of the presence of uninsulated dangerous voltage within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




This symbol is intended to alert you of the presence of important operating and maintenance instructions in the literature accompanying the unit.

WARNING: To Prevent Fire or Shock Hazard, Do Not Expose This Appliance to Rain or Moisture.

VOLTAGE CONVERSION

If you ever need to change the voltage setting, unscrew the small voltage cover plate near the ac cord, move the switch with a small screwdriver, turn the plate upside down (180°, in other words, which exposes the switch in its new voltage position), and screw it back on. Don't turn the plate over.

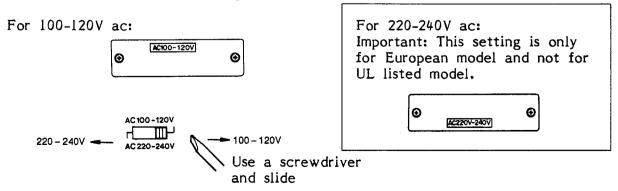

"dbx" is a registered trademark of dbx Inc.

CONTENTS

Rear panel (connections)	2
Typical hookups	3 and 4
Front panel (operating instructions)	6
About dynamic-range expansion	
and impact restoration	7
Usage notes and cautions	8
Warranty and factory-service information and	
Important information for users in the United Kingdom	9
· · · · · · · · · · · · · · · · · · ·	


SPECIFICATIONS

Expansion	To 50% increase, maximum 12 dB upward and 20 dB downward
Impact restoration	
Frequency response	+0.5 dB 20 Hz-
Dynamic range	107 ID
Total harmonic distortion (THD), no expansion	0.15%
Intermodulation distortion (IMD) IHF or SMPTE, no expansion	0.1%
Equivalent input noise	-90 dBV
Maximum input and output	7 V

Notes

- 1) Specifications are subject to change without notice.
- 2) All data are for 20 Hz-20 kHz unless otherwise specified; line inputs are driven by a source impedance of 1 k-ohms and outputs are loaded by 10 k-ohms in parallel with 1000 pF; all voltages are rms (root-mean-square).
- 3) Dynamic range is defined as the difference between the maximum rms output signal and A-weighted noise. All noise figures are A-weighted.
- 4) Frequency-response figures are for pink noise (or music).
- 5) SMPTE IMD is measured with 60 Hz and 7 kHz mixed 4:1; IHF (difference-tone) IMD is measured with 19 kHz and 20 kHz mixed 1:1; output 1 V.
- 6) Inputs and outputs have identical polarity.
- 7) All dbx home products are designed to be used with components whose output impedance is less than or equal to 5 k-ohms. All units are designed to drive loads of at least 5 k-ohms in parallel with 1000 pF or less.

 REAR CONNECTIONS




Turn your system off and the volume all the way down.

"Preamp" stands for your preamp, receiver, or integrated amp -- or the tape-monitor (record/play) loop of an equalizer or other component. The IBX III has its own tape monitor to replace the one it occupies.

- I FROM PREAMP TAPE OUTPUT. Connect your preamp's Tape Out to these inputs.
- 2 TO PREAMP TAPE INPUT. Connect these outputs to your preamp's Tape In. (Note that with some components Tape Out is called Tape Rec and Tape In is called Tape Play or Tape Monitor, and there are other variations.)
- 3 FROM TAPE RECORDER OUTPUT. Connect your tape deck's Output (or Play) to these inputs.
- 4 TO TAPE RECORDER INPUT. Connect these outputs to the Input, Line In, Rec(ord) or whatever on your tape deck.


If you have a dbx noise-reduction unit or other signal-processing equipment, study the second diagram following.

5 POWER CORD. Connect this cable to the appropriate power source. If another piece of equipment has a switched outlet (your preamp, for instance), that's one good place to plug in.

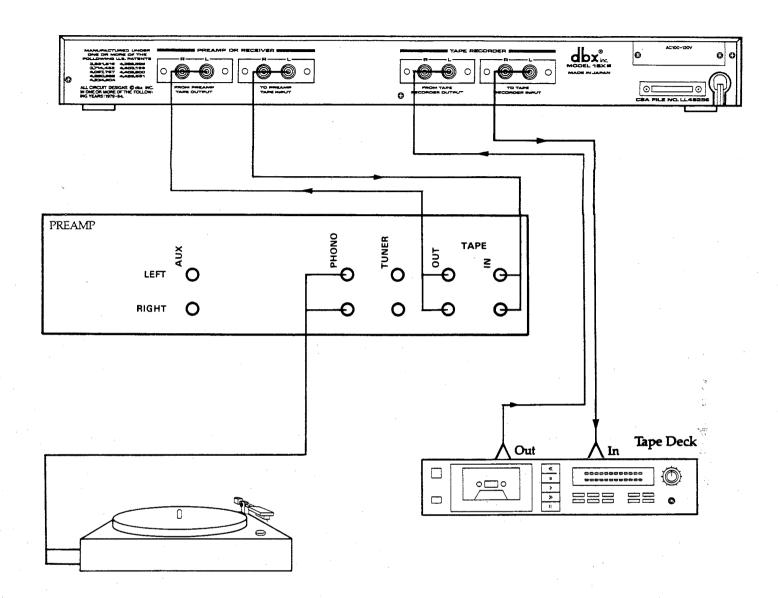


Basic Signal Connections

The IBX III goes between the preamp and the tape deck, in the former's tape-monitor loop, as shown. The tape deck then goes in the IBX III's tape loop.

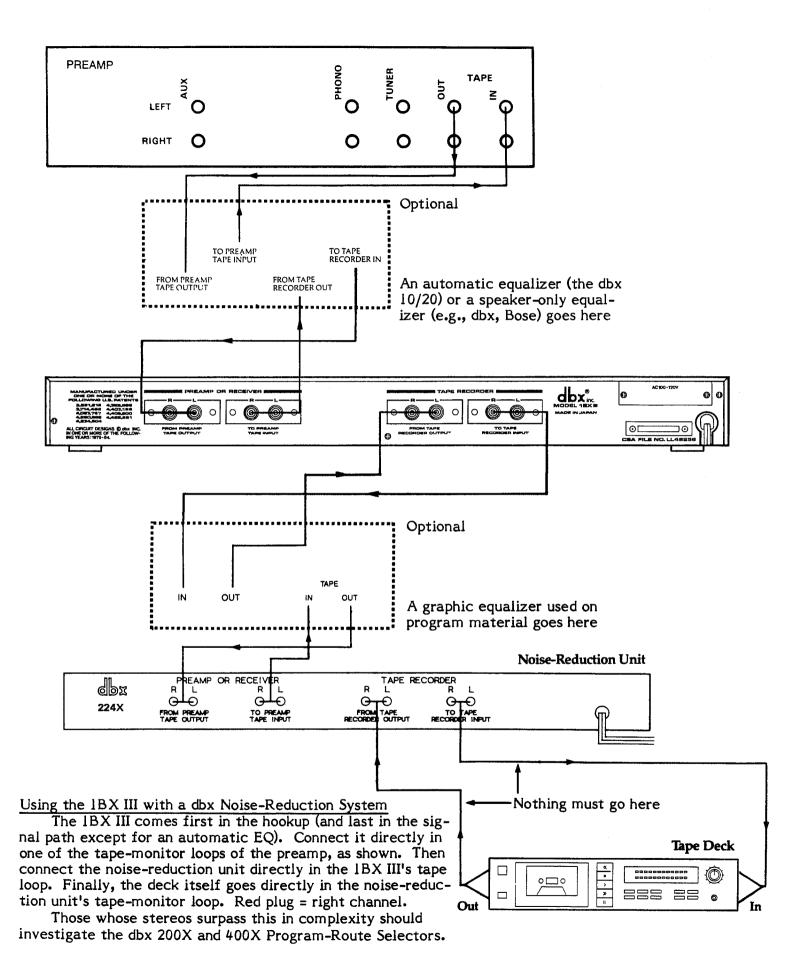

HOOKUP NOTES

 

- 1 POWER. Push this button to turn the unit on and off.
- 2 IMPACT RESTORATION LEVEL knob and LED row. Turn this knob to control the amount of impact restoration. (It sounds like "punch" added to musical attacks.) If the music calls for it, the amount can be as great as +10 dB.
- 3 EXPANSION knob and LED row. Turn this knob to control the amount of expansion desired. A setting of 20% increases the program's dynamic range by that amount; 40% increases dynamic range by 40%; and so on. In this latter case an input signal with 40 dB of dynamic range will be expanded to 56 dB and a signal with 50 dB will be expanded to 70 dB. As the LED row shows, the maximum is 12 dB of upward, or louder, expansion and 20 dB of downward, or softer, expansion.
- 4 TRANSITION LEVEL. Set this knob so that the LEDs glow about equally, the red ones during loud parts of the music and the yellow LEDs during quiet parts. You'll discover that this knob functions as a mini-volume control, setting the center or midpoint, where no expansion takes place. When an incoming program signal is above (louder than) this mid-point level, the IBX III expands it upward, making it louder still; when the signal is below (softer than) the mid-point, the IBX III expands it downward, making it still softer. This knob is mostly for your convenience in adjusting levels; its settings needn't be exact.
- 5 EXPANDER:PRE, :POST, and :BYPASS. These first two buttons control where the IBX III expansion takes place relative to your tape deck -- before it (during recording) or after it (during playback) -- while Bypass takes it out of the signal path altogether. Push Pre to expand the program before you tape it (the deck is in its Recording mode, of course); you'll be recording an expanded, "punched-up" signal, making a tape that actually sounds better -- quieter, more dramatic -- than the original. Push Post for expansion on playback only (probably the more common application).

When you do decide you want to expand the program before taping, watch your recording levels closely. Signals with extra dynamic range and impact are extremely hard for cassettes to handle, so be prepared to back off on your meter peaks and/or on the amount of expansion and impact restoration, as necessary. It's very easy to saturate the tape and get distorted sound, especially with impact restoration on and levels that aren't conservative enough. Using dbx noise reduction will help, because it gives you more room than the other systems; also, set your deck's electronic (lighted-bar) meters to their peak-reading setting if you have a choice, so you can follow better what's going on with the peaks.

MONITOR:SOURCE and :TAPE. These buttons control the program you listen to. Push Source to hear your record player, radio (tuner), or "Auxiliary" inputs (e.g., TV/VCR, CD player). Now you can expand these programs, as you wish. Push Tape to listen to your deck's playback (expanded or not) and/or to "access" (bring into the signal path) any processors connected in the IBX III's tape loop. If your deck has monitoring ability (three heads), you can check a tape being recorded by comparing Source and Tape.

ABOUT IMPACT RESTORATION, EXPANSION, AND DYNAMIC RANGE

Music works largely through anticipation: our pleasure in knowing, but not knowing precisely, what's going to happen next. From fugue to 12-bar blues, our expectations should be satisfied, but not too predictably. Over time, in a good piece of music, the startling becomes familiar even as the familiar stays startling.

Frequently the attack of a note or chord helps enhance this freshness. Depending on the instrument and the preceding sounds, these initial transients can have great impact. It's not just that Haydn put that surprise in his famous symphony's slow movement, it's the fact that it's an orchestral sforzando coming delicately out of nowhere.

The 1BX III's impact-restoration circuit increases the immediacy, the snap, of these musical attacks. Many of these transients get clipped or otherwise dulled during recording and broadcasting because of the compressors and limiters that are used virtually universally. Conventional expansion recovers some of these losses, but it can't restore all the excitement. With impact restoration, we've tried to bring back some of the heart-stopping quality of live performance.

That's the story of the impact restorer in your IBX III. For an understanding of the expander, we must first look at dynamic range in general. It may be defined as the difference in level between the loudest and softest sounds in any given musical performance or recording. It is given in decibels, the decibel being a unit that expresses a small relative difference in power or sound level.

In a performance, the loudest sounds are limited by the musician's ability to strike, bow, or blow into his or her instrument, by its own limitations (e.g., a pipe organ), or, with amplified music, by the amp/speaker system's ability to play loudly without objectionable distortion. Depending on how they're defined (how fast the measurement is), "peak" levels may be 5 to 15 dB above the average level. Unamplified music may have instantaneous peaks of 115-dB SPL (sound-pressure-level, a standardized measurement) and up; amplified music can be higher yet, dangerously so. At the quiet end, 0-dB SPL is the figure customarily given for the threshold of human hearing at the most sensitive frequency range of 1-2 kHz. The dynamic range of human hearing at its best, then, may be said to be at least 120 dB. The dynamic range of musical performance is not much less; even if the background is noisy, we can easily hear some frequencies and instrumental reverberation die out below it. 110 dB or so may be a reasonable maximum figure, although it's a rare performance and piece that would qualify.

....

The advent of digital recording and sound reproduction has made us all more aware of these facts, of how absolutely stirring clean peaks and silent backgrounds can be — even though a large number of CDs or the master tapes they're made from are deliberately compressed (reduced in dynamic range). But in any case, most of us listen most of the time to broadcasts and to conventional vinyl analog records and audio cassettes, with dynamic ranges of 65-70 dB at very best but more often 55 dB and less. To fit into these formats, the music has been squashed, by compression or "gain-riding," with the loud passages made softer and the quiet ones made louder.

To help restore what has been lost in these manipulations, an expander is required, and your IBX III will go a long way toward undoing the damage. It does the opposite of what happened in the first place: it makes louds louder and softs softer, not to mention impact restoration, the re-creating and/or augmenting of the attack of transients. The excitement of the original is more closely approximated, and the involvement of listening to music live is brought closer to home.

By lowering the noise and by increasing the forcefulness of the dramatic moments, a IBX III will give new life to record and tape collections and can make broadcasts worth listening to closely. And used carefully with dbx noise reduction, a IBX III lets you make tapes that actually sound better than the originals. With such capabilities, it may well become one of your most valued components.

USAGE NOTES

In general, the amounts of expansion and impact restoration to use are matters of taste. However, some brief guidelines might prove useful as you experiment with different program material and different signal sources.

Classical music, for example, probably will benefit most from expansion in the left-hand rotational range. You might want to start at 10% or less and range up to 25% for most classical material. Using too much more than this may make a lot of classical music surge unnaturally, for usually it hasn't been severely compressed.

Popular music, especially broadcast over FM stations, can use much more expansion much of the time — say, from 10% for material with good dynamic range to 40% and above for material whose loudness levels hardly differ. Sometimes this music gets so compressed that full expansion by your dbx unit won't be enough, really, but improvement still will be marked.

With jazz you might want to start somewhere between these classical and pop settings, although a quiet and well-recorded small acoustic combo won't need much expansion at all. (Of course, the same goes for many CDs and most dbx-encoded records and cassettes.)

Non-stereo-LP sources (regardless of the program) often are badly constricted in dynamic range. We mentioned pop FM above, and the same frequently is true of the audio from VCRs, video discs and cassettes, and TV tuners and station transmissions in the first place. Even classical music through such media usually sounds badly squashed, and a 40% setting might be the place to begin.

... and Cautions

 
Any expander can make greater demands of your power amplifier and loudspeakers; after all, that's its job. But some people worry that they have to upgrade their amp when they buy an expander, and this is not usually the case. Wait and see how things sound over time. Whether a given amp is powerful enough isn't always easy to determine, for it depends on, among other things, loudspeaker sensitivity, the distortion characteristics of the amp, room size, and any changes in your listening-level habits. Fortunately, huge capacities in your components aren't essential for full enjoyment of the 1BX III, and as noted above, more often than not you will be using your expander at less than the full, 50% setting and it will be on music that won't stress your equipment.

And if overdriving -- the excessive distortion of amp clipping and/or speaker breakup -- is the result at the higher sound levels with reasonably good speakers and a healthy-enough amp, it probably will be noticed only with program material that has a good dynamic range to begin with, music that actually doesn't need much expansion. In which case what's called for is a reduction in the expansion setting, not more-powerful equipment.

WARRANTY and FACTORY SERVICE

All dbx products are covered by a limited warranty (warranties for products purchased outside the USA are valid only in the country of purchase and the USA). For details, consult your warranty/registration card or your dealer/distributor.

The dbx Customer Service Dept. will help you use your new product. For answers to questions and information beyond what's in this manual, write to:



You also may call (617) 964-3210 during business hours (USA Eastern time). The Telex is 92-2522.

Should problems arise, consult your dealer or distributor. If it becomes necessary to have your equipment serviced at the factory, repack the unit, including a note with a description of the problem and the date of purchase, and send the unit freight prepaid to the above address, marking it Attn: Repairs.

FOR USERS IN THE UNITED KINGDOM

Important

The wires in the unit's mains lead are coloured in accordance with the following code:

3.

Blue: Neutral Brown: Live.

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The blue wire must be connected to the terminal that is marked with the letter N or coloured black:

The brown wire must be connected to the terminal that is marked with the letter L or coloured red.

Ensure that all terminals are securely tightened and that there are no loose strands of wire.

Warning

This unit must be protected by a 3-amp fuse, preferably using a fused plug.

Also, do not remove the cover without first disconnecting the unit from the mains supply.

Saymond's Electronic Service
5462 Buchanen Pi.
Premont, CA 94538
510-490-1622