### EPSON<sup>®</sup> PowerLite<sup>®</sup> 8100i/9100i Multimedia Projector



User's Guide

### Important Safety Information

*WARNING*: Never look into the projector lens when the lamp is turned on; the bright light can damage your eyes. Never let children look into the lens when it is on. Never open any cover on the projector, except the lamp and filter covers. Dangerous electrical voltages inside the projector can severely injure you. Except as specifically explained in this *User's Guide*, do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

*WARNING*: The projector and its accessories come packaged in plastic bags. Keep plastic bags away from small children to avoid any risk of suffocation.

*Caution*: When you replace the lamp, never touch the new lamp with your bare hands; the invisible residue left by the oil on your hands may shorten the lamp life. Use a cloth or glove to handle the new lamp.

### **Copyright Notice**

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. The information contained herein is designed only for use with this EPSON product. EPSON is not responsible for any use of this information as applied to other products.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

EPSON is a registered trademark of SEIKO EPSON CORPORATION.

EPSON PrivateLine is a service mark; EPSON Store and SizeWise are trademarks; and PowerLite and Presenters Club are registered trademarks of Epson America, Inc.

SRS and the (•)**SRS**<sup>•</sup> symbol are registered trademarks of SRS Labs, Inc., in the United States and selected foreign countries. SRS technology is incorporated under license from SRS Labs, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

1/01

### Contents

### Welcome

Supported Computers and Video Sources	2
Getting More Information	2
Warranty and Registration	3
Controlling Your Projector from a Computer	4
Optional Accessories	4
About This Guide	6
Warnings, Cautions, and Notes	7
Reading This Manual Online	7
Controlling Your Projector from a ComputerOptional AccessoriesAbout This GuideWarnings, Cautions, and Notes	4 4 6 7



Unpacking the Projector 9
Additional Components 11
Installing Batteries in the Remote Control 12
Positioning the Projector 13
Choosing Your Connections 15
Connecting to a Computer 16
Connecting to a PC Desktop Computer 17
Connecting to a PC Laptop Computer
Connecting to a Desktop Macintosh 24
Connecting to a PowerBook 29
Making Other Computer Connections 33
Connecting to Other Video Sources 35
Connecting RCA Cables 36
Connecting S-Video or Component Video 37

## Using the Projector

Turning On Your Equipment	ί0
Turning On the Projector	í0
What To Do If You See a Blank Screen	í2
Sleep Mode	43
Adjusting the Image4	<u>í</u> 4
Focusing and Zooming Your Image4	44
Resizing the Image 4	45
Adjusting the Height of the Image4	<i>4</i> 6
Adjusting the Image Shape4	
Adjusting the Tracking and Synchronization4	í7
Using the Remote Control4	í8
Using the Remote Control as a Wireless Mouse4	49
Zooming Your Image with the Remote	50
Controlling the Projector	51
Selecting Your Video Source5	51
Adjusting Sound Volume5	51
Stopping Action5	52
Turning Off the Picture and Sound	52
Displaying Picture-in-Picture Video5	52
Drawing on the Screen	53
Using the Cursor/Stamp Arrow5	54
Drawing Boxes5	54
Spotlighting Your Image5	55
Drawing Horizontal and Vertical Bars5	55
What To Do When the Lights Flash	56
Using the On-Screen Help5	57
Shutting Down the Projector	58
I. in the Manual	50
Using the Menus	
Changing Menu Settings	
Adjusting the Image	




Using the Menus
Changing Menu Settings60
Adjusting the Image63
Video Menu64
Saving and Recalling Computer Settings 66
Adjusting the Sound
Customizing the Drawing Tools

Customizing Projector Features
Setting Menu 69
Advanced Menu71
Creating a Screen Logo or Image
Capturing and Saving the Image
Assigning the Image to the No-Signal Message
and/or A/V Mute Button
Viewing Projector Information
Restoring the Default Settings

A Maintaining and Transporting the Projector

5 Solving Problems

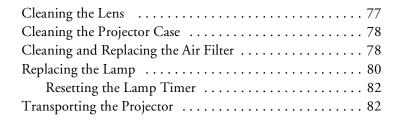

Problems with the Projector	84
Problems with the Remote Control	86
Problems with the Image or Sound	87
Where To Get Help	92
Telephone Support Services	92





03
05
06
07

### Index

# Welcome

Your EPSON<sup>®</sup> PowerLite<sup>®</sup> projector is an ultra-bright, portable projector that lets you project brilliant, full-color images and video onto a large screen. Projected with up to 3200 or 2400 ANSI lumens, your presentations will be bright enough to be clearly seen with the room lights on.

Images are displayed in full color (16,770,000 colors) at a resolution of  $1024 \times 768$  pixels (PowerLite 8100i) or  $1280 \times 1024$  pixels (PowerLite 9100i). The projector supports a wide variety of video inputs, with resolutions up to  $1600 \times 1200$ . Built-in features include smooth motion technology, to produce the highest quality images, and digital noise reduction to reduce "color noise" and improve contrast.

You can connect the projector simultaneously to four image sources: one or two computers or workstation sources, plus two or three video sources, such as a VCR, DVD player, camcorder, digital camera, or laser disc player. You can also connect audio for up to three image sources.

The projector's two speakers employ a built-in (•)**SRS** 3D sound system for rich, powerful audio output.

Your projector features a patented SizeWise<sup>™</sup> chip for support of VGA, SVGA, XGA, SXGA, and UXGA output. No matter what type of computer output is used, the result is a full-size video image of outstanding clarity.

You can operate the projector from your computer or you can control it with a hand-held remote control unit. The buttons on the remote control allow you to turn the projector on and off, zoom in on your image, adjust the volume, mute the sound and image, switch from one computer or video source to another, and access the projector's built-in menus. If you connect the main cable and mouse cable, you can use the remote control as a wireless mouse; then you can continue your presentation as you move around the room.

### Supported Computers and Video Sources

The projector supports a wide range of computers and workstations: IBM<sup>®</sup> compatible PCs and laptops, Apple<sup>®</sup> Macintosh<sup>®</sup> Power Macintosh<sup>™</sup> series (including G3 and G4 systems), PowerBook<sup>®</sup> computers, iMac<sup>™</sup> and iBook<sup>™</sup> series, and workstations such as the Sun<sup>®</sup> SPARCstation.<sup>™</sup> The video source can be HDTV, NTSC, PAL, or SECAM. The projector automatically senses the video format, which can be composite video, S-Video, or component video. See page 95 for details on supported computers and video formats.

### Getting More Information

Need tips on giving presentations? Quick steps for setting up your projector? Here's where you can look for help:

### Online menu help

Extensive online help is available for operating the projector and using the projector's menus. You can display the help menu at any time by pressing the Help button on either the control panel or the remote control.

### www.presentersonline.com

Includes a library of articles covering presentation tips, tricks, and technology. Provides templates, clip art and sound clips, as well as Presenters Services to use on the road. Even more resources and services are available if you register to join the Presenters Club<sup>®</sup>— and it's free.

2

### support.epson.com

Download FAQs and e-mail your questions to EPSON's technical support team.

### Start Here folder

Contains your *Quick Setup* sheet, warranty brochure, CD-ROMs, and EPSON PrivateLine<sup>SM</sup> Support card. Store this *User's Guide* in the folder and keep the folder with your projector at all times.

### Quick Setup sheet

Gives you all the instructions you need to get your projector set up and connected to a laptop or PowerBook computer.

### CD-ROMs

The PowerLite 8100i/9100i CD-ROM lets you register electronically and includes the electronic version of this *User's Guide* plus a link to Presenters Online. On the Projector Software CD, you'll find the optional EMP Link V program and its *User's Guide*.

If you still need help after checking this *User's Guide* and the sources listed above, you can use the EPSON PrivateLine Support service to get help fast. Call (800) 637-7661 and enter the PIN on your card. Or take advantage of EPSON's automated support services 24 hours a day. See "Where To Get Help" on page 92 for more information.

### Warranty and Registration

Your projector comes with a basic carry-in warranty as well as an international warranty that let you project with confidence anywhere in the world. For details, see the warranty brochures included in your *Owner's Kit*.

To register, simply insert the PowerLite 8100i/9100i CD-ROM that came with your projector and select **Register Online**. Registering also lets you receive special updates on new accessories, products, and services. You can register through the Internet, by e-mail or 800-number modem connection, or by printing out the form to fax or mail.

### *Controlling Your Projector from a Computer*

### If you want to be able to control the projector's settings from your computer, you can install the EMP Link V program on the Projector Software CD-ROM. In addition to making the projector's features accessible from your computer, this program lets you enhance your presentations with special effects.

If you want to install EMP Link V, insert the Projector Software CD in your CD-ROM drive and follow the instructions on the screen. The installation program also installs the *EMP Link V User's Guide* on your hard disk. You can access this manual in the EMP Link V folder for complete instructions on using the program.

### **Optional** Accessories

To enhance your use of the projector, EPSON provides the following optional accessories:

Product	Product number	
Customized carrying cases for the projector and its cables:		
Hard shell carrying case ATA shipping case	ELPKS22 ELPKS21	
Replacement lamp and air filter	ELPLP11	
Short throw zoom lens	ELPLW01	
Long throw zoom lens	ELPLL02	
Extra long throw zoom lens	ELPLL03	
Fixed short throw lens	ELPLR01	
Ceiling mount	ELPMB31	
Suspension adapter for ceiling mount	ELPMBAST	
Kensington security lock	ELPSL01	

### note

The EMP Link V program is optional; you do not need to install it to use the projector.

Λ

Product	Product number	
Portable projection screens 50-inch 60-inch 80-inch	ELPSC06 ELPSC07 ELPSC08	
Remote IR receiver	ELPST04	
Digital video cables:		
DVI to DVI, 10 feet (3 meters) DVI to DFP, 10 feet (3 meters)	ELPKC20 ELPKC21	
Communication kit cable set and computer cable to connect projector to a second computer. There is also a Mac <sup>®</sup> adapter set so you can connect to a second Macintosh. You may also need the VGA-13W3 video cable (ELPKC06) if you're connecting the projector to a high-end workstation.		
ELP communication cable set Computer video cable (HD15/H15, 1.8m) Computer video cable (HD15/HD15, 3.0m)	ELPKC04 ELPKC02 ELPKC09	

You can purchase these accessories from your dealer or by calling EPSON at (800) 873-7766; or visit the EPSON Store<sup>™</sup> at www.epson.com (U.S. sales only). In Canada, please call (800) 873-7766 for dealer referral.

### About This Guide

This guide describes how to set up and use your EPSON PowerLite projector. The information applies to both the 8100i and the 9100i models. (Any differences are noted.)

Chapter 1, "Setting Up the Projector," provides instructions on how to set up the projector and connect it to your computer, video source, or other optional equipment.

Chapter 2, "Using the Projector," explains how to turn the projector on and off, adjust the image size and quality, use the remote control unit, control the audio and video, annotate your presentation with effects, monitor the projector's operating status, and use the on-screen help.

Chapter 3, "Fine-tuning the Projector," describes how to use the projector's built-in menus to adjust the image settings, color, and sound; customize the drawing tools; create your own user logo or image; and view information about the projector.

Chapter 4, "Maintaining and Transporting the Projector," covers basic procedures for maintaining your projector in good working order and gives guidelines for transporting it.

Chapter 5, "Solving Problems," describes how to interpret your projector's warning lights and gives helpful information for solving problems.

Chapter 6, "Technical Specifications," lists the technical specifications for the projector.

Chapter 7, "Notices," contains important safety instructions, technical information about the remote control, and the FCC compliance statement.

An Index is provided at the end of the manual.

6

### Warnings, Cautions, and Notes

Please follow these guidelines as you read this manual:


- Warnings must be followed carefully to avoid bodily injury.
- Cautions must be observed to avoid damage to your equipment.
- Notes contain important information about your projector.

### Reading This Manual Online

Your PowerLite 8100i/9100i CD-ROM includes an electronic copy of this manual. You may find it convenient to copy it onto your laptop's hard drive so it's always with you—for example, when taking your presentation on the road.

To read your electronic manual, you use Adobe<sup>®</sup> Acrobat<sup>®</sup> Reader. Just insert the PowerLite 8100i/9100i CD in your CD-ROM drive, select the Install/View User's Guide button and click Install User's Guide or View User's Guide.

When you open the manual, you'll see this toolbar:

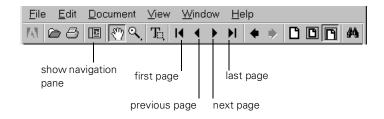

You have several ways to navigate through text:

- Click in the table of contents on the left side of the screen to move quickly to the topic of your choice.
- Use the arrow buttons in the toolbar or the vertical scroll bar on the right side of the document to move through a manual. (The box to the left of the scroll bar displays the current page number.)
- When your mouse pointer changes from a hand to a pointing finger, you can click to jump to a related topic.

For more information, see your Acrobat Reader online guide.

warning

caution

note

#### note

If you do not have Acrobat Reader, you can install it from the CD-ROM.

Welcome

8

### Setting Up the Projector

This chapter tells you how to unpack your projector and set it up for a presentation. The projector must be connected to a computer or a video source such as a VCR, DVD player, camcorder, digital camera, or laser disc player before it can project any images. You may also want to set up the projector for one or more of the following:


- Use the remote control as a wireless mouse. This lets you move around the room and interact with your audience, without worrying about where you'll stand.
- Provide audio for one or more of your image sources. The audio source can be the computer, video source, or another device such as a stereo.

### Unpacking the Projector

Make sure you have all the parts shown on the next page. (You won't need all these components; your configuration will determine which ones you need.)

Save all packaging in case you need to ship the projector. Always use the original packaging (or the equivalent) when you need to send the projector to another location.

If you're moving the projector by hand, use a carrying case (either a case available from EPSON or something similar, such as a laptop case). See page 82 for transportation instructions.

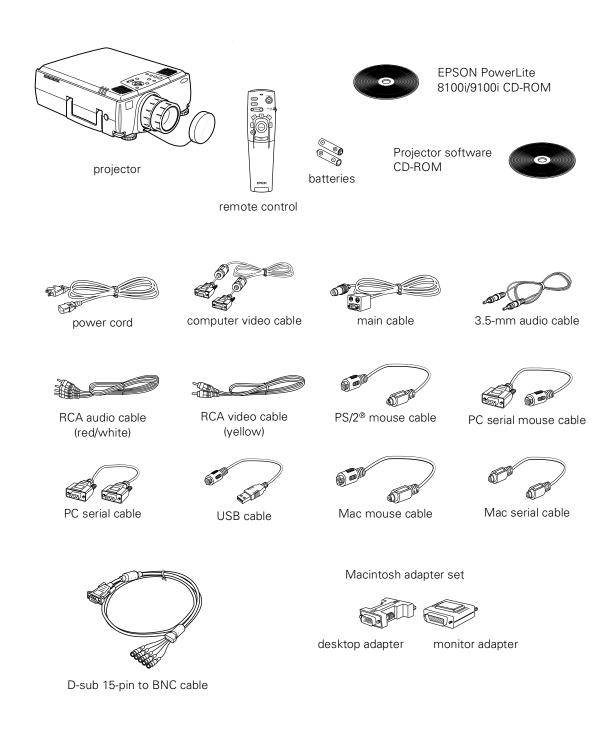

### Additional Components

Depending on how you plan to use the projector, you may need additional components:

- To receive an S-Video signal, you need an S-Video cable. (One is usually provided with your video device.)
- To receive a component video signal from a VCR or other video device, you need a BNC cable (usually provided with the device).
- To take advantage of the projector's Digital Visual Interface (DVI), you need a DVI cable and your computer must be capable of producing video signals in DVI format. (See page 34.) You can purchase this cable from EPSON; see page 4.
- To connect the projector to a Macintosh PowerBook, you may need a video-out cable (provided by Apple). If your PowerBook requires a video-out cable and you do not have one, see your Macintosh dealer.

### caution

When replacing batteries, take the following precautions: Don't mix old and new batteries. Replace batteries as soon as they run out. If the batteries leak, wipe away battery fluid with a soft cloth. If fluid gets on your hands, wash them immediately. Remove batteries if you won't be using the projector for a long period of time.


### Installing Batteries in the Remote Control

The remote control operates the projector and lets you access its Effects features. You can also run your presentation with the remote and use it as a wireless mouse.

Follow these steps to install the batteries:

1. Press the tab to release the battery compartment cover.

- 2. Remove the cover and insert the two AA batteries included with the projector as shown.
- 3. Replace the battery compartment cover.

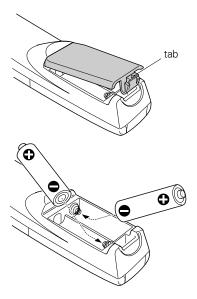

### Positioning the Projector

Before connecting the projector, you need to decide where to place it. The location you choose depends on the size of the audience (and room) and your presentation style.

- Place the projector on a sturdy, level surface, between 3 and 48 feet from the screen.
- Make sure there is plenty of space for ventilation around and under the projector.
- Make sure the projector is within 6 feet of a grounded electrical outlet or extension cord, and within 5 feet of your computer and/or video source.
- Face the projector squarely toward the screen. Otherwise, your image will be distorted.

Most presenters find it convenient to place the projector in the front of the audience, leaving as much space as possible between the screen and the projector. Then you can remain in front of the audience and close to the equipment.


Use the figure below as a guideline to help you determine how far from the screen to place the projector. The distances are based on using the standard lens. Your image size may not exactly match the sizes shown; its actual size depends on how you position the zoom ring and whether you have adjusted the image size with other settings (such as the keystone correction or **Resize** button).

#### caution

Don't hold or lift the projector by the lens, or you may damage it.


### note

It's easier to position the projector when the screen is directly in front of the room. If the screen is placed diagonally in a corner, it's much more difficult to aim the projector squarely at the screen and get a non-distorted image.

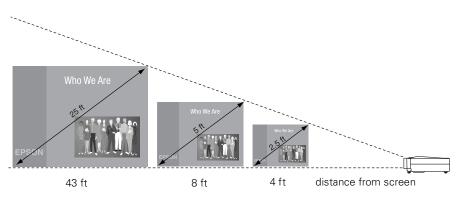

When projecting from a table, the ideal arrangement is to set the projector flat on its surface. This way, you can use the lens shift knob (instead of raising the projector's feet) to position the image on-screen. This delivers the best-looking picture.

You won't need to tilt the projector upward as long as you position it so that its lens is at least as high as the bottom of the screen, but no higher than the middle of the screen, as shown:

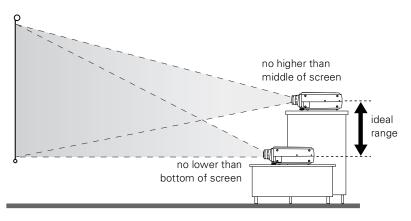

#### note

After positioning the projector, you may wish to connect a Kensington security lock to the hole on the projector's left side. This can be purchased from your computer or electronics dealer or from EPSON. (See page 4.) (If you have to raise the front of the projector, you can use the projector's keystone correction to eliminate distortion caused by tilting the projector upward. But you'll still get a better picture if you can leave the projector flat on the table, without extending its feet.)

If you'll be projecting from overhead, you can get the best-looking picture by mounting the projector parallel to the ceiling, with its lens at least as high as the middle of the screen, but no higher than the top of the screen. Then use the height adjustment knob to position the image on-screen. You'll also need to select ceiling projection in the projector's Advanced menu (see page 71).

### Choosing Your Connections

The connections you'll need to make depend on the equipment you're using, whether your presentation includes sound, and whether you plan to use the remote to run your presentation.

Connecting to a computer

For many presentations, the only connection you'll need is between your computer and the projector. See "Connecting to a Computer" on page 16.

#### Connecting to other video sources

You can connect a VCR, camcorder, laser disc player, DVD player, HDTV, digital camera, or any other video source to your projector. You can connect the video source and a computer at the same time, and easily switch between sources. See "Connecting to Other Video Sources" on page 35.

### Using the remote control

To use the remote control as a wireless mouse, you'll need to connect the mouse cable. When you use the remote, you can locate the projector (and computer) far enough from the screen to get a large image, without worrying about where you stand. This lets you move around the room and interact with your audience, while still controlling your presentation.

#### Including sound in your presentation

If your presentation includes sound, you can connect an audio cable to use the projector's built-in stereo speakers. This is especially useful when the source of your presentation is a laptop.

### Connecting to a Computer

Follow the instructions below for the type of computer you need to connect:

- PC desktop computer on page 17
- PC laptop on page 20
- Macintosh desktop computer on page 24
- Macintosh PowerBook on page 29

The instructions in these sections explain how to connect your computer to the **Computer 1** port using the computer video cable. If you want to connect your computer using the BNC cable, or you want to connect a high-end workstation or a computer that outputs video in Digital Visual Interface (DVI) format, see "Making Other Computer Connections" on page 33.

After connecting your equipment, follow the instructions in Chapter 2 to turn on the projector and other components.

### Connecting to a PC Desktop Computer


To connect the projector to your PC desktop computer, you need to:

- Connect the computer video cable and computer monitor cable
- Connect the mouse and/or serial cable (if you want to use the remote control as a mouse or use the EMP Link V software)
- Connect the audio cable (if you'll be projecting with audio)

Follow the steps in each section for the cables you need to connect. Before beginning, turn off the projector and computer if they are on.

### Connecting the Video and Monitor Cables

This illustration shows the connections you'll be making. For details, follow the steps below.

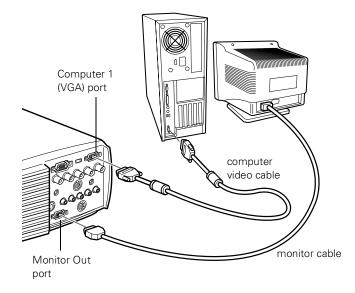


- 1. Disconnect the monitor cable from the video port on the back of your computer.
- If you'll be viewing the video on your computer monitor as well as the projector screen, connect the monitor cable to the projector's Monitor Out port, as shown. (This is useful when you need to view the video output but the projection screen is behind you.)

### note

Computer configurations vary. See your computer manual for the location of the ports needed to connect your projector.

- Connect one end of the computer video cable to the projector's Computer 1 (VGA) port.
- Make sure the DVI/VGA switch on the back panel is flipped to the right, as shown. If necessary, use the tip of a ballpoint pen to slide it over.


DVI/VGA switch (slide to right)

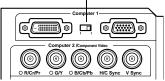

- Connect the other end of the computer video cable to the computer's video port.
- 6. Tighten the screws on the connectors.


### Connecting the Mouse and Serial Cables

To use the remote control as a mouse or use the EMP Link V software, follow the steps below. This illustration shows the connections you'll be making:

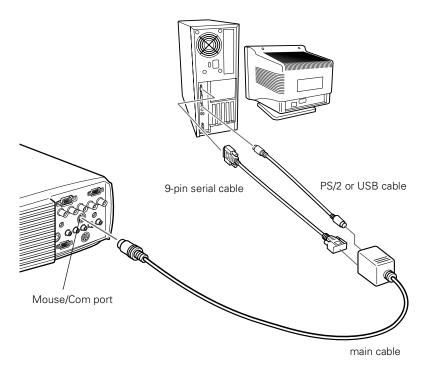

1. Connect the round end of the main cable to the projector's Mouse/Com port, as shown.

2. To use the remote control as a wireless mouse, connect the PS/2 mouse or USB cable included with the projector to the MOUSE terminal on the square end of the main cable.

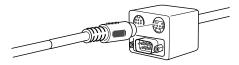

- 3. Disconnect your mouse from the mouse port on the back of your computer and replace it with the other end of the PS/2 mouse or USB cable. (Your computer's mouse will be disabled while you are using the remote control as a mouse.)
- 4. To use the EMP Link V software or to program new effects for the Effects buttons on the remote control, connect one end of the serial cable to the SERIAL terminal on the main cable.



#### note

If your system uses a serial mouse, perform steps 2 and 3 using the PC serial mouse cable instead of the PS/2 mouse or USB cable.

### note


You won't be able to use EMP Link V if your computer has only one serial port that is being used to support a serial mouse.

Connect the other end of the serial cable to the serial port on the back of your computer.

5. Tighten the screws on the connectors.

### Connecting the Audio Cable

1. If you'll be using audio, connect one end of the 3.5-mm audio cable to the Audio port on the projector.

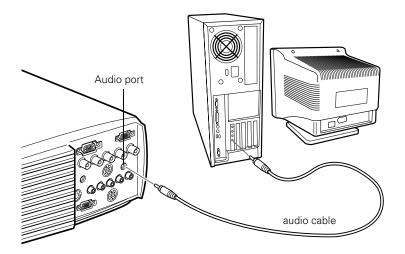

2. Connect the other end of the audio cable to the speaker or audio out port on the computer's sound card.

### Connecting to a PC Laptop Computer

To connect the projector to your PC laptop computer, you need to:

- Connect the computer video cable
- Connect the mouse and/or serial cable (if you want to use the remote control as a mouse or use the EMP Link V software)
  - Connect the audio cable (if you'll be projecting with audio)


Follow the steps in each section for the cables you need to connect. Before beginning, turn off the projector and computer if they are on.

#### note

Laptop configurations vary. See your computer manual for the location of the ports needed to connect your projector.


### Connecting the Video Cable

1. Connect one end of the computer video cable to the projector's Computer 1 (VGA) port.

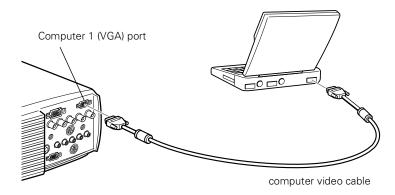

2. Make sure the DVI/VGA switch on the back panel is flipped to the right, as shown. If necessary, use the tip of a ballpoint pen to slide it over.

DVI/VGA switch (slide to right)

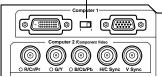


- Connect the other end of the video cable to the laptop's video (monitor) port.
- 4. Tighten the screws on the connectors.

If you don't need to make any other connections, you can plug in your projector and turn it on. See page 40 for instructions.

### Connecting the Mouse and Serial Cables

To use the remote control as a mouse or use the EMP Link V software, follow the steps below. This illustration shows the connections you'll be making:

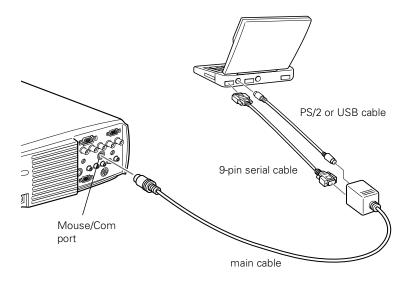


- 1. Connect the round end of the main cable to the projector's Mouse/Com port, as shown.
- 2. To use the remote control as a wireless mouse, connect the PS/2 or USB cable included with the projector to the MOUSE terminal on the square end of the main cable.



3. Connect the 6-pin (mini-DIN) end of the PS/2 mouse cable to the external mouse port or connect the USB cable to the USB port on your laptop.

#### note

If your laptop uses a serial mouse, perform steps 2 and 3 using the PC serial mouse cable instead of the PS/2 or USB cable. 4. To use the EMP Link V software, or to program new effects for the Effects buttons on the remote control, connect one end of the PC serial cable to the SERIAL terminal on the main cable.

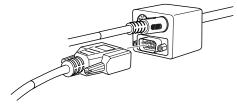


#### note

You won't be able to use EMP Link V if your laptop has only one serial port that's being used to support a serial mouse.

- 5. Connect the other end of the serial cable to the serial port on the back of your computer.
- 6. Tighten the screws on the connectors.

### Connecting the Audio Cable

1. If you'll be using audio, connect one end of the 3.5-mm audio cable to the Audio port on the projector.

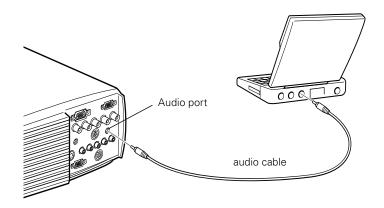

2. Connect the other end of the audio cable to your laptop's headphone jack. (Jack locations vary; see your computer manual if you're not sure of which jack to use.)

#### note

Macintosh configurations vary. See your computer manual for the location of the ports needed to connect your projector.

You cannot currently use the EMP Link V software with a Power Macintosh G3, G4, or iMac. Check with your dealer for future support.

### Connecting to a Desktop Macintosh


To connect the projector to your desktop Macintosh, you need to:

- Connect the computer video cable and computer monitor cable
- Connect the mouse and/or serial cable (if you want to use the remote control as a mouse or use the EMP Link V software)
- Connect the audio cable (if you'll be projecting with audio)

Follow the steps in each section for the cables you need to connect. Before beginning, turn off the projector and computer if they are on.

### Connecting the Video and Monitor Cables


This illustration shows the connections you'll be making. (You may not need to use the adapters as shown.) For details, follow the steps below.

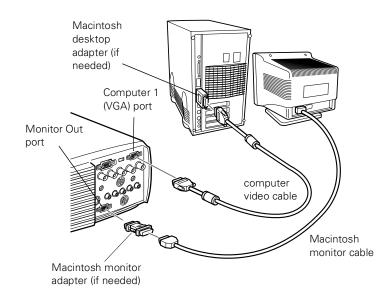

- 1. Disconnect the monitor cable from the video port on the back of the Macintosh.
- Connect one end of the computer video cable to the projector's Computer 1 (VGA) port, as shown.

 Make sure the DVI/VGA switch on the back panel is flipped to the right, as shown. If necessary, use the tip of a ballpoint pen to slide it over.

DVI/VGA switch (slide to right)

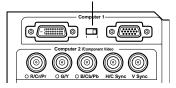



4. Connect the other end of the

computer video cable to the video port on the Macintosh. If it doesn't fit, you may have to use the Macintosh desktop adapter included with your projector.


To use the adapter, remove its cover as shown and set its DIP switches according to the resolution you want to use, such as 16-inch mode. See your Macintosh documentation for instructions.

Replace the cover and connect the adapter to the free end of the computer video cable. Then plug the cable (with the adapter) into the video port on your Macintosh.

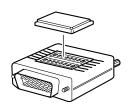

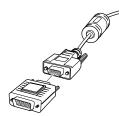


5. If you also want to view the presentation on your computer's monitor, connect the monitor cable to the projector's Monitor Out port. (If necessary, attach the Macintosh monitor adapter to the monitor cable, as shown below, and then connect the adapter to the projector's Monitor Out port.)

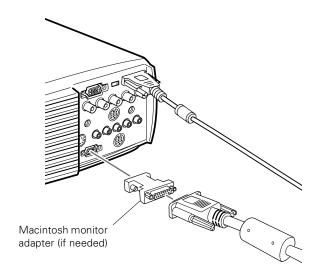


6. Tighten the screws on the connectors.

### Connecting the Mouse and Serial Cables

To use the remote control as a mouse or use the EMP Link V software, follow the steps below. This illustration shows the connections you'll be making:

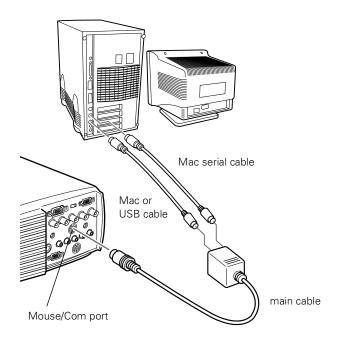


- 1. Connect the small end of the main cable to the projector's Mouse/Com port.
- 2. To use the remote control as a wireless mouse, connect one end of the projector's Mac mouse or USB cable to the MOUSE terminal on the square end of the main cable.

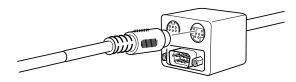


3. Disconnect your Macintosh's mouse cable. Connect the other end of the projector's Mac mouse or USB cable to the mouse or USB port on your Macintosh.

4. To use the EMP Link V software or to program new effects for the Effects buttons on the remote control, connect one end of the Mac serial cable to the MAC SERIAL terminal on the main cable.

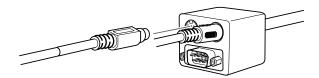

### Connecting the Audio Cable

1. If you'll be using audio, connect one end of the 3.5-mm audio cable to the Audio port on the projector.

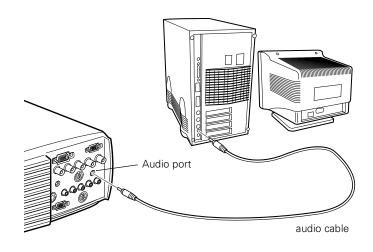

2. Connect the other end of the audio cable to the audio-out port on your computer.

### Connecting to a PowerBook

Your PowerBook must have video-out capability in order to connect to the projector.


To connect the projector to your PowerBook, you need to:

- Connect the computer video cable
- Connect the mouse and/or serial cable (if you want to use the remote control as a mouse or use the EMP Link V software)
- Connect the audio cable (if you'll be projecting with audio)

Follow the steps in each section for the cables you need to connect. Before beginning, turn off the projector and computer if they are on.

### Connecting the Video Cable

This illustration shows the connections you'll be making. For details, follow the steps below.

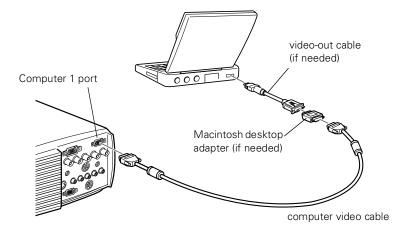


#### note

Some older PowerBooks may need a Macintosh desktop adapter (included with your projector) and a special video-out cable (available from Apple). Check your PowerBook manual to determine the type of connections needed.

- 1. Connect one end of the computer video cable to the projector's Computer 1 (VGA) port, as shown.
- Make sure the DVI/VGA switch on the back panel is flipped to the right, as shown. If necessary, use the tip of a ballpoint pen to slide it over.



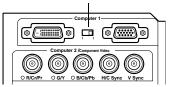

**note** PowerBook configurations vary, so the location of your computer's ports may not match the illustrations. See your PowerBook manual for

the port locations if necessary.

3. Connect the other end of the cable to the video-out port or monitor port on your PowerBook. If you can't connect the cable to your PowerBook, you may need to use the Macintosh desktop adapter that came with your projector.






To use the adapter, remove its cover as shown and set its DIP switches according to the resolution you want to use, such as 16-inch mode. See your Macintosh documentation for instructions.

Replace the cover and connect the adapter to the free end of the computer video cable. Then plug the cable (with the adapter) into the video port on your Macintosh.

If your PowerBook requires a video-out cable, connect its larger end to the adapter, as shown below. Then plug the video-out cable into the video port on your Macintosh.

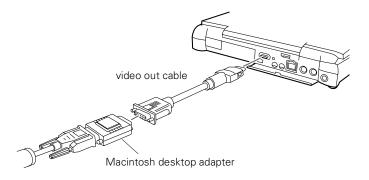

4. Tighten the screws on the connectors.


If you don't need to make any other connections, you can plug in your projector and turn it on. See page 40 for instructions.

#### note

After turning on the projector and computer, you'll need to choose Mirroring or Arrange in the Display Control Panel if you want the PowerBook (as well as the projector) to display video. See page 42 for instructions.

#### Connecting the Mouse and Serial Cables

To use the remote control as a mouse or use the EMP Link V software, follow the steps below. This illustration shows the connections you'll be making:

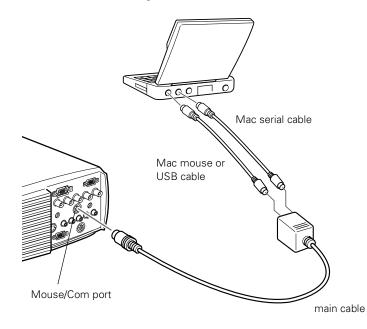


- 1. Connect the round end of the main cable to the projector's Mouse/Com port, as shown.
- 2. To use the remote control as a wireless mouse, connect one end of the projector's Mac mouse or USB cable to the MOUSE terminal on the square end of the main cable.




3. Connect the other end of the Mac mouse or USB cable to the mouse or USB port on the back of the PowerBook.

4. To use the EMP Link V software or program new effects for the Effects buttons on the remote control, connect one end of the Mac serial cable to the MAC SERIAL terminal on the main cable.

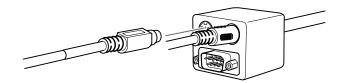

#### Connecting the Audio Cable

1. If you'll be using audio, connect one end of the 3.5-mm audio cable to the Audio port on the projector.

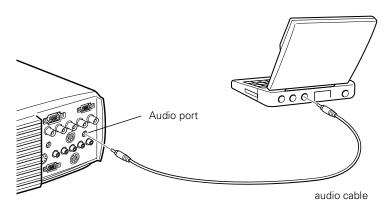

2. Connect the other end of the audio cable to the audio-out port on your PowerBook.

## Making Other Computer Connections


If you want to connect a computer using the BNC cable or connect a high-end workstation or a Digital Visual Interface (DVI) source, follow the instructions below.

#### Connecting a Computer Using the BNC Cable

Follow these steps to connect a computer to the Computer 2/ Component Video interface using the BNC cable:

- 1. Connect the VGA (D-sub 15-pin) end of the cable to your computer's video port.
- Connect the five connectors at the other end of the cable to the projector's R/Cr/Pr (red), G/Y (green), B/Cb/Pb (blue), H/C Sync (horizontal sync), and VSync (vertical sync) ports, shown below.



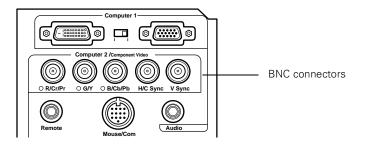

- 3. To display images properly, make sure the BNC parameter in the projector's Setting menu is set to RGB. See page 69.
- 4. If you want to hear computer-audio through the projector, you'll need an RCA-to-3.5 mm stereo cable (available for purchase from your electronics store or video dealer). Insert the cable's 3.5-mm plug into your computer's audio-out port. Then attach the RCA connectors at the other end of the cable to the S-Audio and Audio2 ports of the projector.

#### Connecting to a High-End Workstation

Your PowerLite projector is capable of remapping input resolutions up to  $1600 \times 1200$  pixels. Since  $1280 \times 1024$  pixels is the default resolution for most leading workstations, your projector is ideal for displaying workstation video output.


There is no standard for workstation video output. Workstations that follow the SXGA standard and use the HD15 (standard VGA) connector won't need an adapter cable or any special connection device. However, your system may vary; contact your computer dealer if you need help connecting your workstation.

#### Connecting to a DVI Video Source

The projector's Digital Visual Interface (DVI) receives pictures directly from your computer in digital format. This lets the projector display images of greater clarity than can be achieved using a standard analog VGA connection.

To project images in digital video format, follow these steps:

1. Connect the computer's DVI cable to the projector's DVI port.

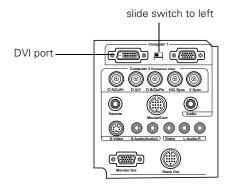

2. Using the tip of a pen or a small screwdriver, slide the DVI/VGA interface switch to the left. (If you need to use the projector's VGA port again, be sure to slide the switch back to the right.)

If you want to connect audio for this computer, you can use the Audio port on the back of the projector.

#### note

You won't be able to view images on a separate monitor when the DVI port is in use.

# Connecting to Other Video Sources

You can connect a VCR, camcorder, laser disc player, DVD player, digital camera, or any other compatible video source to your projector.


The projector supports HDTV, NTSC, PAL, and SECAM video formats, and automatically detects and identifies the video format. However, you can specify that a single broadcast format be detected. (See page 65.) Note that the projector will then be able to detect only one type of video signal.

The projector can receive composite video, S-Video, or component video. You can connect the projector to one or more of these video sources at the same time. If all three are connected, the projector automatically selects S-Video as the video source.

The type of cable you use depends on whether you have composite video, S-Video, or component video. For composite video, use the RCA cables supplied with the projector. For S-Video, use the S-Video cable supplied with your video device or obtain one from your computer or video equipment dealer. For component video, use the BNC-style cable that came with your video source. See the following illustration if you're unsure of which type of connectors you have.

#### note

The projector is not compatible with cable TV-style F connectors.

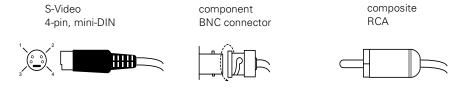


Follow the instructions below for your type of connection.

The Computer2/Component Video port and the S-Video port share the same audio input. So if you have connected a video source to both interfaces, note that you can use audio from only one of them.

#### **Connecting RCA Cables**

Before starting, make sure the projector and your VCR or other video source are turned off.

1. Connect the yellow RCA plug on one end of the RCA video cable to the projector's Video port. Connect the other end of the cable to the video-out port of your video source.

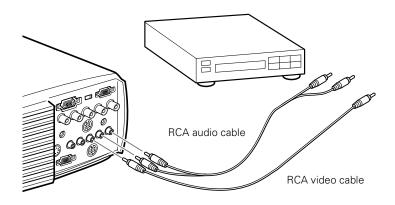


 If you'll be using audio, connect the RCA audio cable to the left and right Audio ports of the projector (insert the white plug into the L port and the red plug into the R port). Connect the plugs at the other end of the cable to the audio output ports of the video source.

## Connecting S-Video or Component Video

Before starting, make sure the projector and your VCR or other video source are turned off.

 For S-Video, insert one end of an S-Video cable into the projector's S-Video connector. Insert the other end into the S-video-out port of your video source.

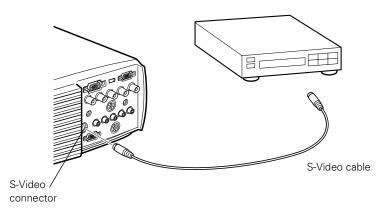

For component video, connect the three ends of a BNC cable into the projector's R, G, and B ports. (Don't connect the cables to the projector's H/C Sync or VSync ports.) Insert the opposite ends of the cable into the corresponding ports of your video source. If the image doesn't display properly, you may need to change the BNC parameter in the projector's Setting menu (see page 69).

 If you'll be using audio, connect the RCA audio cable to the S-Audio and Audio2 ports of the projector. Connect the plugs at the other end of the cable to the audio output ports of the video source.

#### note

Contact your video manufacturer or other video or electronics dealer to obtain a component video cable.

# Using the Projector

Once you have connected your projector to your other equipment (as described in Chapter 1), you're ready to turn it on, adjust the image, and give your presentation. This chapter covers the following:

- Turning on the projector and other equipment
- Adjusting the image
- Using the remote control
- Zooming your image with the remote
- Controlling the projector
- Drawing on the screen
- What to do when the lights flash
- Using the on-screen help
- Shutting down the projector


# Turning On Your Equipment

Make sure your projector and other equipment are set up and connected correctly, as described in Chapter 1. Then turn on your projector, as described below, followed by any equipment you've connected to it. You can turn on your computer and video equipment in any order, but if you have more than one computer or video source connected, you may have to switch to the desired source as described on page 51.

## Turning On the Projector

Follow these steps to turn on the projector:

- 1. Connect one end of the power cord to the projector's power inlet.
- 2. Connect the other end to a grounded electrical outlet. The power light on the projector's control panel starts flashing orange and then stays orange, indicating that the projector is receiving power but not yet turned on.
- 3. Remove the lens cap.
- 4. Press the red **Power** button on top of the projector (or the remote control) to turn on the projector. (If you are using the remote, make sure it is turned on. See page 48 for more information.)

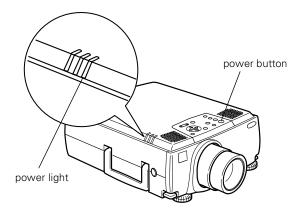


#### warning

Never look into the lens when the lamp is on. This can damage your eyes, and is especially dangerous for children.

The power light flashes green as the projector warms up, and the projection lamp comes on in about 30 seconds. The power light stays green, and you may see a blue screen with the message **No Signal** displayed. This is normal.

- 5. Do one of the following:
  - If you've connected more than one computer and/or video source, you may need to press the Computer or Video button on top of the projector to select the correct source. (Allow a few seconds for the projector to sync up after pressing the button.)

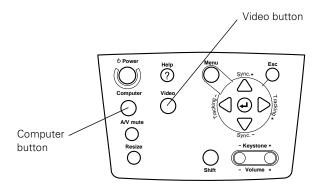

These buttons switch the display between the video source(s) and the computer source(s).

 Turn on or restart your computer. In a few moments, you should see your computer display projected.

(Windows only: If you see a New Hardware Found message saying that it has found a plug-and-play monitor, click Cancel.)

 If you're projecting a video, turn on your video source and press the Play button.

If a projected image fails to appear, see the next section for help.

Once you see your image, turn to page 44 for instructions on focusing and making other image adjustments.

When you're done with your presentation, shut down the projector as described on page 58. Shutting down the projector correctly prevents premature lamp failure and possible damage to the projector from overheating.

### What To Do If You See a Blank Screen


If you see a blank screen or a blue screen with the message **No Signal** after turning on your computer or video source, do one of the following:

- Make sure the cables are connected correctly, as described in Chapter 1.
- Make sure the power light is green and not flashing and the lens cap is off.
- If you've connected more than one computer and/or video source, you may need to press the Computer or Video button on top of the projector to select the correct source. (Allow a few seconds for the projector to sync up after pressing the button.)
- Try restarting your computer.

#### If you're using a PowerBook:

You may need to set up your system to display on the projector screen as well as the LCD screen. Follow these steps:

- 1. From the Apple menu, select **Control Panels**, then click Monitors and Sound.
- 2. Click the Arrange icon.

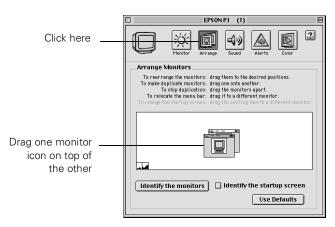

3. Drag one monitor icon on top of the other.

If this option isn't available, you may need to select one of the Simulscan resolution settings:

1. Click the Monitor icon.



2. Select a Simulscan resolution as shown. (Allow a few seconds for the projector to sync up after making the selection.)

#### If you're using a PC laptop:

Press the function key that lets you display on an external monitor. It's often identified with an icon such as <a>/> or</a> labelled CRT/LCD. You may have to hold down the Fn key while pressing it. Check your laptop's manual or online help for details.

On most systems, the  $\Box$ / $\Box$  or CRT/LCD key lets you toggle between the LCD screen and the projector, or display on both at the same time. Allow a few seconds for the projector to sync up after pressing it.

Depending on your computer's video card, you might need to use the Display utility in the Control Panel to make sure that both the LCD screen and external monitor port are enabled. See your computer's documentation or online help for details.

## Sleep Mode

When the projector has not received any input signals for 30 minutes, it automatically turns off the projector lamp and enters "sleep mode." In sleep mode, only a minimum amount of the projector's circuitry remains on. This conserves electricity, cools the projector, and extends the life of the lamp. When you are ready to start projecting again, press the **Power** button. If you are done using the projector, unplug the power cord.

#### note

When the projector is in sleep mode, the power light is orange. If necessary, you can disable sleep mode in the Setting menu. See page 69.


# Adjusting the Image

Once you see your image, you'll need to make certain adjustments:


- To focus or zoom your image, see below.
- If only part of a computer image is displayed, you may need to press the **Resize** button. See page 45 for more information.
- If the image is too high or too low, you can reposition it. See page 46.
- If the image isn't square, see page 47.
- If the image is flickering or "noisy," see page 47.

## Focusing and Zooming Your Image

Rotate the focus ring to sharpen the image.

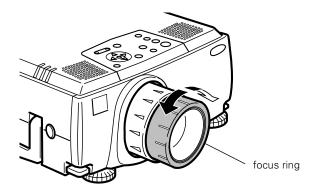

Rotate the zoom ring to enlarge or reduce the image.

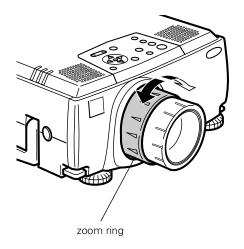

If the image still isn't large enough, you may need to move the projector farther away from the screen. You can also use the E-Zoom button on the remote control to zoom in on a portion of the image. See page 50 for instructions.

## Resizing the Image

If only part of your computer screen is displayed, your computer may be set for a higher resolution than the projector's "native" display:  $1024 \times 768$  pixels (PowerLite 8100i) or  $1280 \times 1024$  (PowerLite 9100i). You can resize the image to fit the resolution of your projector.

- Press the Resize button on the remote control or the control panel. The screen image is automatically compressed.
- Continue pressing the Resize button to pan around the screen in the original resolution.

If you're projecting from video equipment, pressing the **Resize** button switches the aspect ratio between 4:3 and 16:9. If you have zoomed in on your image, you can also use the **Resize** button to switch it back to the original display size.

#### note


You can also resize your image with the **Resize** button when you're projecting from a VCR or other video source.

## Adjusting the Height of the Image

You can adjust the height of the image using the lens shift knob on the side of the projector and the projector's feet.

#### Using the Lens Shift Knob


Use the lens shift knob on the side of the projector to raise or lower the projected image. Press the knob to make it pop out; then turn it clockwise or counterclockwise to move the lens up or down. When you're finished, press the knob back in.

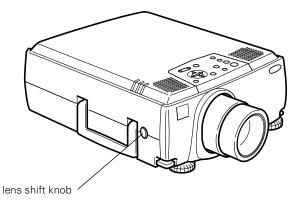

#### Using the Projector's Feet

If the image is too low, you can extend the projector's feet to raise the lens. Follow these steps:

1. Stand behind the projector and hold up the front while you squeeze the blue foot release levers against the projector. This unlocks the feet.

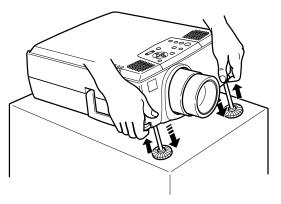

# caution

Do not hold the projector by the lens; this can damage it.


- 2. Raise or lower the projector until the image is positioned where you want it.
- 3. Release the levers to lock the feet in the new position and set the projector down gently.
- 4. To fine-tune the height of the projector, turn the feet. Turn them clockwise to raise the projector and counterclockwise to lower it.

If the image shape becomes distorted after you adjust the height, see the following section.

# Adjusting the Image Shape

If the projected image isn't square or has a "keystone" shape, do one or more of the following:

- If your image looks like or , you've placed the projector off to one side of the screen, at an angle. Move it directly in front of the center of the screen, facing the screen squarely.
- If your image looks like or , press the + or side of the Keystone button to correct the shape of the image. After correction, your image will be slightly smaller.

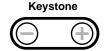


You can also perform electronic keystone correction using the projector's Setting menu. See page 69.

# Adjusting the Tracking and Synchronization

If you're projecting from a computer and you notice vertical stripes or the image is flickering or noisy, you can increase the clarity by pressing the  $\leftarrow$  button on the control panel or the **Auto** button on the remote control. This resets the projector's tracking, sync, and position settings. If necessary, you can also correct the image manually using the **Tracking** and **Sync** buttons on the control panel.


#### note

Images will be projected more vividly if you adjust the Tracking before the Sync. Press the Tracking – and Tracking + buttons to eliminate the vertical stripes.

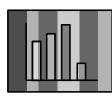




 Press the Sync – and Sync + buttons to eliminate flashing, blurring, or vertical noise on the screen image.

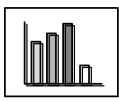



#### note

You must also be within  $\pm 30^{\circ}$  verically and  $\pm 15^{\circ}$  horizontally from the front or rear sensor.

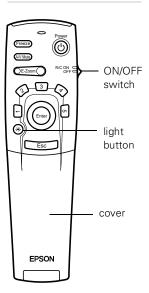

# Using the Remote Control

The remote control lets you access your projector's features from almost anywhere in the room—up to 32 feet away. You can use it to turn the projector on and off, zoom the image, and display the projector's menus, for example.

If you have connected the mouse cable (as described in Chapter 1), you can also use the remote control as a wireless mouse to run your presentation.

Before you can use the remote control, you need to install the batteries, as described on page 12. Then follow these steps:

- 1. Push up the R/C switch on the side of the remote control to turn it on.
- Press the round light 3/2 button. The other buttons on the remote light up temporarily. If they don't light up, you need to change the batteries. See page 12 for instructions.
- 3. Point the remote at the projector or at the screen.

4. Press the button for the function you want to use. See pages 50 to 55 for more information.

For some functions, you need to use the **Enter** button like a mouse to navigate on the screen. Press on the edge of the button with your thumb. Or, grasp it between your thumb and finger and tilt it in the direction you want to move.

5. To access additional buttons, pull down the cover below the Esc button. (See pages 50 to 53 for instructions on using these buttons to control the projector.)


The projector may not respond to remote control commands in these conditions:


- You are too far away or not within 30° to the left or right of and 15° above or below the front or rear sensor.
- The R/C (remote control) switch is in the OFF position
- Batteries are weak
- Ambient light is too bright
- A fluorescent light is shining into the infrared receiver
- A strong light source (such as direct sunlight) shines into the infrared receiver
- Other equipment emitting infrared energy is present (such as a radiant room heater)


### Using the Remote Control as a Wireless Mouse

Using the remote control as a wireless mouse gives you more flexibility; you don't need to stay near your computer or the projector. First make sure you have connected the mouse cable between the projector and your computer with the main cable, as described in Chapter 1.

Note that your computer's mouse is disabled when you connect the projector's mouse cable. If you have a laptop, you cannot use an external mouse; however, you may still be able to use the computer's built-in mouse pointer.

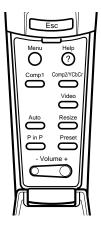

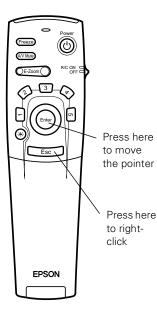

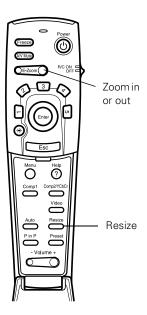

- To move the mouse pointer on the screen, aim the remote at the screen and press on the edge of the Enter button with your thumb. Or, grasp it between your thumb and finger. This button works like the mouse button on many laptop keyboards.
- To click, press down on the center of the Enter button. This is the equivalent of a left mouse click.
- To right-click, press the **Esc** button.
- To double-click, press down twice on the Enter button.
- To click and drag, press down on the Enter button and then tilt it in the direction you want to drag.
- To change slides in a PowerPoint<sup>®</sup> presentation (in Slide Show mode), press down on the Enter button.

# Zooming Your Image with the Remote

You can zoom in on a portion of the image using the E-Zoom button on the remote control.

- 1. Press the right side of the E-Zoom button to zoom in on your image.
  - Press the button repeatedly to enlarge it up to four times in 24 steps.
  - Press and hold the button to zoom in to the size you want.
- 2. Use the Enter button to pan around the screen if necessary.
- 3. Press the left side of the E-Zoom button to zoom out. You can press the button repeatedly, or press and hold to zoom all the way out. You can also press the **Resize** button to return to the original size.

50

Using the Projector

# Controlling the Projector

While giving your presentation, you may want to switch between video sources, adjust the volume, pause the action or sound, or display a picture within your current video display. Make sure you have set up your projector and connected your audio or video source as described in Chapter 1.

# Selecting Your Video Source

If the projector is connected to more than one computer and/or video source, you can use the buttons on the remote control or the control panel to switch between the different sources.

On the control panel, press the **Computer** button to switch between the computer sources and press the **Video** button to switch between standard (composite) video, S-Video, and component video (BNC).

On the remote control:


- Press the Video button to switch between a standard composite video source and an S-Video source.
- Press the Comp1 button to select the Computer 1 source.
- Press the Comp2/YCbCr to select the Computer 2 or component video source.

After you select a source, the screen goes dark for a moment before the image appears.

# Adjusting Sound Volume

Using the remote control or the control panel, you can adjust the volume of your video or computer sounds.

- To increase the volume, press on the right (+) side of the Volume button.
- To reduce the volume, press on the left (-) side of the Volume button.

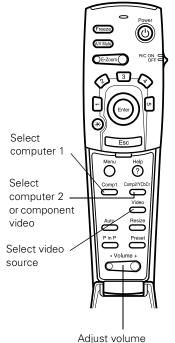

## **Stopping Action**

You can use the remote control to stop the action in your video or computer.

- Press the Freeze button to stop the action and keep the current image on the screen. The sound will continue.
- Press the Freeze button again to re-start it.

## Turning Off the Picture and Sound

You can use the A/V Mute button on the remote control or control panel to turn off the image (and sound) and darken your screen. This is useful if you want to temporarily re-direct your audience's attention without the distraction of a bright screen.


- To turn off the picture, press the A/V Mute button. The screen goes dark.
- To turn the image back on, press the button again.

You can also assign a user logo or image to the A/V Mute button so it displays on the screen whenever you press the A/V Mute button. See "Creating a Screen Logo or Image" on page 72.

## Displaying Picture-in-Picture Video

You can open a small video window on your computer image, and view a video at the same time as your computer presentation. Make sure you have connected your VCR or other video source as described in Chapter 1.

- 1. Press the P in P button on the remote control. The screen may go dark for a moment, and then your video image appears in a small window on the screen. A menu appears in the lower left corner of the screen.
- Press the side of the Enter button (or grasp it between your thumb and finger) to move the video window on the screen. You can use the E-Zoom button to enlarge or reduce the video window.

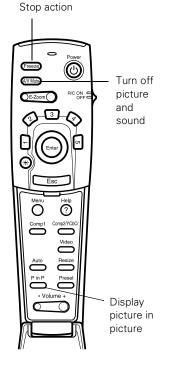

#### note

You can also select the P in P source through the projector's Setting menu. See page 69. 3. When the window is located and sized the way you want, press the Enter button. The menu disappears, and your video plays on the screen.




 When you're finished viewing the picture-in-picture, press the P in P button again. The video window disappears.

# Drawing on the Screen

The projector's drawing controls or "special effects" let you highlight areas on the screen using the numbered buttons on the remote control. You can use these features to annotate your presentation slides or call attention to your most important points. Four types of drawing tools (and an Erase function) are available:

- Arrow or cursor stamp (button 1)
- Box (button 2)
- Spotlight (button 3)
- Bar (button 4)
- Erase (button 5)

You can select different drawing effects through the Effect menu. See page 68 for instructions.

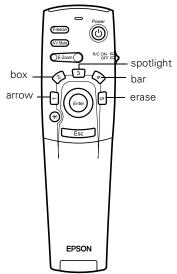

#### Using the Cursor/Stamp Arrow

You can use the cursor stamp tool as a pointer and place cursor stamps anywhere on your screen. You can choose from three types of stamps.

- 1. To activate the cursor stamp, press button 1 on the remote control. A green pointer appears in the upper left corner of the screen. To try a different stamp, press 1 again. Press 1 again to see the third one.
- 2. Press the side of the Enter button to move the pointer wherever you want it.
- 3. To "paste" the pointer on the screen, press down in the center of the Enter button. You can then continue to work with another pointer, moving it around the screen or pasting it wherever you want.
- 4. To erase the pointers pasted on the screen, press button 5.
- 5. To cancel the cursor stamp feature, press Esc.

### **Drawing Boxes**

You can draw outline boxes on the screen to highlight areas of your presentation or video.

- To activate the box tool, press button 2 on the remote control. A small pink square appears in the upper left corner of the screen. This is the "box-drawing" tool.
- 2. Press the side of the Enter button to move the square where you want to begin drawing the box.
- 3. Press down in the center of the Enter button. You see a corner mark on the screen; this defines one corner of the box.
- 4. Press the side of the Enter button to drag the square to where you want the opposite corner of the box to be.
- 5. Press down in the center of the Enter button. You see the box outlined on the screen.

You can continue placing boxes on the screen by repeating steps 2 through 5.

#### note

You can use the projector's Effect menu to select different cursor stamps. See page 68.

#### note

You can use the projector's Effect menu to change the color and shape of the box. See page 68.

- 6. To erase the box(es), press button 5.
- 7. To cancel the box drawing feature, press Esc.

## Spotlighting Your Image

With the Spotlight tool, you can place a spotlight box on part of the screen image.


- 1. To activate the spotlight tool, press button **3** on the remote control. A box of light appears on part of the image.
- 2. Press the side of the Enter button to move the spotlight where you want it to be.
- 3. To remove the spotlight, press Esc.

You can change the size of the Spotlight using the Effect menu; see page 68.

#### Drawing Horizontal and Vertical Bars

With the bar tool, you can draw bold horizontal or vertical lines on the screen to underline or highlight your presentation points. You can choose from three types of bars.


- 1. To activate the bar tool, press button 4 on the remote control. A pink horizontal bar appears across the screen. If you want a vertical bar, press 4 again. If you want to try another horizontal bar, press 4 again.
- 2. Use the Enter button to move the bar up and down the screen (or left and right if you are using the vertical bar).
- 3. To cancel the bar drawing feature, press Esc.

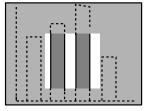

#### note

You can change the color and width of the bars using the Effect menu. See page 68.

# What To Do When the Lights Flash

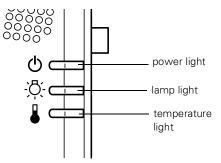

The lights on top of the projector indicate the projector's status and let you know when a problem occurs.

Light	Status	Description and action	
ወ	orange	The projector is in sleep mode. You can unplug it or press the <b>Power</b> button to turn it on.	
Ф	flashing green	The projector is warming up. Wait for the image to appear.	
Ф	green	The projector is operating normally.	
ወ	flashing orange	The projector is cooling down. You can't turn the projector on or unplug it when the light is flashing.	
Ф	red	Power is cut off because of an internal problem. Contact EPSON for help.	
<u>-`Ŏ</u> :-	flashing orange	The lamp is almost burned out. This is a good time to replace it. See Chapter 4 for instructions.	
- <u>Ď</u> -	flashing red	The lamp is burned out or there is a problem with the lamp power. Replace the lamp, following the instructions in Chapter 4. (If replacing the lamp does not solve the problem, contact EPSON.)	
	flashing orange	The projector is too hot. Turn it off and let it cool before using it.	
•	red	The projector has turned off automatically because it has overheated. Let it cool for a few minutes, then turn it back on. Make sure there is plenty of space around and under the projector for ventilation. If it continues to overheat, you may need to change the air filter. See Chapter 4 for instructions.	
	flashing red	There is a problem with the cooling fan or temperature sensor. Turn off the projector and unplug it. Contact EPSON for help.	

# Using the On-Screen Help

If you have a problem while setting up or using your projector, you can get help by pressing the blue **?** Help button on top of the projector or the remote control. The following choices are available:

- Help for the image
   Tells you how to solve problems with a blank screen, blurry images, brightness, colors, and image shape
- Help for the sound Provides help for problems with lack of audio
- Problems with the projector
   Provides help for problems operating the projector
- Language selection
   Lets you choose to display the help information and projector menus in any of 9 different languages

Follow these steps to get help:

- 1. Press the blue ? Help button. You see the main help menu.
- Press the Sync or Sync + button (on the control panel) or press down or up on the Enter button (remote control) to select the menu you want. You see options for that menu.
- Use the Sync or Sync + button (on the control panel) or press down or up on the Enter button (remote control) to highlight the problem you want to solve. Then press the Enter button to select the solution(s).

Depending on your choice, you may see another menu, or you may see a list of solutions.

4. To exit the Help system, press the blue **?** Help button on top of the projector.

If none of the Help menu choices solves your problem, see Chapter 5, "Solving Problems."

# Shutting Down the Projector

#### note

When the projector has not received any input signals for 30 minutes, it automatically turns off the projector lamp and enters "sleep mode." This conserves electricity, cools the projector, and extends the life of the lamp. If you are done using the projector, unplug the power cord. If you want to start projecting again, press the **Power** button.

#### caution

To avoid damaging the projector or lamp, never unplug the power cord when the power light is green or flashing orange. When you've finished using the projector, follow the recommended procedure to shut it down. This extends the life of the lamp and protects the projector from possible overheating.

- 1. If you've connected a computer or laptop and it's displaying only through the projector (the computer's monitor is disconnected or turned off), shut down the computer first; otherwise you won't be able to see your computer's display if you try turning it off after the projector.
- 2. To turn off the projector, press the red **Power** button on the projector or remote control. You see a confirmation message. (If you don't want to turn it off, press any other button.)
- 3. Press the **Power** button again. The power light flashes orange for about a minute as the projector cools down. When the projector has cooled, the orange light stays on and the exhaust fan shuts off.

If you want to turn the projector on again, wait until the orange light stops flashing. Then press the **Power** button.

- 4. Replace the lens cap and unplug the power cord.
- 5. If you're using a VCR or other video source, turn it off after you turn off the projector.
- 6. Disconnect all equipment, and store the projector in a protective case.

# Fine-tuning the Projector

You can use the projector's on-screen menus to adjust the image, sound, and other features. You can also create your own startup screen, customize the "drawing" tools, and view information about the current display settings and lamp status. This chapter covers the following information:

- Using the menus
- Adjusting the image
- Adjusting the sound
- Customizing the drawing controls
- Customizing projector features
- Creating your own user logo or image
- Viewing information
- Restoring the default settings

# Using the Menus

The eight projector menus let you adjust and customize the projector features from either the remote control or control panel:


- The Video menu controls the look and quality of the projected image. It lets you adjust the image position and fine-tune settings such as Brightness, Sharpness, and Contrast.
- The Audio menu controls audio features, such as the volume level, treble, bass, and 3D sound.
- The Effect menu lets you change the cursor speed and modify the drawing tools assigned to the Effects buttons on the remote control.


- The Setting menu allows you to set or adjust such projector options as the keystone function, Picture in Picture (P in P) video source, blank screen color, image source message prompt, A/V Mute display option, BNC input source, and sleep mode.
- The Capture menu lets you capture and store a custom image or logo which you can then use as a startup screen or with the A/V Mute option.
- The Advanced menu allows you to specify additional projector settings, including a language, startup screen, color setting, Comp2 sync termination, and rear or ceiling projection.
- The About menu provides information about H/V frequency, lamp hours, and computer or video selection.
- The Reset All menu lets you restore the factory defaults for all the projector settings.

# Changing Menu Settings


You can use the buttons on the control panel or remote control to access the menus and change settings. Follow these steps:

1. To display the Main menu, press the **Menu** button on the control panel or the remote control.

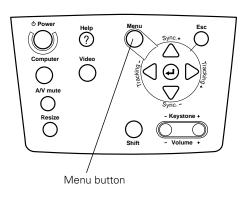

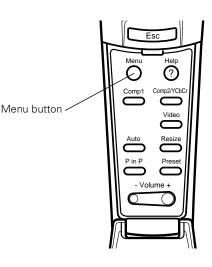


You see the Main menu:

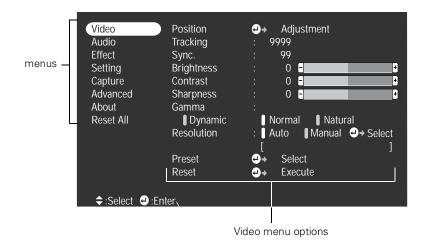

The eight menus are displayed at the left, and the options available for the Video menu (highlighted) are shown on the right.

2. Press the up or down arrows (control panel) or press up or down on the Enter button (remote control) to scroll through the menu choices.

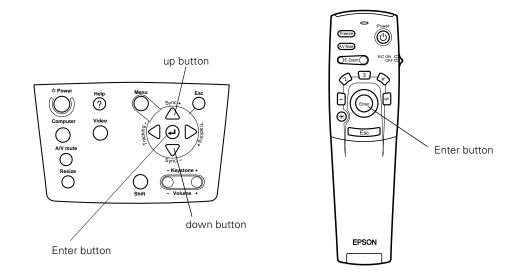

When you highlight a menu, its options are shown on the right.

3. When the menu you want is highlighted, press the Enter button to select it.

The highlight moves to the first option for that menu.

- 4. Press the up or down arrows (control panel) or up or down on the **Enter** button (remote control) to scroll through the options.
- 5. Press either the left or right arrow buttons (control panel) or right or left on the **Enter** button (remote control) to change a setting on one of the submenus.
- 6. If you want to go back to the default settings on any menu, select Reset, press Enter, select Yes, and then press Enter.
- 7. Press the **Esc** button to go back to the main menu. Your changes are saved automatically.
- 8. Press the Menu button to exit the menu system.

The options available in each of the menus are described below.

#### note

Some options are limited to being enabled (turned on) or disabled (turned off). Enabled options are indicated by a green light. Disabled options are blank.


# Adjusting the Image

The Video menu lets you make adjustments to the projected image. The options available in the menu depend on which source is connected to the projector: computer, composite (RCA) video, S-video, or BNC (component) video.

Video	Position	Adjustment
Audio	Tracking	: 9999
Effect	Sync.	: 99
Setting	Brightness	: 0 - +
Capture	Contrast	: 0 -
Advanced	Sharpness	: 0 - +
About	Gamma	:
Reset All	Dynamic	Normal Natural
	Resolution	: Auto Manual ↔ Select
		[ ]
	Preset	→ Select
	Reset	→ Execute
⇒:Select	ter	

Video menu for Computer (D-sub 15/BNC)1 and 2

Video Audio Effect Setting Capture Advanced About	Brightness Contrast Sharpness Gamma Dynamic Reset	: 0 • : 0 • : 0 • : : : : : : : : : : : : : : : : : : :	Natural te	• • •
Advanced About Reset All	Reset	₩ Execut	le	
⇒:Select	er			

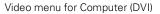

Video	Position	<b>.</b>	Adjustment	
Audio	Brightness		0 -	+
Effect	Contrast		0 -	+
Setting	Color		0 -	+
Capture	Tint		0 -	·
Advanced	Sharpness		0 -	+
About	Gamma			
Reset All	Dynamic	N	Jormal 🔋 Natural	
	Smooth Motion	: 0	ON OFF	
	Video Signal	<b>⇔</b> +	Select [Auto	
	Reset	<b>@</b> +	Execute	
⇒:Select  ⊕:Ent	er			

Video menu for composite video or S-Video

Video	Position	→ Adjustment	
Audio	Brightness	: 0 -	÷
Effect	Contrast	: 0 -	÷
Setting		: 0 -	÷
Capture	Tint	: 0 -	+
Advanced	Sharpness	: 0	÷
About	Gamma	:	
Reset All	Dynamic	Normal Natural	
	Smooth Motion	: ON OFF	
	Video Signal	→ Select [Auto ]	
	Reset	→ Execute	
÷:Select ⊖:	nter		
V.001001			

Video menu for BNC video

The following table describes all the possible options for the Video menu.

## Video Menu

Menu item	Description
Position	Moves the displayed image up, down, left, or right. Select this item and then press right on the <b>Enter</b> button (remote control) or press the right arrow button (control panel) to enter the screen position adjustment mode. Then use the <b>Enter</b> button (remote control) or up, down, left, and right buttons (control panel) to move the screen position in the corresponding direction. When you finish making adjustments, press the <b>Esc</b> button to return to the Video menu.
Tracking	Removes vertical lines from the computer image by matching the projector's internal clock to various computer graphic signals.
Sync	Corrects fuzziness or screen flicker by synchronizing the projector with the tracking signal sent from the computer.
Brightness	Lightens or darkens the overall image. Increase brightness to lighten an image, or decrease it to darken the image.
Contrast	Adjusts the difference between light and dark areas. Increase the contrast to make light areas lighter and dark areas darker. Decrease it to minimize the difference between light and dark areas.
Color	Adjusts the color depth of the image. Increase the color setting for more intense color on the screen, or lower the setting for less intense color.
Tint	Adjusts the tint of the image.
Sharpness	Adjusts the sharpness of the image.
Gamma	Adjusts the vividness of colors in the image. Choose <b>Dynamic</b> for an image with distinct color differences, such as charts. Choose <b>Normal</b> to leave tints uncorrected. Choose <b>Natural</b> to produce images with a natural tint, such as for video images.
Resolution	Specifies the input resolution. In most cases, this setting should be left at the <b>Auto</b> setting to allow the projector to automatically detect the video signal. If you want to specify a setting, however, select the <b>Manual</b> option and then choose from 32 settings.

Menu item	Description
Preset	Allows you to save and recall settings for up to five computer sessions including the resolution, tracking, sync signal, brightness, contrast, sharpness, gamma, and position. (See "Saving and Recalling Computer Settings" below.)
Smooth Motion	When turned <b>ON</b> , makes motion look smoother in images from non-DVD video sources.
Video Signal	Defines the video signal method. Select this item and then press the right arrow button (control panel) or right on the <b>Enter</b> button (remote control) to select the desired video signal method from the menu. If you select <b>Auto</b> the video signal will be selected automatically. Do not select <b>Auto</b> , however, if you are using a PAL (60 MHz) system.
Reset	Returns all menu items to their default settings. Select this item and then press the right arrow button (control panel) or right on the <b>Enter</b> button (remote control) to display the confirmation screen. Select <b>Yes</b> and then press <b>Enter</b> to reset the menu. If you change your mind, select <b>No</b> and then press <b>Enter</b> to clear the confirmation screen without changing any settings.

Saving and Recalling Computer Settings

# Adjusting the Sound


Use the Audio menu to adjust the sound volume and quality of your audio.

Video Audio Effect Setting	Volume Treble Bass SRS SPACE	: : :	0	) 	
Capture Advanced	SRS CENTER Reset	: ••	0 - Execute	•	
About Reset All					
€:Select e:E	nter				

Menu item	Description
Volume	Adjusts the volume level for the speakers. Press the right arrow button (control panel) or press right on the <b>Enter</b> button (remote control) to increase the volume; press the left arrow button (control panel) or left on the <b>Enter</b> button (remote control) to decrease the volume.
Treble	Adjusts the treble (high) tone of the speakers.
Bass	Adjusts the bass (low) tone of the speakers.
SRS® SPACE	Adjusts the width of the sound.
SRS CENTER	Adjusts the depth of the sound.
Reset	Returns all Audio menu items to their initial factory defaults. Select this item and then press <b>Enter</b> to display the confirmation screen. Next, select <b>Yes</b> and press <b>Enter</b> to reset the Audio menu. If you change your mind, select <b>No</b> and press <b>Enter</b> to clear the confirmation screen without changing any settings.

# Customizing the Drawing Tools

The drawing tools let you highlight your presentation with cursor stamps, lines, boxes, and spotlights, as described on page 53. You can use the Effect menu to customize these tools and set the cursor speed for drawing. The **Reset** option lets you return all the drawing tools to their default settings.

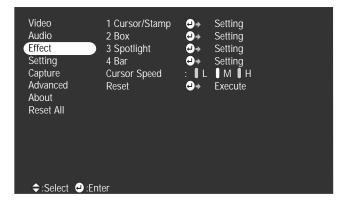


Menu item	Description
Cursor/ Stamp	Sets the shape, size, color, and length of the cursor/stamp assigned to Effect button <b>1</b> . You can define three different cursor/stamps and then select the desired one when you are giving your presentation by pressing Effect button <b>1</b> until the one you want is displayed. To change the cursor/stamp, select it from the Effect menu and then choose the desired attributes for each of the three stamps.
Box	Sets the color, fill characteristic and shape of the box tool assigned to Effect button <b>2</b> . Select this option from the Effect menu and chose the desired box attributes.
Spotlight	Sets the size of the spotlight tool assigned to button <b>3</b> . You can choose large, medium, or small.
Bar	Sets the color, direction, and width of the bar tool assigned to button 4. You can define three different bars and then select the desired one when you are giving your presentation by pressing Effect button 4 until the one you want is displayed. To change the bar, select it from the Effect menu and then choose the desired attributes for each of the three bars.

Menu item	Description
Cursor Speed	Adjusts the cursor speed to low, medium, or high.
Reset	Returns all Effect menu items to their initial factory defaults. Select this item and then press the <b>Enter button</b> to display the confirmation screen. Next, select <b>Yes</b> and then press the <b>Enter</b> button to reset the Effect menu. If you change your mind, select <b>No</b> and then press the <b>Enter</b> button to clear the confirmation screen without changing any settings.

# Customizing Projector Features

The Setting menu and the Advanced menu let you set or adjust many projector functions.

### Setting Menu

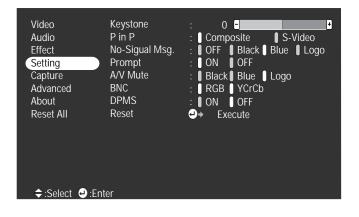

Menu item	Description
Keystone	Adjusts a trapezoid-distorted image to a 4:3 rectangle, correcting up to a $\pm$ 30° tilt. See page 47.
P in P	Selects the image source for the P in P subscreen. See page 52 for more information.
No-Signal Msg	Specifies whether no screen, a black screen, a blue screen, or a user logo/image is displayed when no video signals are being received.
Prompt	Displays a temporary message (computer or video) identifying the image source when set to <b>ON</b> .
A/V Mute	Displays a blue, black, or user logo screen when the audio/video is turned off.
BNC	Specifies the format for BNC input. If the source is a computer, select <b>RGB</b> . If the source is a video device, select <b>YCrCb</b> .
Sleep mode	Enables or disables sleep mode. When sleep mode is on, the projector turns the lamp power off if the projector has not received any image signals from the input source for 30 minutes. Press the <b>Power</b> button to resume projecting.
Reset	Returns all Setting menu items to their default settings. Select this item and then press the <b>Enter</b> button to display the confirmation screen. Next, select <b>Yes</b> and press <b>Enter</b> to reset the Setting menu. If you change your mind, select <b>No</b> and press <b>Enter</b> to clear the confirmation screen without changing any settings.

### Advanced Menu

Video Audio Effect Setting Capture Advanced About Reset All	Language Startup Screen Color Setting Comp2Sync Tern Rear Proj. Ceiling Reset	: ON : Auto	: ∎ ON OFF OFF	
≑:Select @:Er	nter			

Menu item	Description
Language	Selects the language to be used in the menus: English, French, German, Italian, Spanish, Portuguese, Japanese, Chinese, or Korean.
Startup Screen	Turns on or off the display of your user logo during the projector's startup. The logo first must be captured and assigned, as described on page 72.
Color Setting	Adjusts the color temperature of the image. Select <b>Auto</b> to let the projector automatically select the correct color temperature. Select <b>Manual</b> to set the values yourself, then press <b>Enter</b> . <b>Absolute Color Temp</b> Select <b>Absolute Color Temp</b> or <b>RGB</b> and press <b>Enter</b> . Then adjust the screen color. Positive color temperature values provide a cold white; negative values provide a warmer white. <b>Black Level</b> Press the right arrow button (control panel) or press right on the <b>Enter</b> button (remote control) to decrease black in the image. <b>White Level</b> Press the left arrow button (control panel) or press left on the <b>Enter</b> button (remote control) to decrease white in the image.
Comp2 Sync Termination	Normally set to <b>On</b> for the Computer 2 port to receive standard 75-ohm analog video signals. Can be set to <b>Off</b> to receive digital (TTL-level) video signals.

Menu item	Description
Rear Projection	Mirrors the projected image on its Y-axis (left-right). Selecting <b>ON</b> turns mirroring on, while <b>OFF</b> turns it off (for a normal image). Turn on this option when projecting from behind onto a transparent screen.
Ceiling	Mirrors the projected image on its X-axis (top-bottom). Selecting <b>ON</b> turns mirroring on, while <b>OFF</b> turns it off (for a normal image). Turn this option on when the projector is mounted upside-down from the ceiling.
Reset	Returns all Advanced menu items to their default settings. Select this item and then press <b>Enter</b> to display the confirmation screen. Next, select <b>Yes</b> and press <b>Enter</b> to reset the Advanced menu. If you change your mind, select <b>No</b> and press <b>Enter</b> to clear the confirmation screen without changing any settings.

# Creating a Screen Logo or Image

You can transfer any image on your computer to the projector, and then use it as the image displayed when the projector is not receiving a signal. You can also set it to be displayed when you press the A/V Mute button on the remote, or as a startup screen. The image can be a company logo, slogan, photograph, or any other image you want to use.

Video Audio Effect Setting Capture Advanced About Reset All	User's Logo Ca	pture ❹→	Execute
⇒:Select	e:Enter		

### Capturing and Saving the Image

Follow these steps to capture and save a logo or image:

- 1. Display the image (with the projector).
- 2. Press the Menu button on the control panel or remote control to display the Main menu.
- 3. Press the down arrow (control panel) or press down on the Enter button (remote control) to move to the Capture menu.
- 4. Press Enter (control panel or remote control) to highlight the User's Logo Capture option and press Enter again to select it. You see the message "Do you use the present image as a user's logo?"
- 5. Select Yes and press Enter. A selection box appears over the image.
- 6. Use the arrow buttons on the control panel or the Enter button on the remote control to select the area of the image you want to use as the logo. Once you have selected the entire area, press Enter.
- When the message "Do you use this image?" appears on the screen, select Yes and press Enter. If you want to change the area selected, select No, press Enter and repeat steps 4 through 6.
- 8. Use the arrow buttons on the control panel or the Enter button on the remote control to select a zoom rate, and then press Enter.
- When the message "Do you save the user's logo?" appears, select Yes and press Enter. If you do not want to save the logo, select No.
- 10. When you see the message "Saving the user's logo is completed," press the Menu or Enter button to return to the Capture menu.
- 11. Press Menu or Esc to return to the Main menu.

#### note

Saving the logo may take a few moments. Do not use the projector or other sources (computer, video, speaker, etc.) while the logo is being saved.

# Assigning the Image to the No-Signal Message and/or A/V Mute Button

After your image is saved, you can set it up as the no-signal message and/or the screen that's displayed when you press the A/V Mute button.

- 1. Press the Menu button on the control panel or remote control to display the Main menu (if not already displayed).
- 2. Select the **Setting** menu and then press the **Enter** button on the control panel or remote control.
- 3. Press the down arrow (control panel) or press down on the Enter button (remote control) to highlight No-Signal Msg.
- 4. Press the right arrow or use the Enter button to select Logo. This sets your image as the screen displayed when the projector is not receiving a signal.
- 5. If you want to set up your image as the A/V mute, use the down arrow or Enter button to move down to the A/V Mute option and select Logo.
- 6. Press Esc or the Menu button.

Now you can press the A/V Mute button on the control panel or the remote control to display the user logo or image. Press it again to turn off the logo.

# Viewing Projector Information

The About menu lets you view information about the display settings of your computer and the number of hours the lamp has been used. When the image source is a computer, the About menu displays the information listed below.

Video Audio Effect Setting Capture Advanced About Reset All	Lamp ON Time Video Source Frequency Sync Polarity Sync Mode Resolution Refresh Rate	<ul> <li>: 9999 H</li> <li>: Computer</li> <li>: H 999. 99 KHz</li> <li>: V 999. 99 Hz</li> <li>: H Positive</li> <li>: V Negative</li> <li>: Sync On Green</li> <li>: 9999x9999</li> <li>: 999. 9 Hz</li> </ul>
⇒:Select	e :Enter	


#### note

If you access the About menu when the image source is video, you see only the lamp life and the video signal setting.

Menu item	Description
Lamp ON Time	Displays the number of hours the current lamp has been used.
Video Source	Displays the input source.
Frequency	Displays the projector's horizontal and vertical frequency.
Sync Polarity	Displays the horizontal and vertical sync polarity of the computer.
Sync Mode	Displays the sync mode of the computer.
Resolution	Displays the output resolution of the computer video output.
Refresh Rate	Displays the refresh rate of the computer video output.

# Restoring the Default Settings

The **Reset AII** menu lets you return all the projector settings to their default values.

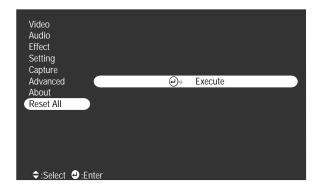

Select **Reset AII** and press the **Enter** button on the control panel or remote control to display the confirmation screen. Select **Yes** to reset all the default settings or **No** to cancel.

# Cleaning the Projector Case


Before you clean the case, first turn off the projector and unplug the power cord.

- To remove dirt or dust, wipe the case with a soft, dry, lint-free cloth.
- To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral detergent. Then wipe the case.
- Do not use alcohol, benzene, thinner, or other chemical detergents. These can cause the case to warp.

# Cleaning and Replacing the Air Filter

Clean the air filter at the bottom of the projector after every 100 hours of use. If it is not cleaned periodically, it can become clogged with dust, preventing proper ventilation. This can cause overheating and damage the projector. To clean or replace the air filter, follow these steps:


- 1. Turn off the projector and unplug the power cable.
- 2. Turn the projector on its side so that the handle is on top and you can access the filter easily.
- 3. To clean the filter, EPSON recommends using a small vacuum cleaner designed for computers and other office equipment. If you don't have one, use a dry, lint-free cloth.

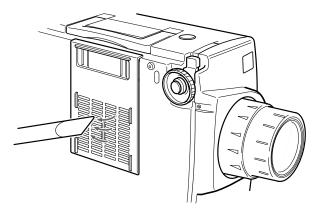


#### note

Standing the projector with the handle at the top prevents dust from getting inside the projector housing. If the dirt is difficult to remove or if the filter is torn, replace it. See page 92 for information on ordering accessories.

4. If you need to replace the filter, pull up on the tab to release the filter and remove it.

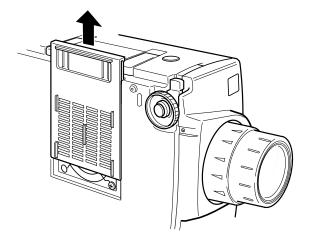

5. Insert the new filter as shown.

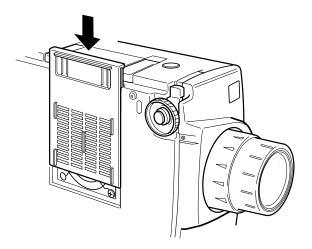

### note

When you get a replacement lamp for your projector, a new air filter is included. You should replace the filter when you replace the lamp.


# Replacing the Lamp

The projection lamp typically lasts for about 2000 hours of use. It is time to replace the lamp when:

- The projection image gets darker or starts to deteriorate.
- The projection lamp light is flashing red or orange.
- The message LAMP REPLACE appears on the screen when the projector lamp comes on (after about 1900 hours of use). To maintain projector brightness and image quality, replace the lamp as soon as possible.

Contact your dealer or EPSON for a replacement lamp. (See page 92 for information on ordering accessories.) Request part number ELPLP11.

- 1. Turn off the projector and unplug the power cable
- 2. Allow the projector to cool down for at least an hour (if it has been on).
- 3. Use a screwdriver to loosen the two retaining screws on the lamp cover. When the screws are loose, lift off the lamp cover. (You cannot remove these screws from the cover.)

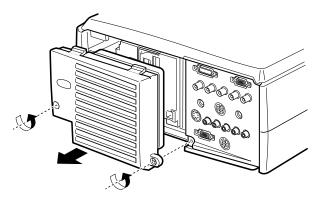


#### note


You can check to see how many hours the lamp has been used. See page 75.

### warning

Let the lamp cool before replacing it. Also, do not touch the glass portion of the lamp assembly. Touching the glass will result in premature lamp failure. 4. Use a screwdriver to loosen the three screws holding the lamp in place. (You cannot remove these screws.)

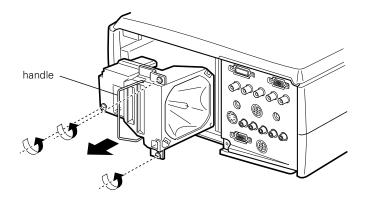

- 5. Lift up the handle and pull out the lamp.
- 6. Gently insert the new lamp as shown below. Make sure it's inserted securely.

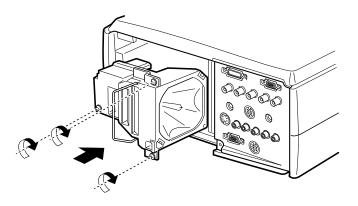

### caution

Do not touch the glass portion of the lamp assembly. Touching the glass will result in premature lamp failure.

Tighten the screws on the new lamp.

- 7. Replace the lamp cover and tighten the cover screws. (Make sure the lamp cover is securely fastened. The projector won't turn on if the lamp cover is open.)
- 8. Now reset the lamp timer as described in the following section.

### Resetting the Lamp Timer

After you install a new lamp, you need to reset the timer so the projector can keep track of how many hours it has been used. Follow these steps:

- 1. Press the Help button and hold it down for at least 5 seconds. The Help menu will be displayed and then you will see a menu asking if you want to reset the lamp ON time.
- 2. Use the left arrow button (control panel) or press left on the **Enter** button (remote control) to select **Yes**.
- 3. Press Enter to reset the timer.

# Transporting the Projector

The projector contains many glass parts and precision parts. If you need to transport it, please follow these packing guidelines to prevent damaging the projector:

- When shipping the projector for repairs, use the original packaging material if possible. If you do not have the original packaging, use equivalent materials, placing plenty of cushioning around the projector.
- When transporting the projector as freight or checked luggage, first put it in a hard-shell carrying case (such as an optional EPSON accessory case), then pack it in a firm box, using cushioning around the case.
- When you are hand-carrying the projector, be sure to store it in a carrying case (such as the optional cases offered by EPSON).

#### note

EPSON shall not be liable for any damages incurred during transportation.

# Solving Problems

This chapter helps you diagnose and solve problems with your projector, and provides technical support information for problems you can't solve yourself. You can also check the on-screen help by pressing the ? Help button on the control panel or remote control. See page 57 for instructions on using the help system.


This chapter explains the following:

- Problems with the projector. See this section if the projector is not working and to find out what the warning lights mean.
- Problems with the remote control. See this section if the projector is not responding to remote control commands.
- Problems with the screen image or sound. See this section if you cannot project an image or if the screen image is not good.

If none of the suggestions solves the problem, see "Where To Get Help" on page 92.

# Problems with the Projector

If the projector is not working correctly, first turn it off and unplug it. Then plug the power cord back in and turn on the projector. If this does not solve the problem, check the warning lights on top of the projector. These lights alert you to problems with projector operation.

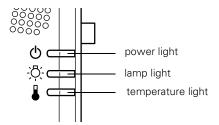

Projector	status	and	warning	lights	
J				0	

Light	Status	Description and action
ወ	orange	The projector is in sleep mode. You can unplug it to turn it off or press the <b>Power</b> button to turn it on.
ወ	flashing green	The projector is warming up. Wait for the image to appear.
ወ	green	The projector is operating normally.
ڻ ا	flashing orange	The projector lamp is off and the projector is cooling down. You can't turn the projector on or unplug it when the light is flashing.
ወ	red	Power is cut off because of an internal problem. Contact EPSON.
- <u>'</u> Ŏ <u></u> -	flashing orange	The lamp is almost burned out. This is a good time to replace it. See Chapter 4 for instructions.
<u>-Ŗ</u> -	flashing red	The lamp is burned out or there is a problem with the lamp power. Replace it as described in Chapter 4. If replacing the lamp does not solve the problem, contact EPSON.
₿	flashing orange	The projector is too hot. Turn it off and let it cool before using it.
	red	The projector has overheated. Let it cool for a few minutes, then turn it back on. See Chapter 4.
	flashing red	There is a problem with the cooling fan or temperature sensor. Contact EPSON for help.

See the information below for what to do when you see these warning lights or encounter other specific problems with the projector.

# The $\bigcirc$ power light is flashing orange and you cannot turn on the projector.

The lamp is cooling down. Wait until the light turns off and then press the **Power** button to turn on the projector.

### The 🖞 power light does not come on.

Press the **Power** button to turn off the projector, check that the power cable is connected securely both at the power outlet and the projector, and press the **Power** button again. Try removing and reseating the lamp.

# Projected images get darker or start to deteriorate, or the

Replace the lamp as described in Chapter 4.

### The 🌡 temperature light is red.

- The projector is overheating, which turns the lamp off automatically. Let the projector cool for a few minutes, then turn it back on. Make sure there is plenty of space around and under the projector for ventilation. If it continues to overheat, you may need to change the air filter.
- The air filter may be clogged. Clean it as described in Chapter 4 and then let the projector cool for awhile. If this does not work, you may need to change the air filter. See Chapter 4.
- If the projector continues to overheat after you clean the air filter, the problem may be caused by damage to the cooling fan or internal circuits. Contact EPSON for help.


### The 🌡 temperature light is flashing orange.

The projector is too hot. Press the **Power** button to turn it off and let it cool for 5 minutes before using it again.

### warning

Except as specifically explained in this User's Guide, do not attempt to service this product yourself.

# Problems with the Remote Control

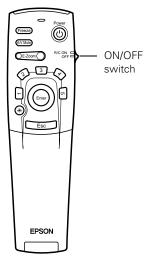

### The projector doesn't respond to remote control commands.

- Make sure the remote control is turned on.
- Make sure you are within 30 feet of the projector, and within range of the infrared receivers (approximately 30° to left or right and 15° above or below).
- The remote control batteries may not be installed correctly or may be low on power. Check the installation or replace them as described on page 12.
- Dim the room lights and turn off any fluorescents. Make sure the projector is not in direct sunlight. Strong lighting, especially fluorescent lights, may affect the projector's infrared receivers.
- Turn off any nearby equipment that emits infrared energy, such as a radiant room heater.

# You can't control the mouse pointer with the remote control.

- Make sure the mouse cable is securely connected to both your computer's mouse port (using the main cable) and the projector's mouse port. See Chapter 1 for details.
- Make sure you have used the correct cable. The PS/2 mouse cable and Macintosh mouse cable look the same, but they are not identical. Check the label on the end of the cable.

# Problems with the Image or Sound

### No image appears on the screen.

- Check that the power light is green, not flashing, and the lens cover is off.
- The projector may be in sleep mode. If the power light is orange, press the Power button to turn the projector on.
- If the power was switched off and then on again, the projector may still be cooling down. Wait until the power light stops flashing and remains orange; then press the Power button again.
- Make sure the Brightness setting on the Video menu is correct. See page 64 for more information. Try selecting the Reset All setting to return all setup menus to their default values.
- Press the A/V Mute button to make sure the picture has not been turned off temporarily.
- The attached computer may be in sleep mode or displaying a black screen saver. Try pressing a key on the computer.

# You see a blue screen with the message No Signal displayed.

- Make sure the cables are connected correctly, as described in Chapter 1.
- Try restarting your computer.
- If you've connected more than one computer and/or video source, you may need to press the Computer or Video button (on the control panel) or the Comp1, Comp2/YCbCr, or Video button (on the remote control) to select the correct source. Allow a few seconds for the projector to sync up after pressing the button.
- If you've connected a second computer or you're using component video, make sure the BNC option in the Setting menu is correct. See page 69 for more information.
- Make sure the Computer 1/DVI selector switch on the projector's interface panel is set correctly. See Chapter 1.

### If you're using a PC laptop:

Press the function key that lets you display on an external monitor. It's often labelled with an icon such as <a>/> but it may also be labelled CRT/LCD. You may have to hold down the Fn key while pressing it. Check your laptop's manual or online help for details.</a>

On most systems, the  $\Box$ / $\Box$  or CRT/LCD key lets you toggle between the LCD screen and the projector, or to display on both at the same time. Allow a few seconds for the projector to sync up after pressing it.

Depending on your computer's video card, you might need to use the Display utility in the Control Panel to make sure that both the LCD screen and external monitor port are enabled. See your computer's documentation or online help for details.

#### If you're using a PowerBook:

- 1. From the Apple menu, select **Control Panels**, then click **Monitors and Sound**.
- 2. Click the Arrange icon.
- 3. Drag one monitor icon on top of the other. This lets you display on the projector screen as well as the LCD screen.
- 4. If this option isn't available, click the Monitor icon.
- 5. Select one of the listed Simulscan resolutions. (Allow a few seconds for the projector to sync up after making the selection.)

### The message Not Supported is displayed.

Make sure your computer's resolution doesn't exceed UXGA (1600 × 1200), and the frequency is supported by the projector (see page 95). If necessary, change your computer's resolution setting as described below.

### Only part of the computer image is displayed.

- Press the **Resize** button on the control panel or remote control.
- Make sure the image Position setting is correct on the Video menu. See page 64 for more information.
- If the right or left side of the image is cut off, you may need to adjust the tracking using the buttons on the control panel. Hold down the + or – Tracking button to change the setting until the image looks correct.
- Make sure your computer's resolution setting is correct. Ideally, it should be 1024 × 768 (PowerLite 8100i) or 1280 × 1024 (PowerLite 9100i) to match the projector's native resolution. If this option isn't available, select one of the other compatible video formats listed on page 95.

### Windows:

Right-click the desktop, select **Properties**, click the **Settings** tab, and use the dialog box to select a different resolution.

- Macintosh:
   On the Apple menu, choose Control Panels, then click
   Monitors and Sound. Select a different resolution.
- You also may need to modify existing presentation files if you created them for a different resolution. See your software manual for specific information.

# The image has a distorted, crooked, or keystone (trapezoid) shape.

- This may be caused by extending the legs and tilting the projector to position the image. Press the right + or left – side of the Keystone button on top of the projector. Press and hold either side of the button until the image is rectangular.
- Make sure the projector faces the screen squarely. If the projector is not pointed straight at the screen, your image will be distorted.

### The image or parts of the image are blurred or not in focus.

- Adjust the focus using the focus ring.
- Adjust the Brightness, Contrast, Sharpness, and Gamma settings on the Video menu. If you're viewing a computer image, also try adjusting the Tracking and Sync buttons on the projector's control panel.

When you change video settings, you should be able to see the effect on the screen immediately. If you don't like the new settings, you can always select **Reset** to return to the factory default settings.

- Try pressing the Auto button on the remote control or the Enter button on the control panel to automatically reset the video settings.
- There may be dirt or smears on the lens. Clean the lens as described on page 77.

### The image vibrates, flickers, or has vertical lines.

If you're projecting from a computer, try pressing Auto on the remote control or Enter on the control panel. This resets the computer display settings automatically.

If that doesn't work, adjust the Tracking and Sync using the buttons on the control panel. Hold down the button to change the setting until your image looks correct. It is best to project a gray screen (or the screen you see when you exit Windows) when you adjust these settings.

You can also change the Tracking and Sync settings through the Video menu (see page 64).

### The image quality is poor on a laptop computer.

The video signal may be split between the computer and the projector. If you notice a decline in the projected image quality when the image is displayed simultaneously on your laptop computer and the projector, turn off the laptop LCD display.

#### note

Images will be projected more vividly if you adjust the Tracking before the Sync.

### The colors of the image are not right.

- The color balance may be incorrect. If you're displaying a computer image, use the Gamma option in the projector's Video menu to adjust the balance of red, green, and blue. If you're displaying video, adjust the Color, Tint, and Gamma settings on the Video menu. Also try adjusting the Color Setting option in the Advanced menu.
- Check your computer display settings to correct the color balance.

### There is no sound.

- First check that the volume is not turned all the way down and that the audio cable is securely attached to both the projector and the audio source.
- Make sure the A/V Mute button is not enabled.
- If you're using a VCR or other video source, make sure the volume is not turned all the way down. Also, make sure the cables are connected correctly, as described in Chapter 1.
- If your presentation includes computer audio, make sure the volume control on your computer is not turned all the way down. Make sure the audio cable is securely connected to both the projector and your computer's () headphone jack or () audio out jack. See Chapter 1 for more information.
- Make sure the volume controls on your computer are not turned all the way down or set to Mute.
- The wrong source may be selected. Press the Computer or Video button on the control panel—or the Comp1, Comp2/YCbCr or Video button on the remote control—to select the proper source.

# Where To Get Help

EPSON provides technical assistance through electronic support services and automated telephone services 24 hours a day, as listed in the following table:

Service	Access
World Wide Web Technical Support	From the Internet, you can reach EPSON's product support page at <b>http://support.epson.com</b> . After selecting your product, you can view frequently asked questions and answers, download product documentation, and receive technical advice through e-mail.
Automated Telephone Services	A variety of automated help services are available 24 hours a day, seven days a week. To use these services, you must have a touch tone telephone and call <b>(800) 922-8911</b> .
Presenters Online	Access tips, templates, and training for developing successful presentations at <b>http://www.presentersonline.com</b>

### **Telephone Support Services**

To use the EPSON PrivateLine Support service, call (800) 637-7661 and enter the PIN on the EPSON PrivateLine Support card included in your *Owner's Kit*. This is the fastest way to speak to a live representative, and it's free. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period.

#### note

You can purchase screens, carrying cases, or other accessories from EPSON by calling (800) 873-7766; in Canada, please call (800) 873-7766 for dealer referral. To purchase accessories online or view EPSON's complete product catalog, visit the EPSON Store at www.epsonstore.com (U.S. sales only). To see our full line of multimedia projectors, go to www.epson.com/mul\_proj. You may also speak to a projector support specialist by dialing one of these numbers (toll or long distance charges may apply):

- U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday
- Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Before you call, please have the following information ready:

- Product name (EPSON PowerLite 8100i or 9100i)
- Product serial number (located on the bottom of the projector)
- Video source (computer, DVD player, etc.) and how it's connected
- Description of the problem



### General

Type of display	Poly-silicon Thin Film Transistor (TFT)
Size of liquid crystal panels	Diagonal: 1.3 inches (34 mm)
Lens	PowerLite 8100i: F=1.7–2.3, f=49–63 mm PowerLite 9100i: F=1.8–2.4, f=49–69 mm
Resolution	PowerLite 8100i: 1024 × 768 pixels PowerLite 9100i: 1280 × 1024 pixels
Color reproduction	24 bit, 16.7 million colors
Brightness	PowerLite 8100i: 3200 lumens (ANSI) PowerLite 9100i: 2400 lumens (ANSI)
Contrast ratio	PowerLite 8100i: 400 : 1 PowerLite 9100i: 300 : 1
Image size	PowerLite 8100i: Wide angle: 28 to 300 inches (at 3.3 to 37.3 feet distance) Tele angle: 21 to 300 inches (at 3.1 to 48.1 feet distance)
	PowerLite 9100i: Wide angle: 30 to 320 inches (at 3.6 to 36.7 feet distance) Tele angle: 20 to 300 inches (at 4.6 to 51.8 feet distance)
Projection distance	PowerLite 8100i: 3.1 to 48.1 feet (0.9 to 14.6 meters) PowerLite 9100i: 3.6 to 51.8 feet (1.1 to 15.8 meters)
Projection methods	Front, rear, upside-down (ceiling mount)

Internal speaker system	$2 \times 3$ W 8 (ohm) speakers
Optical aspect ratio	4:3 (horizontal : vertical)
Zoom ratio	PowerLite 8100i: 1:1.3 PowerLite 9100i: 1:1.4
Manual lens shift	0 to 10 degrees
Keystone correction angle	± 30° (ratio: 10.0 to 5.5)

### **Projection Lamp**

Туре	UHE (Ultra High Efficiency)
Power consumption	230 W
Lamp life	About 2000 hours
Part number	ELPLP11

### **Remote Control**

Range	32.8 feet (10 meters)
Batteries	Alkaline AA (2)

# Mouse Compatibility

Supports PS/2, USB, serial, ADB

### Remote IR Receiver

Supports EPSON Remote IR Receiver, 10-foot cable (typical use for rear screen projection)

### Dimensions

Height	6.1 inches (157 mm)
Width	12 inches (305 mm)
Depth	18.7 inches (475 mm)
Weight	18.3 lb (8.3 kg)

### Electrical

Rated frequency	50/60 Hz
Power supply	100 to 120 VAC, 4.0 A 200 to 240 VAC, 2.0 A
Power consumption	Operating: 360 W Standby: 8.5 W

### Environmental

Temperature	Operating: 41 to 104° F (5 to 40° C), non-condensing
	Storage: 14 to 140° F (–10 to 60° C), non-condensing
Humidity	Operating: 20 to 80% RH, non-condensing
	Storage: 10 to 90% RH, non-condensing

# Safety

United States	FCC Part 15B Class B UL1950 Rev. 3
Canada	DOC SOR/88-475 CSA C22.2 No. 950 Rev. 3
CE Marking	Directive 89/336/EEC EN 55022 Class B EN 50082-1
	Directive 73/23/EEC EN 60950

### **Compatible Video Formats**

The projector supports the following international video standards: NTSC, NTSC 4.43, PAL, PAL 60, PAL-M, PAL-N, and SECAM. In addition, the projector supports the computer monitor display formats listed below. To project images output from a computer, the computer's video card must be set at a refresh rate (vertical frequency) that's compatible with the projector; see the following table.

#### note

The frequencies of some computers may not allow images to be displayed correctly; see your computer's documentation for details.

Mode         Resolution         (KHz)         (Hz)         (MHz)         8100i         910           PC (RGB) compatible modes VGACGA         640 × 400         31.46         70         25.175         1024 × 640 **         136           VGAEGA         640 × 350         31.46         70         25.175         1024 × 640 **         136           NEC400         640 × 400         24.83         56.65         21.053         1024 × 640 **         136           VGA72         640 × 480         37.861         72.809         31.5         1024 × 768 **         136           VGA75         640 × 480         37.861         72.809         31.5         1024 × 768 **         136           VGA75         640 × 480         37.861         72.809         31.5         1024 × 768 **         136           VGA75         640 × 480         48.269         85.008         36         1024 × 768 **         136           VGA120         640 × 480         61         120         50.8         1024 × 768 **         136           SVGA56         800 × 600         35.156         56.25         36         1024 × 768 **         136           SVGA75         800 × 600         48.07         72.188         50				Frequency					
VGACGA VGAEGA         640 × 400 640 × 350         31.46 31.46         70 70         25.175         1024 × 640 ** 1024 × 660 **         136           NEC400         640 × 400         24.83         56.65         21.053         1024 × 640 **         136           VGA60         640 × 400         24.83         56.65         21.053         1024 × 640 **         136           VGA60         640 × 480         31.469         59.94         25.175         1024 × 768 **         136           VGA72         640 × 480         37.861         72.809         31.5         1024 × 768 **         136           VGA85         640 × 480         37.5         75         31.5         1024 × 768 **         136           VGA100         640 × 480         51         100         42.5         1024 × 768 **         136           VGA120         640 × 480         61         120         50.8         1024 × 768 **         136           SVGA56         800 × 600         35.156         56.25         36         1024 × 768 **         136           SVGA75         800 × 600         48.077         72.188         50         1024 × 768 **         136           SVGA75         800 × 600         76         120         80		PowerLit 9100i		-	-		Resolution	Mode	
VGACGA VGAEGA         640 × 400 640 × 350         31.46 31.46         70 70         25.175         1024 × 640 ** 1024 × 660 **         136           NEC400         640 × 400         24.83         56.65         21.053         1024 × 640 **         136           VGA60         640 × 400         24.83         56.65         21.053         1024 × 640 **         136           VGA60         640 × 480         31.469         59.94         25.175         1024 × 768 **         136           VGA72         640 × 480         37.861         72.809         31.5         1024 × 768 **         136           VGA85         640 × 480         37.5         75         31.5         1024 × 768 **         136           VGA100         640 × 480         51         100         42.5         1024 × 768 **         136           VGA120         640 × 480         61         120         50.8         1024 × 768 **         136           SVGA56         800 × 600         35.156         56.25         36         1024 × 768 **         136           SVGA60         800 × 600         48.077         72.188         50         1024 × 768 **         136           SVGA75         800 × 600         76         120         80								PC (RGB) compatible modes	
NEC400         640 x 400         24.83         56.65         21.053         1024 x 640 **         136           VGA60         640 x 480         31.469         59.94         25.175         1024 x 768 **         136           VGA72         640 x 480         37.861         72.809         31.5         1024 x 768 **         136           VGA75         640 x 480         37.5         75         31.5         1024 x 768 **         136           VGA85         640 x 480         48.269         85.008         36         1024 x 768 **         136           VGA100         640 x 480         51         100         42.5         1024 x 768 **         136           VGA120         640 x 480         61         120         50.8         1024 x 768 **         136           SVGA56         800 x 600         35.156         56.25         36         1024 x 768 **         136           SVGA60         800 x 600         35.757         60.317         40         1024 x 768 **         136           SVGA75         800 x 600         48.077         72.188         50         1024 x 768 **         136           SVGA100         800 x 600         53.674         85.061         56.25         1024 x 768 *	6 x 854 **	1366 x 85	1024 x 640 **	25.175	70	31.46	640 x 400		
VGA60 $640 \times 480$ $31.469$ $59.94$ $25.175$ $1024 \times 768 \stackrel{**}{*}$ $136$ VGA72 $640 \times 480$ $37.861$ $72.809$ $31.5$ $1024 \times 768 \stackrel{**}{*}$ $136$ VGA75 $640 \times 480$ $37.5$ $75$ $31.5$ $1024 \times 768 \stackrel{**}{*}$ $136$ VGA85 $640 \times 480$ $48.269$ $85.008$ $36$ $1024 \times 768 \stackrel{**}{*}$ $136$ VGA100 $640 \times 480$ $61$ $100$ $42.5$ $1024 \times 768 \stackrel{**}{*}$ $136$ VGA120 $640 \times 480$ $61$ $120$ $50.8$ $1024 \times 768 \stackrel{**}{*}$ $136$ SVGA56 $800 \times 600$ $35.156$ $56.25$ $36$ $1024 \times 768 \stackrel{**}{*}$ $136$ SVGA72 $800 \times 600$ $37.879$ $60.317$ $40$ $1024 \times 768 \stackrel{**}{*}$ $136$ SVGA75 $800 \times 600$ $48.077$ $72.188$ $50$ $1024 \times 768 \stackrel{**}{*}$ $136$ SVGA75 $800 \times 600$ $48.077$ $72.188$ $50$ $1024 \times 768 \stackrel{**}{*}$ $136$ SVGA75 $800 \times 600$ $53.674$ $85.061$ $56.25$ $1024 \times 768 \stackrel{**}{*}$ $136$ SVGA100 $800 \times 600$ $76$ $120$ $80$ $1024 \times 768 \stackrel{**}{*}$ $136$ SVGA120 $800 \times 600$ $76$ $120$ $80$ $1024 \times 768$ $136$ SVGA120 $800 \times 600$ $76$ $120$ $80$ $1024 \times 768$ $136$ SVGA120 $800 \times 600$ $76$ $120$ $80$ $1024 \times 768$ $136$ SVGA120 $1024 \times 768$ $35.522$ $86.958$ <td>6 x 748 **</td> <td>1366 x 74</td> <td>1024 x 560 **</td> <td>25.175</td> <td>70</td> <td>31.46</td> <td>640 x 350</td> <td>VGAEGA</td>	6 x 748 **	1366 x 74	1024 x 560 **	25.175	70	31.46	640 x 350	VGAEGA	
VGA72 $640 \times 480$ $37.861$ $72.809$ $31.5$ $1024 \times 768 \stackrel{**}{**}$ $136$ VGA75 $640 \times 480$ $37.5$ $75$ $31.5$ $1024 \times 768 \stackrel{**}{**}$ $136$ VGA85 $640 \times 480$ $48.269$ $85.008$ $36$ $1024 \times 768 \stackrel{**}{**}$ $136$ VGA100 $640 \times 480$ $61$ $120$ $50.8$ $1024 \times 768 \stackrel{**}{**}$ $136$ VGA120 $640 \times 480$ $61$ $120$ $50.8$ $1024 \times 768 \stackrel{**}{**}$ $136$ SVGA56 $800 \times 600$ $35.156$ $56.25$ $36$ $1024 \times 768 \stackrel{**}{**}$ $136$ SVGA60 $800 \times 600$ $37.879$ $60.317$ $40$ $1024 \times 768 \stackrel{**}{**}$ $136$ SVGA72 $800 \times 600$ $48.077$ $72.188$ $50$ $1024 \times 768 \stackrel{**}{**}$ $136$ SVGA85 $800 \times 600$ $46.875$ $75$ $49.5$ $1024 \times 768 \stackrel{**}{**}$ $136$ SVGA100 $800 \times 600$ $63$ $100$ $67$ $1024 \times 768 \stackrel{**}{**}$ $136$ SVGA120 $800 \times 600$ $76$ $120$ $80$ $1024 \times 768$ $136$ XGA43i $1024 \times 768$ $35.522$ $86.958$ $44.9$ $1024 \times 768$ $136$ XGA60 $1024 \times 768$ $56.476$ $70.069$ $75$ $1024 \times 768$ $136$ XGA60 $1024 \times 768$ $68.677$ $84.997$ $94.5$ $1024 \times 768$ $136$ XGA75 $1024 \times 768$ $811$ $100$ $1111$ $1024 \times 768$ $136$ XGA120 $1024 \times 768$ $811$ $100$ $111$	6 x 854 **	1366 x 85	1024 x 640 **	21.053	56.65	24.83	640 × 400	NEC400	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	6 x 1024 **	1366 x 10	1024 x 768 **	25.175	59.94	31.469	640 x 480	VGA60	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	6 x 1024 **	1366 x 10	1024 x 768 **	31.5	72.809	37.861	640 x 480	VGA72	
VGA100       640 × 480       51       100       42.5       1024 × 768 **       136         VGA120       640 × 480       61       120       50.8       1024 × 768 **       136         SVGA56       800 × 600       35.156       56.25       36       1024 × 768 **       136         SVGA60       800 × 600       37.879       60.317       40       1024 × 768 **       136         SVGA72       800 × 600       48.077       72.188       50       1024 × 768 **       136         SVGA75       800 × 600       46.875       75       49.5       1024 × 768 **       136         SVGA100       800 × 600       53.674       85.061       56.25       1024 × 768 **       136         SVGA120       800 × 600       63       100       67       1024 × 768 **       136         SVGA120       800 × 600       76       120       80       1024 × 768       136         XGA43i       1024 × 768       35.522       86.958       44.9       1024 × 768       136         XGA43i       1024 × 768       56.476       70.069       75       1024 × 768       136         XGA55       1024 × 768       68.677       84.997       94.5	6 x 1024 **	1366 x 10	1024 x 768 **	31.5	75	37.5	640 x 480	VGA75	
VGA120         640 × 480         61         120         50.8         1024 × 768 **         136           SVGA56         800 × 600         35.156         56.25         36         1024 × 768 **         136           SVGA60         800 × 600         37.879         60.317         40         1024 × 768 **         136           SVGA72         800 × 600         48.077         72.188         50         1024 × 768 **         136           SVGA75         800 × 600         46.875         75         49.5         1024 × 768 **         136           SVGA100         800 × 600         53.674         85.061         56.25         1024 × 768 **         136           SVGA100         800 × 600         63         100         67         1024 × 768 **         136           SVGA120         800 × 600         76         120         80         1024 × 768 **         136           XGA43i         1024 × 768         35.522         86.958         44.9         1024 × 768 **         136           XGA43         1024 × 768         56.476         70.069         75         1024 × 768         136           XGA43         1024 × 768         68.677         84.997         94.5         1024 × 768	6 x 1024 **	1366 x 10	1024 x 768 **		85.008	48.269	640 x 480	VGA85	
SVGA56 SVGA60 SVGA72 SVGA75 SVGA100 $800 \times 600$ $800 \times 600$ $76$ $360 \times 1024 \times 768 ** \\ 136$ $1024 \times 768 ** \\ 136$ XGA43i 	5 x 1024 **	1366 x 10	1024 x 768 **	42.5	100	51	640 x 480	VGA100	
SVGA60         800 × 600         37.879         60.317         40         1024 × 768 **         136           SVGA72         800 × 600         48.077         72.188         50         1024 × 768 **         136           SVGA75         800 × 600         46.875         75         49.5         1024 × 768 **         136           SVGA85         800 × 600         53.674         85.061         56.25         1024 × 768 **         136           SVGA100         800 × 600         63         100         67         1024 × 768 **         136           SVGA120         800 × 600         63         100         67         1024 × 768 **         136           XGA43i         1024 × 768         35.522         86.958         44.9         1024 × 768         136           XGA60         1024 × 768         48.363         60.004         65         1024 × 768         136           XGA70         1024 × 768         56.476         70.069         75         1024 × 768         136           XGA85         1024 × 768         68.677         84.997         94.5         1024 × 768         136           XGA120         1024 × 768         81         100         111         1024 × 768 <td< td=""><td>6 x 1024 **</td><td>1366 x 10</td><td>1024 x 768 **</td><td>50.8</td><td>120</td><td>61</td><td>640 x 480</td><td>VGA120</td></td<>	6 x 1024 **	1366 x 10	1024 x 768 **	50.8	120	61	640 x 480	VGA120	
SVGA72         800 × 600         48.077         72.188         50         1024 × 768 **         136           SVGA75         800 × 600         46.875         75         49.5         1024 × 768 **         136           SVGA85         800 × 600         53.674         85.061         56.25         1024 × 768 **         136           SVGA100         800 × 600         63         100         67         1024 × 768 **         136           SVGA120         800 × 600         76         120         80         1024 × 768 **         136           XGA43i         1024 × 768         35.522         86.958         44.9         1024 × 768 **         136           XGA60         1024 × 768         48.363         60.004         65         1024 × 768         136           XGA70         1024 × 768         56.476         70.069         75         1024 × 768         136           XGA85         1024 × 768         68.677         84.997         94.5         1024 × 768         136           XGA100         1024 × 768         81         100         111         1024 × 768         136           XGA120         1024 × 768         81         100         1111         1024 × 768         136	6 x 1024 **	1366 x 10	1024 x 768 **	36	56.25	35.156	800 × 600	SVGA56	
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	6 x 1024 **	1366 x 10	1024 x 768 **	40	60.317	37.879	800 x 600	SVGA60	
SVGA85       800 × 600       53.674       85.061       56.25       1024 × 768 **       136         SVGA100       800 × 600       63       100       67       1024 × 768 **       136         SVGA120       800 × 600       76       120       80       1024 × 768 **       136         XGA43i       1024 × 768       35.522       86.958       44.9       1024 × 768 **       136         XGA60       1024 × 768       48.363       60.004       65       1024 × 768       136         XGA70       1024 × 768       48.363       60.004       65       1024 × 768       136         XGA75       1024 × 768       56.476       70.069       75       1024 × 768       136         XGA85       1024 × 768       68.677       84.997       94.5       1024 × 768       136         XGA100       1024 × 768       81       100       111       1024 × 768       136         XGA120       1024 × 768       81       100       1111       1024 × 768       136         XGA120       1024 × 768       81       100       111       1024 × 768       136         XGA120       1024 × 768       81       100       1111       1024 × 768 <td>6 x 1024 **</td> <td>1366 x 10</td> <td>1024 x 768 **</td> <td>50</td> <td>72.188</td> <td>48.077</td> <td>800 x 600</td> <td></td>	6 x 1024 **	1366 x 10	1024 x 768 **	50	72.188	48.077	800 x 600		
SVGA100 SVGA120         800 × 600 800 × 600         63 76         100 120         67 80         1024 × 768 ** 1024 × 768 **         136 136           XGA43i XGA60         1024 × 768 1024 × 768         35.522 48.363         86.958 60.004         44.9 65         1024 × 768 1024 × 768         136 1024 × 768           XGA43i XGA60         1024 × 768 1024 × 768         35.522 48.363         86.958 60.004         44.9 65         1024 × 768 1024 × 768         136 1024 × 768           XGA70         1024 × 768 1024 × 768         56.476 60.023         75.029 75.029         78.75         1024 × 768         136 1024 × 768           XGA85         1024 × 768         68.677         84.997         94.5         1024 × 768         136 1024 × 768           XGA100         1024 × 768         81         100         111         1024 × 768         136 1024 × 768           XGA120         1024 × 768         97         120         133         1024 × 768         136 136           SXGA1-70 SXGA1-75         1152 × 864         63.851 67.5         75         108         1024 × 768 *         136 1024 × 768 *	6 x 1024 **	1366 x 10	1024 x 768 **	49.5	75	46.875	800 x 600	SVGA75	
SVGA120         800 × 600         76         120         80         1024 × 768 **         136           XGA43i         1024 × 768         35.522         86.958         44.9         1024 × 768         136           XGA60         1024 × 768         48.363         60.004         65         1024 × 768         136           XGA70         1024 × 768         56.476         70.069         75         1024 × 768         136           XGA75         1024 × 768         60.023         75.029         78.75         1024 × 768         136           XGA85         1024 × 768         68.677         84.997         94.5         1024 × 768         136           XGA100         1024 × 768         81         100         111         1024 × 768         136           XGA120         1024 × 768         97         120         133         1024 × 768         136           SXGA1-70         1152 × 864         63.851         70.012         94.5         1024 × 768 **         136           SXGA1-75         1152 × 864         67.5         75         108         1024 × 768 **         136	6 x 1024 **	1366 x 10	1024 x 768 **	56.25	85.061	53.674	800 x 600	SVGA85	
XGA43i         1024 x 768         35.522         86.958         44.9         1024 x 768         136           XGA60         1024 x 768         48.363         60.004         65         1024 x 768         136           XGA70         1024 x 768         56.476         70.069         75         1024 x 768         136           XGA75         1024 x 768         60.023         75.029         78.75         1024 x 768         136           XGA85         1024 x 768         68.677         84.997         94.5         1024 x 768         136           XGA100         1024 x 768         81         100         111         1024 x 768         136           XGA120         1024 x 768         81         100         1111         1024 x 768         136           SXGA1-70         1152 x 864         63.851         70.012         94.5         1024 x 768 *         136           SXGA1-75         1152 x 864         67.5         75         108         1024 x 768 *         136	6 x 1024 **	1366 x 10	1024 x 768 **	67	100	63	800 x 600	SVGA100	
XGA60         1024 x 768         48.363         60.004         65         1024 x 768         136           XGA70         1024 x 768         56.476         70.069         75         1024 x 768         136           XGA75         1024 x 768         60.023         75.029         78.75         1024 x 768         136           XGA85         1024 x 768         68.677         84.997         94.5         1024 x 768         136           XGA100         1024 x 768         81         100         111         1024 x 768         136           XGA120         1024 x 768         97         120         133         1024 x 768         136           SXGA1-70         1152 x 864         63.851         70.012         94.5         1024 x 768<*	6 x 1024 **	1366 x 10	1024 x 768 **	80	120	76	800 × 600	SVGA120	
XGA60       1024 × 768       48.363       60.004       65       1024 × 768       136         XGA70       1024 × 768       56.476       70.069       75       1024 × 768       136         XGA75       1024 × 768       60.023       75.029       78.75       1024 × 768       136         XGA85       1024 × 768       68.677       84.997       94.5       1024 × 768       136         XGA100       1024 × 768       81       100       111       1024 × 768       136         XGA120       1024 × 768       97       120       133       1024 × 768       136         SXGA1-70       1152 × 864       63.851       70.012       94.5       1024 × 768 *       136         SXGA1-75       1152 × 864       67.5       75       108       1024 × 768 *       136	6 x 1024 **	1366 x 10	1024 x 768	44.9	86.958	35.522	1024 x 768	XGA43i	
XGA75       1024 x 768       60.023       75.029       78.75       1024 x 768       136         XGA85       1024 x 768       68.677       84.997       94.5       1024 x 768       136         XGA100       1024 x 768       81       100       111       1024 x 768       136         XGA120       1024 x 768       97       120       133       1024 x 768       136         SXGA1-70       1152 x 864       63.851       70.012       94.5       1024 x 768 *       136         SXGA1-75       1152 x 864       67.5       75       108       1024 x 768 *       136	5 x 1024 **		1024 x 768	65	60.004	48.363	1024 x 768		
XGA85         1024 × 768         68.677         84.997         94.5         1024 × 768         136           XGA100         1024 × 768         81         100         111         1024 × 768         136           XGA120         1024 × 768         97         120         133         1024 × 768         136           SXGA1-70         1152 × 864         63.851         70.012         94.5         1024 × 768 *         136           SXGA1-75         1152 × 864         67.5         75         108         1024 × 768 *         136	3 x 1024 **	1366 x 10	1024 x 768	75	70.069	56.476	1024 x 768	XGA70	
XGA85       1024 x 768       68.677       84.997       94.5       1024 x 768       136         XGA100       1024 x 768       1024 x 768       81       100       111       1024 x 768       136         XGA120       1024 x 768       97       120       133       1024 x 768       136         SXGA1-70       1152 x 864       63.851       70.012       94.5       1024 x 768 *       136         SXGA1-75       1152 x 864       67.5       75       108       1024 x 768 *       136	5 x 1024 **	1366 x 10	1024 x 768	78.75	75.029	60.023	1024 x 768	XGA75	
XGA100       1024 × 768       81       100       111       1024 × 768       136         XGA120       1024 × 768       97       120       133       1024 × 768       136         SXGA1-70       1152 × 864       63.851       70.012       94.5       1024 × 768 *       136         SXGA1-75       1152 × 864       67.5       75       108       1024 × 768 *       136	5 x 1024 **	1366 x 10	1024 x 768	94.5	84.997	68.677	1024 x 768		
XGA120       1024 × 768       97       120       133       1024 × 768       136         SXGA1-70       1152 × 864       63.851       70.012       94.5       1024 × 768 *       136         SXGA1-75       1152 × 864       67.5       75       108       1024 × 768 *       136	5 x 1024 **	1366 x 10	1024 x 768	111	100	81	1024 x 768		
SXGA1-75 1152 x 864 67.5 75 108 1024 x 768 * 136	6 x 1024 **		1024 x 768	133		97	1024 x 768		
SXGA1-75 1152 x 864 67.5 75 108 1024 x 768 * 136	6 x 1024 **	1366 x 10	1024 x 768 *	94.5	70.012	63.851	1152 x 864	SXGA1-70	
	5 x 1024 **		1024 x 768 *	108	75	67.5	1152 x 864		
SXGA1-85 1152 x 864 77.094 84.999 121.5 1024 x 768 * 136	6 x 1024 **				-				
	6 x 1024 **			144	100	90	1152 x 864		
SXGA2-60 1280 × 960 60 60 108 1024 × 768 * 136	6 x 1024 **	1366 x 10	1024 x 768 *	108	60	60	1280 x 960	SXGA2-60	
	6 x 1024 **								
	6 x 1024 **					85.938			
SXGA3-43i 1280 × 1024 46.433 86.871 78.75 960 × 768 * 128	) x 1024	1280 x 10	960 × 768 *	78.75	86.871	46.433	1280 x 1024	SXGA3-43i	
		1280 x 10					1280 x 1024		
		1280 x 10							
		1280 x 10							


		Frequency					
Mode	Resolution	H (KHz)	V (Hz)	Pixel (MHz)	PowerLite 8100i	PowerLite 9100i	
UXGA48i UXGA60 UXGA65 UXGA70 UXGA75 UXGA80	1600 x 1200 1600 x 1200 1600 x 1200 1600 x 1200 1600 x 1200 1600 x 1200	62.5 75 81.25 87.5 93.75 100	96.08 60 65 70 75 80	135 162 175.5 189 202.5 202.5	1024 x 768 * 1024 x 768 *	1366 × 1024 * 1366 × 1024 *	
UXGA85 MACLC 13 MAC II 13 iMAC VGA iMAC SVGA MAC16 MAC19-60 MAC19-75 iMAC XGA MAC21	$1600 \times 1200$ $640 \times 480$ $640 \times 480$ $640 \times 480$ $800 \times 600$ $832 \times 624$ $1024 \times 768$ $1024 \times 768$ $1024 \times 768$ $1024 \times 768$ $1152 \times 870$	106.25 34.975 35 60.49 60.33 49.725 48.193 60.241 60 68.682	85 66.62 66.67 117 95 74.55 59.28 74.93 75 75.062	202.5 31.33 30.24 50.39 62.62 57.28 64 80 78.7 100	1024 x 768 * 1024 x 768 ** 1024 x 768 1024 x 768 1024 x 768 1024 x 768 1024 x 768	$\begin{array}{c} 1366 \times 1024 \ * \\ 1356 \times 1024 \ * \\ \end{array}$	
PC (YUV) compatible modes HDTV480P HDTV480i HDTV720P*** HDTV1080P *** HDTV1080i ***	720 x 483 720 x 487 1280 x 720 1920 x 1080 1920 x 1080	31.469 15.734 44.955 67.433 33.716	59.94 59.94 59.94 59.94 59.94 59.94	27 13.5 74.176 148.352 74.176	1024 x 768 * 1024 x 768 * 1024 x 576 * 1024 x 576 * 1024 x 576 *	1366 × 1024 * 1366 × 1024 * 1366 × 768 * 1366 × 768 * 1366 × 768 *	
Video compatible modes NTSC (SXGA) *** NTSC (XGA) *** PAL (SXGA) *** PAL (XGA) *** SECAM (SXGA) *** SECAM (XGA) ***	1366 x 438 1024 x 435 1366 x 512 1024 x 512 1366 x 512 1366 x 512 1024 x 512	15.734 15.734 15.625 15.625 15.625 15.625	60 60 50 50 50 50 50	28.486 20.89 28.846 21.154 28.846 21.154		1366 × 1024 *  1366 × 1024 *  1366 × 1024 * 	

\* Resize mode (those without asterisks are native mode).

\*\* Although resize mode is shown, Windows mode is also available.

\*\*\*Select 4:3 or 16:9 mode as the Aspect Ratio setting in the Video menu; see page 64 for instructions.

### Interface Connectors

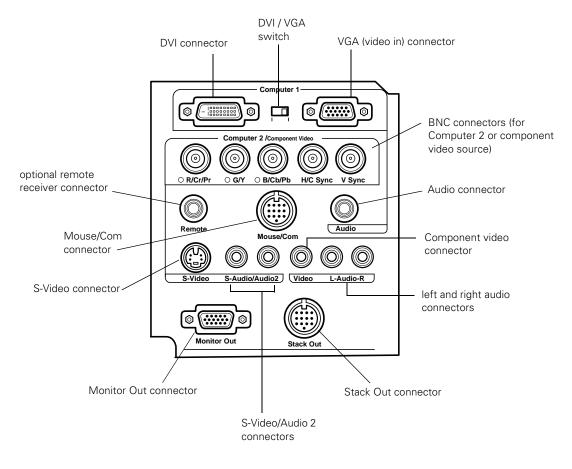

### **Computer Video Port Pin Assignments**

The Computer 1 analog port (the VGA port on the right side of the projector) and the Monitor Out port are female video RGB, 15-pin micro-D-style connectors. Here are their pin assignments:

Pin no.	Computer 1 port	Monitor Out port
1	Red video	Red out / red video
2	Green video	Green out / green video
3	Blue video	Blue out / blue video
4	Monitor (ID bit 2)	Reserved
5	GND	GND
6	Red video GND	GND
7	Green video GND	GND
8	Blue video GND	GND
9	+5 V	Reserved
10	Synchronous GND	GND
11	Monitor (ID bit 0)	Reserved
12	SDA	Reserved
13	Horizontal sync	Horizontal sync
14	Vertical sync	Vertical sync
15	Reserved	Vertical sync

#### note

The formulas given here are for when the projector is placed flat, without tilting it up at the screen (see page 14). If you tilt it up by extending the feet or use electronic keystone correction, your image size may vary.

### Image Size and Projection Distance

Use the formulas given below either to find out how large your image will be when you know the distance from the projector to the screen, or to find out how far from the screen to place the projector if you want an image of a certain size. Since the size of the image can be changed by rotating the zoom ring, formulas are given for calculating both the minimum and maximum sizes.

### Standard Lens

To determine the diagonal size of an image when you know the projection distance:

Inches:

Maximum diagonal size =  $(0.6676 \times \text{projection distance}) + 1.8$ Minimum diagonal size =  $(0.5173 \times \text{projection distance}) + 1.4$ 

#### Centimeters :

Maximum diagonal size =  $(0.6676 \times \text{projection distance}) + 4.6$ Minimum diagonal size =  $(0.5173 \times \text{projection distance}) + 3.6$ 

To determine the projection distance when you know the diagonal size of the screen image:

Inches:

Maximum projection distance =  $(1.498 \times \text{diagonal size}) - 2.7$ Minimum projection distance =  $(1.933 \times \text{diagonal size}) - 2.7$ 

Centimeters:

Maximum projection distance =  $(1.498 \times \text{diagonal size}) - 6.9$ Minimum projection distance =  $(1.933 \times \text{diagonal size}) - 6.9$ 

### Long Throw Zoom Lens (ELPLL02)

To determine the diagonal size of an image when you know the projection distance:

Inches:

Maximum diagonal size =  $(0.487 \times \text{projection distance}) + 2.3$ Minimum diagonal size =  $(0.286 \times \text{projection distance}) + 1.5$ 

#### Centimeters:

Maximum diagonal size =  $(0.487 \times \text{projection distance}) + 5.9$ Minimum diagonal size =  $(0.286 \times \text{projection distance}) + 3.7$  To determine the projection distance when you know the diagonal size of the screen image:

Inches:

Maximum projection distance =  $(3.492 \times \text{diagonal size}) - 5.1$ Minimum projection distance =  $(2.053 \times \text{diagonal size}) - 4.8$ 

 Centimeters: Maximum projection distance = (3.492 × diagonal size) – 12.9

Minimum projection distance =  $(2.053 \times \text{diagonal size}) - 12.2$ 

### Extra Long Throw Zoom Lens (ELPLL03)

To determine the diagonal size of an image when you know the projection distance:

Inches:

Maximum diagonal size =  $(0.231 \times \text{projection distance}) + 2.2$ Minimum diagonal size =  $(0.171 \times \text{projection distance}) + 1.7$ 

Centimeters:

Maximum diagonal size =  $(0.231 \times \text{projection distance}) + 5.7$ Minimum diagonal size =  $(0.171 \times \text{projection distance}) + 4.2$ 

To determine the projection distance when you know the diagonal size of the screen image:

### Inches:

Maximum projection distance =  $(4.331 \times \text{diagonal size}) - 9.7$ Minimum projection distance =  $(5.850 \times \text{diagonal size}) - 9.7$ 

Centimeters:

Maximum projection distance =  $(4.331 \times \text{diagonal size}) - 24.6$ Minimum projection distance =  $(5.850 \times \text{diagonal size}) - 24.6$ 

### Short Throw Zoom Lens (ELPLW01)

To determine the diagonal size of an image when you know the projection distance:

■ Inches:

Maximum diagonal size =  $(0.876 \times \text{projection distance}) + 3.8$ Minimum diagonal size =  $(0.730 \times \text{projection distance}) + 3.0$ 

#### ■ Centimeters:

Maximum diagonal size =  $(0.876 \times \text{projection distance}) + 9.6$ Minimum diagonal size =  $(0.730 \times \text{projection distance}) + 7.7$ 

To determine the projection distance when you know the diagonal size of the screen image:

Inches:

Maximum projection distance =  $(1.369 \times \text{diagonal size}) - 4.1$ Minimum projection distance =  $(1.142 \times \text{diagonal size}) - 4.3$ 

Centimeters:

Maximum projection distance =  $(1.369 \times \text{diagonal size}) - 10.5$ Minimum projection distance =  $(1.142 \times \text{diagonal size}) - 11.0$ 

### Fixed Short Throw Lens (ELPLR01)

To determine the diagonal size of an image when you know the projection distance:

Inches:

Diagonal size =  $(1.239 \times \text{projection distance}) + 3.4$ 

Centimeters:

Diagonal size =  $(1.239 \times \text{projection distance}) + 8.7$ 

To determine the projection distance when you know the diagonal size of the screen image:

■ Inches:

Projection distance =  $(0.807 \times \text{diagonal size}) - 2.8$ 

#### Centimeters:

Projection distance =  $(0.807 \times \text{diagonal size}) - 7.0$ 

# Notices

This chapter includes safety instructions and other important information about your EPSON PowerLite projector.

## Important Safety Instructions

Follow these safety instructions when setting up and using the projector:

- Do not place the projector on an unstable cart, stand, or table.
- Do not use the projector near water or sources of heat.
- Use attachments only as recommended.
- Use the type of power source indicated on the projector. If you are not sure of the power available, consult your dealer or power company.
- Place the projector near a wall outlet where the plug can be easily unplugged.

*Placez le projecteur près d'une prise de contacte où la fiche peut être débranchée facilement.* 

- Insert the projector's three-wire grounding-type plug into a properly grounded outlet. If you have a two-prong outlet, contact an electrician to replace it. Do not hold the plug with wet hands.
- Take the following precautions for the plug. Failure to comply with these precautions could result in sparks or fire: Do not insert the plug into an outlet with dust present. Insert the plug firmly into the outlet.
- Do not overload wall outlets, extension cords, or integral convenience receptacles. This can cause fire or electric shock.

- Do not place the projector where the cord can be walked on. This may result in fraying or damage to the plug.
- Unplug the projector from the wall outlet before cleaning. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.
- Do not block the slots and openings in the projector case. They provide ventilation and prevent the projector from overheating.
   Do not operate the projector on a sofa, rug, or other soft surface, or in a closed-in cabinet unless proper ventilation is provided.
- Never push objects of any kind through cabinet slots. Never spill liquid of any kind into the projector.
- Except as specifically explained in this User's Guide, do not attempt to service this product yourself. Refer all servicing to qualified service personnel. Opening or removing covers may expose you to dangerous voltages and other hazards.
- Unplug the projector during lightning storms or when it will not be used for extended periods.
- Do not place the projector and remote control on top of heat-producing equipment or in a hot location.
- Unplug the projector from the wall outlet and refer servicing to qualified service personnel under the following conditions: When the power cord or plug is damaged or frayed. If liquid has been spilled into the projector, or if it has been exposed to rain or water. If it does not operate normally when you follow the operating instructions, or if it exhibits a distinct change in performance, indicating a need for service. If it has been dropped or the housing has been damaged.
- If you use the projector in a country other than where you purchased it, use the correct power cable for that country.

# Remote Control Information

You can operate the projector by remote control via a line-of-sight infrared (IR) receiver at the front and rear of the projector. The projector may not respond to remote control commands under the following conditions:

- There is an object between the remote control IR emitter and the IR receiver on the projector.
- Ambient light is too bright.
- Certain types of fluorescent lighting are used.
- A strong light source shines into the IR receiver.
- Other equipment that emits infrared energy, such as a radiant room heater, is in the room.

These conditions commonly cause problems for most infrared-controlled equipment. Try the following:

- The remote control batteries may be low on power; replace them.
- Dim the ambient lighting and/or turn off any fluorescent lights.
- Close any window coverings and/or move the projector out of direct sunlight.
- Turn off other equipment that emits infrared energy.

If the remote control still does not work properly, remember you can always control your computer-based presentation directly from the computer, even in an environment containing one of the conditions listed above.

# Declaration of Conformity

According to 47CFR, Part 2 and 15

Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers

We:	EPSON AMERICA, INC.
Located at:	3840 Kilroy Airport Way
	MS: 6-43
	Long Beach, CA 90806-2469
Tel:	(562) 290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: EPSON Type of Product: LCD Projector Model: EMP-8100/ELP-8100 EMP-9100/ELP-9100

# FCC Compliance Statement

### For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### For Canadian Users

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le materiel brouilleur du Canada.

# Index

### A

A/V Mute button, 52, 74, 91 menu option, 70 About menu, 60, 75 Accessories, 4 to 5, 92 Adobe Acrobat Reader, 7 Advanced menu, 60, 69, 71 to 72 Air filter cleaning, 78 to 79 replacing, 78 to 79 ANSI lumens, 1, 93 Arrow tool, using, 54 Aspect ratio, 94 Audio adjusting volume, 51 cable, 10, 20, 23, 28, 32, 36 to 37 connecting desktop, 20, 28 connecting laptop, 23 connecting PowerBook, 32 menu, 59, 67 problems, 91 Auto button, 47

### B

Bar tool changing, 68 using, 55 Bass, 67 Batteries, installing, 12, 86 BNC cable, 10, 11, 33, 37 format, 70 option, 70, 87 signal, 11 Box tool changing, 68 using, 54 to 55 Brightness option, 64 Brightness, projector, 93

### C

Cables, 5, 9 to 11 Camcorder, 1, 15 Capture menu, 60, 72 to 73 Capturing image, 72 to 74 Carrying case, 4, 9, 82 Case, cleaning, 78 CE Marking, 95 Ceiling mount, 4 Ceiling, hanging the projector from, 72 Cleaning air filter, 78 to 79 lens, 77 projector case, 78 Color menu option, 64 Color noise, 1 Color Setting option, 71 Comp2 Sync Termination, 71 Comp2/YCbCr button, 87, 91 Component video, 35, 37 Composite video, 35 Computer connector pin assignments, 99 Computer settings, saving, 66 Computer video cable, 10, 17 to 18, 20 to 21, 24 to 25, 29 to 30 Computer, adjusting projected image for, 63 to 65 Connecting projector to a BNC computer, 33 to a desktop Macintosh, 24 to 28 to a desktop PC, 17 to 20 to a DVI source, 33 to 34 to a high-end workstation, 34 to a laptop PC, 20 to 23 to a PowerBook, 29 to 32 to a video source, 35 to 37 Connector pin assignments, 99

Contrast option, 64 Contrast ratio, 93 CRT/LCD, 43, 88 Cursor speed, 69 Cursor/stamp tool changing, 68 using, 54

### D

Declaration of Conformity, 106 Default settings, 76 Desktop adapter, Macintosh, 10, 24 to 25, 29 to 30 Desktop computer, connecting projector to, 17 to 20, 24 to 28 Digital camera, 1, 15 Digital noise reduction, 1 Digital video cables, 5 DIP switches, 25, 30 Distance from projector to screen, 13 to 14, 100 to 102 Drawing on the screen, 53 to 55 Drawing tools, customizing, 68 to 69 DVD, 1, 15, 35 DVI, 11, 33 to 34

### E

Effect menu, 59, 68 to 69 Electrical specifications, 95 Electronic manuals, 7 E-mail support, 92 EMP Link V, 4, 10, 18 to 19, 22 to 23, 27 to 28, 31 to 32 Enter button, 49 to 50 Environmental specifications, 95 EPSON accessories, 4 to 5, 92 help, 92 PrivateLine Support, 3, 92 technical support, 3, 92 Esc button, 50, 54 to 55, 62 Extra long throw zoom lens, 4, 101 E-Zoom button, 45, 50

### F

FCC compliance statement, 107 Fixed short throw lens, 4, 102 Fn key, 43, 88 Focus ring, 44 Focusing, 44 Foot release levers, 46 to 47 Freeze button, 52 Frequency option, 75

### G

Gamma option, 64

### Η

HDTV, 2, 35, 97 Height of image, adjusting, 46 to 47 Help button, 57 Help system, using, 57 Help, EPSON, 2 to 3, 92 High-end workstation, 34

Image adjusting, 44 to 48, 63 to 65 capturing, 72 to 74 correcting shape of, 47, 89 height, adjusting, 46 to 47 help, 57 positioning, 46 to 47, 64 problems, 87 to 91 raising, 46 to 47 resizing, 45 shape, correcting, 47, 89 size and distance from screen, 13, 100 to 102 size range, 93 turning off, 52 zooming, 45, 50 Internet, 92

### K

Kensington security lock, 4 Keystone button, 47, 89 Keystone correction, 47, 70, 89, 94

### L

Lamp light, 56, 84 to 85 number of hours used, 75 replacing, 80 to 81 specifications, 94 timer, resetting, 82 Lamp ON Time option, 75 Language menu option, 71 Language setting, 57 Laptop computer connecting to, 20 to 23, 29 to 32 displaying on, 43, 88, 90 Lens accessories, 4 cleaning, 77 extra long throw zoom, 4, 101 fixed short throw, 4, 102 long throw zoom, 4, 100 to 101 short throw zoom, 4, 102 specifications, 93 standard, 100 Lens shift knob, 46 Light button, 48 Lights, status, 56, 84 to 85 Lines, drawing on screen, 55 Logo, saving on projector, 72 to 74 Long throw zoom lens, 4, 100 to 101 Lumens, 1, 93

### Μ

Macintosh adapter set, 10 connecting projector to, 24 to 32 desktop adapter, 10, 24 to 25, 29 to 30 monitor adapter, 10, 24 to 25 mouse cable, 10, 27 to 28, 31 to 32 serial cable, 10, 27 to 28, 31 to 32 video out cable, 29 to 30 Main cable, 10, 18 to 19, 22 to 23, 27 to 28, 31 to 32 Main menu, 60 to 62 Manuals, 7 Menus About, 60, 75 Advanced, 60, 69, 71 to 72 Audio, 59, 67 Capture, 60, 72 to 73 changing settings, 59 to 62 Effect, 59, 68 to 69 Main, 60 to 62 Reset All, 60, 76 Setting, 60, 69 to 70 User's Logo, 72 to 73 using, 59 to 62 Video, 59, 63 to 65 Monitor adapter, Macintosh, 10, 24 to 25 Monitor cable, 17, 24 to 26 Monitor Out pin assignments, 99 Mouse cable Macintosh, 10, 27 to 28, 31 to 32 PS/2, 10, 18 to 19, 22 to 23 serial, 10, 19

### Ν

No Signal message, 40 to 42, 70, 74, 87 Noise reduction, 1 NTSC, 2, 35, 95 to 97 Numbered buttons on remote control, 53

### 0

Online Help, 2 Options for the projector, 4 to 5

### P

P in P button, 52 to 53 option, 70 PAL, 2, 35, 95 to 97 PC serial cable, 10, 17 to 19, 22 to 23 PC serial mouse cable, 10, 19 Picture in picture, 52 to 53, 70 Pin assignments, connector, 99 Position option, 64, 66 Positioning image, 44 to 47, 64 Positioning the projector, 13 to 14, 100 to 102 Power button, 40, 58, 87 consumption, 95 cord, 40 light, 40 to 42, 56, 58, 84 to 85 supply, 95 PowerBook, connecting projector to, 29 to 32 Presenters Online, 2, 92 Preset button, 66 option, 65 to 66 PrivateLine Support, 3, 92 Projection lamp light, 56, 84 to 85

Projector carrying case, 4, 9, 82 cleaning, 78 connecting, 15 to 37 distance from screen, 13 to 14, 93, 100 to 102 feet, 46 hanging from the ceiling, 72 lamp specifications, 94 positioning, 13 to 14, 100 to 102 problems, 84 to 85 registering, 3 resolution, 1, 64, 66, 75, 93 setting up, 9 to 37 shutting off, 58 status lights, 84 to 85 transporting, 82 turning off, 58 turning on, 40 unpacking, 9 to 11 viewing information, 75 Projector case, cleaning, 78 Prompt menu option, 70 PS/2 mouse cable, 10, 18 to 19, 22 to 23

### R

Raising image, 46 to 47 RCA audio cable, 10, 36 to 37 video cable, 10, 35 to 36 Rear projection, 72 Refresh Rate option, 75 Registration, 3 Remote control information, 105 light button, 48 problems, 86, 105 specifications, 94 turning on, 48 using, 48 to 50 using as wireless mouse, 49 to 50 Replacing the air filter, 78 to 79 Replacing the lamp, 80 to 81 Reset All menu, 60, 76 Resetting lamp timer, 82 Resetting menu options, 62 Resize button, 45 Resizing image, 45 Resolution, 1, 64, 66, 75, 93

### S

Safety instructions, 103 to 104 Screen image, See Image Screen logo, 72 to 74 Screen, distance from projector, 13 to 14, 100 to 102 SECAM, 2, 35, 95 to 97 Security lock, 4, 14 Serial cable Macintosh, 10, 27 to 28, 31 to 32 PC, 10, 17 to 19, 22 to 23 Setting menu, 60, 69 to 70 Sharpness option, 64 Short throw zoom lens, 4, 102 SizeWise, 1 Sleep mode, 43, 58, 70 Smooth motion, 1, 65 Sound adjusting the bass, 67 adjusting the treble, 67 adjusting volume, 51, 67 help, 57 problems, 91 turning off, 52 Source, selecting, 51 Speakers adjusting the bass, 67 adjusting the treble, 67 adjusting the volume, 67 specifications, 94 Special effects buttons, 53 to 55

Specifications electrical, 95 environmental, 95 general, 93 to 94 lamp, 94 lens, 93 remote control, 94 safety, 95 Spotlight tool changing, 68 using, 55 Stamp tool changing, 68 using, 54 Startup screen creating, 72 to 74 menu option, 71 Status lights, 56, 84 to 85 Stopping action, 52 Support, 3, 92 SVGA, 1, 95 to 97 S-Video button, 51 cable, 11, 35, 37 signal, 11, 35 SXGA, 1, 95 to 97 Sync Mode option, 75 Sync option, 64 Sync Polarity option, 75 Synchronization, adjusting, 47 to 48, 64, 90

Technical support, 3, 92 Temperature light, 56, 84 to 85 requirements, 95 Tint option, 64 Tone, adjusting, 67 Tracking option, 64 Tracking, adjusting, 47 to 48, 64, 90 Transporting projector, 82 Trapezoid image, 89 Treble, 67 Troubleshooting image and sound problems, 87 to 91 projector problems, 84 to 85 remote control problems, 86 Turning off picture, 52 Turning off projector, 58 Turning on projector, 40

### U

Unpacking projector, 9 to 11 USB cable, 10, 18 to 19, 27 User's Logo menu, 72 to 73 UXGA, 1, 95 to 97

### V

VCR, 1, 35 to 37 VGA, 1, 95 to 97 Video button, 51, 87, 91 display settings, viewing, 75 displaying source, 75 formats, 95 to 97 menus, 59, 63 to 65 port pin assignments, 99 selecting source, 51 signal, 65 Video source, connecting projector to, 35 to 37 Video-out cable, Macintosh, 11, 29 to 30 Volume adjusting, 51, 67 button, 51

### $\boldsymbol{N}$

Warning lights, 56, 84 to 85 Warranty, 3 Workstations, connecting projector to, 34 World Wide Web, 92

### X

XGA, 1, 95 to 97

### Ζ

Zoom lens, *see* Lens Zoom ratio, 94 Zoom ring, 45 Zooming image, 45, 50