



本手册描述了 V2414 系列视控同轴多协议转换器的安装及操作。V2414 视控同轴多协议转换 器是用来将 Infinova 系列视频矩阵切换控制系统的高速数据线,RS-485 或曼彻斯特码控制码信号 转换为视控同轴信号,以便实现 Infinova 视频矩阵对具有视控同轴协议的系列前端解码器及球形 摄像机的控制。V2414 视控同轴多协议转换器兼容高速数据线,RS-485 及曼彻斯特协议。另外可 对 V2414 视控同轴多协议转换器输入协议进行选择,以便满足客户的不同需求。

注意

版权声明

本手册内容(包括文字与图片)的版权为 Infinova 公司所有。任何个人或法人实体,未经 Infinova 公司的书面许可,不得以任何形式对其内容进行翻译、修改或改编。违者将追究其法律责任。

Infinova 公司保留在事先不进行任何通知的情况下,对本手册的内容以及产品技术规格进行修改的权利,以便向用户提供最新、最先进的产品。用户可从 Infinova 公司的网站 www.infinova.com.cn 上获得最近的产品更新资料。

商标权声明

Infinova[®]为 Infinova 公司的注册商标, Infinova 公司拥有法定的商标权。 本安装手册中可能使用的其它商标及商标权属于其合法所有者拥有。

FCC 警示

V2414系列视控同轴多协议转换器符合 FCC 规则第 15 章中的规定。

该设备的运行符合以下条件:

- 设备的运行不会产生有害的干扰;
- 设备的运行在一定程度上不受外部干扰,甚至是不良干扰的影响。

V2414 系列视控同轴多协议转换器经过检测,完全符合 FCC 规则第 15 章中关于 A 类电子设备的规定。这些限制性规定用于保 证设备在住宅区使用时,在一定程度上,运行不会受外部干扰的影响。该设备为电磁设备,因此需严格按照本手册说明进行安装和 使用,否则有可能对无线电通讯产生干扰。同时,特定环境下的安装无法保证完全杜绝干扰。

请仔细阅读本手册,并妥善保存以便将来查阅。

安全建议与警告

- 所有电子设备应避免受潮,远离火源或强磁场。
- 擦拭设备表面时,请使用干燥、柔软的抹布。
- 请保持设备周围良好的通风环境。
- 设备长时间不用时,请断开电源。
- 请使用厂家建议的原配件。
- 电源及电线应安装在远离地面和入口处的地方。
- 设备的维护需由专业人员进行。
- 建议妥善保管包装箱,方便设备的转移或搬运。

☆
标志表示错误操作时,产品内部的非绝缘部件可能产生有害电压。用户需严格按照标志处的说明进行操作。
☆
标志提醒用户严格按照本手册的说明和指示进行安装和操作。

警告:为避免火灾及电击的危险,请勿将非室外产品放置于雨淋或潮湿的地方!

目 录

第	一章 一般描述	.1
	1.1 描述	. 1
	1.2 型号	. 1
	1.3 特点	. 1
	1.4 面板图	. 1
	1.5 维护	. 1
第	二章 安装和系统连接	.2
	2.1 安装	. 2
	2.2 电源连接	. 2
	2.3 高速数据线输入连接	. 2
	2.4 曼彻斯特码输入连接	. 3
	2.5 RS-485 输入连接	.4
	2.6 视控同轴输出连接	.4
	2.7 视频连接	.4
	2.7.1 视频输入连接	.4
	2.7.2 视频输出连接	. 5

第三章 系统设置和操作5
3.1 输入控制协议设置5
3.1.1 DIP 开关5
3.1.2 选择输入控制协议5
3.2 RS-485 输入协议和波特率设置5
3.2.1 DIP 开关5
3.2.2 选择通讯协议和波特率6
3.3 摄像机地址分组6
3.3.1 DIP 开关6
3.3.2 摄像机地址分组设置6
3.4 快球控制操作7
3.4.1 INFINOVA 协议输入7
3.4.2 PELCO-D 协议输入8
3.4.3 PELCO-P 协议输入9
3.4.4 MANCHESTER 协议输入10
3.4.5 矩阵 DATALINE 输入11
附录一 技术指标12

第一章 一般描述

1.1 描述

本手册描述了 V2414 系列视控同轴多协议转换器的安装及 操作。V2414 视控同轴多协议转换器是用来将 Infinova 系列视频 矩阵切换控制系统的高速数据线, RS-485 或曼彻斯特码控制码 信号转换为视控同轴信号,以便实现 Infinova 视频矩阵对具有对 视控同轴协议的系列前端解码器及球形摄像机的控制。V2414 视控同轴多协议转换器兼容高速数据线, RS-485 及曼彻斯特码 协议。另外可对 V2414 视控同轴多协议转换器输入协议进行选 择,以满足客户的不同需求。

1.2 型号

- V2414 视控同轴多协议转换器,16 路视控同轴信号输出, 120VAC/60Hz
- V2414X 视控同轴多协议转换器, 16 路视控同轴信号输出, 230VAC/50Hz

1.3 特点

- 提供一组曼彻斯特码,一组高速数据线输入/输出和一组 RS-485 协议输入
- 提供 16 路视控同轴协议输出,可控制 16 个解码器或快球
- 可对所有输入协议进行设置控制
- RS-485 输入有多种协议和波特率可选
- 控制的快球或解码器地址号可扩展
- 可通过曼码,高速数据线和 RS-485 与 Infinova 系列矩阵进行 通讯
- 采用可插拔式接线端子,方便安装
- 兼容 Infinova 系列视频矩阵切换/控制系统

1.4 面板图



视频输入(控制命令输出)

- (2) 视频输出
- (3) 高速数据线输入
- (4) 高速数据线输出
- (5) 曼彻斯特码输入
- (6) RS-485 输入
- (7) 选择波特率和协议
- (8) 输入协议选择和地址分组
- (9) 电源线

1.5 维护

V2414系列视控同轴多协议转换器没有安装用户可调部件, 不需要特别维护。确认设备固定良好,并且安装在稳固的基座 上。请及时更换磨损或老化的线路,以避免对用户造成严重的 安全隐患。

第二章 安装和系统连接

2.1 安装

安装应该由合格的技术或服务人员进行,并且应该遵守当 地的电气规则。

V2414 系列视控同轴多协议转换器只能用于室内用途。两 个 V2414 系列设备可以并排安装在一个 19" EIA 机架上,请联 系经销商或 Infinova 获取详细信息。

V2414 的尺寸如下:

- 高(顶部到底部):
- 44.4mm (1.74 英寸) 483mm (19 英寸)
- 宽(两侧面间): 265mm (10.4 英寸)
- 深(前面到后面):

2.2 电源连接

V2414 系列视控同轴多协议转换器内置一个变压器,因此 可以使用电源插座供电。

警告: 在所有连接完成并校验之前,请不要把 V2414 连接 到主电源上。

2.3 高速数据线输入连接

V2414 系列视控同轴多协议转换器后面板上有一组 DATALINE 输入/输出。V2414 视控同轴多协议转换器将来自 V2015A, V2020A 以及 V204A0 等矩阵切换系统的高速数据信 号转换成 16 组视控同轴信号输出。以 V2040A 的连接为例,参 见图 2-1。



图 2-1. DATALINE 输入与 V2414 的连接

2.4 曼彻斯特码输入连接

V2414 系列视控同轴多协议转换器后面板上有一组曼彻斯特输入端口。V2414 系列视控同轴多协议转换器将来自 V2011A 或 V2015A 等矩阵切换系统的曼彻斯特码转换成 16 组视控同轴 信号输出。以 V2011A 的连接为例,参见图 2-2。

B 从控制码源的 B 终端连接黑色控制线到 V2414 系列码转 换器的 B 终端

W 从控制码源的 W 终端连接白色控制线到 V2414 系列码转换器的 W 终端

S 连接屏蔽电缆的一端到控制码源的 S 终端。连接屏蔽电缆的另一端到 V2414 码转换器的 S 终端。

注意: 请使用 18 AWG 的屏蔽双绞线, Belden 8760 或类似 电缆用于码线连接。



图 2-2. 曼彻斯特码输入与 V2414 的连接

2.5 RS-485 输入连接

V2414 系列视控同轴多协议转换器后面板上有一组 RS-485 输入端口。V2414 系列视控同轴多协议转换器将来自 V2011A

或 V2015A 等矩阵切换系统的 RS-485 码转换成 16 组视控同轴 信号输出。以 V2015A 的连接为例,参见图 2-3。



图 2-3. RS-485 输入连接

2.6 视控同轴输出连接

V2414 系列视控同轴多协议转换器后面板上有 16 组 BNC 视频输入,同时该16路视频输入接口作为视控同轴信号的输出, 控制远端的快球。参见图 2-4。



图 2-4. V2414 输出控制快球

2.7 视频连接

2.7.1 视频输入连接

V2414 的视频输入与控制信号输出共用同一根电缆,通过 BNC 连接器连接。把外部快球视频信号接入 V2414 的 BNC 输 入端,从而输入视频信号。如下图所示。



图 2-5. V2414 视频输入

参考下表选择合适的同轴电缆视频线:

表 2-1. 同轴电缆及最大传输距离

同轴电缆类型	最大传输距离
RG59/U	750 ft (229 m)
RG6/U	1000 ft (305 m)
RG11/U	1500 ft (475m)

2.7.2 视频输出连接

V2414 最多支持 16 路视频环接输出。参看以下步骤将监视器连接到视频环接输出终端:

参看相关用户手册安装好监视器。

把视频线连接到V2414后面板上的BNC视频环接输出接头上。



图 2-6.V2414 视频输出

第三章 系统设置和操作

3.1 输入控制协议设置

3.1.1 DIP 开关

标识为 SW2 的 DIP 开关用来选择输入类型和摄像机地址分组。每次改变 DIP 开关设置后 V2414 必须断电重启后新设置才可生效。

SW2 每个位置的解释如下表 3-1。

表 3-1. DIP 开关 SW2

1	2	3	4	5	6	7	8
输入控	它制协	 					
议选择	Z	滋 像机地址分组					

3.1.2 选择输入控制协议

V2414 系列视控同轴多协议转换器可以接收高速数据线、 曼彻斯特码和 RS-485 输入,但不能同时选择三种输入来控制快 球。通过拨码开关 SW2 的 1-2 位,可以选择转换器当前可接收 的输入类型。具体设置如下表 3-2。

表 3-2. 输入协议设置

(0 = OFF, 1 = ON)

DIP 开注	关位置	决坏 执议米刑
1	2	起并仍以关望
0	0	高速数据线
0	1	曼彻斯特码
1	0	RS-485
1	1	无

3.2 RS-485 输入协议和波特率设置

3.2.1 DIP 开关

标识为 SW1 的 DIP 开关用来选择 RS-485 输入的控制协议 和波特率。

SW1 每个位置的解释如下表 3-3。

表 3-3. DIP 开关 SW1

1	2	3	4	5	6	7	8
	波特率	逐选择		RS-	485 控制	制协议设	先择

3.2.2 选择通讯协议和波特率

V2414 系列视控同轴多协议转换器的 RS-485 输入,可以接 收多种控制协议,并且每种控制协议有多种通讯波特率可选。 通过拨码开关 SW1 的 1-4 位,可以选择转换器当前可接收的波 特率;通过拨码开关 SW1 的 5-8 位,可以选择转换器当前可接 收的 RS-485 协议。具体设置如下表 3-4。

表 3-4. 通讯协议和波特率设置

(0 = OFF, 1 = ON)

油桩家	开关位置			+h.?V	开关位置				
似何平	1	2	3	4	DT DX	5	6	7	8
1200	0	0	0	0	Pelco-P	0	0	0	0
2400	0	0	0	1	Pelco-D	0	0	0	1
4800	0	0	1	0	Infinova	0	0	1	0
9600	0	0	1	1					

3.3 摄像机地址分组

3.3.1 DIP 开关

标识为 SW2 的 DIP 开关用来选择输入类型和摄像机地址分组。

SW2 每个位置的解释如表 3-1。

3.3.2 摄像机地址分组设置

单个 V2414 系列视控同轴多协议转换器只能输出 16 路视控 同轴控制信号去控制快球。在同一系统中,当有超过 16 个快球 或解码器需要控制时,需要接多个转换器来实现。通过拨码开 关 SW2 的 3-8 位,可以选择转换器当前可控制的摄像机地址号。 具体设置如下表 3-5。

注意:由于不同矩阵切换/控制系统的视频输入路数不同, 在控制 V2414 时,所能选择的摄像机地址号会有所差别。详细 信息请参阅相应的说明书文档。

表 3-5. 摄像机地址分组设置

(0)	=	OFF,	1 =	= ON)

再佈扣加	DIP 开关位置							
 饭 你 你 你 你 你 你 你 你 你 你	3	4	5	6	7	8		
1-16	0	0	0	0	0	0		
17-32	0	0	0	0	0	1		
33-48	0	0	0	0	1	0		
49-64	0	0	0	0	1	1		
65-80	0	0	0	1	0	0		
81-96	0	0	0	1	0	1		
97-112	0	0	0	1	1	0		
113-128	0	0	0	1	1	1		
129-144	0	0	1	0	0	0		
145-160	0	0	1	0	0	1		
161-176	0	0	1	0	1	0		
177-192	0	0	1	0	1	1		
193-208	0	0	1	1	0	0		
209-224	0	0	1	1	0	1		
225-240	0	0	1	1	1	0		
241-256	0	0	1	1	1	1		
257-272	0	1	0	0	0	0		
273-288	0	1	0	0	0	1		
289-304	0	1	0	0	1	0		
305-320	0	1	0	0	1	1		
321-336	0	1	0	1	0	0		
337-352	0	1	0	1	0	1		
353-368	0	1	0	1	1	0		
369-384	0	1	0	1	1	1		
385-400	0	1	1	0	0	0		
401-416	0	1	1	0	0	1		
417-432	0	1	1	0	1	0		
433-448	0	1	1	0	1	1		
449-464	0	1	1	1	0	0		
465-480	0	1	1	1	0	1		
481-496	0	1	1	1	1	0		
497-512	0	1	1	1	1	1		
513-528	1	0	0	0	0	0		
529-544	1	0	0	0	0	1		
545-560	1	0	0	0	1	0		
561-576	1	0	0	0	1	1		
577-592	1	0	0	1	0	0		

耳角切如	DIP 开关位置						
政隊仍知	3	4	5	6	7	8	
593-608	1	0	0	1	0	1	
609-624	1	0	0	1	1	0	
625-640	1	0	0	1	1	1	
641-656	1	0	1	0	0	0	
657-672	1	0	1	0	0	1	
673-688	1	0	1	0	1	0	
689-704	1	0	1	0	1	1	
705-720	1	0	1	1	0	0	
721-736	1	0	1	1	0	1	
737-752	1	0	1	1	1	0	
753-768	1	0	1	1	1	1	
769-784	1	1	0	0	0	0	
785-800	1	1	0	0	0	1	
801-816	1	1	0	0	1	0	
817-832	1	1	0	0	1	1	
833-848	1	1	0	1	0	0	
849-864	1	1	0	1	0	1	
865-880	1	1	0	1	1	0	
881-896	1	1	0	1	1	1	
897-912	1	1	1	0	0	0	
913-928	1	1	1	0	0	1	
929-944	1	1	1	0	1	0	
945-960	1	1	1	0	1	1	

耳 偽 却 ብ	DIP 开关位置							
100 (00.1/1/241	3	4	5	6	7	8		
961-976	1	1	1	1	0	0		
977-992	1	1	1	1	0	1		
993-1008	1	1	1	1	1	0		
1009-1024	1	1	1	1	1	1		

注意:曼码协议的最大地址号为 64,可分为 4 组,每组 16 路输出,PELCO-P/D 协议最大地址号为 256,可分为 16 组, INFINOVA 协议最大地址号为 128,可分为 8 组,高速数据线 (DATALINE)最大地址号为 1024,可分为 64 组。

3.4 快球控制操作

当转换器连接完成,并设置好相应的选项后,即可输出视 控同轴协议控制远端的快球或解码器。关于快球的功能描述及 操作请参照本节下面的内容,其它详细的操作信息,请参见对 应的快球或解码器的操作手册。

注意:当改变快球的拨码开关设置后,快球须重新上电, 新的设置才会生效。

Γ	功能	键盘状态	操作
	SET PRESET	PROGRAM	1-32, 35-127 + SHOT
Ī	CALL PRESET	OPERATE	1-32, 35-127 + SHOT
Ī	PLIP 180°	OPERATE	33 + SHOT
Ī	HOME POSITION	OPERATE	34 + SHOT
Ī	ENTER MENU	PROGRAM	65/95 + SHOT
Γ	CALL AUTOSCAN	OPERATE	99 + SHOT
Γ	CLEAR SCREEN	PROGRAM	67 + SHOT
Γ	REMOTE RESET	PROGRAM	68 + SHOT
Γ	RESUME ALARM	OPERATE	64 + SHOT
Γ	B/W TO COLOR	OPERATE	88 + SHOT
	COLOR TO B/W	OPERATE	89 + SHOT
Γ	SET PATTERN 1	PROGRAM	70 + SHOT
	SET PATTERN 2	PROGRAM	71 + SHOT
	SET PATTERN 3	PROGRAM	72 + SHOT
	SET PATTERN 4	PROGRAM	73 + SHOT
	SAVE PATTERN	PROGRAM	70/71/72/73 + SHOT
	CALL PATTERN 1	OPERATE	70 + SHOT
	CALL PATTERN 2	OPERATE	71 + SHOT
	CALL PATTERN 3	OPERATE	72 + SHOT
	CALL PATTERN 4	OPERATE	73 + SHOT
	SET AUTOPAN	OPERATE	92 + SHOT
	SAVE AUTOPAN	OPERATE	93 + SHOT
	CALL AUTOPAN	OPERATE	98 + SHOT

3.4.1 INFINOVA 协议输入

功能	键盘状态	操作
SET PRESET	PROGRAM	1-32, 35-127 + SHOT
CALL PRESET	OPERATE	1-32, 35-58, 74-127 + SHOT
PLIP 180°	OPERATE	33 + SHOT
HOME POSITION	OPERATE	34 + SHOT
ENTER MENU	PROGRAM	65/95 + SHOT
CALL AUTOSCAN	OPERATE	99 + SHOT
CLEAR SCREEN	PROGRAM	67 + SHOT
REMOTE RESET	PROGRAM	68 + SHOT
RESUME ALARM	OPERATE	64 + SHOT
B/W TO COLOR	OPERATE	88 + SHOT
COLOR TO B/W	OPERATE	89 + SHOT
SET PATTERN 1	PROGRAM	70 + SHOT
SET PATTERN 2	PROGRAM	71 + SHOT
SET PATTERN 3	PROGRAM	72 + SHOT
SAVE PATTERN	PROGRAM	70/71/72 + SHOT
CALL PATTERN 1	OPERATE	70 + SHOT
CALL PATTERN 2	OPERATE	71 + SHOT
CALL PATTERN 3	OPERATE	72 + SHOT
SET AUTOPAN	OPERATE	92 + SHOT
SAVE AUTOPAN	OPERATE	93 + SHOT
CALL AUTOPAN	OPERATE	98 + SHOT

3.4.2 PELCO-D 协议输入

功能	键盘状态	操作
SET PRESET	PROGRAM	1-32, 35-127 + SHOT
CALL PRESET	OPERATE	1-32,35-127 + SHOT
PLIP 180°	OPERATE	33 + SHOT
HOME POSITION	OPERATE	34 + SHOT
ENTED MENUL	PROGRAM	66/95 + SHOT
ENTER MENU	OPERATE	66 + SHOT
CALL AUTOSCAN	OPERATE	99 + SHOT
CLEAR SCREEN	PROGRAM	67 + SHOT
REMOTE RESET	PROGRAM	68 + SHOT
RESUME ALARM	OPERATE	64 + SHOT
B/W TO COLOR	OPERATE	88 + SHOT
COLOR TO B/W	OPERATE	89 + SHOT
SET PATTERN 1	PROGRAM	70 + SHOT
SET PATTERN 2	PROGRAM	71 + SHOT
SET PATTERN 3	PROGRAM	72 + SHOT
SET PATTERN 4	PROGRAM	73 + SHOT
SAVE PATTERN	PROGRAM	69 + SHOT
CALL PATTERN 1	OPERATE	70 + SHOT
CALL PATTERN 2	OPERATE	71 + SHOT
CALL PATTERN 3	OPERATE	72 + SHOT
CALL PATTERN 4	OPERATE	73 + SHOT

功能	键盘状态	操作
SET PRESET	PROGRAM	1-32, 35-127 + SHOT
CALL PRESET	OPERATE	1-32, 35-58, 74-127 + SHOT
PLIP 180°	OPERATE	33 + SHOT
HOME POSITION	OPERATE	34 + SHOT
ENTER MENU	PROGRAM	66/95 + SHOT
CALL AUTOSCAN	OPERATE	99 + SHOT
B/W TO COLOR	OPERATE	88 + SHOT
COLOR TO B/W	OPERATE	89 + SHOT
SET PATTERN 1	OPERATE	59 + SHOT
SET PATTERN 2	OPERATE	61 + SHOT
SET PATTERN 3	OPERATE	63 + SHOT
SET PATTERN 4	OPERATE	65 + SHOT
SAVE PATTERN	OPERATE	66 + SHOT
CALL PATTERN 1	OPERATE	60 + SHOT
CALL PATTERN 2	OPERATE	62 + SHOT
CALL PATTERN 3	OPERATE	64 + SHOT
CALL PATTERN 4	OPERATE	67 + SHOT

3.4.3 PELCO-P 协议输入

功能	键盘状态	操作
SET PRESET	PROGRAM	1-32, 35-127 + SHOT
CALL PRESET	OPERATE	1-32, 35-127 + SHOT
PLIP 180°	OPERATE	33 + SHOT
HOME POSITION	OPERATE	34 + SHOT
ENTED MENILI	PROGRAM	66/95 + SHOT
ENTER MENU	OPERATE	66 + SHOT
CALL AUTOSCAN	OPERATE	99 + SHOT
CLEAR SCREEN	PROGRAM	67 + SHOT
REMOTE RESET	PROGRAM	68 + SHOT
RESUME ALARM	OPERATE	64 + SHOT
B/W TO COLOR	OPERATE	88 + SHOT
COLOR TO B/W	OPERATE	89 + SHOT
SET PATTERN 1	PROGRAM	70 + SHOT
SET PATTERN 2	PROGRAM	71 + SHOT
SET PATTERN 3	PROGRAM	72 + SHOT
SET PATTERN 4	PROGRAM	73 + SHOT
SAVE PATTERN	PROGRAM	69 + SHOT
CALL PATTERN 1	OPERATE	70 + SHOT
CALL PATTERN 2	OPERATE	71 + SHOT
CALL PATTERN 3	OPERATE	72 + SHOT
CALL PATTERN 4	OPERATE	73 + SHOT

功能	键盘状态	操作
SET PRESET	PROGRAM	1-32, 35-127 + SHOT
CALL PRESET	OPERATE	1-32, 35-58, 74-127 + SHOT
PLIP 180°	OPERATE	33 + SHOT
HOME POSITION	OPERATE	34 + SHOT
ENTER MENU	PROGRAM	66/95 + SHOT
CALL AUTOSCAN	OPERATE	72/99 + SHOT
B/W TO COLOR	OPERATE	88 + SHOT
COLOR TO B/W	OPERATE	89 + SHOT
SET PATTERN 1	OPERATE	59 + SHOT
SET PATTERN 2	OPERATE	61 + SHOT
SET PATTERN 3	OPERATE	63 + SHOT
SET PATTERN 4	OPERATE	65 + SHOT
SAVE PATTERN	OPERATE	66 + SHOT
CALL PATTERN 1	OPERATE	60 + SHOT
CALL PATTERN 2	OPERATE	62 + SHOT
CALL PATTERN 3	OPERATE	64 + SHOT
CALL PATTERN 4	OPERATE	67 + SHOT

3.4.4 MANCHESTER 协议输入

功能	键盘状态	操作
SET PRESET	PROGRAM	1-32, 35-63 + SHOT
CALL PRESET	OPERATE	1-32, 35-62 + SHOT
PLIP 180°	OPERATE	65 + SHOT
HOME POSITION	PROGRAM	64 + SHOT
ENTER MENU	PROGRAM	65 + SHOT
CALL AUTOSCAN	OPERATE	66 + SHOT
CLEAR SCREEN	PROGRAM	67 + SHOT
REMOTE RESET	PROGRAM	68 + SHOT
RESUME ALARM	OPERATE	64 + SHOT
SET PATTERN 1	PROGRAM	70 + SHOT
SET PATTERN 2	PROGRAM	71 + SHOT
SET PATTERN 3	PROGRAM	72 + SHOT
SAVE PATTERN	PROGRAM	69 + SHOT
CALL PATTERN 1	OPERATE	70 + SHOT
CALL PATTERN 2	OPERATE	71 + SHOT
CALL PATTERN 3	OPERATE	72 + SHOT

功能	键盘状态	操作
SET PRESET	PROGRAM	1-32, 35-63 + SHOT
CALL PRESET	OPERATE	1-32, 35-60 + SHOT
PLIP 180°	OPERATE	65 + SHOT
HOME POSITION	PROGRAM	64 + SHOT
ENTER MENU	PROGRAM	65 + SHOT
CALL AUTOSCAN	OPERATE	66 + SHOT
CLEAR SCREEN	PROGRAM	67 + SHOT
REMOTE RESET	PROGRAM	68 + SHOT
SET PATTERN 1	PROGRAM	70 + SHOT
SET PATTERN 2	PROGRAM	71 + SHOT
SET PATTERN 3	PROGRAM	72 + SHOT
SAVE PATTERN	PROGRAM	69 + SHOT
CALL PATTERN 1	OPERATE	70 + SHOT
CALL PATTERN 2	OPERATE	71 + SHOT
CALL PATTERN 3	OPERATE	72 + SHOT

3.4.5 矩阵 DATALINE 输入

功能	键盘状态	操作
SET PRESET	PROGRAM	1-32, 35-127 + SHOT
CALL PRESET	OPERATE	1-32, 35-127 + SHOT
PLIP 180°	OPERATE	33/65 + SHOT
HOME DOCITION	OPERATE	34 + SHOT
HOME POSITION	PROGRAM	64 + SHOT
ENTED MENU	PROGRAM	65/95 + SHOT
ENTER MENU	OPERATE	95 + SHOT
CALL AUTOSCAN	OPERATE	66 + SHOT
CLEAR SCREEN	OPERATE	67 + SHOT
REMOTE RESET	PROGRAM	68 + SHOT
RESUME ALARM	OPERATE	64 + SHOT
B/W TO COLOR	OPERATE	68/88 + SHOT
COLOR TO B/W	OPERATE	69/89 + SHOT
SET PATTERN 1	PROGRAM	70 + SHOT
SET PATTERN 2	PROGRAM	71 + SHOT
SET PATTERN 3	PROGRAM	72 + SHOT
SET PATTERN 4	PROGRAM	73 + SHOT
SAVE PATTERN	PROGRAM	69 + SHOT
CALL PATTERN 1	OPERATE	70 + SHOT
CALL PATTERN 2	OPERATE	71 + SHOT
CALL PATTERN 3	OPERATE	72 + SHOT
CALL PATTERN 4	OPERATE	73 + SHOT
	PROGRAM	66 + SHOT
SETAUTOPAN	OPERATE	92 + SHOT
	PROGRAM	67 + SHOT
SAVE AUTOPAN	OPERATE	93 + SHOT
CALL AUTOPAN	OPERATE	64/98 + SHOT

附录一 技术指标

一般指标

高速数据线:	输入/输出,BNC 连接器
RS-485 连接:	可插拔终端连接器, 三芯屏蔽线
曼彻斯特码连接:	可插拔终端连接器, 三芯屏蔽线

机械指标

尺寸:	高 44.4mm×宽 483mm×长 265mm		
重量:	2.0kg		
安装方式:	机架,墙面或桌面安装可选		

环境指标

温度:	$0^{\circ}C \sim 40^{\circ}C (32^{\circ}F \sim 104^{\circ}F)$
湿度:	0~90%RH (无冷凝)

电气指标	
电压:	

功率:

120VAC/60Hz; 230VAC/50Hz 8W

http://	/www.infinova.com.cn	www.ii	nfinova.com
西安:(029-88327562		
北京:(010-88571860	重庆:	023-67865560
深圳:(0755-82873400	上海:	021-51502788
美国:	1-732-355-9100	香港:	852-27956540
垂询请致电:			
地址:	深圳市宝安区观澜高新技术产	业园	(518110)
制造商: 深圳英飞拓科技股份有限公司			