



9520 MOBILE TELEPHONE USER'S GUIDE



9520 MOBILE QUICK REFERENCE

Quick Access Menu

*Default settings shown

- 4
 - Find Name
- 2 Check Signal
- Call Voicemail
- Mute Phone
- Lock Now
- Adjust Ring
- Read Messages
- Register Now
- Forward On/Off

Basic Operation

Turn the phone's power on/off:

Press and hold @.

Insert SIM Card:

- 1. Make sure the phone's power is turned off.
- 2. Insert card in hang-up cup SIM slot.

The blank side of the card should face forward with the gold chip pointing down.

Place a call:

Enter the phone number, and then press ok.

Answer a call: Press Os. End a call: Press C.



Add a number to the phone book:

- 1. Enter the phone number and then press ...
- 2. Press or #> to scroll to the desired memory type and then press os.
- 3. Press or to accept the number.
- 4. Enter a name, using leaves to enter letters and leaves or to scroll between letters. Press leaves as many times as necessary to reach desired letter.
 - When name is complete, press ox.
- Enter a three-digit location number, and then press or press to store the entry in the next empty memory location.

Recall a number from the phone book:

- 1. Press MR.
- 2. Enter the three-digit location number of the entry, and then press **o**k.
- 3. Press ox to call the displayed entry.

Recall last ten numbers dialed:

- 1. Press until you see Phone Book, and then press ox.
- 2. Press to scroll to Last. Ten Calls, and then press ok.
- 3. Press (IN) to scroll to Last. Calls Made and then press (IX).
- 4. Press to scroll to the number you are looking for.
- 5. Press ox to place a call to that number.

Special Features

Adjust earpiece volume:

Press upper and lower volume keys on the side of the phone.

Adjust ringer volume:

Press • and then the upper and lower volume keys on the side of the phone.

Clear the last digit in the display or exit a submenu:

Press 🕝 .

Clear the entire display or exit the menu system:

Press and hold @ .

Unlock the phone:

Enter your 4-digit unlock code (supplied to you by your service provider).

Display your phone number:

Press MR #D.

Welcome

The future of global telecommunications is here—a satellite telephone, providing you with communication all over the world.

The company that brought you the world's first commercially available cellular phone has done it again! Motorola proudly introduces its Satellite Series 9520 Mobile Phone for the Iridium[®] system.

All Motorola wireless phones are designed and manufactured to meet Motorola's exacting specifications and world-class quality standards. During development, our laboratory testing team took the durable phone through rigorous durability tests including temperature, humidity, shock, dust, vibration, and drop tests—and it still worked! We are confident that the phone you purchased meets your own exacting standards.

Thank you for choosing Motorola, a global leader in communications technology.

Enjoy your new Satellite Series 9520 Mobile Phone!

Contents

| Safety Information7 |
|---|
| Overview11Guide Overview12Phone Overview14Original Satellite Series Accessories17 |
| Using Your Phone |
| What Is a SIM Card? |
| Powering Up the Phone |
| What's My SIM Card Phone Number? |
| Using Hands-free Features |
| Adjusting Ringer Volume35 |
| Using In-Call Features.37Muting a Call.38Using Call Waiting.39Placing a Call on Hold.40 |
| Using the Menus.43Using the Options Menus.44Using the Quick Access Menu.46Using The In-Call Menu.48 |
| Managing the Phone Book |
| Entering the Phone Book Menu .50 What's on the Phone Book Menu? .51 Organizing Your Phone Book .52 Storing Names and Numbers .54 Entering Names .56 Using Pauses in Numbers .58 |
| Using Phone Number Prefixes |
| Calling, Modifying, or Erasing an Entry 62 Checking Phone Book Capacity 63 |

| Preventing Access to the Phone Book | |
|---|------|
| Restricting Phone Use | |
| Viewing and Modifying Your Phone Numbers | |
| One-Touch Dialing | |
| Using Calling Features | . 73 |
| Entering the Call Related Features Menu | |
| What's on the Call Related Features Menu? . | . 75 |
| Forward Calls When Unavailable | . 76 |
| Forward All Your Calls | |
| Detailed Call Forwarding | |
| Cancel All Forwarding | |
| Showing Signal Strength | |
| Deactivating Pending Call Drop Signal | |
| Activating Call Waiting | |
| Restricting Calls with Call Barring | |
| Using Message Services | |
| Entering the Messages Menu | |
| What's on the Messages menu? | |
| Checking Your Voicemail | |
| Storing Your Managage | |
| Managing Your Messages | |
| Accessing Messages | |
| Customizing Phone Features | |
| Entering the Phone Setup Menu | |
| What's on the Phone Setup Menu? | |
| Adjusting the Ringer Volume | |
| Setting the Keypad Tones | |
| Locking and Unlocking Your Phone | |
| Protecting the SIM Card | |
| Managing Other Security Settings | |
| Activating Extended Menus | |
| Selecting the Display Language | 110 |
| Review the Phone's Settings | |
| Reset Options to Factory Defaults | |
| Clear All Stored Information | 113 |

| Accessing the Network115 |
|---|
| Entering the Network Selection Menu116 |
| What's on the Network Selection Menu?117 |
| Registering With the Satellite Network 118 |
| Timing Your Calls119Entering the Call Meters Menu120What's on the Call Meters Menu?121Showing Call Timers122Setting Audible Call Timers124Showing the In-Call Timer126Showing the Lifetime Timer127 |
| Setting Up Your Accessories |
| Entering the Accessory Setup Menu |
| What's on the Accessory Setup Menu? 131 Mute Car Radio |
| Automatic Answer |
| Safety Timer |
| Auxiliary Alert135 |
| Customizing the Menu System |
| Personalizing the Options Menu138 |
| Personalizing the Quick Access Menu 140 |
| Menu Quick Reference |
| Phone Book Menu142 |
| Call Related Features Menu |
| Messages Menu |
| Phone Setup Menu |
| Call Meters Menu |
| Accessory Setup Menu |
| Troubleshooting |
| Glossary |
| Index |
| Patent Information |

Safety Information

Important: Read this information before using your wireless mobile phone.

Exposure to Radio Frequency Signals

Your wireless mobile telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

International agencies have set standards and recommendations for the protection of public exposure to RF electromagnetic energy.

- International Commission on Non-Ionizing Radiation Protection (ICNIRP)1996
- Verband Deutscher Elektrotechniker (VDE) DIN-0848
- United States Federal Commission, Radio Frequency Exposure Guidelines (1996)
- National Radiological Protection Board of the United Kingdom, GS 11,1988
- American National Standards Institute (ANSI) IEEE. C95. 1-1992
- National Council on Radiation Protection and Measurements (NCRP). Report 86
- Department of Health and Welfare Canada. Safety Code 6

These standards are based on extensive scientific review. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the updated ANSI standard.

The design of your phone complies with these standards when used as described under "Phone Operation."

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate local agency regulations.

Phone Operation

Do not operate your mobile telephone when a person is within 4 inches (10 centimeters) of the antenna.

A person or object within 4 inches (10 centimeters) of the antenna could impair call quality and may cause the phone to operate at a higher power level than necessary and expose that person to RF energy in excess of that established by the FCC RF Exposure Guidelines.

Driving

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Observe the following guidelines when using your phone while driving.

- Give full attention to driving—driving safely is your first responsibility.
- Use hands-free phone operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches (6") be maintained between a wireless phone's antenna and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON
- should turn the phone OFF immediately if you have any reason to suspect that interference is taking place

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone OFF and do not remove your battery when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks from your battery in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include, but are not limited to: fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; areas where fuel odors are present (for example, if a gas/propane leak occurs in a car or home); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you normally would be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. Do NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Overview

This chapter provides an overview of your new satellite phone.

What You Will Learn

- overview of the user guide
- overview of the satellite phone
- overview of original Satellite Series accessories

Guide Overview

As you explore your 9520 Mobile Phone, use this guide to see what key to press and what happens when you press it. Here is what you will learn in each chapter:

| Chapter | Description |
|----------------------------------|--|
| Using Your Phone | How do you make your first phone call? This question and many others are answered in this chapter. See "Using Your Phone" on page 19 for more information. |
| Using the Menus | This chapter teaches you how to navigate the menu system. See "Using the Menus" on page 43 for more information. |
| Managing the Phone Book | See "Managing the Phone Book" on page 49 to learn how to make the most of your phone's built-in Phone Book. |
| Using Calling Features | If you subscribe to Call Barring or Call Forwarding, see "Using Calling Features" on page 73 to learn how to use these network features and more. |
| Using Messaging Services | Did you know that you can be notified of voicemail or receive numeric and text messages through your Personal Mailbox? See "Using Message Services" on page 87 for more information. |
| Customizing Phone Features | See "Customizing Phone Features" on page 97 to learn how to customize your phone's features. |
| Accessing the Network | See "Accessing the Network" on page 115 to learn how to register with the satellite network. |
| Timing Your Calls | View the time of your last call or set your phone to remind you after you have been talking for a certain period of time. See "Timing Your Calls" on page 119 for more information. |

| Chapter | Description |
|-----------------------------------|--|
| Setting Up Your Accessories | See "Setting Up Your Accessories" on page 129 to learn how to use features that make driving a little easier. |
| Customizing the Menu System | Once you are familiar with the features in your menus, you can customize the menus to more closely fit your needs. See "Customizing the Menu System" on page 137 for more information. |

Understanding the Guide

Key Presses

Key presses are represented in this guide using symbols so that you may locate and use the required sequence quickly. A sequence of key presses may be shown as follows:



This means you should press followed by and then , in sequence, not simultaneously.


Prompts and Messages

Your phone responds to key presses by displaying either a prompt that guides you to the next action or a message confirming that your action is complete. Prompts and messages are represented in this guide in LCD style, for example: Enter PIN or Completed.

Tips

In the margins of your guide are useful hints and ways to improve your phone's performance.

Phone Overview

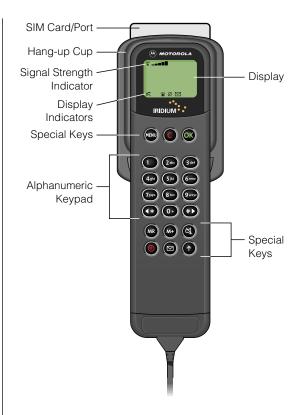

Volume Keys

The Volume keys are on the side of the phone. They adjust earpiece and ringer volume. See "Adjusting Earpiece Volume" on page 34 for more information.

SIM Card Port

The SIM card is inserted in the slot in your hang-up cup. When inserting the SIM card, the back (or blank) side of the card should be facing you. The gold plate should be facing down. Insert the end with the gold plate first.

Special Keys

| Key | Function |
|----------------|---|
| 0 | Turns the phone's power on and off |
| OK | Selects menu settings or options, or initiates and answers calls |
| 3 | Calls voicemail and displays messages |
| M + | Stores numbers in the phone book |
| MR | Recalls numbers from the phone book |
| • | Enters the Quick Access menu |
| MENU | Enters the Options menu and scrolls forward through menu features |
| G | Clears characters from the screen or exits the Options menu |
| 8 | Mutes the handset when you are in a call |
| or #D | Scrolls through the menu features |

The Display

Your phone's Liquid Crystal Display (LCD) displays as many as four rows of 16 characters.

ABC123

The LCD on your phone may respond slowly to key presses in extremely cold temperatures. This is normal and does not affect the phone operation in any way.

Display Indicators

| Indicator | Description |
|-------------------------|---|
| (' 1) ————— | Signal Strength Indicator indicates the strength of the signal from the network. The more segments displayed in the bar graph, the stronger the signal. You can check the strength of the signal at any time through the menu. See "Showing Signal Strength" on page 81 for additional information. |
| | Message Indicator appears when you receive a new message. It flashes when the SIM card is full. See "Accessing Messages" on page 94 for additional information. |
| Î | Home System Indicator appears when the phone has successfully registered with the Iridium satellite system. |
| Ø | No Service Indicator appears when your phone is not capable of placing or receiving calls. |
| × | In Use Indicator appears when a call is in progress. |
| Î | Scroll Bar appears on the right of the display when you are in a menu. The button on the scroll bar indicates where you are in the list. |
| / | Check Mark indicates a menu item is currently selected. |
| ₽ : (| Quick Access Menu Icons allow you to easily identify Quick Access features as you scroll through the Quick Access menu. |

Original Satellite Series Accessories

Product appearance and specifications are subject to change without notice.



Note: For maximum performance use only Motorola original accessories.

Mobile Magnetic or Mobile Permanent Mount Antenna

These antennas deliver exceptional reception performance and offer dual mounting options.

- Use either magnetic mount or permanent mount option
- Attaches to Motorola Satellite Series 9520 Mobile Phone, 9500 Portable Phone, or 9570 Portable Dock for in-vehicle communication
- Attached 5-meter cable

Fixed Mast Antenna

This antenna attaches to the Motorola Satellite Series 9520 Mobile Phone to deliver exceptional reception performance in a marine environment.

- Marine rated with mast mount capability
- Attached 10-meter cable



Using Your Phone

Read this section to learn how to get up and running with your new satellite phone.

What You Will Learn

- what is a SIM card?
- · inserting your SIM card
- · turning the phone's power on and off
- · placing and receiving calls
- using hands-free features
- determining your own phone number

What Is a SIM Card?

Your SIM card (Subscriber Identity Module) contains your phone's number, service details, and memory for storing Phone Book entries and messages. This means you can use your SIM card with any phone for the GSM system or any Motorola product for the Iridium satellite system, and all calls go on your account.

Note: Your phone has limited functionality without the SIM card.

GSM SIM Card Capability

If you already have a GSM SIM card and your service provider has a roaming agreement with the Iridium satellite system, you can use it in your satellite telephone.

Note: If you are using a GSM SIM card, you may not have access to certain features that are specific to the Iridium satellite system, and vice versa.

SIM Card Protection

Keep your SIM card in your wallet or purse when you are not using it. This helps keep your personal information secure and gives you access to your service even if your phone is not available.

Caution: Avoid bending, scratching, or exposing your card to static electricity, water, or dirt.

Installing the SIM Card

Make sure your phone is powered off before inserting or removing the SIM card. If you don't, you may damage the memory on your SIM card.

Insert the SIM Card

- **1. Turn your phone off** by pressing and holding the **(a)** key.
- Make sure that the gold plate on the SIM card faces down and away from you, and then insert the SIM card into the slot in the hang-up cup as far as it will go.



Tip: Hold the SIM card so that the back (or blank) side of the card is facing you. The gold plate should be facing down. Insert the end with the gold plate first.

Remove the SIM Card

- **1. Turn your phone off** by pressing and holding the **(a)** key.
- 2. Pull the SIM card out of the slot in the hang-up cup.

Powering Up the Phone

Turn the Power On and Off

To turn your phone's power on:

- **1. Insert your SIM card.** (See "Installing the SIM Card" on page 21.)
- Press and hold to turn the phone on and off.

When you turn your phone's power on, it performs a self test to let you know it is operational. You may see a number of other power-on messages (see below).

When the \bigcirc (no service) indicator disappears and the \bigcirc (home system) indicator appears, you are ready to start calling.

Power-On Messages

Once your phone is powered on, you may see:

| Message | Description |
|----------------------------|--|
| Searching | The phone is attempting to establish communications with the satellite network. See "Accessing the Network" on page 115 for more information. |
| Registering | Your phone is registering with the network. When the process is complete, you will see Registered. See "Accessing the Network" on page 115 for more information. |
| Enter Phone Unlock Code | Your phone was locked after the last use. Enter your four-digit unlock code and press to proceed. See "Locking and Unlocking Your Phone" on page 103 for more information. |

| Message | Description |
|--------------------------|---|
| Enter PIN | Enter the four- to eight-digit SIM card PIN code provided by your service provider and press to proceed. See "Protecting the SIM Card" on page 105 for more information. |
| Insert Card | Power off your phone; make sure your SIM card is inserted completely; and then power your phone on again. |
| Check Card | This message indicates that the SIM card is damaged or inserted the wrong way. |
| Blocked | If the SIM card PIN code is incorrectly entered three times in a row, your phone becomes blocked. See "Unblock the PIN Code" on page 106 for instructions on how to unblock it. |
| ⊈ Blocked | If the SIM card PIN2 code is incorrectly entered three times in a row, your phone becomes blocked. See "Unblock the PIN2 Code" on page 108 for instructions on how to unblock it. |
| Bad Card See Supplier | Your SIM card has been damaged or incorrectly issued. Contact your service provider for information. |

Placing a Call

To place a call, your phone must be powered on, have a SIM card inserted, be unlocked, and be in contact with the satellite network. See "Accessing the Network" on page 115 for network information.

Dial a Number

 Enter the number using the digit keys. As you begin entering digits, you will see Call?.

You must enter the phone number in international format: [international access code, 00, or +] [country code or Iridium country code] [phone number]

Note: If you are calling another Iridium satellite subscriber, use the Iridium code instead of the country code.

If you make a mistake, press ② once to delete the last digit, or press and hold ③ to clear all digits.

Press
 You will see Calling followed by the number you dialed.

You will see either the flashing message Calling or the flashing messages Calling, Registering..., and the phone will play a series of setup tones.

If the call connects and is answered, Connected appears on the display for a few seconds, followed by End Call?. If the call does not connect, you may see one of the following messages:

| Message | Description |
|---|--|
| Call Failed System Busy Weak Signal | The phone is unable to access the network. Try again in a few minutes. |
| Restricted Area | You are in an area where you cannot make a call. |
| Redial? | See "Automatic Redial" on page 25. |

Make a Hands-free Call

Refer to "Using Hands-free Features" on page 32.

Automatic Redial

If the number or your network is busy, you will see Redial? for five seconds.

Press ox to redial the number automatically.

Note: The maximum number of redial attempts is set by your service provider. If the call cannot be connected within this maximum, you will see the message Redial Failed.

Redial Last Number Called

Whenever your phone is on standby, you can redial the last number called:

- 1. Press ox to display the last number dialed.
- 2. Press ox again to place the call.

Dial Special Characters

You can insert special characters in your numbers:

| To enter | Then |
|---|---------------------|
| 0 | Press O+. |
| * | Press (*). |
| + (for international calls) | Press and hold 0. |
| g (for pause dialing) | Press and hold (*). |
| supplementary service numbers, PINs, and unblocking | Press # . |

International Dialing

To make an international phone call:

1. Press and hold O.

After a few seconds the international dialing prefix + appears in the display. This allows you to call from any country without knowing the local international access code.

Enter the country code followed by the phone number. The country code follows the conventional format.

Dial a Number With Pauses

Refer to "Using Pauses in Numbers" on page 58 for information on dialing numbers with pauses.

Dial a Number from the Phone Book

Your phone contains a phone book that you can use to store names and telephone numbers. Once you have stored information in your phone book, you can save dialing steps by using:

- · one-touch dialing
- · an entry from a location
- an entry of a name
- one of the last ten numbers called

Refer to "Managing the Phone Book" on page 49.

Make an Emergency Call

You can make an emergency call virtually anywhere in the world (without unlocking your phone) by dialing 112. Provided your phone has found a network, you are able to make an emergency call. The emergency call is directed to a central emergency operator.

To make an emergency call:



You will see the message Emergency Calling.

In addition, your Iridium service provider may have provided an additional emergency calling code on your SIM card. Check with your service provider.

Call a Number in a Message

Details on how to call a number embedded in a message are described in the "Using Message Services" section on page 96.

Ending a Call

To end a call, perform one of the following tasks:

- Press OK
- Replace the handset in the hang-up cup.
- Press 🕒

What's My SIM Card Phone Number?

You can retrieve and display your phone's number from your SIM card.

- 1. Press until you see Phone Book, and then press to select.
- Press until you see My Phone Number (s), and then press to select. You will see your phone number.
- **3. Press and hold** to exit the menu.

Note: If you do not see your number(s), they have not been programmed onto your SIM card. Contact your service provider for more information.

Tip: Pressing

also
brings up your
phone's
number.

Receiving a Call

Receive a Phone Call

To receive a call, your phone must be powered on, have a SIM card inserted, be unlocked, and be in contact with the satellite network. See "Accessing the Network" on page 115 for network information.

When you receive a call:

- Your phone rings.
- The phone displays Call, followed by Answer? on the next line.

To answer the call:

Remove the handset from the hang-up cup by pressing in the release buttons. You will see Connected.

If the call does not connect properly, you may see Call Failed. This indicates that the network signal is not strong enough.



or

Press of or any digit key (10-900, 100). You will be in hands-free operation. Direct your conversation to the microphone.

or

Activate the Automatic Answer feature to have the phone automatically answer incoming calls after two rings. See "Automatic Answer" on page 133.

Unanswered Calls

If you are away from your phone or choose not to answer a call, your phone displays the message Unanswered Call.

Personal Mailbox

Callers who are unable to reach you can leave numeric, text, and voice messages. The next time you register with the satellite network, you will receive these messages. Then you will have the option of returning the call or saving the message for later viewing.

For information on retrieving messages, see "Accessing Messages" on page 94.

Using Hands-free Features

Place a Hands-free Call

To place a hands-free call:

- 1. Leave the handset in the hang-up cup.
- Dial the number on the handset that you want to call. As soon as you begin entering digits, you will see Call?.
- 3. Press . You will see Calling followed by the number you dialed.

When the called party answers, direct your conversation to the hands-free microphone, typically mounted on the visor.

or

Pick up the handset for private conversation.

Receive a Hands-free Call

- Leave the handset in the hang-up cup and press of or any digit key (9 , * or *). You will see Connected.
- Direct your conversation to the hands-free microphone.

or

Pick up the handset for private conversation.

Change from Handset Operation to Hands-free Operation

If you are in a conversation and the handset is off the hang-up cup and you want to switch to hands-free operation, follow these instructions:

- 1. Press (a) to mute the phone.
- 2. Return the handset to the hang-up cup.

You are now in hands-free operation. Direct your conversation to the microphone.

or

- Press until you see Turn Mute on or off.
- 2. Press or to select. You will see Mute.
- 3. Return the handset to the hang-up cup.

You are now in hands-free operation. Direct your conversation to the microphone.

Caution: If you return the handset to the hang-up cup without muting it first, your call will be ended.

 
Adjusting Earpiece Volume

Tip: The volume keys are located on the side of the phone.

To adjust earpiece volume:

- Increase the volume by pressing the upper volume key.
- Decrease the volume by pressing the lower volume key.

As you press the keys, the phone's speaker demonstrates the new volume level. The bar graph in the display represents the volume level. The higher the graph, the louder the volume.



Adjusting Ringer Volume

Use this feature to adjust the volume of the ringer. The phone sounds the new volume level as you adjust it.

To adjust the ringer volume:

- 1. Press until you see Phone Setup, and then press &.
- 2. Press until you see Adjust Ring Volume, and then press of to select.
- **3. Increase the volume** by pressing the upper volume key.

or

Decrease the volume by pressing the lower volume key.

4. Press and hold (a) to exit the menu.

Tip: You can also press and then the up or down volume key to adjust ringer volume.

Using In-Call Features

Read this section to learn how to use In-Call menu features. The In-Call menu is displayed when you press during a call. See "Using The In-Call Menu" on page 48 for more information.

What You Will Learn

- · using call waiting
- · using call holding
- using call muting

Muting a Call

For privacy during a call, try muting the phone. You hear the party on the other end, but the other party does not hear you.

While in a call:

1. Press 🔇

or

Press until you see Turn Mute on or off.

2. Press ox to select. You will see Mute.

To unmute a call:

1. Press (4) again.

or

Press until you see Turn Mute on or off.

2. Press on to select.

Using Call Waiting

You must subscribe to this network feature through your service provider(s).

If you have subscribed to Call Waiting, you must first activate it through the Options menu (see "Activating Call Waiting" on page 83). After you activate it, you are notified of incoming calls while you are on the line in two ways. When a call comes in, you hear a beep and see the message Call Waiting followed by Answer?.

| If you want to | Then |
|--|--|
| accept the waiting call | Press &. Your current call is placed on hold. |
| reject the waiting call | Press G . |
| end current call before answering the waiting call | Press . You will see End Active Call Press . Your phone rings and can now be answered normally. |

You may see one of the following messages during call waiting activities:

| Message | Description |
|----------------------------|--|
| Tryin9 | Your phone is attempting to switch between the current and held call. |
| Hold Failed | The attempt to hold a call was unsuccessful. |
| Cannot Hold Second Call | A call is already on hold. You can only place one call on hold. |
| Reconnect Failed | The held call could not be made active again. |
| Busy Try Later | Your phone is working on a previous command. Wait a short time before repeating the new command. |

Placing a Call on Hold

You must subscribe to this network feature through your service provider(s).

You can place a call on hold to receive a new call or while making a new call. You can only place one call on hold at a time, so some options may not be accessible if you have already placed a call on hold.

To place a call on hold:

- 1. Press until you see Hold Call.
- 2. Press . Your current call is put on hold and you will see Call Holding followed by Reconnect?.

Once your call is on hold, you have these options:

| If you want to | Then |
|----------------------|---|
| make a new call | 1. Press until you see Make New Call, and then press to select. 2. Dial the number as usual, and then press to place the call. |
| switch between calls | When you are connected to either number, you will see 2 Calls followed by Switch?. Press to switch to the other call and automatically place the current call on hold. |
| end both calls | Press until you see End Active & Held Call, and then press to select. Both calls are disconnected, and the display returns to standby. |
| end current call | Press at any time. |

| If you want to | Then |
|-----------------------------|---|
| end call that is on hold | Press until you see End Held Call, and then press to select. The held call is disconnected, the current call remains connected, and you see End Call? |

You may see one of the following messages:

| Message | Description |
|----------------------------|--|
| Tryin9 | Your phone is attempting to switch between the current and held call. |
| Hold Failed | The attempt to hold a call was unsuccessful. |
| Cannot Hold Second Call | A call is already on hold. You can only place one call on hold. |
| Reconnect Failed | The held call could not be made active again. |
| Busy Try Later | Your phone is working on a previous command. Wait a short time before repeating the new command. |

Using the Menus

Many of your phone's features are organized into lists of options called *menus*. There are three menus: the Options menu, the Quick Access menu, and the In-Call menu. Some of these options give you access to additional lists of options called *submenus*.

Learn how to navigate through your phone's three main menus. Once you become familiar with these menus and their features, go to "Customizing the Menu System" on page 137 for instructions on how you can personalize your menus.

What You Will Learn

- · using the Options menu
- using the Quick Access menu
- using the In-Call menu

Using the Options Menus

The Options menu gives you access to the features and options included with your phone.

Navigate the Options Menus

Learning how to use just a few keys enables you to move freely through the entire menu system.

| If you want to | Then |
|---------------------------------------|---|
| enter the Options menu | Press to access the Options menu. You will see the first available submenu. |
| scroll through the Options menu | Press to scroll forward. Press to or to scroll backward or forward. |
| select options and submenus | Press to select a menu option or submenu when that option or submenu name is displayed. |
| exit features and menus | Press to exit the feature or submenu. Press and hold to exit the Options menu. |

Note: If you press during a call, you will see the In-Call menu which is described on page 48.

How the Phone Responds

As you scroll through the Options menu, you will see one of three questions on the bottom line of the display.

| If your phone asks | Then |
|--------------------|--|
| View Options? | Press to enter the submenu. |
| Select? | Press to select the displayed feature. |
| Quit? | Press or to exit the feature. |

Display Messages and Icons

| If you see | Then | |
|-----------------|--|--|
| ☑ Completed | This indicates a feature has been activated. | |
| 7 Failed | The display returns to the menu in a few seconds. | |
| Enter PIN | F | |
| or | Enter requested information. Then press OK . | |
| Enter Name | | |
| Busy Try Later | You may have requested information while your phone was completing another task. | |
| Î | This indicates where you are in a menu. | |
| × | Your phone may take a few seconds to request settings from the network. | |

Customize the Options Menu

To personalize the Options menu—to hide and move features—see "Move Menu Features" on page 138.

Using the Quick Access Menu

The Quick Access menu is a way to keep your favorite menu options readily accessible. Each digit key, to , has a Quick Access feature assigned to it. See the chart on page 47 for the default setup.

If you know the number of the feature, activating that option takes only two button pushes! If you do not know the number or want to review your options, just scroll through the icon menu and read the tag attached to each option.

Activate the Feature Directly

To access the feature directly:

Press (a), and then **press** the digit key of the feature.

Scroll to the Feature

To scroll to the feature:

- 1. Press 🚹
- **2. Press** to scroll through the available features.

or

- **Press** (*) or **) to scroll backward and forward.
- **3. Press o** to select a feature.

Default Quick Access Settings

The following features (and associated icons) are the default settings for the Quick Access menu.

| Key | lcon | Quick Access Feature |
|--------|------------|--|
| • | Æ | Find Name searches your Phone Book by the full name. |
| 2 abc | ((*)) | Check Signal checks the strength of the signal from the satellite network. |
| 3 def | EZ)) | Call Voicemail calls your Voicemail number to check your Voicemail. |
| 4 ghi | Ħ | Mute Phone mutes the phone. |
| 5 jkl | ₽ | Lock Now locks your phone immediately. |
| 6mno | Ú. | Adjust Ring displays and sets the incoming call ring tone volume. |
| 7 pqrs | ₽ + | Read Messages displays the newest message received |
| 8 tuv | į. | Register Now initiates a systematic manual search for a network on which to register. You must wait three minutes between registration attempts. |
| 9wxyz | ď | Forward On/Off activates or deactivates unconditional call forwarding depending on the current setting. |

Customize the Quick Access Menu

See "Personalizing the Quick Access Menu" on page 140 for instructions on how to customize the menu.

Using The In-Call Menu

This menu lets you access specific features while you are in a call. Because this menu is not available until you are actually in a call, you cannot review it off-line

Entering the In-Call Menu

While you are in a call:

Press to view the In-Call menu features.

In-Call Menu Features

The In-Call menu dynamically changes depending on the type of call you are in.

| single active call | Hold Call Make New Call Turn Mute on or off |
|---------------------------------|---|
| held call | Make New Call End Active Call |
| active call and a call waiting | End Active Call Reject Call Waitin9 Turn Mute on or off |
| active call and a held call | End Active Call Turn Mute on or off End Held Call End Active & Held Call |
| held call and a call waiting | Reconnect Held Call Reject Call Waitin9 End Held Call? |

Managing the Phone Book

Your satellite phone can store up to 100 names and numbers, and your SIM card expands memory capacity even more.

Use the dedicated keys or the Options menu to access the same functions. With the Options menu you can also access Phone Book maintenance and security features.

What You Will Learn

- recalling and storing phone numbers
- organizing the Phone Book
- · accessing automated calling systems
- storing phone number prefixes
- · restricting calls with fixed dialing
- editing the memory information
- viewing your own phone number

Entering the Phone Book Menu

To enter the Phone Book menu:

- 1. Press to open the Options menu.
- 2. Press to scroll forward.

or

Press • or • to scroll backward or forward.

3. Press or when you see:




4. Press (III) to scroll through the submenu.

or

Press • or • to scroll backward or forward through the submenu.

What's on the Phone Book Menu?

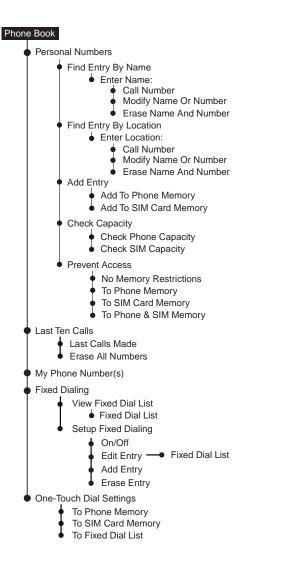

Organizing Your Phone Book

Each name and phone number in your Phone Book is stored in a numbered memory location. The satellite phone has two types of memory—phone memory and SIM card memory.

| | Phone Memory | SIM Card Memory ¹ |
|------------------------|--------------|---------------------------------|
| Personal Numbers | 100 entries | 155 entries |
| Fixed Dial Numbers | No entries | 40 entries |
| Phone Number Digits | 32 | 20 |
| Name Characters | 16 | 16 |
| Location Numbers | 1-100 | 101-255 |

¹ SIM card capacity varies depending upon the card issued by your service provider.

Your phone's memory can seem overwhelming if you do not have a strategy for organizing your Phone Book. Begin setting up your Phone Book by asking yourself three questions:

Which numbers do I call most?

Make a list of the numbers you call most frequently. You will probably want to store these numbers in the first nine memory locations of your Phone Book. You can then dial them with a single keystroke by using One-Touch dialing.

When do I use these numbers?

Group the numbers on the list according to when you use them. Most people call a different set of numbers during the day than they do in the evening and on weekends. You can switch one-touch dialing to your phone's memory (locations 1–9), your SIM card's memory (locations 101–109), or to your fixed dial list (locations 1–9). Store your evening and weekend numbers on one type of memory and your daytime numbers on another.

Which numbers do I need to keep secure?

Use your SIM card to store the numbers you need to keep secure, like the numbers of friends and family members. Because your SIM card is the size of a credit card, you can easily keep it securely in your wallet when you are not using it. If you wish, you can even require a PIN code every time your SIM card is inserted into *any* phone. (To deactivate your PIN code, see "Activate and Deactivate the SIM Card PIN Code" on page 105.) Store more public numbers, like business associates and travel agents in your phone's memory.

Tip: If you have many entries, group them in blocks of ten to make them easier to find.

Getting to Personal Numbers...

- 1. Press on until you see Phone Book, and then press on.
- 2. Press on until you see Personal Numbers, and then press on.
- 3. Press to scroll to one of the features described below.

Storing Names and Numbers

Add an Entry

Use the Options Menu

- 1. Follow the steps in "Getting to Personal Numbers..." to get to Add Entry, and then press ...
- Press to scroll to Add to Phone Memory or Add to SIM Memory.
- 3. Press of to select. You will see Enter Number.
- Enter a name (see "Entering Names" on page 56), and then press or. You will see Enter Location.
- Enter a location number, 1-100 for phone memory or 101-255 for SIM memory*, and then press . You will see Stored XXX.

or

Press to select the next available location. You will see Stored XXX.

7. Press and hold (a) to exit the menu.

Tip: Numbers must be entered in international format.

^{*} SIM memory is dependent on your SIM card.

Use the Dedicated Keys

- 1. Enter the phone number you want to store.
- 2. Press to begin storing.
- 3. Press to scroll to the desired memory type Add to SIM Card Memory or Add to Phone Memory, and then press . You will see Enter Number, followed by the number you entered.
- 4. Press of to accept the number. You will see Enter Name.
- Enter a name (see "Entering Names" on page 56), and then press . You will see Enter Location.
- Enter a three-digit location number, and then press . You will see Stored XXX.

or

Press os to store the entry in the next empty memory location. You will see Stored XXX.

Adding Entry Messages

When you enter the location number for your entry, you may see one of these messages:

| Message | Description |
|--------------|---|
| Stored XXX | You have stored the entry. |
| Range XXX-XX | You have chosen a memory location outside the appropriate range. Enter a new number within the range listed on the display. |
| Overwrite? | You have chosen an occupied location. Press to overwrite the location or press any other key to try another location. |

Tip: If you have more than one number for the same person, try attaching a descriptive tag to the name, like Home, Office, or Mobile.

Entering Names

You can use the keypad to produce any letter in the alphabet. For example, press **2** to enter the letters A, B, or C, as shown:



Enter Characters

- **1. Enter a letter** by pressing a key as many times as necessary.
- 2. Press (*) or (*) to advance the cursor.
- 3. Repeat steps 1 and 2 as many times as necessary, and then press **®**.

Correct an Entry

To make a change:

- 1. Press (*) or (*) to scroll to the character you want to delete.
- Press to delete one character at a time.

Press and hold to clear the display.

Tip: Press and hold any numeric key to toggle between uppercase and lowercase characters.

Available Characters

Use this chart as a guide for producing characters:

```
Space . 1 ? ! , @ _ & : " ( ) ' ¿ ; % £ $
       Space . 1 ? ! , @ _ & : " ( ) ' ¿ ; % £ $
       авс 2 Ä Å à Æ В Ç
2 abc
       abc2äåàæβç
       DEF3\DeltaÉè\Phi
3 def
       def3\Deltaéè\Phi
       GHI4Γì
       ghi4Γì
       JKL5 \Lambda
       jkl5\Lambda
       миобйо́оо̀ О
       mno6ñöøò\Omega
       PQRS7\Pi$\Sigma
       pqrs7ΠßΣ
       τυν 8 Θ ΰ ὰ
       tuv8Θüù
       wxyz9\Xi\Psi
       w х у z 9 ΞΨ
       + - 0 \times * / = > < #
O±
       + - 0 x * / = > < #
```

The upper line for each key shows the uppercase characters. The lower line for each key shows the lowercase characters.

Using Pauses in Numbers

When you call automated systems, a recorded message prompts you for numbers such as PIN numbers and account numbers. You can store these numbers in the same memory location as the automated system's access number. Separate the numbers with "pauses"—special characters that tell your phone to wait a few seconds before sending additional numbers—and store the string in the same way you would other numbers.

Tip: You can store 32 characters in a phone memory location, or 20 characters in a SIM card memory location. A pause is equal to one character.

Enter Pauses in Numbers

- **1. Enter the phone number** you use to access the automated system.
- Press and hold . You will see a pause character (a) inserted into the number entry.
- Enter the next group of numbers. For example, enter your PIN number. If the automated system requires a * or #, enter those symbols, too.
- **4.** Repeat steps 2 to 3 as many times as necessary.
- **5.** To store the entry follow the procedures in "Add an Entry" on page 54.

Dial Numbers With Pauses

To dial a number with pauses:

- Recall the entry. (See "Locating Entries" on page 60.)
- 2. Press ox to place the call.

The first pause in the number waits until the call is answered. When the automated system answers, your phone waits a few seconds and then automatically sends the next set of numbers, then the next, until all numbers are sent.

Using Phone Number Prefixes

You can save time when you dial by storing the prefixes that you often use. This is sometimes called "postscripting." Your satellite phone allows you to change or add to Phone Book entries without overwriting them.

Store a prefix in your Phone Book just as you would any other number. See "Storing Names and Numbers" on page 54.

Use a Stored Prefix

To use a stored prefix:

- 1. Recall the prefix from your Phone Book. (See "Locating Entries" on page 60.)
- 2. Add the remaining numbers.
- 3. Press ox to place the call.

Change Entry to a Similar Number

To change an entry to a similar number:

- **1. Recall the number** from your Phone Book. (See "Locating Entries" on page 60.)
- 2. Press (a) to delete the unwanted digits.
- 3. Enter the replacement digits.
- 4. Press or to place the call.

Tip: Try naming the prefix by area, like Downtown, Suburbs, or Germany.

Getting to Personal Numbers...

- 1. Press until you see Phone Book, and then press o.
- 2. Press 🚥 until you see Personal Numbers, and then press 🐼.
- 3. Press to scroll to one of the features described below.

Locating Entries

Find an Entry by Name

Search your Phone Book by the first few letters of the entry.

Note: If you have restricted access to either SIM card or phone memory, those entries will not be available. For more information, see "Preventing Access to the Phone Book" on page 64.

- 1. Follow the steps in "Getting to Personal Numbers..." to get to Find Entry By Name, and then press of to select. You will see Enter Name.
- Enter one to three characters of the entry, and then press . If necessary, scroll to the entry you are looking for.
- Press to access options for that entry, and then proceed to "Calling, Modifying, or Erasing an Entry" on page 62.

Tip: Your phone sorts SIM card memory and phone memory together alphabetically

Find an Entry by Location

If you know the location number of the entry, here is an easy way to recall it.

Use the Options Menu

- 1. Follow the steps in "Getting to Personal Numbers..." to get to Find Entry By Location, and then press to select. You will see Enter Location.
- Enter the location number, and then pressYou will see the entry displayed.

If you enter an empty location number, you will see Location XXX is Empty. Your phone then selects the next largest available location. If there are no numbers stored, you will see No Numbers Stored.

3. Press of to access options for that entry, and then proceed to "Calling, Modifying, or Erasing an Entry" on page 62.

Use the Dedicated Keys

- 1. Press M.
- **2.** Enter the three-digit location number of the entry, and then press **a**.

If you enter an empty location number, you will see Location XXX is Empty. Your phone then selects the next largest available location. If there are no numbers stored, you will see No Numbers Stored

Press to call the displayed entry. You will see the number followed by Calling.

Calling, Modifying, or Erasing an Entry

Once you have selected a Phone Book entry, you can call, change, or erase that entry.

Call a Selected Entry

- 1. Find an entry, and then press **®**. See "Locating Entries" on page 60.
- 2. Press until you see Call Number, and then press . You will see Calling followed by the number you dialed.

Modify a Name or Number

- **1. Find an entry**, and then **press ®**. See "Locating Entries" on page 60.
- 2. Press until you see Modify Name or Number, and then press . You will see Edit Number, followed by the phone number stored in that entry.
- 3. Enter changes to the number, and then press . You will see the name stored in that entry.
- 4. Enter changes to the name, and then press • You will see Modified XXX.

Erase a Name and Number

- **1. Find an entry**, and then **press 3**. See "Locating Entries" on page 60.
- Press until you see Erase Name and Number, and then press . You will see Erased xxx.

Tip: For help entering letters or changing entries, see "Entering Names" on page 56.

Getting to Personal Numbers...

- 1. Press on until you see Phone Book, and then press on.
- 2. Press until you see Personal Numbers, and then press ok.
- 3. Press (EN) to scroll to one of the features described below.

Checking Phone Book Capacity

Use this feature to see how many available memory locations you have in either SIM card memory or phone memory.

- 1. Follow the steps in "Getting to Personal Numbers..." to get to Check Capacity, and then press on to select.
- 2. Press until you see Check Phone
 Capacity or Check SIM Capacity, and then
 press (). You will see XXX Unused
 Locations.
- **3. Press and hold** to exit the menu.

Getting to Personal Numbers...

- 1. Press until you see Phone Book, and then press ok.
- 2. Press on until you see Personal Numbers, and then press on.
- **3. Press** to scroll to one of the features described below.

Preventing Access to the Phone Book

You may want to restrict memory access when loaning your phone to others. You can choose to prevent access to the phone memory, SIM memory, or both.

- 1. Follow the steps in "Getting to Personal Numbers..." to get to Prevent Access, and then press to select.
- Press until you see the restriction type you desire: No Memory Restrictions, To SIM Card Memory, To Phone Memory, or To Phone & SIM Memory.
- 3. Press on to select the displayed option. You will see Enter Security Code.
- Enter security code. Enter your six-digit security code. You will see Completed.
- **5. Press and hold ©** to exit the menu.

Notes:

- If you prevent access to both your phone memory and SIM memory and then try to access an entry, you will see Restricted.
- If you restrict access to either your phone memory or SIM memory and try to access an entry stored in that type of memory, you will see a list of the entries that are not restricted.

Tip: The factory default security code is: 000000.

Getting to Fixed Dialing...

- 1. Press until you see Phone Book, and then press .
- 2. Press until you see Fixed Dialing, and then press .
- 3. Press to scroll to one of the features described below.

Restricting Phone Use

With the fixed dialing feature, you can restrict calling on your phone to a list of numbers that you create. When this feature is active, you can only call numbers or use prefixes (for example, country codes or area codes) that exactly match those that are stored in your list. You can store up to 40 entries on your fixed dial list. These entries are stored on your SIM card.

Activate Fixed Dialing

Use this option to activate fixed dialing.

Note: The fixed dialing feature restricts access to your SIM memory.

- Follow the steps in "Getting to Fixed Dialing..." to get to Setur Fixed Dialing, and then press or to select. You will see Enter PIN2
- Enter code. Enter your SIM card PIN2 code, and then press .
- 3. Press until you see On or Off, and then press OK. You will see Completed.
- **4. Press and hold** to exit the menu.

Tip: You should have received your SIM card PIN2 code from your service provider.

Getting to Fixed Dialing...

- 1. Press until you see Phone Book, and then press ox.
- 2. Press until you see Fixed Dialing, and then press ox.
- **3. Press** to scroll to one of the features described below.

Add an Entry

To add an entry:

- Follow the steps in "Getting to Fixed Dialing..." to get to Setur Fixed Dialing, and then press or to select. You will see Enter PIN2.
- 2. Enter code. Enter your SIM card PIN2 code, and then press .
- 3. Press until you see Add Entry, and then press OK. You will see Enter Number.
- Enter the number, and then press . You will see Enter Name.
- Enter the name, and then press . You will see Enter Location.
- **6. Enter a location number**, and then **press ok**. You will see Completed.
- 7. Press and hold **(c)** to exit the menu.

Tip: Phone numbers must be in international format.

Tip: See "Entering Names" on page 56 for help entering letters.

Erase an Entry

To erase an entry:

- Follow the steps in "Getting to Fixed Dialing..." to get to Setur Fixed Dialing, and then press or to select. You will see Enter PIN2.
- Enter code. Enter your SIM card PIN2 code, and then press .
- 3. Press until you see Erase Entry, and then press to select. You will see the first entry in your fixed dial list.
- 4. Press to scroll to the number you wish to erase. You will see Enase?.
- 5. Press of to confirm. You will see Completed.
- **6.** Press and hold **(C)** to exit the menu.

Getting to Fixed Dialing...

- 1. Press until you see Phone Book, and then press ok.
- 2. Press until you see Fixed Dialing, and then press ok.
- **3. Press** to scroll to one of the features described below.

Edit an Entry

To edit an entry:

- Follow the steps in "Getting to Fixed Dialing..." to get to Setur Fixed Dialing, and then press to select. You will see Enter PIN2.
- Enter code. Enter your SIM card PIN2 code, and then press .
- 3. Press until you see Edit Entry, and then press of to select. You will see the first entry in your fixed dial list.
- **4. Press** to scroll to the entry you want to change, and then **press** Nou will see the current number for that location.
- Enter changes to the number, and then press . You will see the current name for that location.
- Enter a new location, and then press You will see Completed.
- **8.** Press and hold **(c)** to exit the menu.

View Your Fixed Dialing List

This feature enables you to review, but not change, your fixed dial list.

- 1. Follow the steps in "Getting to Fixed Dialing..." to get to View Fixed Dial List, and then press of to select. You will see the first number on your fixed dial list.
- 2. Press to scroll through the numbers on your fixed dial list.
- 3. Press and hold (a) to exit the menu.

Getting to Phone Book Features...

- 1. Press until you see Phone Book, and then press o.
- **2.** Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Viewing the Last Ten Numbers Dialed

Don't worry about forgetting the number you dialed earlier. The last ten numbers you dialed are saved.

- 1. Follow the steps in "Getting to Phone Book Features..." to get to Last Ten Calls, and then press to select.
- Press to scroll to Last Calls Made or Erase All Numbers, and then press to select.
- If you select Last. Calls Made, press to scroll to the number you are looking for, and then press to place a call to that number.

or

If you select Erase All Numbers, you will see Completed.

4. Press and hold © to exit the menu.

Tip: If you want to add a number from Last. Ten Calls to your Phone Book, press when the number is displayed, then follow the steps in "Storing Names and Numbers" on page 54.

Viewing and Modifying Your Phone Numbers

View Your SIM Phone Number(s)

You can program fax, data, and other types of phone numbers into your SIM card in addition to your voice phone number. Use this feature to view your phone number(s). You can have up to five phone numbers.

- Follow the steps in "Getting to Phone Book Features..." to get to My Phone Number(s).
- 2. Press of to select. You will see your phone's voice number followed by Modify?.
- 3. Press (EN) to scroll through your numbers.
- **4. Press and hold** to exit the menu.

Note: If you do not see your number(s), they have not been programmed onto your SIM card. Contact your service provider for more information.

Modify Your Phone Numbers

If you have recently switched your phone number, use this feature to quickly store recent information.

- Complete the steps in "View Your SIM Phone Number(s)" on page 71 to get to the number you want to modify.
- 2. Press or to modify the number. You will see Edit. Number followed by the number for the selected entry.
- 3. Enter changes to the number, and then press 3. You will see Edit. Name followed by the name for the entry selected.
- Enter changes to the name (see "Entering Names" on page 56) and then press . You will see Stored.
- **5.** Press and hold **(C)** to exit the menu.

Tip: Pressing

also
brings up your
phone number.

Getting to Phone Book Features...

- 1. Press until you see Phone Book, and then press ok.
- **2. Press** to scroll to one of the features described below. You will see the feature name, followed by Select?.

One-Touch Dialing

One-touch dialing enables you to place calls instantly. You can choose to dial the phone numbers in the first nine memory locations in either your SIM memory, phone memory, or your fixed dial list. You choose which type of memory you want to be active with this feature.

Set Up One-Touch Dialing

- Follow the steps in "Getting to Phone Book Features..." to get to One-Touch Dial Setting, and then press of to select.
- 2. Press to scroll through To Phone
 Memory, To SIM Card Memory, or To Fixed
 Dial List, and then press or to select the
 displayed option. You will see Completed.
- **3. Press and hold** to exit the menu.

Use One-Touch Dialing

Using one-touch dial is easy—just press and hold a keypad digit! To use one-touch dialing:

Press and hold the appropriate digit key.

For example, press and hold to dial the number stored in location 2 of your phone memory, location 2 of your fixed dial list, or 102 of your SIM memory, depending on your setting.

Tip: You do not need to press to call the number when you are using one-touch dialing.

Using Calling Features

This chapter describes call-related features. Many of these features are network features that you must subscribe to in order to access.

What You Will Learn

- showing the strength of the signal your phone is receiving
- activating/deactivating the Pending Call Drop signal
- forwarding calls when you are not available
- restricting use of your phone

Entering the Call Related Features Menu

To enter the Call Related Features menu:

- 1. Press to open the Options menu.
- 2. Press (IN) to scroll forward.

or

Press • or • to scroll backward or forward.

3. Press or when you see:




4. Press (III) to scroll through the submenu.

or

Press • or • to scroll backward or forward through the submenu.

What's on the Call Related Features Menu?

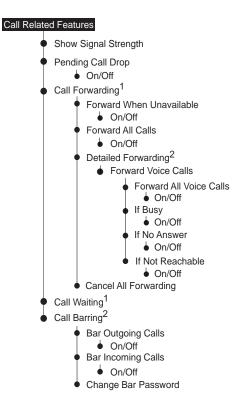

- 1 This feature is network and subscription dependent.
- 2 This feature is network and subscription dependent. It is available only when the extended menu is activated.

Getting to Call Forwarding...

- Press until you see Call Related Features, and then press .
- 2. Press until you see Call Forwarding, and then press .
- **3. Press** to scroll to one of the features described below.

Forward Calls When Unavailable

Use this feature when you can't answer a call. You must subscribe to this network feature through your service provider(s).

To activate this feature:

- 1. Follow the steps in "Getting to Call Forwarding..." to get to Forward When Unavailable, and then press on to select.
- 2. Press to scroll to On or Off, and then press of to select.
 - If you select On, continue with **step 3**.
 - If you select Off, continue with **step 5**.
- 3. Press to scroll to Voicemail or Other Number, and then press to select.
 - If you select Voicemail, continue with step 5.
 - If you select Other Number, then you will see Enter Number. Continue with **step 4**.
- 4. Enter the number you want calls forwarded to, and then press . Your phone takes a moment to request the setting from the network, and then you will see Call Forward On.
- **5.** Press and hold **(C)** to exit the menu.

Tip: If you have not yet stored a voicemail number, go to page 91 to learn how.

Forward All Your Calls

When you select this option, all your calls are forwarded to the number you choose. Your phone does not ring. You must subscribe to this network feature through your service provider(s).

To activate this feature:

- 1. Follow the steps in "Getting to Call Forwarding..." to get to Forward All Calls, and then press of to select.
- 2. Press to scroll to either On or Off, and then press to select.
 - If you select On, continue with step 3.
 - If you select Off, continue with step 5.
- 3. Press to scroll to Voicemail or Other Number, and then press to select.
 - If you select Voicemail, continue with **step 5.**
 - If you select Other Number, then you will see Enter Number. Continue with step 4.
- **4.** Enter the number you want all your calls forwarded to, and then press **3**.

Your phone takes a moment to request the setting from the network, and then you will see Call Forward On.

5. Press and hold **(C)** to exit the menu.

Tip: If you have not yet stored a voicemail number, go to page 91 to learn how.

Getting to Call Forwarding...

- 1. Press until you see Call Related Features, and then press ox.
- 2. Press until you see Call Forwarding, and then press .
- **3. Press** to scroll to one of the features described below..

Detailed Call Forwarding

Detailed Call Forwarding lets you select the specific situations when you want your calls forwarded. The settings you select in Forward When Unavailable and Forward All Calls override the settings you select here.

Tip: For information on retrieving messages, see "Accessing Messages" on page 94.

You must subscribe to this network feature through your service provider(s).

Note: This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 109 for more information.

- Follow the steps in "Getting to Call Forwarding..." to get to Detailed Forwarding, and then press on to select.
- 2. Press to scroll to Forward Voice Calls, then press or to select.
- 3. Press to scroll to the option you desire
 Forward All Voice Calls, If Busy, If No
 Answer, or If Not Reachable.
- **4. Press** or to select the displayed option.
- 5. Press to scroll to either Voicemail or Other Number, and then press or.
 - If you select Voicemail, continue with **step 7**.
 - If you select Other Number, then you will see Enter Number. Continue with step 6.

Tip: If you have not yet stored a voicemail number, go to page 91 to learn how.

- **6. Enter the number** you want calls forwarded to, then **press** Your phone takes a moment to request the setting from the network, then displays Call Forward On.
- **7. Press and hold** to exit the menu.

Getting to Call Forwarding...

- 1. Press until you see Call Related Features, and then press OK.
- 2. Press until you see Call Forwarding, and then press ok.
- **3. Press** to scroll to one of the features described below.

Cancel All Forwarding

Use this option to clear all Call Forwarding settings.

To cancel Call Forwarding settings:

1. Follow the steps in "Getting to Call Forwarding..." to get to Cancel All Forwarding, and then press ox to select.

You will see Call Forward Off. All Call Forwarding settings are now set to Off.

2. Press and hold **(a)** to exit the menu.

Getting to Call Related Features...

- 1. Press until you see Call Related Features, and then press ox.
- Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Showing Signal Strength

Use this feature to check the strength of the signal that your phone is receiving from the Iridium satellite network.

- Follow the steps in "Getting to Call Related Features..." to get to Show Signal Strength.
- 2. Press or to select. You will see:



After a few seconds, if the phone is able to locate a signal, the signal strength indicator appears in the upper left corner of the display.

The signal strength meter remains on the display for several seconds. If the phone cannot locate a signal, you will see Weak Signal.

3. Press and hold to exit the menu.

Getting to Call Related Features...

- Press until you see Call Related Features, and then press .
- 2. Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Deactivating Pending Call Drop Signal

Under rare circumstances, due to system overcapacity or a satellite outage, a satellite may not be available to take your call. When this happens, your phone notifies you with a series of three consecutive tones and displays Pending Call Drop. The tones continue periodically until a new satellite moves into range or the call is dropped.

To deactivate the alert tones:

- Follow the steps in the "Getting to Call Related Features..." to get to Pending Call Drop, and then press of to select.
- 2. Press to scroll to either On or Off, and then press or to select.
- 3. Press and hold (a) to exit the menu.

Activating Call Waiting

Subscribers to call waiting can use this feature to decide whether or not to take incoming calls while on the line. To activate call waiting:

- 1. Follow the steps in "Getting to Call Related Features..." to get to Call Waiting, and then press (R) to select.
- 2. Press to scroll to On or Off, and then press of to select the desired option.
- 3. Press and hold (to exit the menu.

For information on using call waiting, see "Using Call Waiting" on page 39.

Getting to Call Barring...

- Press until you see Call Related Features, and then press .
- 2. Press until you see Call Barring, and then press ok.
- **3. Press** to scroll to one of the features described below. You will see the feature name, followed by Select?.

Restricting Calls with Call Barring

You can use call barring to restrict both incoming and outgoing calls. Call barring is useful if you are loaning your phone to others or when you wish to control incoming calls. When you change one of your call barring settings, your phone takes a few seconds to request the setting from the network.

Note: This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 109 for more information.

Bar Outgoing Calls

This setting enables you to receive incoming calls but prevents outgoing calls.

To activate this feature:

- 1. Follow the steps in "Getting to Call Barring..." to get to Bar Outgoing Calls, and then press on to select.
- Press to scroll to On or Off, and then press to select.

You will see Enter Password.

- **3. Enter your bar password**, and then **press OK**. You will see Completed.
- **4. Press and hold** to exit the menu.

Tip: Your service provider gives you a bar password.

Bar Incoming Calls

This setting allows you to place calls, but refuses incoming calls. Callers hear a recording telling them you are unavailable. To be sure not to miss a call see "Detailed Call Forwarding" on page 78.

To activate this feature:

- Follow the steps in "Getting to Call Barring..." to get to Bar Incoming Calls, and then press to select.
- 2. Press to scroll to On or Off, and then press of to select.

You will see Enter Password.

- 3. Enter your bar password, and then press . You will see Completed.
- **4. Press and hold** to exit the menu.

Tip: Your service provider gives you a bar password.

Getting to Call Barring...

- Press until you see Call Related Features, and then press ox.
- 2. Press until you see Call Barring, and then press ok.
- **3. Press** to scroll to one of the features described below. You will see the feature name, followed by Select?.

Change Bar Password

When you subscribe to call barring, your service provider gives you a four-digit bar password. Use this feature to change it to something easy to remember.

- 1. Follow the steps in "Getting to Call Barring..." to get to Change Bar Password, and then press of to select. You will see Enter Password.
- 2. Enter bar password, and then press **o**k. You will see Enter New Password.
- 3. Enter the new bar password, and then press **®**.
- **4. Enter the new bar password** again to confirm, and then **press** ••.
- **5. Press and hold** to exit the menu.

Tip: If you are changing the password for the first time, use the password supplied by your service provider.

Using Message Services

Did you know that you can receive voicemail and fax notification messages and numeric and text messages through your Personal Mailbox service—wherever in the world you may be? Wherever you are, you will have instant reference to all your communication.

What You Will Learn

- checking your voicemail messages
- reading, saving and deleting messages

Entering the Messages Menu

To enter the Messages menu:

or

Press to open the Options menu and then go on to **step 2**.

2. Press to scroll forward.

or

Press (*) or (*) to scroll backward or forward

3. Press on when you see:



4. Press to scroll through the submenu.

or

Press • or • to scroll backward or forward through the submenu.

What's on the Messages menu?

Messages

- Call Voicemail
- Received Messages
 - Go to Next Message
 - Delete Message
- Return Call
- Message Settings
 - Voicemail Number

Getting to Message Features...

- 1. Press on until you see Messages, and then press on.
- 2. Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Checking Your Voicemail

Important: This feature makes checking your voicemail simple.

- **1. Follow the steps in** "Getting to Message Features..." to get to Call Voicemail.
- Press or to select. You will see your voicemail number followed by Calling.

If you have not previously stored a voicemail number, then you will see No Number Available. See "Storing Your Voicemail Number" on page 91 for instructions on how to enter a number.

Storing Your Voicemail Number

To store a voicemail number:

- 1. Follow the steps in "Getting to Message Features..." to get to Message Settings, and then press or to select.
- 2. Press of to select Voicemail Number. You will see Enter Voicemail Number followed by your current voicemail number. If this is the first time you have stored a number, continue with to step 4.
- Press to clear one digit at a time, or press and hold to erase the entire number.
- 5. Press and hold (a) to exit the menu.

Tip: Use pause dialing to store your voicemail access and PIN numbers together. See "Using Pauses in Numbers" on page 58.

Managing Your Messages

How Your Phone Notifies You of Messages

If your phone is powered on, it notifies you of received messages in the following ways:

- An alert sounds.
- Your phone beeps three times to inform you of an incoming message.
- The (message) indicator is displayed.
- The message is displayed immediately if the message is a fax or voicemail notification message. The message remains on the display for several seconds.

or

Message Read Now? **is displayed** if the message is an alphanumeric, text message of up to 160 characters. For more information see "Read a New Message" on page 94.

How Messages Are Stored

Your phone stores all messages on your SIM card. The total number of messages that you can store depends on your service provider.

If the message indicator is flashing, your SIM card is full. See "Delete Messages" on page 95 to make room for the new message.

What Messages Contain

You can receive short text or numeric messages in your Personal Mailbox. Text messages may contain up to 160 characters. Numeric messages—typically phone numbers—may contain up to 20 digits.

Your personal mailbox works along with Call Forwarding. For more information see "Personal Mailbox" on page 31, and the Call Forwarding feature descriptions on pages 76-80.

Messages contain multiple screens with the following information:

- the message
- the date and time the message was sent
- the phone number (if available) from which the message was sent

Accessing Your Messages...

- 1. Press 🖦 until you see Messages, and then press 🕟.
- 2. Press until you see Received Messages, and then press o.
- **3. Press** to scroll to one of the features described below.

Accessing Messages

Read a New Message

Notification Messages

When you receive an incoming fax or voicemail notification message, it automatically scrolls across your screen. You can:

- Press ox to store it on your SIM card.
- Press (a) to delete it.

Text Messages

When you receive a new alphanumeric message, you will see Message Read Now? To read it:

1. Press ox and continue with step 2.

or

Press • to read the message later. See "Read a Stored Message" on page 95.

- **2. Press** to move forward through a message one screen at a time.
- **3. Press** to access options for that entry, then proceed to page 96.

Read a Stored Message

To read a stored message:

- Follow the steps in "Accessing Your Messages..." to enter the message center. If you have messages you will see the number of messages stored. If you do not have any messages, you will see No Messages.
- 2. Press to move forward through a message one screen at a time.
- **3. Press** of to access options for that entry, and then proceed to page 96.

or

Press and hold (a) to exit the menu.

Delete Messages

Use this option to make room for new messages:

- 1. Follow the steps in "Go to the Next Message" on page 96 until you see the message you want to delete, and then press .
- Press until you see Delete Message, and then press . You will see Message Deleted.
- 3. Press and hold (a) to exit the menu.

Accessing Your Messages...

- 1. Press on until you see Messages, and then press on.
- 2. Press until you see Received Messages, and then press ox.
- **3. Press** to scroll to one of the features described below.

Go to the Next Message

To go to the next message:

- **1. Follow the steps** in "Read a Stored Message" on page 95.
- 2. Press until you see Go To Next. Message and then press or.

You will see the next message. If you are at the end of your message list you will see the first message again.

- **3. Press** to move forward through a message one screen at a time.
- Repeat steps 2 to 3 until you have read all your messages.
- **5.** Press and hold **(C)** to exit the menu.

Return a Call

A callback number appears in quotes within the message. If one is enclosed, you can instantly place a call to that number. If one is not included, your phone selects the first number in the message.

- 1. Follow the steps in "Go to the Next Message" on page 96 to display the desired message, and then press .
- 2. Press until you see Return Call.
- 3. Press to place a call to that number. You will see the number followed by Calling.

Customizing Phone Features

Once you are comfortable with the basic features of your new phone, use this chapter to set up your phone the way you like it.

What You Will Learn

- · adjusting your phone's ringer volume
- · choosing from ten different ringer styles
- choosing your phone's keypad tones
- locking and unlocking your phone
- changing and setting codes for security
- resetting or clearing your phone's settings
- selecting the language displayed by your phone

Entering the Phone Setup Menu

To enter the Phone Setup menu:

- 1. Press to open the Options menu.
- 2. Press (IN) to scroll forward.

or

Press • or • to scroll backward or forward.

3. Press on when you see:




4. Press (III) to scroll through the submenu.

or

Press • or • to scroll backward or forward through the submenu.

What's on the Phone Setup Menu?

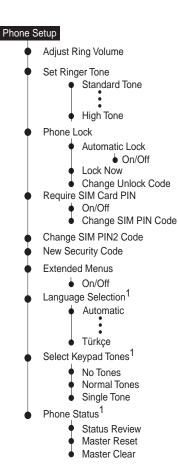

¹ This feature is available only when the extended menu is activated.

Getting to Phone Setup...

- 1. Press until you see Phone Setup, and then press .
- **2.** Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Adjusting the Ringer Volume

Use this feature to adjust the volume of the ringer. The phone sounds the new volume level as you adjust it.

- 1. Follow the steps in "Getting to Phone Setup..." to get to Adjust Ring Volume, and then press to select.
- Increase the volume by pressing the upper volume key.

or

Decrease the volume by pressing the lower volume key.

3. Press and hold © to exit the menu.

Tip: You can also press of, and then the up or down volume key.

Setting the Ringer Tone

Select your favorite tone from 10 different options.

- 1. Follow the steps in "Getting to Phone Setup..." to get to Set Ringer Tone, and then press (x) to select.
- 2. **Press** to scroll through the following options:
 - Standard Tone
 - Single Ring Tone
 - British Tone
 - French Tone
 - German Tone
 - Bravo Tone
 - Three Ring Tone
 - Siren Tone
 - Quick Tone
 - High Tone

You will hear a one-ring-cycle demonstration.

- 3. Press ox to select the desired option.
- **4. Press and hold ©** to exit the menu.

Getting to Phone Setup...

- 1. Press until you see Phone Setup, and then press .
- **2.** Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Setting the Keypad Tones

Choose the sounds your phone makes when its keys are pressed.

Note: This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 109 for more information.

- Follow the steps in "Getting to Phone Setup..." to get to Select Keypad Tones, and then press to select.
- 2. Press to choose Normal Tones, Single Tone, or No Tones, and then press or.
- **3. Press and hold ©** to exit the menu.

Getting to Phone Lock...

- 1. Press until you see Phone Setup, and then press ok.
- 2. Press on until you see Phone Lock, and then press or.
- 3. Press (EN) to scroll to one of the features described below.

Locking and Unlocking Your Phone

These features can help you prevent unwanted use of your phone.

Lock the Phone Automatically

Use this feature to set your phone to lock itself every time it is powered on.

- 1. Follow the steps in "Getting to Phone Lock..." to get to Automatic Lock, and then press (*) to select.
- 2. Press to choose On or Off, and then press to select. You will see Completed.
- 3. Press and hold (a) to exit the menu.

Lock the Phone Instantly

Use this feature to lock your phone immediately.

- Follow the steps in "Getting to Phone Lock..." to get to Lock Now.
- 2. Press or to select. You will see: Locked.

Note: Once you unlock your phone, it remains unlocked until you lock it again.

Getting to Phone Lock...

- 1. Press until you see Phone Setup, and then press ox.
- 2. Press on until you see Phone Lock, and then press on.
- **3. Press** to scroll to one of the features described below.

Tip: The factory default unlock code is 1234.

Tip: The factory default security code is 000000

Unlock the Phone

- **1. Enter unlock code.** Enter your four-digit phone unlock code.
- 2. Press OK.

Change the Unlock Code

The unlock code is originally set to 1234. You should change it as soon as possible.

- Follow the steps in "Getting to Phone Lock..." to get to Change Unlock Code, and then press to select. You will see Enter Security Code.
- Enter security code. Enter your six-digit security code. You will see your current lock code and Enter Phone Unlock Code.
- 3. Press © to clear one digit at a time, or press and hold © to clear all the digits.
- 4. Enter new code. Enter a new four-digit unlock code, and then press . You will see Phone Lock and the new lock code.
- **5. Press and hold** to exit the menu.

Getting to Require SIM Card PIN...

- 1. Press until you see Phone Setup, and then press ox.
- 2. Press until you see Require SIM Card PIN, and then press &.
- **3. Press** to scroll to one of the features described below. You will see the feature name, followed by View Options?.

Protecting the SIM Card

You can use a Personal Identification Number (PIN) code to protect the information stored on your SIM card even when it is inserted into someone else's phone.

Activate and Deactivate the SIM Card PIN Code

When you activate the SIM card PIN code, your phone requests the code whenever the phone is powered on. To change this setting, you need to enter the PIN code that your service provider gave you.

- Follow the steps in "Getting to Require SIM Card PIN...".
- 2. Press to scroll to On or Off, and then press Off. You will see Enter PIN.
- Enter PIN code. Enter the four- to eight-digit PIN code your service provider gave you, and then press . You will see Completed.
- **4. Press and hold ©** to exit the menu.

Getting to Require SIM Card PIN...

- 1. Press until you see Phone Setup, and then press ok.
- 2. Press until you see Require SIM Card PIN, and then press .
- **3. Press** to scroll to one of the features described below. You will see the feature name, followed by View Options?.

Change the SIM Card PIN Code

To choose your own PIN code:

- 1. Follow the steps in "Getting to Require SIM Card PIN..." to get to Change SIM Card PIN, and then press to select. You will see Enter Old PIN.
- 2. Enter the current PIN code, and then press **3**. You will see Enter New PIN.
- 4. Re-enter the new PIN code, and then press or again. You will see Completed.
- **5. Press and hold** to exit the menu.

Unblock the PIN Code

If your PIN code is entered incorrectly three times in a row, Blocked appears in the display. You need to enter a PIN unblocking key (PUK1), which you can obtain from your service provider.

- 1. Press (*) (*) (*) (*).
- Enter unblocking key. Enter the eight-digit PUK1 unblocking key, and then press Ox. Your service provider supplies this code.
- 3. Enter a new PIN code, and then press .
- **4.** Re-enter the new PIN code, and then press **a**.

Tip: The message Blocked indicates that an incorrect PIN code was entered. The message Blocked indicates that an incorrect

PIN2 code was

entered.

Getting to Phone Setup...

- 1. Press on until you see Phone Setup, and then press on.
- **2.** Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Managing Other Security Settings

Your phone includes other security features:

- a SIM card PIN2 code for accessing Fixed Dialing settings and other subscription-dependent features
- a security code controls access to security and other menu options

Change the SIM PIN2 Code

Your SIM card PIN2 code is used to access Fixed Dialing settings. This four- to eight-digit code is issued to you when you subscribe to the feature. Use this feature to choose a new code.

- Follow the steps in "Getting to Phone Setup..." to get to Change SIM Card PIN2 Code, and then press to select. You will see Enter Old PIN2.
- Enter the current PIN2 code, and then press . You will see Enter New PIN2.
- 3. Enter new PIN2 code, and then press O. You will see Repeat New PIN.
- 4. Re-enter the new PIN2 code, and then press again. You will see Completed.
- **5. Press and hold** to exit the menu.

Getting to Phone Setup...

- 1. Press until you see Phone Setup, and then press ox.
- 2. Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Tip: The message Blocked indicates that an incorrect PIN code was entered. The message Blocked indicates that an incorrect PIN2 code was

entered.

Unblock the PIN2 Code

If your PIN2 code is entered incorrectly three times in a row, Blocked appears in the display. You need to enter a PIN2 unblocking key (PUK2), which you can obtain from your service provider.

- 1. Press (*) (*) 0+ 5jkl 2abc (*)
- **2. Enter unblocking key.** Enter the eight-digit PUK2 unblocking key, and then **press O**. Your service provider supplies this code.
- 3. Enter a new PIN2 code, and then press ox.
- 4. Re-enter the new PIN2 code, and then press **3**.

Change the Security Code

The security code is your phone's primary security number. You use it to reset your phone to its default settings and prevent access to your phone book. It is originally set to 000000.

- 1. Follow the steps in "Getting to Phone Setup..." to get to New Security Code, and then press to select. You will see Enter Security Code.
- Enter the current security code, and then press N. You will see Enter New Security Code.
- Enter a new security code, and then press . You will see Secur. Code and the six-digit number selected.
- **4. Press and hold** to exit the menu.

Activating Extended Menus

This feature activates and deactivates the extended menus. See page 138 to learn how extended menus can make your phone even simpler to use.

- Follow the steps in "Getting to Phone Setup..." to get to Extended Menus, and then press to select.
- 2. Press to choose On or Off, and then press O.
- 3. Press and hold (a) to exit the menu.

Press and hold to activate the extended menus temporarily. This shortcut displays all extended menus features until you exit the Options menu.

Getting to Phone Setup...

- 1. Press until you see Phone Setup, and then press a.
- **2.** Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Selecting the Display Language

Use this feature to select the language in which your phone displays messages.

Note: This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 109 for more information.

- 1. Follow the steps in "Getting to Phone Setup..." to get to Language Selection, and then press (x) to select.
- 2. Press to scroll through the choices, and then press to select the displayed option.
- 3. Press and hold (a) to exit the menu.

If you accidentally change the language of your phone's display message, press (2) (3) to return to the language selection menu.

Getting to Phone Status...

- 1. Press until you see Phone Setup, and then press ok.
- 2. Press until you see Phone Status, and then press ok.
- 3. Press to scroll to one of the features described below.

Review the Phone's Settings

View all your phone's settings that have changed from their defaults, and reset them to their original settings if you like.

Use this feature to review but not change your phone's settings.

- 1. Follow the steps in "Getting to Phone Status..." to get to Status Review, and then press ...
- 2. Press to scroll through the list of all the menu items you have changed.
- **3. Press and hold ©** to exit the menu.

Getting to Phone Status...

- 1. Press on until you see Phone Setup, and then press on.
- 2. Press on until you see Phone Status, and then press ok.
- **3. Press** to scroll to one of the features described below.

Reset Options to Factory Defaults

Use the master reset option to reset all settings to their original default settings. The master reset option:

- resets audible call timers, the in-call timer, and the automatic lock
- resets extended menus to default setting
- restores keypad tones to normal, ringer tone to standard, and the volume level to the middle (fourth bar) of its range

To reset all settings:

- Follow the steps in "Getting to Phone Status..." to get to Master Reset, and then press to select. You will see Enter Security Code.
- Enter your six-digit security code. You will see Reset Complete.
- **3. Press and hold** to exit the menu.

Tip: The factory default security code is 000000.

Clear All Stored Information

The Master Clear option resets the same items as Master Reset, plus the following:

- clear phone book entries from phone memory (not from SIM memory)
- clear last calls made list
- reset resettable call timers

Master Clear does not clear the:

- fixed dial list
- my number(s) list
- · received messages list

To clear the settings:

- Follow the steps in "Getting to Phone Status..." to get to Master Clear, and then press to select. You will see Enter Security Code.
- Enter your six-digit security code. You will see Reset Complete.
- 3. Press and hold (a) to exit the menu.

Tip: The factory default security code is 000000.

Accessing the Network

This section shows you how to register with the Iridium[®] satellite network.

Entering the Network Selection Menu

To enter the Network Selection menu:

- 1. Press to open the Options menu.
- 2. Press to scroll forward.

or

Press (*) or **) to scroll backward or forward.

3. Press ox when you see:



4. Press to scroll through the submenu.

or

Press (*) or ** to scroll backward or forward through the submenu.

What's on the Network Selection Menu?

Network Selection

Register Now

Getting to Network Selection...

- Press a until you see Network Selection, and then press a.
- **2.** Press to scroll to one of the features described below. You will see the feature name, followed by Select?.

Registering With the Satellite Network

Your phone searches for the Iridium satellite network.

- 1. Follow the steps in "Getting to Network Selection..." to get to Register Now.
- 2. Press to select. You will see Registering.... This may take a few seconds.

If the phone finds the signal, you will see Registered and the signal strength indicator:

(i) ____

The (home system) indicator also appears.

If the phone is unsuccessful you may see one of these messages: System Busy, Restricted Area, or Weak Signal.

Note: You must wait three minutes between registration attempts.

Timing Your Calls

Your phone's call meters give you a variety of options for tracking the time you spend on the phone. You can monitor the length of individual calls, set a timer to track monthly usage, or have the phone alert you with tones at specific intervals.

What You Will Learn

- viewing your phone's call timers to monitor your airtime
- setting your phone's audible alerts to sound at intervals you specify
- activating an in-call display of the elapsed time of your current call
- checking the total airtime of your phone since it was manufactured

Entering the Call Meters Menu

 
To enter the Call Meters menu:

- 1. Press to open the Options menu.
- 2. Press (IN) to scroll forward.

or

Press • or • to scroll backward or forward.

3. Press on when you see:



4. Press (III) to scroll through the submenu.

or

Press • or • to scroll backward or forward through the submenu.

What's on the Call Meters Menu?

Show Call Timers Show Last Call Total For All Calls Reset All Timers Set Audible Call Timers On/Off Repetitive Timer On/Off Set In-Call Display No In-Call Display Show Time Per Call Lifetime Timer Lifetime Timer

¹ This feature is available when the extended menu is active.

Getting to Show Call Timers...

- 1. Press 🖚 until you see Call Meters, and then press 🐼 .
- 2. Press on until you see Show Call Timers, and then press on.
- **3. Press** to scroll to one of the features described below.

Showing Call Timers

This submenu helps you track your airtime. Keep a running tab of your monthly usage or view the airtime of your most recent call.

Show the Time of the Last Call

Use this feature to display the elapsed time of your most recent call.

1. Follow the steps in "Getting to Show Call Timers..." to get to Show Last Call, and then press of to select.

You will see the airtime of the most recent call in hours, minutes, and seconds. After several seconds, the display returns to Show Last Call.

2. Press and hold © to exit the menu.

Show Total Time for All Calls

Use this feature to display your total airtime since you last reset the Call Timer.

1. Follow the steps in "Getting to Show Call Timers..." to get to Total For All Calls, and then press (*) to select.

You will see the airtime accumulated since the timer was last reset. The airtime is displayed in hours, minutes, and seconds. After several seconds, the display returns to Total For All Calls.

2. Press and hold (a) to exit the menu.

Reset All Timers

Reset your timers at the beginning of each billing cycle to keep track of your spending.

1. Follow the steps in "Getting to Show Call Timers..." to get to Reset All Timers, and then press (1) to select.

You will see Completed. The display then returns to Reset All Timers.

2. Press and hold (to exit the menu.

Note: This does not reset the Lifetime Timer described on page 127.

Getting to Audible Call Timers...

- 1. Press until you see Call Meters, and then press OK.
- 2. Press until you see Set Audible Call Timers, and then press o.
- 3. Press (III) to scroll to one of the features described below.

Setting Audible Call Timers

Let your phone watch the clock for you. The call timers signal at a set time or interval with beeps only you can hear.

Set the Single Alert Timer

Use this feature to set your phone to alert you after an elapsed time.

- 1. Follow the steps in "Getting to Audible Call Timers..." to get to Single Alert Timer, and then press of to select.
- 2. Press to scroll to On or Off, and then press of to select.
 - If you select On, you will see Enter Seconds. Continue with **step 3**.
 - If you select Off, you will see Completed. Continue with **step 4**.
- Press of to accept the current setting. You will see Seconds. XXX.

or

Enter a number from 11 to 999, and then press & You will see Seconds XXX.

4. Press and hold to exit the menu.

Set the Repetitive Timer

Use this feature to set your phone to alert you at specific intervals, for example every 45 seconds.

- 1. Follow the steps in "Getting to Audible Call Timers..." to get to Repetitive Timer, and then press (*) to select.
- 2. Press to scroll to On or Off, then press of to select.
 - If you select On, you will see Enter Seconds. Continue with step 3.
 - If you select Off, you will see Completed.
 Continue with step 4.
- Press to accept the current setting. You will see Seconds. XXX.

or

Enter a number from 11 to 999, and then press . You will see Seconds XXX.

4. Press and hold to exit the menu.

Getting to Call Meters...

- 1. Press on until you see Call Meters, and then press on.
- **2. Press** to scroll to one of the features described below.

Showing the In-Call Timer

Use this feature to display a running clock of the airtime elapsed while on a call.

- 1. Follow the steps in "Getting to Call Meters..." to get to Set In-Call Display, and then press of to select.
- Press to scroll to Show Time Per Call or No In-Call Display, and then press to select.
- **3. Press and hold** to exit the menu.

Showing the Lifetime Timer

Use this feature to show the total time of all calls for the life of your phone.

Note: This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 109 for more information.

1. Follow the steps in "Getting to Call Meters..." to get to Lifetime Timer, and then press (x) to select.

You will see the total airtime of your phone since it was manufactured.

2. Press and hold (a) to exit the menu.

Tip: The lifetime timer can not be reset. The Reset All Timers feature has no effect on this timer.

Setting Up Your Accessories

This menu can make using your phone while driving a little easier. You can set your phone to answer automatically after two rings, set a timer to power the phone with the car, automatically mute the radio—even set your car's horn to beep to let you know you are receiving a call when you have stepped away from your car.

What You Will Learn

- muting your car radio automatically when you make or receive a call
- · setting your phone to answer automatically after two rings
- powering down your phone at a set time after you turn your ignition off
- setting alerts to notify you of incoming calls when you are away from the car

Entering the Accessory Setup Menu

To enter the Accessory Setup menu:

- 1. Press to open the Options menu.
- 2. Press (IN) to scroll forward.

or

Press • or • to scroll backward or forward.

3. Press on when you see:



4. Press to scroll through the submenu.

or

Press • or • to scroll backward or forward through the submenu.

What's on the Accessory Setup Menu?



Getting to Accessory Setup...

- 1. Press on until you see Accessory Setup, and then press on.
- 2. Press to scroll to one of the features described below. You will see the feature name, followed by Select?

Mute Car Radio

This feature automatically mutes your car radio when you make or receive a call.

Note: This feature works with your car radio's mute feature. The Mute Car Radio feature will not work if your radio does not have a mute feature.

- 1. Follow the steps in "Getting to Accessory Setup..." to get to Mute Car Radio, and then press (*) to select.
- 2. Press to scroll to On or Off, and then press to select.
- 3. Press and hold (to exit the menu.

Automatic Answer

Your phone rings twice when a call is incoming, then the call is live.

- Follow the steps in "Getting to Accessory Setup..." to get to Automatic Answer, and then press to select. You will see Completed.
- 2. Press to scroll to On or Off, and then press to select.
- 3. Press and hold (a) to exit the menu.

Getting to Accessory Setup...

- 1. Press 📾 until you see Accessory Setup, and then press 🚳.
- 2. Press to scroll to one of the features described below. You will see the feature name, followed by Select?

Safety Timer

Tip: This feature can be useful if you make frequent driving stops—save battery power when you stop longer than expected.

Use this feature to keep your phone powered up for a set time after you turn your car's ignition off.

- 1. Follow the steps in "Getting to Accessory Setup..." to get to Safety Timer, and then press of to select. You will see Enter Minutes.
- 2. Enter the time in minutes, then press .
- **3. Press and hold** to exit the menu.

Notes:

- When the safety timer is set to zero, the phone operates only in conjunction with your vehicle's ignition.
- The Auxiliary Alert feature does not work when the safety timer is set to zero. (See "Auxiliary Alert" on page 135.)

Tip: The safety timer is initially set to zero minutes, but you can choose any length of time between zero and 999 minutes

Auxiliary Alert

If you don't want to miss calls when you step away from your car, activate this feature. You car's horn beeps or lights flash to let you know a call is incoming.

- 1. Follow the steps in "Getting to Accessory Setup..." to get to Auxiliary Alert, and then press on to select.
- 2. Press and hold (to exit the menu.

Notes:

- Some local regulations prohibit the use of this feature. Check the laws in your area.
- The Auxiliary Alert feature is active only when the car's ignition is off.
- The Auxiliary Alert resets to off when the phone is turned off.
- The Auxiliary Alert feature does not work when the Safety Timer is set to zero. (See "Safety Timer" on page 134.)

Customizing the Menu System

Do you think your 9520 Mobile Phone has too many features for everyday use? You can do something about it by hiding the features you don't always need. Is your favorite feature not on the Quick Access menu? It's easy to change the defaults to your favorite features. By customizing your menus, your favorite features are always quick and easy to find! This chapter shows you how.

What You Will Learn

- · personalizing the Options menu
- personalizing the Quick Access menu

Personalizing the Options Menu

You can customize the Options menu by moving features in and out of the extended menu.

Move Menu Features

To move menu features:

- 1. Find the feature you want to move.
- Press and hold . You will see one of two responses depending on where that menu feature is currently located. If you see:

| Remove From Short Menus (the feature is in the short menu) | Press to move the feature to the extended menu. You will see Menu Item Moved. |
|---|--|
| | or |
| | Press to scroll to Leave in Short Menus, and then press of to select. You will see Move Cancelled. |
| Add To Short Menus (the feature is in the extended menu) | Press to move the feature to the short menu. You will see Menu Item Moved. |
| | or |
| | Press to scroll to Leave in Long Menus, and then press to select. You will see Move Cancelled. |

Note: Some features and submenus cannot be moved. You will see Cannot Move Menu Item.

Activate/Deactivate Extended Menus

Use the Options menu to activate and deactivate extended menus. Activate them when you need access to every feature. Deactivate them for everyday use.

- 1. Press until you see Phone Setup, and then press ox to select.
- 2. Press until you see Extended Menus, and then press of to select.
- 3. Press to scroll to either On or Off, and then press of to select.

All hidden features are accessible when you activate the extended menus.

Access Hidden Features

If you want to access a feature hidden in the extended menus, but don't want to leave the extended menus active, you can use this shortcut:

Press and hold for a few seconds.

All extended menus features remain accessible until you exit the Options menu.

Personalizing the Quick Access Menu

You can replace the default Quick Access menu features described on page 47 with any of the following features.

| lcon | Quick Access Feature |
|------------|---|
| []2] | Find by Location recalls Phone Book entries by memory location numbers. |
| d₽ | Add Entry to Phone stores entered numbers in the next available phone memory location. |
| - 4 | Add Entry to SIM stores entered numbers in the next available SIM card location. |
| ₫,© | Switch Memory switches One-Touch dialing between the phone and SIM memories depending on the current setting. |
| 10 | Last Call Timer displays the duration of your last call. |

To change a default quick access feature to one of the features listed above, you must choose the feature you want to replace and then choose the replacement.


- 1. Press and then press to scroll to the feature you wish to change.
- 2. Press and hold to access the list of features available.
- **3.** Press to scroll through the list until you find the desired feature.
- Press to store the displayed feature in the new location.

You will see Comeleted.


Menu Quick Reference

This section provides a quick reference guide to menu structures and features.

Phone Book Menu

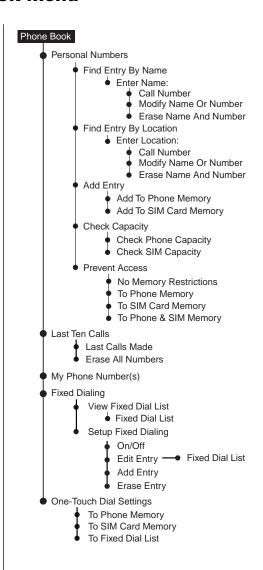

Call Related Features Menu

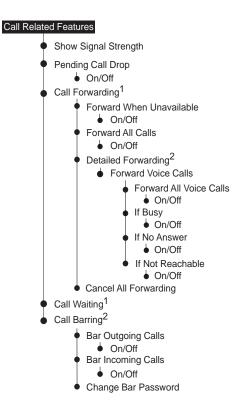

- 1 This feature is network and subscription dependent.
- 2 This feature is network and subscription dependent. It is available only when the extended menu is activated.

Messages Menu

Messages Call Voicemail Received Messages Go to Next Message Delete Message Return Call Message Settings Voicemail Number

Phone Setup Menu

Phone Setup Adjust Ring Volume Set Ringer Tone Standard Tone High Tone Phone Lock Automatic Lock On/Off Lock Now Change Unlock Code Require SIM Card PIN On/Off Change SIM PIN Code Change SIM PIN2 Code New Security Code Extended Menus On/Off Language Selection¹ Automatic Türkçe Select Keypad Tones¹ No Tones Normal Tones Single Tone Phone Status¹ Status Review Master Reset

Master Clear

¹ This feature is available only when the extended menu is activated.

Network Selection Menu




Call Meters Menu

Show Call Timers Show Last Call Total For All Calls Reset All Timers Set Audible Call Timers On/Off Repetitive Timer On/Off Set In-Call Display No In-Call Display Show Time Per Call Lifetime Timer Lifetime Timer

1 This feature is available only when the extended menu is activated.

Accessory Setup Menu

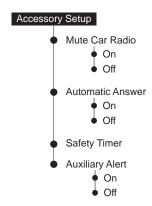

Troubleshooting

This chapter tells you what to do if you experience one of the following problems:

| Problem | Solution | |
|-------------------------------------|---|--|
| You can't make calls. | Check that the antenna is properly mounted. Do you have a clear view of the sky? Did you enter the number in international format? All calls made from the Iridium satellite system must be in international format. Check the signal strength meter. If the signal is weak, move the vehicle to a more open area. Check the Network Selection settings. Check your Operator coverage map. Is Restricted displayed? Check the Call Barring setting. Has a new SIM card been inserted? Check that no new restrictions have been imposed. | |
| You can't receive calls. | Check to see that your phone is powered on. Check the antenna. Is it properly mounted? Do you have a clear view of the sky? Check the signal strength. If the signal is weak, move the vehicle to a more open area. Check the Call Forwarding and Call Barring settings. Check the Ringer setting. If it is off, there is no audible ringer. | |
| You can't make international calls. | Have you included the relevant codes? Press and hold the the key to display the international dialing prefix (+) and then enter the appropriate country code followed by the phone number. | |
| Your phone will not unlock. | Have you inserted a new SIM card? Enter the new PIN code. Do you have a replacement phone? Enter the default phone unlock code —1234. Have you forgotten the unlock code? Press to change the unlock code (you need your security code). | |
| Your PIN is blocked. | Enter the PIN unblocking key (PUK1) or contact your service provider. See "Unblock the PIN Code" on page 106 for additional information. | |

| Problem | Solution | |
|--|--|--|
| Your PIN2 is blocked. | Enter the PIN2 unblocking key (PUK2) or contact your service provider. See "Unblock the PIN2 Code" on page 108 for additional information. | |
| Your SIM card will not work. | Is the card inserted the correct way? Is the gold chip visibly damaged or scratched? Return the card to your service provider. Check the SIM and phone contacts. If they are dirty, clean them with an antistatic cloth. | |
| You can't cancel Call Forwarding or Call Barring. | Wait until you are in an area with good network coverage and try again. | |
| The (message) indicator is flashing. | There is not enough memory available to store another message. Use the Messages menu to delete one or more messages. | |
| You find your phone becoming warm during use. | You may notice this during long calls or during charging. The heat is produced by the electronic components within your phone and is quite normal. | |
| Your SIM card is inserted in the phone but the display says: | Check Cand or Insert Cand. Check that the SIM card has been inserted correctly. The contacts of the SIM card may be dirty. Turn the phone off, remove the SIM card and rub the gold chip on the card with a clean cloth. Replace the card in the phone. Blocked or Blocked Enter the PIN unblocking key (PUK1) or the PIN2 unblocking key (PUK2) respectively, or contact your service provider. See "Unblock the PIN Code" on page 106 and "Unblock the PIN2 Code" on page 108 for additional information. Bad Cand See Supplier. Please contact your service provider. | |
| You find your phone's prompts in a language other than your own. | Press (Composite to the language selection submenu. Press (composite to the language selection) until you see your preferred language. Press (composite to select. | |

Glossary

Α

airtime The amount of time you spend using the satellite system. Especially, the time between successfully placing a call and terminating a call.

antenna The device attached to your phone by a cable that sends and receives satellite signals.

D

default A feature's original setting as pre-programmed in the factory.

DTMF See Dual Tone Multi-Frequency tones.

Dual Tone Multi-Frequency Tones The tones that your phone transmits when you press a key on the keypad. These tones are used to access automated calling systems such as voicemail.

Ε

emergency call This feature allows you to make an emergency call even if your phone is locked by dialing 112.

F

fringe area The outermost range of a cellular system or the Iridium satellite system where signals are weak.

ı

In-Call menu The menu that appears when you press during a call. It allows you to access features like call holding.

Iridium system A system of 66 satellites that offer global communication.

L

lock Use this feature to prevent unauthorized access to your satellite telephone.

M

memory location A space in the internal Phone Book (both phone memory and SIM memory) where you can store a telephone number and a name. Each phone memory location can hold up to 32 digits and 16 letters. The SIM card memory can hold up to 20 digits and 16 letters.

menu feature Any feature that can be accessed through the menu system.

menu system The hierarchical arrangement of your phone's features that allows for quick, intuitive access.

Ν

name directory An alphabetical list of the names and telephone numbers you have stored into your phone's internal Phone Book.

O

one-touch dialing To use this feature, press and hold a number on the keypad, through and your call is placed.

Options menu The top level of the menu system hierarchy, which contains the seven main feature menus: Phone Book, Call-Related Features, Messages, Phone Setup, Network Selection, Call Meters, Accessory Setup.

Р

pause A special character that tells your phone to "pause" or wait for your input before sending a group of numbers stored in memory.

PIN code Personal Identification Number code. A private numeric password that prevents unauthorized access to your SIM card.

PIN2 code A private numeric password that prevents unauthorized access to your SIM card's fixed dialing settings.

prompt A message requesting input.

Q

Quick Access menu A set of features activated by pressing and a digit key (1 to ...)

S

scroll To move backward or forward through a list; for example: to move backward or forward through the menu system or the name directory.

security code A six-digit code used to access sensitive features.

service provider A company affiliated with a satellite carrier that provides satellite service to its customers.

signal The radio waves that carry information between your phone and the satellite system.

submenu A secondary level of your phone's menu system hierarchy.

Т

talk-time The amount of time that you spend talking on the phone.

toggle To switch between two possible options; for example: on versus off.

U

unlock code A four-digit code used to unlock a locked phone.

V

volume keys Located on the side of your phone, the upper and lower volume keys are used to adjust phone volume.

Index

| Symbols | airbag 10 |
|---------------------------------|--------------------------------|
| * character 25 | airtime, defined 151 |
| + character 25, 26 | alert, incoming call 135 |
| character 25 | alphanumeric keypad 14 |
| | Answer? 30,39 |
| A | answering a call 30 |
| • • | antenna |
| accessing extended menu | care 7 |
| features 139 | defined 151 |
| accessing hidden features 139 | fixed mast 17 |
| accessing the satellite network | mobile magnetic 17 |
| 115–118 | permanent mount 17 |
| accessories 17 | audible call timers |
| setting up 129–135 | repetitive 125 |
| Accessory Setup menu 129–135 | |
| Automatic Answer feature 133 | resetting default settings 112 |
| Auxiliary Alert feature 135 | single alert 124 |
| , | automatic answer 133 |
| diagram 131, 148 | automatic lock |
| entering 130 | resetting default setting 112 |
| Mute Car Radio feature 132 | setting 103 |
| Safety Timer feature 134 | automatic redial 25 |
| activating call waiting 83 | automobile |
| activating extended menus 139 | automatic answer 133 |
| activating SIM card PIN code | auxiliary alert 135 |
| 105 | mute car radio 132 |
| Add Entry to Phone feature 140 | safety timer 134 |
| Add Entry to SIM feature 140 | auxiliary alert 135 |
| Add To Short Menus message | |
| 138 | В |
| adding an entry to the Phone | Bad Card See Supplier |
| Book 54-55 | |
| dedicated keys 55 | message 23, 150 |
| Options menu 54 | barring calls |
| Overwrite? message 55 | incoming 85 |
| Range XXX-XX message 55 | outgoing 84 |
| Stored XXX message 55 | Blocked message 23, 106, 150 |
| Adjust Ring feature 47 | Blocked message 23, 108, |
| adjusting volume | 150 |
| earpiece 34 | Busy Try Later message 39, |
| ringer 35, 100 | 41, 45 |
| ringer ee, ree | |

| C | Call Meters menu (continued) |
|---------------------------------|---------------------------------|
| call | Show In-Call Display feature |
| answering 30 | 126 |
| ending 28 | Show Last Call feature 122 |
| placing 24–27 | Single Alert Timer feature 124 |
| receiving 30–31 | Total For All Calls feature 122 |
| unable to make call 149 | call meters. See call timers |
| unable to make international | Call Related Features menu |
| call 149 | 73–86 |
| unable to receive call 149 | Bar Incoming Calls feature 85 |
| call barring 84–86 | Bar Outgoing Calls feature 84 |
| barr password | Call Barring feature 84–86 |
| changing 86 | Call Forwarding feature 76–80 |
| entering 84–86 | Call Waiting feature 83 |
| incoming calls 85 | Cancel All Forwarding feature |
| outgoing calls 84 | 80 |
| unable to cancel 150 | Change Bar Password feature |
| Call Failed message 24, 30 | 86 |
| call forwarding | Detailed Forwarding feature |
| all calls 77 | 78–79 |
| cancelling 80 | diagram 75, 143 |
| detailed 78-79 | entering 74 |
| unable to cancel 150 | Forward All Calls feature 77 |
| when unavailable 76 | Forward When Unavailable |
| call holding 40 | feature 76 |
| ending both calls 40 | Pending Call Drop feature 82 |
| ending current call 40 | Show Signal Strength feature |
| ending held call 41 | 81 |
| making a new call 40 | call timers 119–127 |
| messages 41 | all calls 122 |
| switching between calls 40 | elapsed airtime 126 |
| Call Holding message 40 | in-call timer 126 |
| Call message 30 | lifetime timer 127 |
| Call Meters menu 119–127 | most recent call 122 |
| diagram 121, 147 | repetitive 125 |
| entering 120 | resetting all 113, 123 |
| Lifetime Timer feature 127 | single alert 124 |
| Repetitive Timer feature 125 | total airtime 122 |
| Reset All Timers feature 123 | Call Voicemail feature 47 |
| Set Audible Call Timers feature | call waiting |
| 124–125 | accepting a waiting call 39 |
| Show Call Timers feature | activating 83 |
| 122–123 | ending current call 39 |
| | messages 39 |
| | |

| call waiting (continued) | clear key 15 |
|------------------------------------|------------------------------------|
| rejecting waiting call 39 | clearing settings 113 |
| using 39 | clearing stored information 113 |
| Call Waiting message 39 | codes |
| Call? 24, 32 | phone unlock |
| callback number, in message 96 | changing 104 |
| calling a number in a message | default 104 |
| 27 | defined 152 |
| calling an entry in the Phone | Enter Phone Unlock Code |
| Book 62 | message 22 |
| calling features 73–86 | entering 104 |
| Calling message 24, 32 | security |
| Cannot Hold Second Call | changing 108 |
| | default 64, 104, 108 |
| message 39, 41 | |
| cannot make call 149 | defied 108 |
| cannot make international call 149 | entering 64, 104, 108, 112, 113 |
| Cannot Move Menu Item | SIM card PIN 23, 105-106 |
| message 138 | SIM card PIN2 65-68, |
| cannot receive call 149 | 107–108 |
| cannot unlock phone 149 | Completed message 45 |
| car | Connected message 24, 30, 32 |
| automatic answer 133 | correcting a Phone Book entry |
| auxiliary alert 135 | 56 |
| mute car radio 132 | customizing menus 137-140 |
| safety timer 134 | Options menu 138-139 |
| changing a Phone Book entry to | activating extended menus |
| a similar number 59 | 139 |
| changing from handset call to | deactivating extended |
| hands-free call 33 | menus 139 |
| changing SIM card PIN code | moving menu features 138 |
| 106 | Quick Access menu 140 |
| changing SIM card PIN2 code | customizing phone features |
| 107 | 97–113 |
| changing the call barring | |
| password 86 | D |
| Check Card message 23, 150 | deactivating extended menus |
| check mark 16 | 139 |
| Check Signal feature 47 | |
| checking Phone Book capacity | deactivating SIM card PIN code |
| 63 | 105 |
| Checking Signal message | default settings |
| 81 | defined 151 |
| checking voicemail 90 | resetting 113 |
| <u> </u> | |

| aialing | End Hctive & Held Call |
|---------------------------------|----------------------------------|
| 0 25 | message 40, 48 |
| * character 25 | End Active Call message 39, |
| + character 25 | 48 |
| □ character 25 | End Call? 24,41 |
| number from the Phone Book | End Held Call message 41, 48 |
| 26 | ending a call 28 |
| number with pauses 26, 58 | Enter Name message 45 |
| phone number 24 | Enter Phone Unlock Code |
| PINs 25 | message 22 |
| special characters 25 | Enter PIN message 23, 45, 105 |
| · | |
| supplementary service | Enter PIN2 message 65-68 |
| numbers 25 | entering characters in the Phone |
| display 14, 15–16 | Book 56 |
| * character 25 | entering menus |
| + character 25, 26 | In-Call menu 48 |
| □ character 25 | Options menu 44 |
| cold temperatures and 15 | Quick Access menu 46 |
| icons 45, 47, 140 | entering names in the Phone |
| indicators 14, 16, 22 | Book 56-57 |
| defined 16 | entering pauses in numbers 58 |
| language | erasing a Phone Book entry 62 |
| selecting 110 | exiting menus and menu features |
| messages 45 | 44 |
| questions in 44 | extended menus |
| volume level 34 | accessing hidden features 139 |
| wrong language displayed | activating 109, 139 |
| 150 | Call Barring 84 |
| driving 8 | deactivating 109, 139 |
| DTMF. <i>See</i> Dual Tone | Detailed Call Forwarding 78 |
| Multi-Frequency tones | Language Selection 110 |
| Dual Tone Multi-Frequency tones | Lifetime Timer 127 |
| defined 151 | moving menu features 138 |
| | resetting default settings 112 |
| E | Select Keypad Tones 102 |
| | temporary activation 109, 139 |
| earpiece | temperary deuration ree, ree |
| adjusting volume 34 | F |
| elapsed airtime timer 126 | _ |
| electronic devices 8–9 | Failed message 45 |
| emergency call | fax |
| defined 151 | notification message 92, 94 |
| placing 27 | displaying 92 |
| Emer9ency Callin9 message | Find by Location feature 140 |
| 27 | Find Name feature 47 |
| | |

| finding a Phone Book entry 60–61 | holding a call 40 ending both calls 40 |
|-------------------------------------|---|
| by location 61 | ending current call 40 |
| by name 60 | ending held call 41 |
| fixed dial list | making a new call 40 |
| defined 65 | messages 41 |
| one-touch dialing 72 | switching between calls 40 |
| viewing 69 | home system indicator 16, 22, |
| Fixed Dialing | 118 |
| erasing an entry 67 | |
| PIN2 code 107 | I |
| fixed dialing 65-69 | |
| activating 65 | icons |
| adding an entry 66 | Options menu 45 |
| editing an entry 68 | Quick Access menu 16, 47, |
| viewing fixed dial list 69 | 140 |
| Forward On/Off feature 47 | in use indicator 16 |
| forwarding calls | In-Call menu 37–41, 48 |
| all calls 77 | call muting 38 call waiting 39 |
| cancelling 80 | |
| detailed 78-79 | defined 48, 151 End Active & Held Call |
| when unavailable 76 | message 48 |
| fringe area, defined 151 | End Active Call message |
| _ | 48 |
| G | End Held Call message 48 |
| glossary 151-152 | entering 48 |
| GSM SIM card | Hold Call message 48 |
| using with satellite phone 20 | Make New Call message 48 |
| guide overview 12 | menu features 48 |
| galac overview 12 | placing a call on hold 40 |
| Н | Reconnect Held Call |
| | message 48 |
| hands-free call | Reject Call Waiting |
| changing from handset call to | message 48 |
| 33 | Turn Mute on or off |
| muting the phone 33 | message 33, 38, 48 |
| placing 32 | in-call timer |
| receiving 32 | defined 126 |
| hang-up cup 21, 32–33 | resetting 112 |
| illustration 14 | incoming calls |
| inserting SIM card into 14 | auxiliary alert 135 |
| removing handset from 30 | barring 85 |
| Hold Call message 40, 48 | Saming 66 |
| Hold Failed message 39, 41 | |

| indicators | language (continued) |
|---------------------------------|--|
| check mark 16 | wrong language displayed |
| display 14 | 150 |
| home system 16, 22, 118 | last call timer |
| in use 16 | adding to Quick Access menu |
| message 16 | 140 |
| no service 16, 22 | displaying 122 |
| Quick Access menu 16 | Last Call Timer feature 140 |
| scroll bar 16 | last ten numbers dialed |
| signal strength 16 | clearing 113 |
| Insert Card message 23, 150 | viewing 70 |
| inserting the SIM card 21 | LCD. See Liquid Crystal Display |
| international dialing 26 | Leave in Long Menus message |
| dialing + character 25 | 138 |
| unable to make call 149 | Leave in Short Menus |
| Iridium system, defined 151 | message 138 |
| • | lifetime timer 127 |
| K | Reset All Timers feature and |
| key presses 13 | 123, 127 |
| keypad tones | Liquid Crystal Display 15-16 |
| resetting default tones 112 | cold temperatures and 15 |
| selecting 102 | indicators 16 |
| = | Lock Now feature 47 |
| keys | locking the phone 103-104, 151 |
| alphanumeric keypad 14 clear 15 | automatically 103 |
| | instantly 103 |
| memory recall 15 | See also unlocking the phone |
| memory store 15 menu 15 | |
| | М |
| message 15 | |
| mute 15 | Make New Call message 40, 48 making a call 24-27 |
| navigating the menu system | 9 |
| 44 OK 15 | automatic redial 25 |
| OK 15 | calling a number in a message |
| power 15 | 27 |
| quick access 15 | dialing a number from the Phone Book 26 |
| scroll 15 | |
| special keys 15 | dialing a number with pauses 26 |
| volume 14, 35, 100, 152 | |
| 1 | dialing a phone number 24 |
| L | dialing special characters 25 |
| language | emergency call 27 |
| selecting 110 | international dialing 26 |
| | last ten numbers dialed 70 |
| | making a hands-free call 32 |

| making a call (continued) | message indicator |
|-----------------------------------|---------------------------------|
| one-touch dialing 72 | defined 16 |
| redialing the last number 25 | displayed 92 |
| managing the phone book 49-72 | flashing 16, 92, 150 |
| master clear 113 | message key 15 |
| master reset 112 | Message Read Now? 92,94 |
| memory | messages 13, 87-96 |
| phone 52 | accessing 94-96 |
| SIM card 52 | callback number 96 |
| memory location, defined 151 | contents 93 |
| memory recall key 15 | deleting 95 |
| memory store key 15 | fax 94 |
| menu | go to next message 96 |
| Accessory Setup | Message Read Now? 92,94 |
| diagram 131, 148 | notification of incoming fax or |
| entering 130 | voicemail 94 |
| Call Meters | notification of received |
| diagram 121, 147 | message(s) 92 |
| entering 120 | numeric 93 |
| Call Related Features | reading stored 95 |
| diagram 75, 143 | receiving 31 |
| entering 74 | returning a call 96 |
| Messages | storing 92 |
| diagram 89, 144 | text 93 |
| entering 88 | reading 94 |
| Network Selection | voicemail 94 |
| diagram 117, 146 | Messages menu 87-96 |
| entering 116 | Call Voicemail feature 90 |
| Phone Book | diagram 89, 144 |
| diagram 51, 142 | entering 88 |
| entering 50 | Message Settings feature 91 |
| Phone Setup | Received Messages feature |
| diagram 99, 145 | 94–??, 96 |
| entering 98 | Voicemail Number feature 91 |
| quick reference 141 | modifying a Phone Book entry 62 |
| Menu Item Moved message 138 | modifying your SIM card phone |
| menu key 15 | number(s) 71 |
| menus | Move Cancelled message 138 |
| customizing 137–140 | mute key 15 |
| defined 43 | Mute message 33, 38 |
| menu feature defined 151 | Mute Phone feature 47 |
| menu system defined 151 | muting |
| using 43–48 | car radio 132 |
| · g · - · - | mute key 15 |
| | , - |

| muting (continued) phone 15, 33, 38 | Options menu (continued) Add To Short Menus message 138 |
|---|---|
| N | Busy Try Later message 45 |
| navigating the menu system 44 network accessing 115–118 registering 118 network features call holding 40 call waiting 39 Detailed Call Forwarding 78–79 Forward All Calls 77 Forward When Unavailable 76 Network Selection menu 115–118 diagram 117, 146 entering 116 Register Now feature 118 Register Now feature 118 Registered message 118 Registering message 118 Restricted Area message 118 System Busy message 118 Weak Signal message 118 No Number Available message 90 no service indicator 16, 22 | Cannot Move Menu Item message 138 Completed message 45 customizing 138—139 moving menu features 138 deactivating extended menus 139 defined 44, 152 Enter Name message 45 Enter PIN message 45 entering 44 exiting 44 Failed message 45 Leave in Long Menus message 138 Leave in Short Menus message 138 Menu Item Moved message 138 messages and icons 45 Move Cancelled message 138 navigating 44 questions 44 Quit? 44 Remove From Short Menus |
| 0 | message 138 scrolling 44 |
| | Select? 44 |
| OK key 15 one-touch dialing defined 72, 152 frequently called numbers and 52 and Quick Access menu 140 setting up 72 using 72 Options menu 44–45 | selecting options and submenus 44 View Ortions? 44 outgoing calls barring 84 Overwrite? 55 |
| activating extended menus 139 | password, call barring 84-86 |

| pause dialing 58 | phone (continued) |
|--------------------------------|--------------------------------|
| pause) character defined | settings |
| 152 | clearing 113 |
| dialing a character 25 | resetting default 112 |
| pending call drop signal | viewing 111 |
| activating 82 | turning on and off 22 |
| deactivating 82 | unable to make call 149 |
| defined 82 | unable to make international |
| Personal Identification Number | call 149 |
| code | unable to receive call 149 |
| defined 105 | unable to unlock 149 |
| See also PIN code | unblocking the PIN code 106 |
| personal mailbox 31, 93 | unblocking the PIN2 code 108 |
| phone | unlock code |
| answering a call 30 | changing 104 |
| automatic answer 133 | default 104 |
| automatic lock | entering 104 |
| resetting default setting 112 | unlocking 104 |
| setting 103 | volume level display 34 |
| becoming warm during use | Phone Book 49-72 |
| 150 | adding an entry 54-55 |
| clearing stored information | dedicated keys 55 |
| 113 | Options menu 54 |
| customizing features 97-113 | Overwrite? message 55 |
| display language | Range XXX-XX message 55 |
| selecting 110 | Stored XXX message 55 |
| ending a call 28 | adding numbers |
| hands-free operation 32-33 | dedicated keys 55 |
| last ten numbers dialed | calling an entry 62 |
| clearing 113 | changing an entry to a similar |
| viewing 70 | number 59 |
| locking | character set 57 |
| automatically 103 | checking capacity 63 |
| instantly 103 | clearing all entries 113 |
| messages at power-on 22 | correcting an entry 56 |
| muting 33, 38 | dialing a phone number 26 |
| placing a call 24-27 | entering characters 56 |
| receiving a call 30-31 | entering names 56-57 |
| safety timer 134 | entering numbers 54-55 |
| security code | Options menu 54 |
| default 104 | erasing a name and number |
| entering 64, 104, 108, 112, | 62 |
| 113 | |
| self test 22 | |

| Phone Book (continued) | phone features, customizing |
|---------------------------------|------------------------------|
| finding an entry by location 61 | 97–113 |
| dedicated keys 61 | phone memory |
| Options menu 61 | checking capacity 63 |
| finding an entry by name 60 | clearing all entries 113 |
| Fixed Dialing | one-touch dialing 72 |
| erasing an entry 67 | storage capacities 52 |
| fixed dialing 65-69 | phone number |
| activating 65 | modifying your own 71 |
| adding an entry 66 | using pauses in 58 |
| editing an entry 68 | using prefixes 59 |
| viewing fixed dial list 69 | viewing your own 71 |
| Last Ten Calls feature 70 | phone settings |
| menu diagram 51, 142 | clearing 113 |
| modifying a name or number | resetting 112 |
| 62 | resetting default 112 |
| My Phone Number(s) feature | viewing 111 |
| 71 | Phone Setup menu 97–113 |
| name directory | Adjust Ring Volume feature |
| defined 151 | 100 |
| One-Touch Dial Setting feature | Automatic Lock feature 103 |
| 72 | Change SIM Card PIN feature |
| one-touch dialing 72 | 106 |
| organizing 52 | Change SIM Card PIN2 feature |
| pauses in numbers 58 | 107 |
| dialing numbers with 58 | Change Unlock Code feature |
| entering 58 | 104 |
| phone memory 52 | diagram 99, 145 |
| phone numbers | entering 98 |
| grouping 53 | Extended Menus feature 109, |
| security issues 53 | 139 |
| storing 52 | Language Selection feature |
| preventing access 64 | 110 |
| Restricted message 64 | Lock Now feature 103 |
| SIM card memory 52 | Master Clear feature 113 |
| storage capacities 52 | Master Reset feature 112 |
| storing names and numbers | New Security Code feature |
| 54–57 | 108 |
| using prefixes 59 | Phone Lock feature 103-104 |
| viewing the last ten numbers | Phone Status feature 111-113 |
| dialed 70 | Require SIM Card PIN feature |
| Phone Book menu 49-72 | 105–106 |
| diagram 51, 142 | Select Keypad Tones feature |
| entering 50 | 102 |
| <u> </u> | |

| Phone Setup menu (continued) Set Ringer Tone feature 101 Status Review feature 111 phone unlock code changing 104 default 104 entering 104 PIN code activating 105 Blocked message 23, 106, 150 changing 106 deactivating 105 defined 105, 152 Enter PIN message 23, 105 entering 23, 105–106 incorrect entry 106 unblocking 106 PIN unblocking key (PUK1) defined 106 entering 106 PIN2 code | placing a call (continued) international dialing 26 last ten numbers dialed 70 making a hands-free call 32 one-touch dialing 72 redialing the last number 25 postscripting 59 power safety timer 134 turning on and off 22 power key 15 power-on messages 22 prefixes using with phone numbers 59 preventing access to the Phone Book 64 privacy 38 prompts, defined 13, 152 protecting SIM card information 105–106 PUK1. See PIN unblocking key PUK2. See PIN2 unblocking key |
|---|---|
| Blocked message 23, 108, 150 | Q |
| changing 107 defined 107, 152 Enter PIN2 message 65–68 entering 65–68 incorrect entry 108 unblocking 108 PIN2 unblocking key (PUK2) defined 108 entering 108 placing a call 24–27 automatic redial 25 calling a number in a message 27 dialing a number from the Phone Book 26 dialing a number with pauses 26 dialing a phone number 24 dialing special characters 25 emergency call 27 | quick access key 15 Quick Access menu 46–47 activating a menu feature 46 Add Entry to Phone feature 140 Add Entry to SIM feature 140 Adjust Ring feature 47 Call Voicemail feature 47 Check Signal feature 47 custom icons 140 customizing 140 default settings 47 defined 46, 152 Find by Location feature 140 Find Name feature 47 Forward On/Off feature 47 icons 16, 47 Last Call Timer feature 140 Lock Now feature 47 Mute Phone feature 47 |

| Quick Access menu (continued) Read Messages feature 47 Register Now feature 47 | resetting default settings 112 Restricted Area message 24, 118 | | | | |
|--|--|--|--|--|--|
| replacement features 140 replacement icons 140 scrolling 46 | Restricted message 64 restricting access to the SIM card 65 | | | | |
| Switch Memory feature 140 using 46 | restricting calls 84–86 incoming calls 85 | | | | |
| Quit? 44 | outgoing calls 84 restricting phone use 65-69 | | | | |
| R | ringer | | | | |
| radio, muting 132 | adjusting volume 35, 100 | | | | |
| Range XXX-XX message 55 | resetting default tone 112 | | | | |
| Read Messages feature 47 | setting tone 101 | | | | |
| reading a new message 94 | | | | | |
| receiving a call 30-31 | S | | | | |
| answering 30 | safety information 7-10 | | | | |
| unanswered calls 31 | safety timer 134 | | | | |
| receiving a hands-free call 32 | Auxiliary Alert feature and 134 | | | | |
| receiving messages 31 | satellite network | | | | |
| Reconnect Failed message | accessing 115-118 | | | | |
| 39, 41 | registering 118 | | | | |
| Reconnect Held Call message 48 | scroll keys 15 | | | | |
| Reconnect? 40 | scroll keys 15 scrolling | | | | |
| Redial Failed message 25 | defined 152 | | | | |
| Redial? 24,25 | Options menu 44 | | | | |
| redialing the last number called | Quick Access menu 46 | | | | |
| 25 | Searching message 22 | | | | |
| Register Now feature 47 | security code | | | | |
| Registered message 118 | changing 108 | | | | |
| registering with the satellite | default 64, 104, 108 | | | | |
| network 118 | defined 108, 152 | | | | |
| Registering message 22, 24, 118 | entering 64, 104, 108, 112, 113 | | | | |
| Reject Call Waitin9message 48 | security features 105-108 Select? 44 | | | | |
| Remove From Short Menus | selecting menu options 44 | | | | |
| message 138 | self test 22 | | | | |
| removing the SIM card 21 | service provider, defined 152 | | | | |
| repetitive timer | setting audible call timers | | | | |
| defined 125 | 124–125 | | | | |
| resetting default setting 112 | repetitive timer 125 | | | | |
| setting 125 | single alert timer 124 | | | | |

| setting keypad tones 102 setting ringer tone 101 setting up accessories 129–135 short menus moving menu features 138 | SIM card (continued) PIN code incorrect entry 106 unblocking 106 PIN2 code |
|--|---|
| showing call timers 122–123 all calls 122 elapsed airtime 126 in-call timer 126 lifetime timer 127 most recent call 122 total airtime 122 | changing 107 defined 107 Enter PIN2 message 65–68 entering 65–68 incorrect entry 108 unblocking 108 |
| signal strength indicator 14, 16, 118 viewing 81 | precautions 20, 21 protecting 105–106 removing 21 |
| signal, defined 152 SIM card | restricting access to 65 security features 105–108 |
| Bad Card See Supplier message 23, 150 Blocked message 23, 106, 150 | storing messages 92 troubleshooting 150 viewing your phone number(s) 71 |
| Blocked message 23, 108, 150 Check Card message 23, 150 defined 20 display messages 150 displaying phone number of 29 fixed dial list 65 Insert Card message 23, 150 inserting 14, 21 insertion direction 14, 21 modifying your phone number(s) 71 phone number security and 53 PIN code | SIM card memory checking capacity 63 one-touch dialing 72 storage capacities 52 SIM card port illustration 14 inserting SIM card into 14 single alert timer 124 resetting default setting 112 special characters 25 special keys 14 Stored XXX message 55 storing a voicemail number 91 storing names and numbers 54–57 submenus, defined 43, 152 |
| activating 105 changing 106 | supplementary service numbers 25 |
| deactivating 105 defined 105 Enter PIN message 23, | Switch Memory feature 140 Switch? 40 System Busy message 24, 118 |
| 105 entering 23, 105–106 | = = = = |

| I | U | | |
|---|--|--|--|
| talk-time, defined 152 timers all calls 122 | unable to make call 149 unable to make international call 149 | | |
| elapsed airtime 126 in-call timer 126 lifetime timer 127 most recent call 122 repetitive 125 resetting all 123 safety timer 134 single alert 124 total airtime 122 timing your calls 119–127 tips, defined 13 toggle, defined 152 total airtime timer 122 troubleshooting 149–150 message indicator flashing 150 phone is warm 150 PIN is blocked 149 | unable to receive call 149 unable to unlock phone 149 Unanswered Call message 31 unanswered calls 31 unblocking SIM card PIN code 106 SIM card PIN2 code 108 unconditional call forwarding 47 unlock code changing 104 default 104 defined 152 entering 104 unlocking the phone 103–104 unable to unlock 149 See also locking the phone | | |
| PIN2 is blocked 150 SIM card display messages 150 SIM card will not work 150 unable to cancel call barring 150 unable to cancel call forwarding 150 unable to make call 149 unable to make international call 149 unable to receive call 149 unable to unlock phone 149 wrong language in display 150 Trying message 39, 41 Turn Mute on or off message 33, 38, 48 turning phone power on and off 22 2 Calls message 40 | View Options? 44 viewing the last ten numbers dialed 70 viewing your phone's settings 111 viewing your SIM card phone number(s) 71 voicemail call forwarding when unavailable 76 checking 90 detailed call forwarding 78–79 forward all calls 77 No Number Available message 90 notification message 92, 94 displaying 92 storing a number 91 volume | | |
| | bar graph display 34 earpiece 34 | | |

volume (continued)
resetting default 112
ringer 35, 100
volume keys
defined 14, 152
using 34
volume level display 34

W

Weak Signal message 24,81, 118

Patent Information

Manufactured under one or more of the following U.S. patents:

| 4121218 | 4616314 | 4741034 | D306594 | 5083304 | D337332 | D354062 | D368696 |
|----------|---------|----------|---------|---------|---------|---------|---------|
| 4138681 | 4617520 | 4742562 | 4912602 | D324024 | 5230007 | 5384825 | 5510693 |
| 4193036 | D286778 | D295627 | 4918732 | D324388 | 5230093 | D356084 | 5511235 |
| 4254382 | 4626309 | 4746242 | 4922178 | 5095503 | 5233633 | 5402447 | D369162 |
| 4302845 | 4628529 | D295973 | 4945570 | D325028 | 5235492 | 5406146 | 5513078 |
| 4312074 | 4629829 | D295975 | 4954796 | D325583 | 5237257 | 5406562 | D369359 |
| 4327319 | 4630304 | 4751737 | 4959851 | 5109536 | 5239127 | D357224 | 5519303 |
| 4329666 | 4630305 | D296187 | 4963812 | D325915 | 5241545 | D357457 | 5519346 |
| 4369516 | 4633141 | 4761621 | 4963843 | 5113436 | 5241548 | 5410741 | 5524276 |
| 4369522 | 4636593 | 4764737 | 4965537 | 5117450 | 5241650 | D357680 | 5524278 |
| 4378603 | 4636741 | D297734 | 4972355 | 5121047 | 5241693 | D357681 | D370463 |
| 4390963 | D288432 | D297735 | 4972432 | 5122480 | 5242767 | 5428836 | 5530922 |
| D269873 | 4648125 | 4777564 | 4972455 | 5122722 | D339582 | D359734 | 5542116 |
| 4398265 | 4649543 | Re.32768 | 4975808 | D327061 | 5249302 | D359735 | 5544250 |
| 4400584 | D288683 | D299136 | 4984290 | 5128834 | 5251331 | D359959 | D372481 |
| 4400585 | 4654655 | 4797929 | D314173 | D328302 | D340710 | 5432017 | 5546275 |
| D270835 | D289156 | 4798975 | D315330 | 5142551 | 5260988 | D360632 | 5546380 |
| D271491 | 4662691 | 4800348 | D315346 | 5142696 | 5261119 | 5438684 | D372896 |
| Re.31470 | 4667333 | 4802236 | D315543 | 5146620 | 5262710 | D361070 | 5551078 |
| 4431977 | 4668917 | 4809356 | D315559 | 5148471 | 5263052 | 5442680 | 5559471 |
| 4434461 | 4670747 | 4811377 | D315565 | 5148473 | 5276707 | 5446763 | D374424 |
| 4455534 | 4672502 | 4811404 | 5004992 | 5148961 | 5278994 | 5448763 | D374872 |
| 4462098 | 4680787 | 4827226 | D315907 | 5150359 | D343173 | 5448771 | 5572193 |
| D275951 | 4681476 | 4827507 | 5008925 | 5150384 | 5280637 | 5453997 | 5574976 |
| 4484153 | 4683585 | 4829274 | D316417 | 5152006 | D344087 | D362840 | 5577268 |
| 4485486 | 4692726 | 4837534 | D316859 | 5157693 | 5287553 | 5457744 | D375732 |
| 4486624 | 4704588 | D301476 | 5017856 | 5163159 | 5287555 | 5459640 | D375733 |
| D276809 | D292578 | 4843621 | 5018188 | 5164652 | 5287556 | 5463646 | D375734 |
| 4491972 | 4706036 | 4845772 | 5020091 | 5166596 | D344511 | 5465412 | D375932 |
| D277667 | D292920 | D302015 | 5020092 | 5175759 | 5301365 | 5469177 | D375952 |
| 4504834 | 4710724 | 4851966 | 5020093 | 5175874 | 5321847 | 5475752 | D376127 |
| D278708 | 4711361 | 4868576 | 5028083 | D332261 | D348880 | D365094 | 5588041 |
| 4523155 | 4715063 | 4870686 | 5028859 | 5182749 | 5349588 | D365817 | 5589796 |
| 4546329 | 4716319 | D303656 | 5029044 | D332785 | 5359696 | 5486843 | 5590177 |
| 4550426 | 4716391 | 4876552 | 5029233 | 5185566 | 5361400 | 5487184 | 5594778 |
| 4551696 | 4723305 | 4879533 | 5031028 | 5187809 | 5363071 | 5488335 | 5594951 |
| 4564821 | D294257 | D305427 | 5036532 | 5193223 | 5365549 | 5488649 | D377792 |
| D282169 | 4727306 | 4896124 | 5053924 | 5195106 | D352497 | D366872 | D377934 |
| 4571595 | 4727583 | 4897873 | 5057762 | 5195108 | 5366826 | 5493198 | 5604050 |
| 4573017 | 4730195 | D305717 | D320780 | 5201069 | D353131 | 5493714 | 5606730 |
| 4574243 | 4734635 | 4904549 | 5059885 | 5204977 | D353361 | 5497126 | D378366 |
| 4585957 | 4736277 | 4905288 | 5060294 | 5210793 | 5375143 | 5497382 | 5613229 |
| 4602218 | 4737976 | 4905301 | D322783 | 5214675 | 5375258 | D367640 | 5613863 |
| D284759 | 4740794 | D306293 | D322955 | 5222104 | 5379324 | 5499394 | 5615233 |
| D285439 | 4741018 | D306441 | 5081674 | 5222251 | D354055 | 5506490 | 5621763 |

Other patents pending.

In order to access Iridium LLC Global Customer Care (24 hours a day, 7 days a week), dial one of the following numbers:

English: 811* or +8817-629-90051 or +1407-661-3204

Spanish: 812* or +8817-629-90052 or +1407-661-3205

Portuguese: 813* or +8817-631-90053 or +31-79-347-1513

Russian: 814* or +8817-631-90054 or +31-79-347-1514

German: 815* or +8817-631-90055 or +31-79-347-1515

Italian: 816* or +8817-631-90056 or +31-79-347-1516

French: 817* or +8817-631-90057 or +31-79-347-1517

Japanese: 818* or +8817-637-90058 or +61-2-9215-1518

Cantonese: 819* or +8817-637-90059 or +61-2-9215-1519

Mandarin: 820* or +8817-637-90060 or +61-2-9215-1520

Korean: 821* or +8817-637-90061 or +61-2-9215-1521

Thai: 822* or +8817-637-90062 or +61-2-9215-1522

Arabic: 823* or +8817-631-90063 or +61-2-9215-1523

Other: 824* or +8817-637-90064 or +61-2-9215-1524

TTY Toll-Free Number 1-888-390-6456

TTY (outside the United States) +1-847-523-1841

+ designates international dialing access code (00)

^{*}Toll free from the Satellite Series™ 9500 Portable Telephone.





PRODUCTS FOR THE IRIDIUM SYSTEM

In order to contact Motorola (Monday thru Friday 7AM to 7PM [CST]), dial one of the following numbers:

US & Canada: 1-888-839-4647

Outside the US & Canada: (Toll-Free Global Number): +1-8000-839-4647

Direct Dial: +1-847-523-1898

TTY Toll-Free Number 1-888-390-6456 TTY (outside the United States): +1-847-523-1841

+ designates international dialing access code (00)

www motorola com

©1998 Motorola, Inc.

(M), MOTOROLA, and the SATELLITE SERIES logo are trademarks or registered trademarks of Motorola, Inc.

Iridium, the Iridium logo, and Iridium World Service are trademarks and/or service marks of Iridium LLC. 68P09419A46-O 12/98 RGC