

HT510/HT410


Quick Setup Guide

NEC


7N8P5212
Printed in China

Copyright© 2004 by NEC Viewtechnology, Ltd.
Ver 2.09/04 (T)


Step 1 Connect your video equipment or computer to the projector.

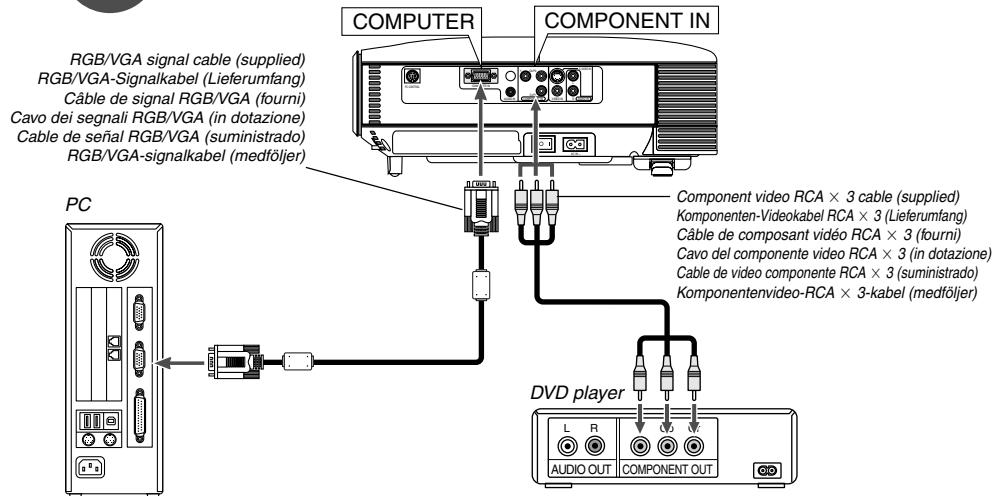


Step 2 Connect the supplied power cable.

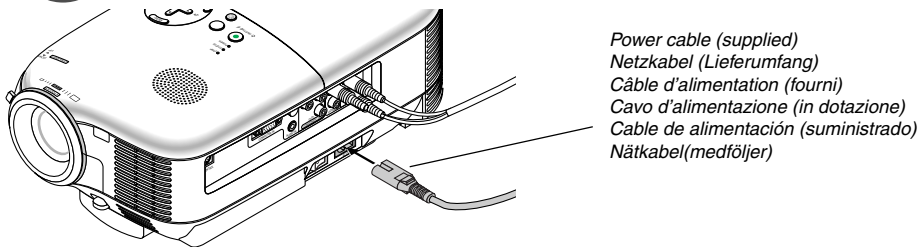

Step 3 Turn on the main power switch.

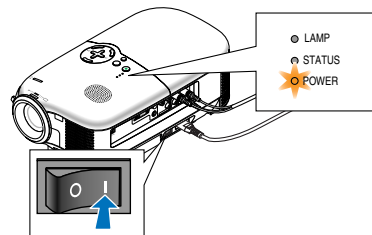

Step 4 Turn on the projector.

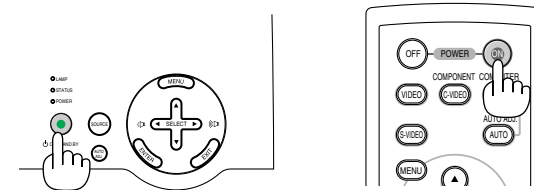

To turn on the projector, press and hold the **ON/STANDBY** button on the projector cabinet or the **POWER ON** button on the remote control for a minimum of 2 seconds.

Drücken und halten Sie zum Einschalten des Projektors die **ON/STANDBY**-Taste am Projektorgehäuse oder die **POWER ON**-Taste auf der Fernbedienung mindestens 2 Sekunden lang gedrückt.


Pour allumer le projecteur, appuyer sur la touche **ON/STANDBY** du coffret du projecteur ou sur la touche **POWER ON** de la télécommande et la maintenir enfoncée pendant au moins 2 secondes.

Per accendere la corrente del proiettore, premete e mantene premuto il tasto **ON/STANDBY** sull'involucro del proiettore o il tasto **POWER ON** del telecomando, mantenendolo premuto per almeno 2 secondi.

Para conectar la alimentación del proyector, pulse el botón **ON/STANDBY** en la cubierta del proyector o el botón **POWER ON** en el mando a distancia durante al menos 2 segundos.

Tryck på **ON/STANDBY**-tangenten på projektorhöljet eller **POWER ON**-tangenten på fjärrkontrollen intryckt i minst 2 sekunder för att slå på strömmen till projektorn.


Step 5 Select a source.

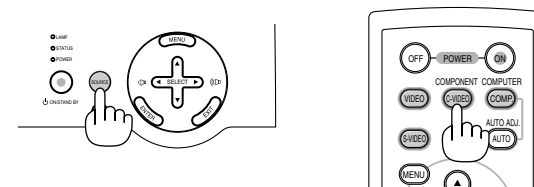

Step 6


Adjust the picture size and position.

• Use the lens shift.

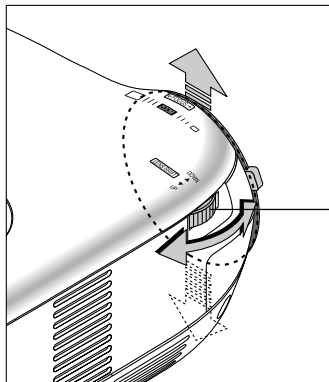

Lens shift dial
Linsenversatz-Drehregler
Molette d'ajustement de l'objectif
Quadrante di spostamento dell'obiettivo
Dial de cambio de lente
Lens Shift-ratt



• Adjust the tilt foot.

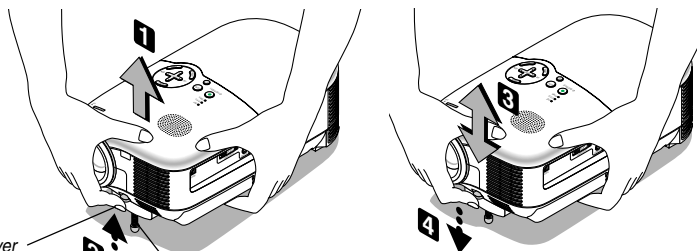

Adjustable Tilt Foot Lever
Kippfuß-Einstellhebel
Lever du pied à inclinaison réglable
Leva del piedino di inclinazione regolabile
Palanca de la pata de inclinación ajustable
Justerfotsspak

Adjustable Tilt Foot
Einstellbarer Kippfuß
Pied à inclinaison réglable
Piedino di inclinazione regolabile
Pata de inclinación ajustable
Justerfot


• Adjust the rear foot.

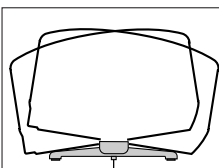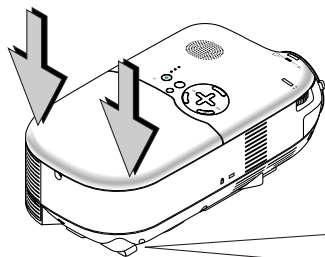

Adjustable Rear Foot
Einstellbarer hinterer Fuß
Pied arrière réglable
Piedino posteriore regolabile
Pie trasero ajustable
Bakre justerfot


• ZOOM

Zoom lever
Zoom-Hebel
Lever de zoom
Leva per lo zoom
Palanca de zoom
Zoomspak

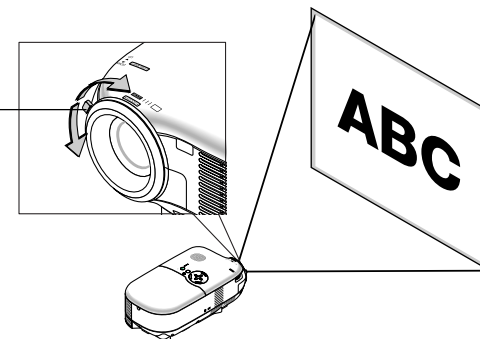

• FOCUS

Focus ring
Fokusring
Baquet de mise au point
Anello di messa a fuoco
Aro de enforque
Fukusring

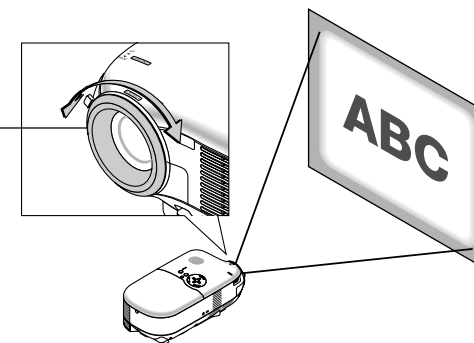

• Correct keystone distortion

