



## Using the Flash

1. Open the lens barrier.  
Slide the lens barrier until it clicks to turn on the camera.


2. Press the OK/menu button.  
The monitor shows the shooting mode menu.

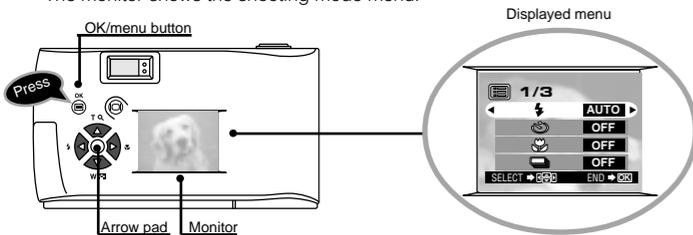

3. Select by pressing the or arrow pad key.  
The default setting is Auto-Flash.

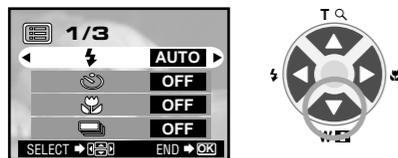

4. Each time you press the or arrow pad key, the flash mode changes:  
Auto-Flash → Red-Eye Reduction Flash → Fill-In Flash → Night Scene → Flash Off. Select one of these modes.

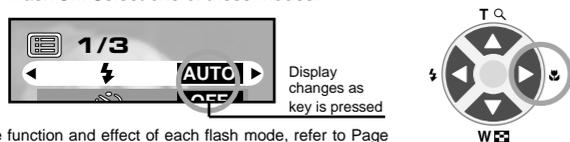


**Note:** For the function and effect of each flash mode, refer to Page 56 of the camera's Instructions.

5. When you have made your selection, press the OK/menu button.  
The desired flash mode is set


## Shooting a Close Subject (at 10 cm ~ 0.5 m/0.4 in ~ 1.6 ft) Using the Macro Mode

1. Open the lens barrier.  
Slide the lens barrier until it clicks to turn on the camera.

2. Press the OK/menu button.  
The monitor shows the shooting mode menu.

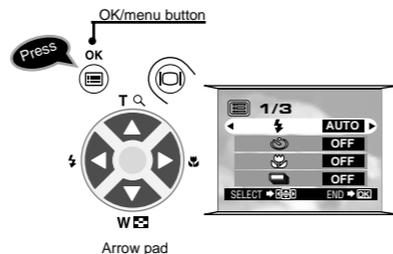


3. Select by pressing the or arrow pad key.

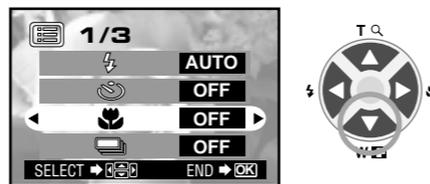

4. Select "ON" by pressing the or arrow pad key.



5. When you have made your selection, press the OK/menu button to enter the Macro mode.

**Note:** The macro mode is automatically canceled when the camera is turned off.

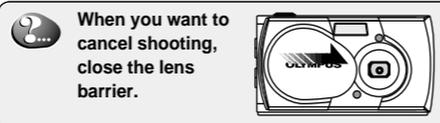


## Viewing Pictures


1. Make sure the lens barrier is closed.

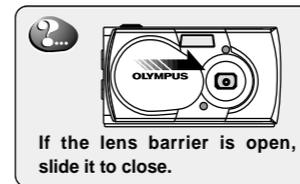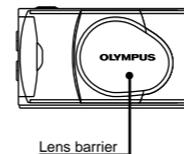

2. Press and hold the monitor button for a moment.  
The last picture you took appears on the monitor.

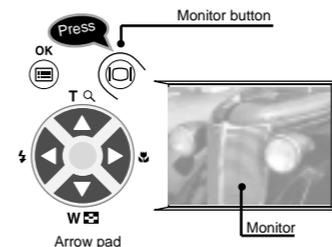

3. To view other images, press the or arrow pad key.

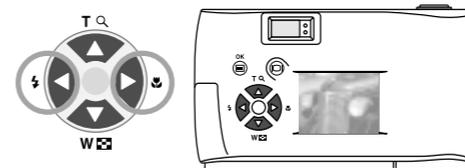

**Note:** When you want to cancel viewing, press the monitor button again.

END


# CAMERA DIGITAL CAMERA C-1/D-100

**OLYMPUS**

Using this camera for the first time

START

## QUICK START GUIDE

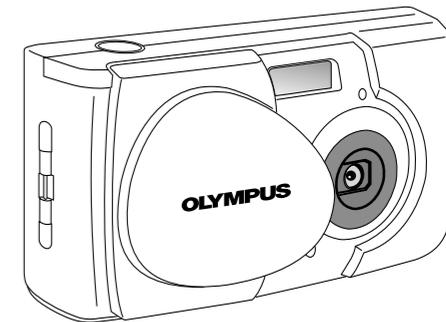

OLYMPUS OPTICAL CO., LTD.

San-Ei Building, 22-2, Nishi Shinjuku 1-chome, Shinjuku-ku, Tokyo, Japan.  
(Customer support) Tel. 0426-42-7499 Tokyo  
<http://www.olympus.co.jp>

OLYMPUS AMERICA INC.


Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 631-844-5000  
(Technical support) Tel. 1-888-553-4448 distec @ Olympus  
<http://www.olympus.com>

OLYMPUS OPTICAL CO. (EUROPA) GMBH.

(Premises/Goods delivery) Wendenstraße 14-18, 20097 Hamburg, Germany. Tel. 040-237730  
(Letters) Postfach 10 49 08, 20034 Hamburg, Germany.  
<http://www.olympus-europa.com>

## Checking the Package Contents


First make sure that all the provided accessories listed below are included in the package. If anything is missing or damaged, contact your local Olympus representative immediately.

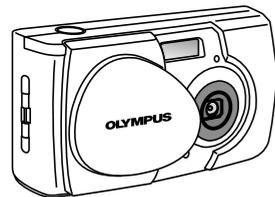


Camera



 
CD-ROM




CR-V3 lithium battery pack

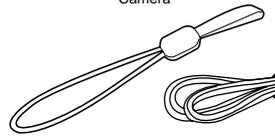


Strap

 


Video cable

 

USB cable

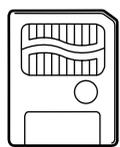

SmartMedia (8 MB)

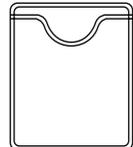

Static-free case for SmartMedia



Basic Manual/Warranty/Quick Start Guide (this publication)



Write-protect seals for SmartMedia (4 pieces)




Labels for SmartMedia (2 pieces)



SmartMedia Instructions



## Attaching the Provided Strap

1. Attach the strap as shown.

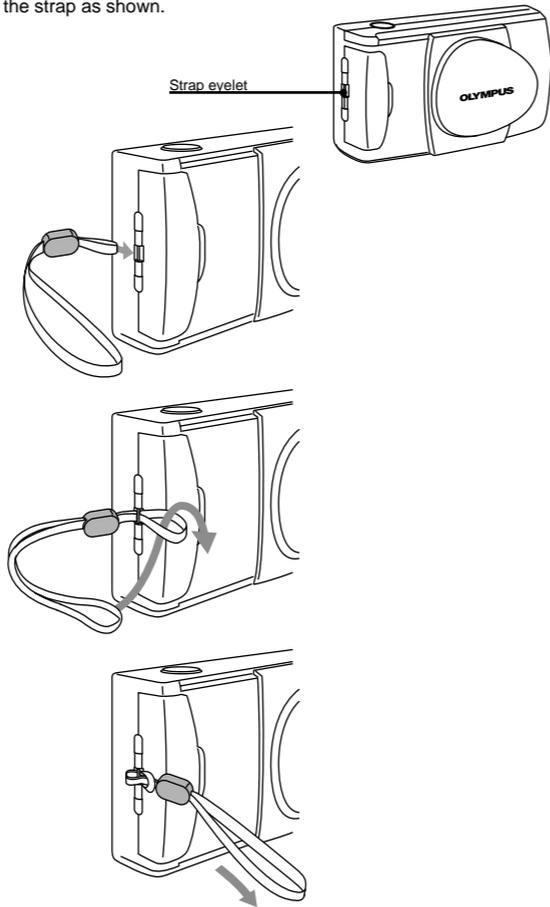


## Loading the Battery and Card (SmartMedia)

1. Make sure the lens barrier is closed.

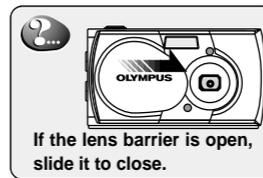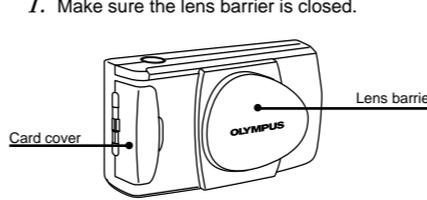


2. Slide the battery compartment cover in the direction of the arrow ①, and lift the cover in the direction of the arrow ②.

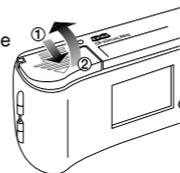


3. Insert the battery in the direction shown in the figure.




4. Close the battery compartment cover in the direction of the arrow ①, and press the cover in the direction of the arrow ② until it clicks.

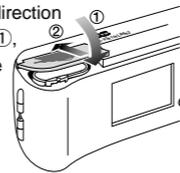

5. Open the card cover.

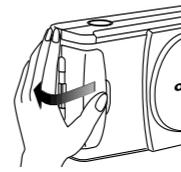


6. Insert the card as far as it will go in the direction shown in the figure.

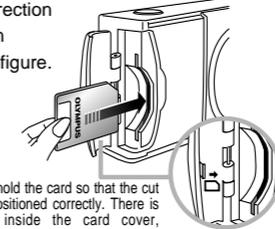

Be sure to hold the card so that the cut corner is positioned correctly. There is an arrow inside the card cover, indicating the insertion direction.

7. Close the card cover until it clicks.

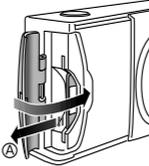


**Note:**  
To remove the card, hold the card with your fingertips, and pull it out in the direction of the arrow ③.

## Shooting Pictures

 1. Open the lens barrier.

Slide the lens barrier until it clicks to turn on the camera.




2. Hold the camera, and look through the viewfinder.



3. Press the shutter button halfway (half-press) to make sure the green lamp on the right of the viewfinder lights.

When lit: The subject is in focus. You can shoot.  
When blinking: The subject is out of focus. Half-press the shutter button again.

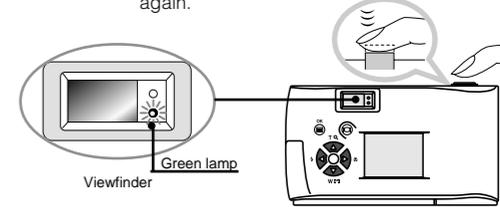

4. Press the shutter button all the way (full-press) to take the picture.

The shutter is released and the picture is taken. Once the picture has been taken, it is displayed on the monitor for a short time.

