

CAMEDIA

DIGITAL CAMERA

C-2 Zoom

OLYMPUS®

D-520 ZOOM

C-220 ZOOM

Quick start guide

We've included this convenient Quick start guide to show you basic functions and techniques that will help you quickly master your new camera. For more detailed descriptions of procedures, as well as for additional information on more sophisticated features not covered here, please refer to the printed "Basic Manual", or the primary "Reference Manual" on the CD-ROM.

Package contents

- ☐ Camera
- ☐ Strap
- ☐ AA (R6) alkaline batteries (2 pieces)
- ☐ Video cable
- ☐ USB cable
- ☐ Basic manual
- ☒ Quick start guide
- ☐ Software installation guide (included in the CD-ROM package)

☐ CD-ROM with Windows 98 USB driver software, Reference manual, and more.

☐ Warranty card/Registration card (not provided in some areas)

☐ Safety Precautions (booklet)

☐ SmartMedia

☐ Static-free case

☐ Index labels (2 pieces)

☐ Write-protect adhesive seals (4 pieces)

☐ SmartMedia instructions

OLYMPUS AMERICA INC.

Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 631-844-5000  
24/7 online automated help: <http://support.olympusamerica.com/>  
Phone customer support: Tel. 1-888-553-4448 (Toll-free)

OLYMPUS OPTICAL CO. (EUROPA) GMBH.

Premises/Goods delivery: Wendenstraße 14-18, 20097 Hamburg, Germany  
Tel. 040-237730  
Letters: Postfach 10 49 08, 20034 Hamburg, Germany

OLYMPUS®  
<http://www.olympus.com/>

Printed in Japan

VT351301


1 Getting started

Attaching the strap

- 1 Thread the short end of the strap through the strap eyelet.


2 Thread the long end of the strap through the loop that has already gone through the eyelet.

3 Pull the strap tight, making sure that it is securely fastened and does not come loose.

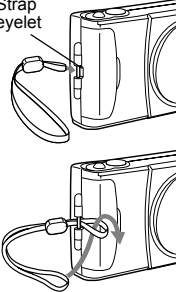


Loading the batteries


- 1 Make sure that:

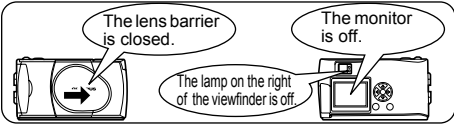


- 2 Slide the battery compartment cover in the direction of A (the direction indicated by the mark on the cover), and lift it up in the direction of B.
- 3 Insert the batteries, making sure that they are correctly oriented as shown in the illustration.

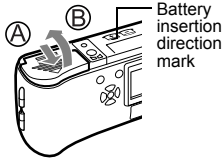


When using AA (R6) batteries

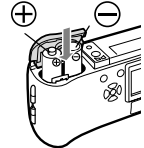

When using a lithium battery pack

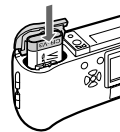


- 4 Close the battery compartment cover in the direction of C. While pressing the mark, slide the cover in the direction of D.
- If the battery compartment cover will not close easily, do not force it. Try pressing the mark with both hands.

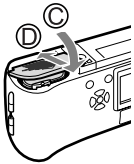


Inserting the card (SmartMedia)

- 1 Make sure that:

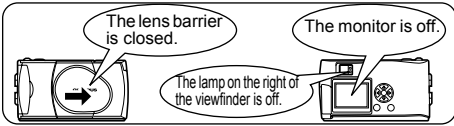


- 2 Open the card cover.

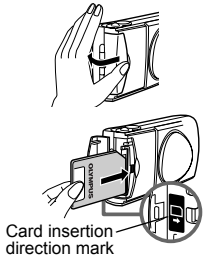

- 3 Insert the card as far as it will go in the direction shown in the illustration.
- There is an arrow inside the card cover, indicating the direction in which the card should be inserted.

- 4 Close the card cover securely until it clicks

 - Removing the card.
- Hold the card with your fingertips and pull it out in the direction of the arrow.



Never open the card cover, or remove the card or the batteries while the camera is turned on. Doing so could destroy all data on the card. Destroyed data cannot be restored.

2 Turning the power on/off

When shooting pictures

Power on:

Open the lens barrier.

 
The camera turns on in the shooting mode. The lens extends and the flash pops up. If the lens does not extend, the lens barrier is not fully open. Open the lens barrier until it clicks.

Power off:


Close the lens barrier slightly until it just touches the lens barrier.

Wait until the lens is fully retracted, then close the lens barrier completely. The camera turns off. (The monitor also turns off.) Press the flash down manually until it locks in place.

Power on



Power off

 

When playing back pictures

Power on:

Press the (monitor) button with the lens barrier closed.

 
The camera turns on in the playback mode. The monitor turns on.

Power off:

Press the (monitor) button.

The camera turns off (the monitor turns off).


With the lens barrier closed



Power ON



 Power OFF



To save battery power, the camera automatically enters the sleep mode after about 3 minutes of non-operation. If the monitor is on, it will automatically turn off. The camera activates again as soon as you lightly press the shutter button or zoom lever. Whenever possible, turn the camera off when you do not intend to take any pictures for a while.

3 Shooting/Playback

Taking still pictures

- 1 Open the lens barrier.

Slide the lens barrier open until it clicks. The flash pops up and the lens extends.

 
 

2 Position the AF target mark over the subject in the viewfinder.

3 Press the shutter button gently (halfway).

The green lamp on the right of the viewfinder lights up when the focus and exposure are locked. At this time the sound of the focusing mechanism can be heard from inside the camera, but no picture is being taken.

4 Press the shutter button all the way (fully).

The camera takes the picture.

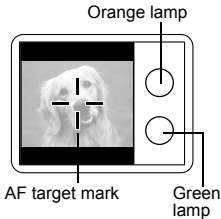

Playing back still pictures


- 1 Press (playback) with the lens barrier closed.

The monitor turns on and displays the last picture taken.

2 Press (left), (right), (left), (right) to display the previous/next picture.

3 Press (playback) to cancel playback.

The monitor and camera turn off.

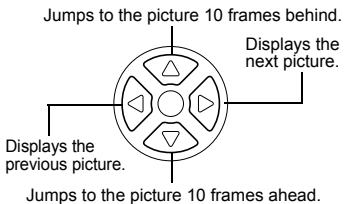

Recording movies

- 1 Press (movie) with the lens barrier open.

The top menu in the shooting mode is displayed.

2 Press (up) to select DRIVE.

3 Press (left), (right) to select (movie icon), then press (movie).

4 Record the movie while observing your subject on the monitor.

Press the shutter button fully to start recording. Press the shutter button fully again to stop recording.



Playing back movies

- 1 Press (playback) with the lens barrier closed.

The monitor turns on.

2 Press (left), (right) to display the desired picture with a (movie icon) indicator, then press (movie).

The top menu is displayed.

3 Press (left) to select MOVIE PLAYBACK.

The movie is played back after the orange lamp on the right of the viewfinder blinks and the movie data is downloaded to the camera. When the movie reaches the end, the display returns automatically to the beginning of the movie.

4 Press (movie) to display the MOVIE PLAYBACK menu. Then select the desired operation and press (movie).

PLAYBACK: Plays back the entire movie again.

FRAME BY FRAME: Plays back the movie manually one frame at a time.

EXIT: Leaves the movie playback mode.



4 Erasing pictures

Single-frame erase

- 1 Press (playback) with the lens barrier closed.

The monitor turns on.

2 Press (left), (right), (left), (right) to select the picture you want to erase.

3 Press (movie).

The top menu is displayed.

4 Press (left) to select ERASE.



- 5 Press (left), (right) to select YES, then press (movie).

The picture is erased and the menu is closed.



- Erasure is not possible if the picture you want to erase is protected or a write-protect seal is attached to the card. Before erasing, unprotect the picture or remove the write-protect seal from the card.
- Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

5 Protecting pictures (Protect)

You are recommended to protect important pictures to avoid accidentally erasing them.

- 1 Press (playback) with the lens barrier closed.

The monitor turns on.

2 Press (left), (right), (left), (right) to select the picture you want to protect.

3 Press (movie), then press (movie).

The mode menu is displayed.

4 Press (left), (right) to select the PLAY tab, then press (movie).

5 Press (left), (right) to select ON, then press (movie).

6 Press (left), (right) to select ON.

The selected picture is protected. To close the menu, press (movie) twice.



- The (movie icon) indicator is displayed at the top right of the protected picture.
- Protection on each picture remains even when the camera is turned off.



- Protected pictures cannot be erased by the single-frame/all-frame erase function, but they can be all erased with the format function.
- Protection cannot be applied to pictures stored on a card with a write-protect seal.

