

**Congratulations on your purchase of an Olympus® Digital Camera, one of the finest digital photography systems available today. Your complete satisfaction is very important to us.**

**When you connect your Olympus Digital Camera to a computer, you open the door to unlimited creativity. Your system comes bundled with a complete suite of software to view, retouch and customize images, incorporate pictures into documents, and print.**

**And it's all as easy as...**

Some revisions may be done without notice to improve use and make CAMEDIA Master compatible to new operating systems. To confirm if there are any new or updated programs, visit the Olympus web site at <http://www.olympus.com/>

1 CD CONTENTS

- CAMEDIA Master 4.0
- QuickTime 5.0
- Acrobat Reader 5.0/4.0\*1
- USB driver
- Digital Camera Reference Manual\*2

\*1 The Acrobat Reader for Macintosh users included on the CD-ROM is Version 4.0.

\*2 Some cameras include a printed manual instead of the Digital Camera Reference Manual in .pdf format on the provided CD-ROM.

2 SYSTEM REQUIREMENTS

Make sure your computer meets the following minimum system requirements.

Windows		Macintosh
Pentium or later 64MB or greater 120MB minimum available HD space Windows 98, 98SE, Me, 2000, XP (USB port)	CPU RAM Hard disk Required software	Power Macintosh 40MB or greater for applications 120MB minimum available HD space Mac OS 9.0 (8.6) - 9.2/OS X 10.1 (USB port)

- \* Among Windows XP systems, only Windows XP Home Edition/Professional are supported.
- \* Among Windows 2000 systems, only Windows 2000 Professional is supported.
- \* USB support is not available for the following systems, even for PCs equipped with a USB port.  
Windows 98 upgrade (from Windows 95)/Windows 95/Windows NT 4.0
- \* Depending on the PC (you are using), it may not be possible to play back images of large file size and movies properly.
- \* If you are using a printer compliant to post-script, there is a limitation of the print function.
- \* Only a Macintosh with a built-in USB port can be used for USB connection.
- \* Users running Mac OS 8.6 need to install USB Mass Storage Support 1.3.5 to connect an Olympus camera to a computer by USB connection.
- \* When using Mac OS X, disconnect the camera (by dragging the camera's drive icon to the trash) before carrying out any of the following operations:
  - Powering off the camera.
  - Opening the card cover of the camera.
- \* To display the online help requires Internet Explorer 4.0 or later (Windows) or Web Browser (Macintosh).
- \* To connect the Olympus camera to your computer, an exclusive Olympus cable is needed. If the cable was not included with your camera, it is an optional item, and will have to be purchased separately.
- \* A microphone (and a sound card for Windows) is needed for sound recording and playback. QuickTime is needed for movies. (Check your camera's available functions as well.)
- \* For the current operating system compatibility, please visit the Olympus web site at <http://www.olympus.com/>

3 INSTALLING THE SOFTWARE

 
This CD-ROM contains software that lets you download, view, manipulate, and print, as well as create movie files, from images taken with your Olympus Digital Camera.

Windows

Installing QuickTime 5.0

Disable any virus protection software installed on your computer before proceeding with the installation.

1. Start Windows and insert the CAMEDIA Master software CD into your CD-ROM drive. The Olympus Windows Installer screen should automatically launch.  
**Note:**  
In some cases, depending on your PC's settings, the Olympus Windows Installer screen may not launch automatically. If so, from the desktop open **My Computer** → right-click **CM40** (CD-ROM drive icon) → select **Open** → and then double-click **Setup.exe**.
2. Click **CAMEDIA Master** to proceed with the installation.
3. Click an installation language.  
**Note:**  
CAMEDIA Master requires that QuickTime 5.0 be installed on your machine. If it is already installed, proceed to "Installing CAMEDIA Master 4.0"; otherwise advance to step 4.
4. After the **Welcome to QuickTime 5** installation window appears, two dialog boxes will pop up. Click **Next** in both to begin installation.
5. Click **Agree** to accept the terms of the licensing agreement, or **Disagree** to cancel the installation.
6. Choose a destination for the software. The setup program will automatically install QuickTime 5.0 in the folder shown in the window, but you can also select another folder. When you are done, click **Next**.
7. Choose a program folder. The setup program will automatically create a program folder entitled **QuickTime**, but you can also type a new folder name, or choose one of your existing folders. Make your selection and click **Next**.
8. Click **Next** to install the QuickTime Plugin for Web Browsers into Microsoft Internet Explorer, Netscape Navigator, or Netscape Communicator.

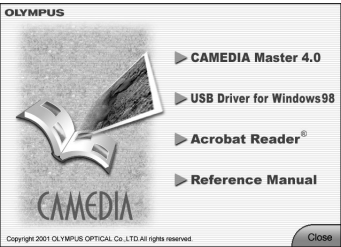


SOFTWARE INSTALLATION GUIDE

for Windows® & Macintosh™

9. For registration, do not enter anything. Click **Next**.
10. The QuickTime 5.0 and QuickTime Plugin files will now be copied to the appropriate folders on your PC.
11. When three QuickTime **Settings** dialog boxes appear in succession, click **Next** for the first two and **Finish** for the last.
12. When the screen appears telling you that the installation is complete, click **Close** to finish QuickTime installation. Check the marks if you would like to view the README files and launch QuickTime Player.
13. The installation screen of CAMEDIA Master will appear. Follow the on-screen instructions.

Installing CAMEDIA Master 4.0

1. When the installation screen of CAMEDIA Master appears, click **Next** to bring up the licensing agreement. Click **Yes** to accept the terms of the licensing agreement, or **No** to cancel the installation.
2. Enter **User Name** and **Serial Number** for registration. Click **Next**.  
\* Serial Number is printed on the seal inside of the CD package.
3. Choose a destination for the software. The setup program will automatically install CAMEDIA Master 4.0 in the folder shown in the window, but you can also select another folder. When you are done, click **Next**.
4. Choose a program folder. The setup program will automatically create a program folder entitled **OLYMPUS CAMEDIA**, but you can also enter a new folder name, or choose one of your existing folders. Make your selection and click **Next**. Click **Next** again to confirm your settings.
5. When the CAMEDIA Master 4.0 is installed completely, click **Finish**.
6. A Readme file is displayed. Be sure to read it. To close the Readme file, click . The screen returns to Olympus Windows Installer.  
**Note:** Your PC may restart.

Installing Acrobat Reader™ 5.0

Users who already have Acrobat Reader installed on their computers can skip this section.

Users who do not have Acrobat Reader installed on their computers need to install it to read the software manuals in pdf. format.

When the installation of CAMEDIA Master software is completed, its manual is also installed automatically.

1. Click **Acrobat Reader** on the Olympus Windows Installer screen.
2. Click an installation language.
3. The Acrobat Reader 5.0 installation window appears. Click **Next**.
4. Choose a destination for the software. The setup program will automatically install Acrobat Reader in the folder shown in the window, but you can also select another folder. Make your selection and click **Next**.
5. When the **Thank you for choosing Acrobat Reader!** message appears, click **OK**.
6. When the screen returns to Olympus Windows Installer, click **Close**.

Installing the camera's USB driver

Users with an **Olympus Standard USB connection camera** (C-3000Z, C-3030Z, C-2100UZ, or C-211Z) must install a USB driver. See the note in the section **Important information for Olympus Standard USB and Serial connection camera users**.

 
- **Users running Windows Me/2000/XP and using a storage-class (auto-connect) USB camera** can skip this section, since the USB driver is automatically installed when the camera is recognized by the computer.
- **Users running Windows 98/98 SecondEdition and using a storage-class USB camera** need to install the USB driver before connecting the camera and the PC. Follow the instructions below.
  1. Click **USB driver for Windows 98** from the Olympus Windows Installer screen.
  2. Click **Continue** and the USB driver installation will automatically start.
  3. Click **OK** to restart your computer and the installation is complete.  
\* After the computer is restarted, remove the CD-ROM.

*All of the CAMEDIA Master software CD should now be successfully installed.*

Macintosh

Installing CAMEDIA Master 4.0

1. Start your Macintosh.
2. Turn off any virus protection software.
3. Insert the CAMEDIA Master software CD into your CD-ROM drive.
4. The CD-ROM window automatically appears.  
**Note:**  
If not, find the **CM40** icon on your desktop and double-click it.
5. Double-click the folder that matches your operating system.

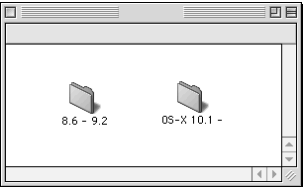

6. Double-click on the **CAMEDIA Master** folder.
7. Double-click on an installation language icon.
8. Double-click the **CAMEDIA Master Installer** icon.
9. A screen with the licensing agreement appears. Click **Agree** to accept the terms of the licensing agreement, or **Disagree** to cancel the installation.
10. Click **Choose** to save the Olympus CAMEDIA Master software to a folder entitled **Applications**. You can also enter a new folder name.
11. The CAMEDIA Master 4.0 files will now be copied to the appropriate folder on your Macintosh.
12. Click **OK** to leave the installer.  
**Note:**  
If a **Restart** button is displayed, click it to restart your Macintosh.

You have now finished installing all the needed software from the CAMEDIA Master software CD.

Installing QuickTime 5.0

You do not need to install QuickTime 5.0 if this version is already fully installed to your computer. If your Macintosh has an earlier version of QuickTime, you must install version 5.0.

**Note for Mac OS X users:**  
Use the QuickTime pre-installed to your Macintosh. Skip this section.

1. Follow steps 1 to 6 of the CAMEDIA Master installation procedure and double-click the **QuickTime Installer** icon.
2. The **Welcome to QuickTime 5** installation window appears. Click **Continue** to begin installation.
3. Click **Agree** to accept the terms of the licensing agreement, or **Disagree** to cancel the installation.
4. Choose an installation type. To work properly, the **Recommended** installation is needed. Make sure that the selected installation type is **Recommended**, then click **Continue**.
5. For registration, do not enter anything. Click **Continue**.
6. The QuickTime 5.0 files will now be copied to the appropriate folders on your Macintosh. When the next screen appears, click **Quit**.
7. When three QuickTime **Settings** dialog boxes appear in succession, click **Next** for the first two and **Finish** for the last. When complete, you may restart your computer.

Installing Acrobat Reader™ 4.0

Users who already have Acrobat Reader 4.0 installed on their computers can skip this section.

**Note for Mac OS X users:**  
Use the Acrobat Reader pre-installed to your Macintosh. Skip this section as well.

Users who do not have Acrobat Reader installed on their computers need to install it to read the manuals in pdf. format.

When the installation of CAMEDIA Master software is completed, its manual is also installed automatically.

1. Follow steps 1 to 6 of the CAMEDIA Master installation procedure and double-click the **Acrobat Reader Installer** icon.
2. The Acrobat Reader 4.0 installation window appears. Click **Continue**.
3. Choose a destination for the software. The setup program will automatically install Acrobat Reader in the folder shown in the window, but you can also select another folder. Make your selection and click **Install**.
4. When the installation was successful, a message appears. Click **Quit**.

Installing the camera's USB driver

Users with an **Olympus Standard USB connection camera** (C-3000Z, C-3030Z, C-2100UZ, or C-211Z) do not need to perform a separate driver installation. Macintosh driver installation automatically takes place during CAMEDIA Master software installation. After installation, you need to restart your computer.

- **Users running Mac OS 9.0 – 9.2/OS X (10.1)** can skip this section, since the USB driver is pre-installed with your operating system.
  - **Users running Mac OS 8.6** need to install USB Mass Storage Support 1.3.5.
- For more information, visit the Apple Computer web site at <http://www.apple.com/>

*All of the CAMEDIA Master software CD should now be successfully installed.*







4

DOWNLOADING YOUR IMAGES


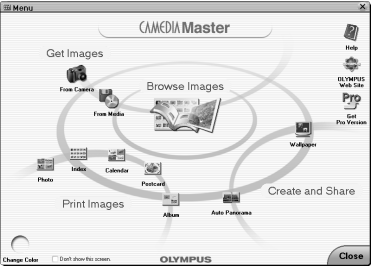 
- Note for Mac OS X users:**
- PC freezes if camera is incorrectly disconnected.
  - Date and time information of image files is not accurately displayed.
  - If the camera card cover is opened while the camera is connected to the PC, the **Untitled** camera icon will not disappear from the desktop.

Windows

 
Macintosh

1. Turn off the camera. The process used to turn off the camera varies depending on the camera model. Refer to the camera manual for detailed instructions, or use the reference notes below.  
**✂ Olympus camera with a lens barrier**  
Close the lens barrier.  
**✂ Olympus camera without a lens barrier**  
● If the mode dial has an OFF position → Set the mode dial to OFF.  
● If the mode dial has no OFF position → Turn the power switch to OFF or press the power button.
2. Connect the optional A/C adapter or make certain that the batteries are fresh.
3. Connect one end of the USB cable to a USB port available on the computer.  
**Note:**  
If you are using a serial download camera, replace the term "USB" used in this section with "serial".
4. Connect the other end of the USB cable to the USB connector on the camera (located under the side cover).
5. Turn the camera on. The process used to turn on the camera varies depending on the camera model. Refer to the camera manual for detailed instructions, or use the reference notes below.  
**✂ Olympus camera with a lens barrier**  
Open the lens barrier fully. A green lamp next to the viewfinder will blink.  
**✂ Olympus camera with a  mode, without a lens barrier**  
Set the mode dial to  and turn the power switch to ON.  
**✂ Olympus camera with a  mode, without a lens barrier**  
Set the mode dial to  .  
● If the mode dial has an OFF position → The camera automatically turns on.  
● If the mode dial has no OFF position → Turn the power switch to ON or press the power button.  
**Note for Windows XP users:**  
When connected to PC, a screen to select the operations of the file appears. Click **Cancel** to finish this screen.

- Note for Mac OS X users:**  
When connected to PC, the Apple Image Capture software dialog appears. Select **File** and then **Close** to exit this software.
6. To start up CAMEDIA Master, double-click its icon on the desktop. The CAMEDIA Master main menu appears.  
**Note for Macintosh users:**  
The first time you start the program, the registration dialog will appear before the CAMEDIA Master main menu. Enter **User Name** and **Serial Number** and click **Next**.  
\* Serial Number is printed on the seal attached to the CD package.

7. In the main menu, click **From Camera**. The thumbnails of all images in the camera appear on the left-hand side of the screen.  
**Note:**  
Downloading images via **From Camera** can only be done with an Olympus digital camera using a SmartMedia card. If your digital camera is a non Olympus brand camera, and is instead recognized as a removable disk, images are downloaded via **From Media**.
- 
8. On the right-hand screen shown above, click **New Album**. Check **Group** and enter a group name, then click **OK**. A new group is created. (Creating a new group)
  9. Click **New Album** again. Check **Album** and select the new group, then enter an album name. When you click **OK**, a new album is created. (Creating a new album)
  10. To download images to the new album, click on the new group and then click the new album shown on the right-hand side of the screen. (Specifying the destination album)

11. Click **Get Images**. Copying of all the images to the new album starts.  
**To copy only selected images**  
Click **Selected Images**, then select the thumbnails by any of the following methods, and click **Get Images**.
  - To select a single image  
Click on the image.
  - To selectively add images to the selection  
Hold down the Ctrl key (for Windows) or command key (for Macintosh), and click on the images.
12. When all of the images have been copied, a confirmation message appears. Click **OK**.  
If you want to see the copied images now, click **Browse images now** instead of **OK**.

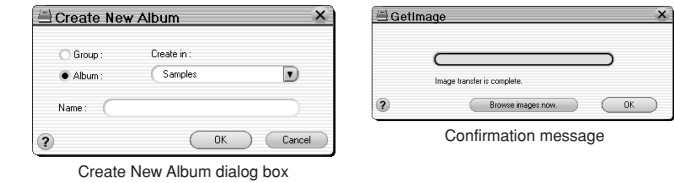

**Warning:**  
Do not switch the camera off or pull out a connection cable while CAMEDIA Master is starting up or running. These actions can cause malfunctioning of the camera and applications.

To take full advantage of the Olympus CAMEDIA Master image editing and manipulation features, refer to the help manual provided under the Help icon in the CAMEDIA Master application.  
The help manual and PDF manual are used in common for CAMEDIA Master 4.0 and CAMEDIA Master Pro. The symbol **Pro** indicates functions which can only be used in the Pro version. Functions indicated with this symbol are not available in version 4.0.


5

ENJOY YOUR IMAGES

Once you have downloaded your images into a computer, your photographic creativity is limited only by your imagination. You can reorder, retouch, and enhance any saved image. Merge them with other graphic elements to design never-before-seen imagery or panoramic scenes. Create greeting cards, calendars, catalogs, postcards, and newsletters with brilliant colors. Produce visual presentations. With an Olympus CAMEDIA Master software, you can do it all!

CAMEDIA Master Pro

In addition to the functions in version 4.0, **CAMEDIA Master Pro** allows you to use extra functions, including movie editing, contact sheet printing, E-mail, HTML album, free image stitching, and slide show. With the Pro version, you can become more expert in using your digital camera.  
To purchase the Pro version and upgrade from version 4.0, use the following procedure.

- Purchasing the CAMEDIA Master Pro Upgrade**
- To perform the following procedure requires that you can use the Internet with your computer.
1. Click the **Get Pro Version ** in the main menu. The **Registration** dialog box appears.
  2. Click **Get**. The web browser starts and the web page for upgrade to the Pro version appears.
  3. Follow the directions on the web page to purchase a license number.  
\* Be sure to *carefully* write down the purchased license number before leaving the web site.
  4. In the Registration dialog box, enter your name and license number, then click **OK**. Your CAMEDIA Master 4.0 is upgraded to CAMEDIA Master Pro automatically.

\* CAMEDIA Master Pro 4.0 CD Package will also be available online at the Olympus Emporium (<http://www.emporium.olympus.com>), or at Olympus Authorized retail stores.


 



Important information for Olympus Standard USB and Serial connection camera users

If you are using an **Olympus Standard USB connection camera** (C-3000Z, C-3030Z, C-2100UZ, C-211Z) or an **Olympus serial connection camera**, note the following changes to these instructions.

- **SYSTEM REQUIREMENTS**  
For Windows: Windows 95/98/98 SecondEdition/Me/2000 Professional/NT 4.0 SP3 or later/XP (Serial port)  
For Macintosh: Mac OS 8.6 - 9.2 (Serial port)
- **Installing the camera's USB driver**  
Users with a **Serial connection camera** do not need to perform a separate driver installation. Driver installation automatically takes place during CAMEDIA Master software installation.

Users with a **Standard USB connection camera** (C-3000Z, C-3030Z, C-2100UZ, or C-211Z) can install the driver from the provided CD-ROM using the following procedure. The procedure for Standard USB driver installation is the same for all operating systems.

1. Connect the PC end of the USB cable to the USB port on the PC.
2. Connect the camera end of the USB cable to the USB connector on the camera.

3. Turn the camera on. The process to turn on the camera varies depending on the camera model. Refer to the camera manual for detailed instructions, or use the reference notes below.  
**✂ Olympus camera with a lens barrier**  
Open the lens barrier fully. A green lamp next to the viewfinder blinks.  
**✂ Olympus camera with a  mode, without a lens barrier**  
Set the mode dial to  and turn the power switch to ON.  
**✂ Olympus camera with a  mode, without a lens barrier**  
Set the mode dial to  .  
● If the mode dial has an OFF position → The camera automatically turns on.  
● If the mode dial has no OFF position → Turn the power switch to ON or press the power button.
4. An **Add New Hardware Wizard** dialogue box appears indicating that the camera is recognized by the PC. Click **Next**.
5. After making sure **Search for the best driver for your device (Recommended)** is selected, click **Next**.
6. Make sure the CAMEDIA Master software CD is inserted in the CD-ROM drive of your PC. (When the CD is inserted into the CD-ROM drive, the CAMEDIA Master **Setup** screen may automatically appear. Click **Close** to exit this window.)
7. Uncheck **Floppy disk drives**, **Microsoft Windows Update**, and **CD-ROM drive**. Then check **Specify a location** and click **Browse**. The **Browse for Folder** screen appears.
8. Click the  on the left of the CD-ROM drive icon and then the **USB** folder icon. Click the folder that matches your operating system, then click **OK**.  
**Note:** Users running Windows 98/Me choose the **Win98Me** folder.  
Users running Windows 2000/XP choose the **Win2kXP** folder.
9. When the **Browse for Folder** screen disappears, click **Next**. Then click **Next** again. USB driver installation starts.
10. When a screen appears telling you that installation is complete, click **Finish**. Disconnect both ends of the USB cable and turn off the camera.

**For CD-ROMs other than the CAMEDIA Master software CD**

This guide is only for the CAMEDIA Master software CD. For other CDs, refer to their instructions.

OLYMPUS®

<http://www.olympus.com/>

OLYMPUS OPTICAL CO., LTD.

San-Ei Building, 22-2, Nishi Shinjuku 1-chome, Shinjuku-ku, Tokyo, Japan  
Customer support (Japanese language only): Tel. 0426-42-7499 Tokyo

OLYMPUS AMERICA INC.

Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 631-844-5000

**Technical Support (USA):**  
24/7 online automated help: <http://support.olympusamerica.com/>  
Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm (Monday to Friday) ET  
E-Mail: [distec@olympus.com](mailto:distec@olympus.com)  
Olympus software updates can be obtained at: <http://olympus.com/digital/>

OLYMPUS OPTICAL CO. (EUROPA) GMBH.

Premises/Goods delivery: Wendenstrasse 14-18, 20097 Hamburg, Germany Tel. 040-237730  
Letters: Postfach 10 49 08, 20034 Hamburg, Germany

**Hotline numbers for customers in Europe:**  
Tel. 01805-67 10 83 for Germany  
Tel. 00800-67 10 83 00 for Austria, Belgium, Denmark, France, Netherlands, Norway, Sweden, Switzerland, United Kingdom  
Tel. +49 180 5-67 10 83 for Finland, Italy, Luxembourg, Portugal, Spain, Czech Republic  
Tel. +49 40-237 73 899 for Greece, Croatia, Hungary, and the rest of Europe

Our Hotline is available from 9 am to 6 pm (Monday to Friday)  
E-Mail: [di.support@olympus-europa.com](mailto:di.support@olympus-europa.com)

\* For other regions, refer to the "Authorized Distributors List".

- Olympus is a registered trademark of OLYMPUS OPTICAL CO., LTD. Tokyo.
- Windows® is a registered trademark of Microsoft Corporation.
- Macintosh™, Apple, and QuickTime are trademarks of Apple Computer Inc.
- Acrobat Reader is a registered trademark of Adobe Systems, Inc.
- All trademarks and registered marks mentioned herein are recognized as the property of their respective holders and are hereby acknowledged.