

OLYMPUS

CAMERA

C-4000 ZOOM

DIGITAL CAMERA

Quick-start guide

We've included this convenient Quick-Start Guide to show you basic functions and techniques that will help you quickly master your new camera. For more detailed descriptions of procedures, as well as for additional information on more sophisticated features not covered here, please refer to the printed "Basic Manual", or the primary "Reference Manual" on the CD-ROM.

- Package contents
- ☐ Camera

☐ Strap

☐ Lens cap/String

☐ CR-V3 lithium battery packs (2 packs) or AA (R6) alkaline batteries (4 pieces) (Provided battery type depends on the area where you purchased this camera.)

☐ Video cable

☐ USB cable

☐ Basic manual

☒ Quick-start guide
- ☐ Software installation guide (included in the CD-ROM package)

☐ CD-ROMs with Windows 98 USB driver software, Reference manual, and more.

☐ Warranty card/Registration card (not provided in some areas)

☐ Safety Precautions (booklet)

☐ SmartMedia

☐ Static-free case


☐ Index labels (2 pieces)


☐ Write-protect adhesive seals (4 pieces)


☐ SmartMedia instructions

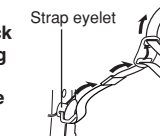
Attaching the strap


- 1

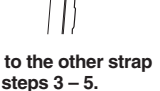

- 2


- 3


- 4


- 5



- 6




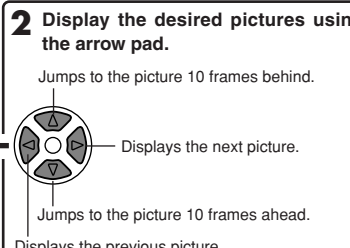
Printed in Japan  
1AG6P1P1373 -- A

VT387102

Viewing still pictures

- 

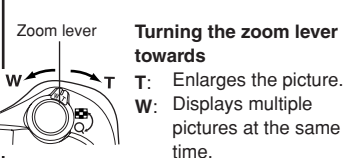
1 Set the mode dial to  (playback mode).
- 2



Displays the next picture.

Displays the previous picture.


Jumps to the picture 10 frames behind.


Jumps to the picture 10 frames ahead.
- 


Zoom lever

Turning the zoom lever towards

T: Enlarges the picture.

W: Displays multiple pictures at the same time.
- 

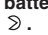
Press  to avoid accidentally erasing images.

To cancel protection, press  again.

Loading the batteries

- 1

Make sure the camera is turned off (i.e. the mode dial is set to OFF).
- 2

Slide the battery compartment lock on the battery compartment cover in the direction of .
- 3

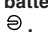
Slide the battery compartment cover in the direction of the arrow (A) with your fingertip and open it (B).
  - Do not use your fingernail, as this could result in injury.
- 4

Insert the batteries in the direction shown in the illustration.
- Battery alignment

When using AA (R6) batteries


When using CR-V3 lithium battery packs
- 5




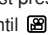



Close the battery compartment cover, then press it down (C) and slide it in the opposite direction of the arrow printed on it (D).
  - When pressing the battery compartment cover shut, be sure to press the center of the cover, as it may be difficult to close properly by pressing the edge.
  - Make sure the cover is completely closed.
- 6

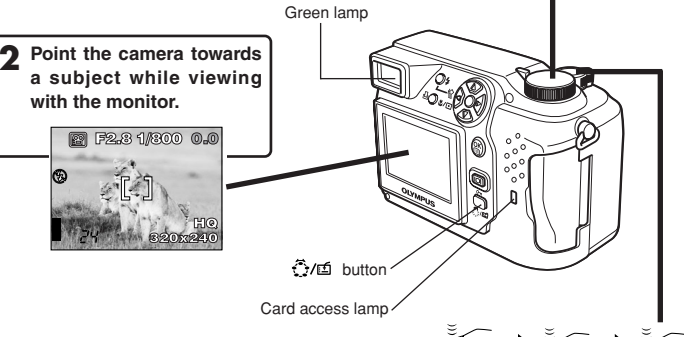
Slide the battery compartment lock on the battery compartment cover in the direction of .
- Note:

- Manganese (zinc-carbon) batteries cannot be used.


Recording movies

- 

1 Remove the lens cap and set the mode dial to .
  - The  factory default setting is .
  - To change to the movie mode, first press the  button. Press  repeatedly until  is selected on the screen, then press .
- 2

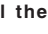


Green lamp

 button

Card access lamp
- 3

Press the shutter button halfway.
  - When the subject is in focus, the green lamp blinks once.
- 4

Press the shutter button all the way to start recording.
  - During movie recording, the orange lamp next to the viewfinder is illuminated and  lights in red on the monitor.
- 5

Press the shutter button all the way again to stop recording.
  - The card access lamp blinks and the camera starts writing the movie to the card.
  - If the displayed seconds remaining reach "0", shooting finishes automatically and the camera starts writing the movie to the card.

Inserting/Removing the memory card (SmartMedia)

- 1

Make sure the camera is turned off (i.e. the mode dial is set to OFF).
- 2

Open the card cover.
- 3


Inserting the card

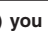
Insert the card fully with the contact area facing towards the monitor side. Insert until you feel it locked into place.
  - Hold the card in a straight orientation to the card slot. Do not attempt to insert the card at an angle.
  - Note the orientation of the card. If it is inserted incorrectly, it may become jammed.
- 4


Close the cover tightly.
- Note:


- Never open the card cover, eject the card, remove the batteries, or disconnect the optional AC adapter while the camera is in use or the camera is communicating with a computer. **Doing so could destroy all data on the card.**

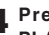
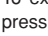
Playing back movies

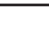
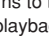

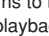
- 

1 Display the movie frame (picture with ) you want to play back. → See steps 1 and 2 in "Viewing still pictures".
- 2

Press .
  - The top menu appears.
- 3

Press  on the arrow pad to select MOVIE PLAY.
- 4

Press  to select MOVIE PLAYBACK on the MOVIE PLAY screen.
  - To exit the MOVIE PLAY screen, press .
- 5

Press  to start playback.
  - When playback finishes, the screen returns to the beginning of the movie.
  - If  is pressed again when the movie playback is finished, the MOVIE PLAYBACK screen appears. To exit the movie playback mode and return to the MOVIE PLAY screen, press  to select EXIT, then press .

Taking still pictures

- P

Program shooting
- 1


Remove the lens cap and set the mode dial to P.
- 2

Point the camera towards a subject while viewing through the viewfinder.
- 3

To focus on the subject, press the shutter button halfway, slowly and gently.
  - When the subject is in focus, the green lamp lights steadily.
- 4


To start shooting, press the shutter button gently all the way (fully).
  - When the orange lamp lights, the flash fires automatically when required.
  - The card access lamp blinks and the camera begins storing pictures on the card.
- To turn the camera off, set the mode dial to OFF.
  - Before shooting, turn the diopter adjustment dial to see the AF target mark clearly.






Erasing pictures


- 

Single-Frame Erase
- 1

Display the picture you want to erase. → See steps 1 and 2 in "Viewing still pictures".
- 2

Press the  (erase) button.
- 3

When the  ERASE screen appears, press  to select YES.
  - To cancel erasure, press  on the arrow pad to select NO, and press  or the  button.
- 4

Press  to erase the picture.

OLYMPUS AMERICA INC.

Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 1-631-844-5000  
24/7 online automated help: <http://support.olympusamerica.com/>  
Phone customer support: Tel. 1-888-553-4448 (Toll-free)

OLYMPUS OPTICAL CO. (EUROPA) GMBH.






Premises/Goods delivery: Wendenstrasse 14-18, 20097 Hamburg, Germany  
Tel. 040-237730  
Letters: Postfach 10 49 08, 20034 Hamburg, Germany

## Buttons and Dial



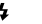


### Viewfinder

- View subjects while shooting.

### Macro/Spot button




- Shooting**  : Activates macro mode or metering mode.
-  Macro (close-up) shooting  
Normal : 80 cm to ∞ (2.6 ft to ∞)  
Macro : 20 cm to 80 cm (0.6 ft to 2.6 ft)
  -  Spot metering  
Meters within the AF target on the viewfinder. (Normally, digital ESP is activated. Digital ESP meters the center of the subject and the area around it.)
  -  During macro mode shooting, spot metering is activated.
- Playback**  : Print reserve

### Flash mode button

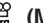


- Shooting**  : Selects flash modes. (Normally, the flash fires in low-light and backlight conditions.)
-  Minimizes “red-eye” phenomena.
  -  Always fires.
  -  SLOW Adjusts the flash for slow shutter speeds.
  -  Prevents the flash from firing.

- Playback**  : Erases pictures one-by-one.

### Arrow pad

- Menu**  : Selects/adjusts the menu functions and items.
- Shooting**  : Sets aperture/shutter speed/exposure compensation values.
- Playback**  : Selects pictures to be displayed.





### Mode dial

-  (Movie record/Scene program shooting) : Records movies or takes still pictures for a variety of different conditions.
-  (Aperture priority Shutter priority/Manual/My Mode shooting) : The user sets aperture and/or shutter speed manually, or the camera activates the user's customized settings.
- P** (Program shooting) : The camera sets the optimal exposure.
- OFF** : The camera turns off.
- Playback**  : Plays back a picture.




### Shutter button

- Focuses (half press) or shoots (fully press).

### Zoom lever

- Shooting W/T**  : Zooms in/out.
- Playback**  /  : Displays multiple pictures at the same time (Index-display), or enlarges pictures (close-up playback).
- Print reserve**  : Sets trimming size.



### Custom button

- Shooting**  : Performs whichever function you have set for it.
- Playback**  :
  -  Prevents pictures from being erased accidentally.
  - Rotates a picture.

### Monitor button

- Turns the monitor on/off.
- Press quickly two times to play back the last recorded image.

### OK/Menu button

- Menu**  : Displays the menu screen or sets selected menu items.
- Shooting**  : When you press and hold this button for more than one second, the camera switches to manual focus mode.

### Monitor

- Shooting** : View subjects while shooting.
- Playback** : Displays recorded images.

## Menu functions

### Moving around the Menu screen

1



Press

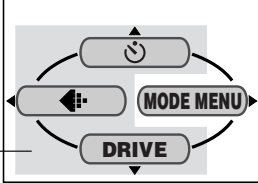
**Note:**  
The Top menu and available menu functions vary depending on the mode. (See the Reference Manual for more details.)


2



to select

Top menu (Mode dial: “P”)



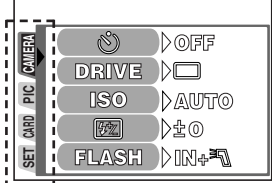
The top menu functions can be changed to your liking in the P, A/S/M  and S-Prg modes (SHORT CUT setting).

3

If you select MODE MENU in step 2



to select




4



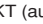
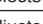








to enter each menu

<b>CAM</b>	Brings up CAMERA menu
<b>PIC</b>	Brings up PICTURE menu
<b>CARD</b>	Brings up CARD menu
<b>SET</b>	Brings up SETUP menu


### Menu functions during shooting


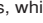


<b>SCENE SELECT</b>	Jumps to the virtual dial screen. You can select a shooting mode.
<b>A/S/M/ </b>	

CAMERA	
	Sets self-timer shooting.
<b>DRIVE</b>	Selects a sequential mode from  (single-frame shooting),  (sequential shooting),  (AF sequential shooting) or BKT (auto bracketing).
<b>ISO</b>	Selects ISO sensitivity from AUTO/100/200/400.
	Adjusts the flash intensity for different shooting conditions.
<b>FLASH</b>	When using an external flash, you can choose whether to use it with the built-in flash or by itself.
	Adjusts the flash for slow shutter speeds.
<b>NOISE REDUCTION</b>	Reduces the noise on images during long exposures.
<b>MULTI METERING</b>	Decides the best exposure by metering up to 8 different spots in the image.
<b>DIGITAL ZOOM</b>	The maximum optical zoom (3x) can be extended even more by the 3.5x digital zoom, making possible up to approx. 10x zoom.
<b>FULLTIME AF</b>	Keeps the image in focus at all times without having to press the shutter button halfway.
<b>AF MODE</b>	Selects the auto focus method (iESP or SPOT).
	Lets you shoot from as close as 2 cm to your subject (super macro mode).
<b>PANORAMA</b>	Allows panorama pictures to be taken with Olympus CAMEDIA-brand cards.
<b>2 IN 1</b>	Combines two pictures taken in succession and stores them as a single picture.
<b>FUNCTION</b>	Lets you shoot pictures in black & white or sepia tone.
<b>AF AREA</b>	Lets you change the position of the AF target mark using the arrow pad.
<b>INFO</b>	Changes the amount of shooting information displayed on the monitor.
	Displays a histogram showing the brightness and contrast of the subject in your monitor.





PICTURE	
	Sets the record mode resolution.
<b>WB</b>	Sets the appropriate white balance according to the light source.
	Lets you make fine changes to the white balance manually.
<b>SHARPNESS</b>	Adjusts the sharpness of images.
<b>CONTRAST</b>	Adjusts the contrast of images.
<b>SATURATION</b>	Adjusts the level of color depth without changing tint.


CARD	
<b>CARD SETUP</b>	Formats cards (all images on the card are deleted).





SETUP	
<b>ALL RESET</b>	Selects whether to keep the current camera settings when you turn off the power.
	Selects a language for on-screen display.
<b>PW ON SETUP</b>	Sets the picture displayed on the monitor when the power is turned on.
<b>PW OFF SETUP</b>	Sets the picture displayed on the monitor when the power is turned off.
<b>REC VIEW</b>	Selects whether to display images while saving them to a card.

	Sets the beep sound (used for warnings. etc.) to OFF/LOW/HIGH.
<b>MY MODE SETUP</b>	Customizes settings, which are activated in the  mode.
<b>FILE NAME</b>	Chooses how to name files and folders of images to be saved.
<b>PIXEL MAPPING</b>	Checks the CCD and image processing circuit for errors.
	Adjusts the brightness of the monitor.
	Sets the date and time.
<b>m/ft</b>	Sets the measurement units (m/ft) used during manual focus.
<b>VIDEO OUT</b>	Selects NTSC or PAL according to your TV's video signal type. TV video signal type differs depending on the region.
<b>SHORT CUT</b>	Lets you assign frequently-used functions as shortcut menus on the top menu.
<b>CUSTOM BUTTON</b>	Lets you assign a frequently used function to the camera's custom button.

### Menu functions during playback

	<b>(still pictures)</b>
Runs through all saved pictures one after another (slide-show).	
<b>INFO</b>	Changes the amount of shooting information displayed on the monitor.
	<b>(still pictures)</b>
Displays a histogram showing the luminance distribution of recorded pictures.	
<b>MOVIE PLAY (movies)</b>	Plays back movies. You can also make indexes of still-shots from movies.
<b>EDIT (still pictures)</b>	
	Makes the file size smaller.
	Enlarges a part of a picture and saves it as a new picture.

CARD	
<b>CARD SETUP</b>	Formats cards (FORMAT), or erases all images on them (ALL ERASE).
SETUP	
<b>SCREEN SETUP</b>	Registers a stored picture so that you can select it in PW ON SETUP and/or PW OFF SETUP.
	Selects the number of frames in the index display. (4/9/16-frame)

ALL RESET, , PW ON SETUP, PW OFF SETUP, , , , VIDEO OUT: Same as described in SETUP under “Menu functions during shooting”.