

Quick Start Guide FE-210/X-775

Start Here


For more information, please refer to the Basic & Advanced Manuals or visit: www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.


© 2007 OLYMPUS IMAGING CORP.
Printed in China

VH929001

1 Gather these items (box contents)

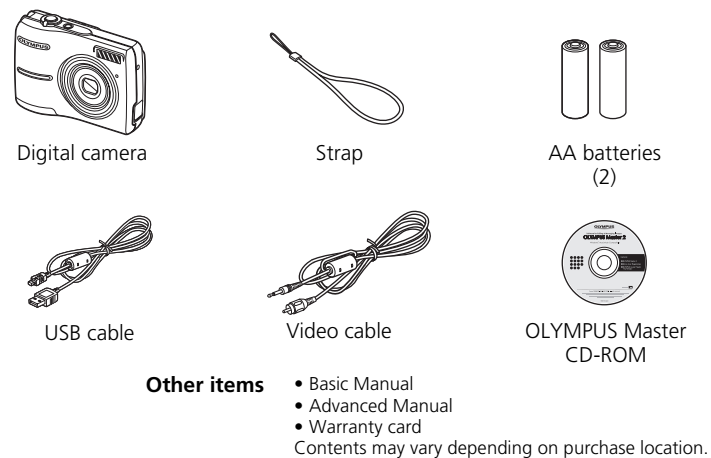


Attach the strap

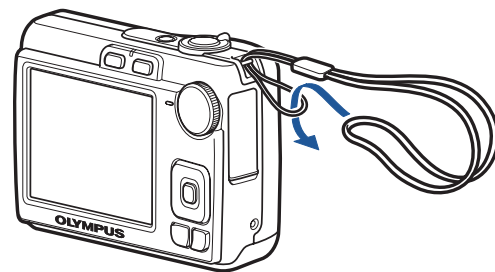

- Pull the strap tight so that it does not come loose.

2 Insert the batteries


a. Insert the batteries into the camera.

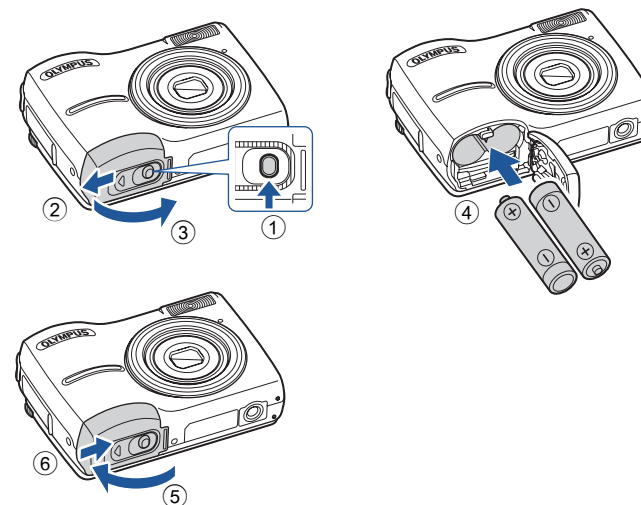

- Even when an optional xD-Picture Card™ (hereinafter called the card) is not inserted, you can take a picture. For details on inserting an optional card, please refer to Advanced Manual.

Hint


The directions of the arrow pad (△▽◀▶) is indicated with △▽◀▶ in this manual.

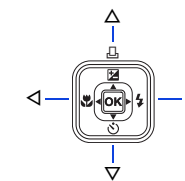

3 Turn the camera on

This explains how to turn on the camera in shooting mode.


a. Set the mode dial to **AUTO**.

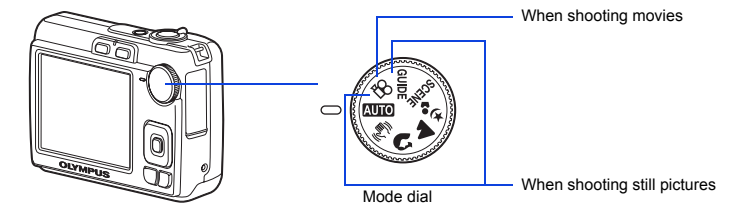

Still picture shooting modes

AUTO	This function allows you to shoot with the camera's automatic settings.
	This function stabilizes images when taking pictures.
	Suitable for taking pictures of people.
	Suitable for taking pictures of landscapes.
	Suitable for taking pictures of people at night.
SCENE	Select from 10 scene modes according to the shooting conditions.
GUIDE	Use the shooting guide displayed on the screen to shoot pictures according to the situation.


b. Press the **POWER** button.

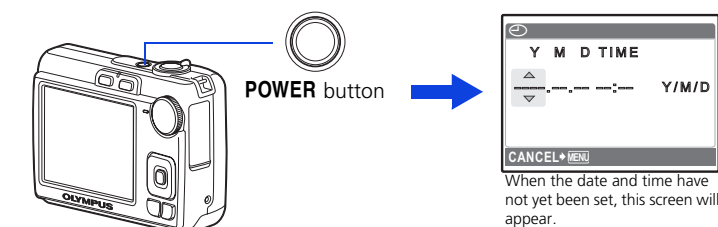

- To turn off the camera, press the **POWER** button once again.


4 Set date and time

About the date and time setting screen

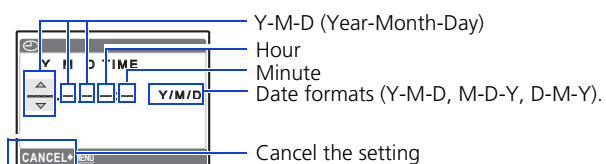


a. Press the button and the button to select [Y].


- The first two digits of [Y] are fixed.

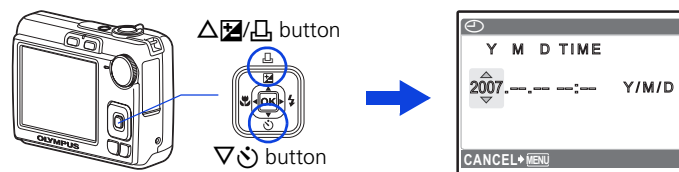


b. Press the button.

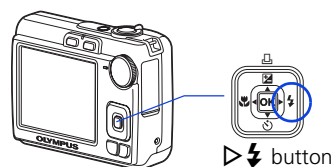

c. Press the button and the button to select [M].

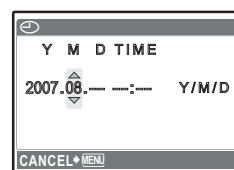

d. Press the button. e. Press the button and the button to select [D].

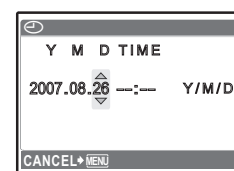

f. Press the button. g. Press the button and the button to select "hour" and "minute".

- The time is displayed in the 24-hour format.




h. Press the button. i. Press the button and the button to select [Y/M/D].



j. After all items have been set, press the **OK** button.

- For a more accurate setting, you can press the **OK** button when the time signal hits 00 seconds.

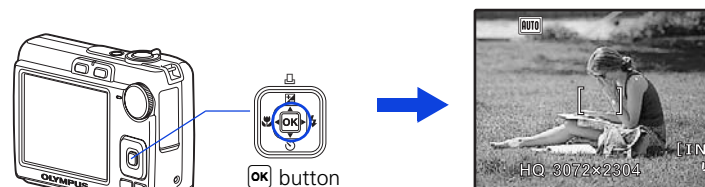


5 Take a picture


a. Hold the camera.



b. Focus.

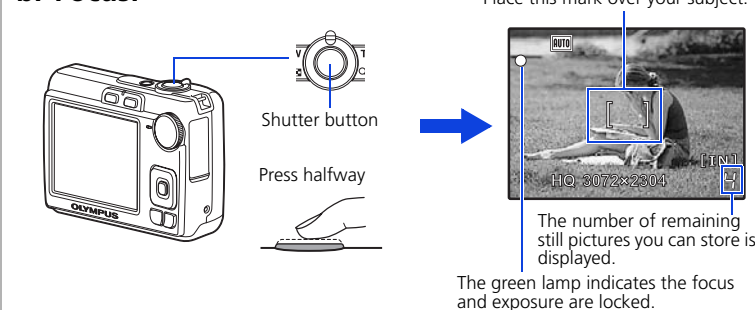


c. Shoot.

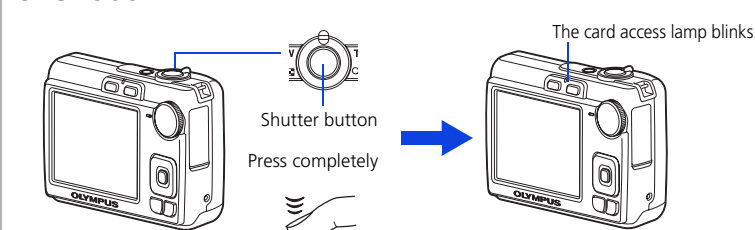

6 Review your pictures


a. Press the button.

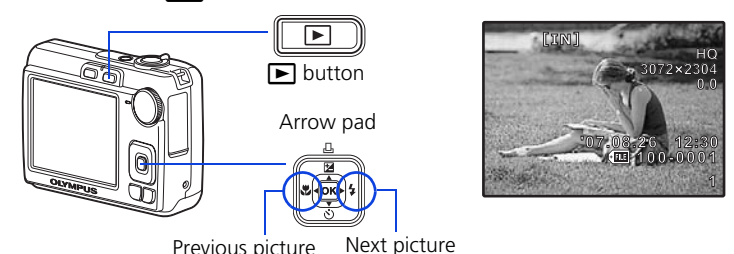

Erase pictures

a. Press the button and the button to display the picture you want to erase.

b. Press the button.

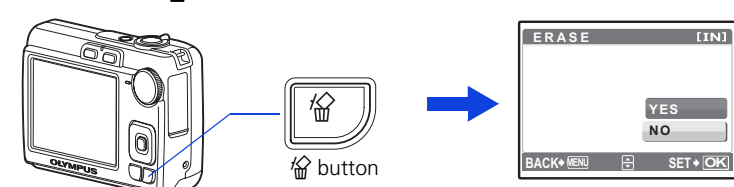

c. Press the button and the button to select [YES], and press the **OK** button.

